

GRAVITY SWING
SKY CAPTAIN

MCD01 / 163 PCS

ROKR

WARNING:

- Children should be guided by adults.
- This product contains small parts. Please use it carefully to avoid accidental ingestion and choking.
- The instruction must be retained since it contains important information.

ATTENTION:

- Please read the instructions carefully before assembly to confirm that the parts are not damaged or missing.
- Remove the parts required by the corresponding step carefully before assembly and place them properly.
- Please don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- Please clean the product with clean soft cloth, and sand the board burr lightly with sandpaper.
- Please keep the product away from substances flammable and humid environments to prevent damage.

Tel: 400-960-0062



ROKR Facebook



www.robotime.com



Special attention
in assembly



Assemble the parts
symmetrically

1 Step 1

2 Step 2



Printed side



Blank side

x2 Complete 2
same parts

U9+ "+" means the part
has spare ones

| Number | P1 | P2 | P3 | P4 | P5 | P6 | P7 | P8 |
|--------------|------------|-------------|---------------|----------------------|----------------|------------------|-------------|------|
| Item | Steel ball | Steel shaft | Gasket (thin) | Shaft sleeve (thick) | Counter-weight | Silicone sticker | Support rod | Hook |
| Illustration | | | | | | | | |
| Quantity | 1 | 1 | 2 | 2 | 2 | 1 | 2 | 1 |

1

A15x5, A14x4, A12, A7, A10, A15, A13, B6, C11, B6, A5, A6, A2x4, A3x4, A1, A11x4, D1, A4, A8, A9, B1, D2, B3, B2

2

Play: Rotate the gear, and the pointer swings freely.

a

Note: Pull A11 outward for easier assembly.

Part number is D24.

3

B5, B7, B9, D23, P7, D25, C7, C8, C12, C5, C14, C13, C15, C10, C18, B12, C3, C2, B11, B13, C20, C21, P1, C19, P4, P3, P2, P3, P4, B14, C9, B14, 1:1, 1

Leave a gap between two ends of the gaskets with the help of Tool.

Pay attention to the assembly direction.

