

# Rolife

## MUSIC DREAMER

• AMS01

Christmas Melody Tree

Designed by **ROBOTIME**  
[www.robotime.com](http://www.robotime.com)  
MADE IN CHINA

 
49.1AMS01.100.B

Picture is for reference only. Please refer to our existing product.







## Assembly Tips

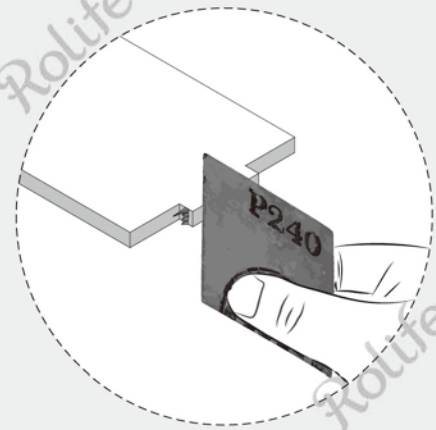

 Polish the edges with sandpaper if there are burrs on pieces or it's hard to insert.

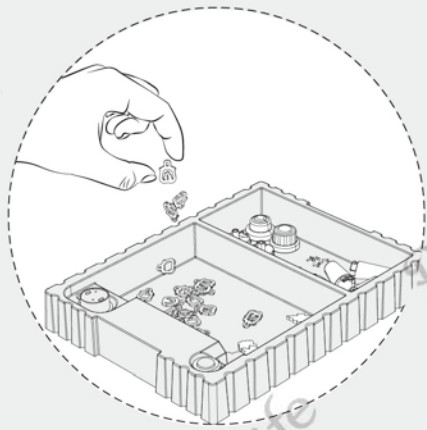

 Put small parts into the box to prevent loss.

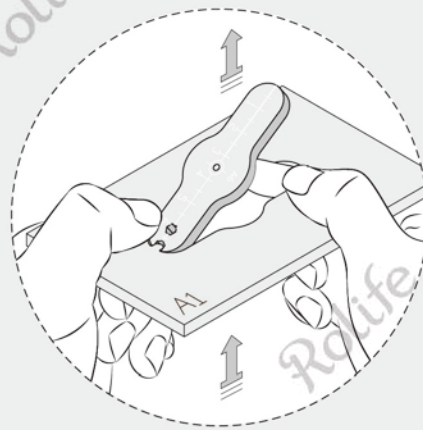

Remove the part by pressing its back to reduce burrs.

1

## Tips Before Assembling

Scan for waxing video



AMS01 3-1



P20

Wax the yellow parts



2

## Function Test

### Material list

AMS01 3-3



P1

AMS01 3-2



P2

AMS01 3-2



P3

AMS01




P4

AMS01




 P5

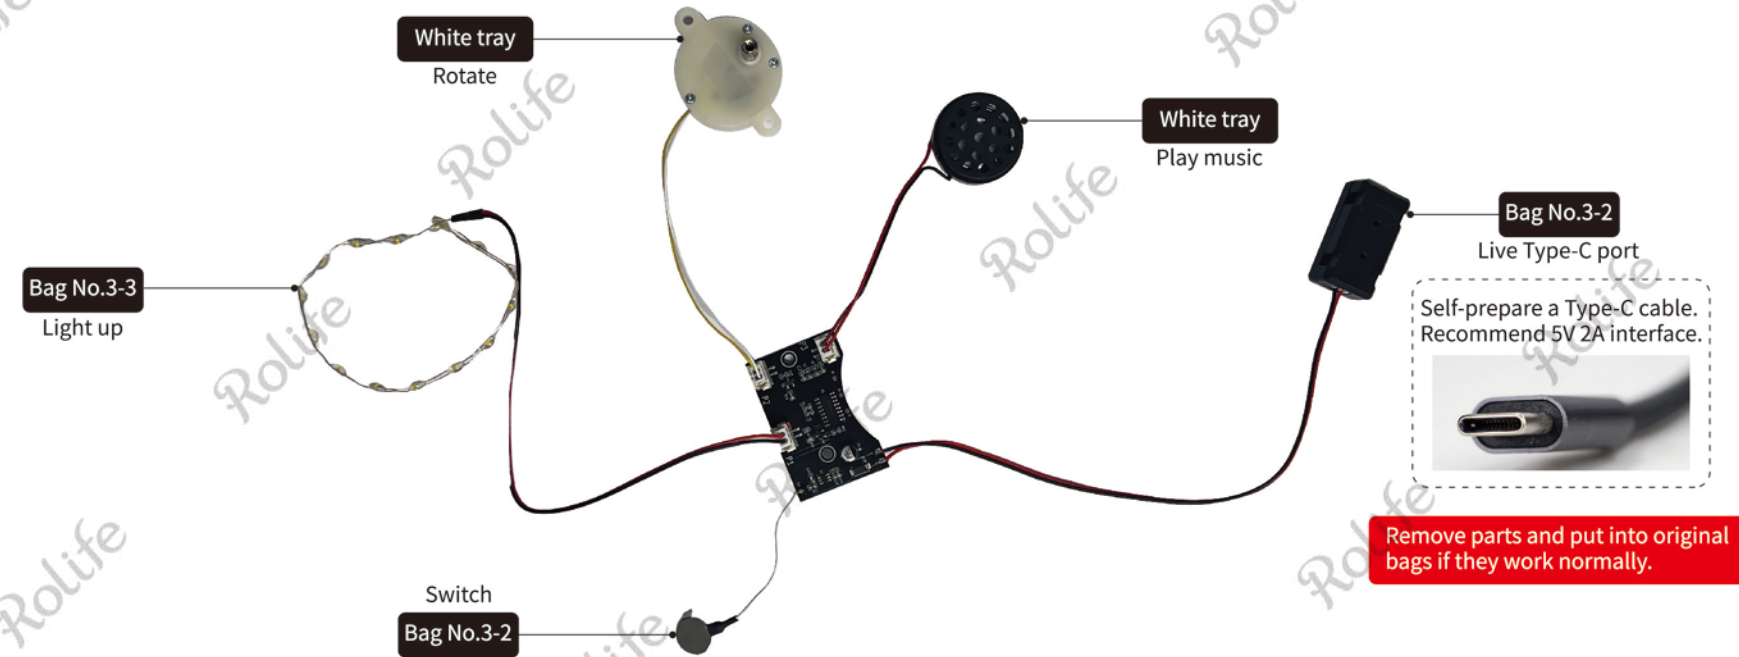


3

 ! M1 has spare parts.

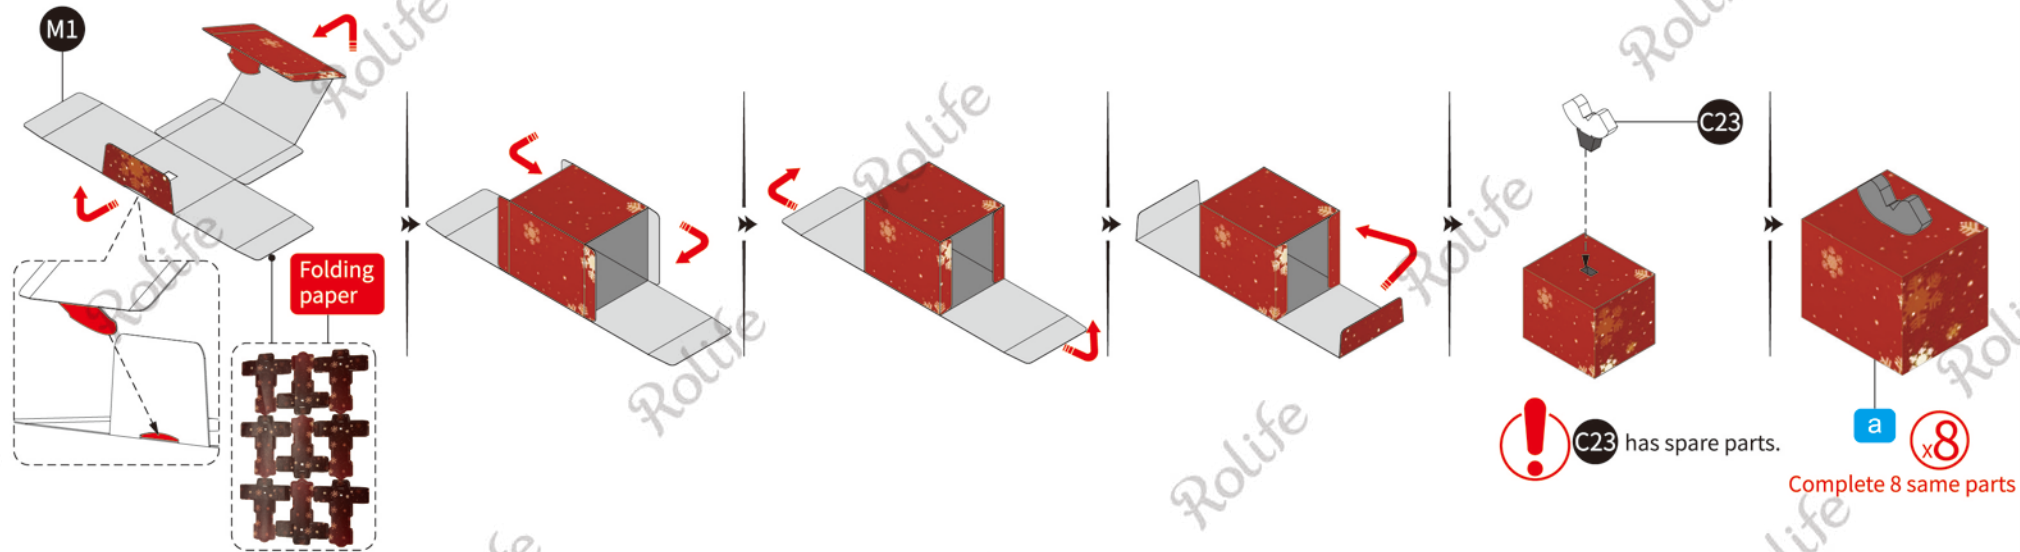

5




 
! G13 has spare parts.

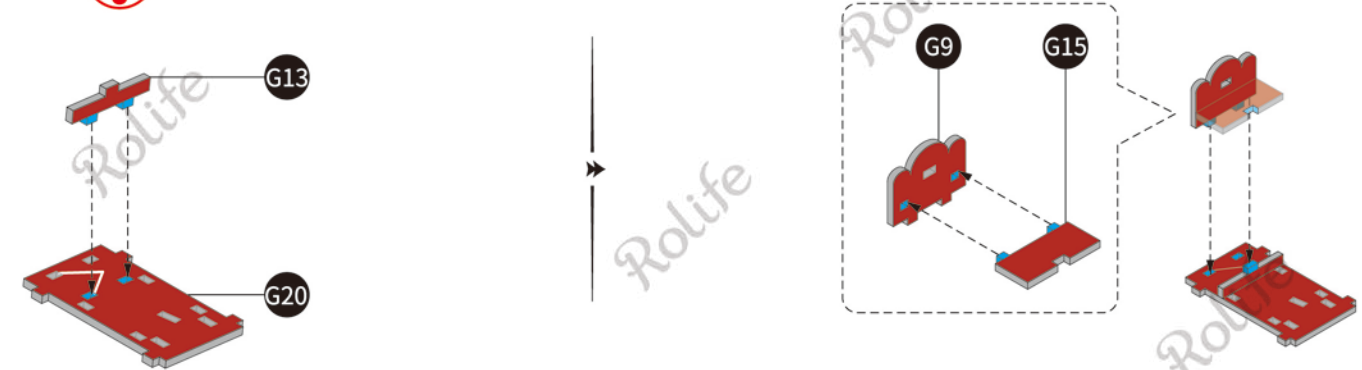

4

AMS01  
3-1

   
 
P6

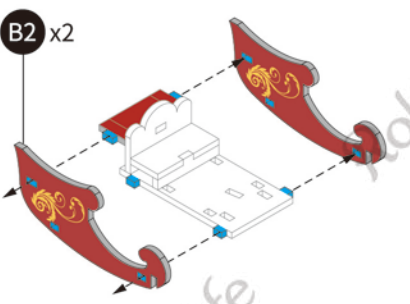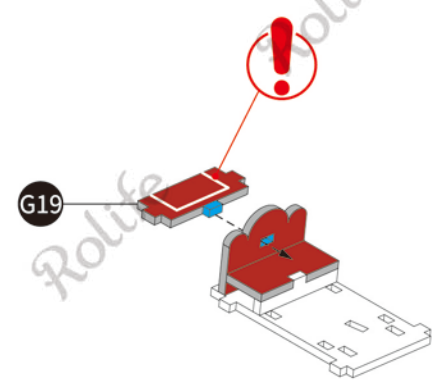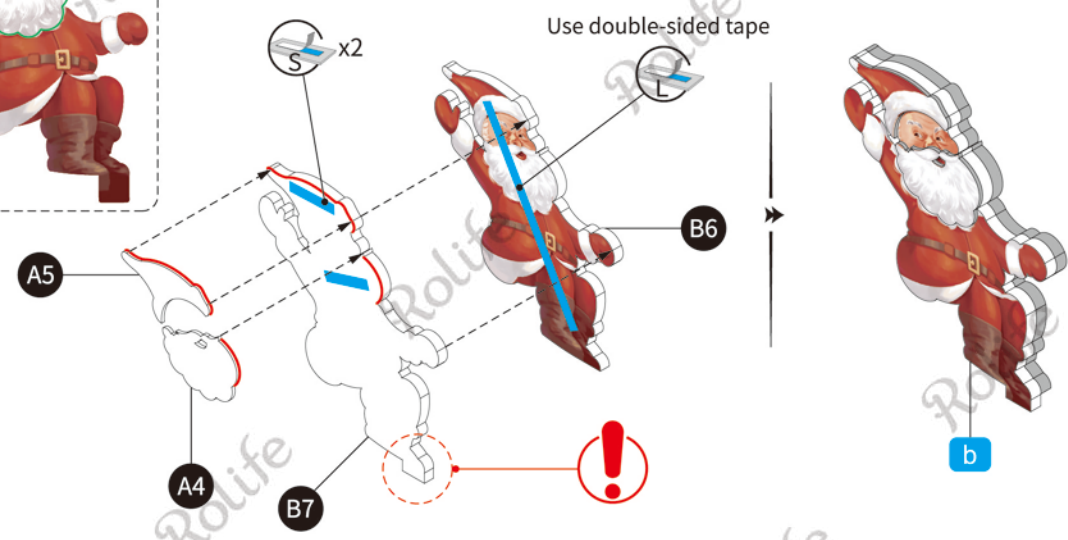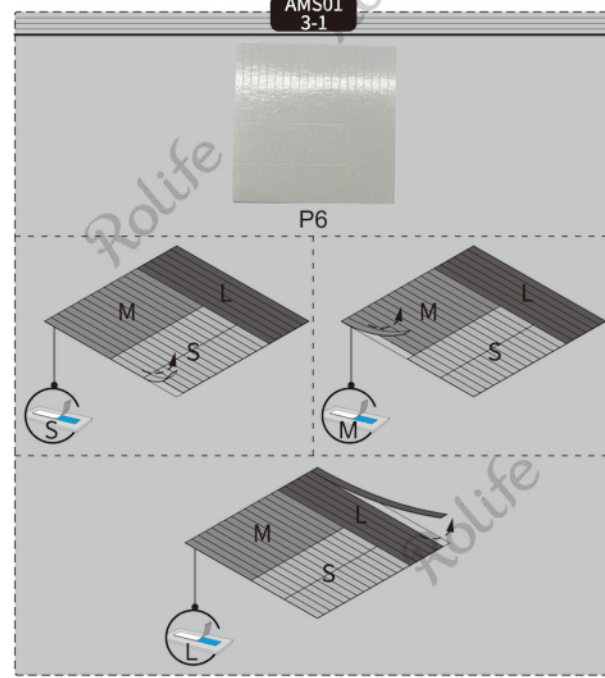

3

 
 
4



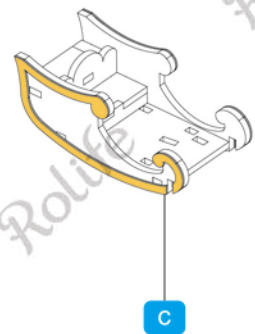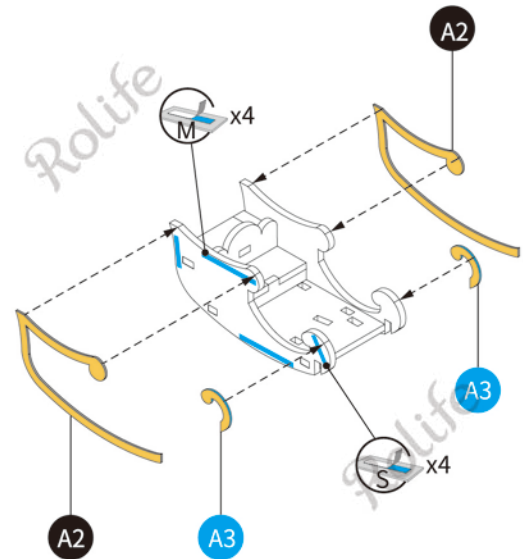

C

 
 
6

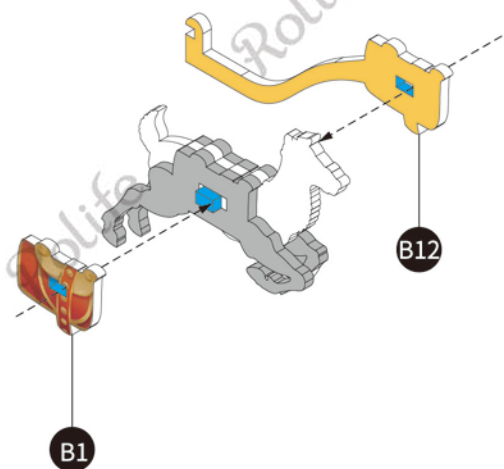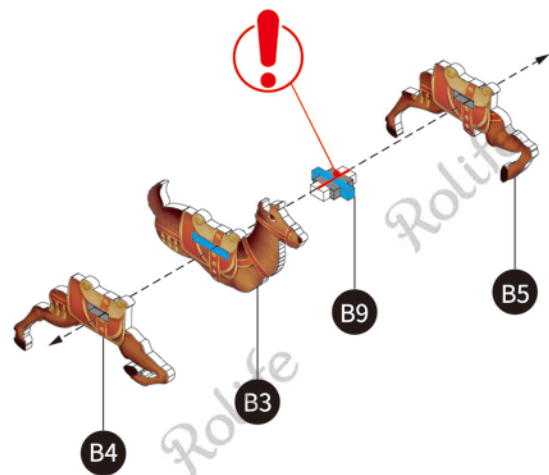

B12



B1

  7

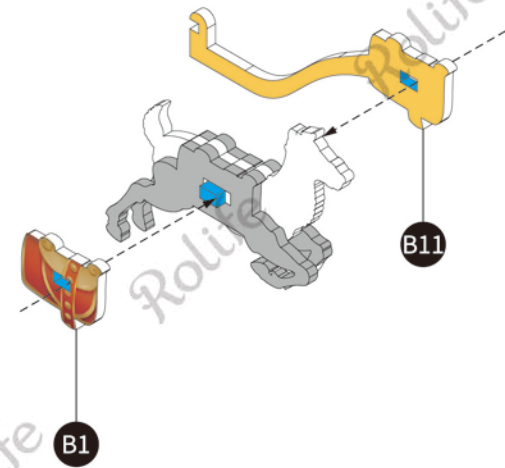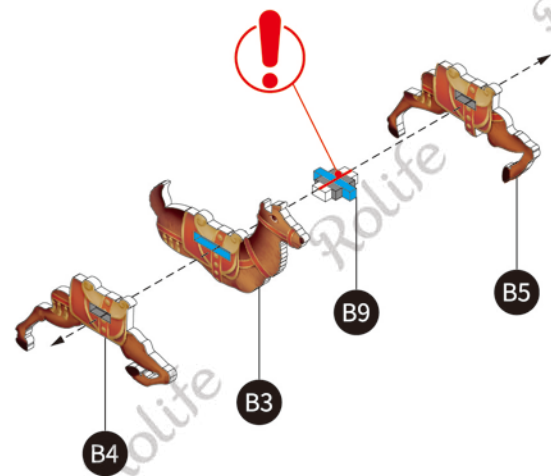


B11

  B1

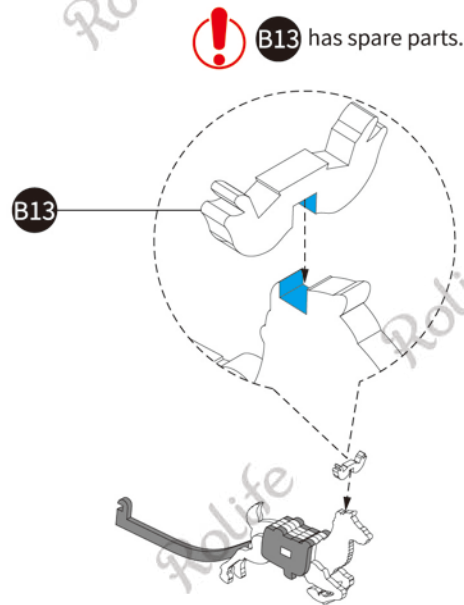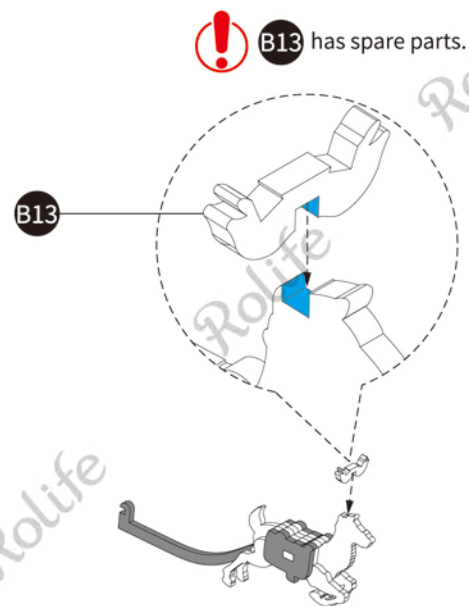


B13

 B13 has spare parts.

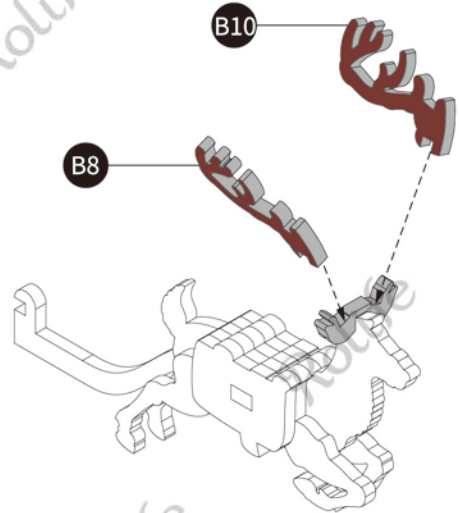













B10

 B8




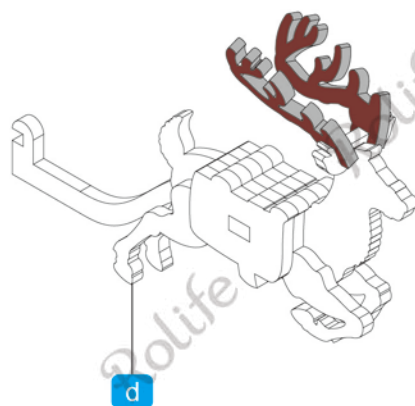


d







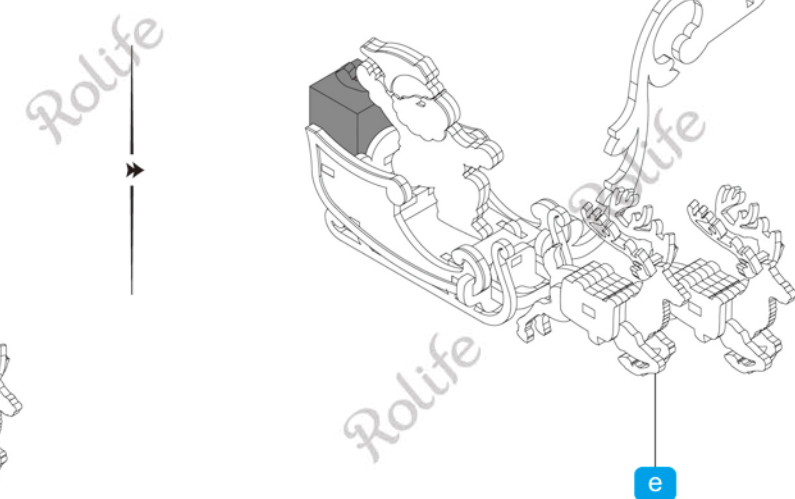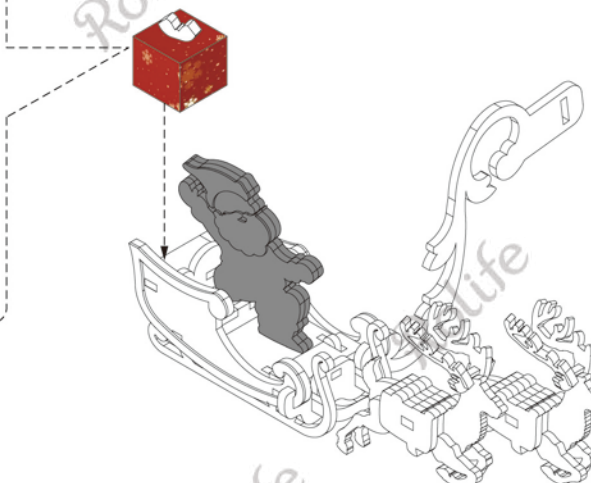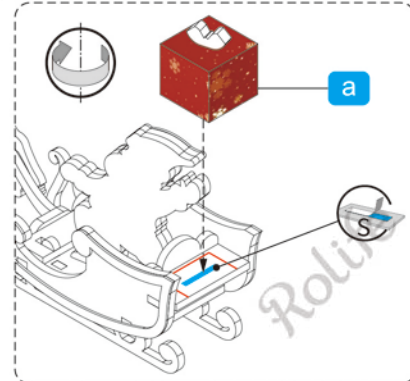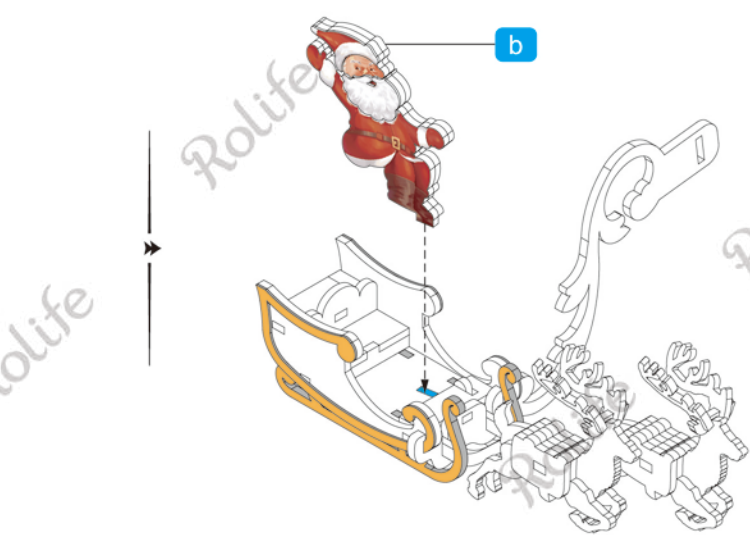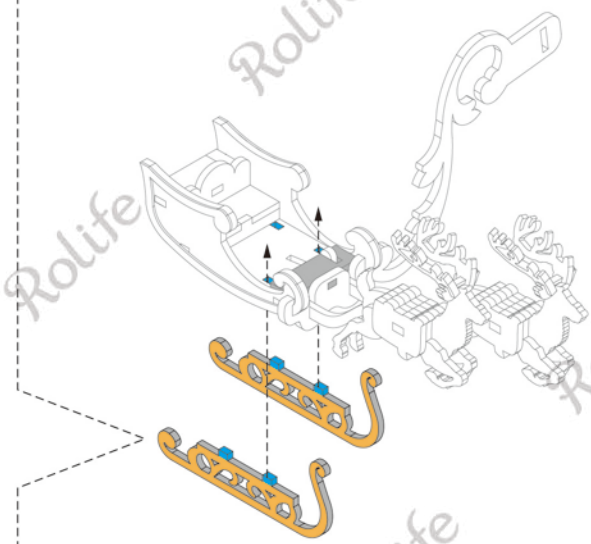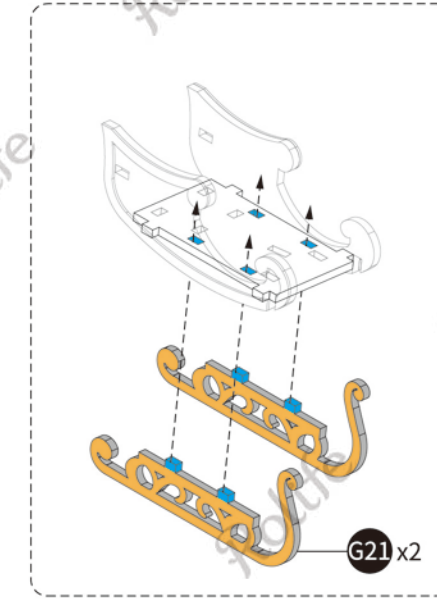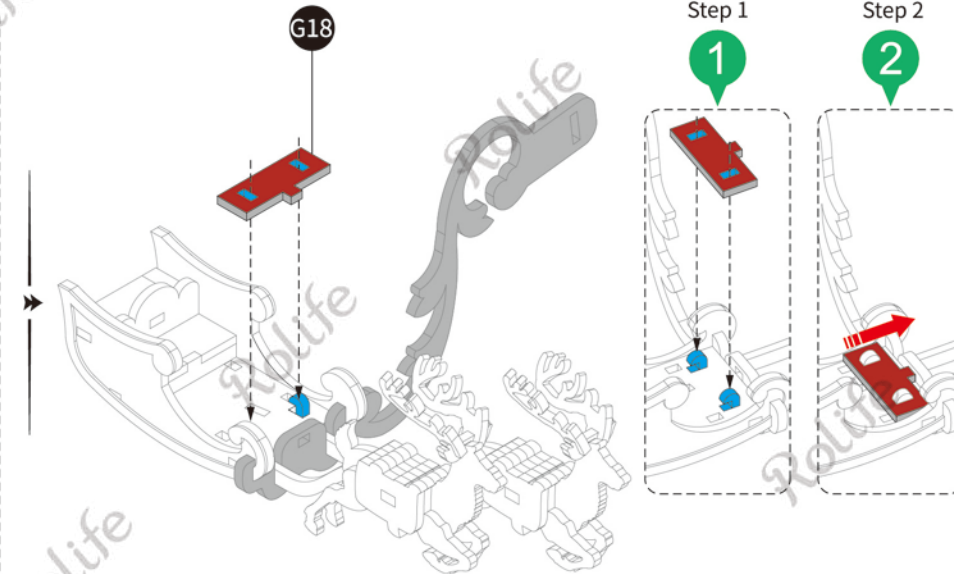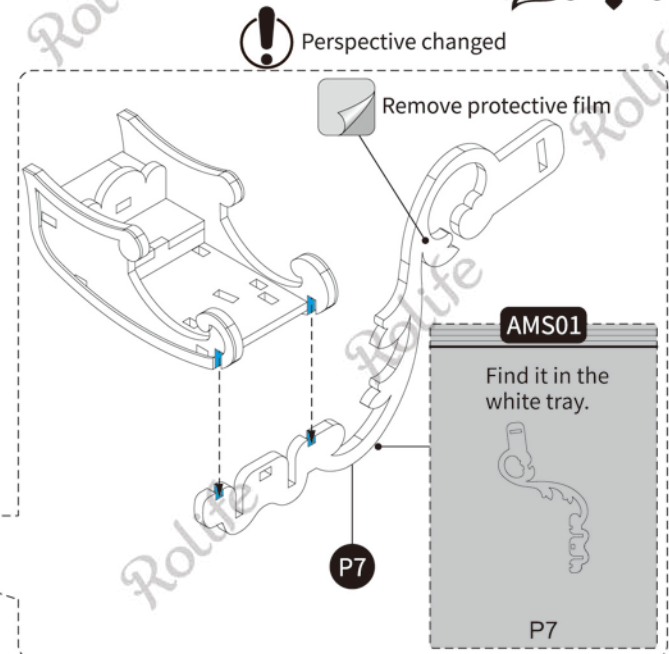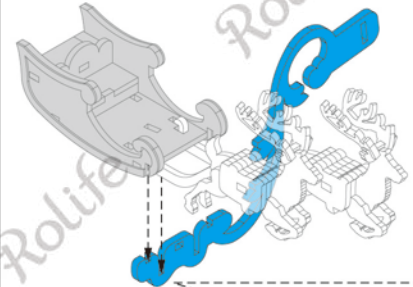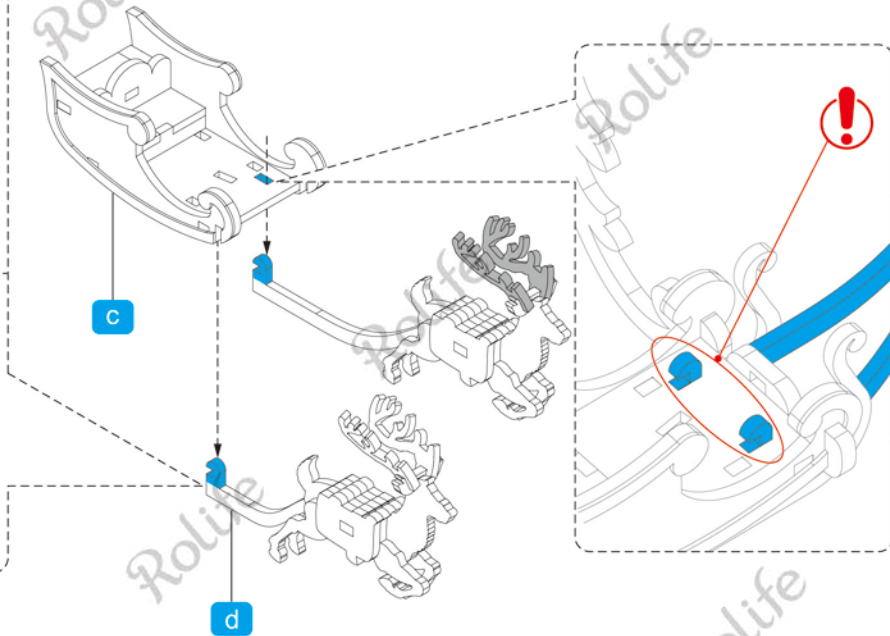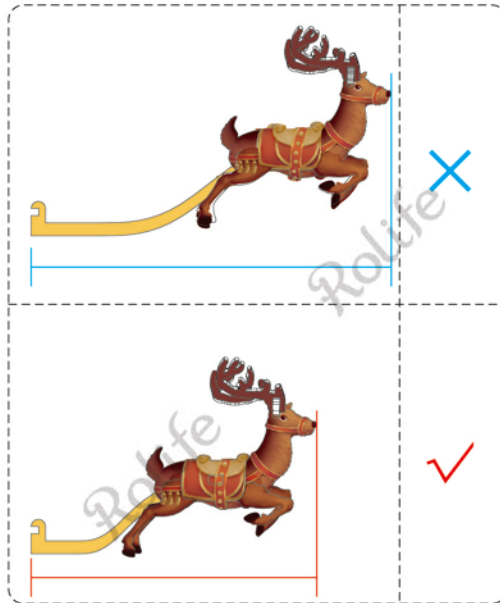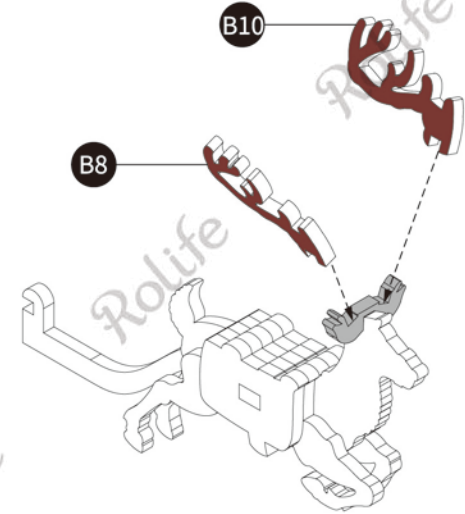            







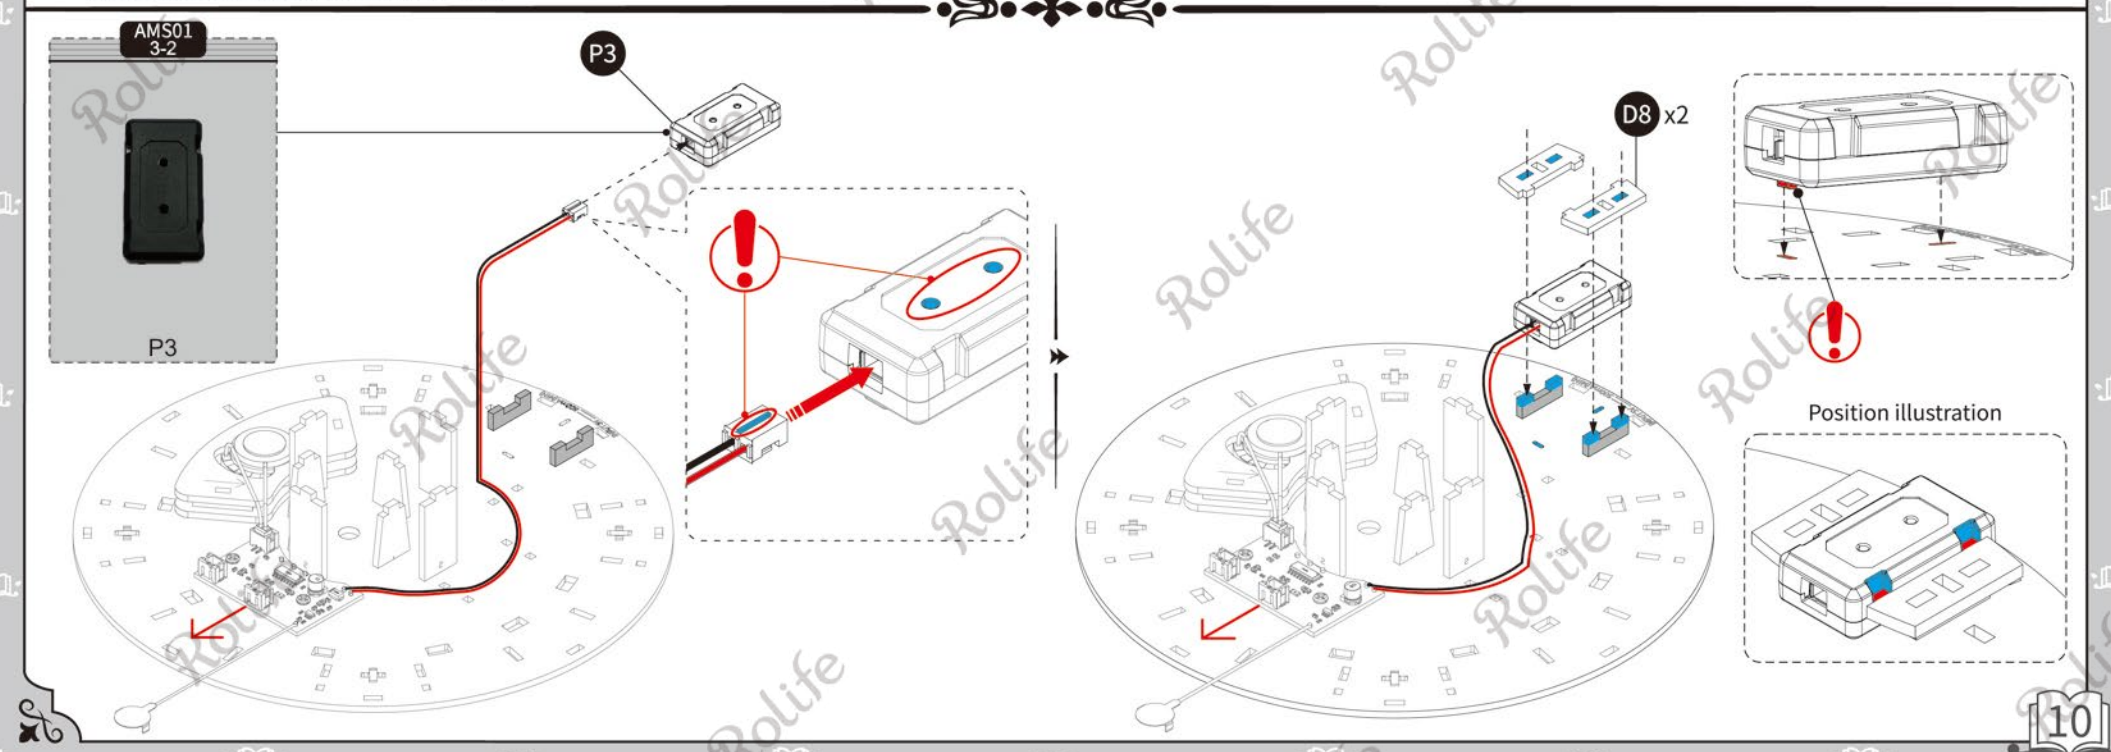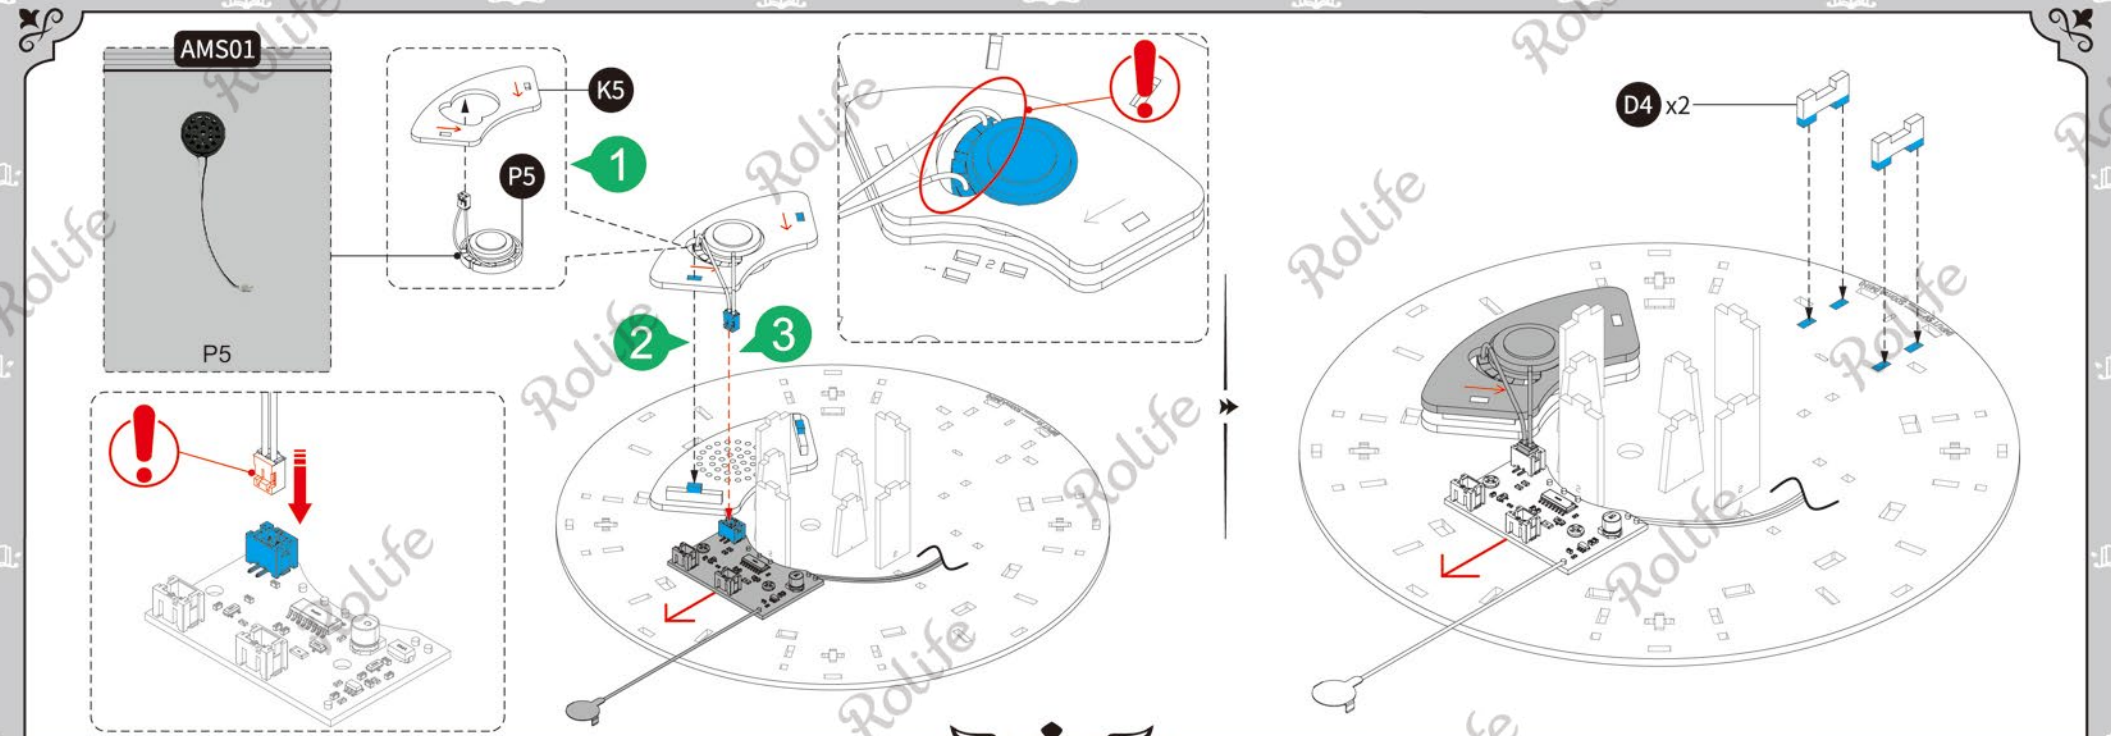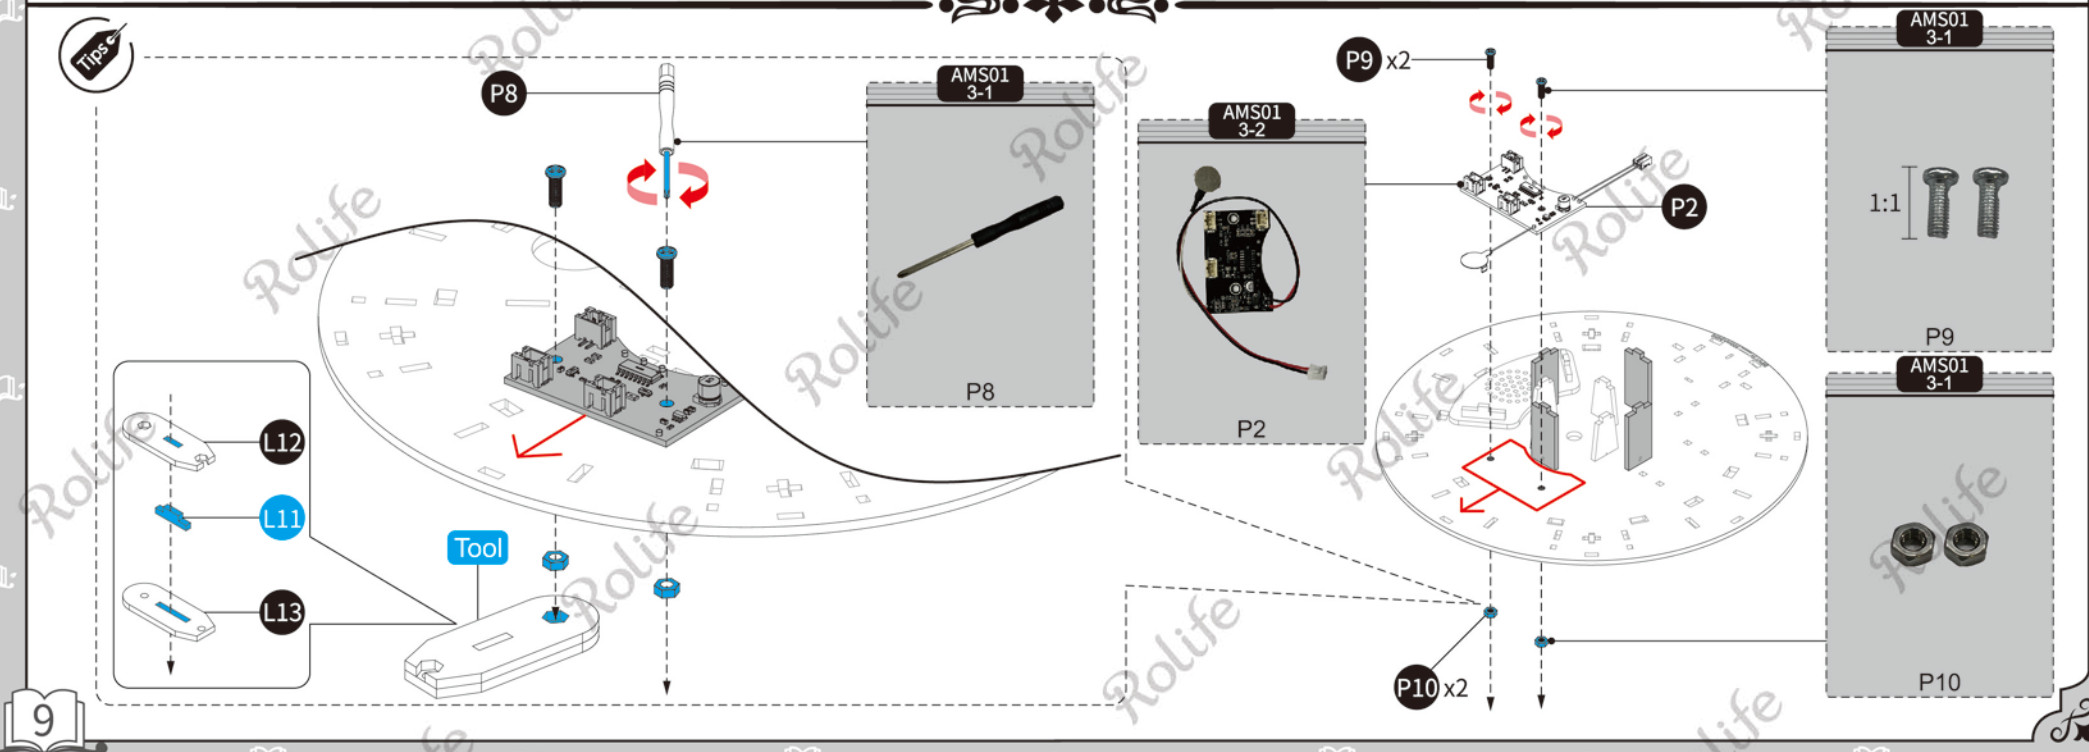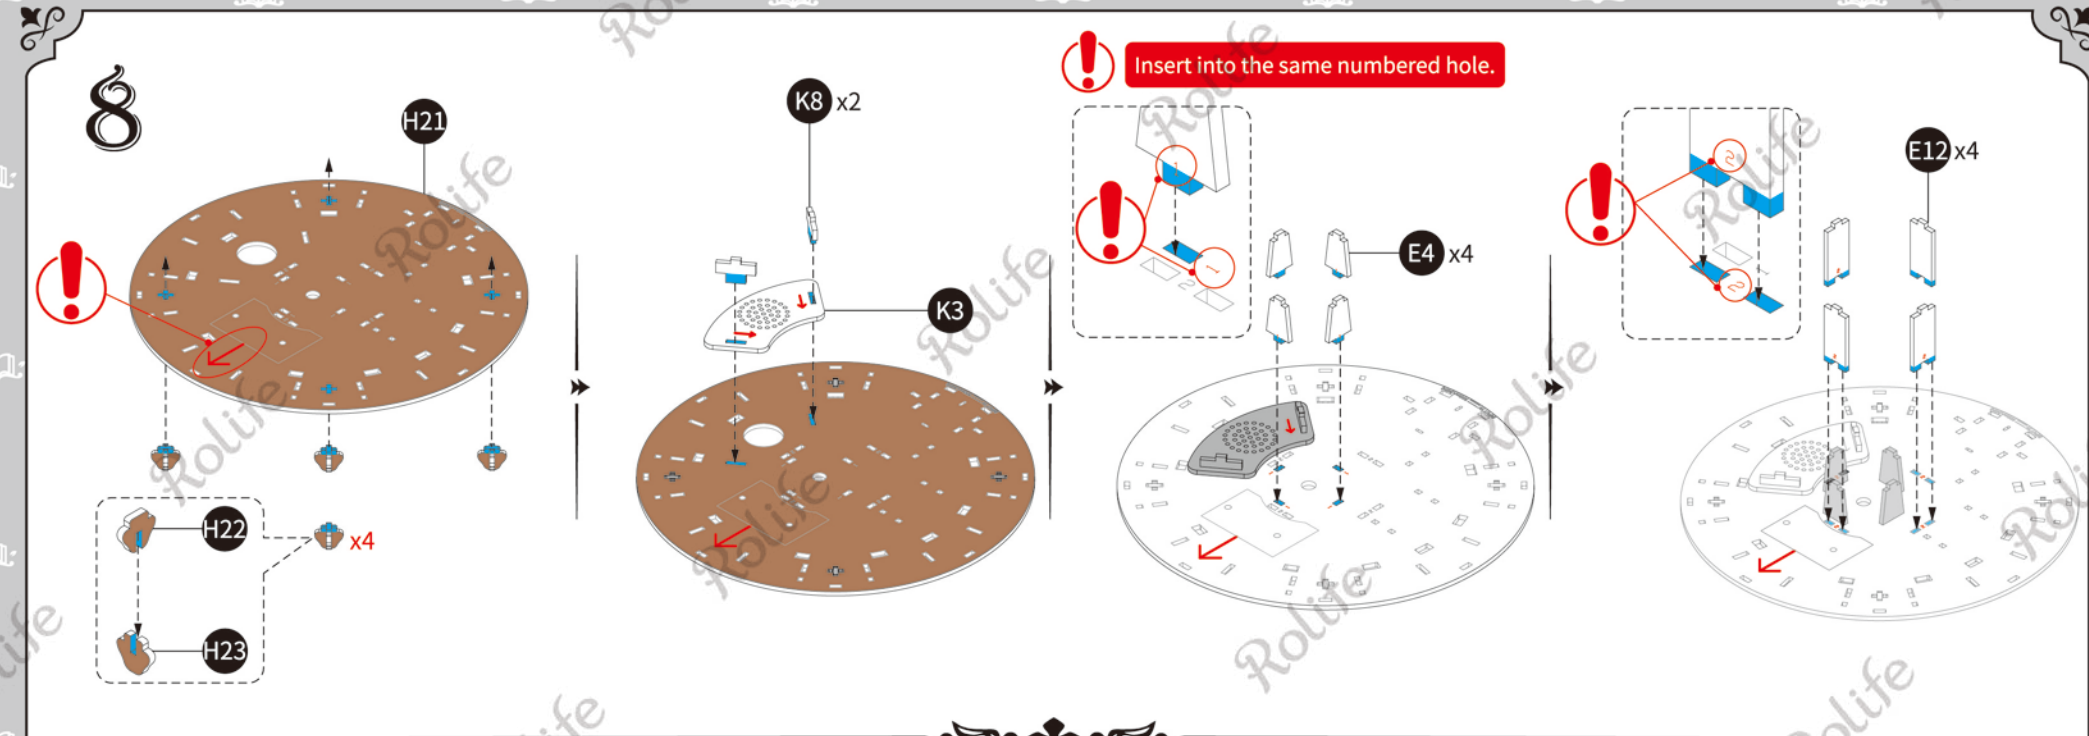            

 
 
 
 


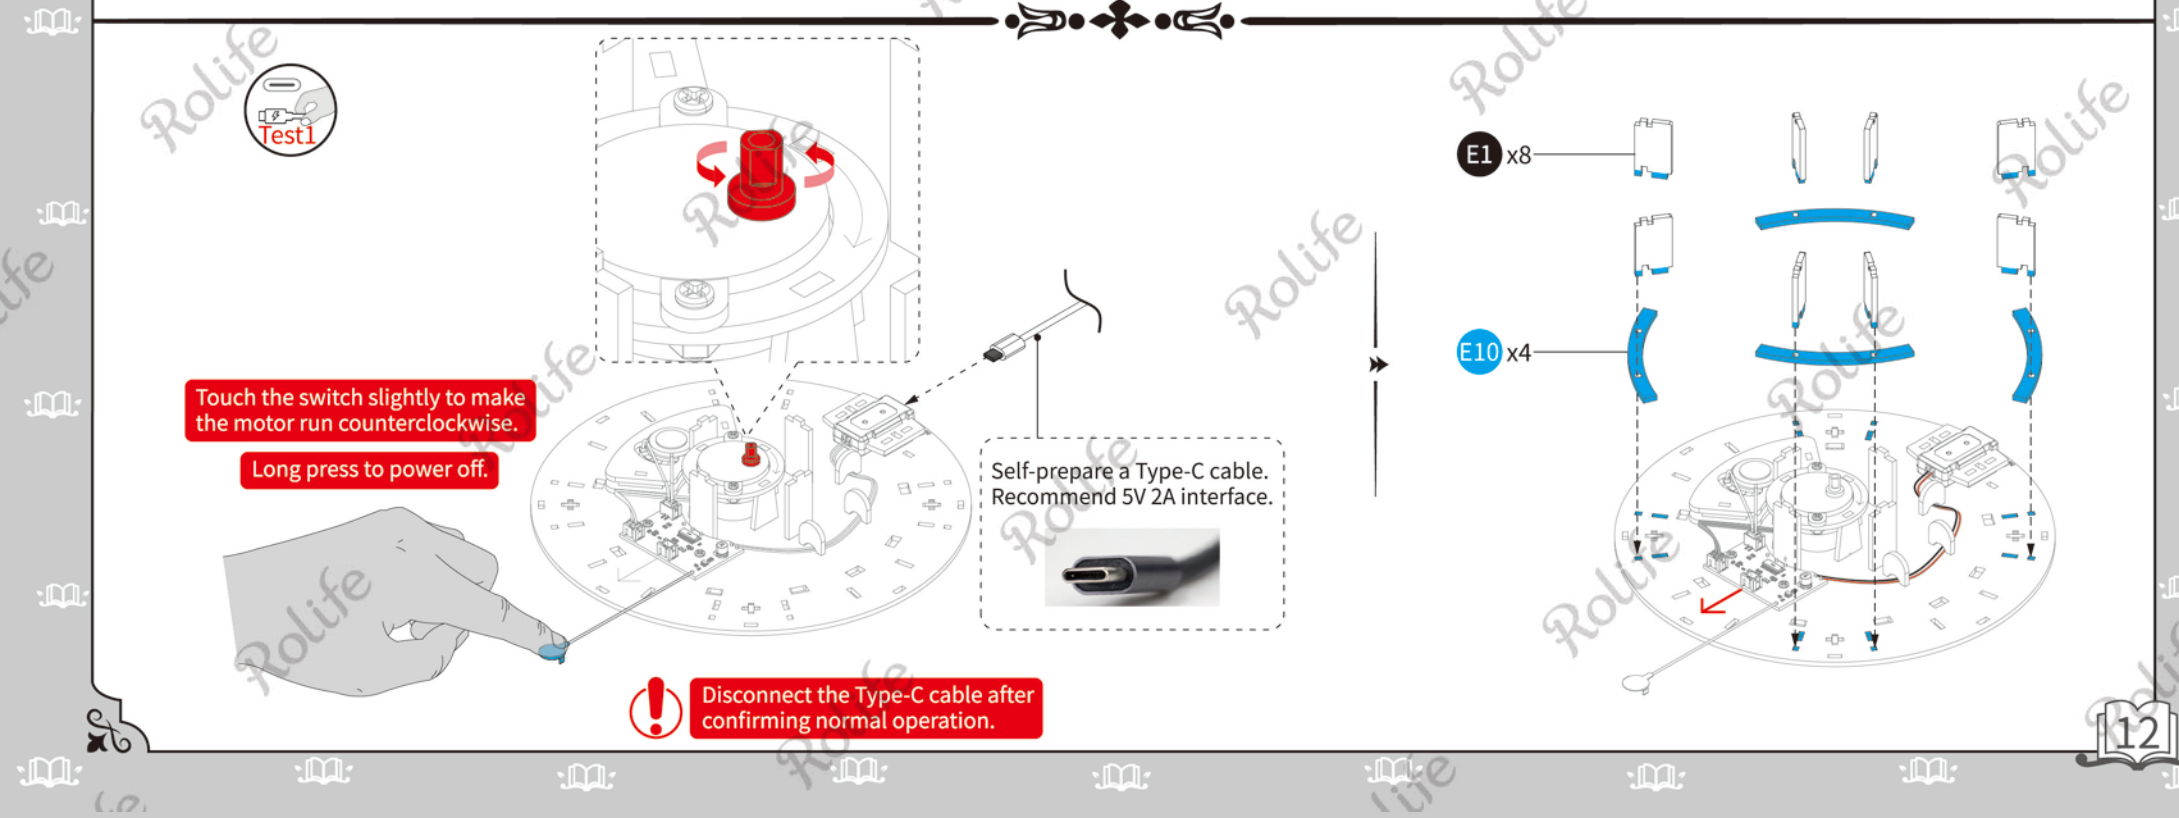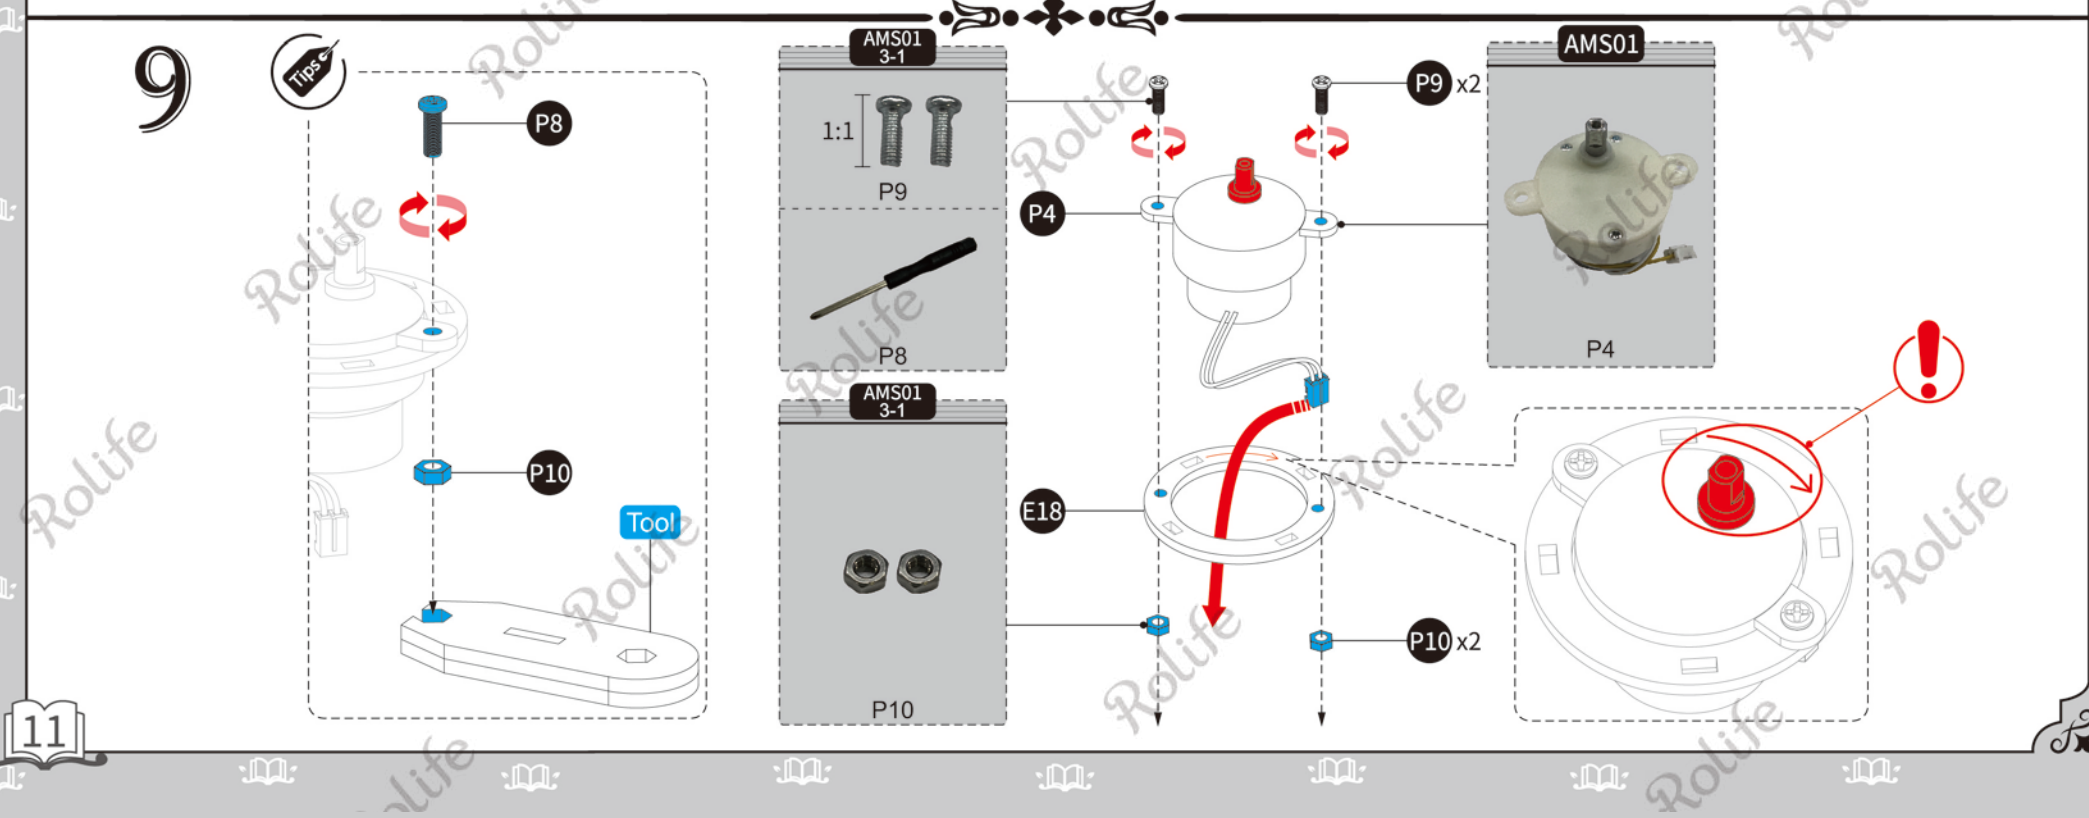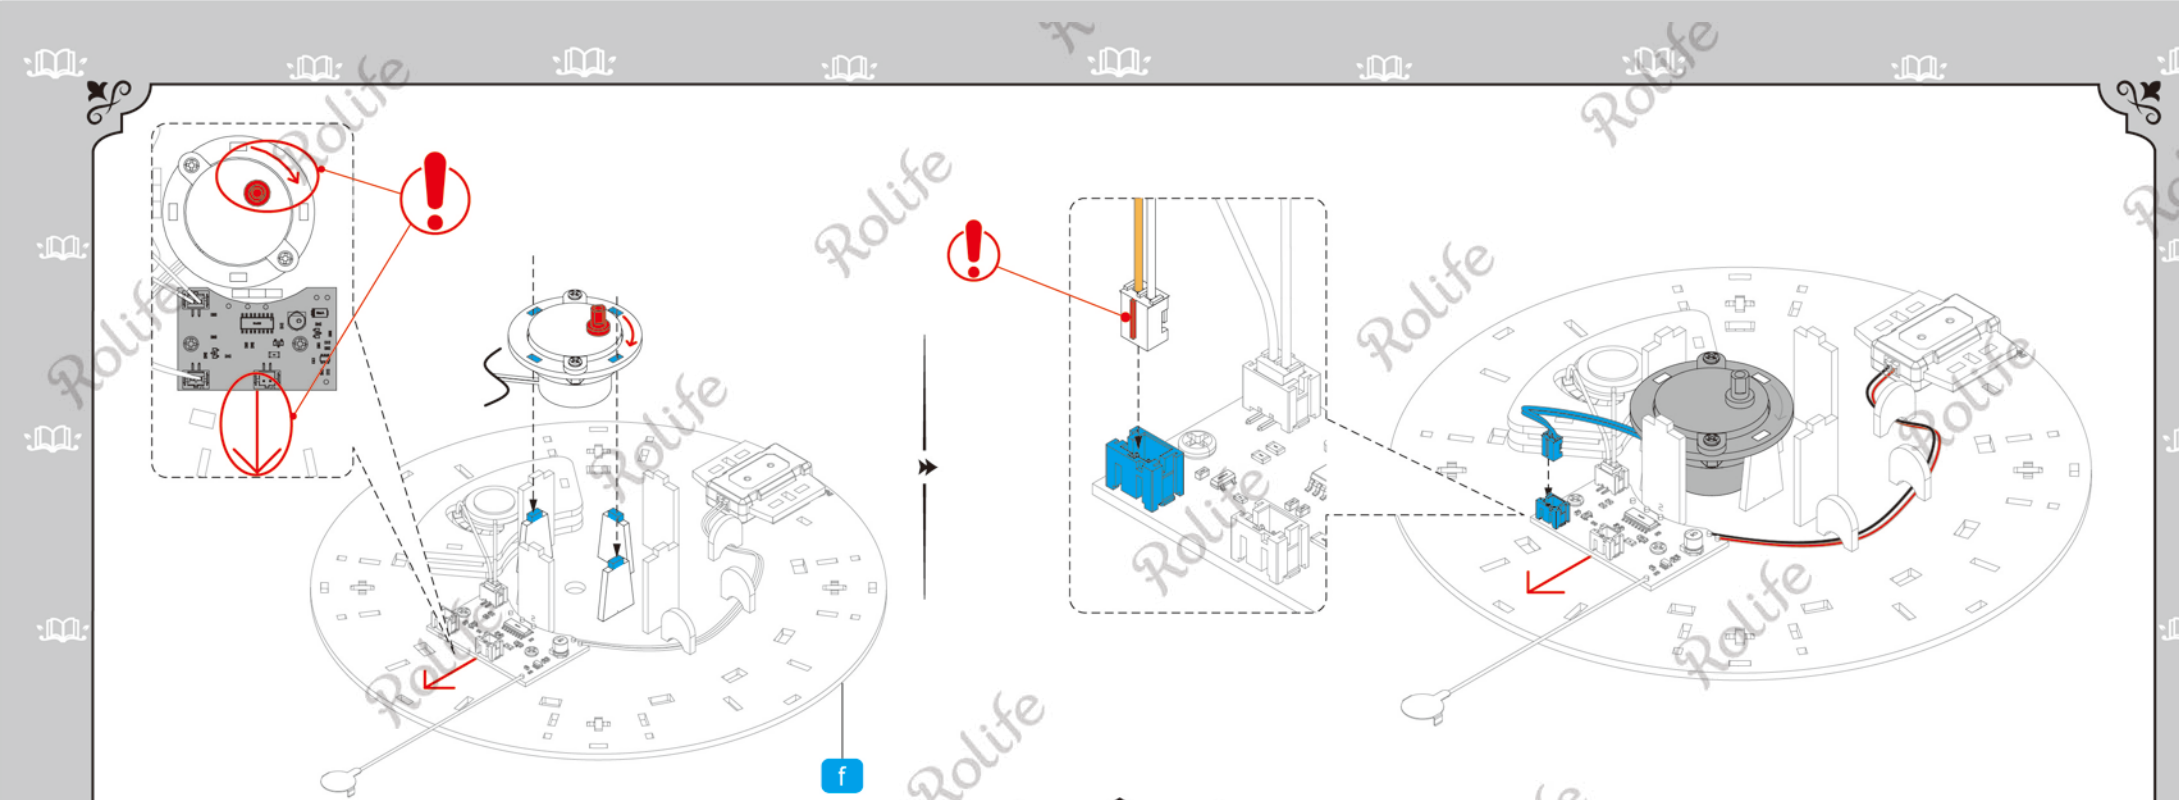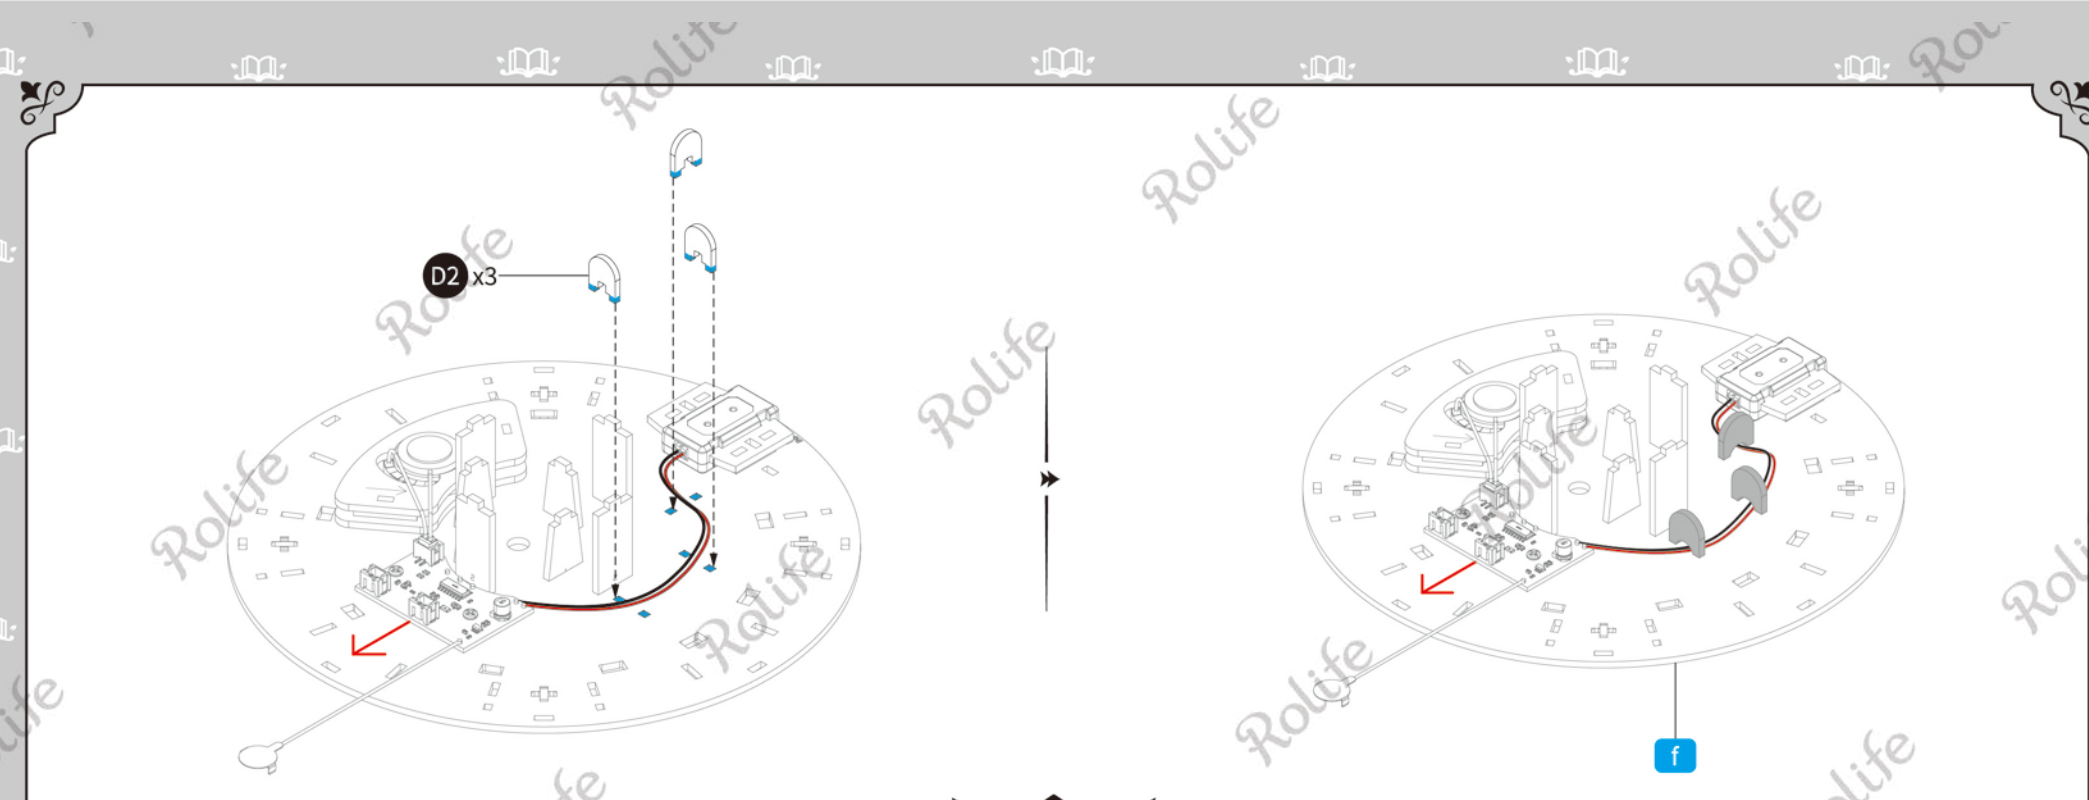

 
 
 


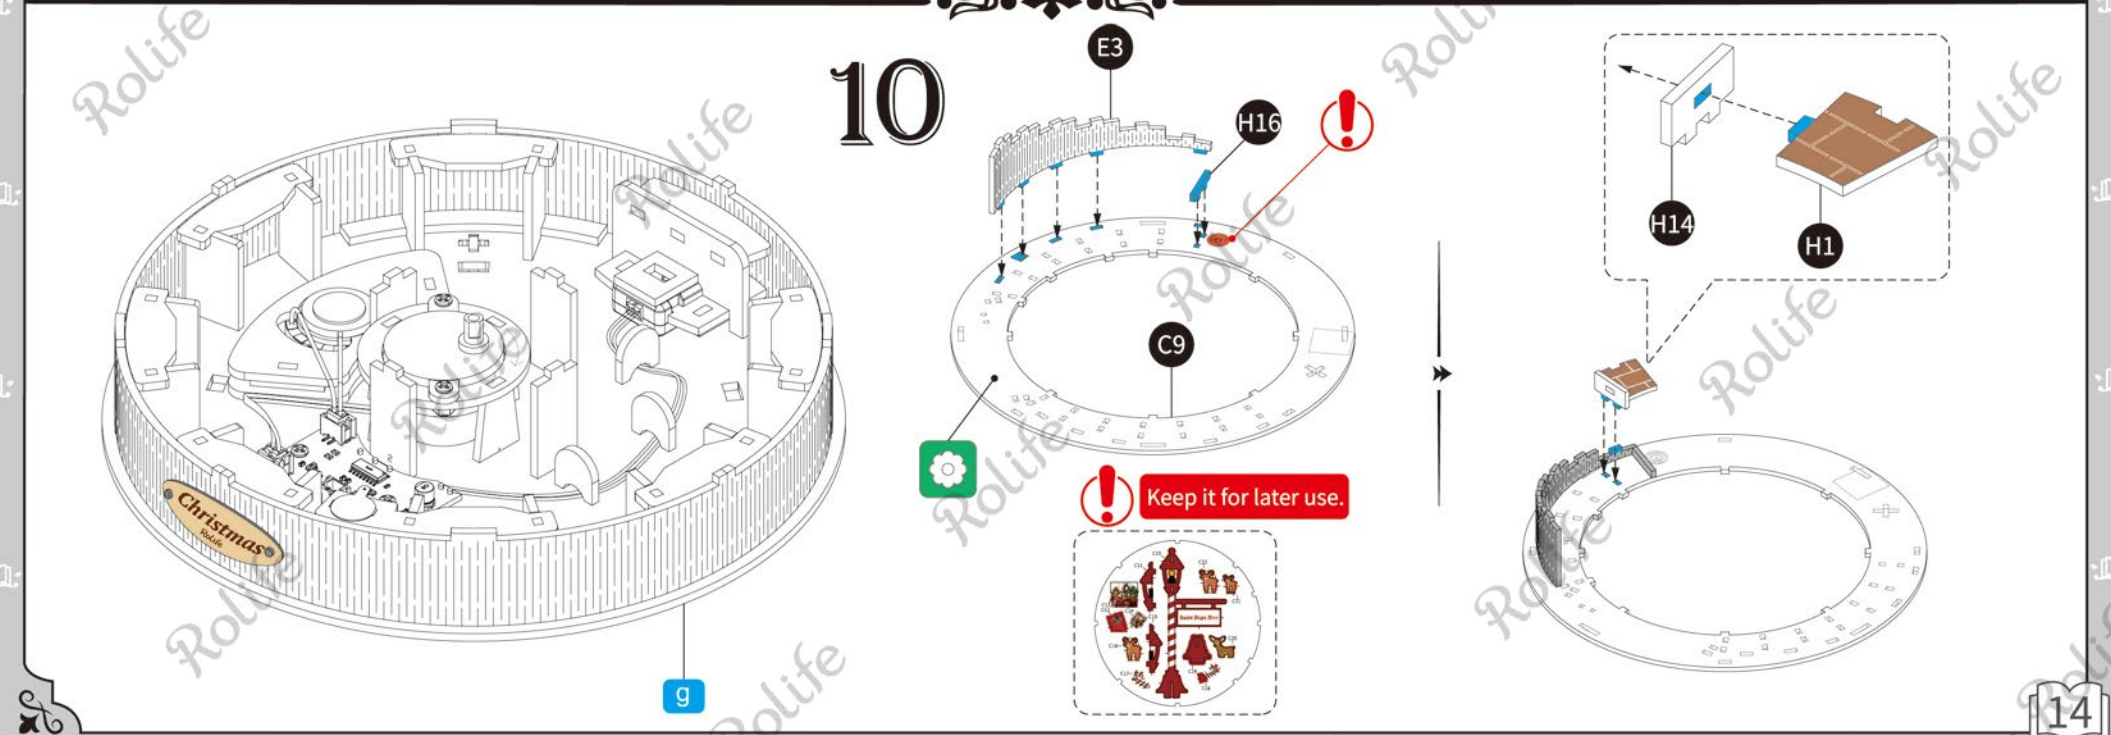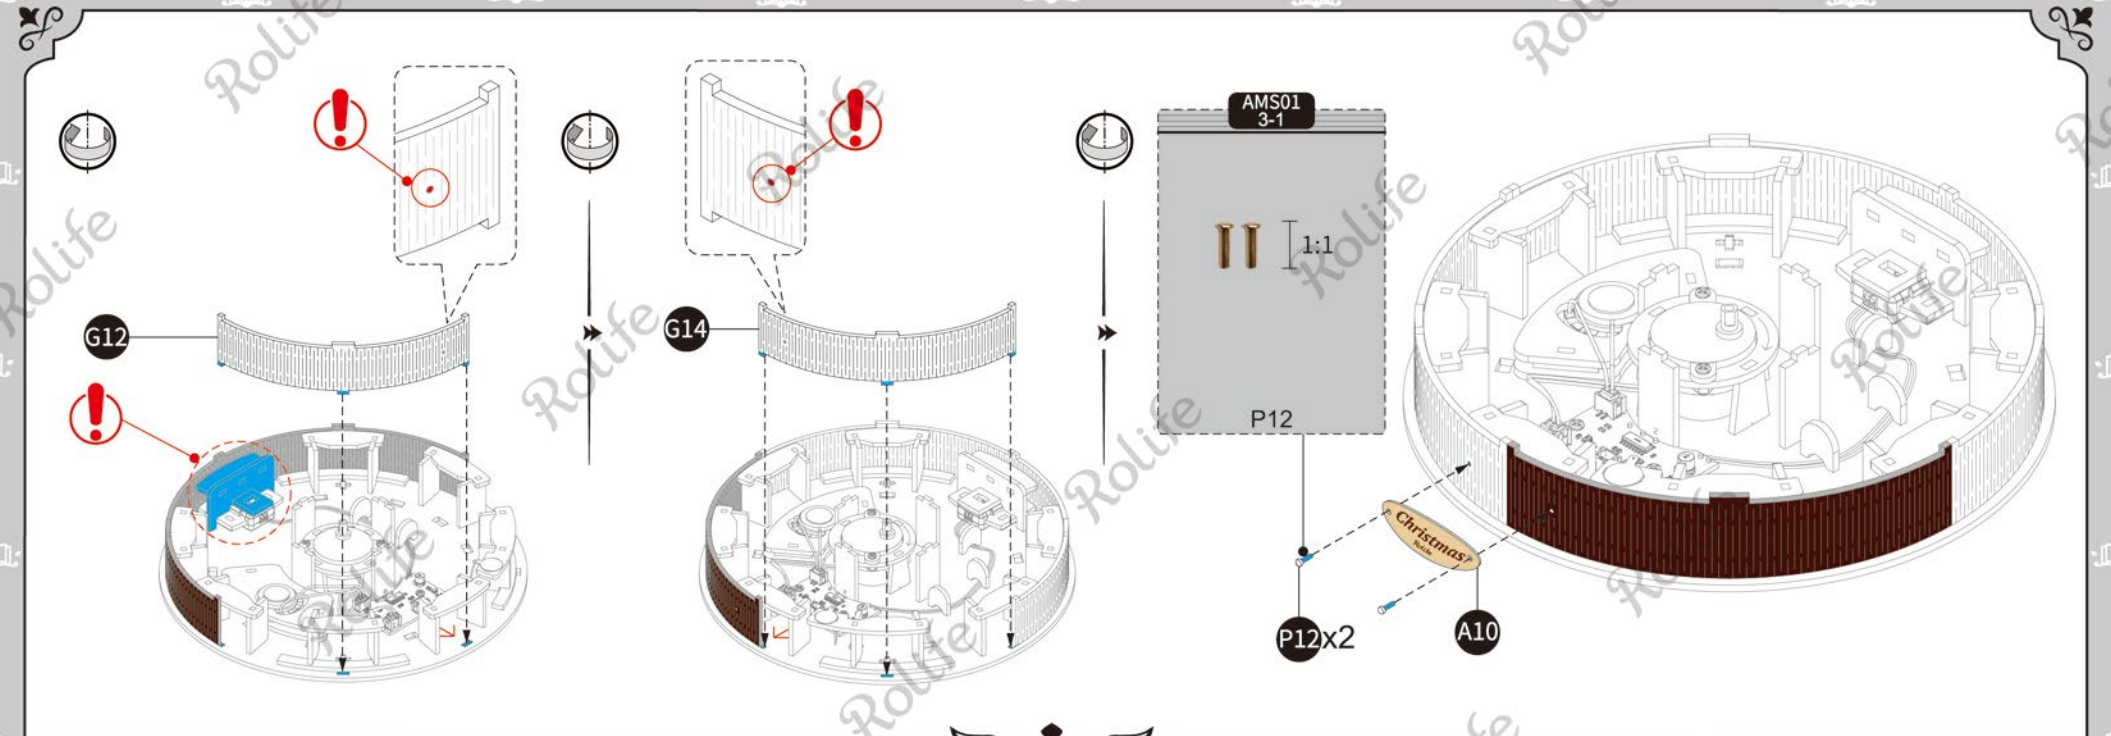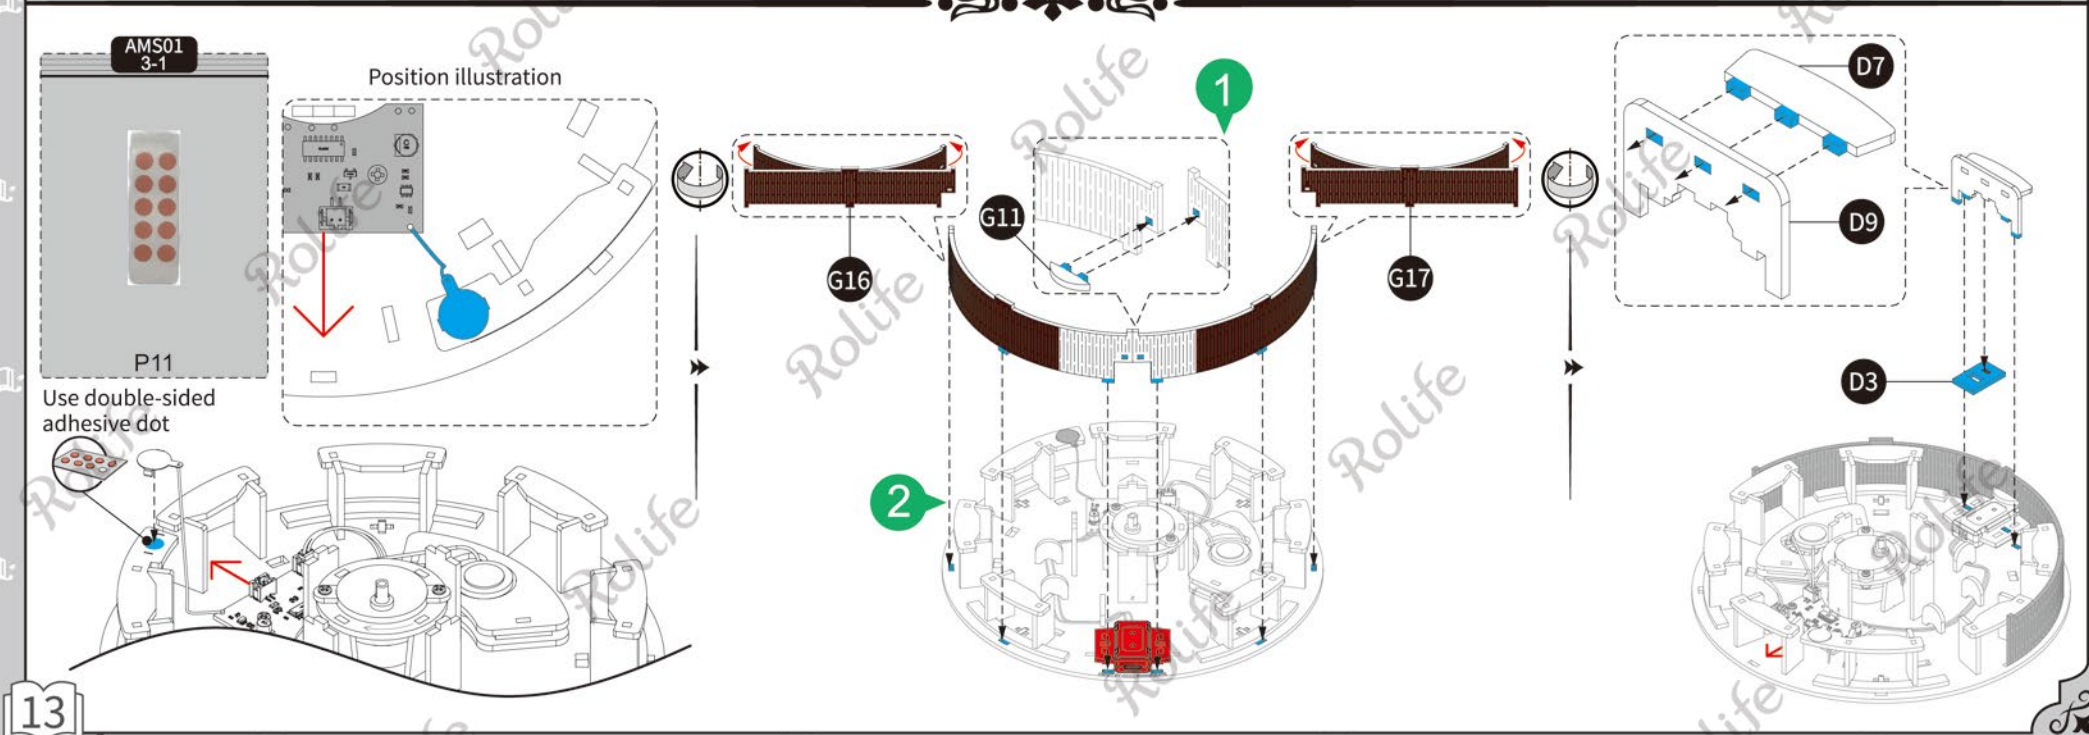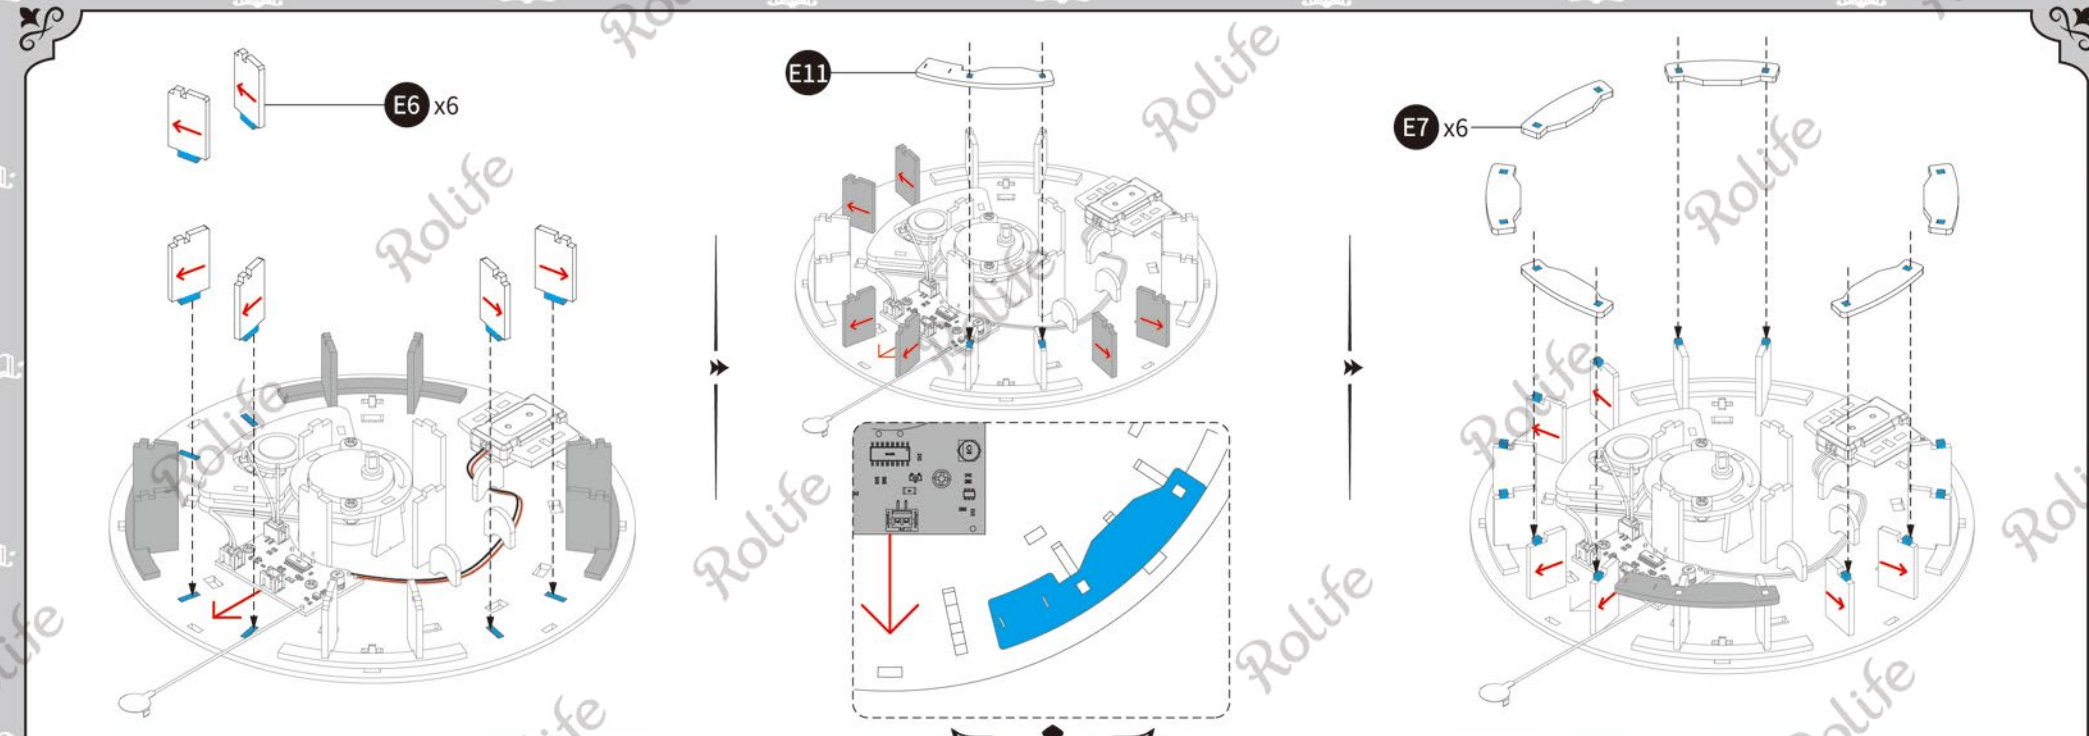





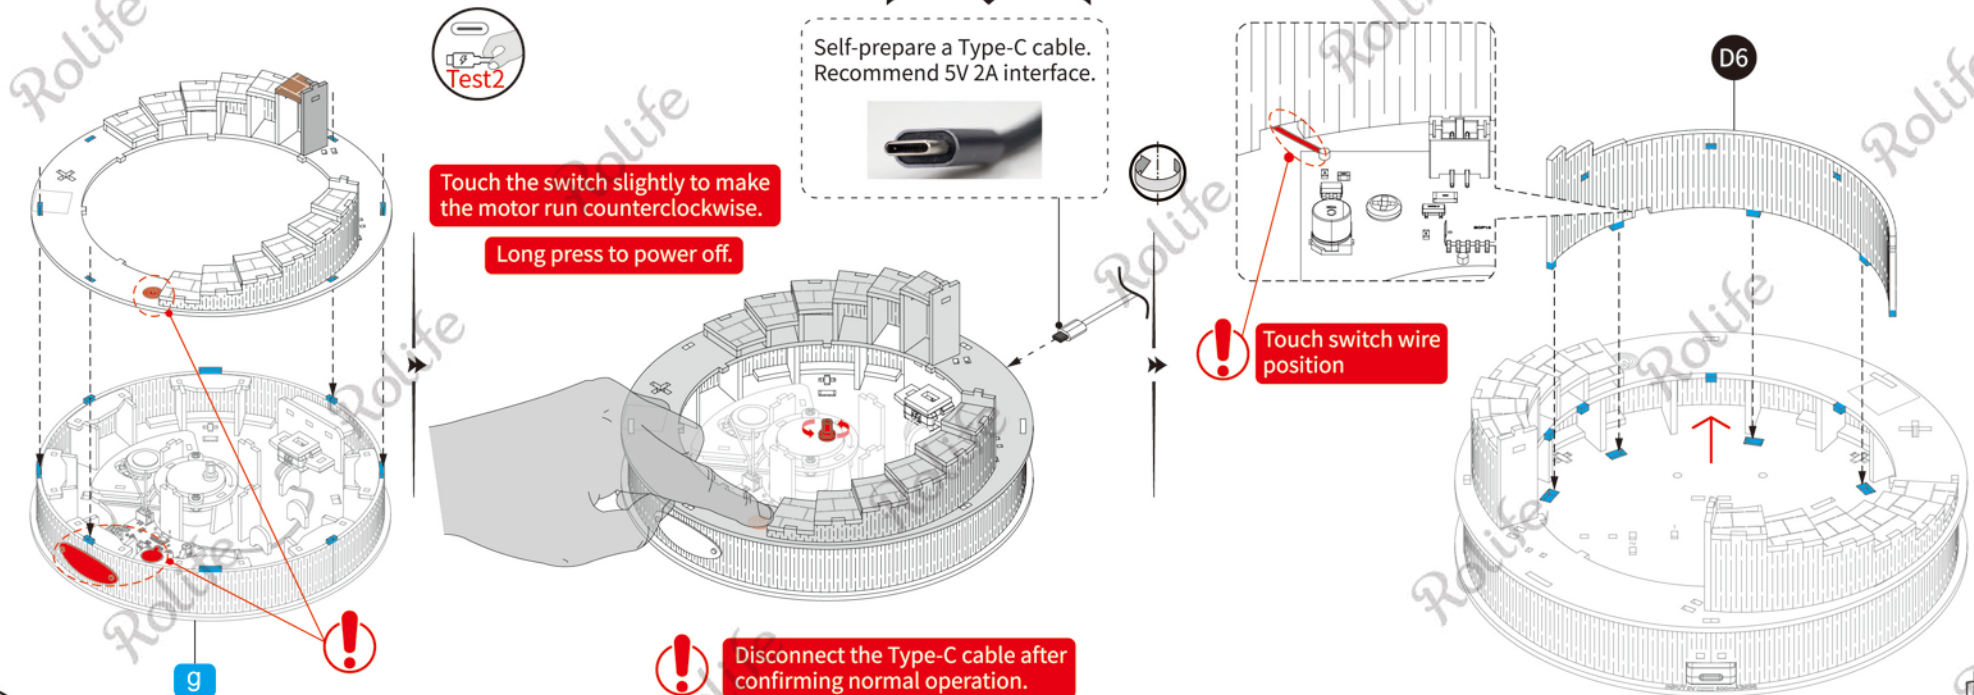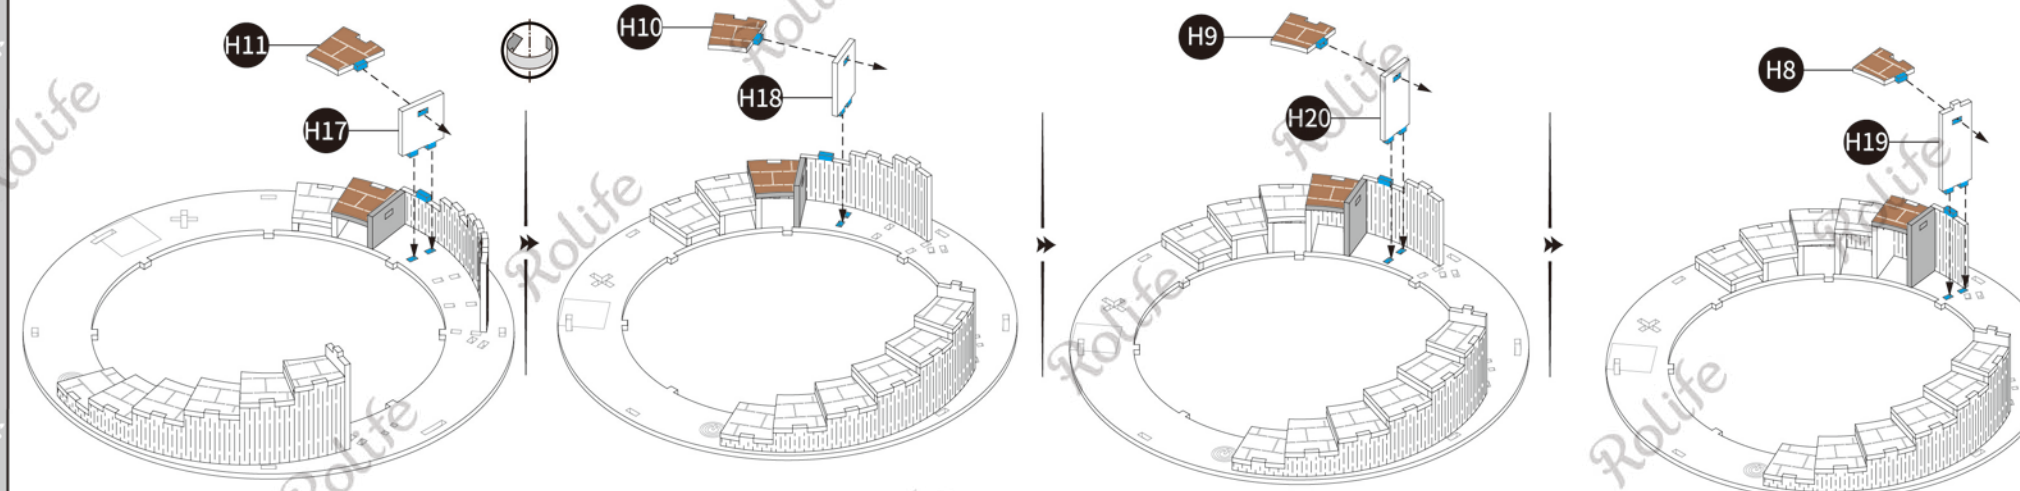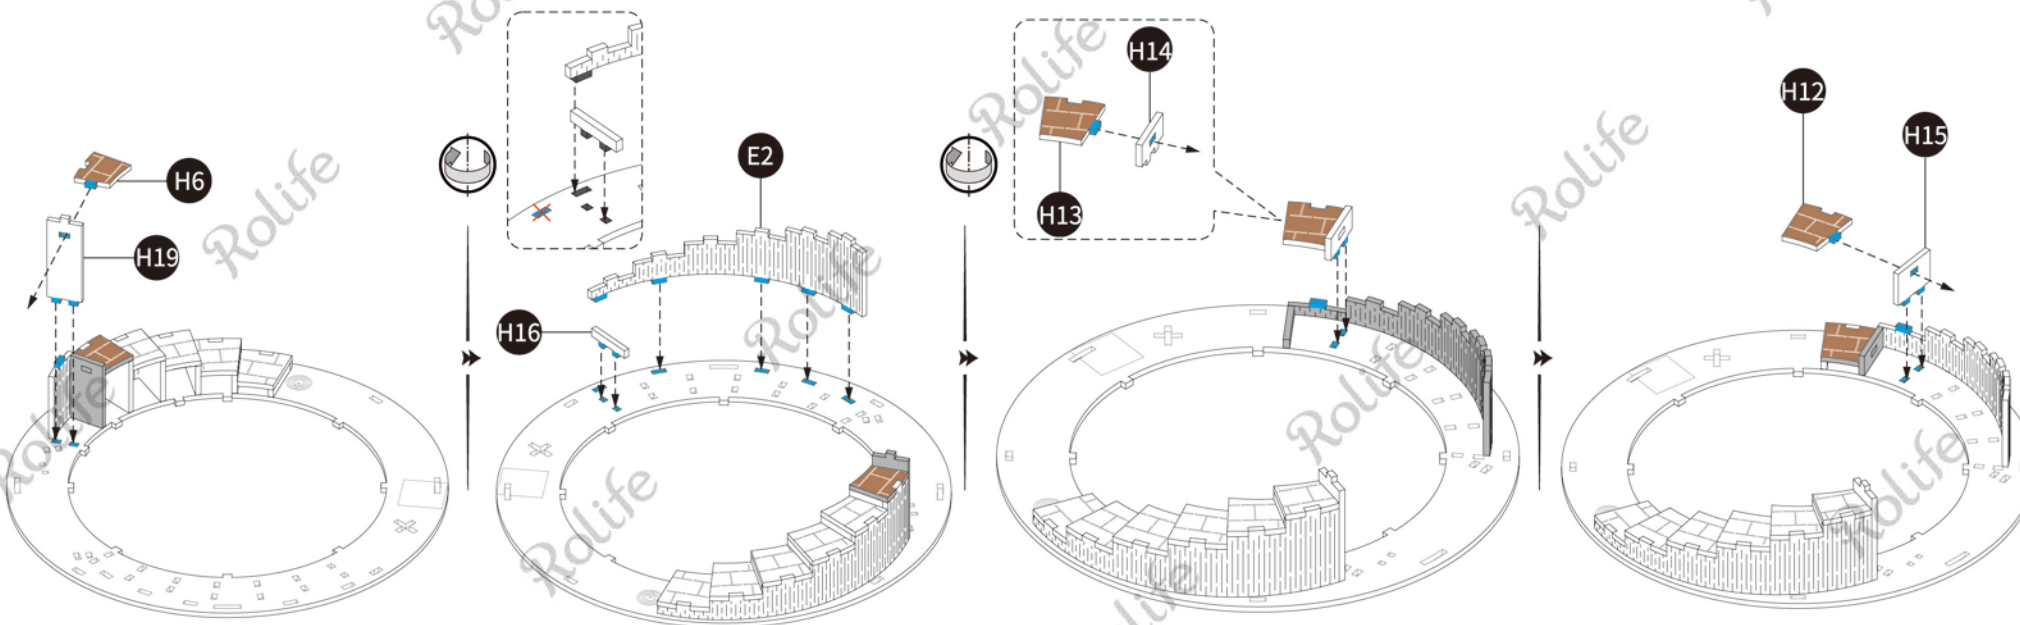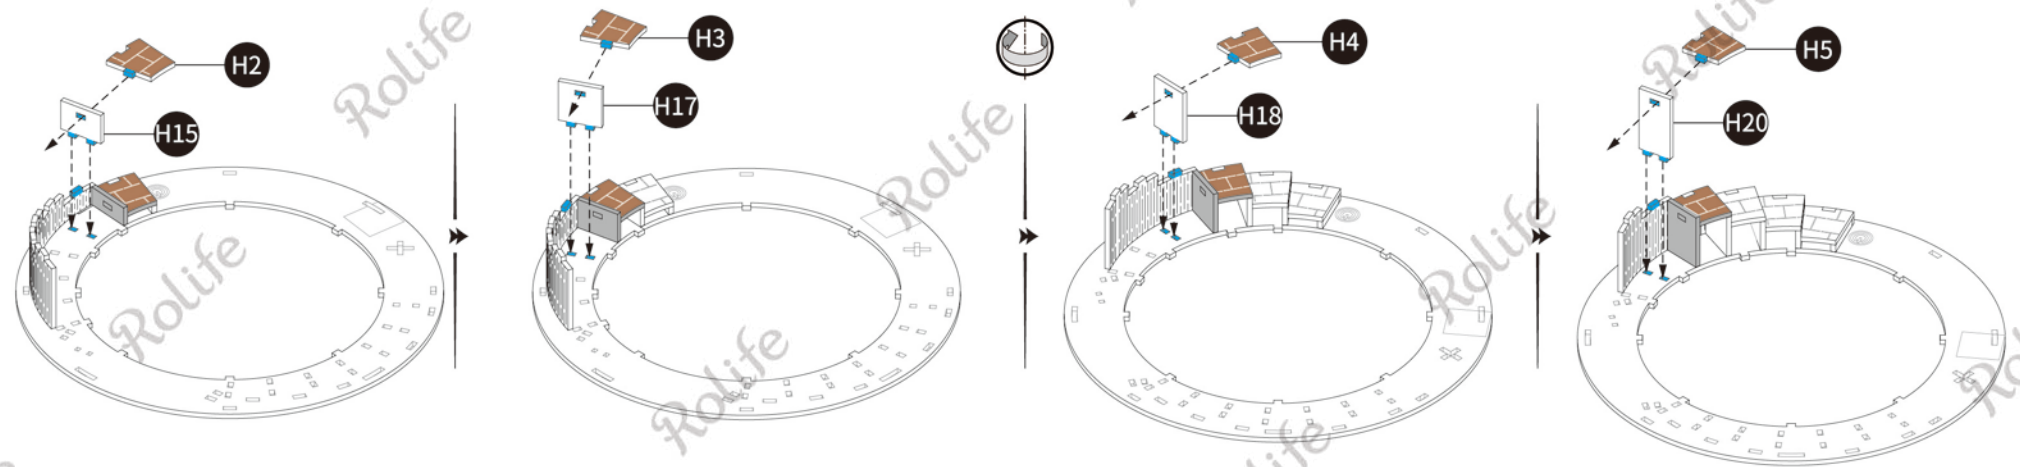



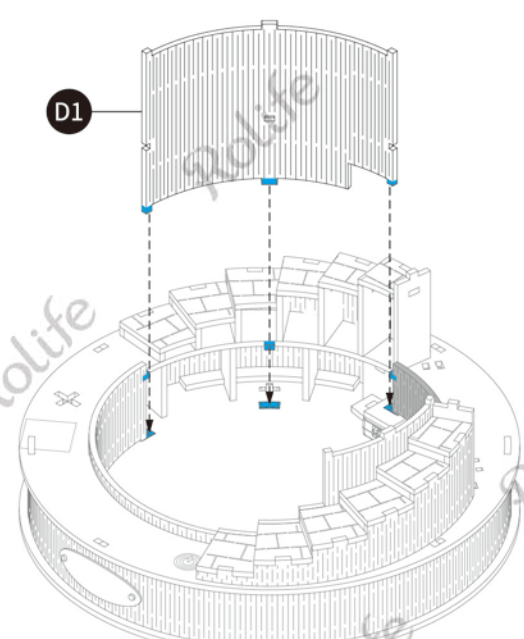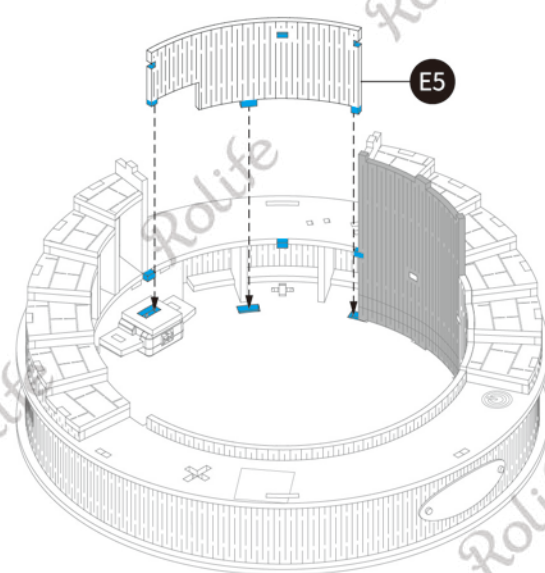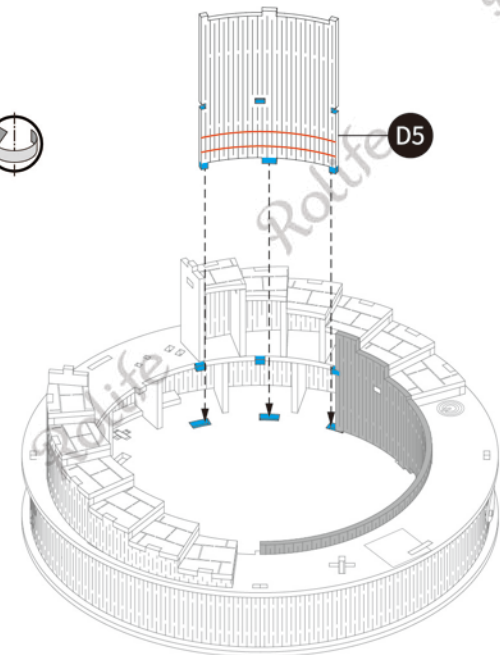


P1

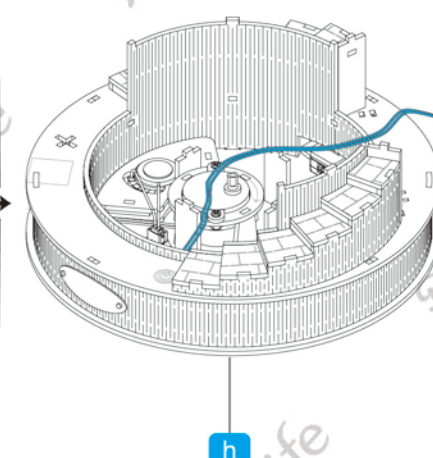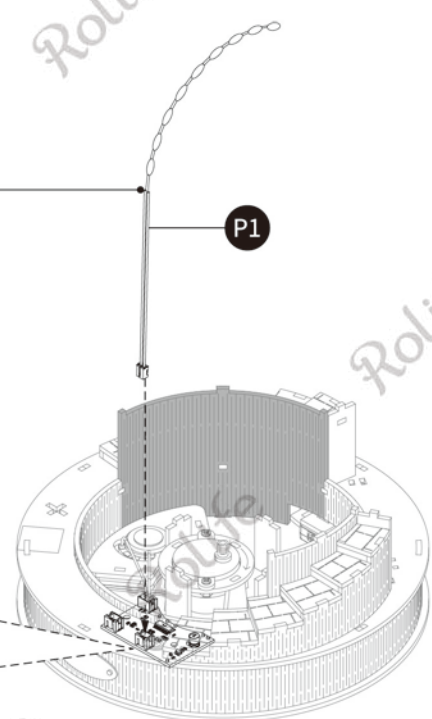  


h

 11

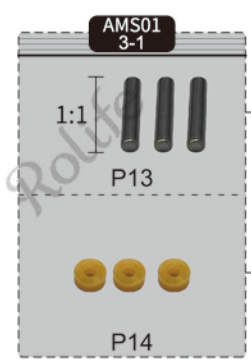


P13 x3

 
P14 x3

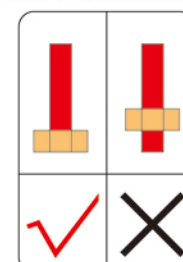

x3

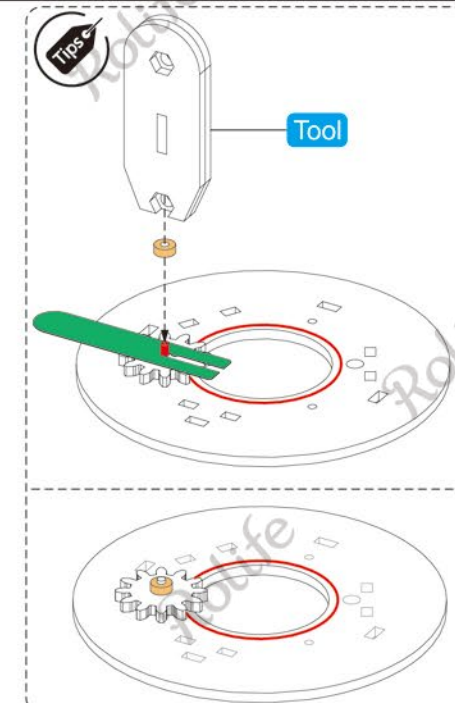 


Tool

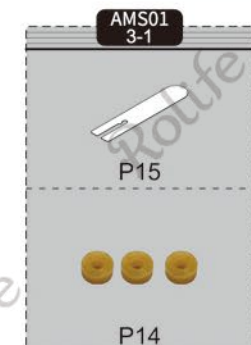 

P15

 P14

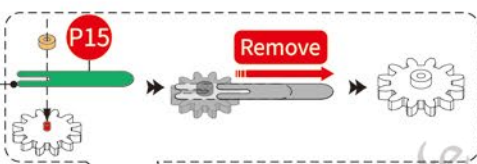

P15

Remove

 
 
Wax the yellow parts

P14


E14

E13

Assemble in sequence.

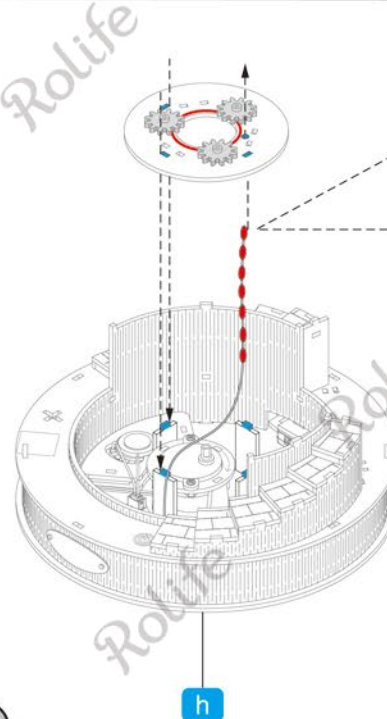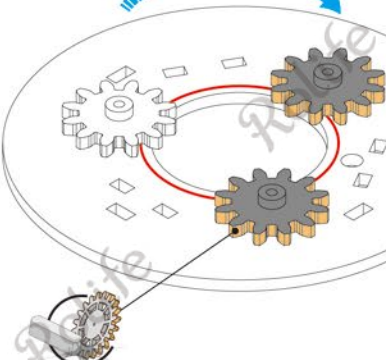


h

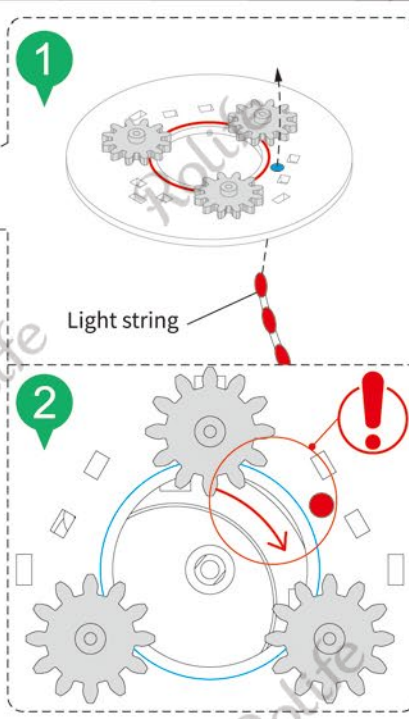 

1

Light string




 
2

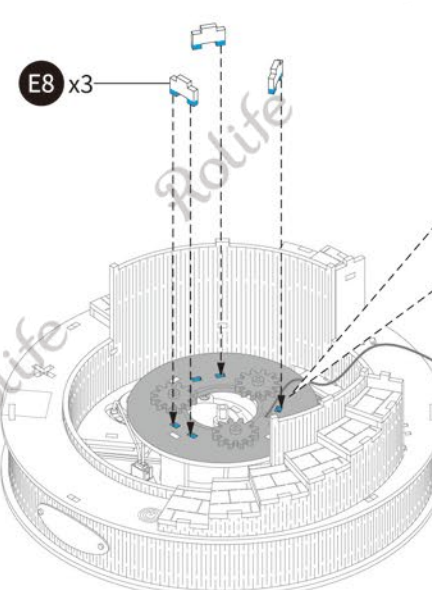




E8 x3






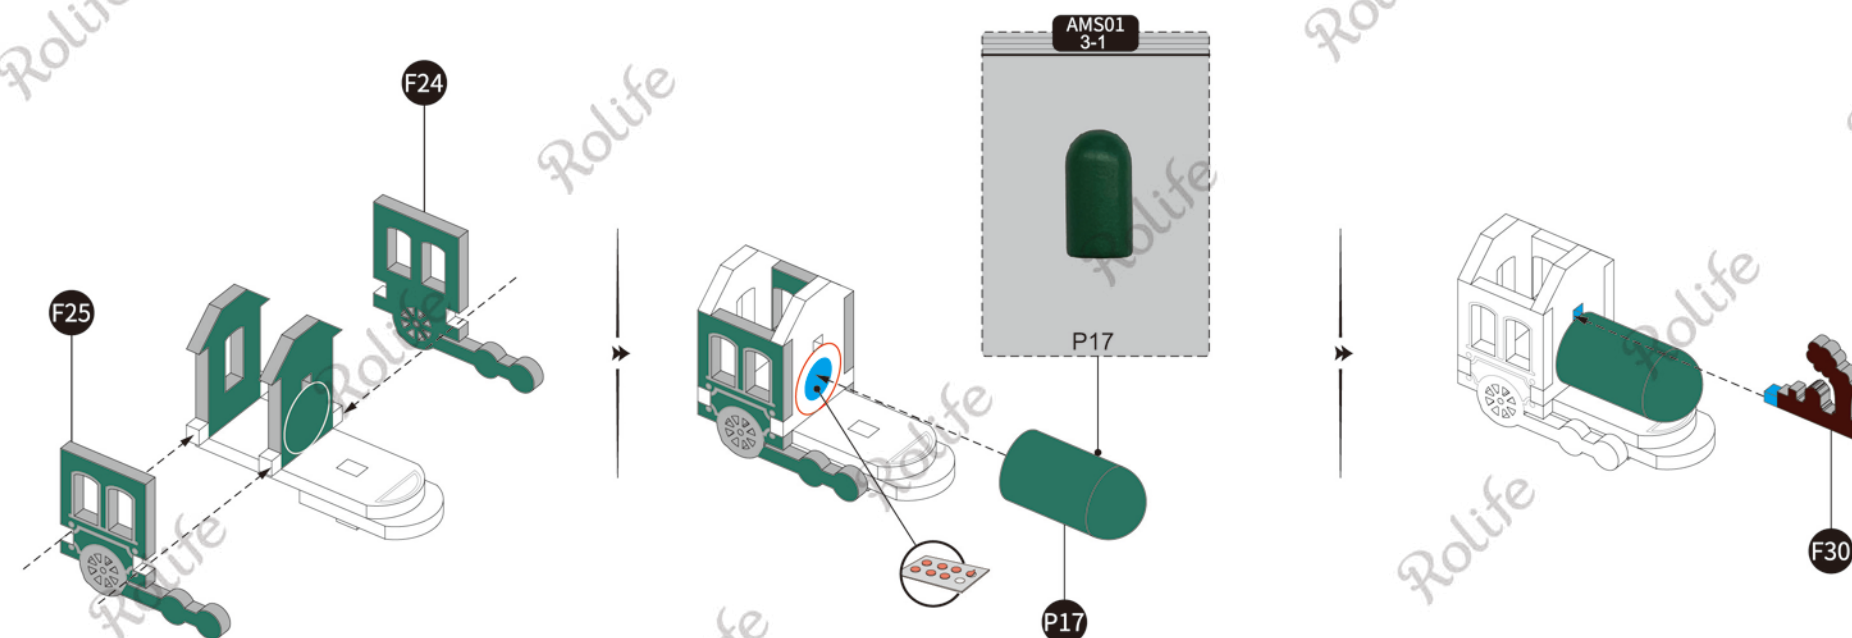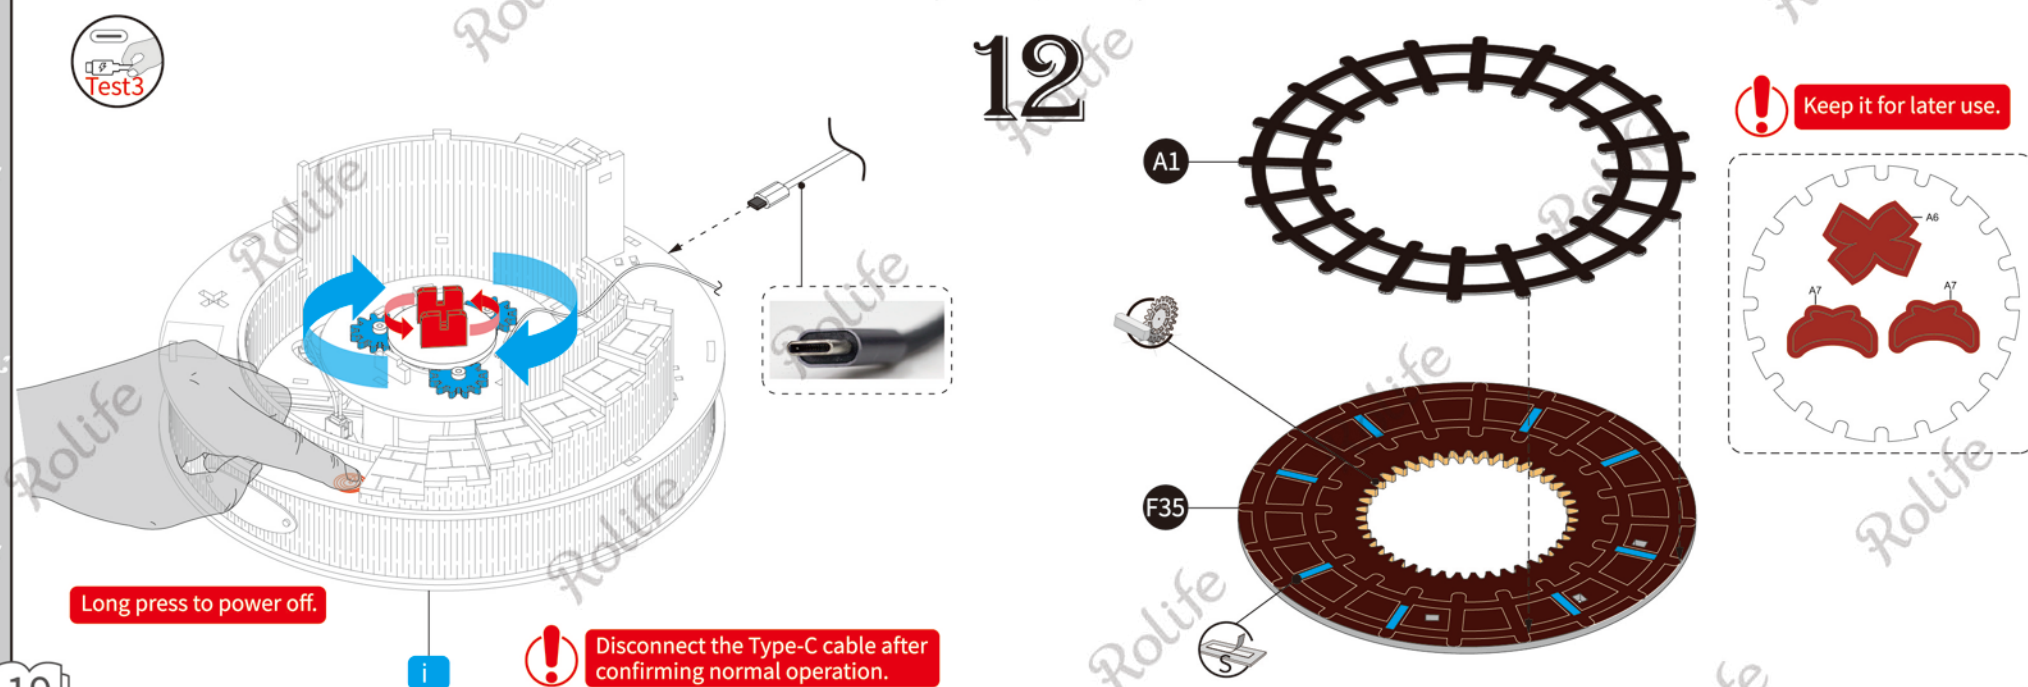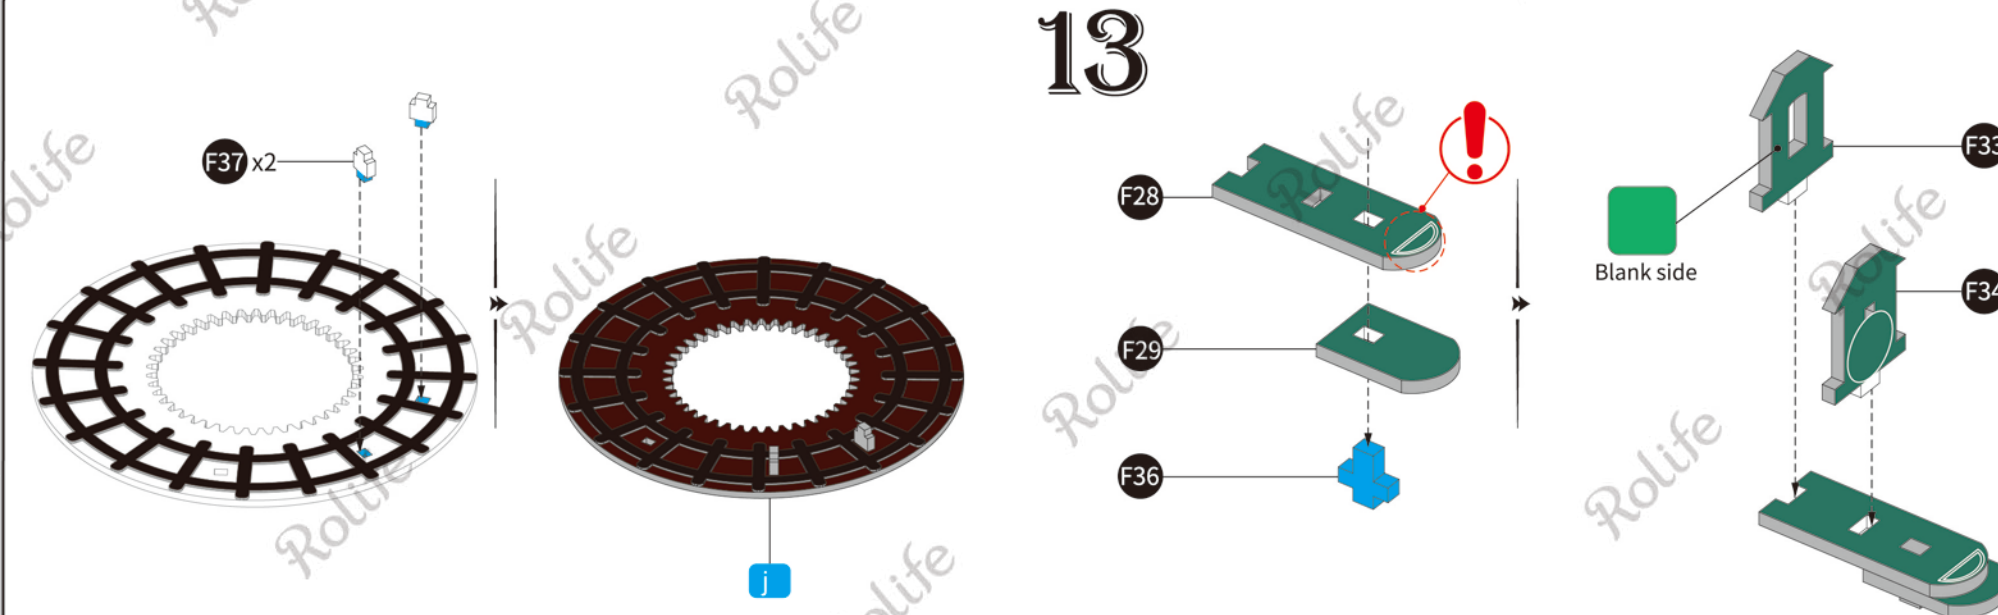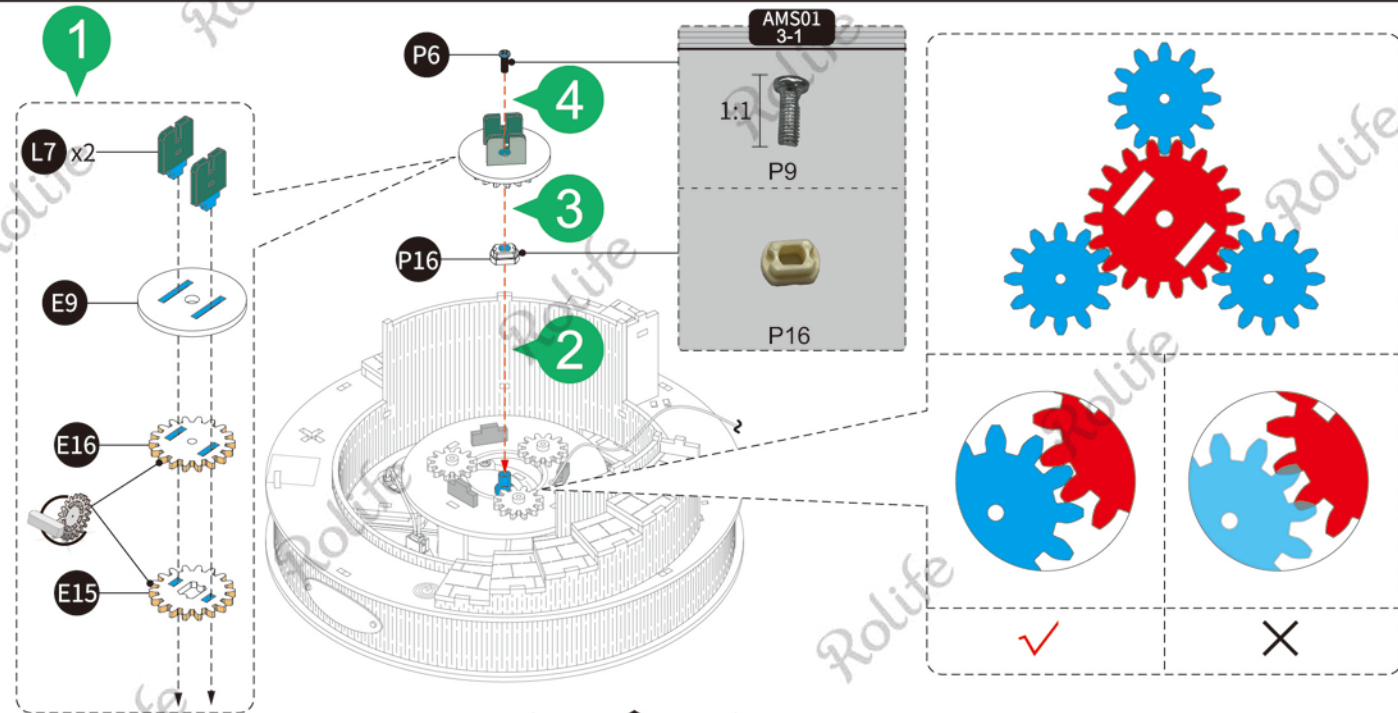    







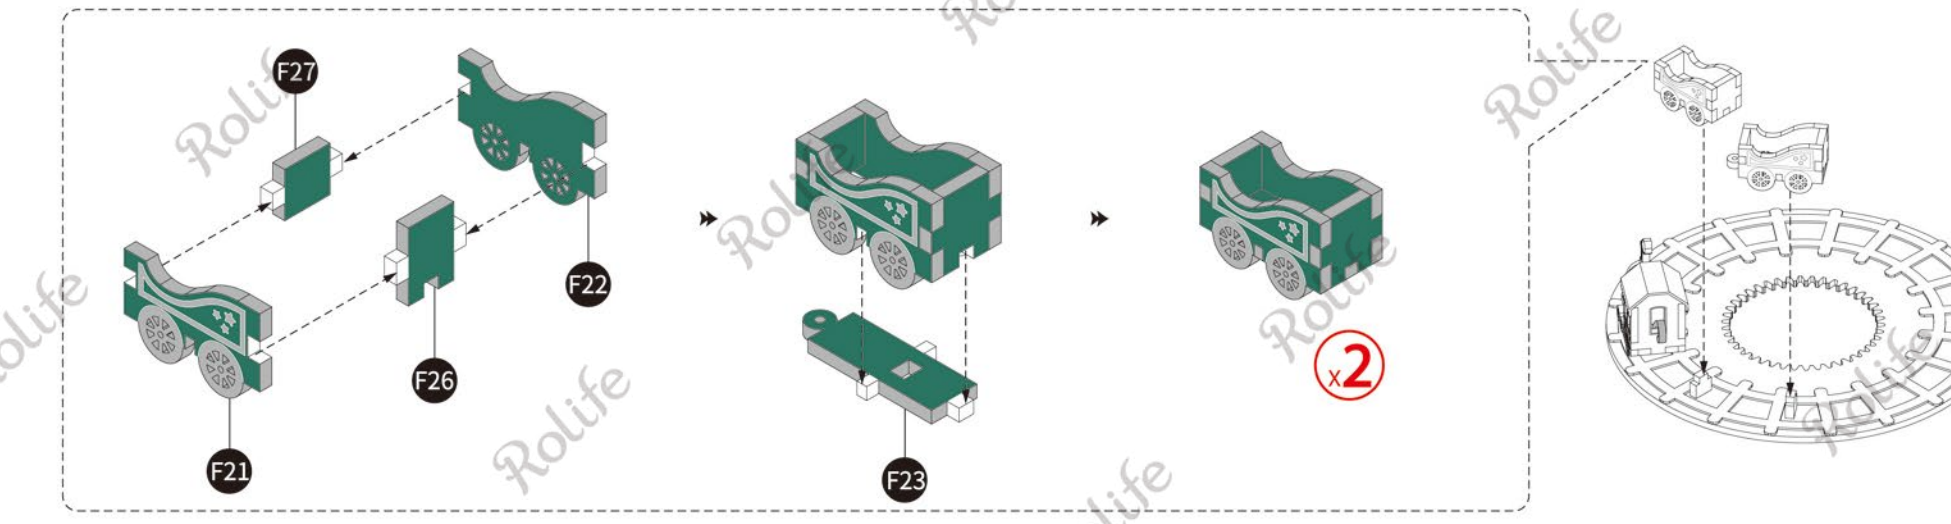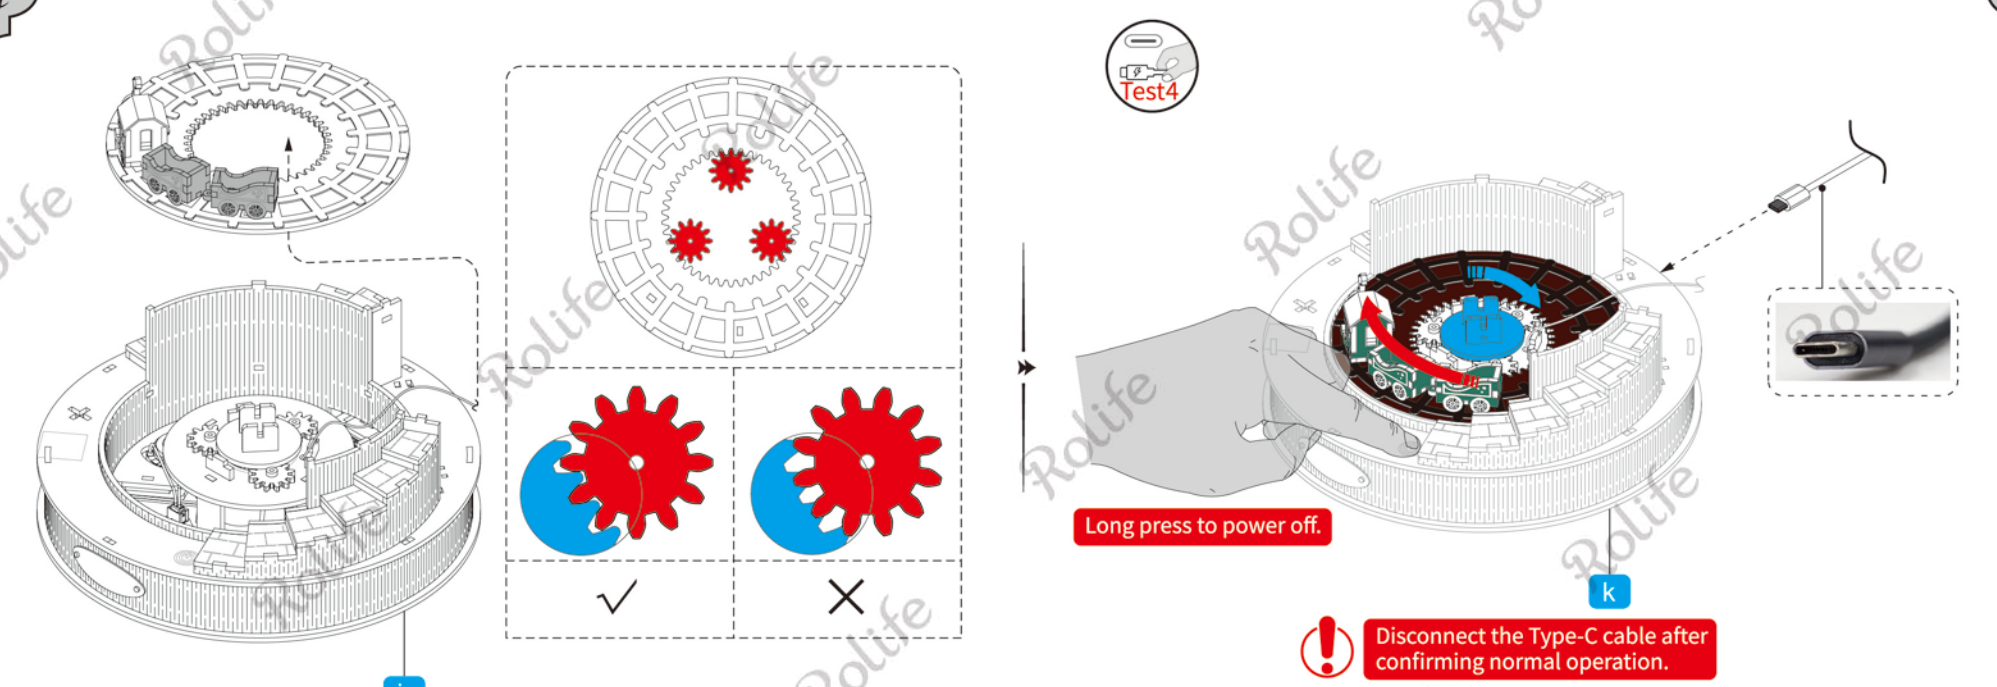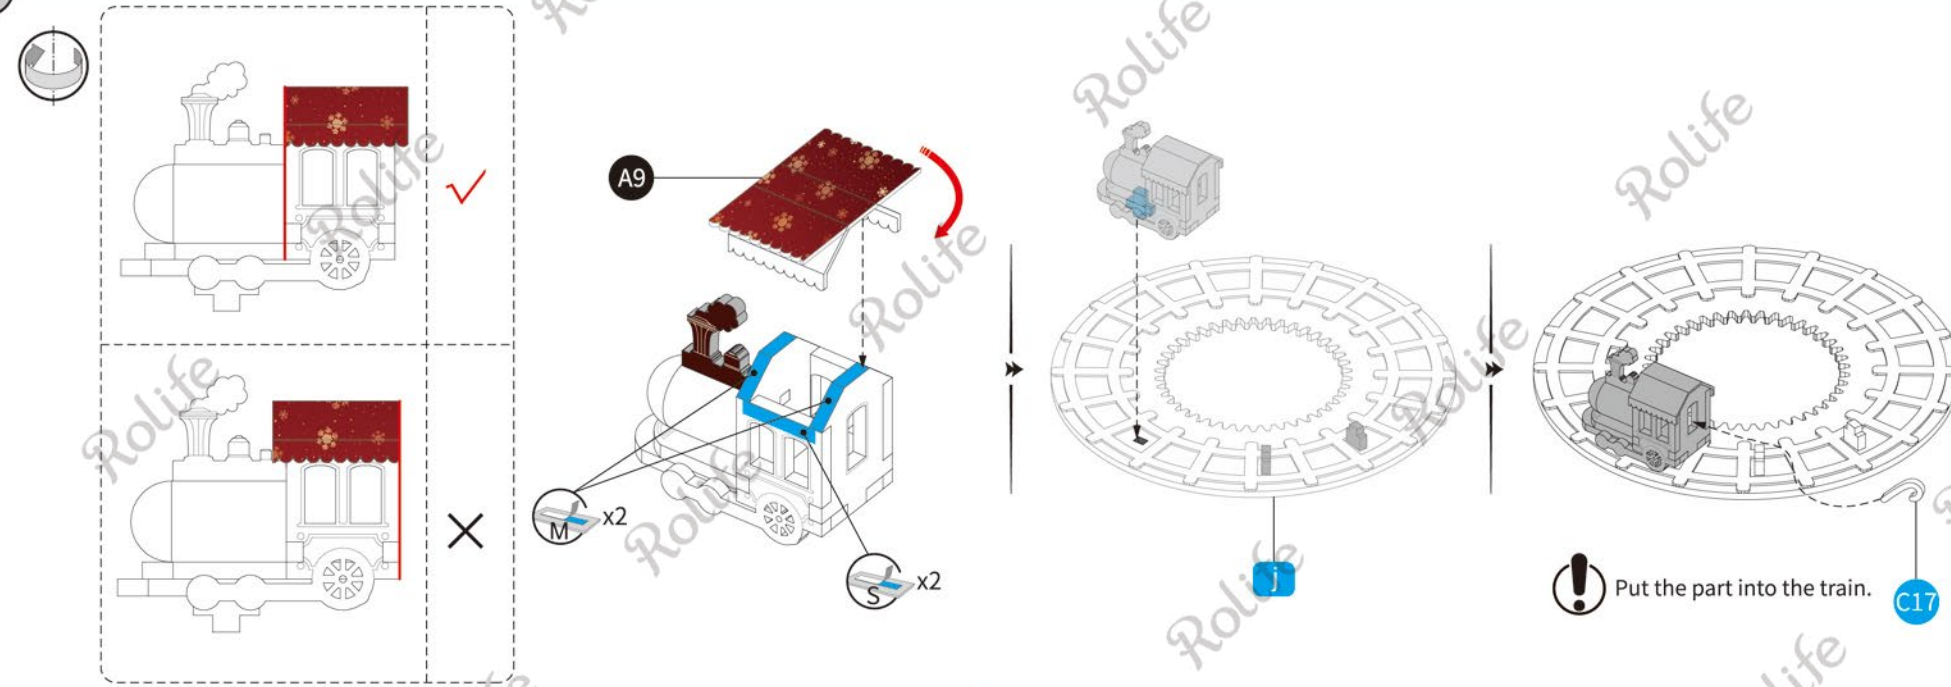   

14

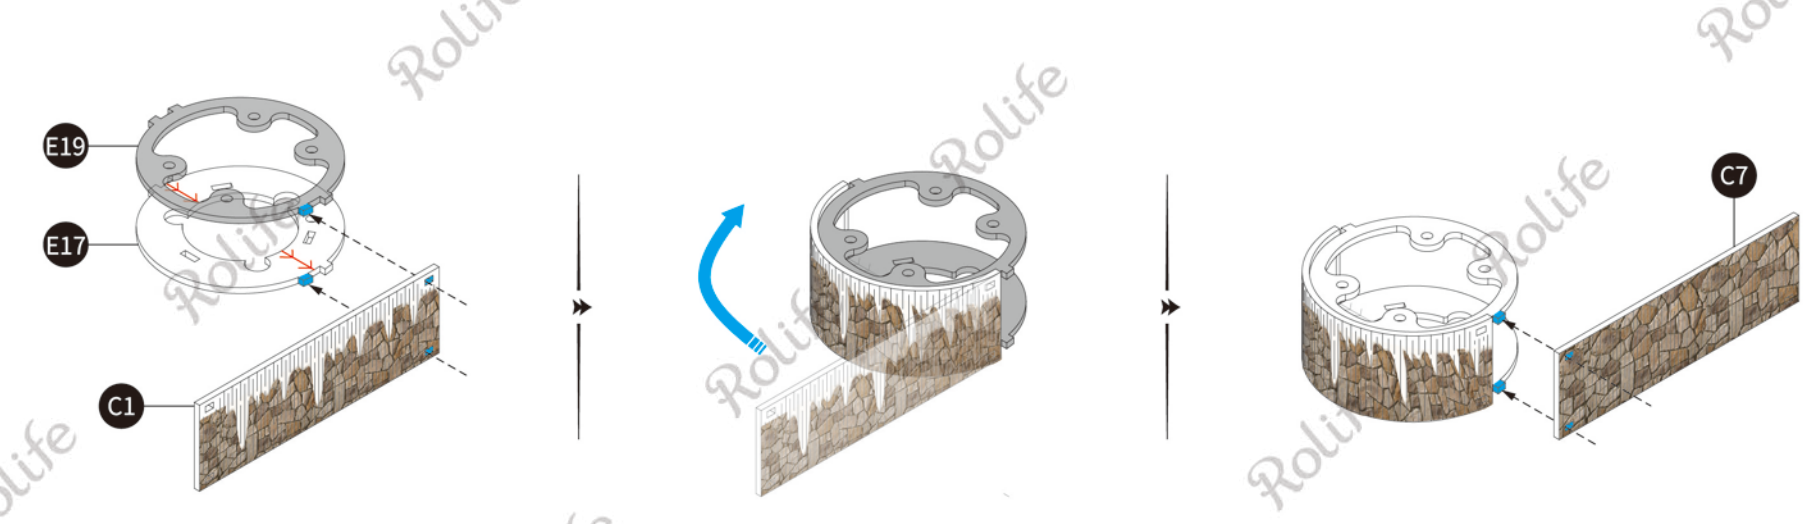 







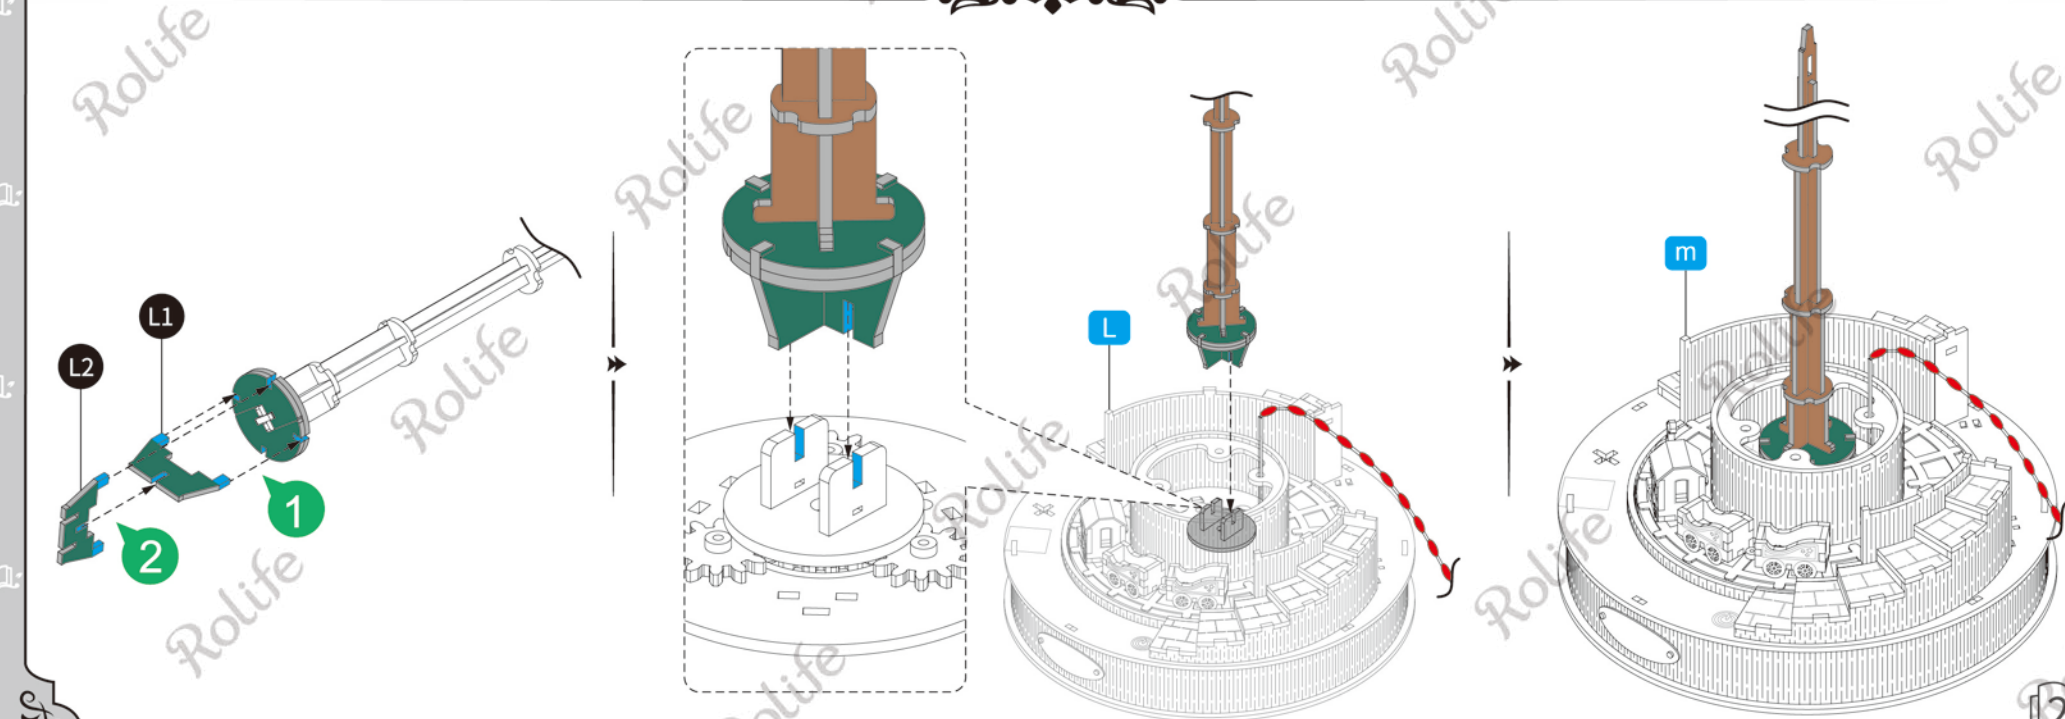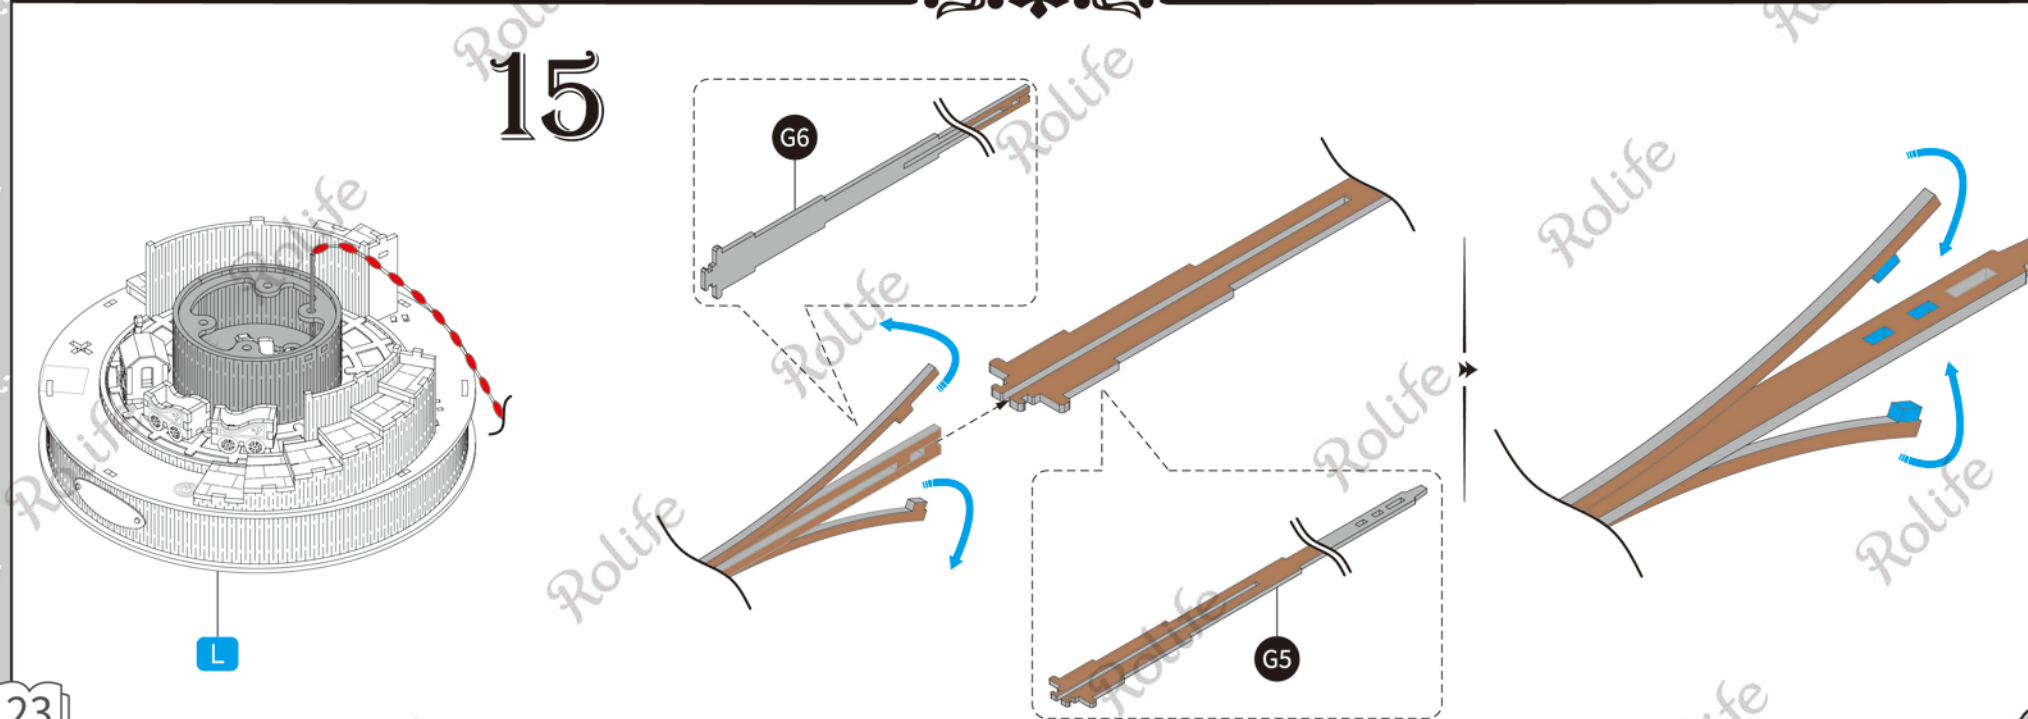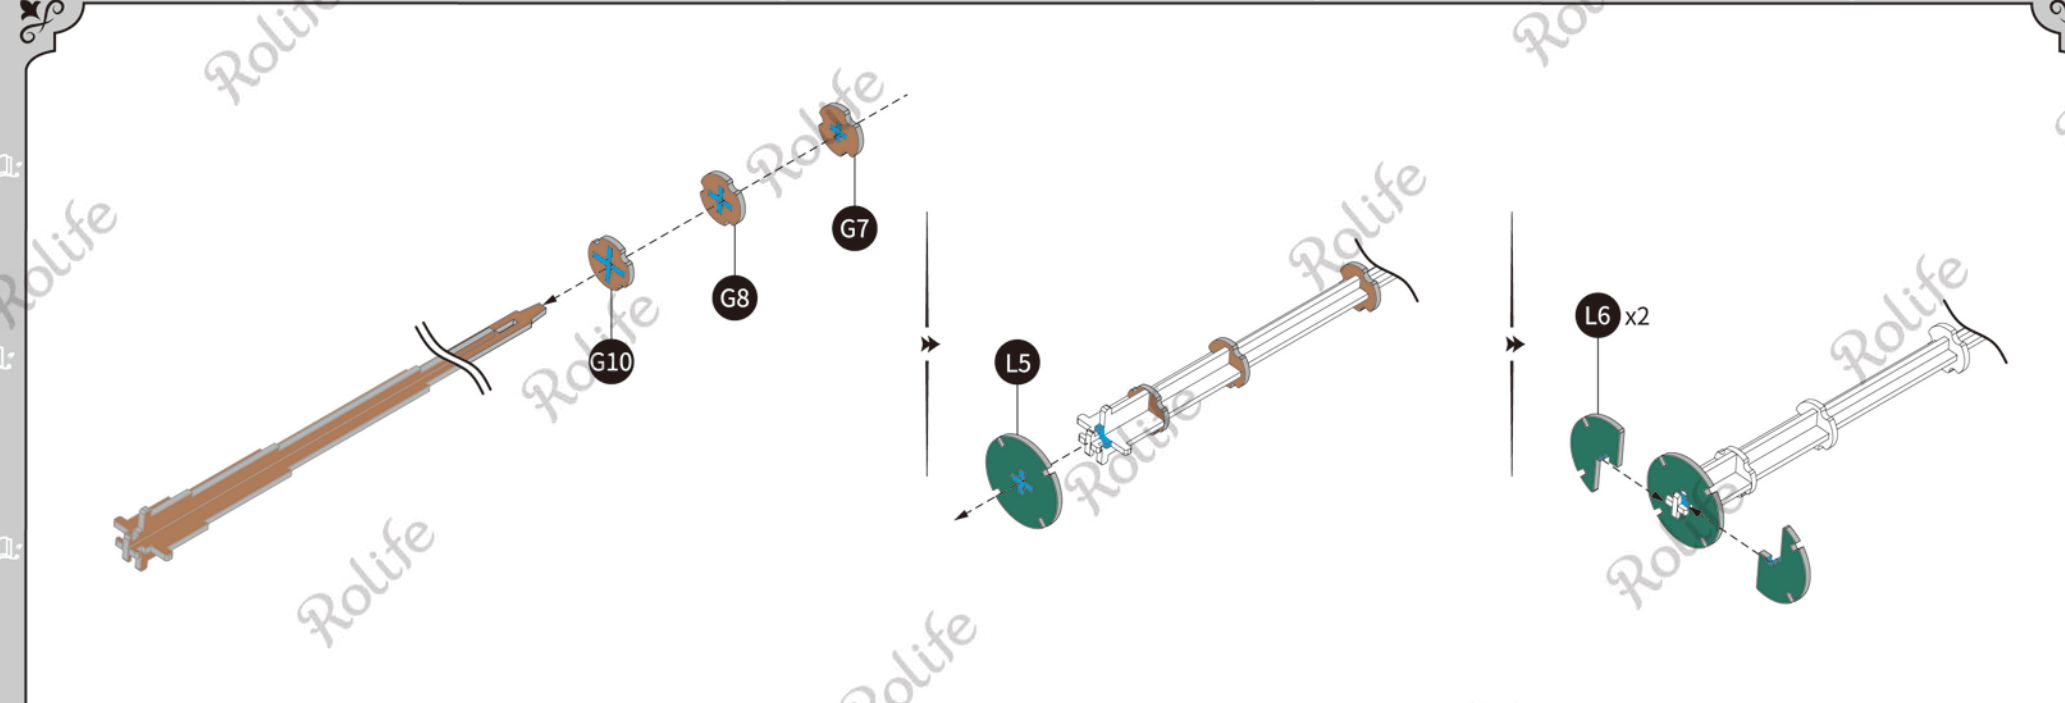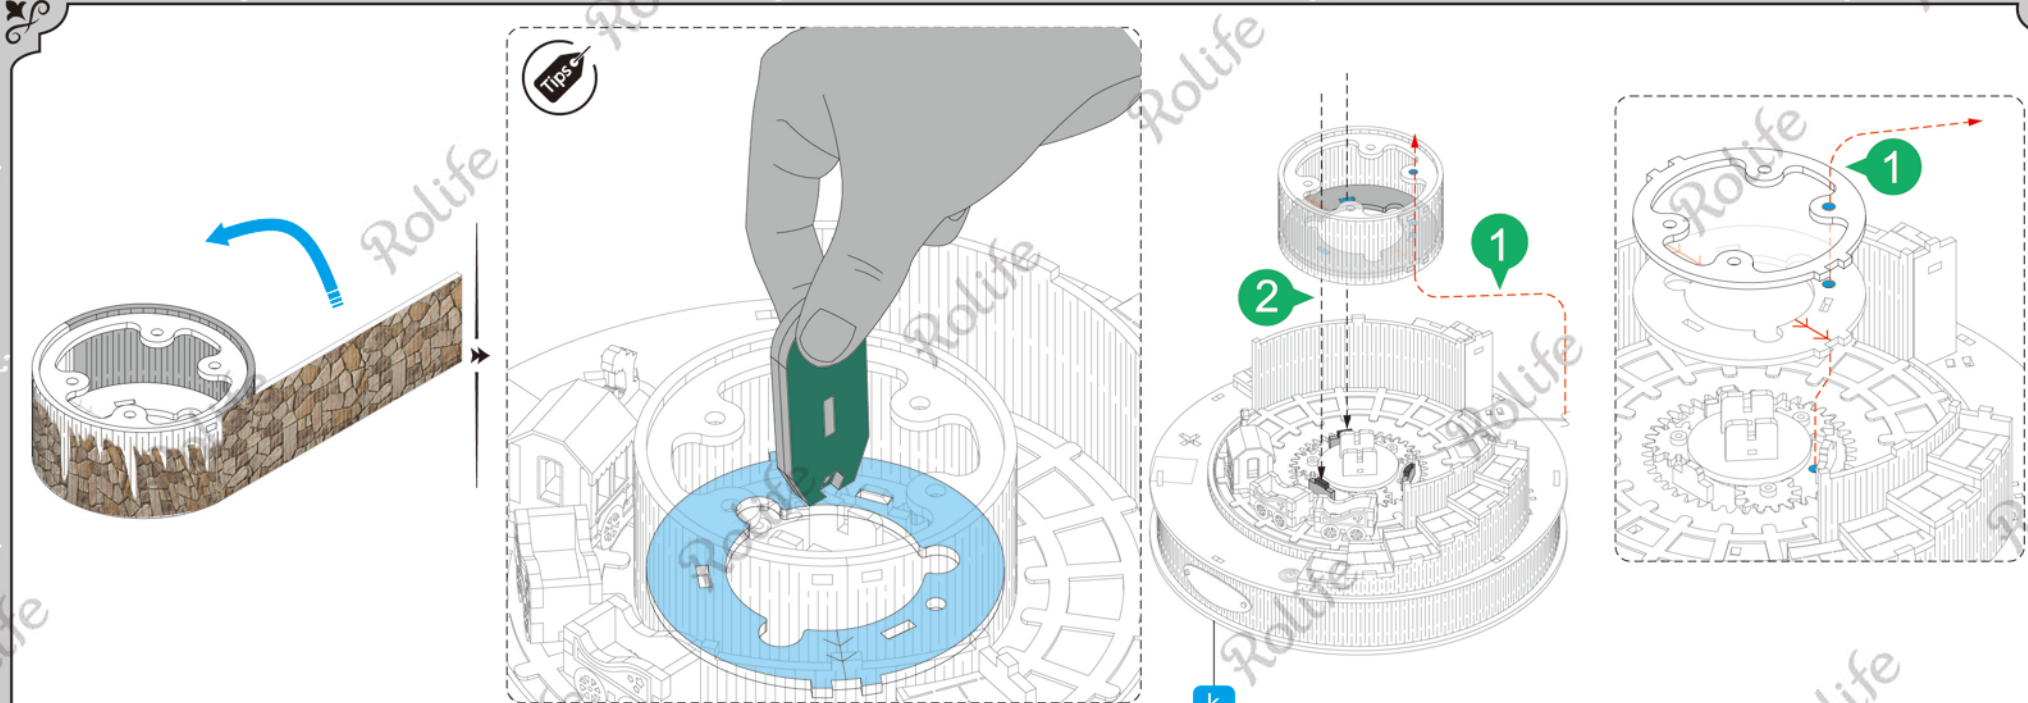    






16

    ! Part taking position

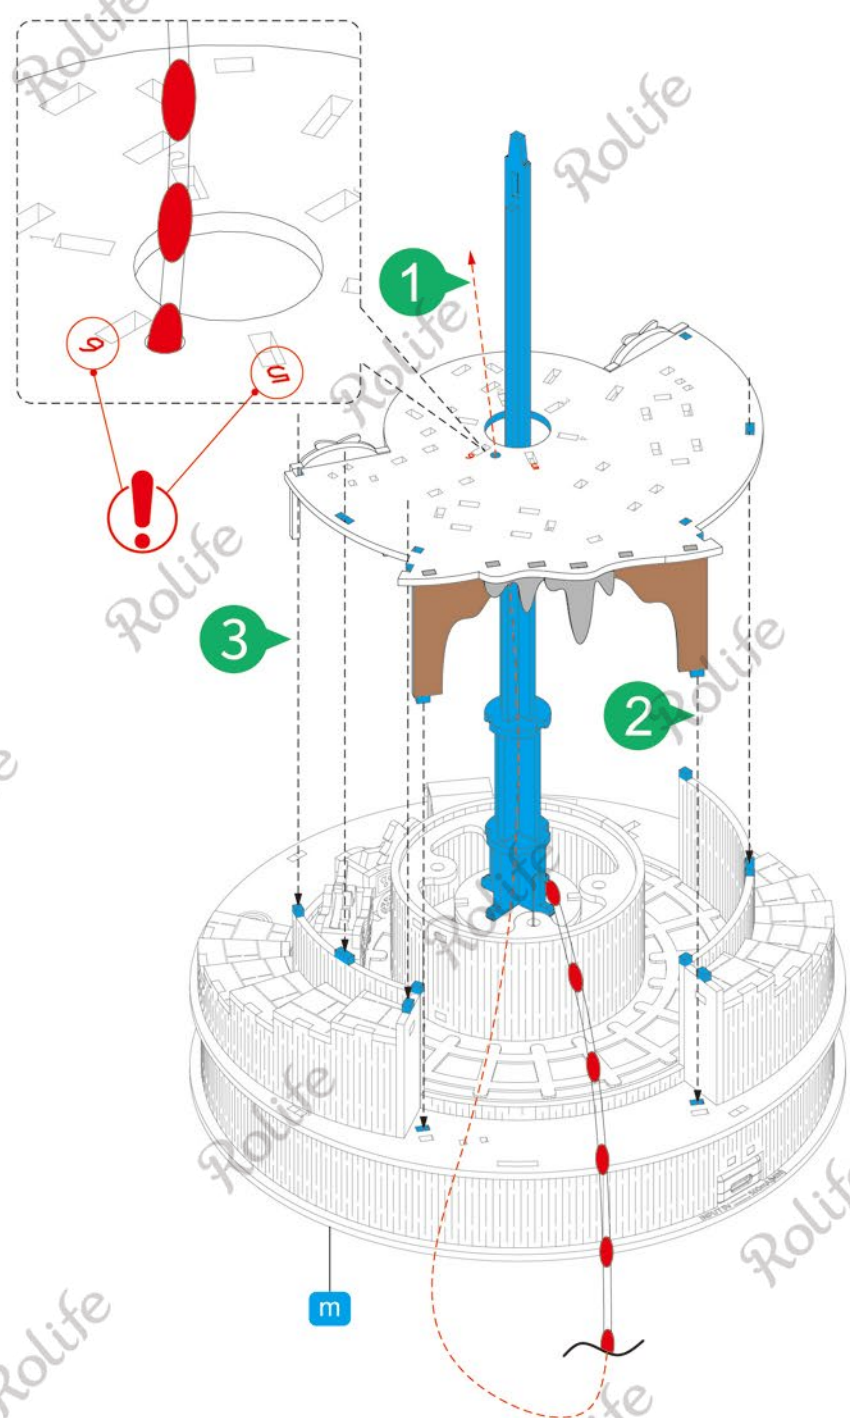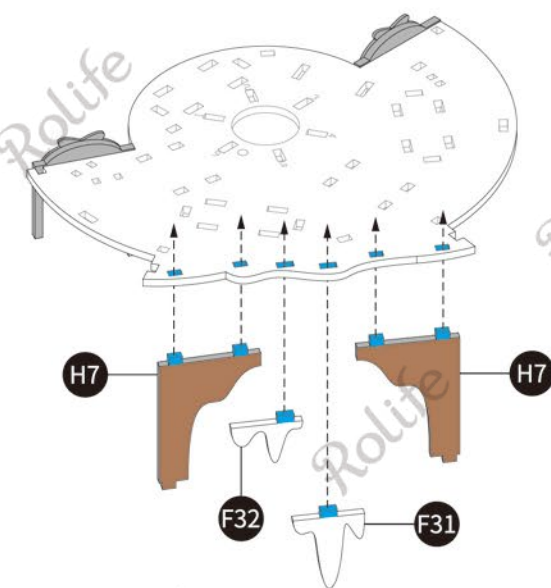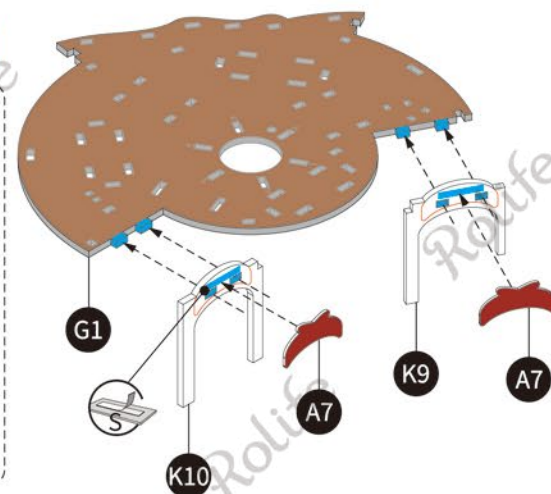
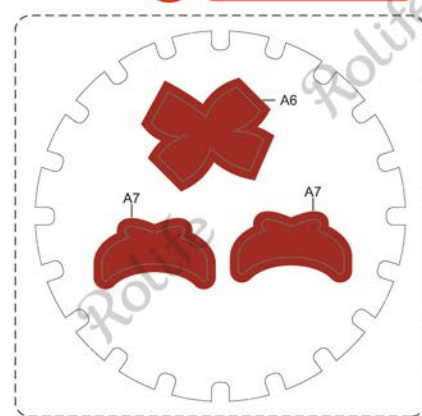


17

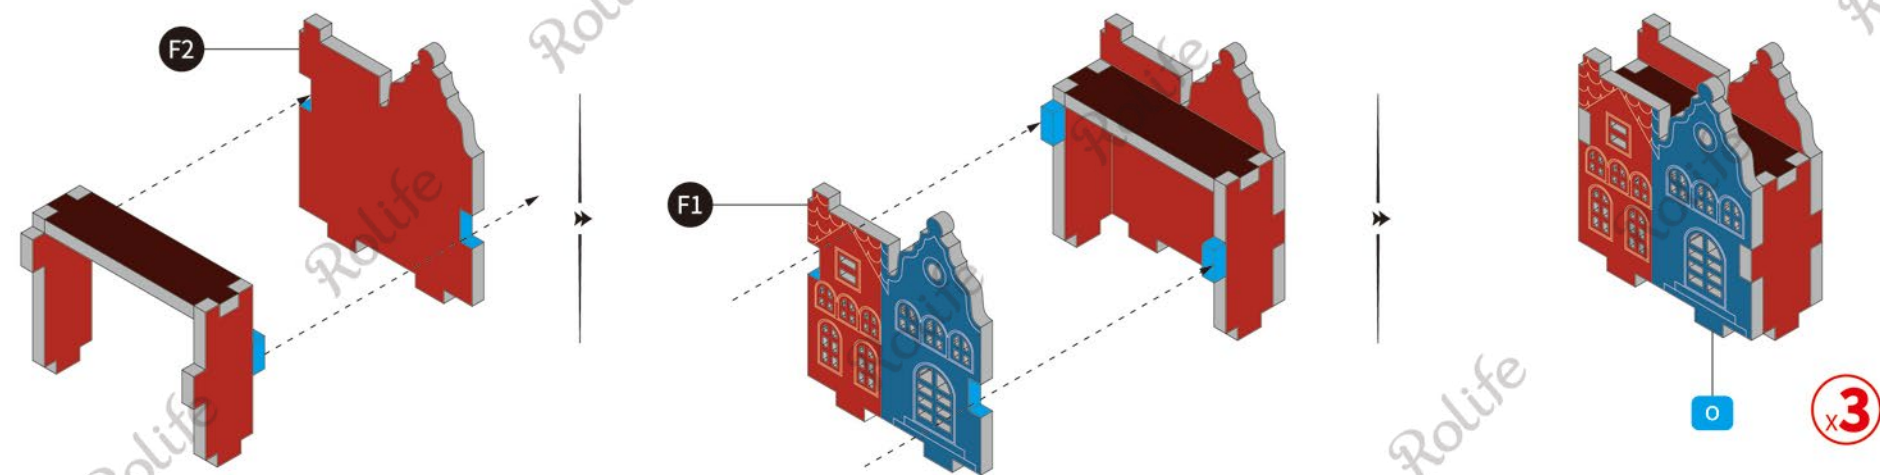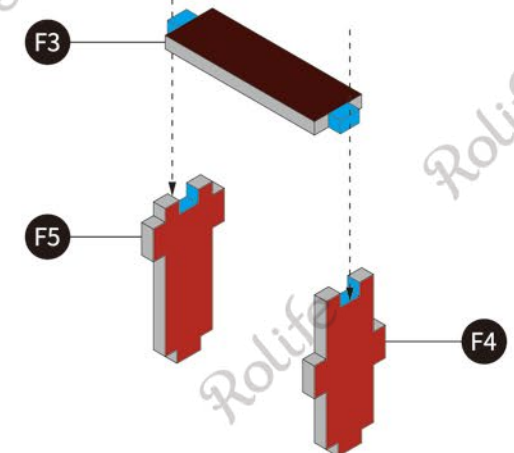  
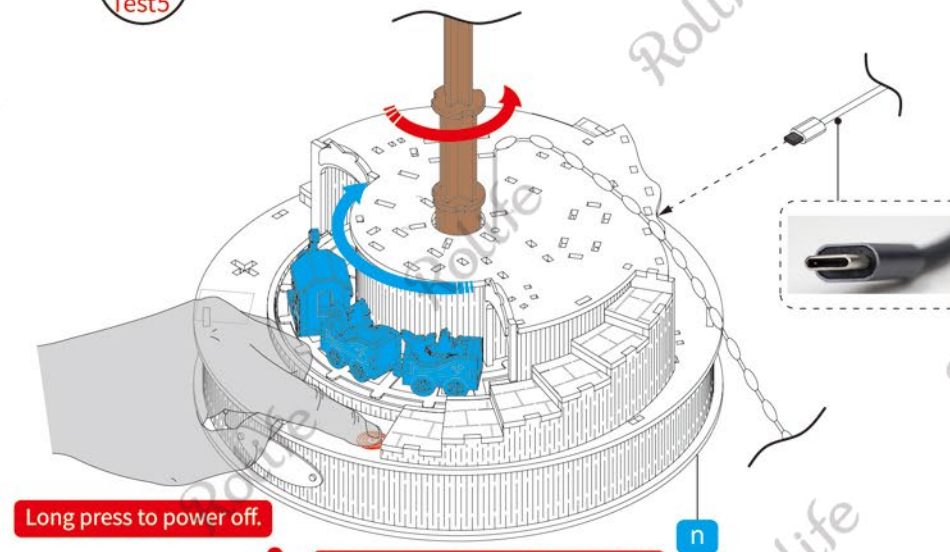 






18

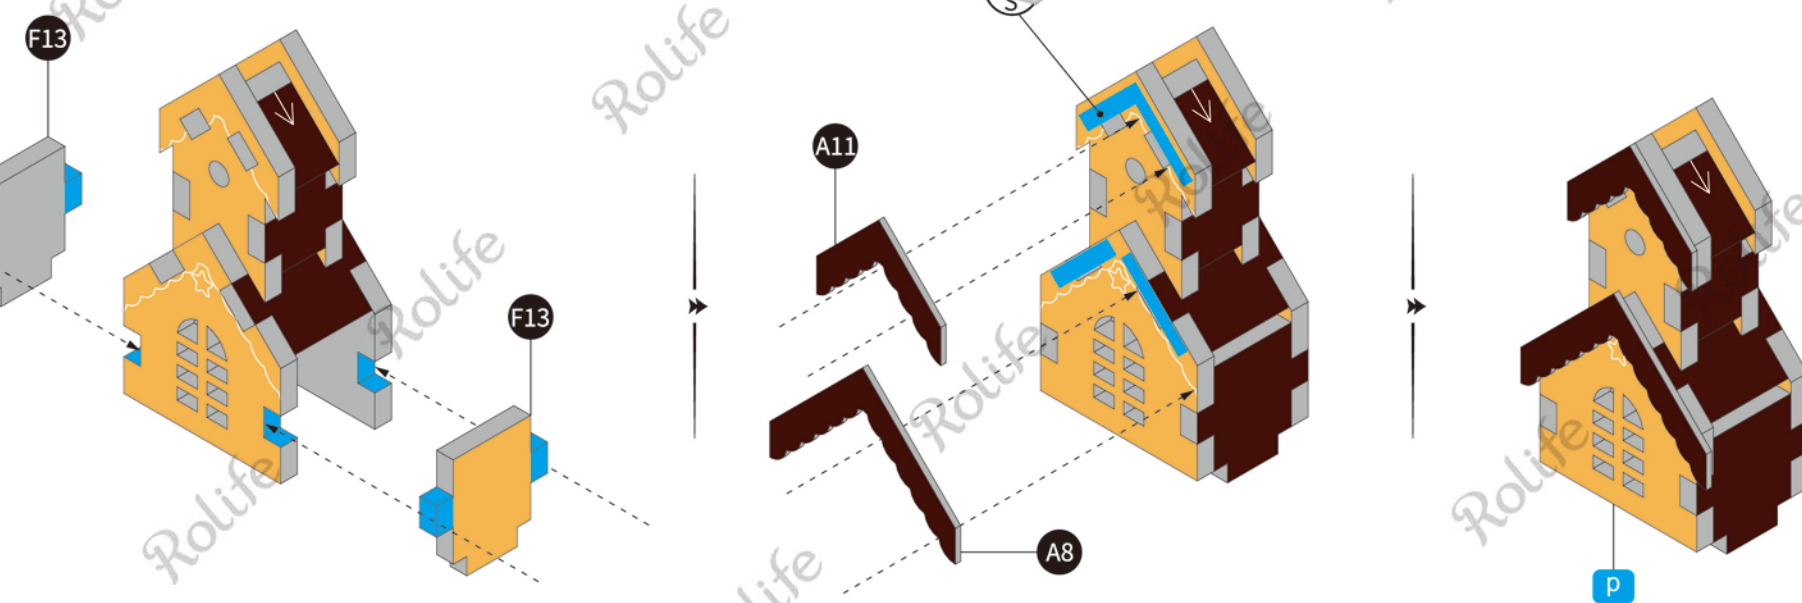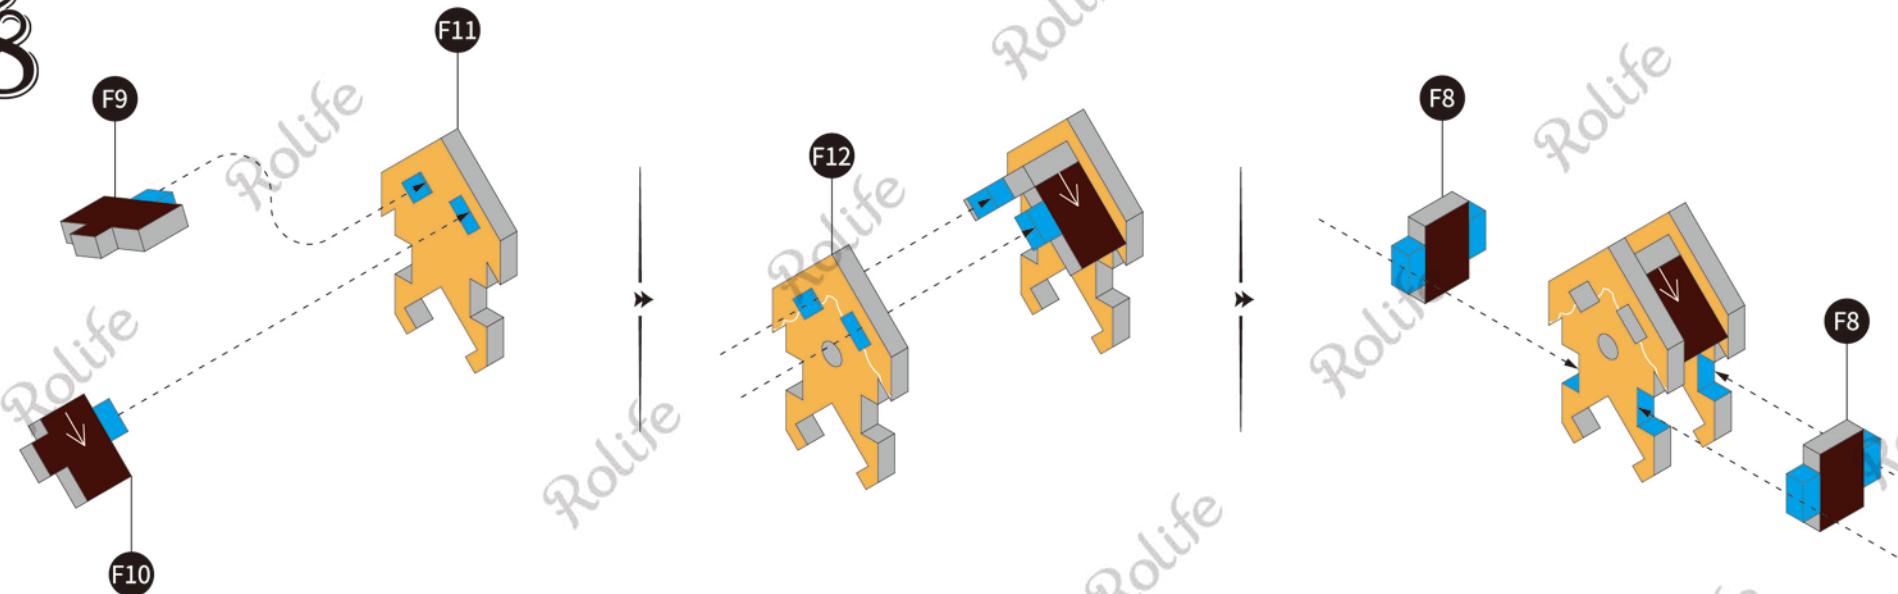  




19

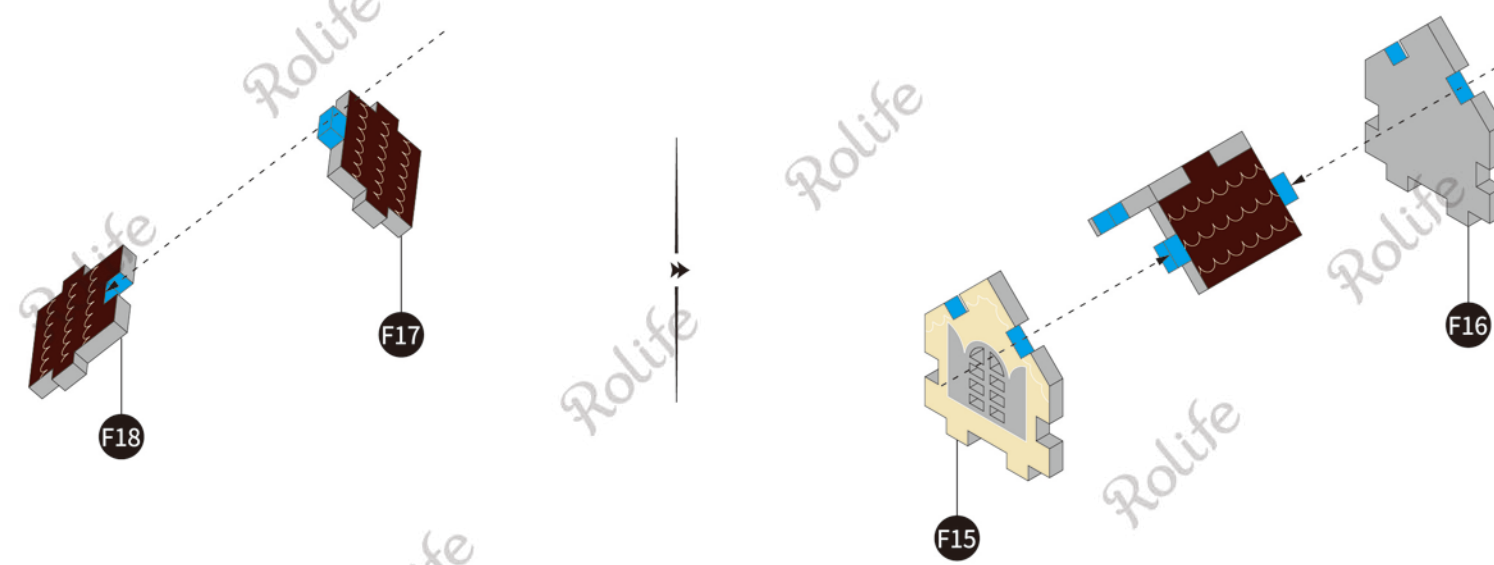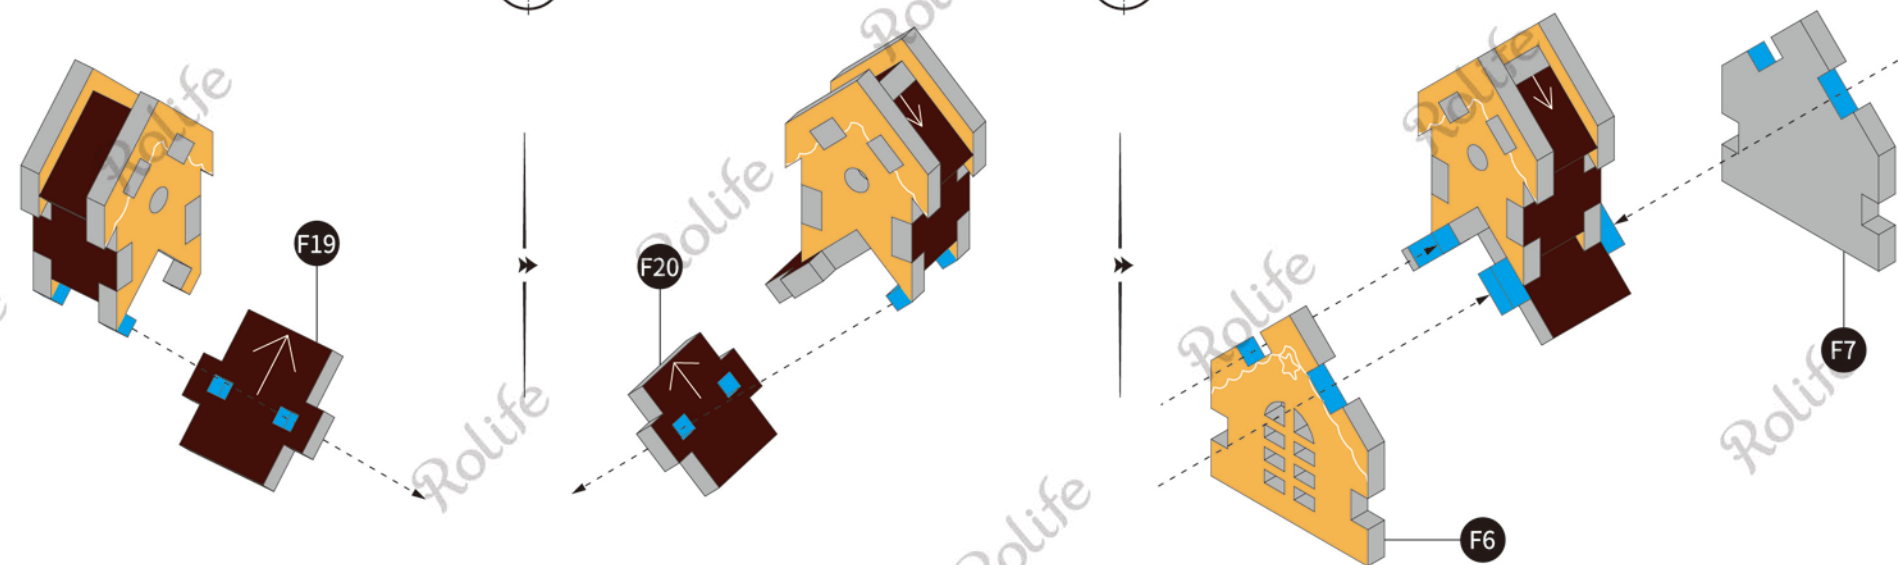  



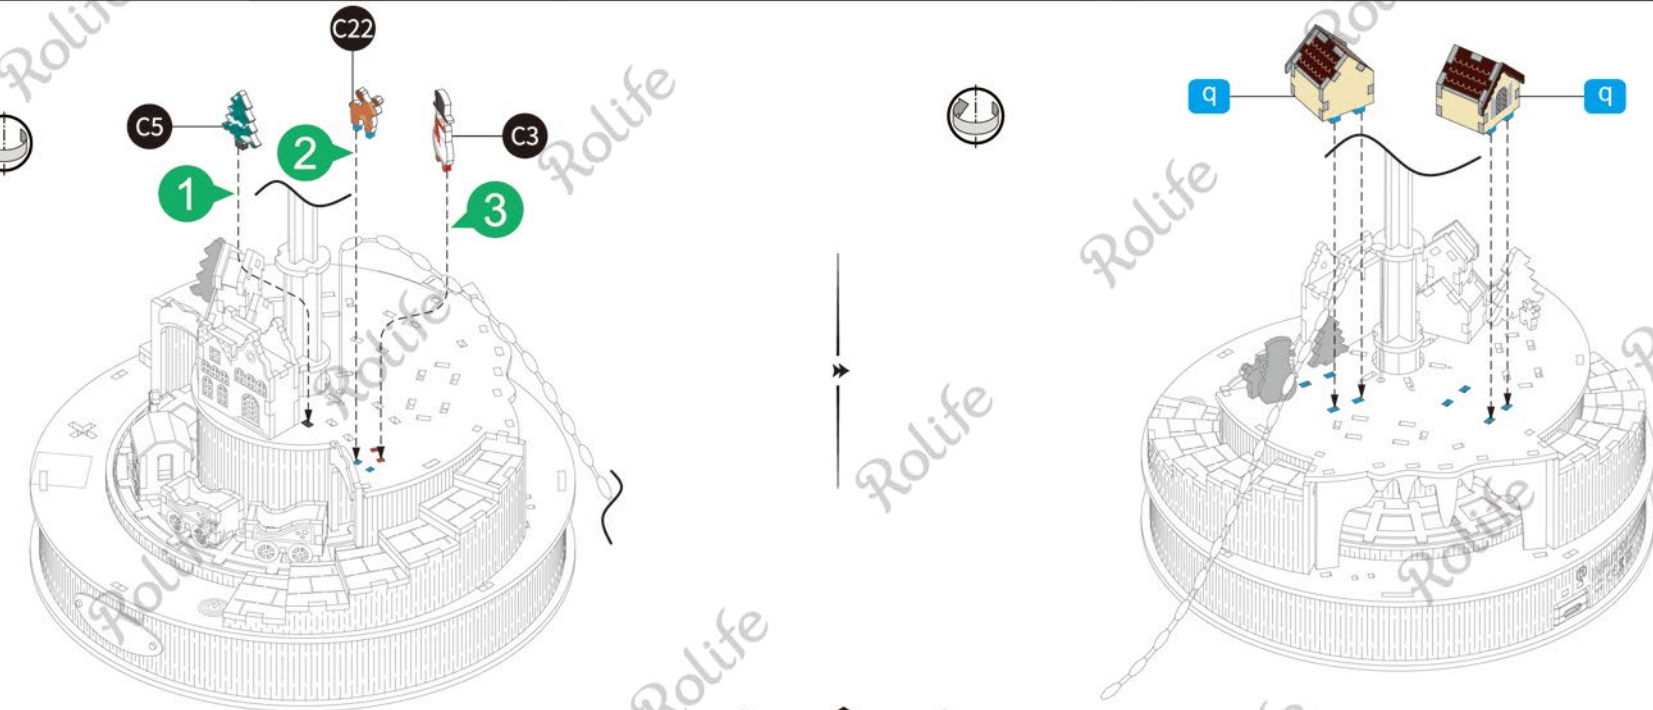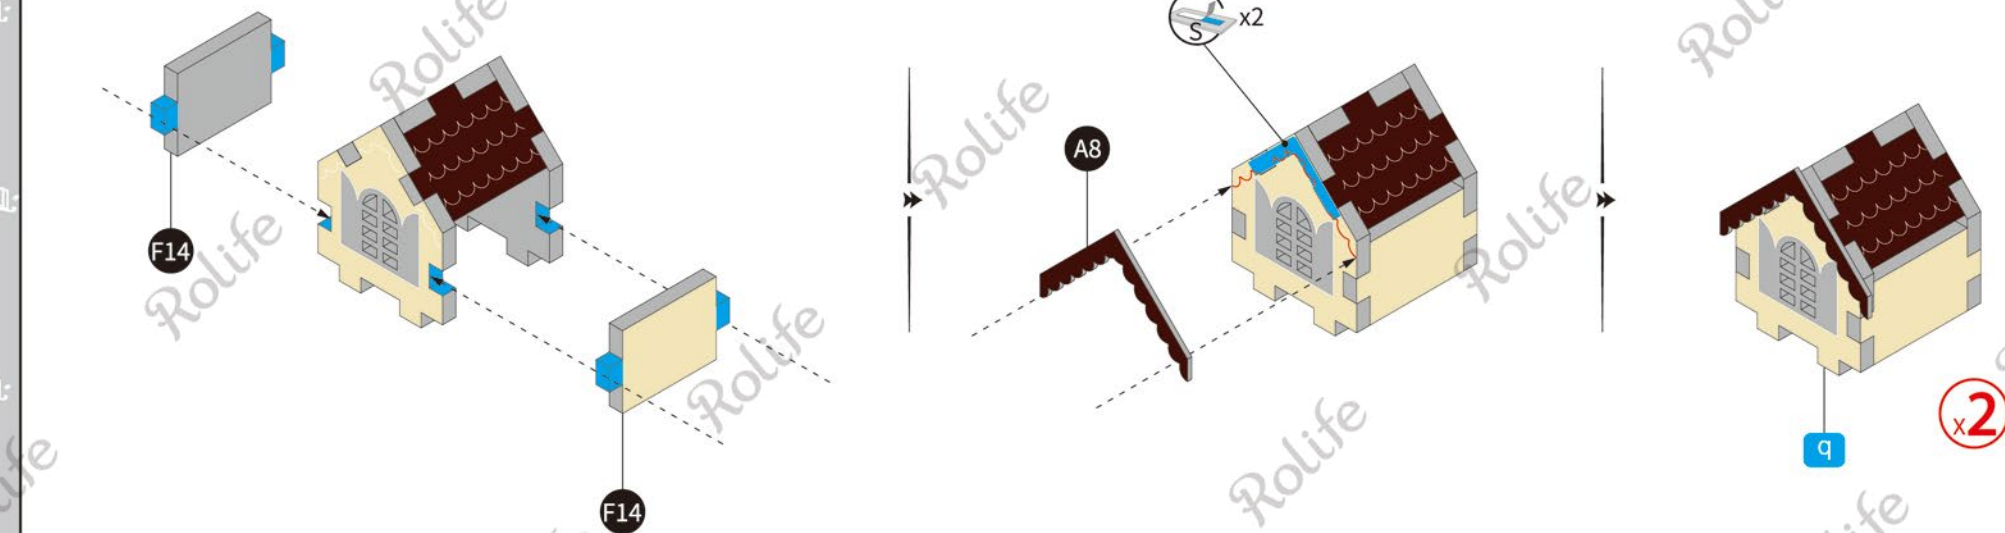  

20

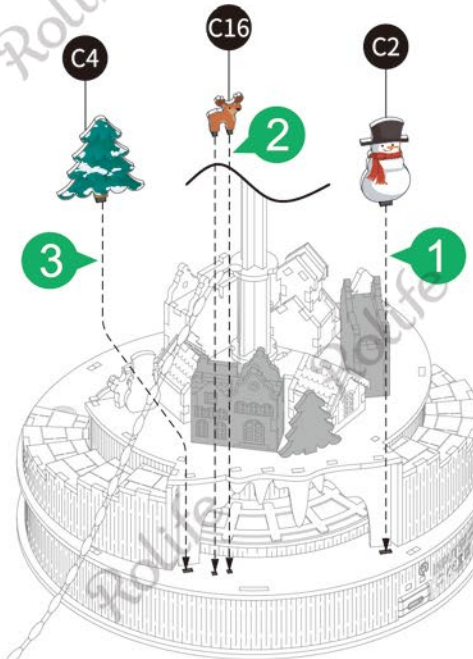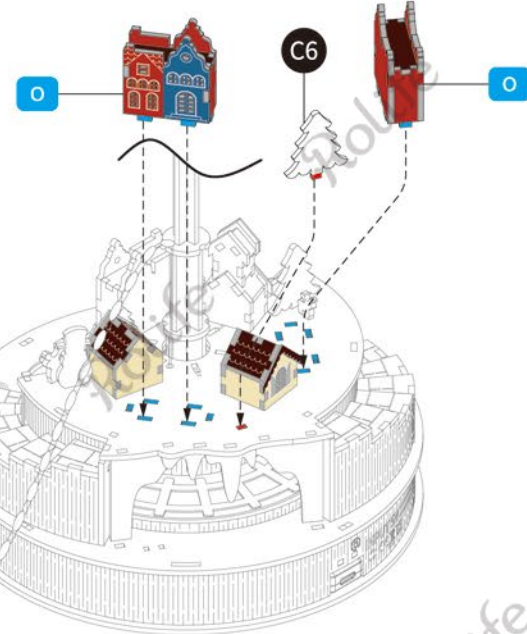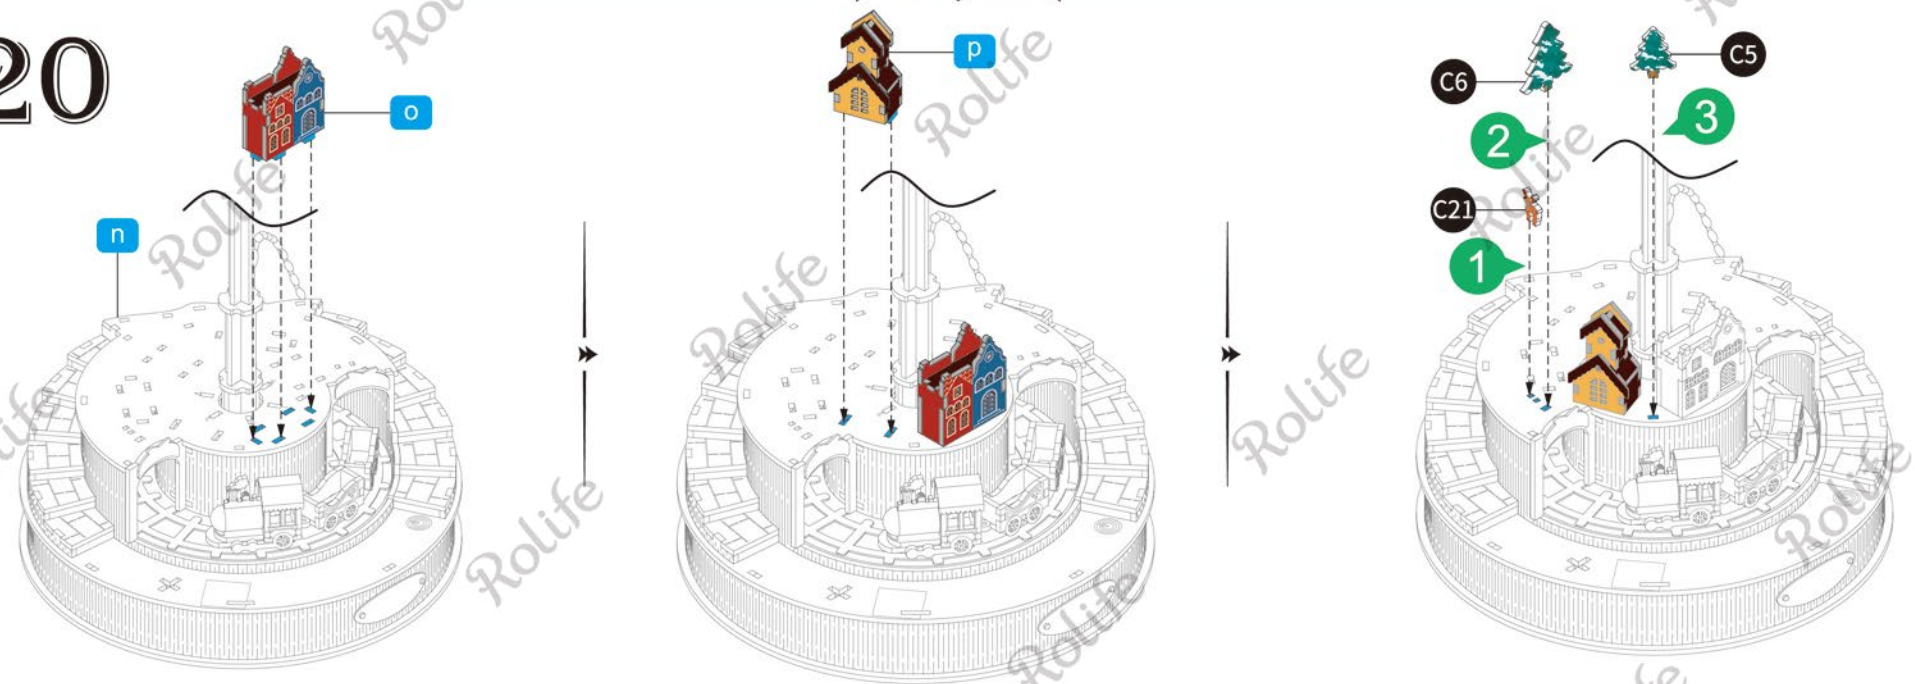   


29





30



 
21

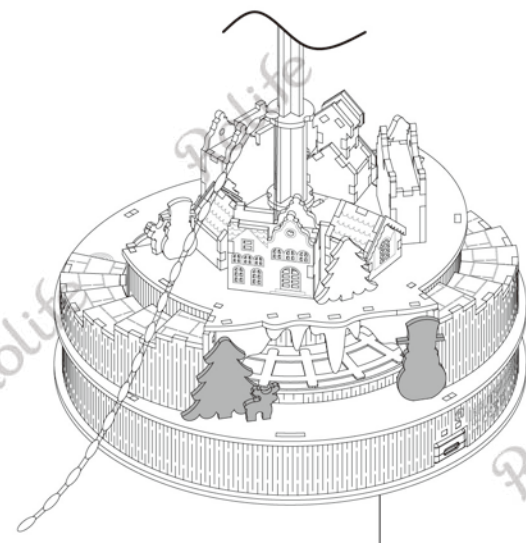


r

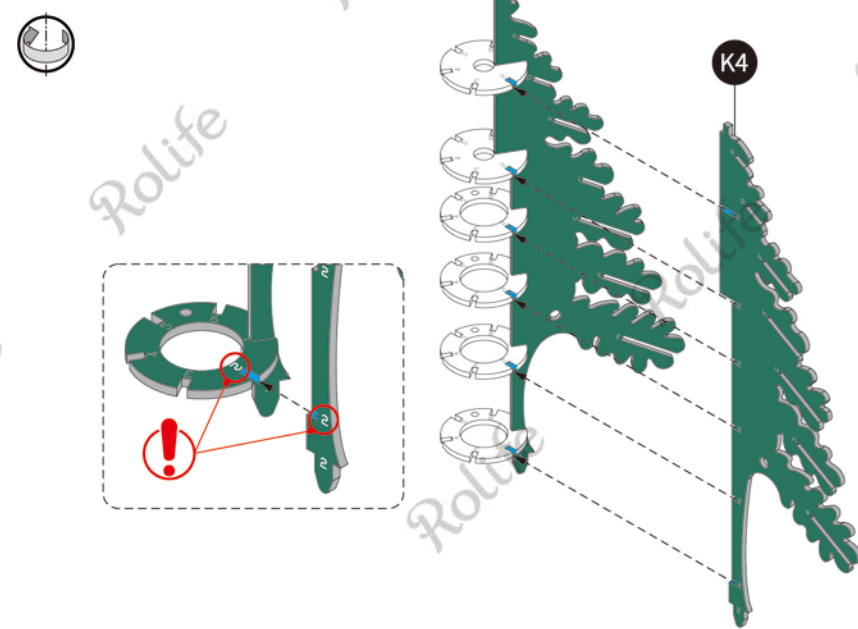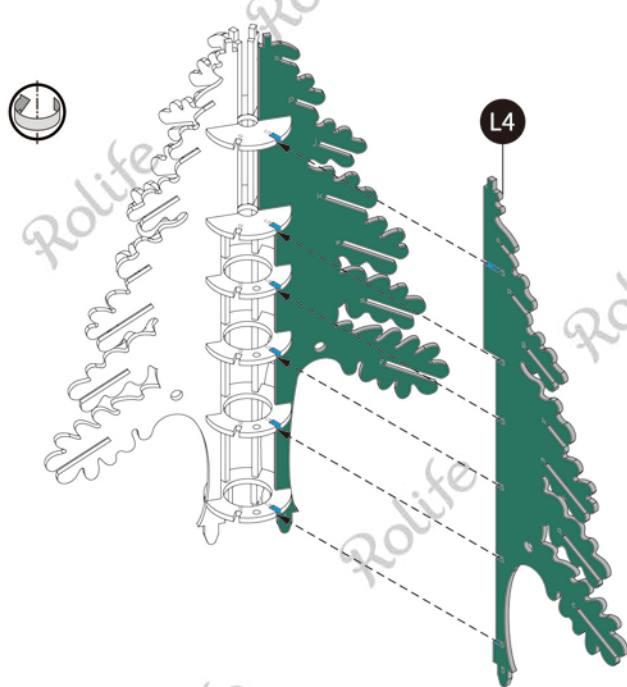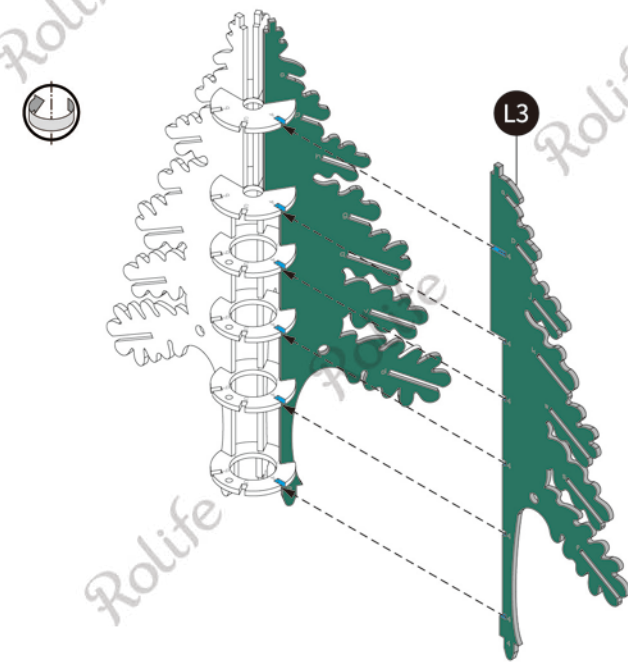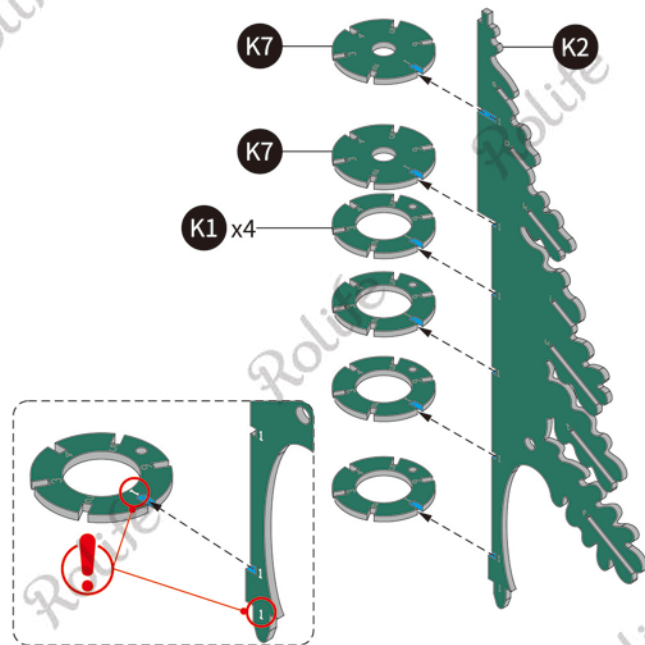    


K4

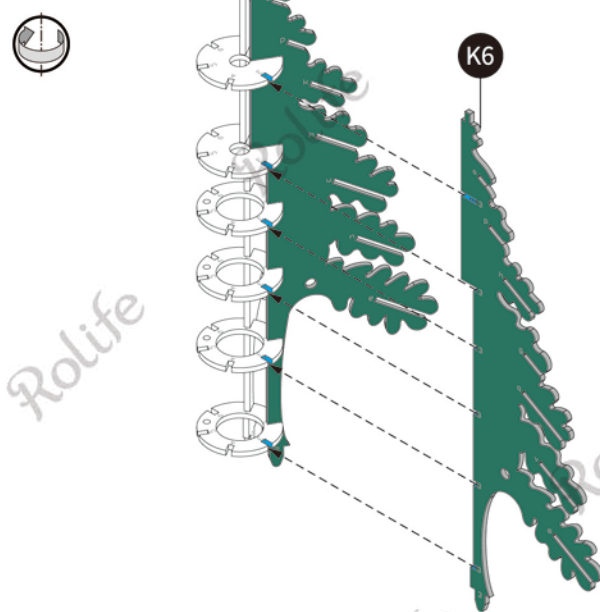 

K6

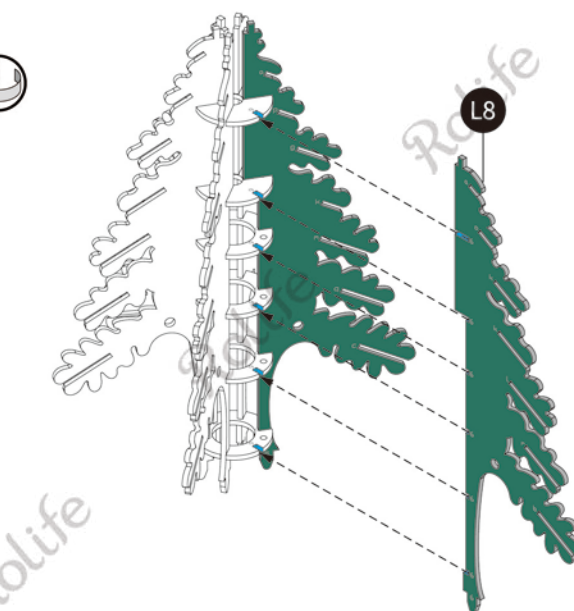 



L8

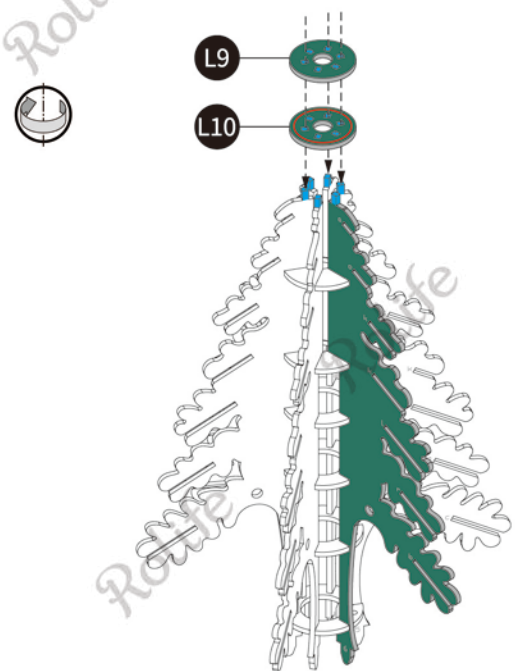 

L9


 
 
L10



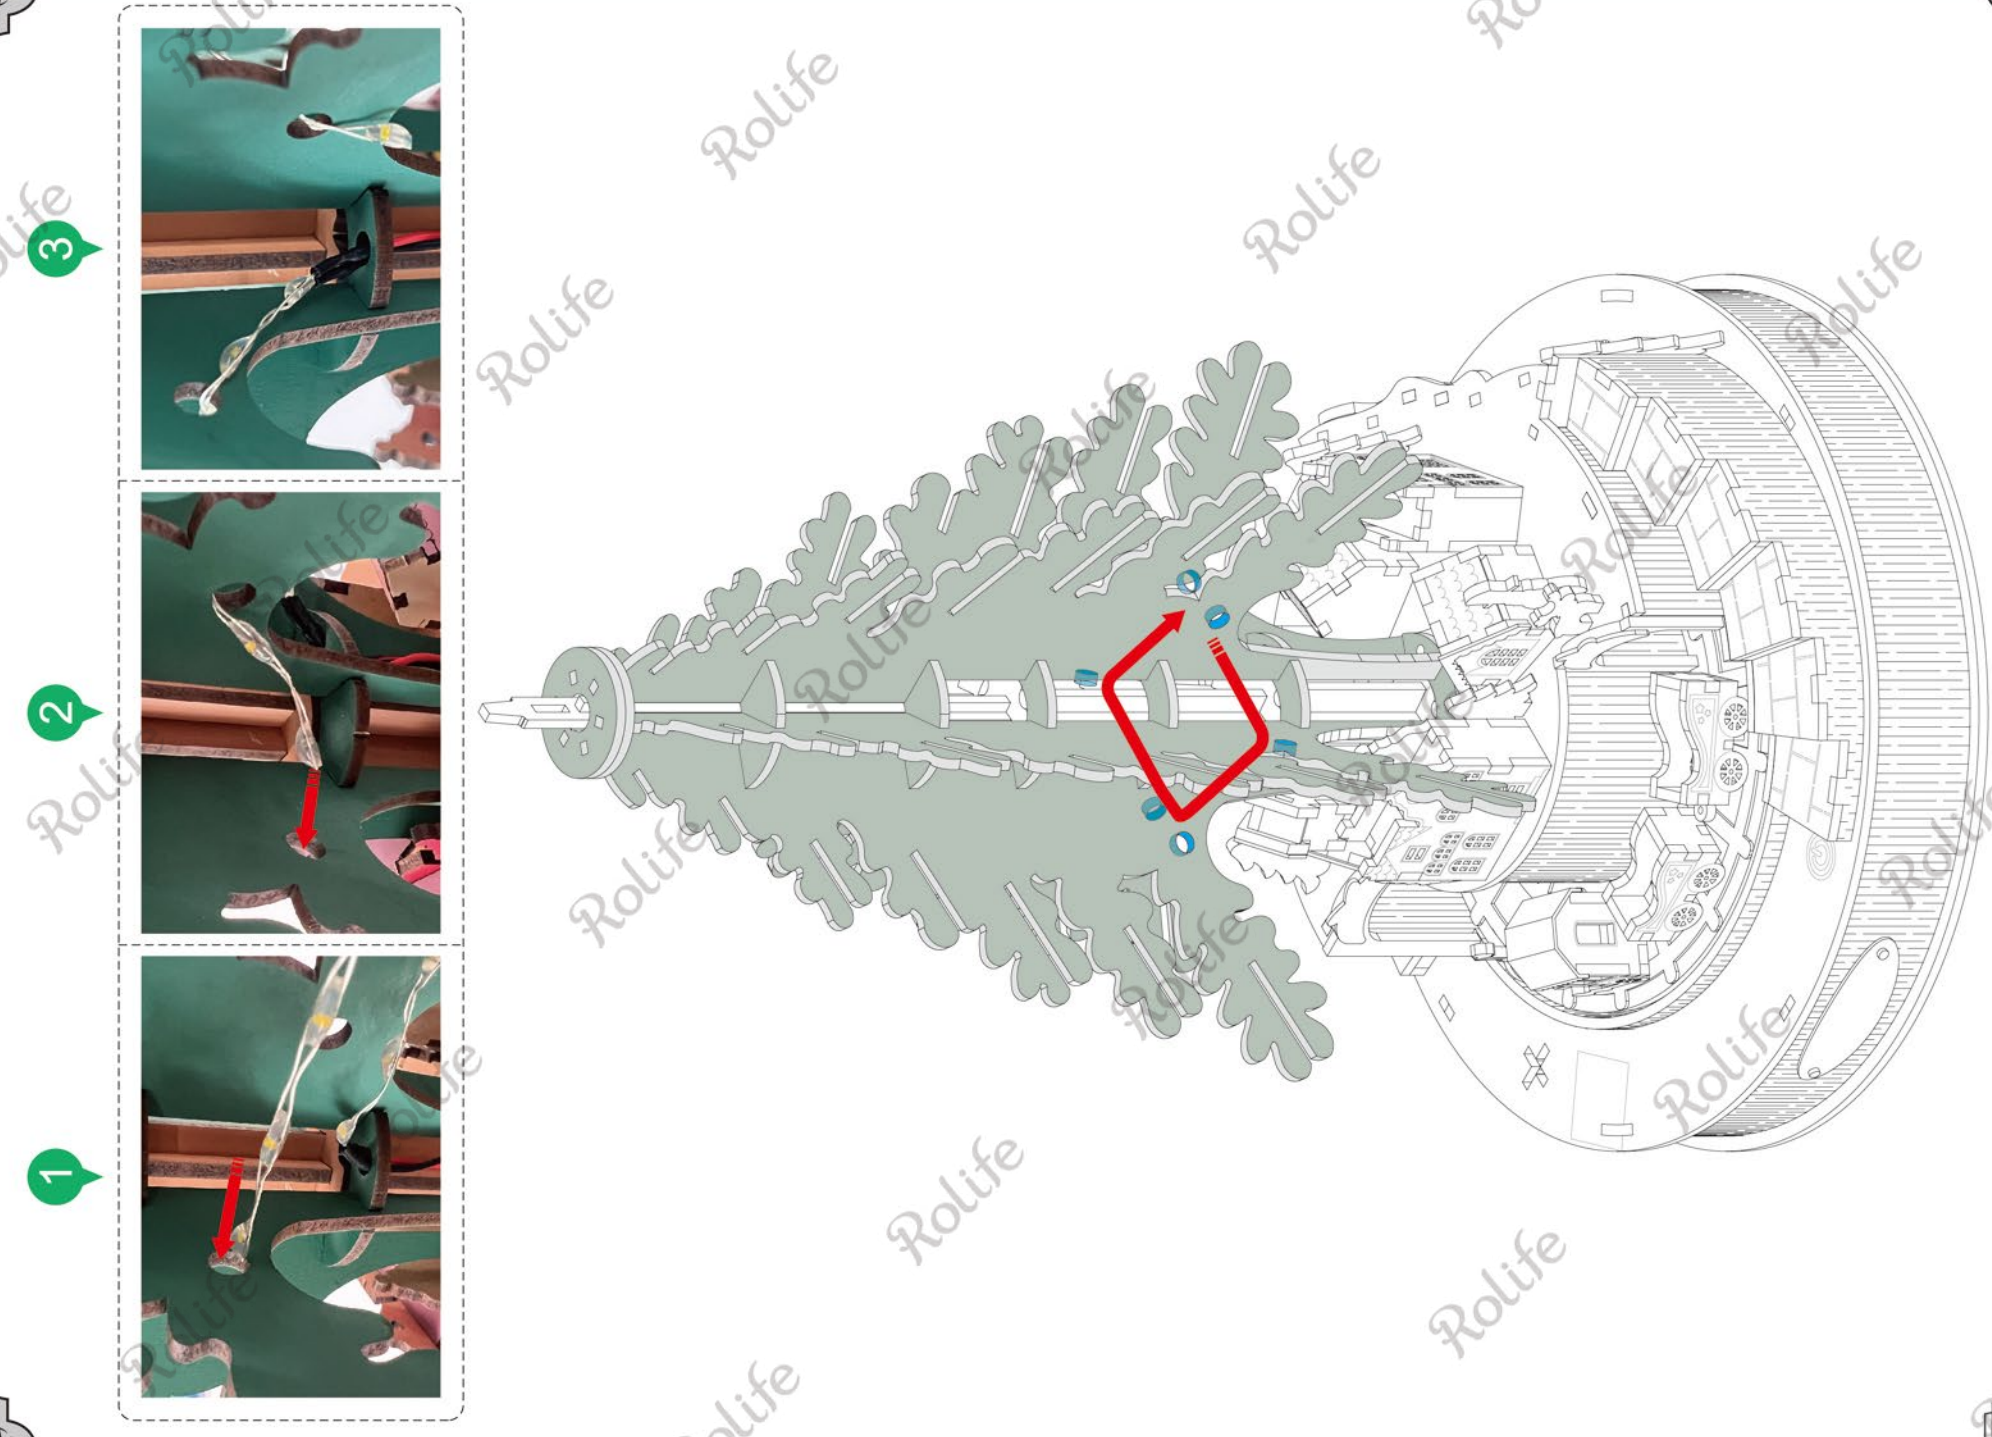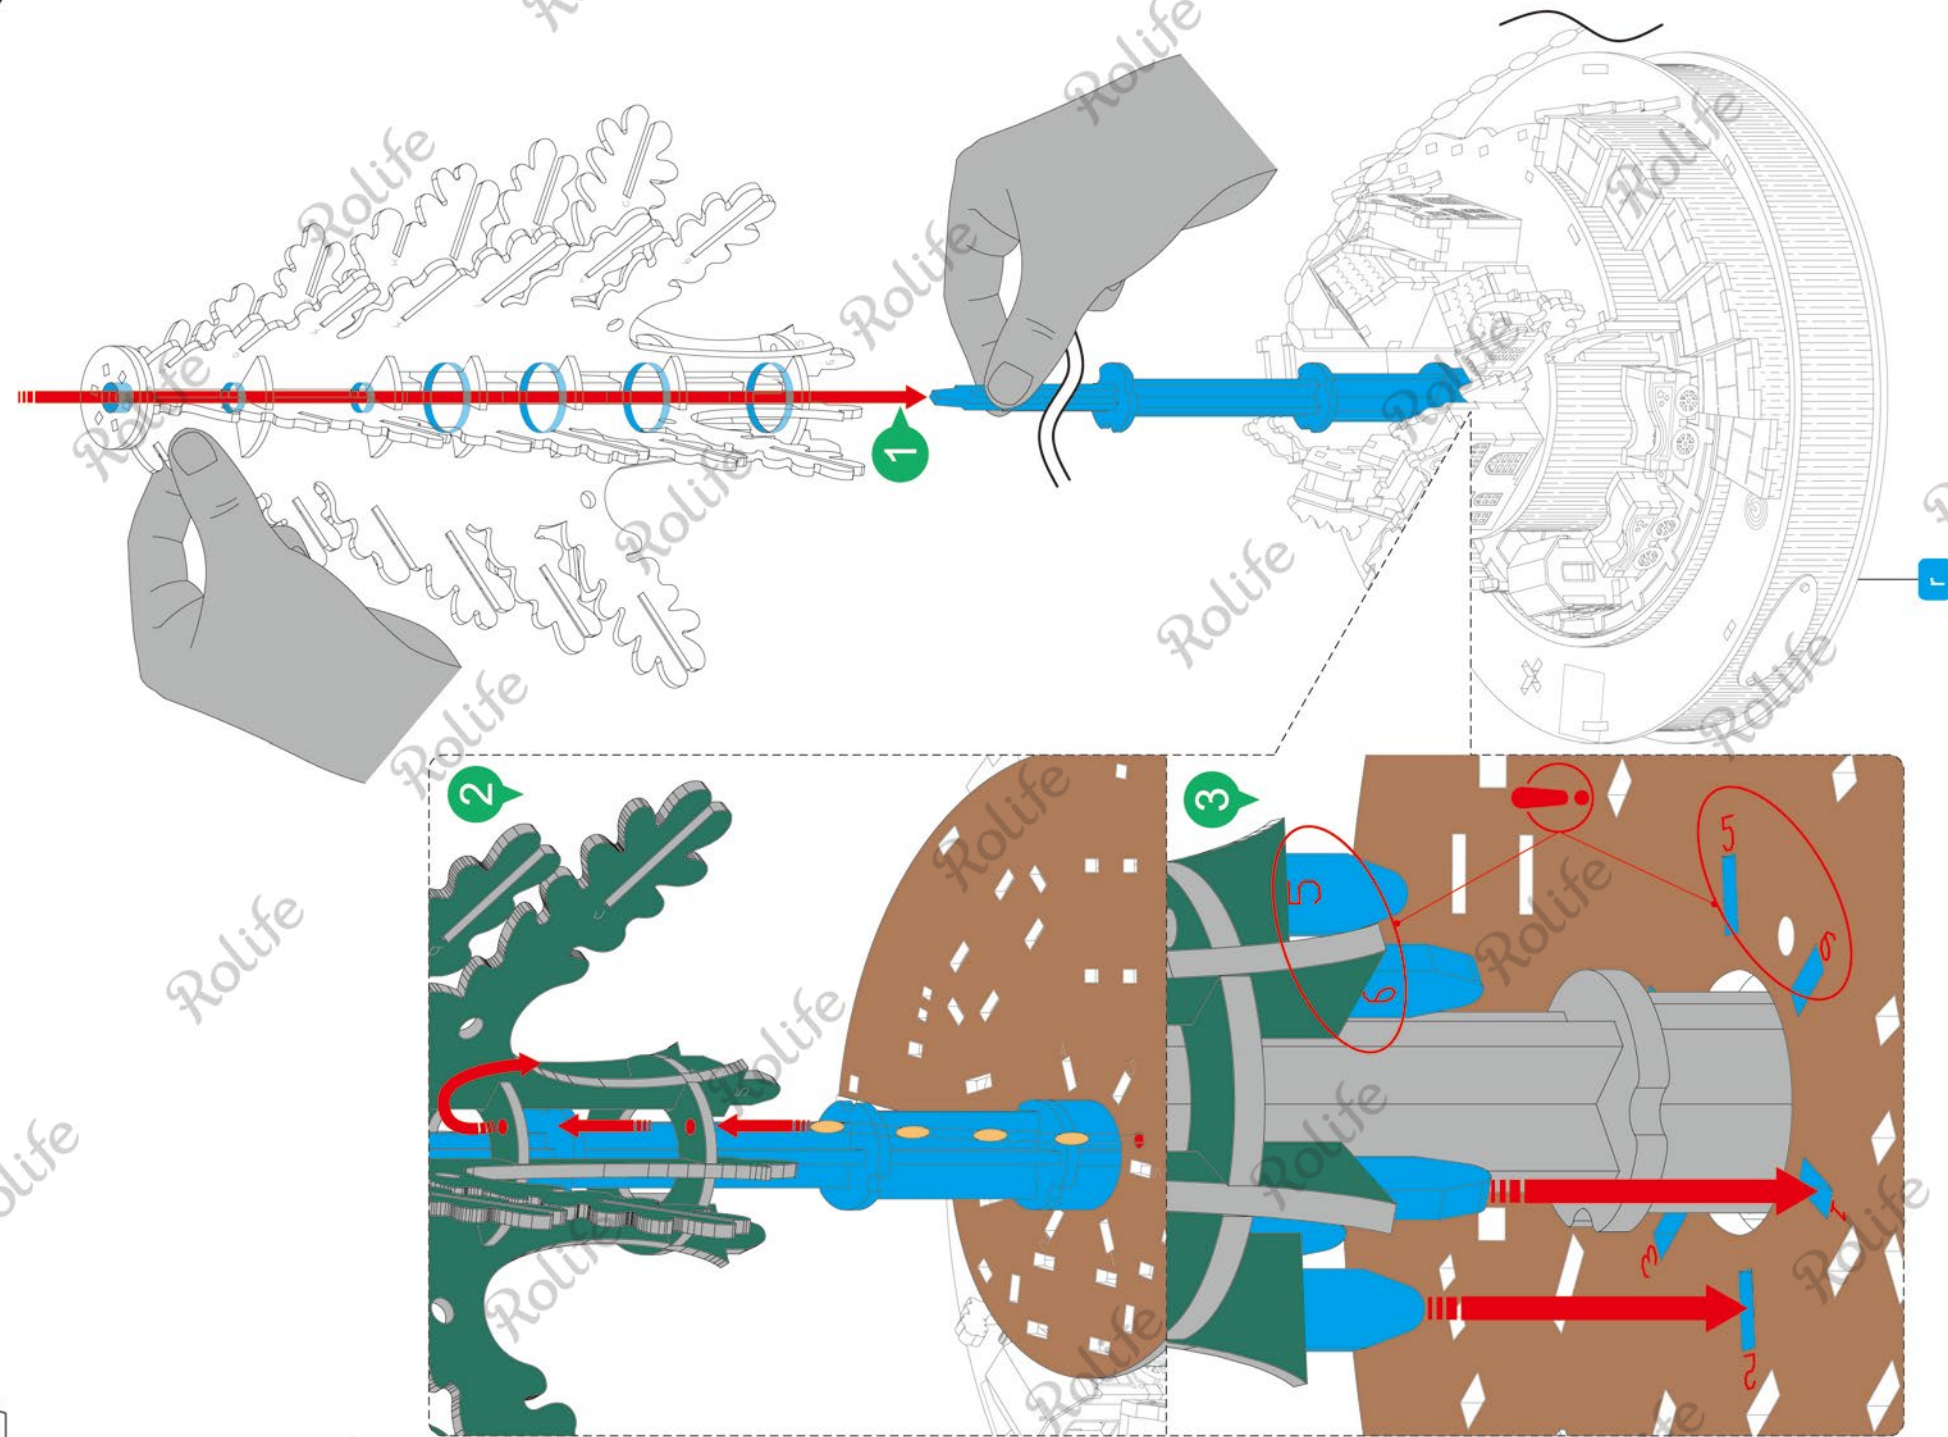




! Assemble in sequence.

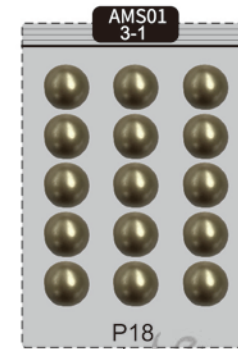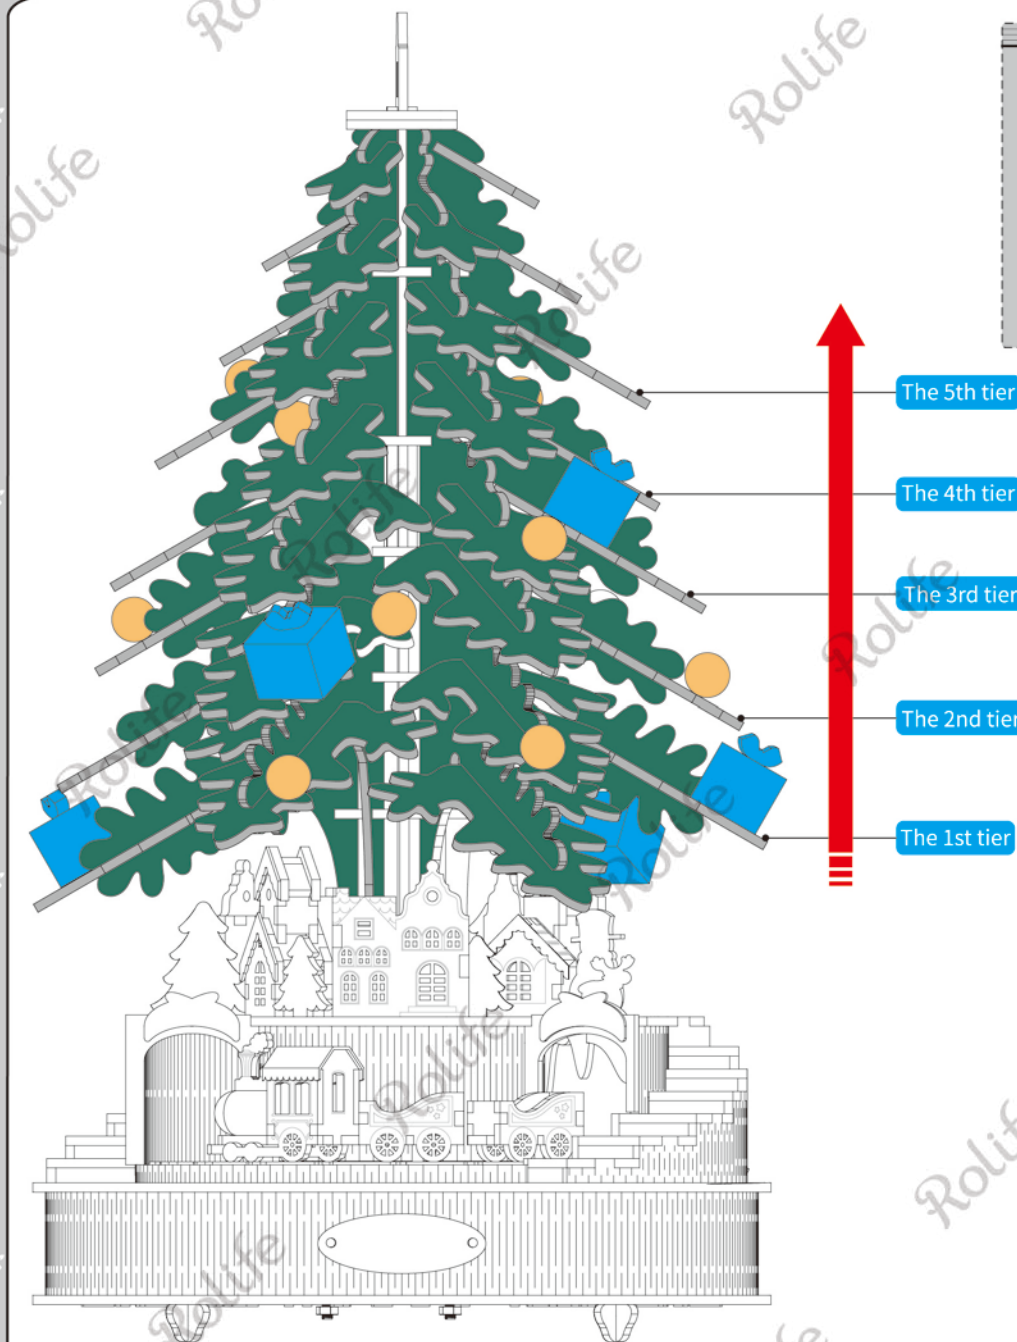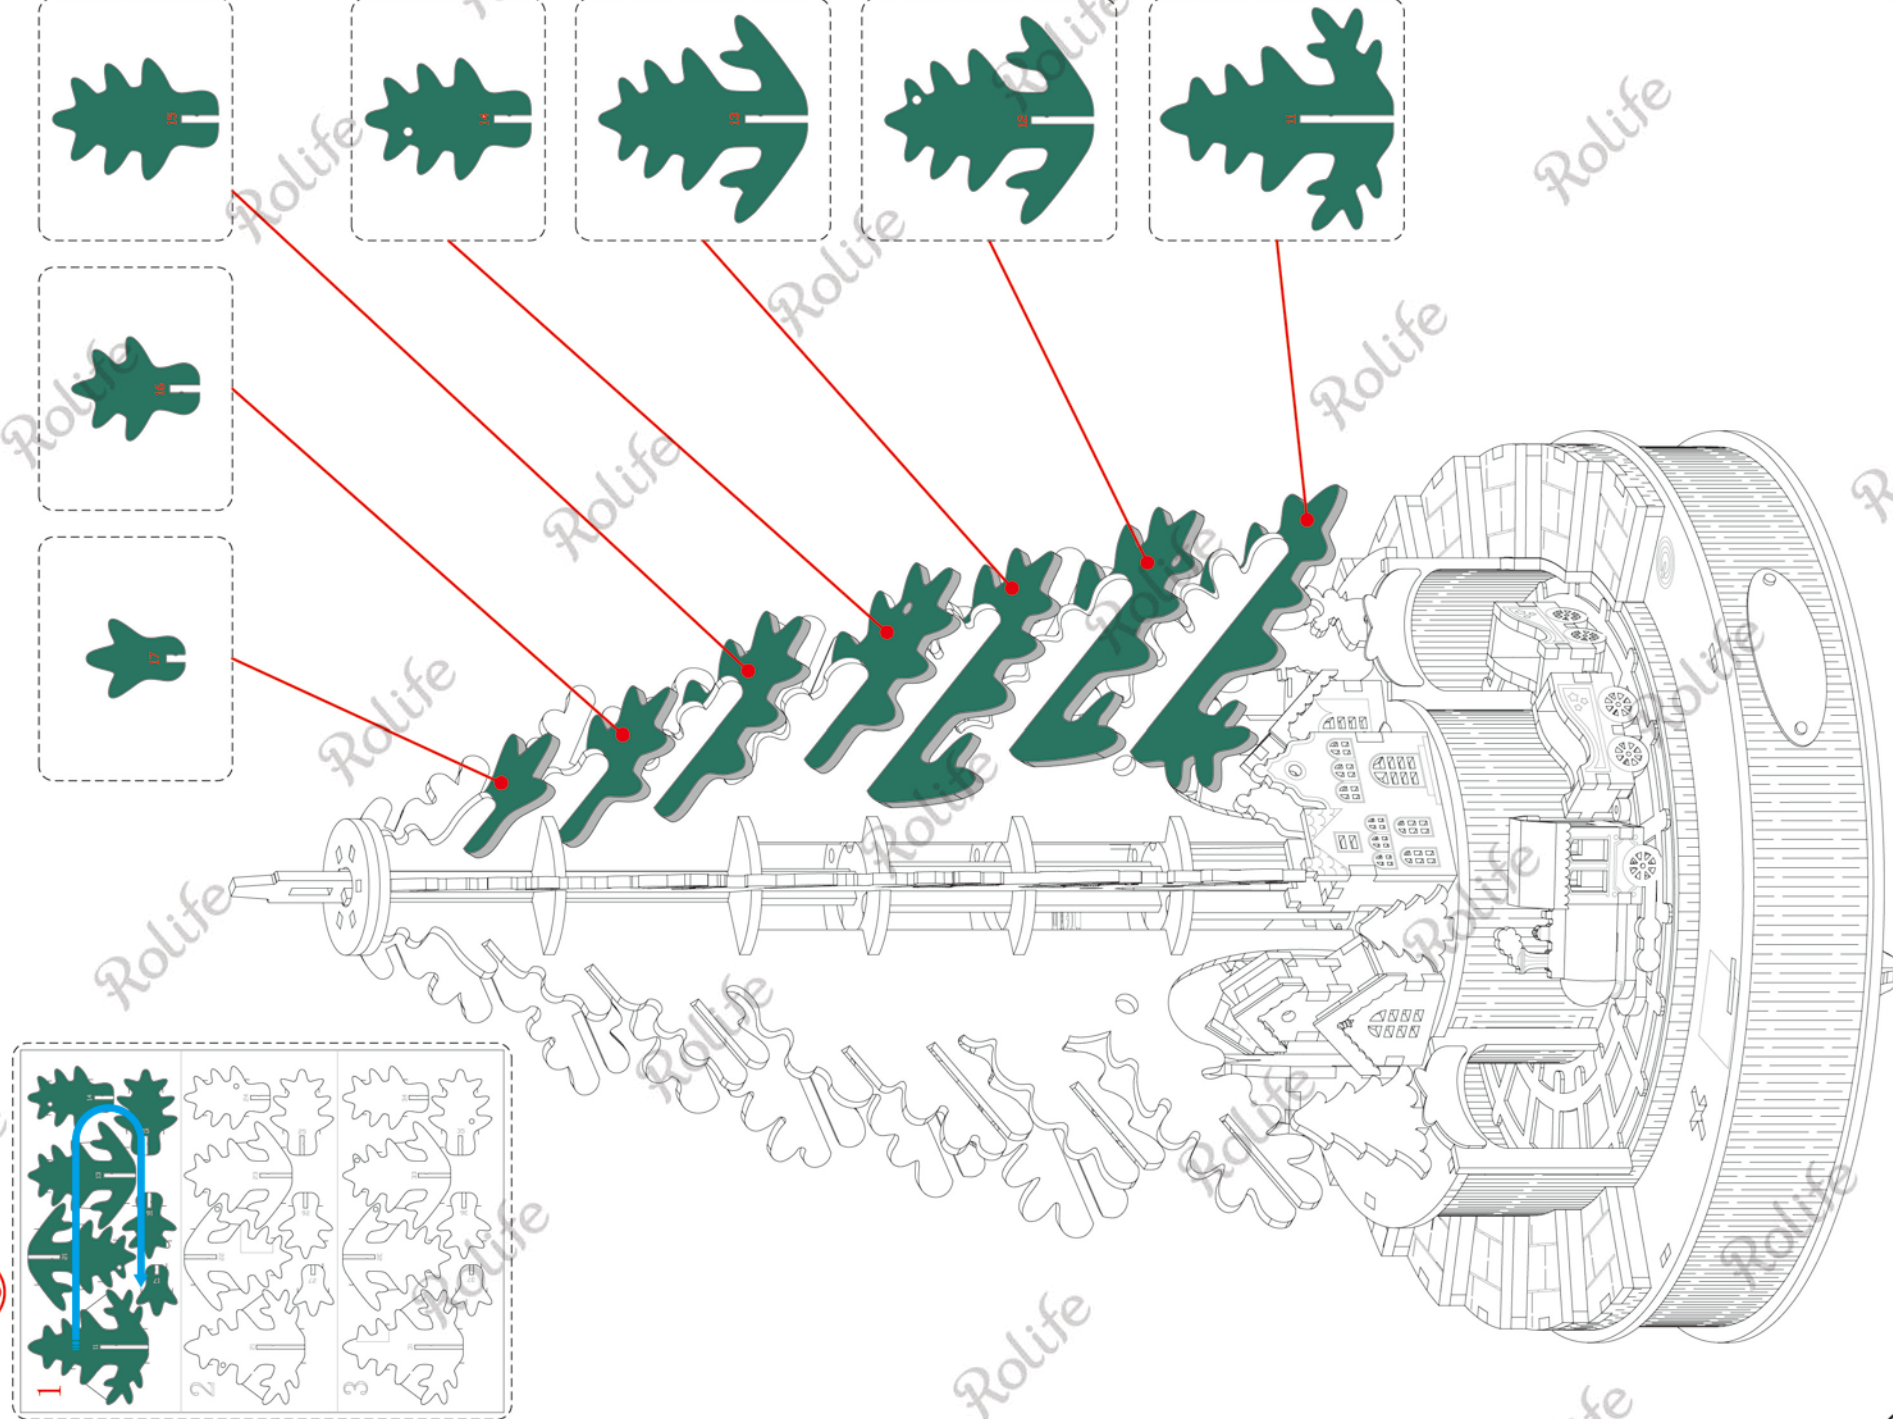   








Sticking tips

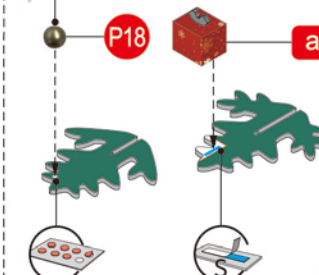 

Sticking illustration







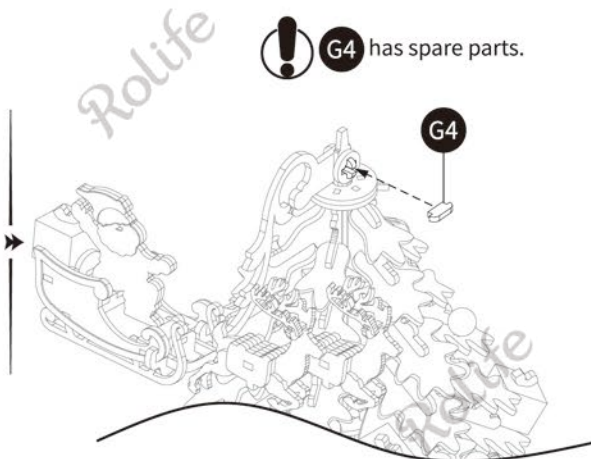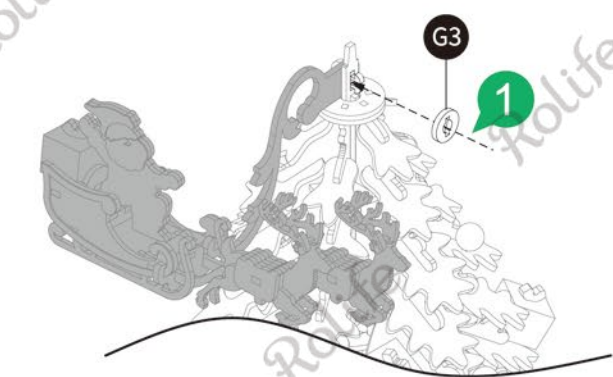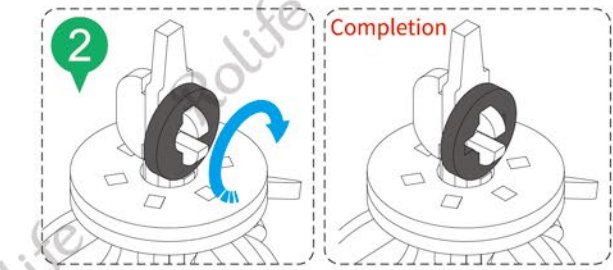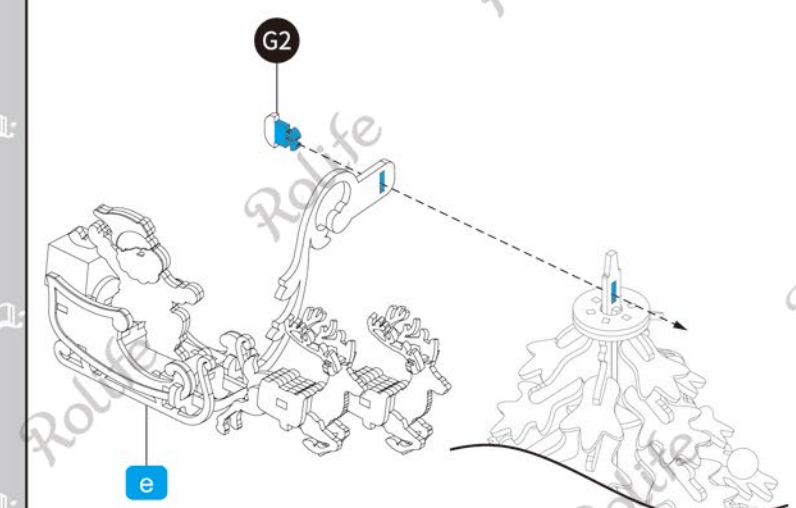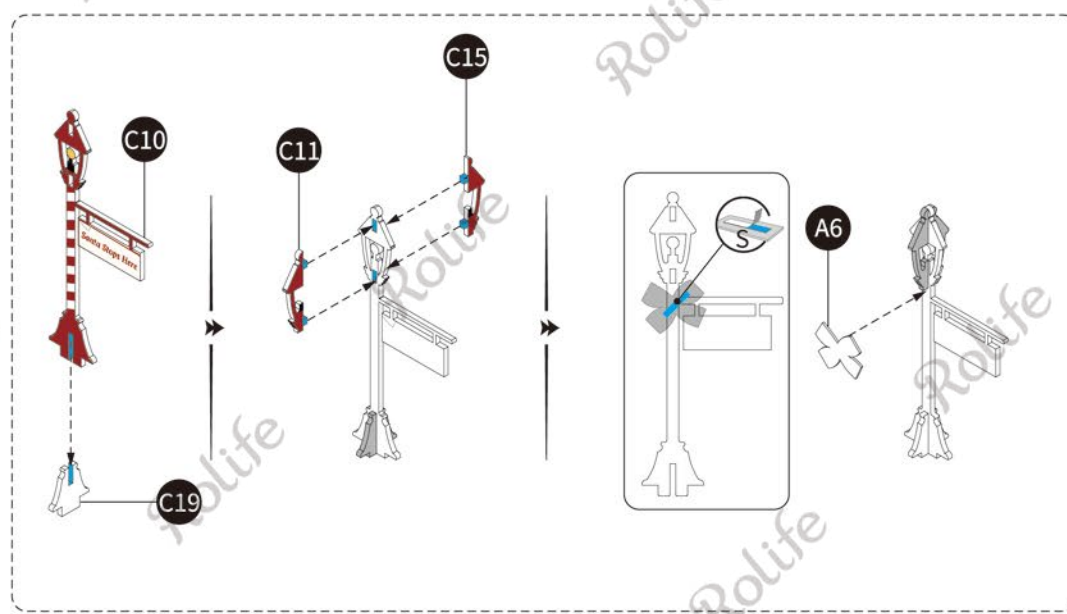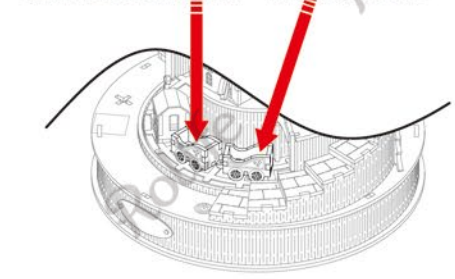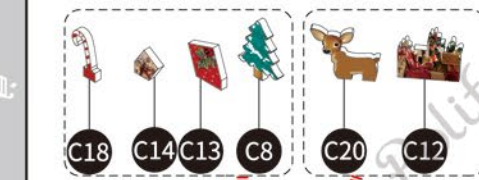       

! G4 has spare parts.

  G4

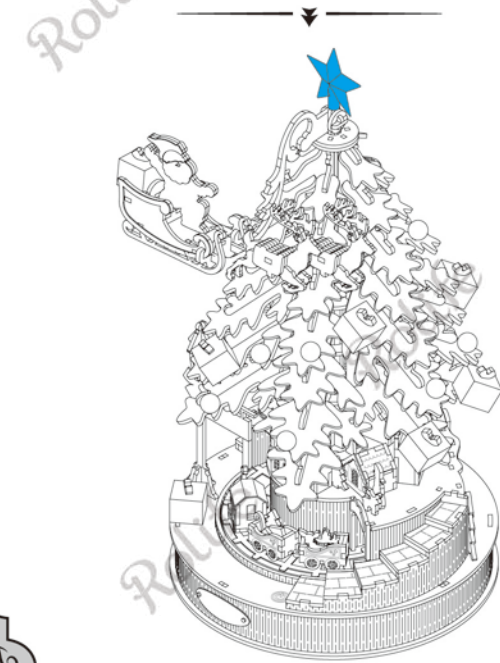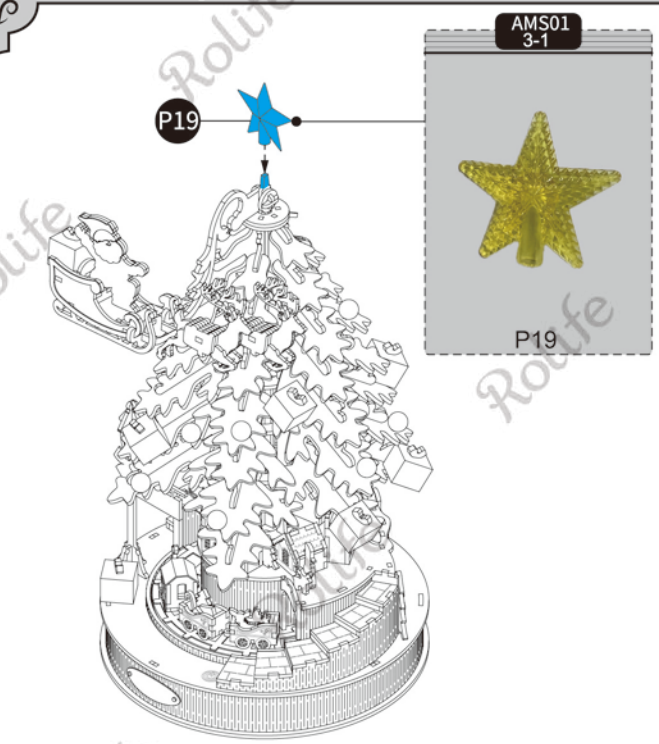

P19



### ! Instructions

1. Touch the switch once. The light and music are turned on. The train runs clockwise, and Santa rotates counter-clockwise.
2. Touch again. The music, the train, and Santa stop, and the light keeps on.
3. Touch once again. All is switched off.

