



SUPER CREATOR | SUPER STORE | Tasty Cake Shop

The picture is for reference only.

Assembly Tips



01 Notice

- ⚠ WARNING**
- Not suitable for children under 3 years old.
 - The product shall only be used with a transformer for product or a power supply for it.
 - The product shall be used with the power supply supplied, if the transformer is supplied with the product.
 - If a transformer or power supply is not a toy or model.
 - If a transformer can cause electrical shock.
 - The power supply used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
 - This product is only to be connected to equipment of Class II.
 - Do not connect the wire to the output socket.
 - The product is not to be connected to more than the recommended number of power supplies.
 - This product doesn't need house cleaning, and please clean it with clean soft cloth.
 - Please keep the product away from substances flammable and humid environments to prevent damage.
 - The instruction must be retained since it contains important information.

02 Icon

- Please secure parts as shown in case of any parts loosening:
- Use double-sided adhesive dot
 - Use long-strip adhesive tape
- Perspective changed
- Special attention in assembly
- Step 1 Step 2 Force point

03 Switch box instructions (P2)



04 Data cable instructions (P1)



05 Assembling steps

