ROTATING-BARREL MACHINE GUN

CAL. 30 STEEL • GUARD LOCK

Assembly Instruction LOADER

WARNING

Read the following warnings and cautions. Failure to do so could result in serious injury or damage to the product. Keep this manual for future reference. If you sell the product to someone else, be sure they also receive this manual.

Please read the "Safety Precautions" booklet included with this product before using it. In addition to the safety precautions in the booklet, please read and understand the following warnings before using this product. Please keep this manual and booklet for future reference.

- Do not touch the moving parts of the product.
- Do not touch the moving parts of the product.

Icon Illustration

Assembly Step	Part	Apply Grease	Apply Oil
Assembly Step	Part	Apply Thread Locker	Apply Thread Locker
Apply Grease	Apply Oil	Apply Thread Locker	Apply Thread Locker

ATTENTION

Please read the following safety precautions carefully before using the product.

- Please keep this manual for future reference.
- Please keep the product out of the reach of children.

Q&A

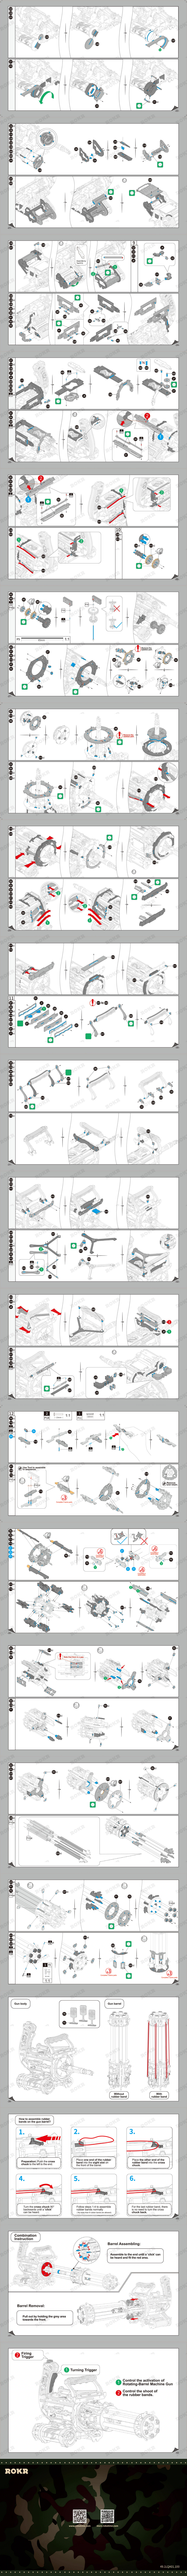
Problem	Cause	Solution
1. How to reset the firework circuit?	1. Power was lost or plugged into the wrong socket, which caused the circuit to trip. Check the power source and reset the circuit.	1. Turn off the power supply. 2. Check the power source and reset the circuit.
2. The motor operates slowly when the power is low.	2. Some components are rusty. Clean the rusty components with a cloth.	2. Clean the rusty components with a cloth.

Part list

Please check the parts before assembly. Please contact us if you find any parts missing.

Name	Quantity	Name	Quantity	Name	Quantity	Name	Quantity	Name	Quantity	Name	Quantity	Name	Quantity	Name	Quantity
Servo Assembly	x1	Bullet Belt	x1	Barrel Shell	x1	Barrel Shell	x1	Rear Shell	x1	Rear Shell	x1	Rear Cover	x1	Rear Cover	x1
Bullet	x1	Bullet	x1	Bullet	x1	Bullet	x1	Bullet	x1	Bullet	x1	Bullet	x1	Bullet	x1
Quantity	1	Quantity	1	Quantity	1	Quantity	1	Quantity	1	Quantity	1	Quantity	1	Quantity	1

Name	Screw	Screw	Screw	Screw	Screw	Screw	Screw	Screw	Screw	Screw	Screw	Screw	Screw	Screw	Screw
Size	M3x6	M3x6	M3x6	M3x6	M3x6	M3x6	M3x6	M3x6	M3x6	M3x6	M3x6	M3x6	M3x6	M3x6	M3x6
Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver	Phillips Screwdriver
Quantity	1	1	1	1	1	1	1	1	1	1	1	1	1	1


Gun body
Gun barrel
Without rubber band
With rubber band
How to assemble rubber bands on the gun barrel?
1.
Prepare two rubber bands and a gun barrel.
2.
Thrust one end of the rubber band into the hole on the gun barrel.
3.
Pass the other end of the rubber band through the hook.
4.
Turn the rubber around 90 degrees and pull it to the back.
5.
Follow steps 3-4 to assemble rubber band on the other side of the gun barrel.
6.
Fix the two rubber bands that is in the middle of the gun barrel.
Combination Connection
Barrel Assembling
Assemble to the end with a 'click' can be heard and no thing to shake.
Barrel Removal
Pull out by holding the grey area towards the front.
Firing Handle
Turning Trigger
Control the extrusion of rubber bands.
Control the closure of the rubber bands.

ROKR