Designed by ROBOTIME

www.robotime.com

MADE IN CHINA

49.1AMC01.100.D

Rolife

MUSIC DREAMER

• AMC01


Classic Carousel




Minuet	Menuet D major
Clair De Lune	Nocturne in E Flat, Op. 9 No. 2

Pictures for reference only. Please subject to our existing products.

Assembly Tips

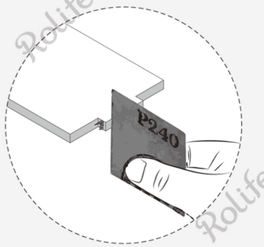


Polish the edges with sandpaper if there are burrs on pieces or it's hard to insert.

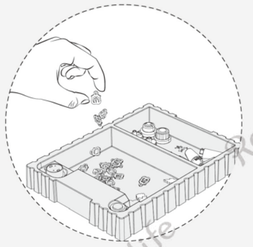


Put small parts into the box to prevent loss.



Remove the part by pressing its back to reduce burrs.

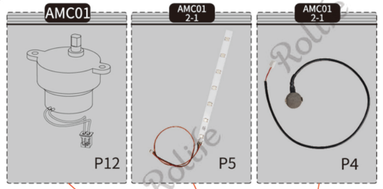


Function Test

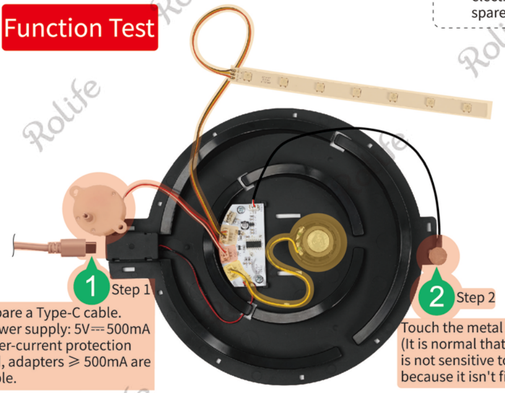

Step 3

Check the light.
Check the motor.
Check the loudspeaker.

If the test is abnormal, please contact customer service.
If the test is normal, remove the electronic parts back to the bag spare.

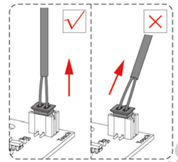



Step 1


Self-prepare a Type-C cable.
Input power supply: 5V⎓500mA
Note: Over-current protection provided, adapters ⩾ 500mA are acceptable.


Step 2

Touch the metal sheet
(It is normal that the switch is not sensitive to touch because it isn't fixed)

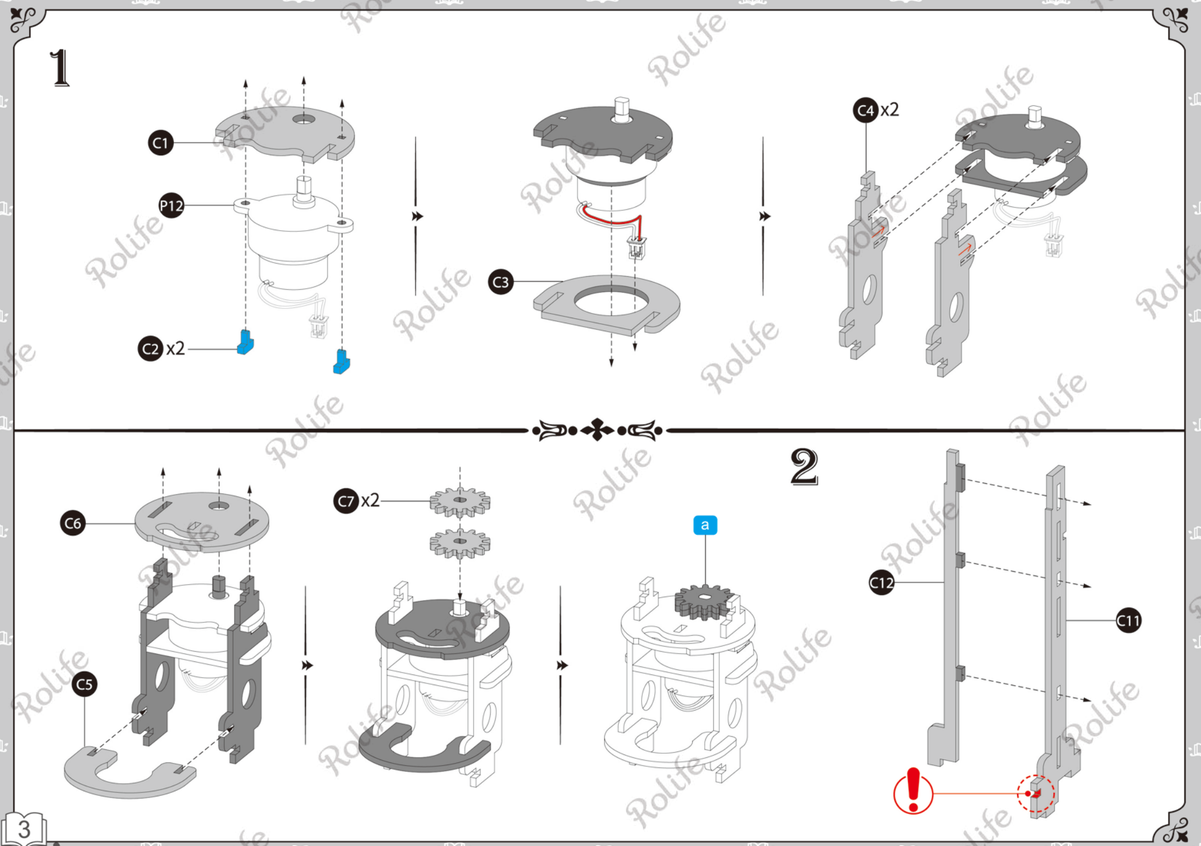
1
C1
P12
C2 x2
C3
C4 x2
C6
C5
C7 x2
a
2
C12
C11

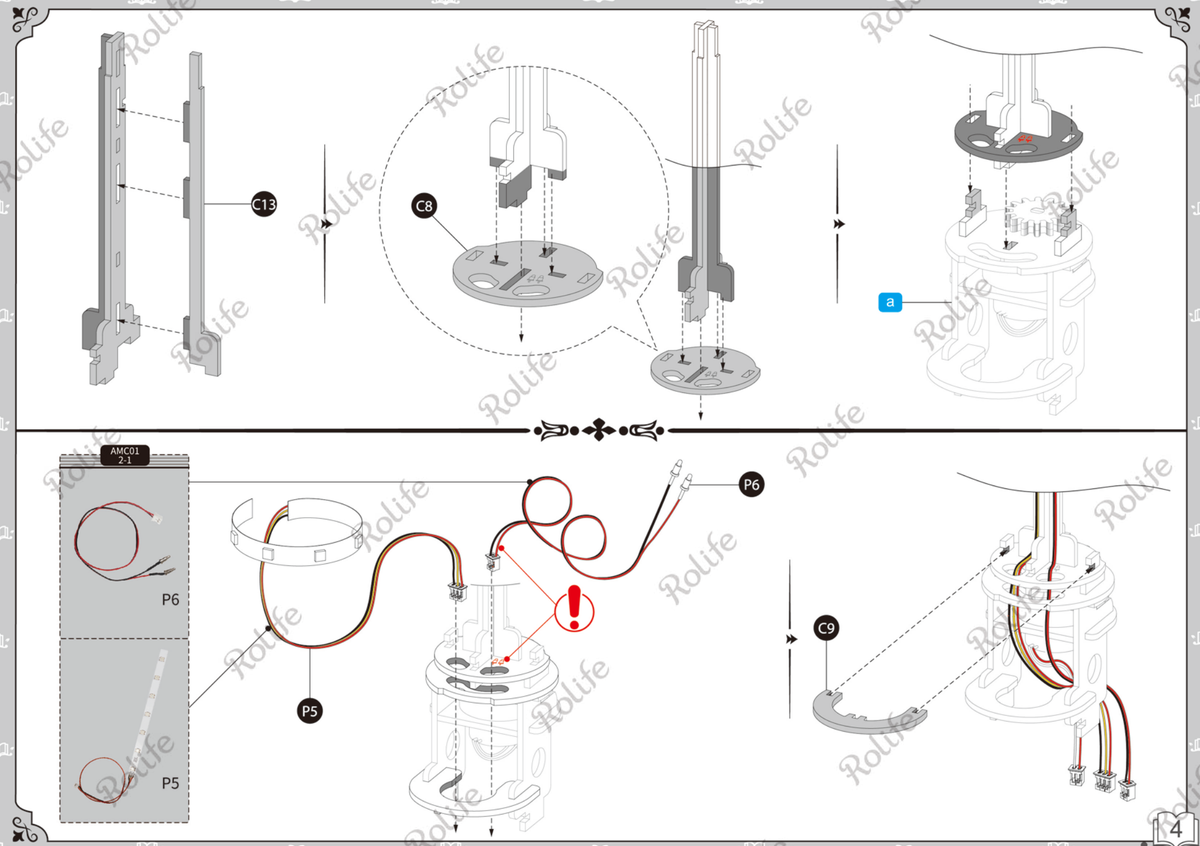

C13
C8
a
AMC01
2-1
P6
P5
P6
P5
C9

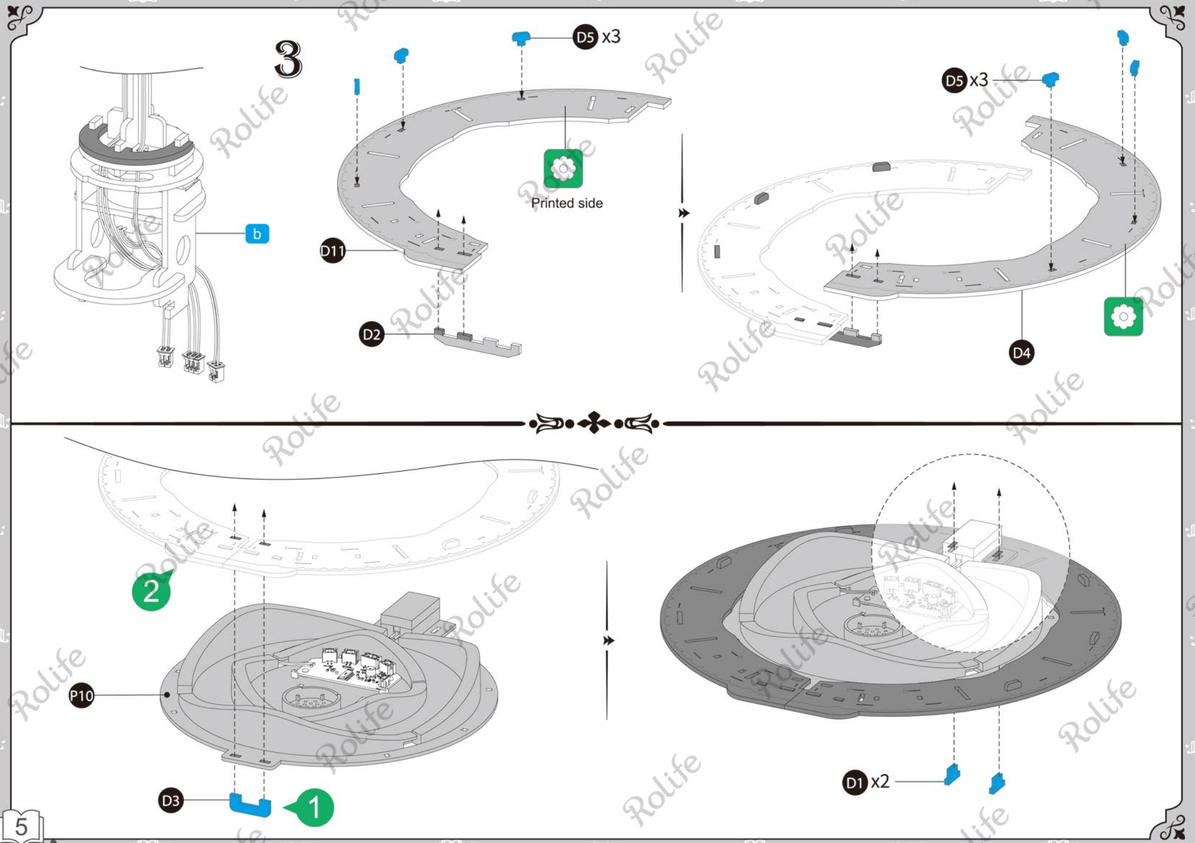

3
D5 x3
Printed side
b
D11
D2
D5 x3
D4
2
P10
D3
1
D1 x2

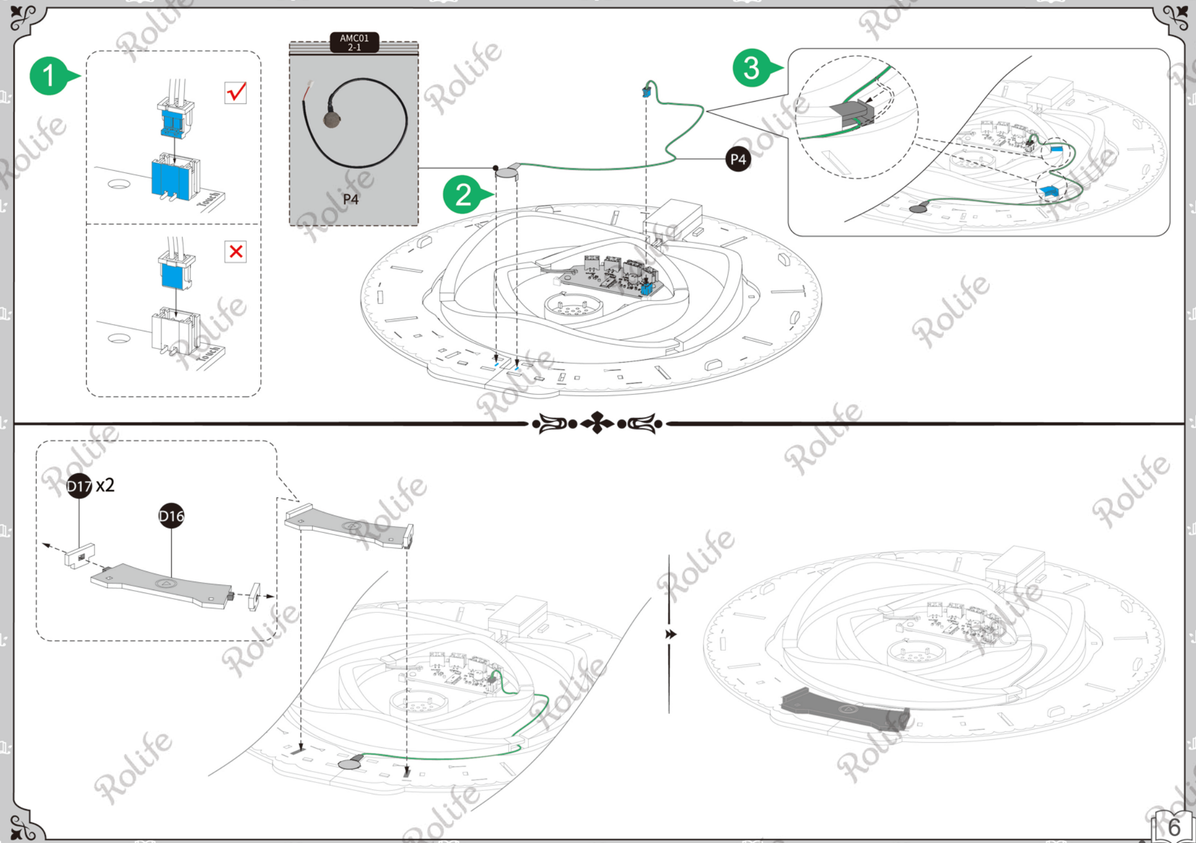

1
AMC01
2-1
P4
2
P4
3
D17 x2
D16


Perspective changed

D10 x8

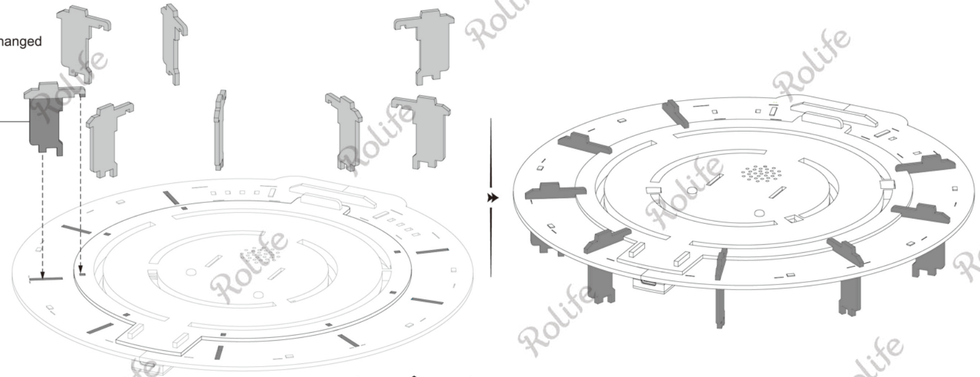


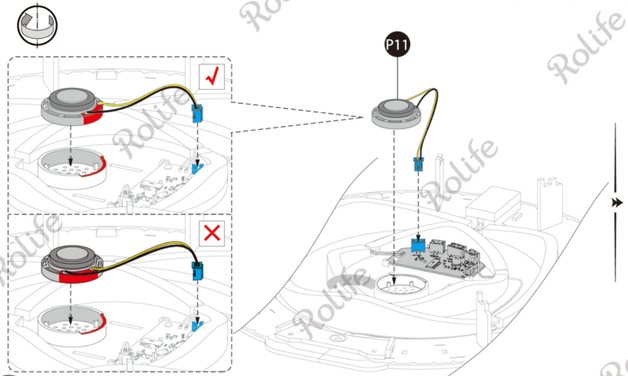


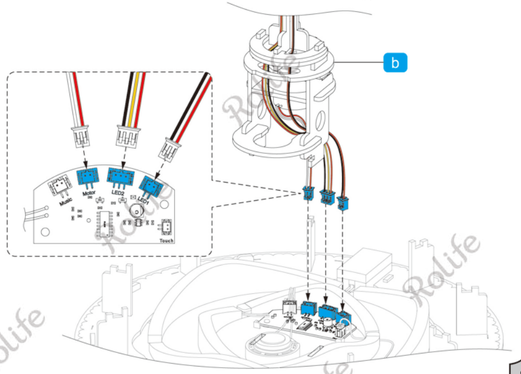


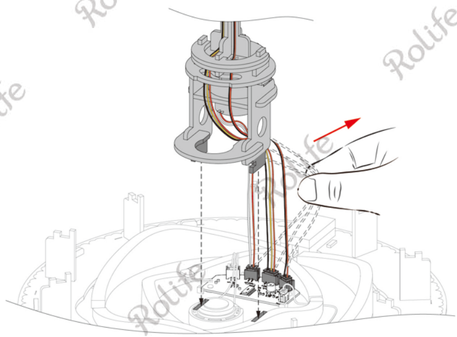


C14 x2

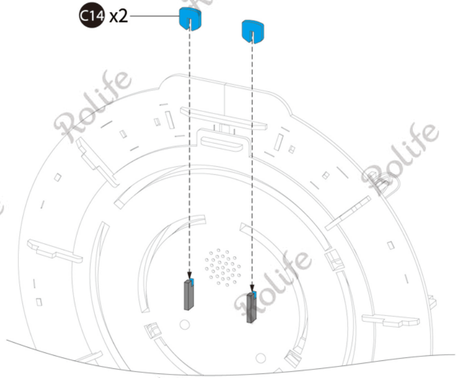


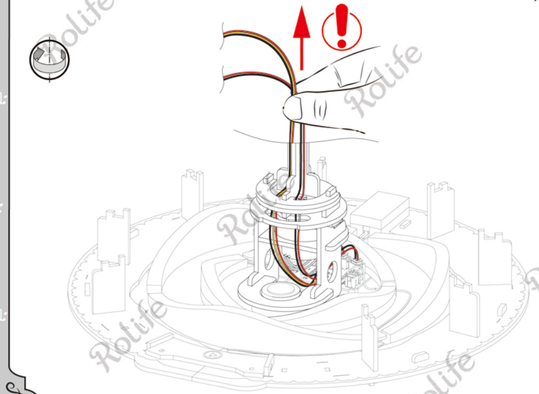


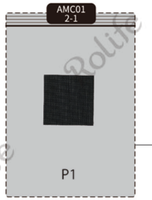


P1 x2

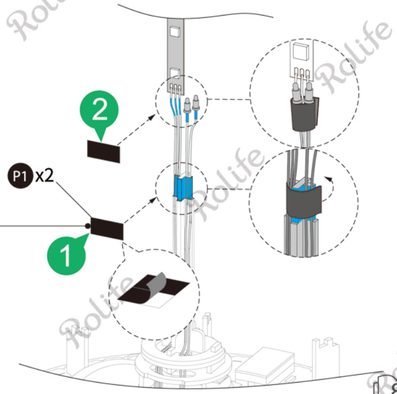


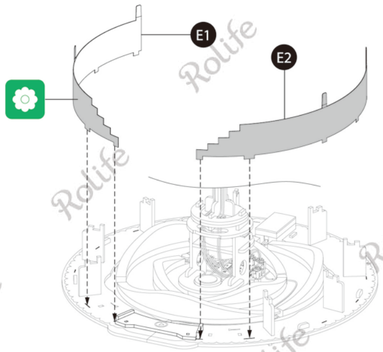

E1
E2

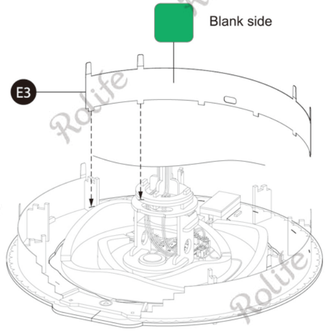
Blank side
E3

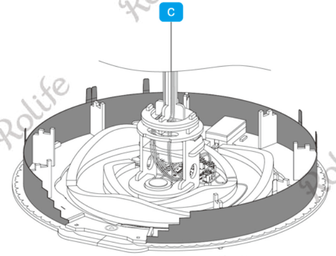
c


4

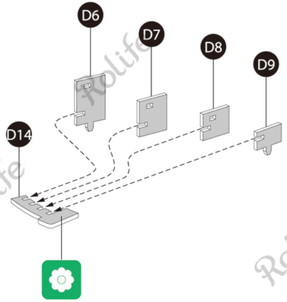

D6
D7
D8
D9
D14

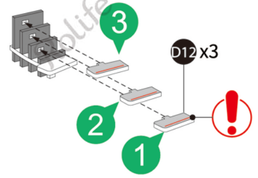
3
D12 x3
2
1



d


5

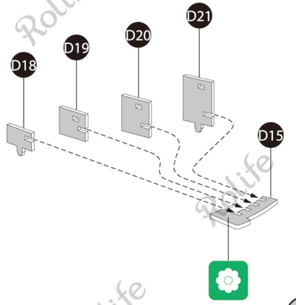

D18
D19
D20
D21
D15

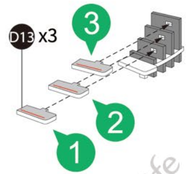

D13 x3
3
2
1



e

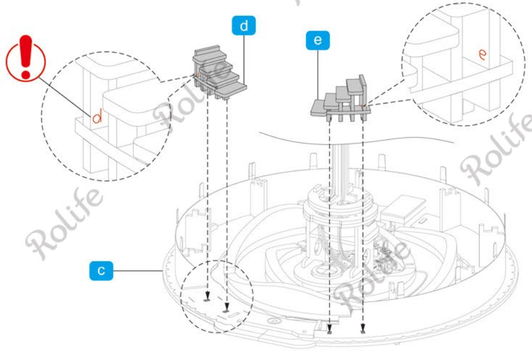

d
e
c

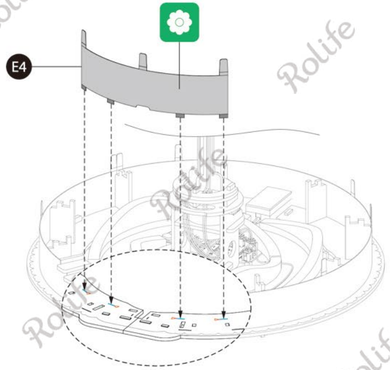

E4

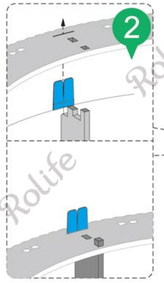

2

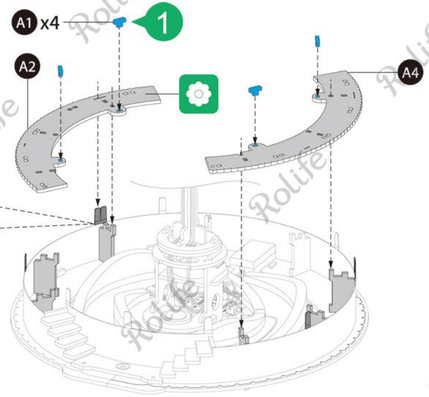

A1 x4
1
A2
A4

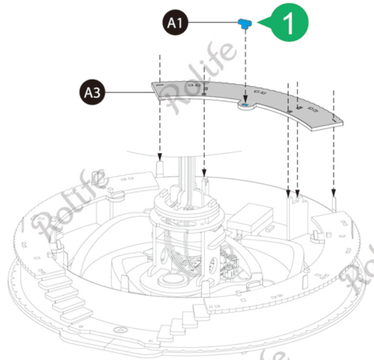

A1
1
A3

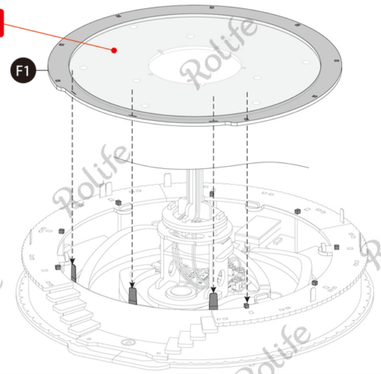
Remove and keep F2 .
F1

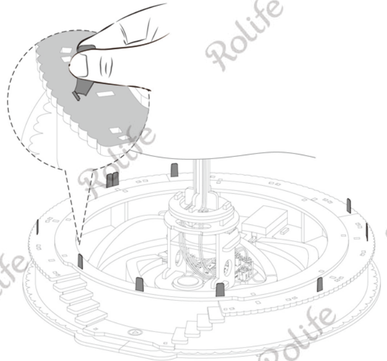

Remove the protruding card paper.

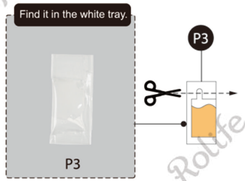
Due to customs policy in international shipping, please self-prepare lubricating materials.
Find it in the white tray.
P3
P3

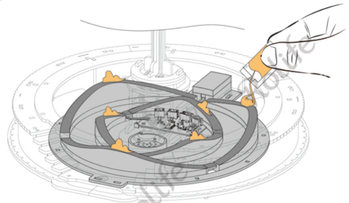


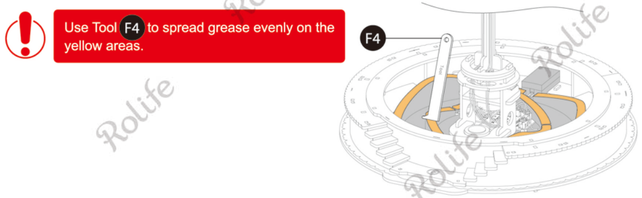

Use Tool F4 to spread grease evenly on the yellow areas.
F4

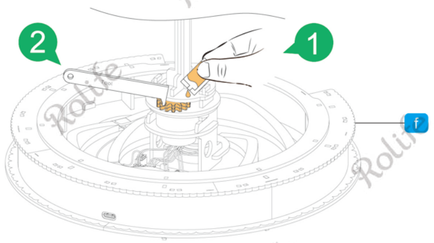




2
1

6

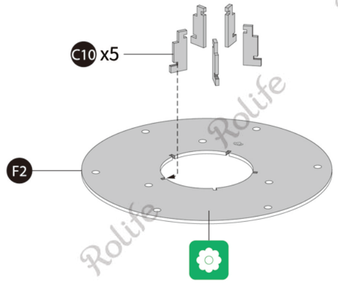

C10 x5
F2

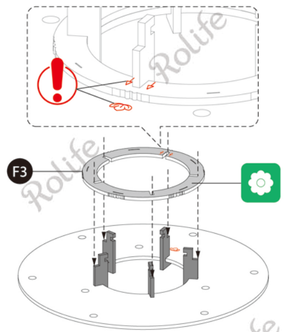


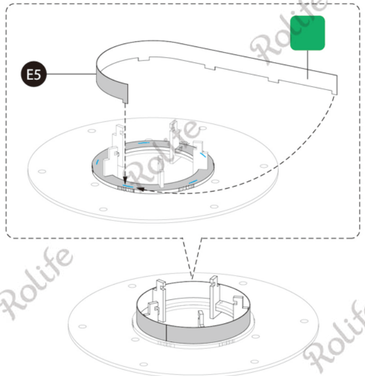


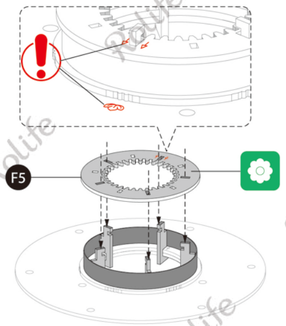


7

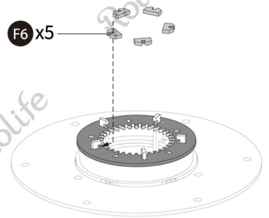


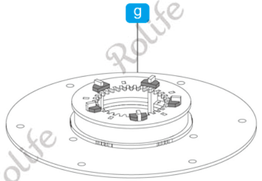

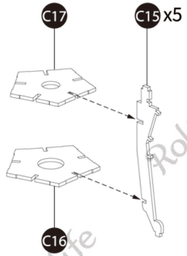



Assemble 5 C15 in the same way.




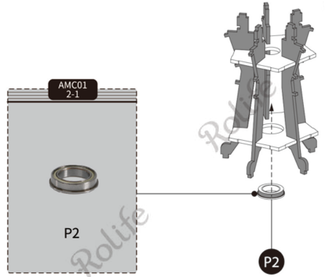


Find the mirror sheet P13 in the wooden board pack.

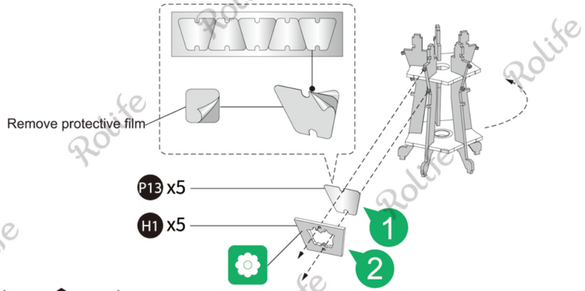


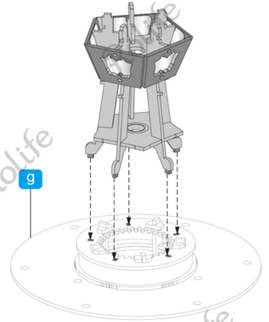


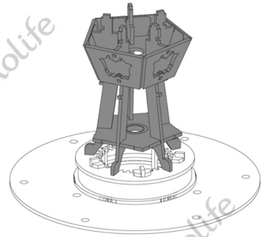


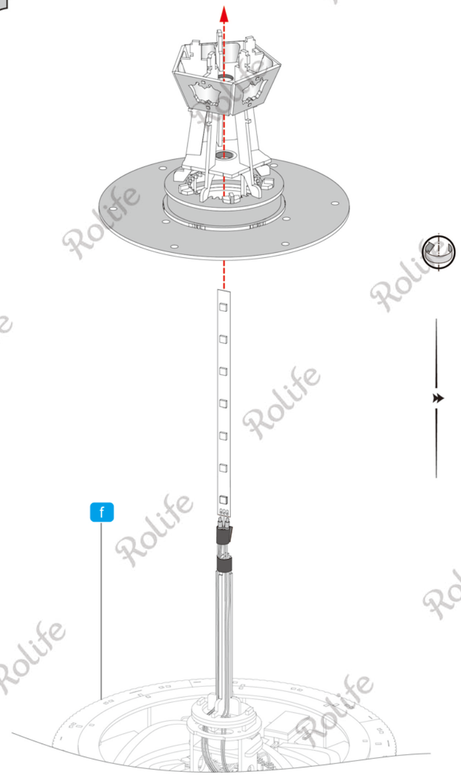




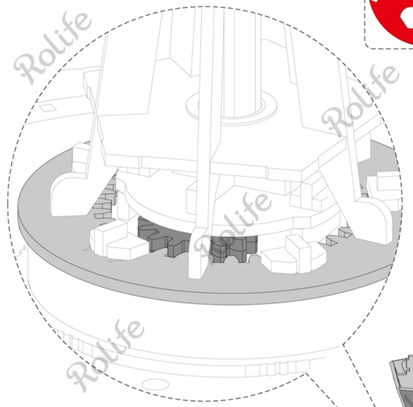


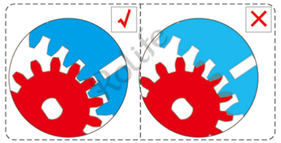


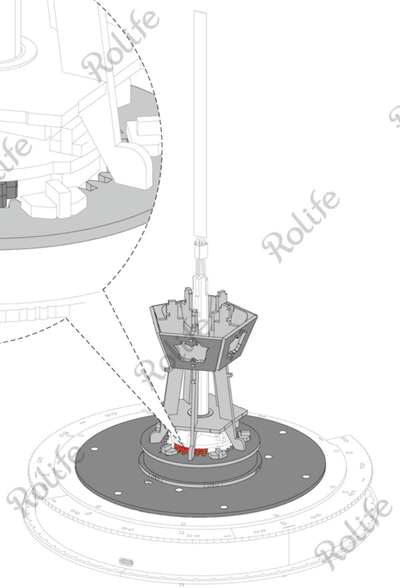


Find the mirror sheet P14 in the wooden board pack.

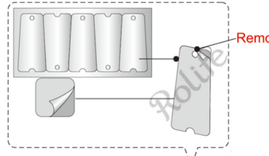


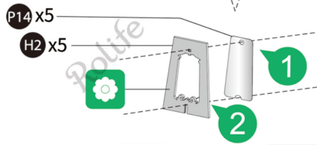


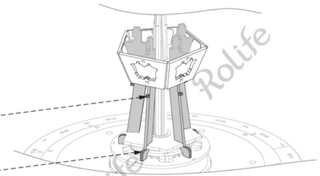


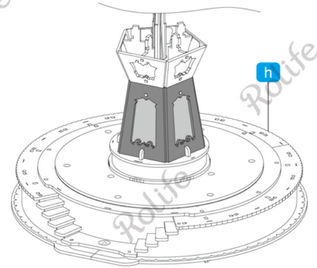



8

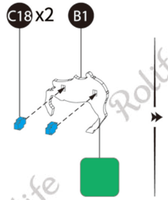

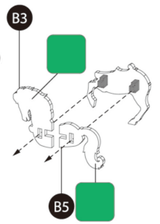


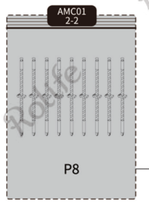

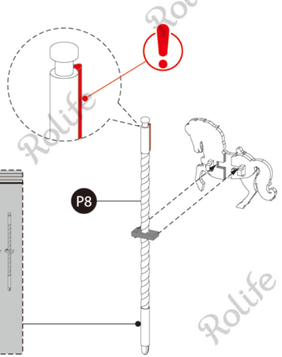


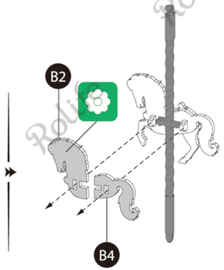


9

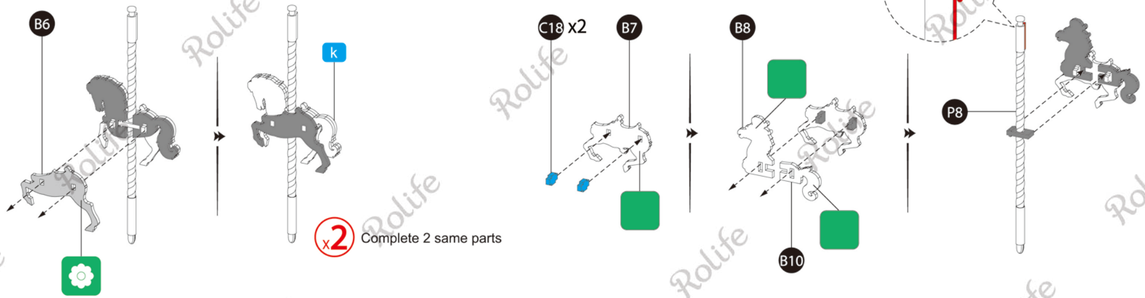

B6
k
x2
Complete 2 same parts
C18 x2
B7
B8
B10
P8

10

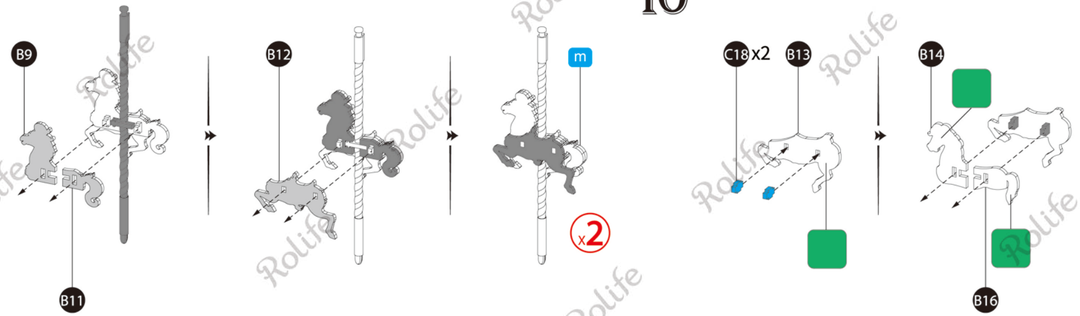

B9
B11
B12
m
x2
C18 x2
B13
B14
B16

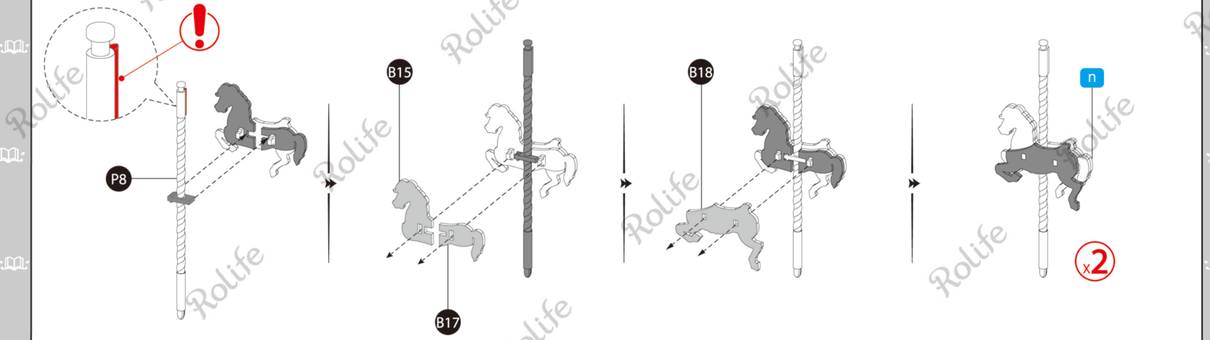
P8
B15
B17
B18
n
x2


11

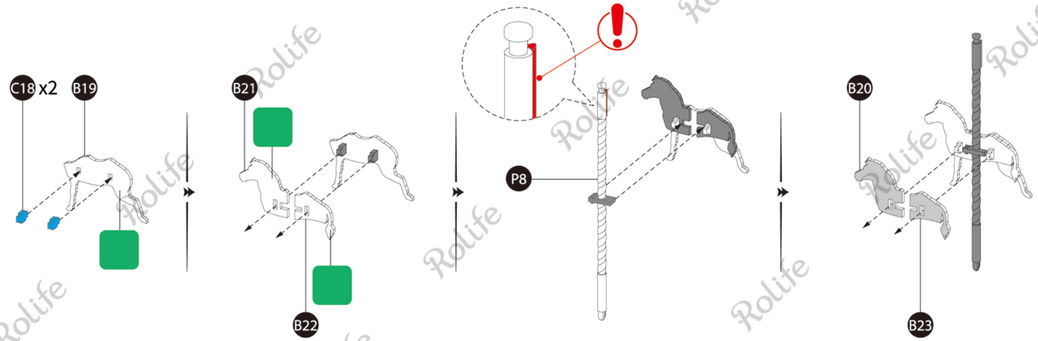

C18 x2
B19
B21
B22
P8
B20
B23

12

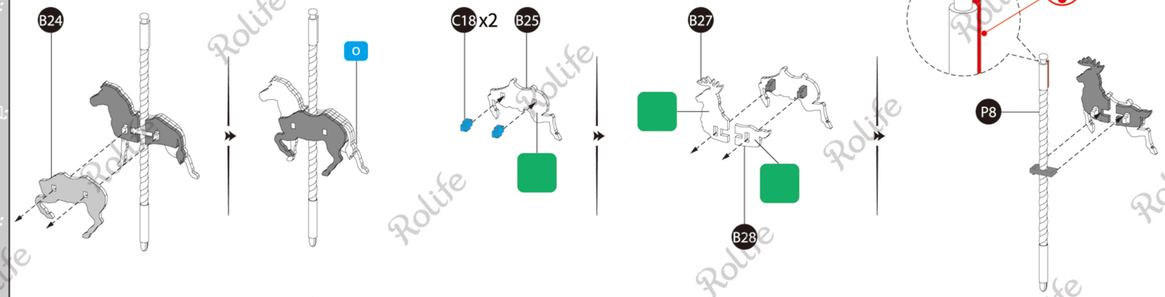

B24
o
C18 x2
B25
B27
B28
P8

13

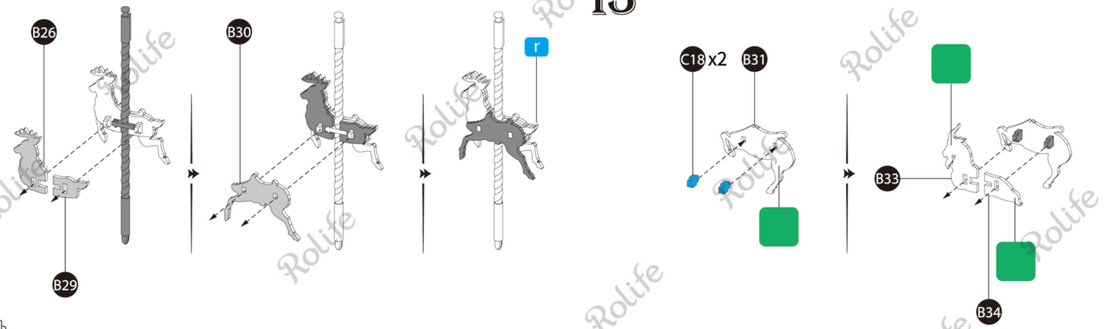

B26
B29
B30
r
C18 x2
B31
B33
B34

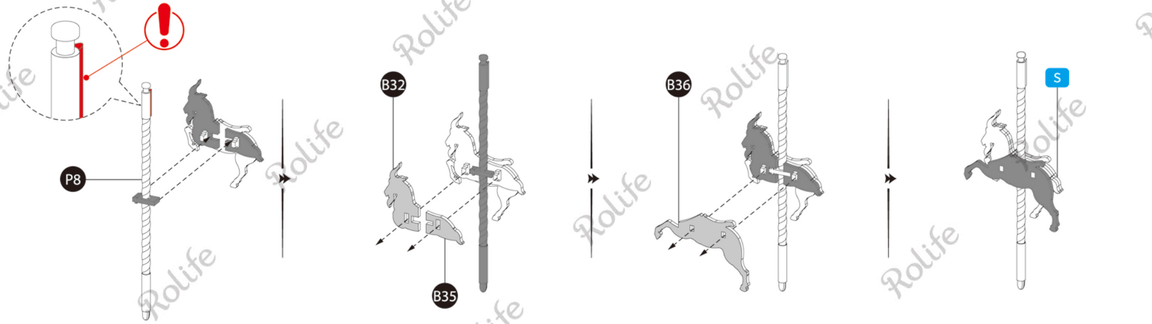

P8
B32
B35
B36
S


14

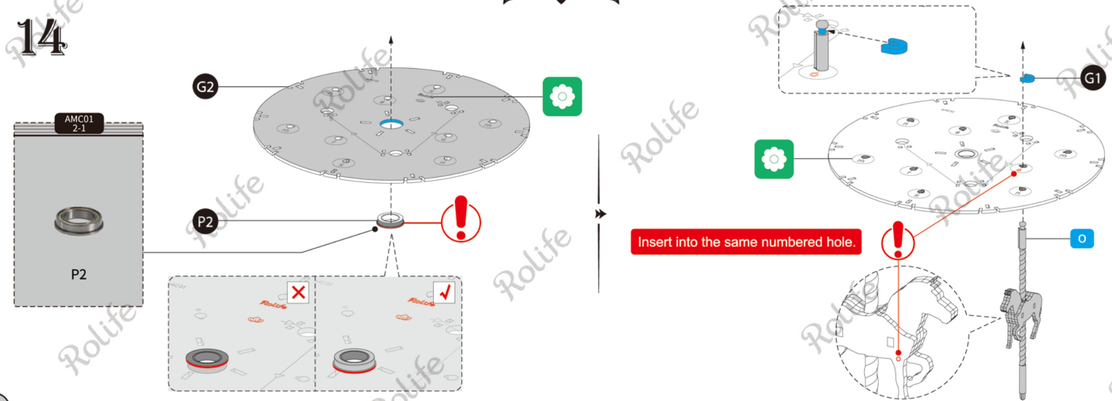
AMC01
2-1
P2
G2
P2
Insert into the same numbered hole.
G1
o


Assembly tips

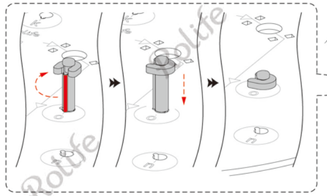


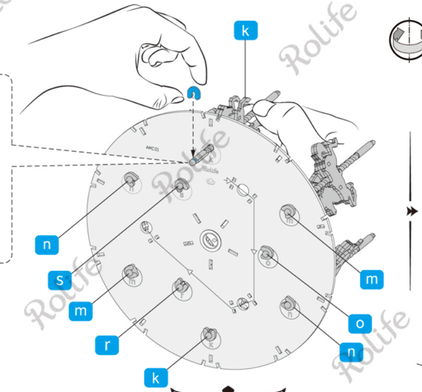


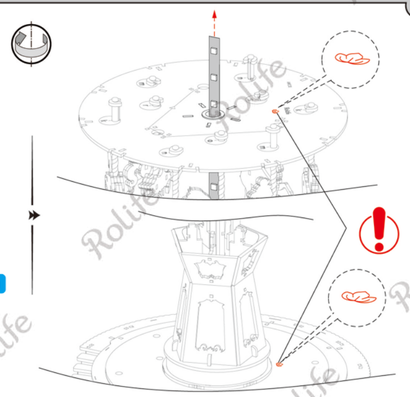


The protruded length of P8 is different.

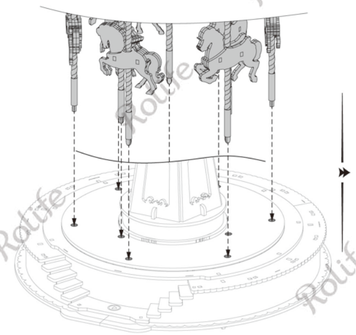


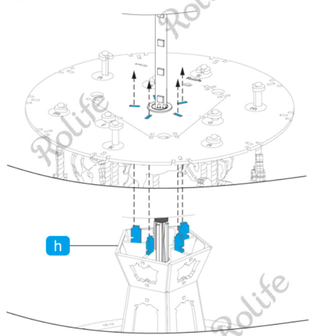


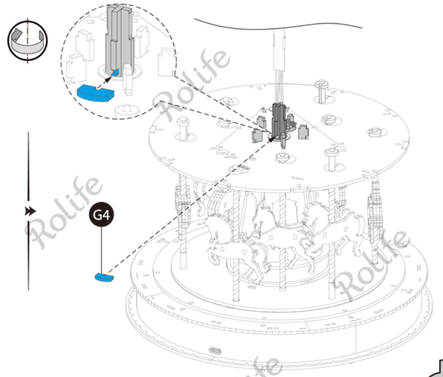



15

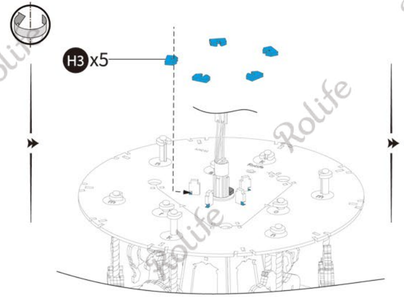


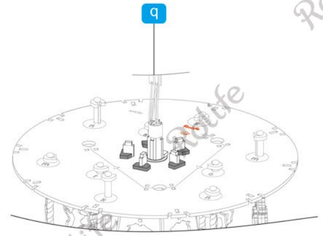

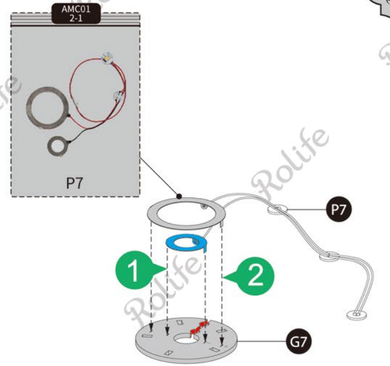


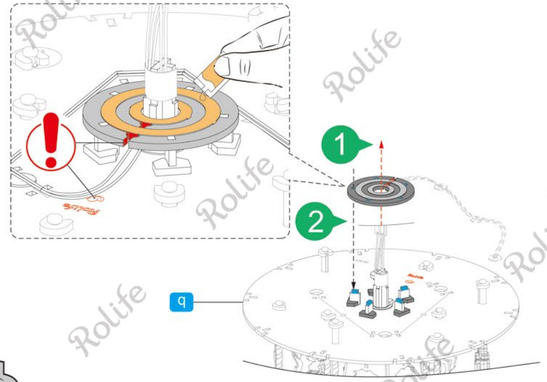

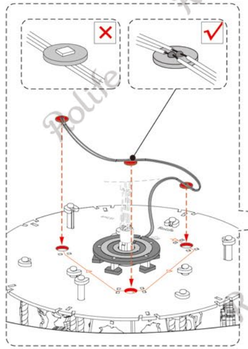


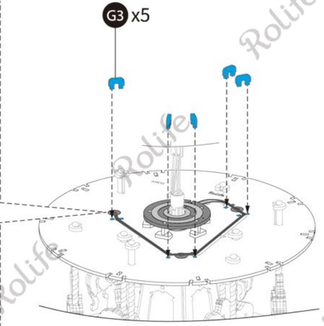


Remove carefully.

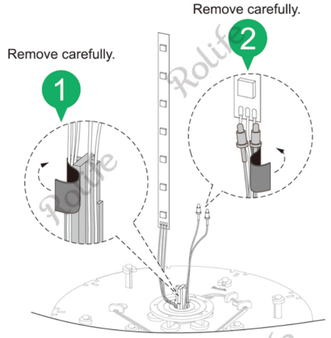


Remove carefully.

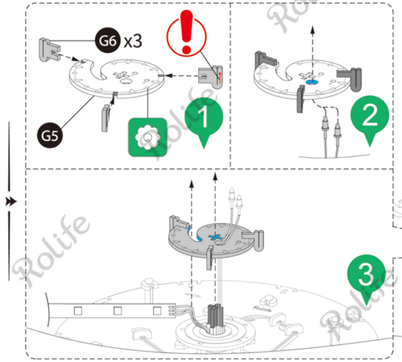


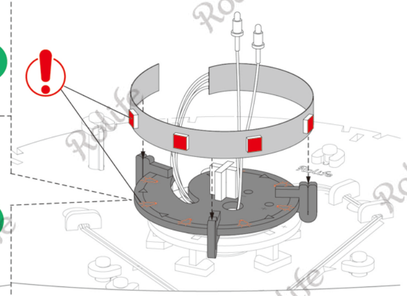


Insert the red wire into the "+" hole.


Insert the black wire into the "-" hole.

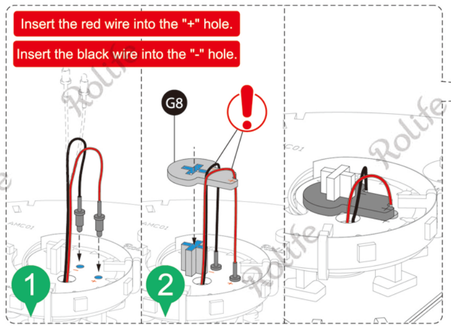


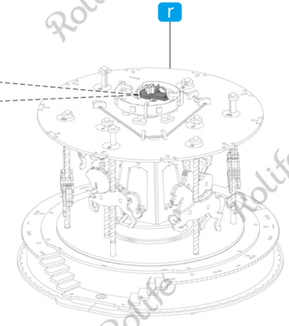


16

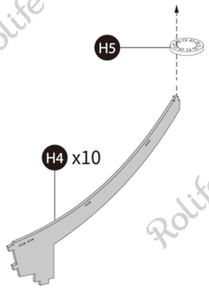

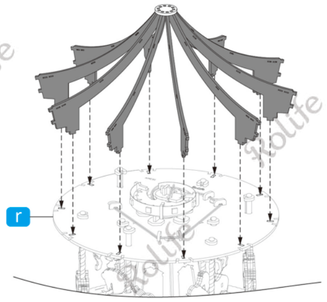


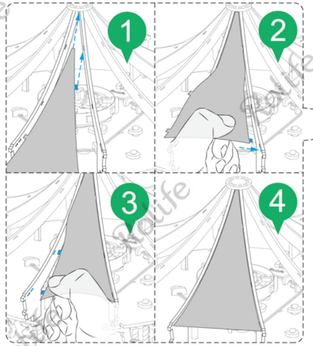


Find P15 in the wooden board pack.

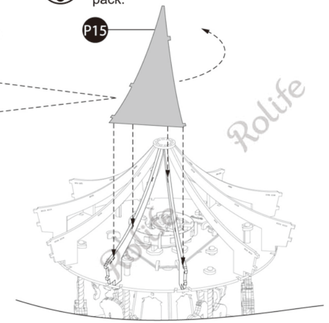


Find P16 in the wooden board pack. Assemble red and white parts alternately 5 times.

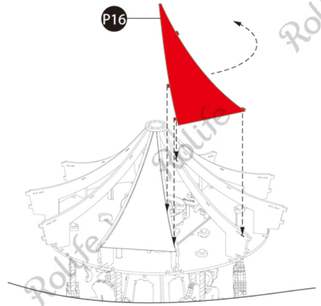



Find P17 in the wooden board pack.

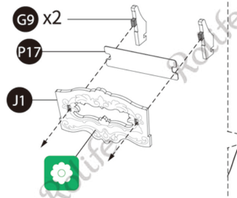



x10
Complete 10 same parts

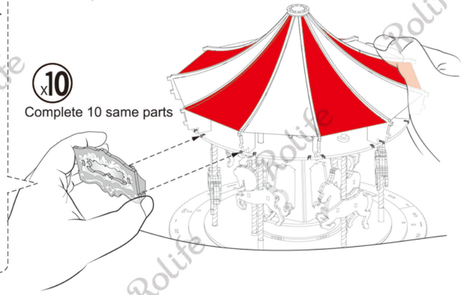

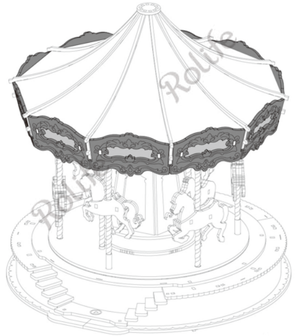


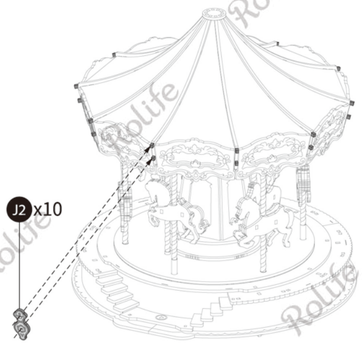


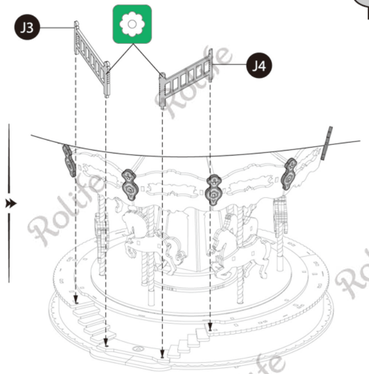


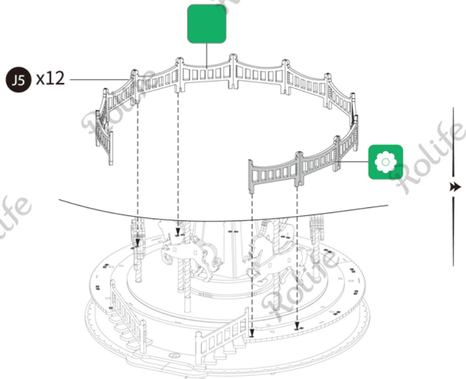



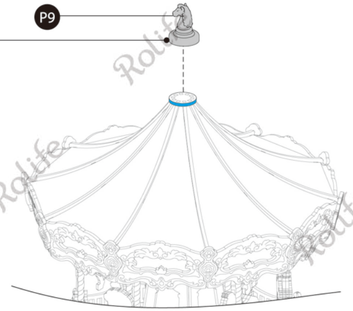

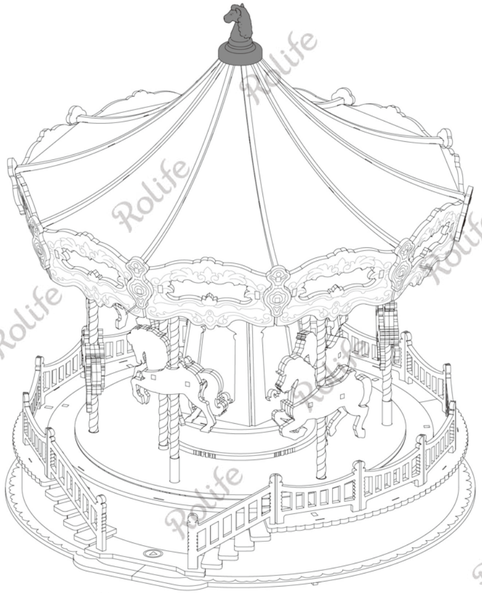

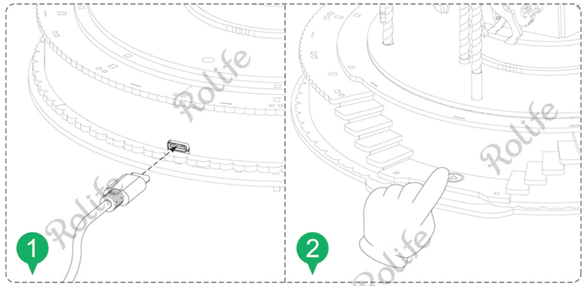

Switch instructions

Touch once. The flowing light, 3 ceiling lights, and music are turned on. The horses rotate and go up and down.

Touch again. The music is changed. Other effects last.

Touch again. The night light mode is on (all lights are warm and constant, and other effects stop).

Touch again. The effects are the same as the first touch (the effects of subsequent touches repeat the above cycle).

Long touch can always switch all off.

Complete.