DW028

Rolife

# SUPER CREATOR | SUPER STORE | Perfect Romance Café

The picture is for reference only.

SUPER CREATOR

## Assembly Tips

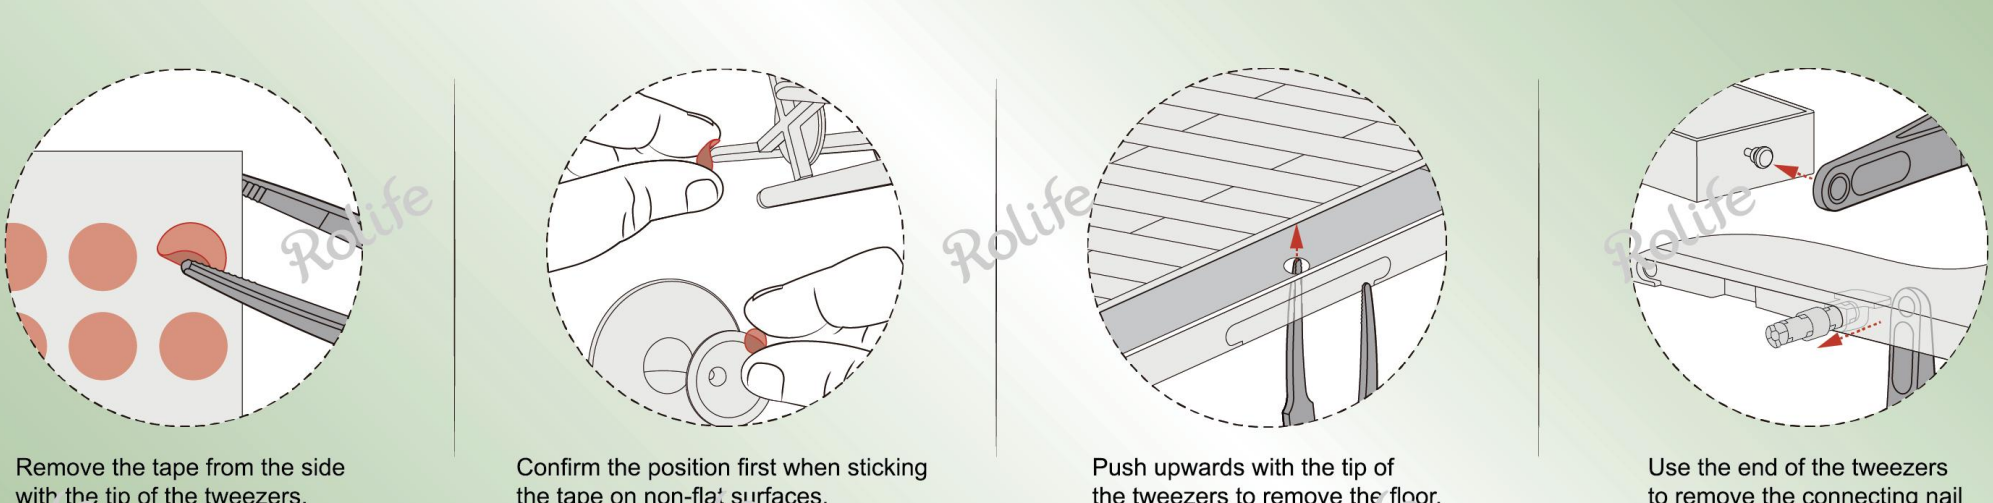

Remove the tape from the side with the tip of the tweezers.

Confirm the position first when sticking the tape on non-flat surfaces, and then remove the film.

Push upwards with the tip of the tweezers to remove the floor.

Use the end of the tweezers to remove the connecting nail or assemble small parts.

## 01 Notice

### WARNING:

- Not suitable for children under 3 years old.
- The product shall only be used with a transformer for product or a power supply for it.
- The product shall be used with the power supply supplied, if the transformer is supplied with the product.
- The transformer or power supply is not a toy or model.
- Misuse of transformer can cause electrical shock.
- The power supply used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Do not connect the wire to output socket.
- The product is not to be connected to more than the recommended number of power supplies.
- If the product contains motor, motor may be a hot component. Do not touch it to avoid burns while operating.
- This product is only to be connected to equipment bearing either of the following symbols: ▣ or ⟐
- This product does not need liquid cleaning, and please clean the product with clean soft cloth.
- The instruction must be retained since it contains important information.

### NOTICE:

- Children should be accompanied by adults while assembling.
- Please keep the product away from flammable substances and humid environments to prevent damage.

## 02 Icon

Please secure parts as shown in case of any parts loosening:

| | |
|---|---|
| Use double-sided adhesive dot | Use long-strip adhesive tape |
| Special attention in assembly | Perspective changed |
| Complete 2 same parts | Force points |
| Step 1 | Step 2 |

## 03 Switch box instructions (P3)

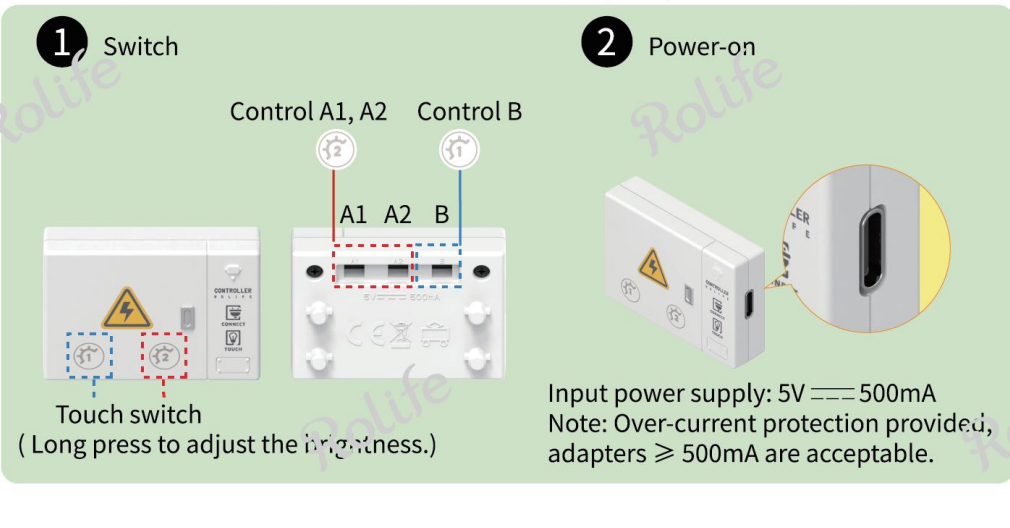

1. Switch

Touch switch
( Long press to adjust the brightness.)

2. Power-on

Input power supply: 5V ⎓ 500mA
Note: Over-current protection provided, adapters ≥ 500mA are acceptable.

## 04 Data cable instructions (P2)

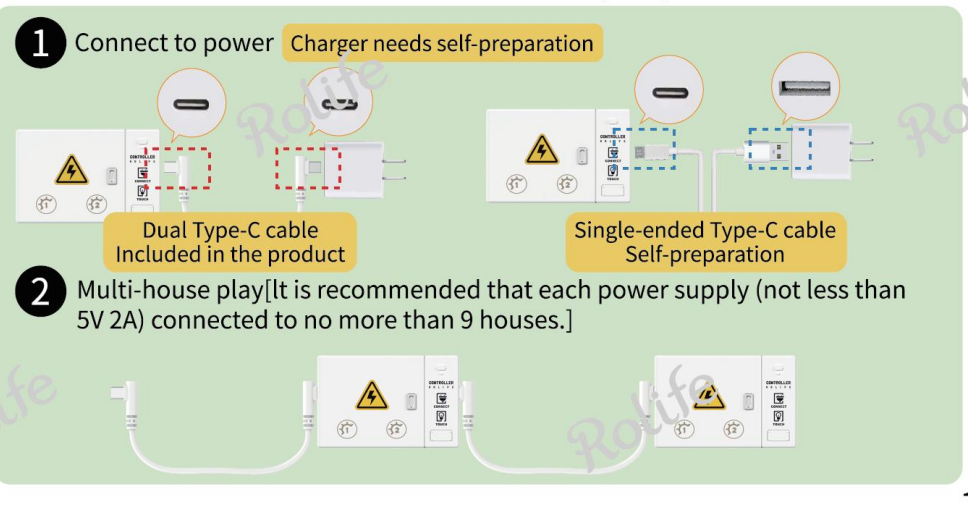

1. Connect to power Charger needs self-preparation

Dual Type-C cable
Included in the product

Single-ended Type-C cable
Self-preparation

2. Multi-house play[It is recommended that each power supply (not less than 5V 2A) connected to no more than 9 houses.]

## 05 Assembling steps

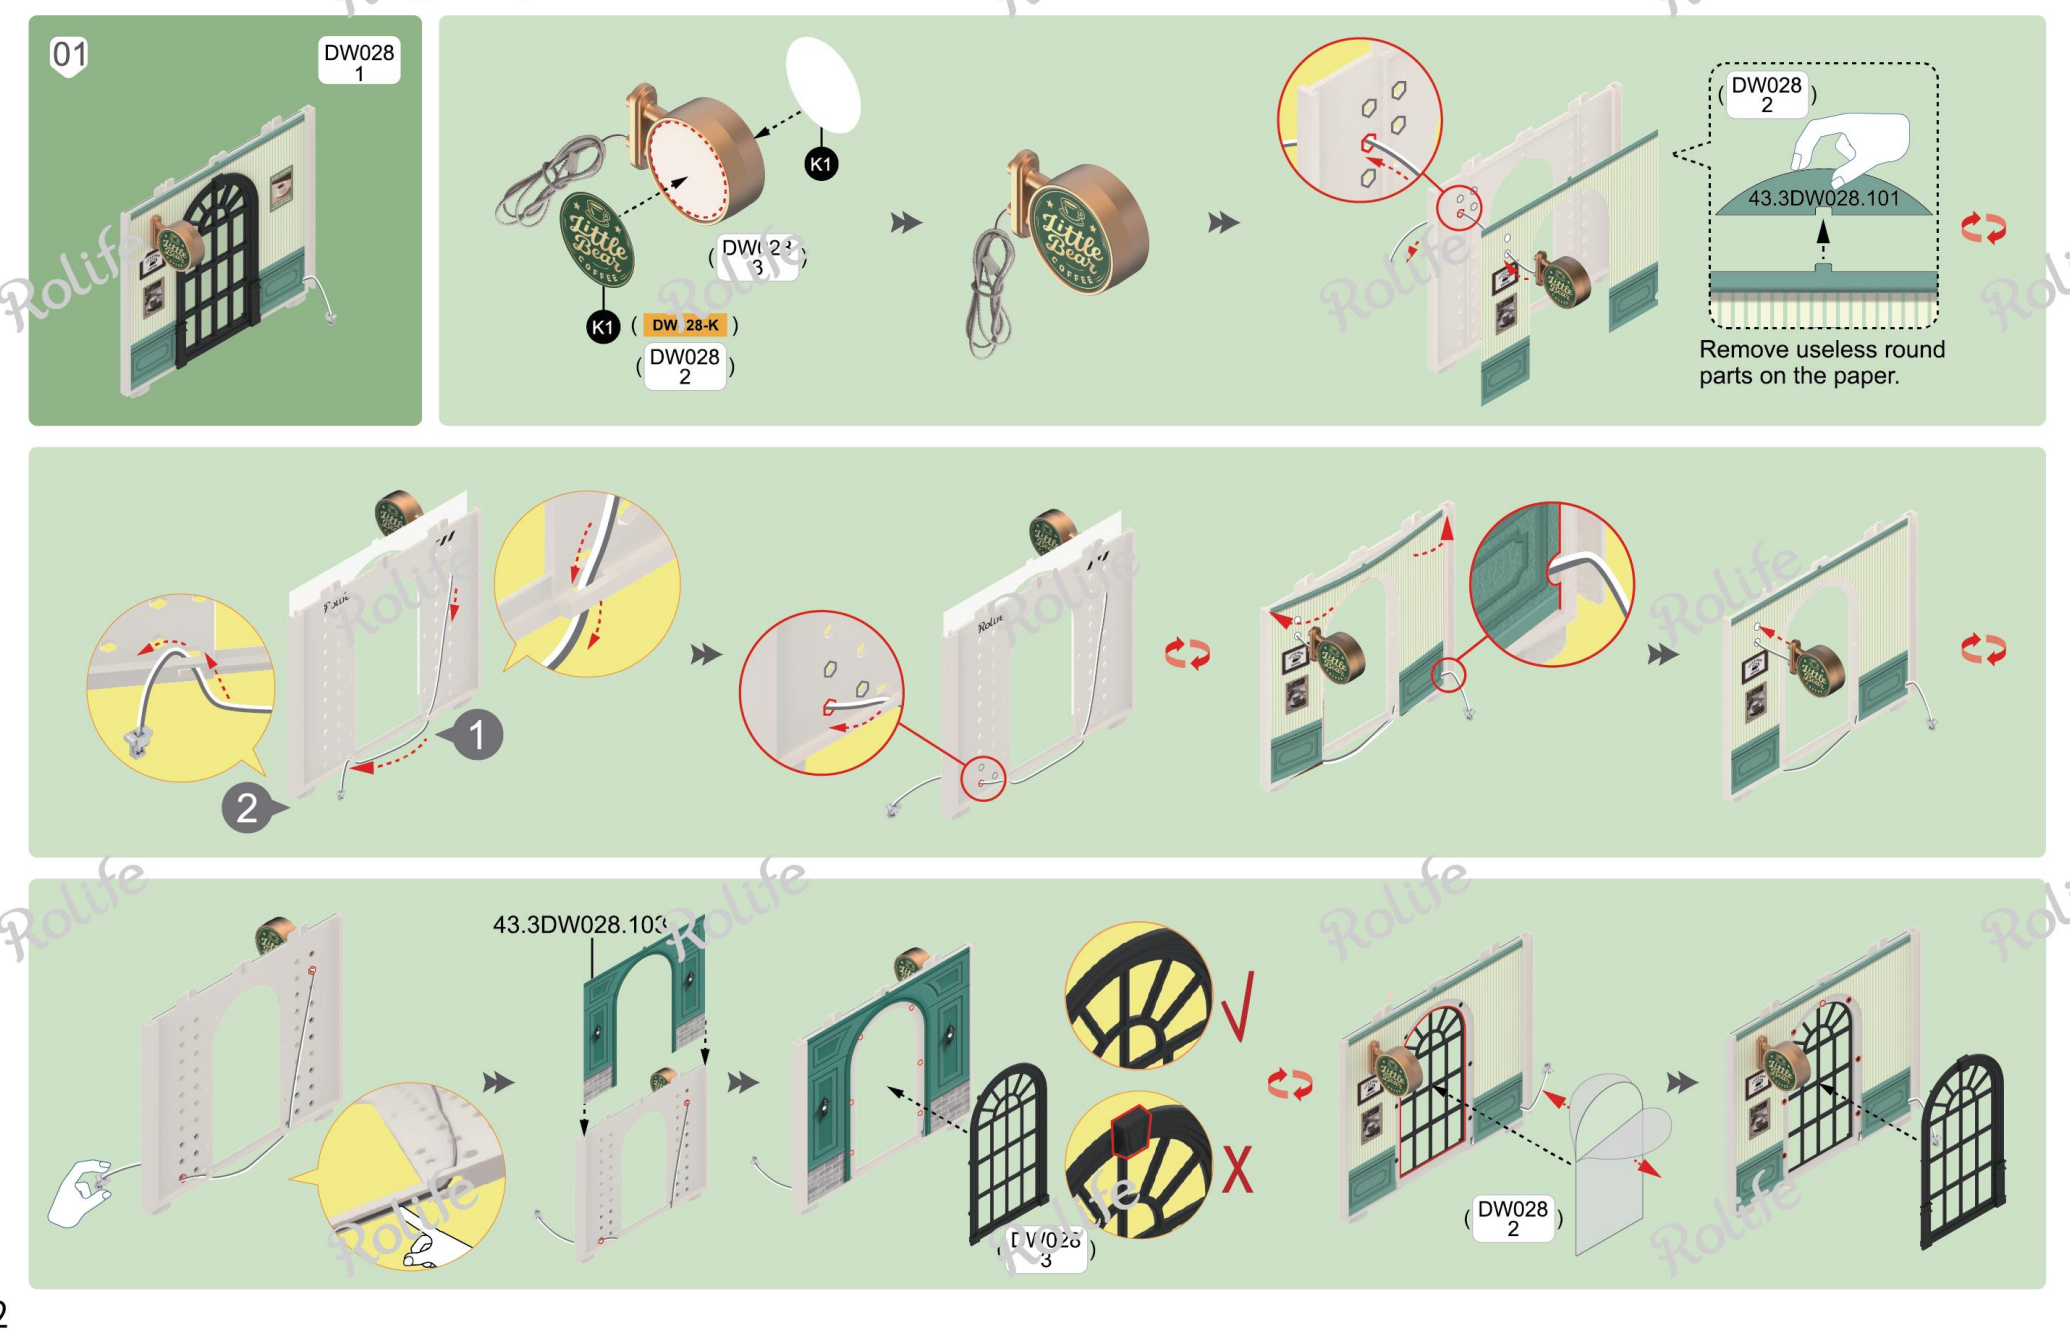

Remove useless round parts on the paper.

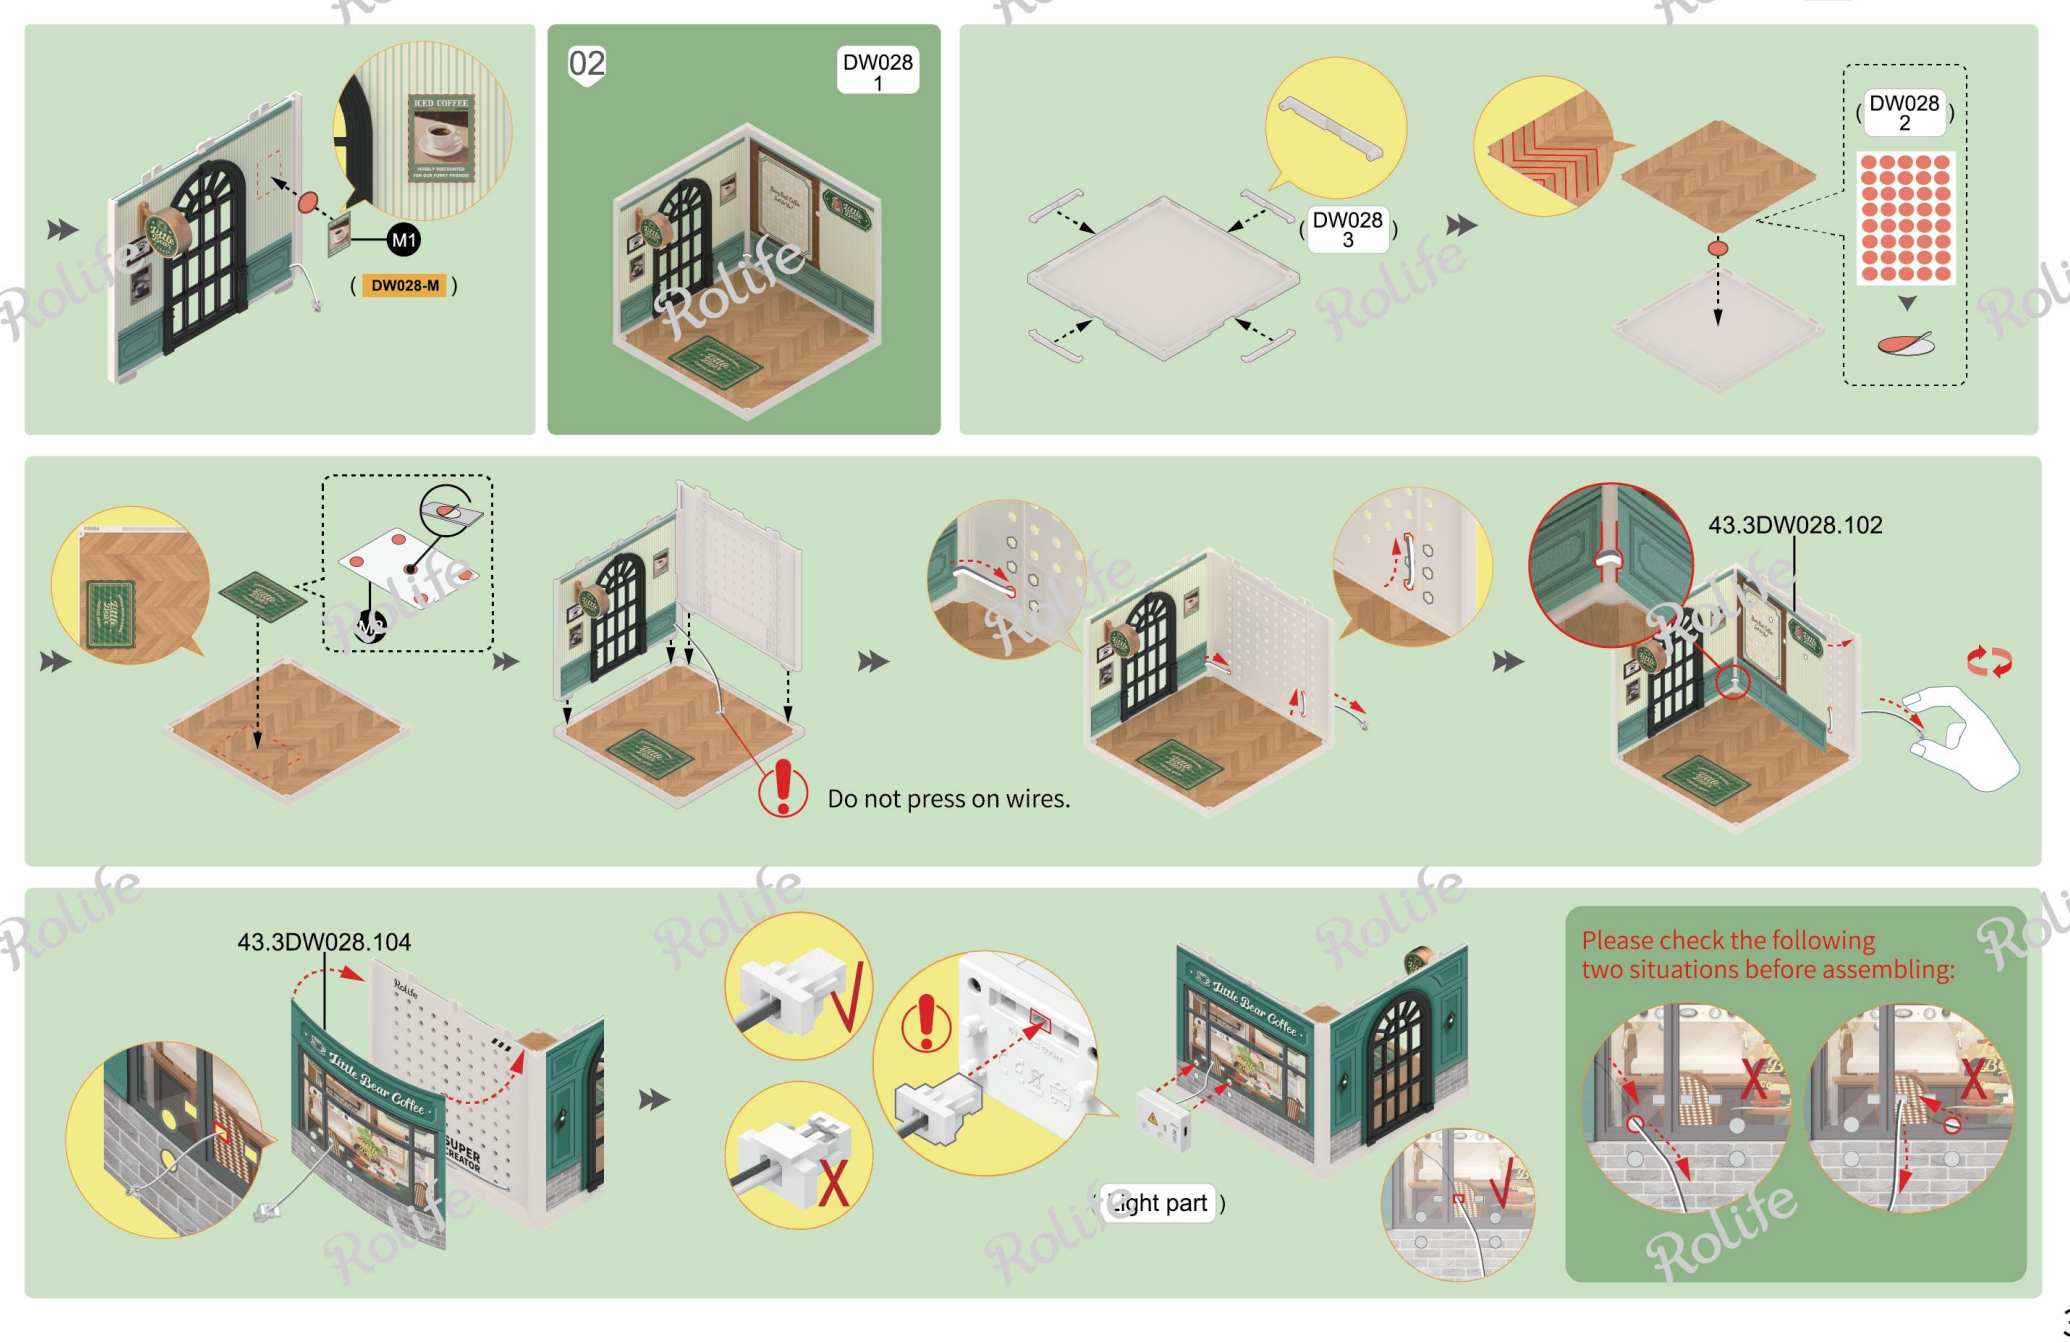

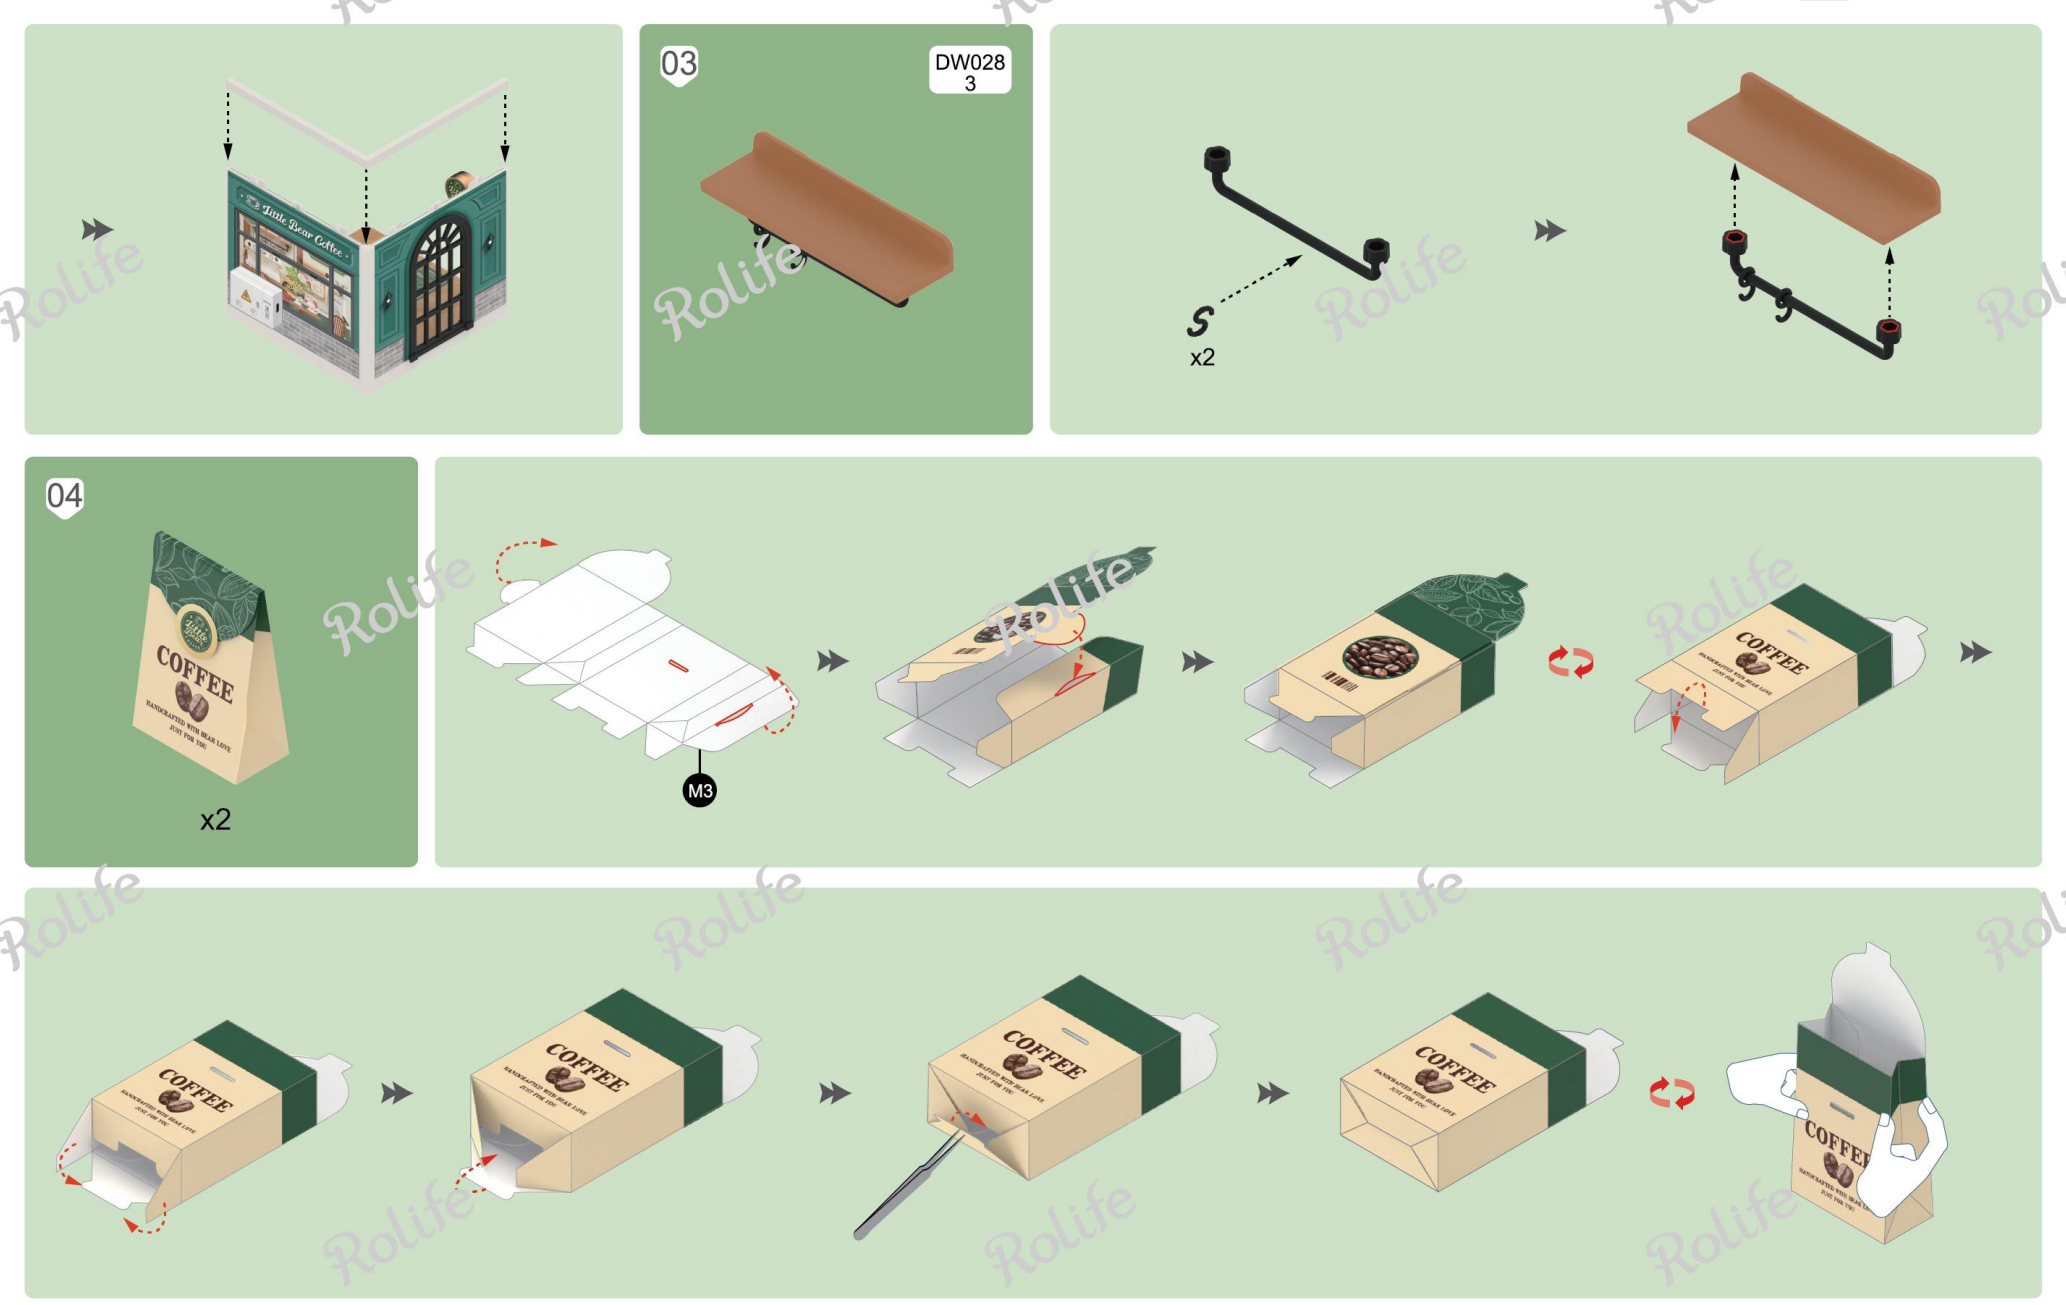

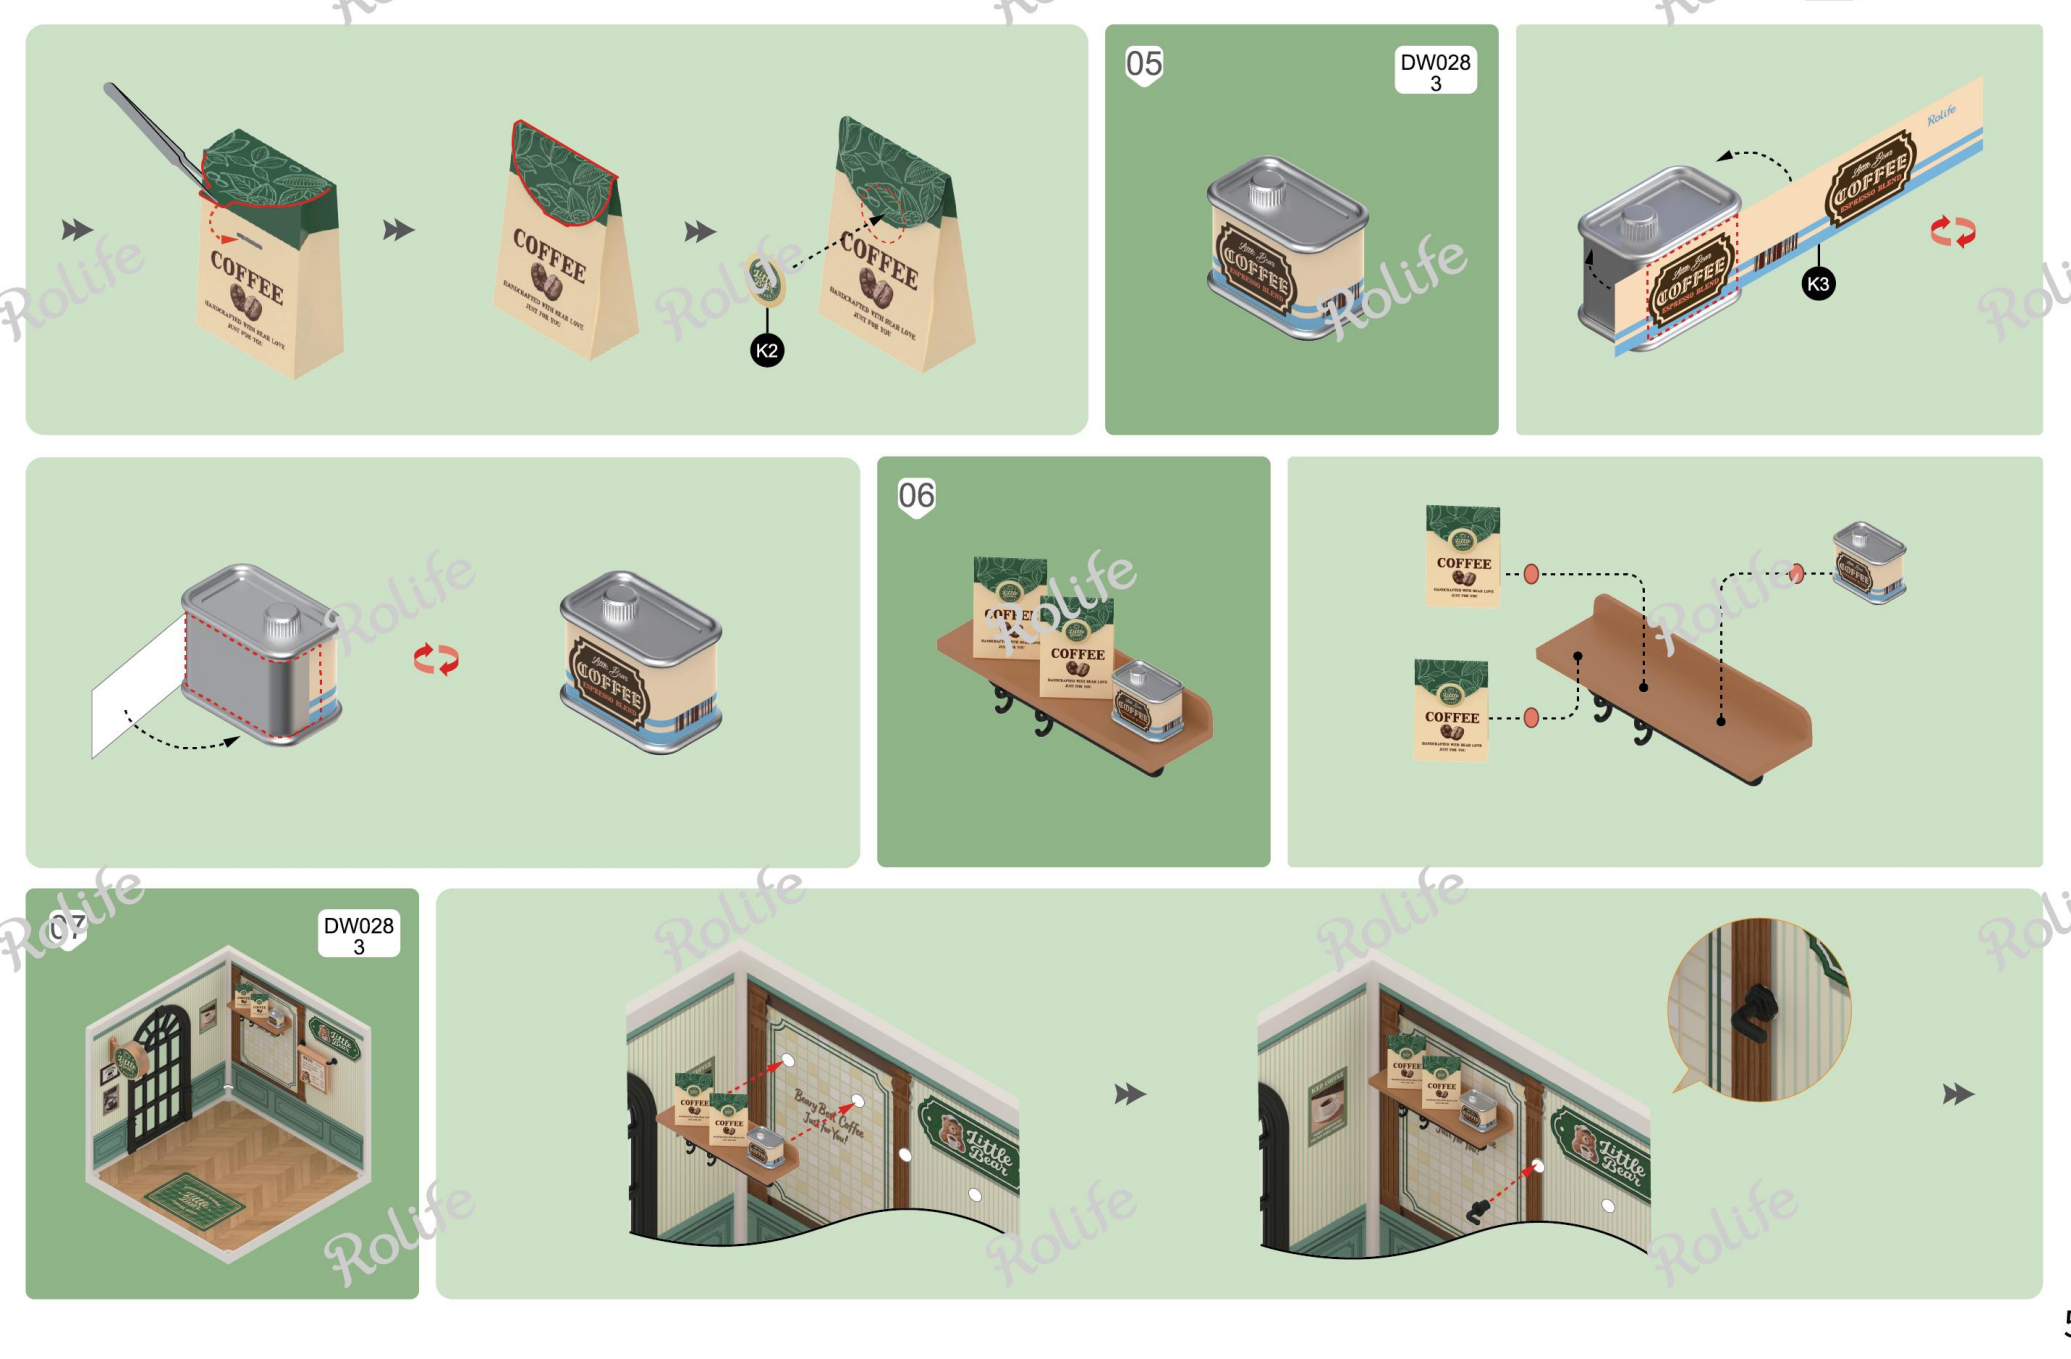

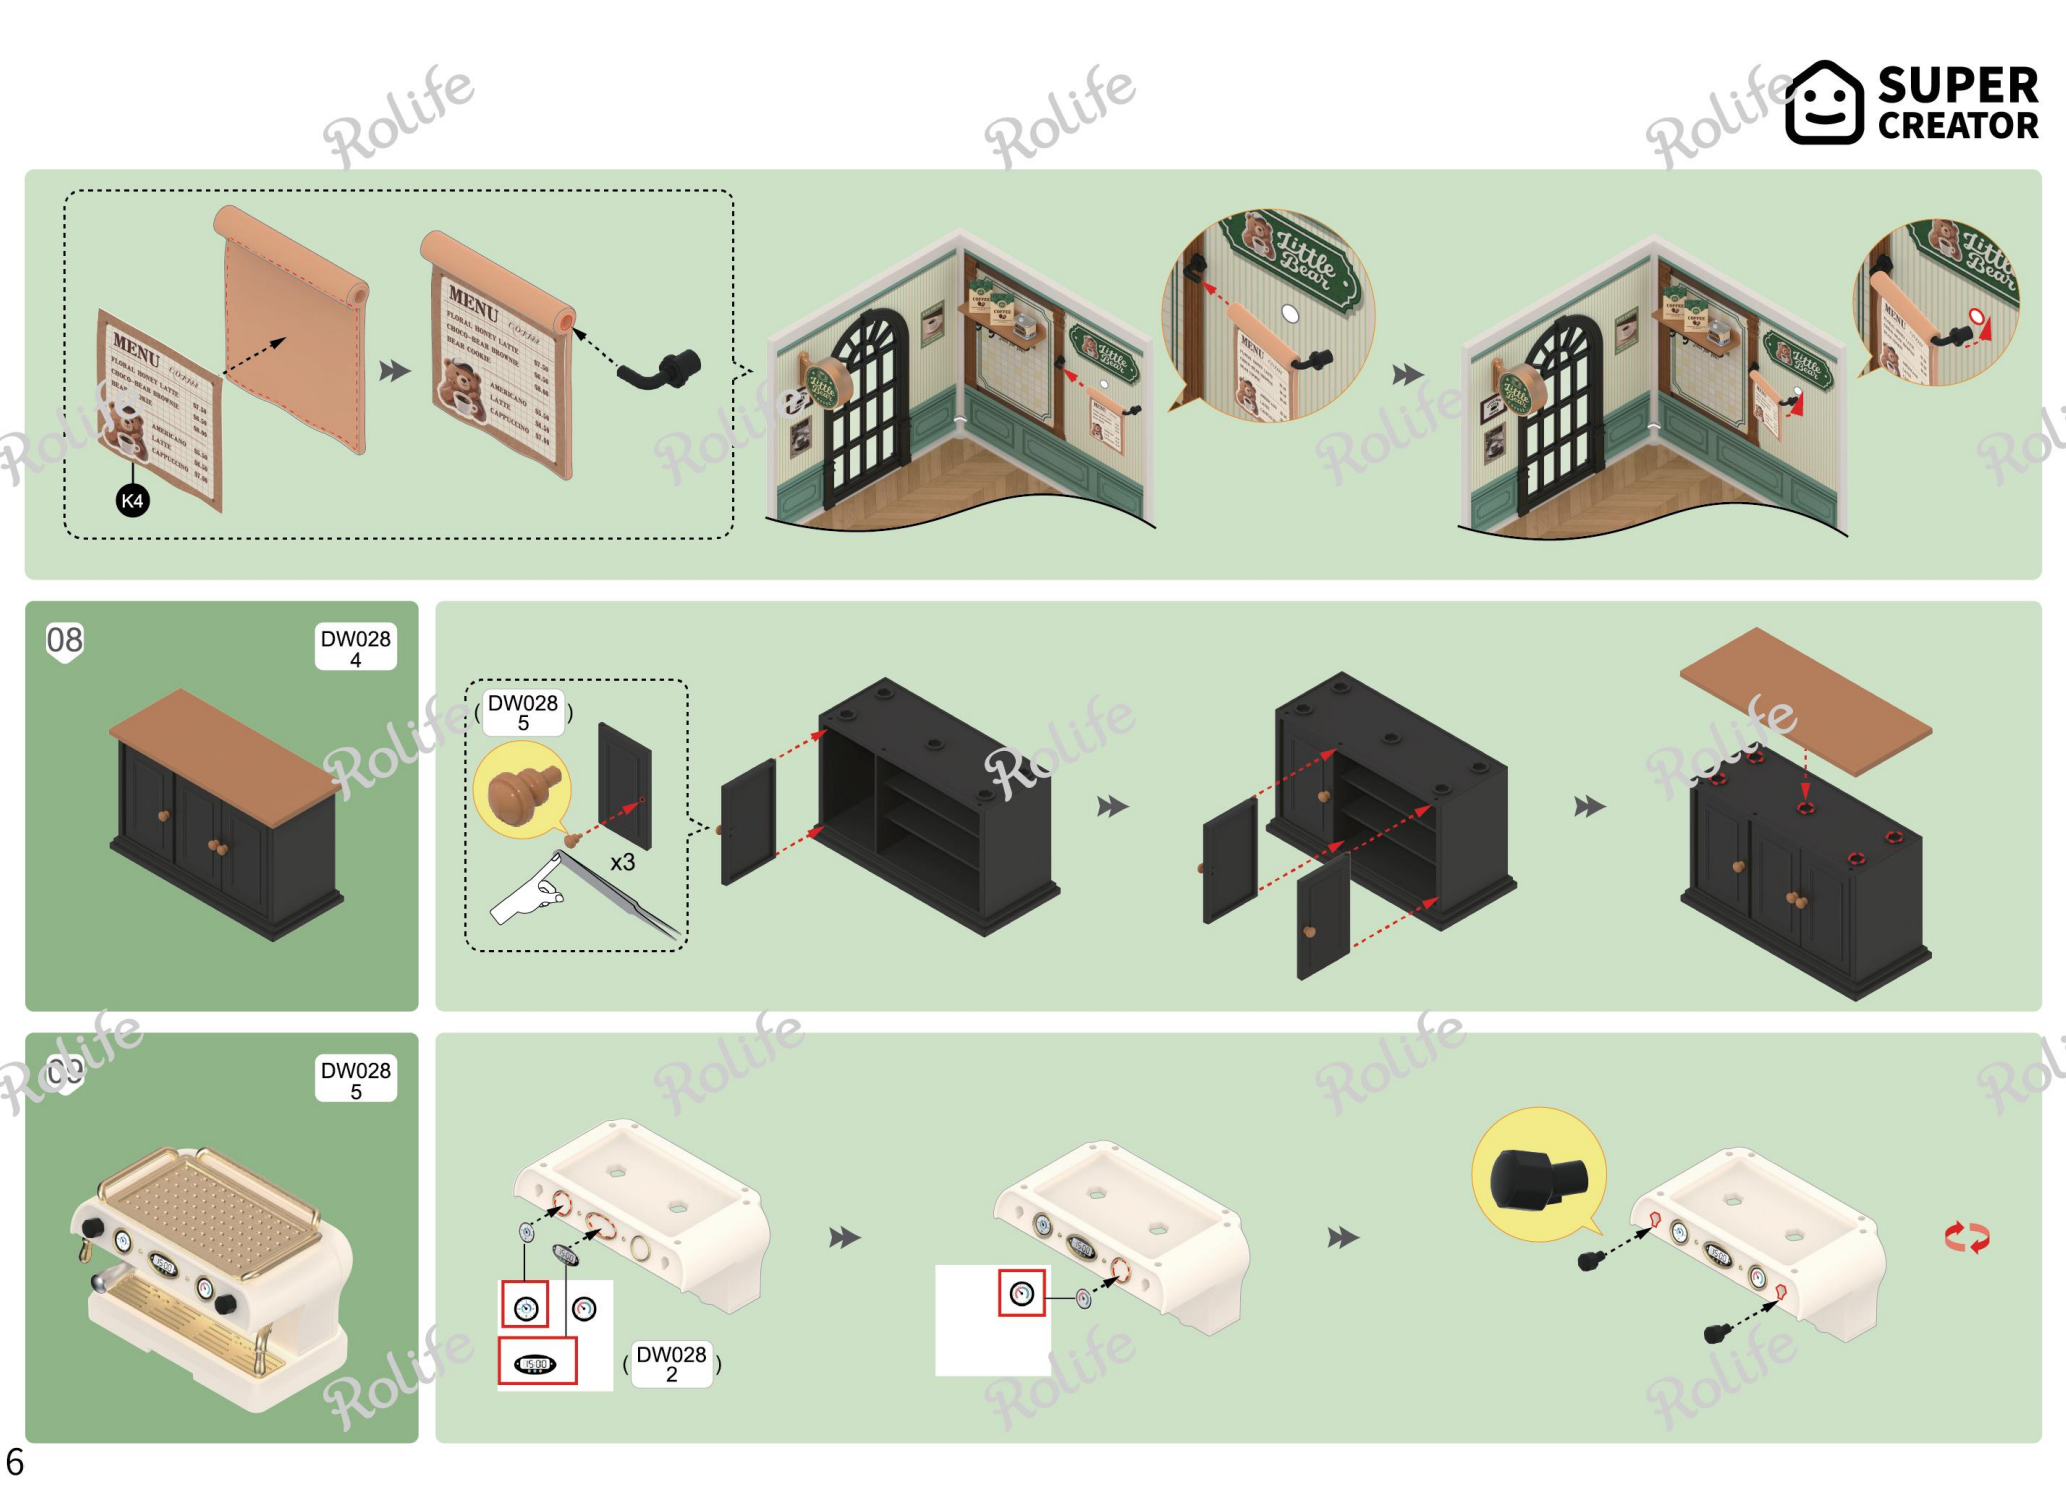

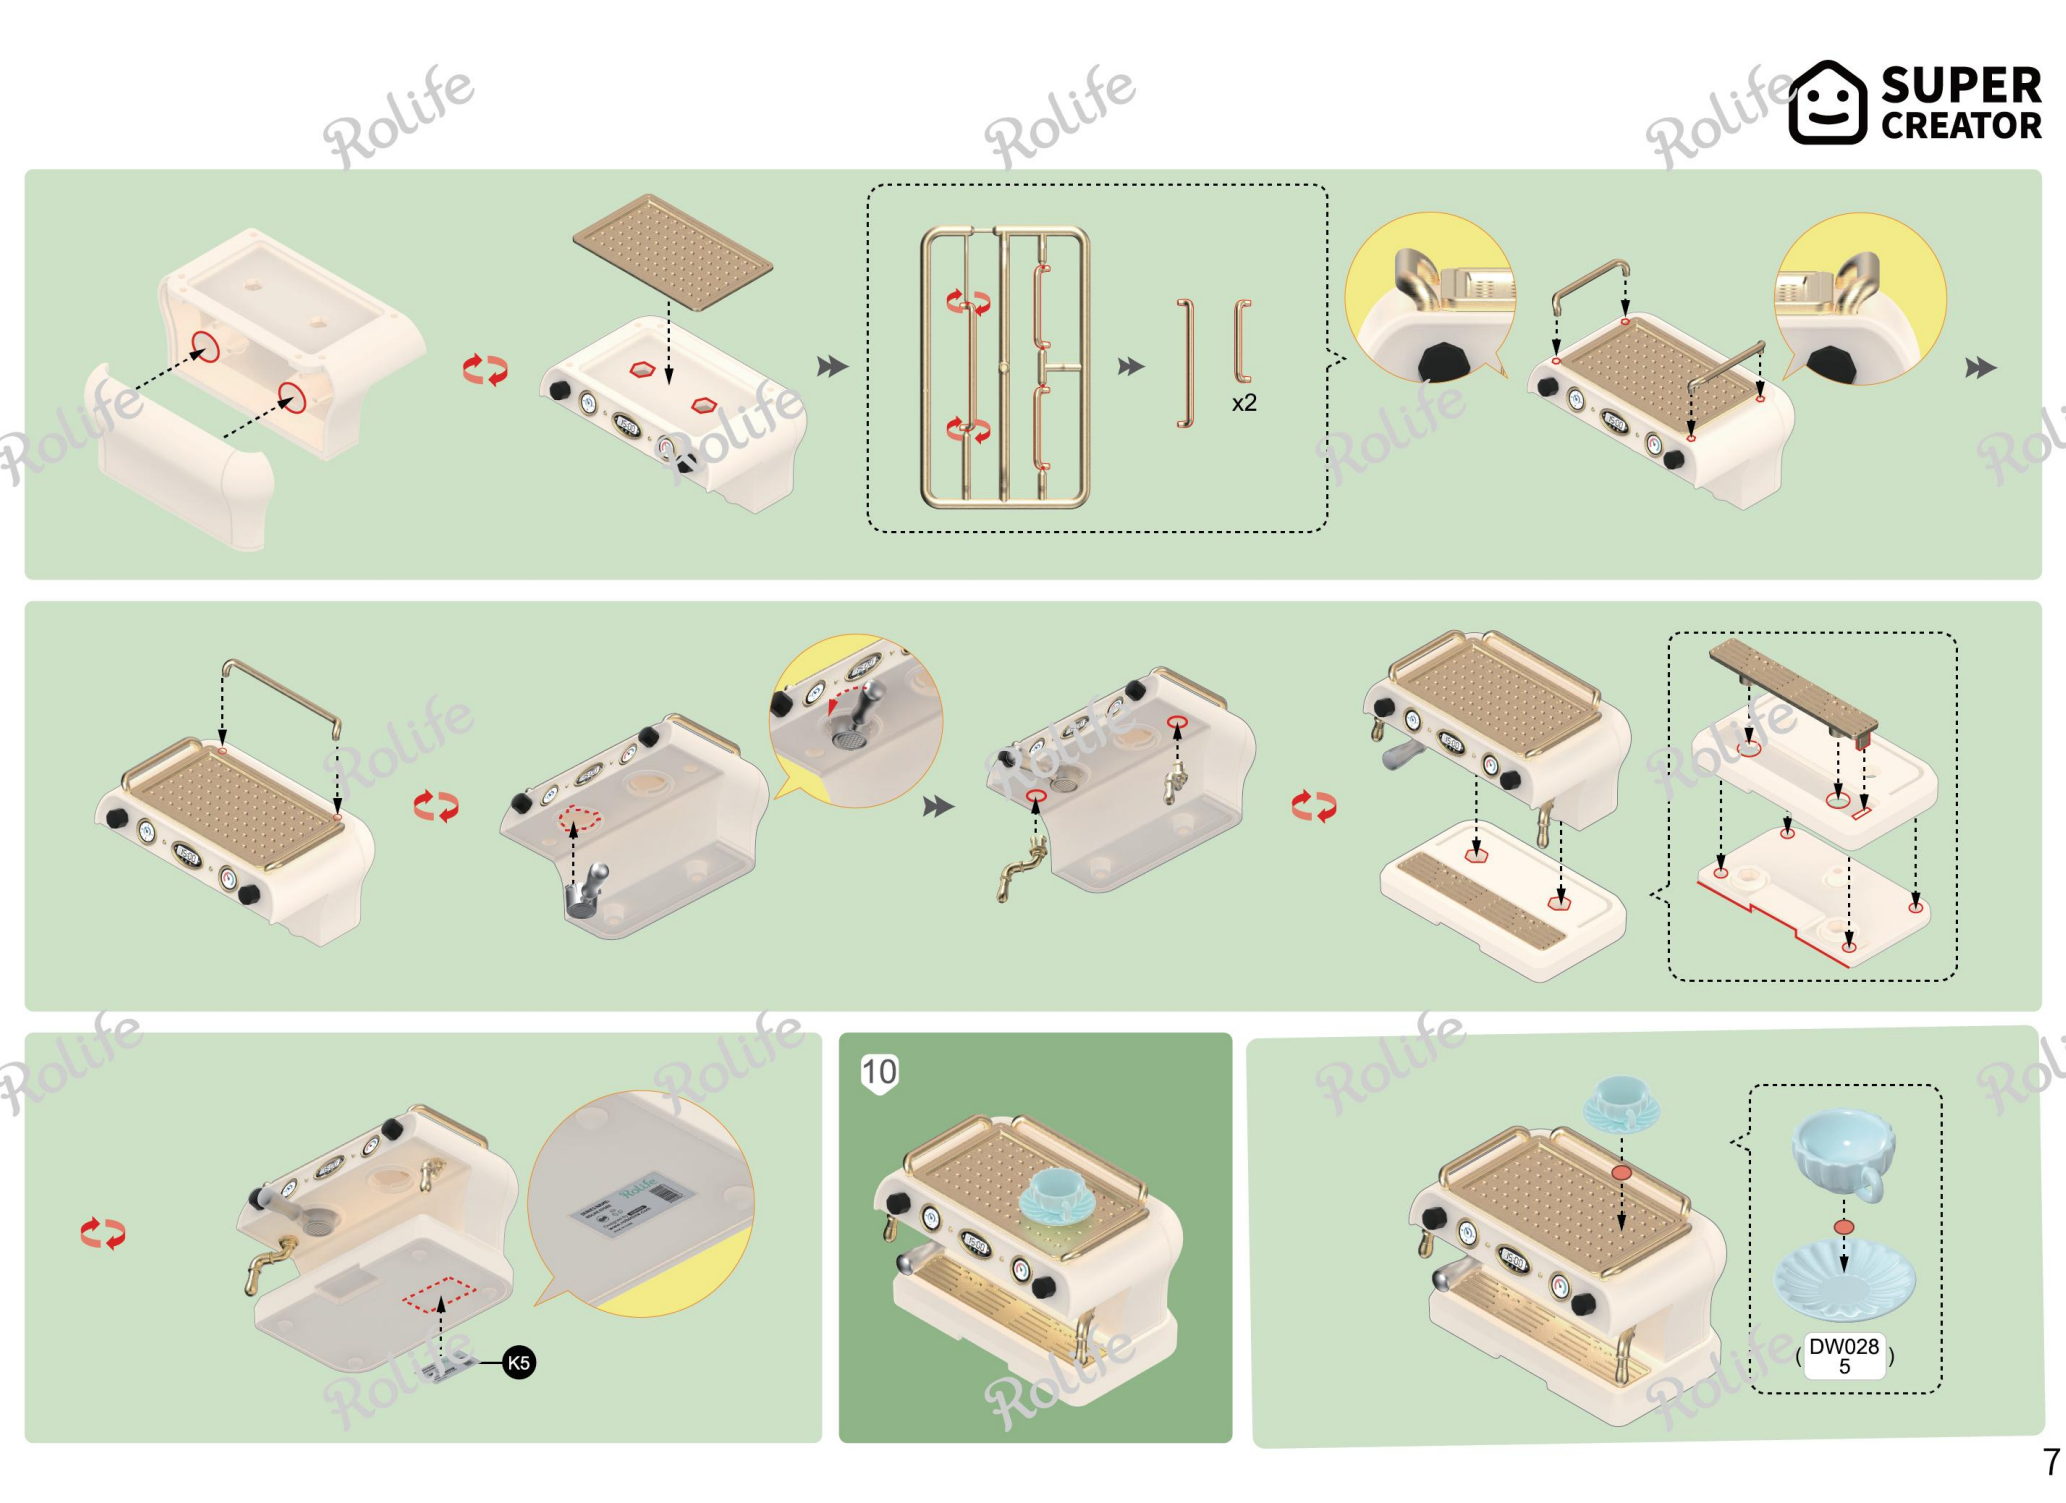

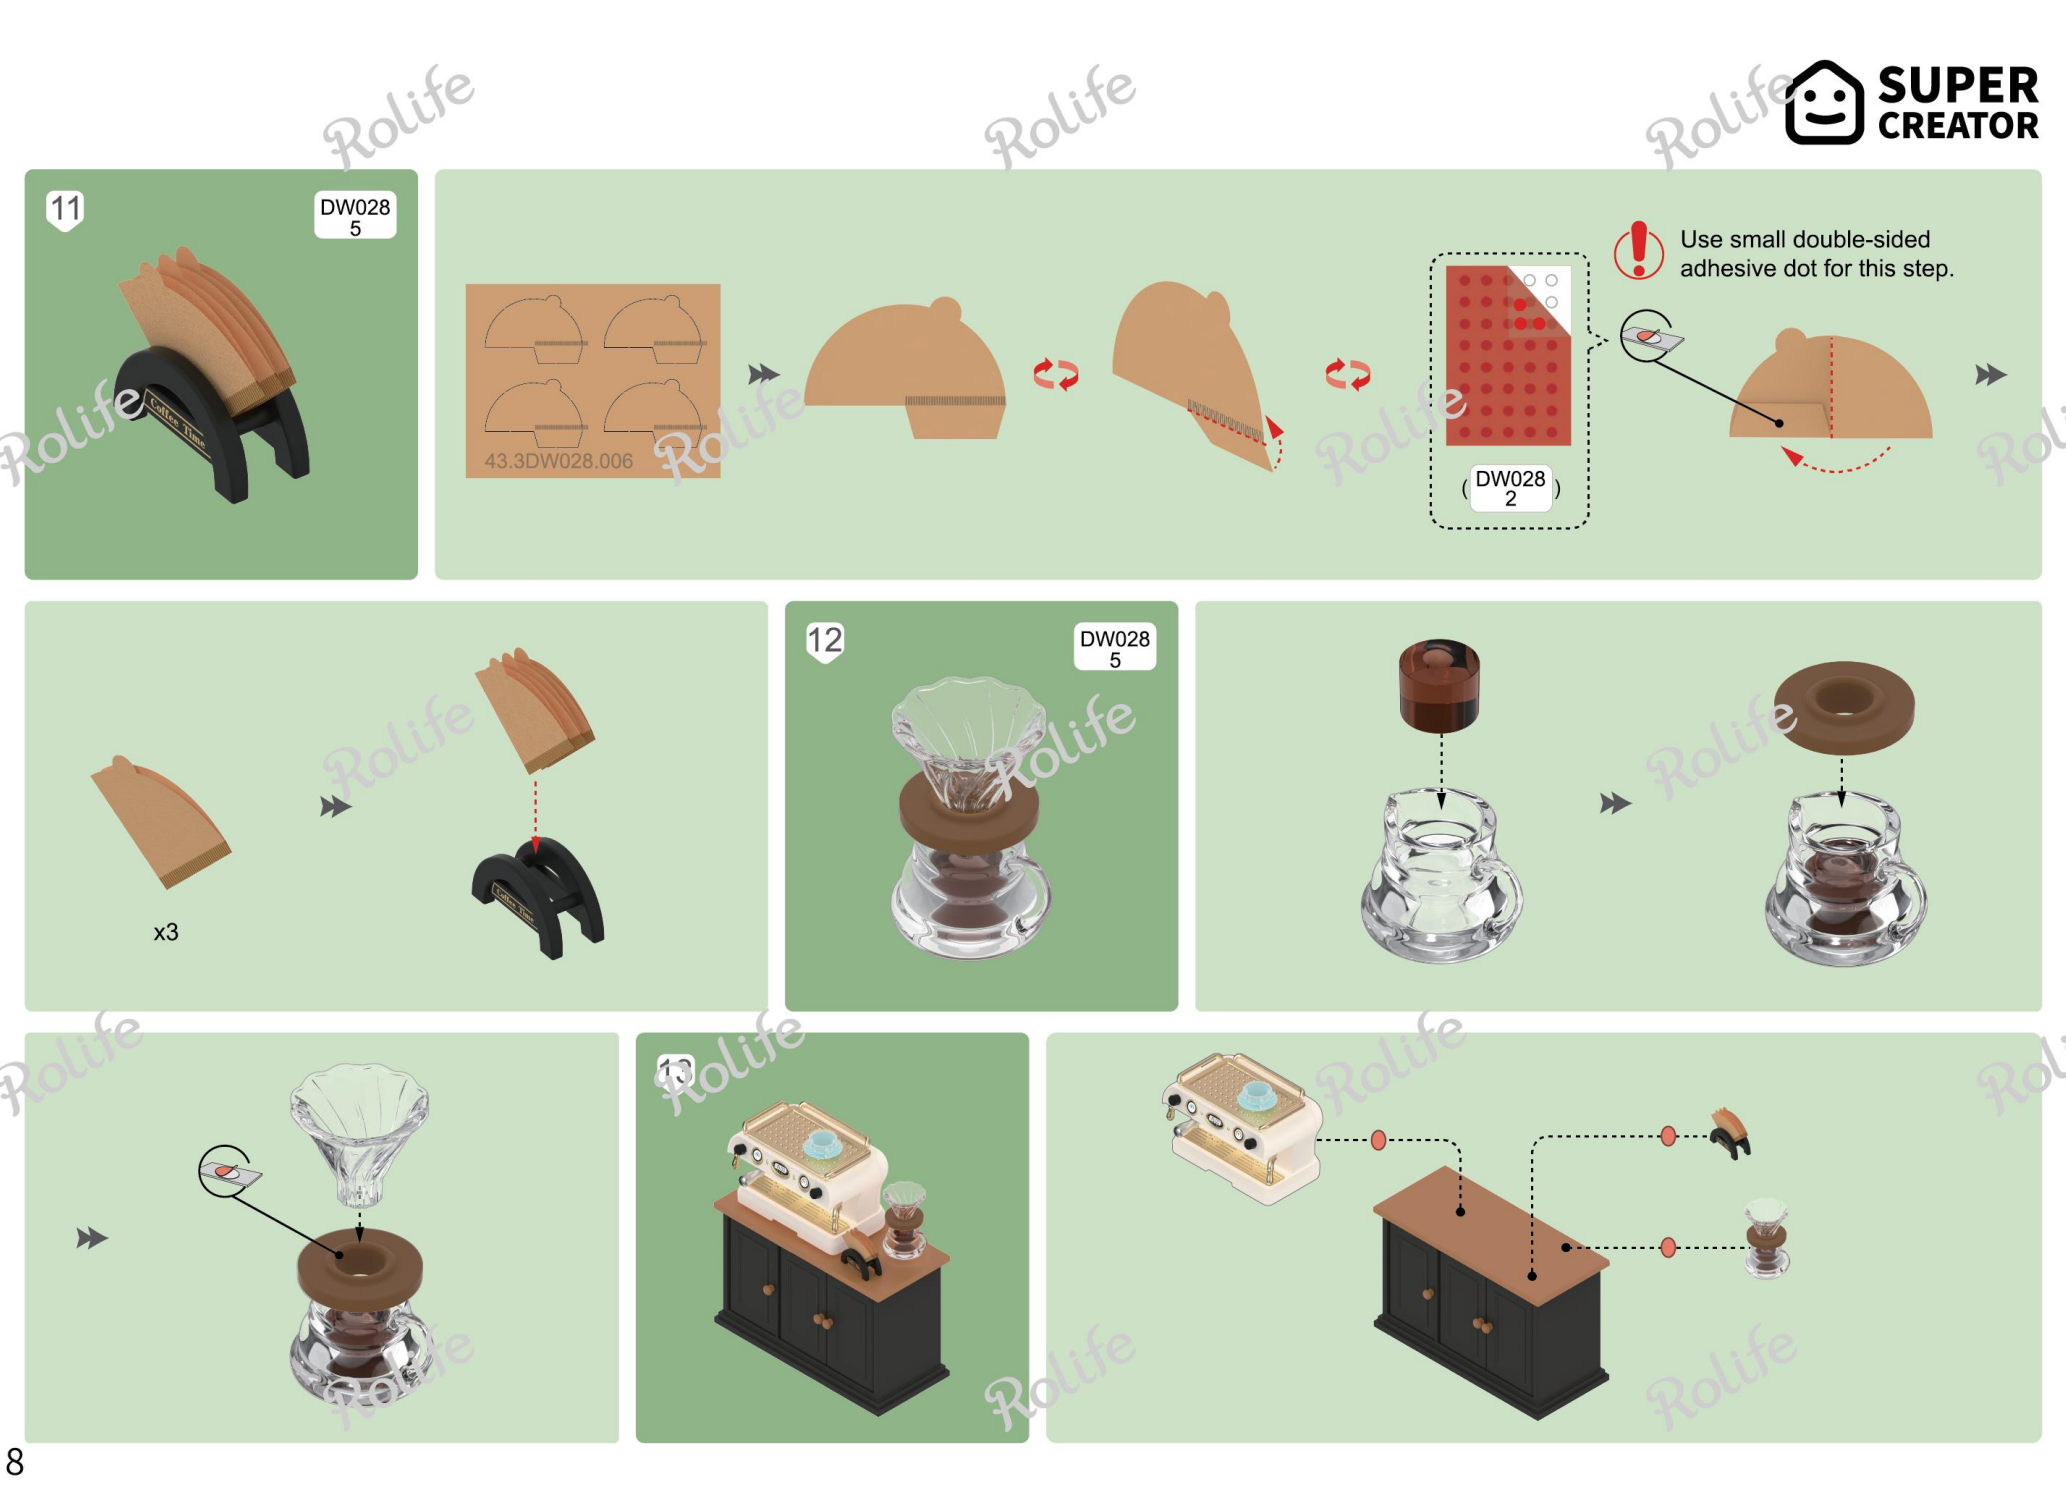

Use small double-sided adhesive dot for this step.

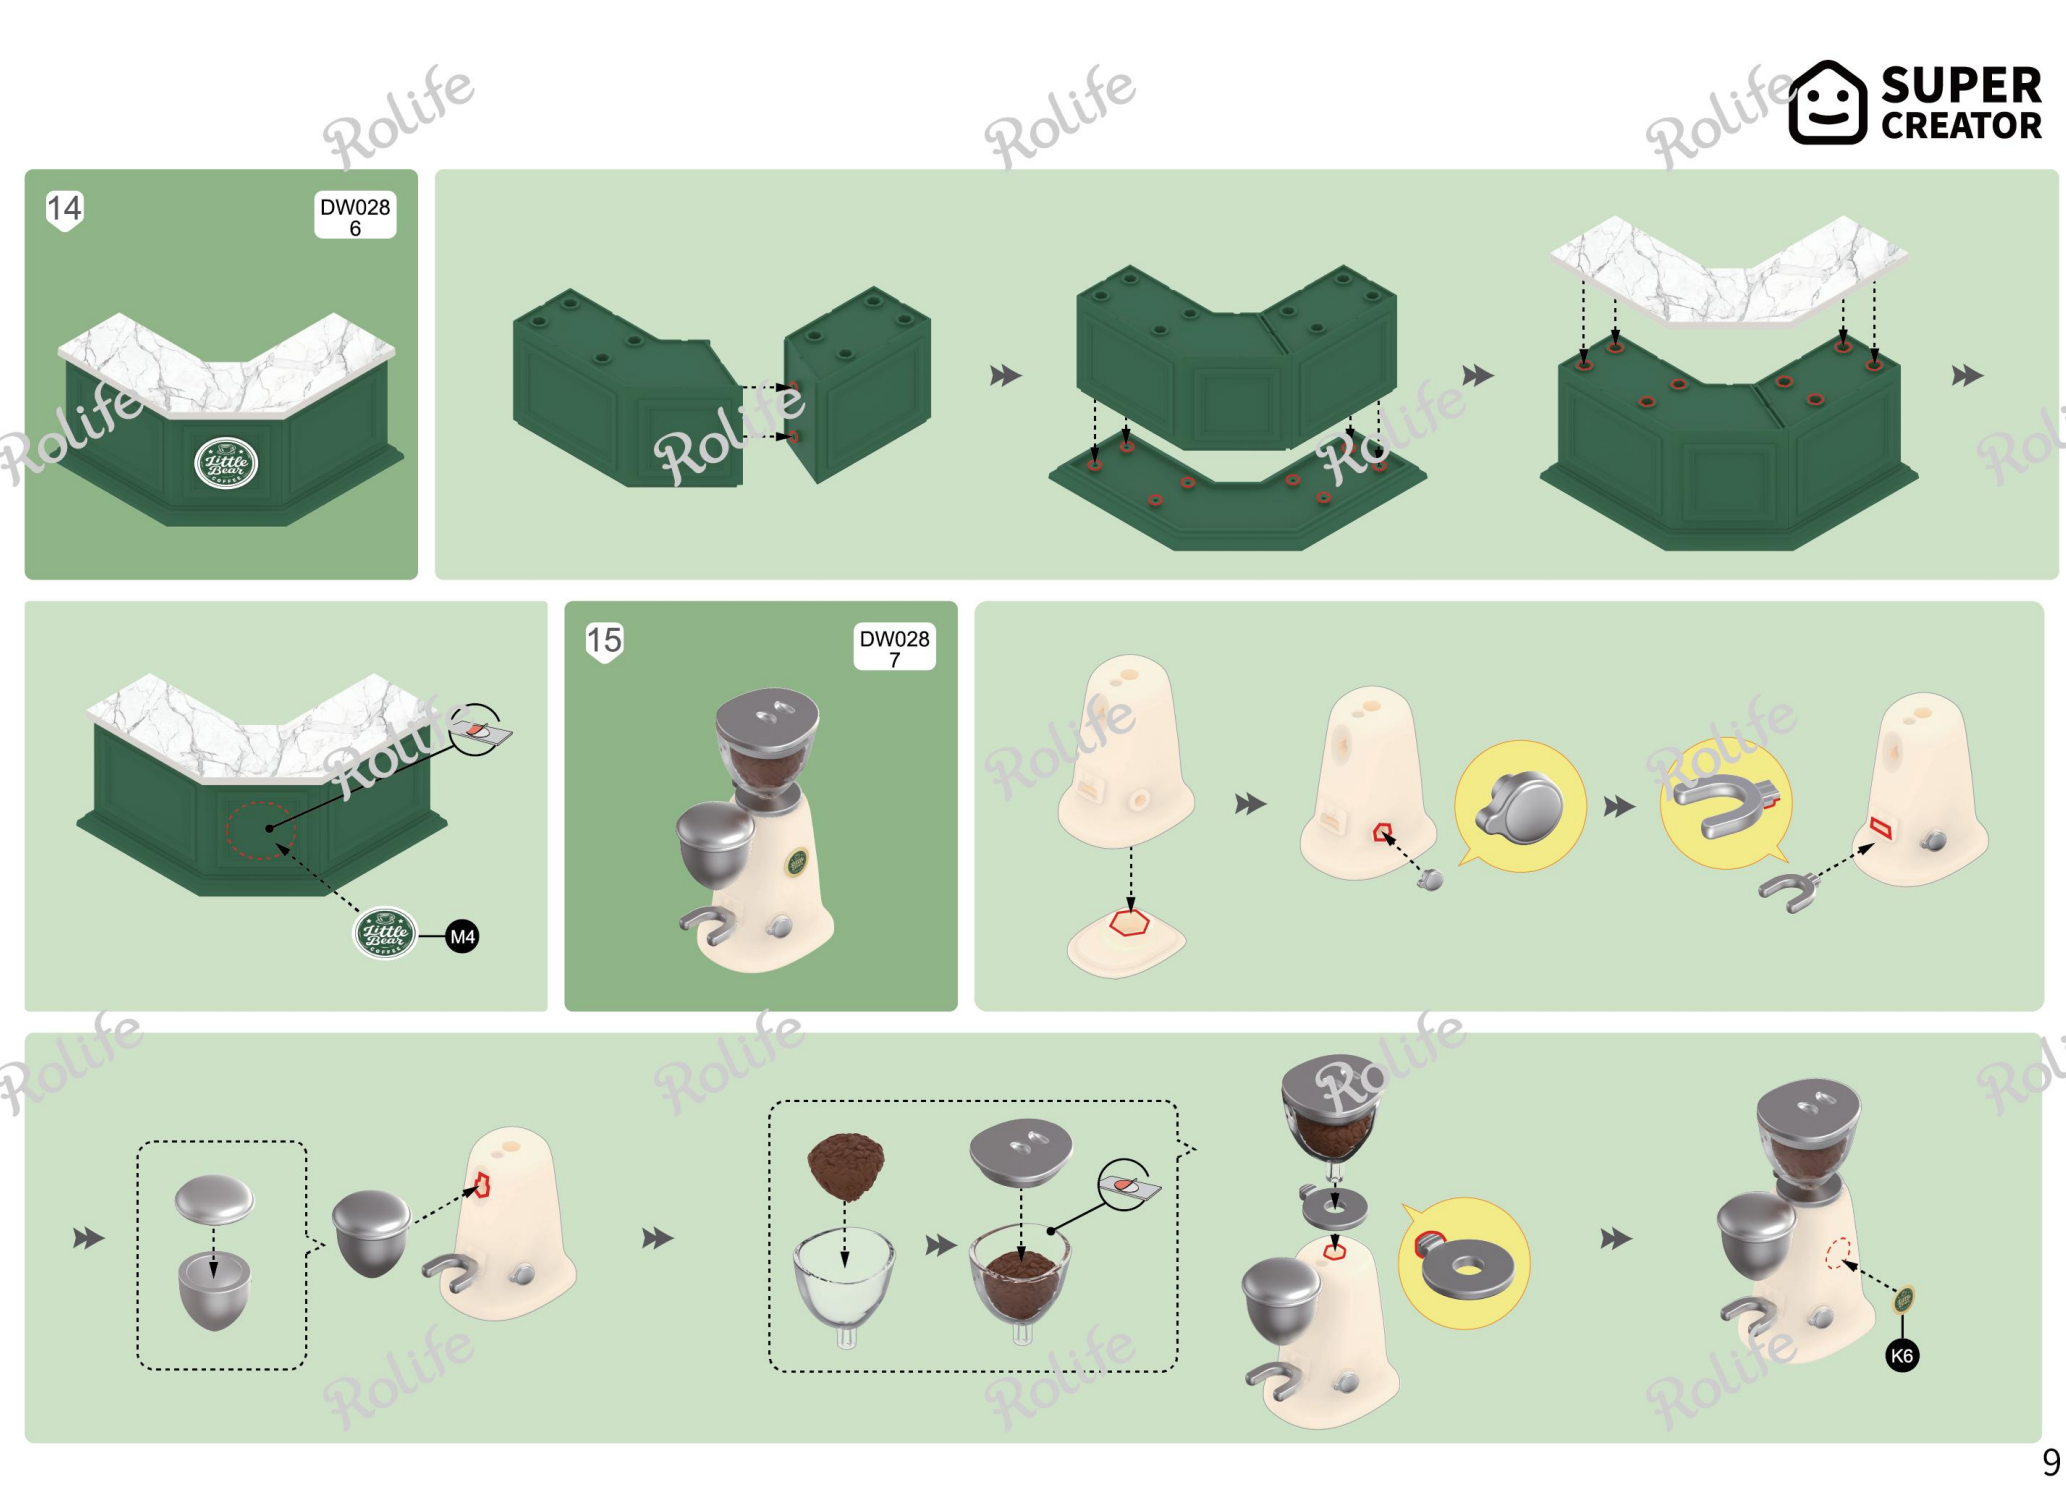

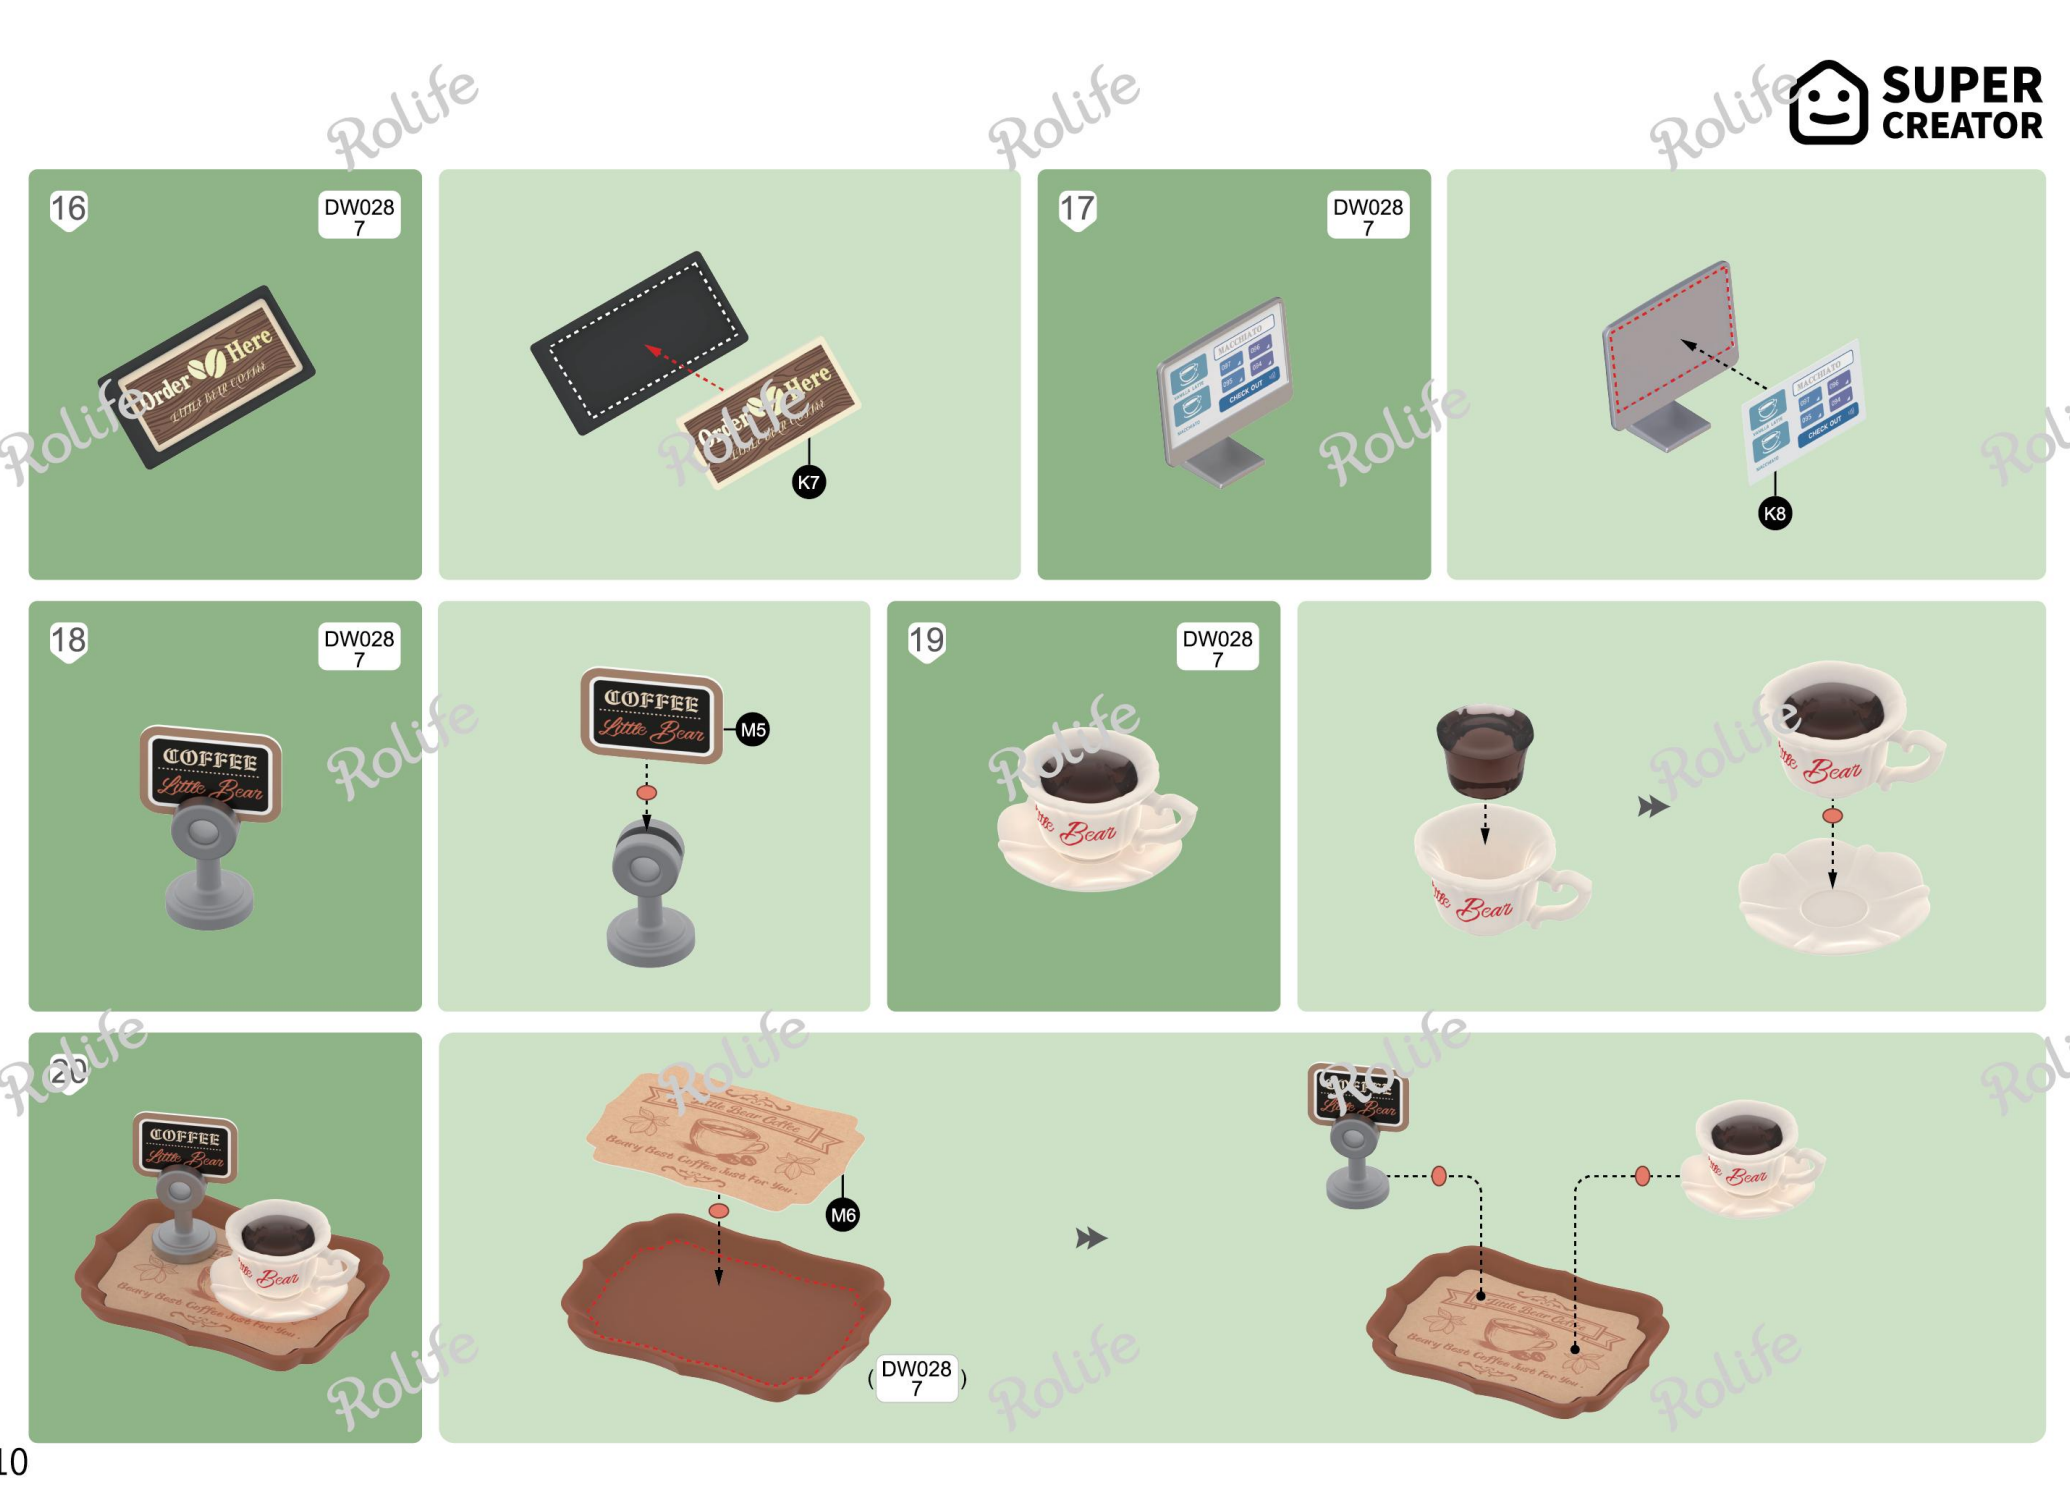

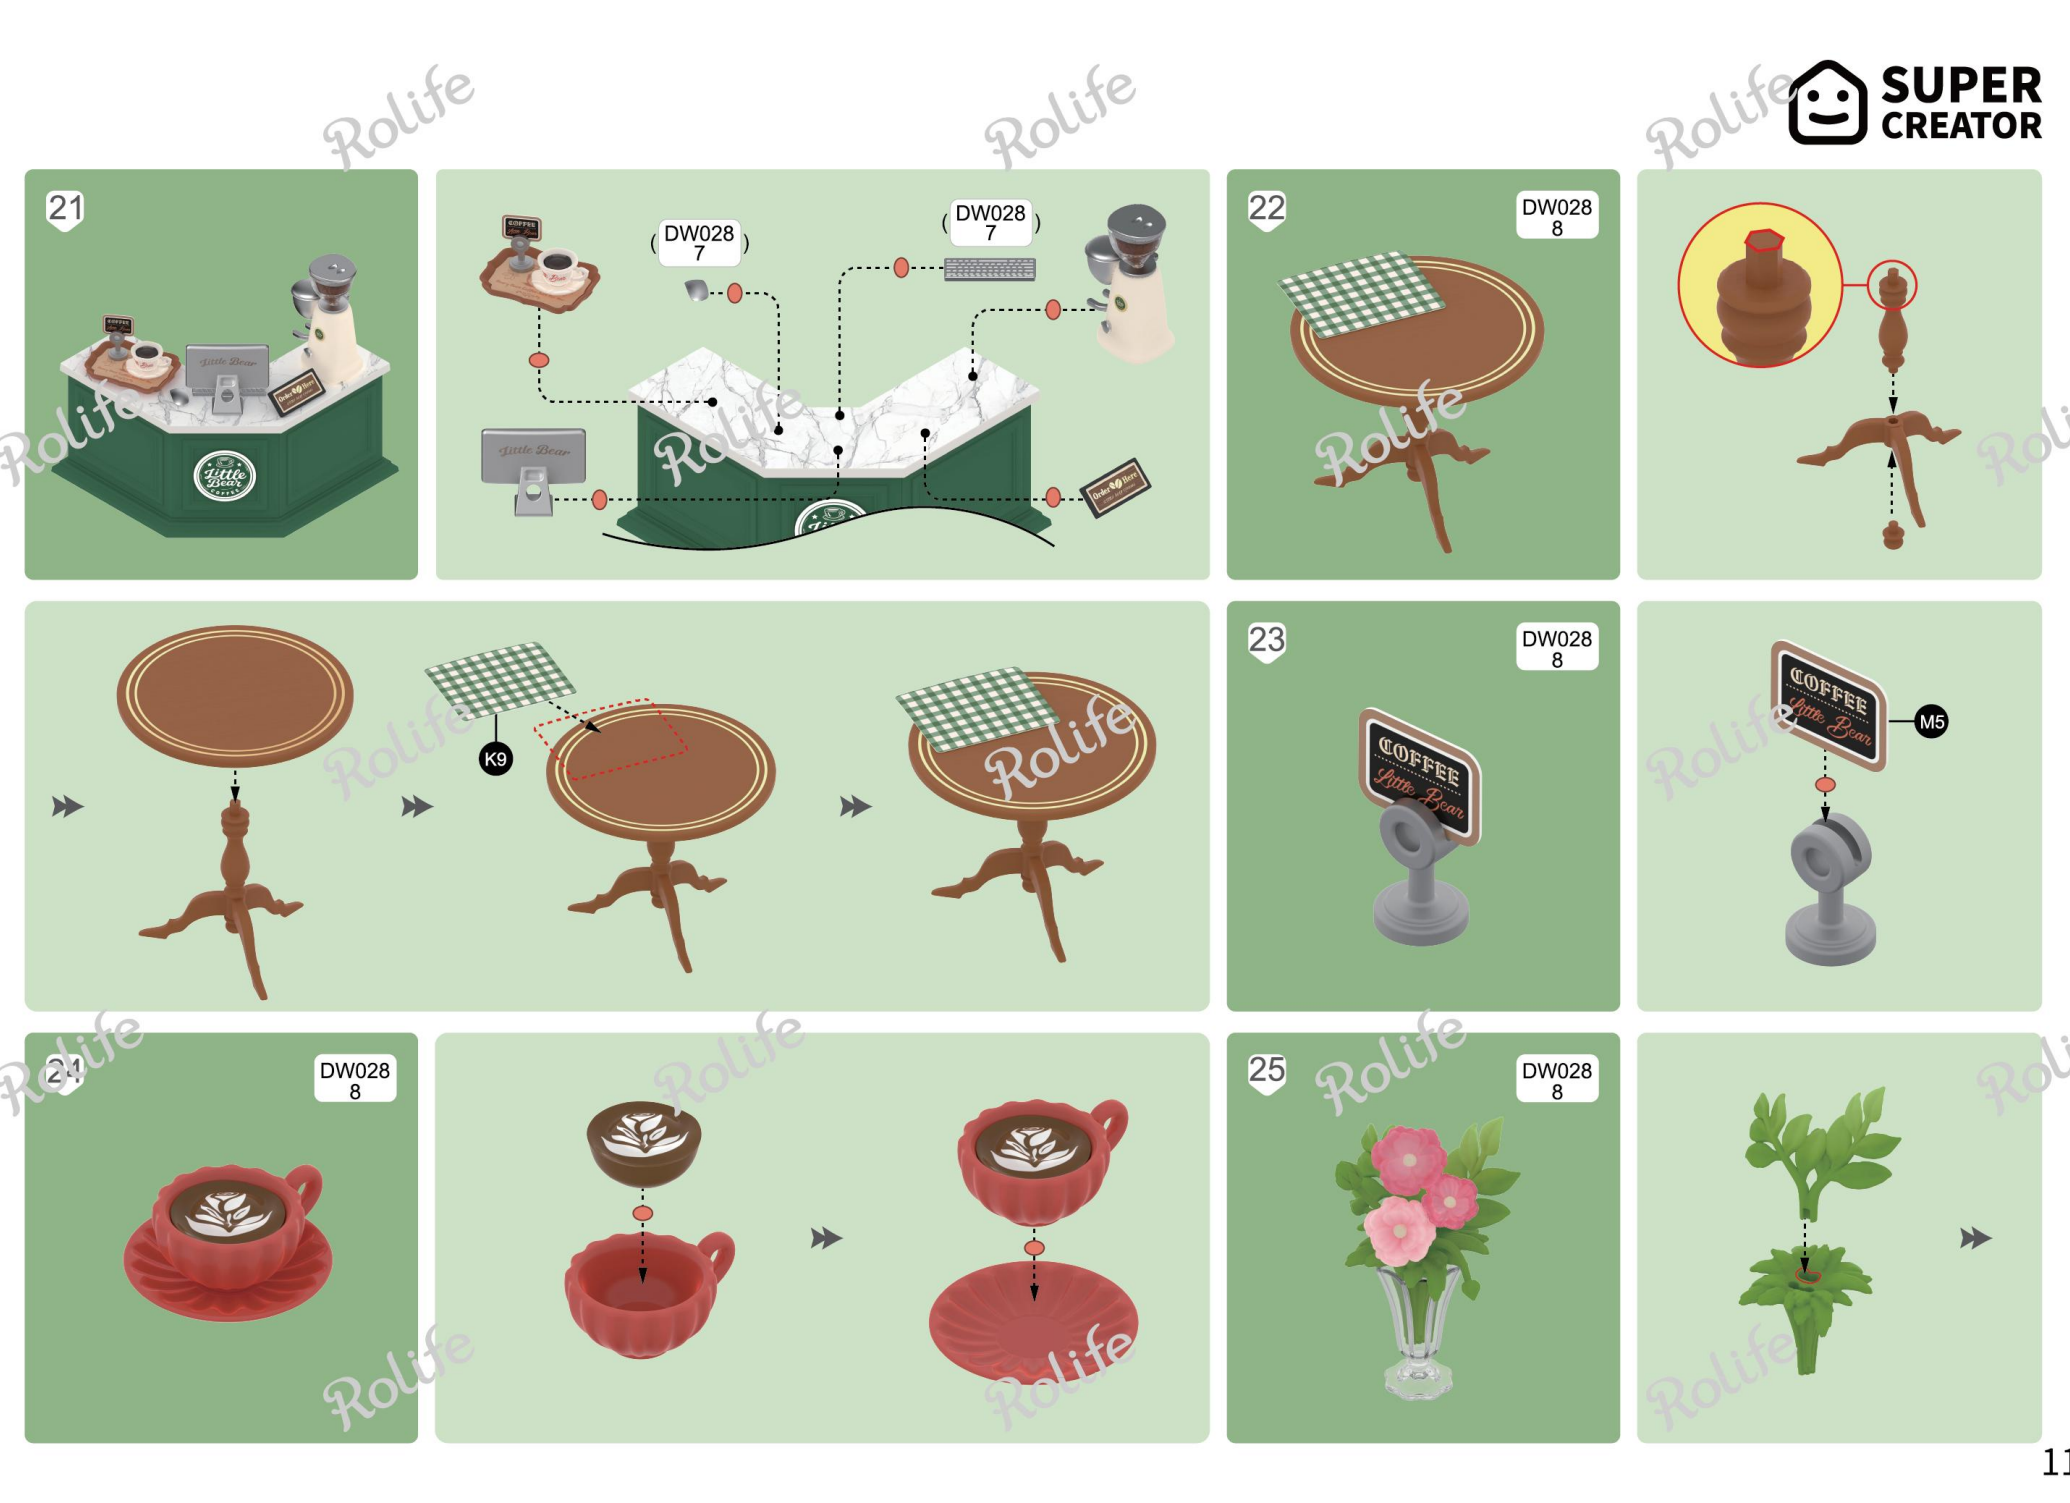

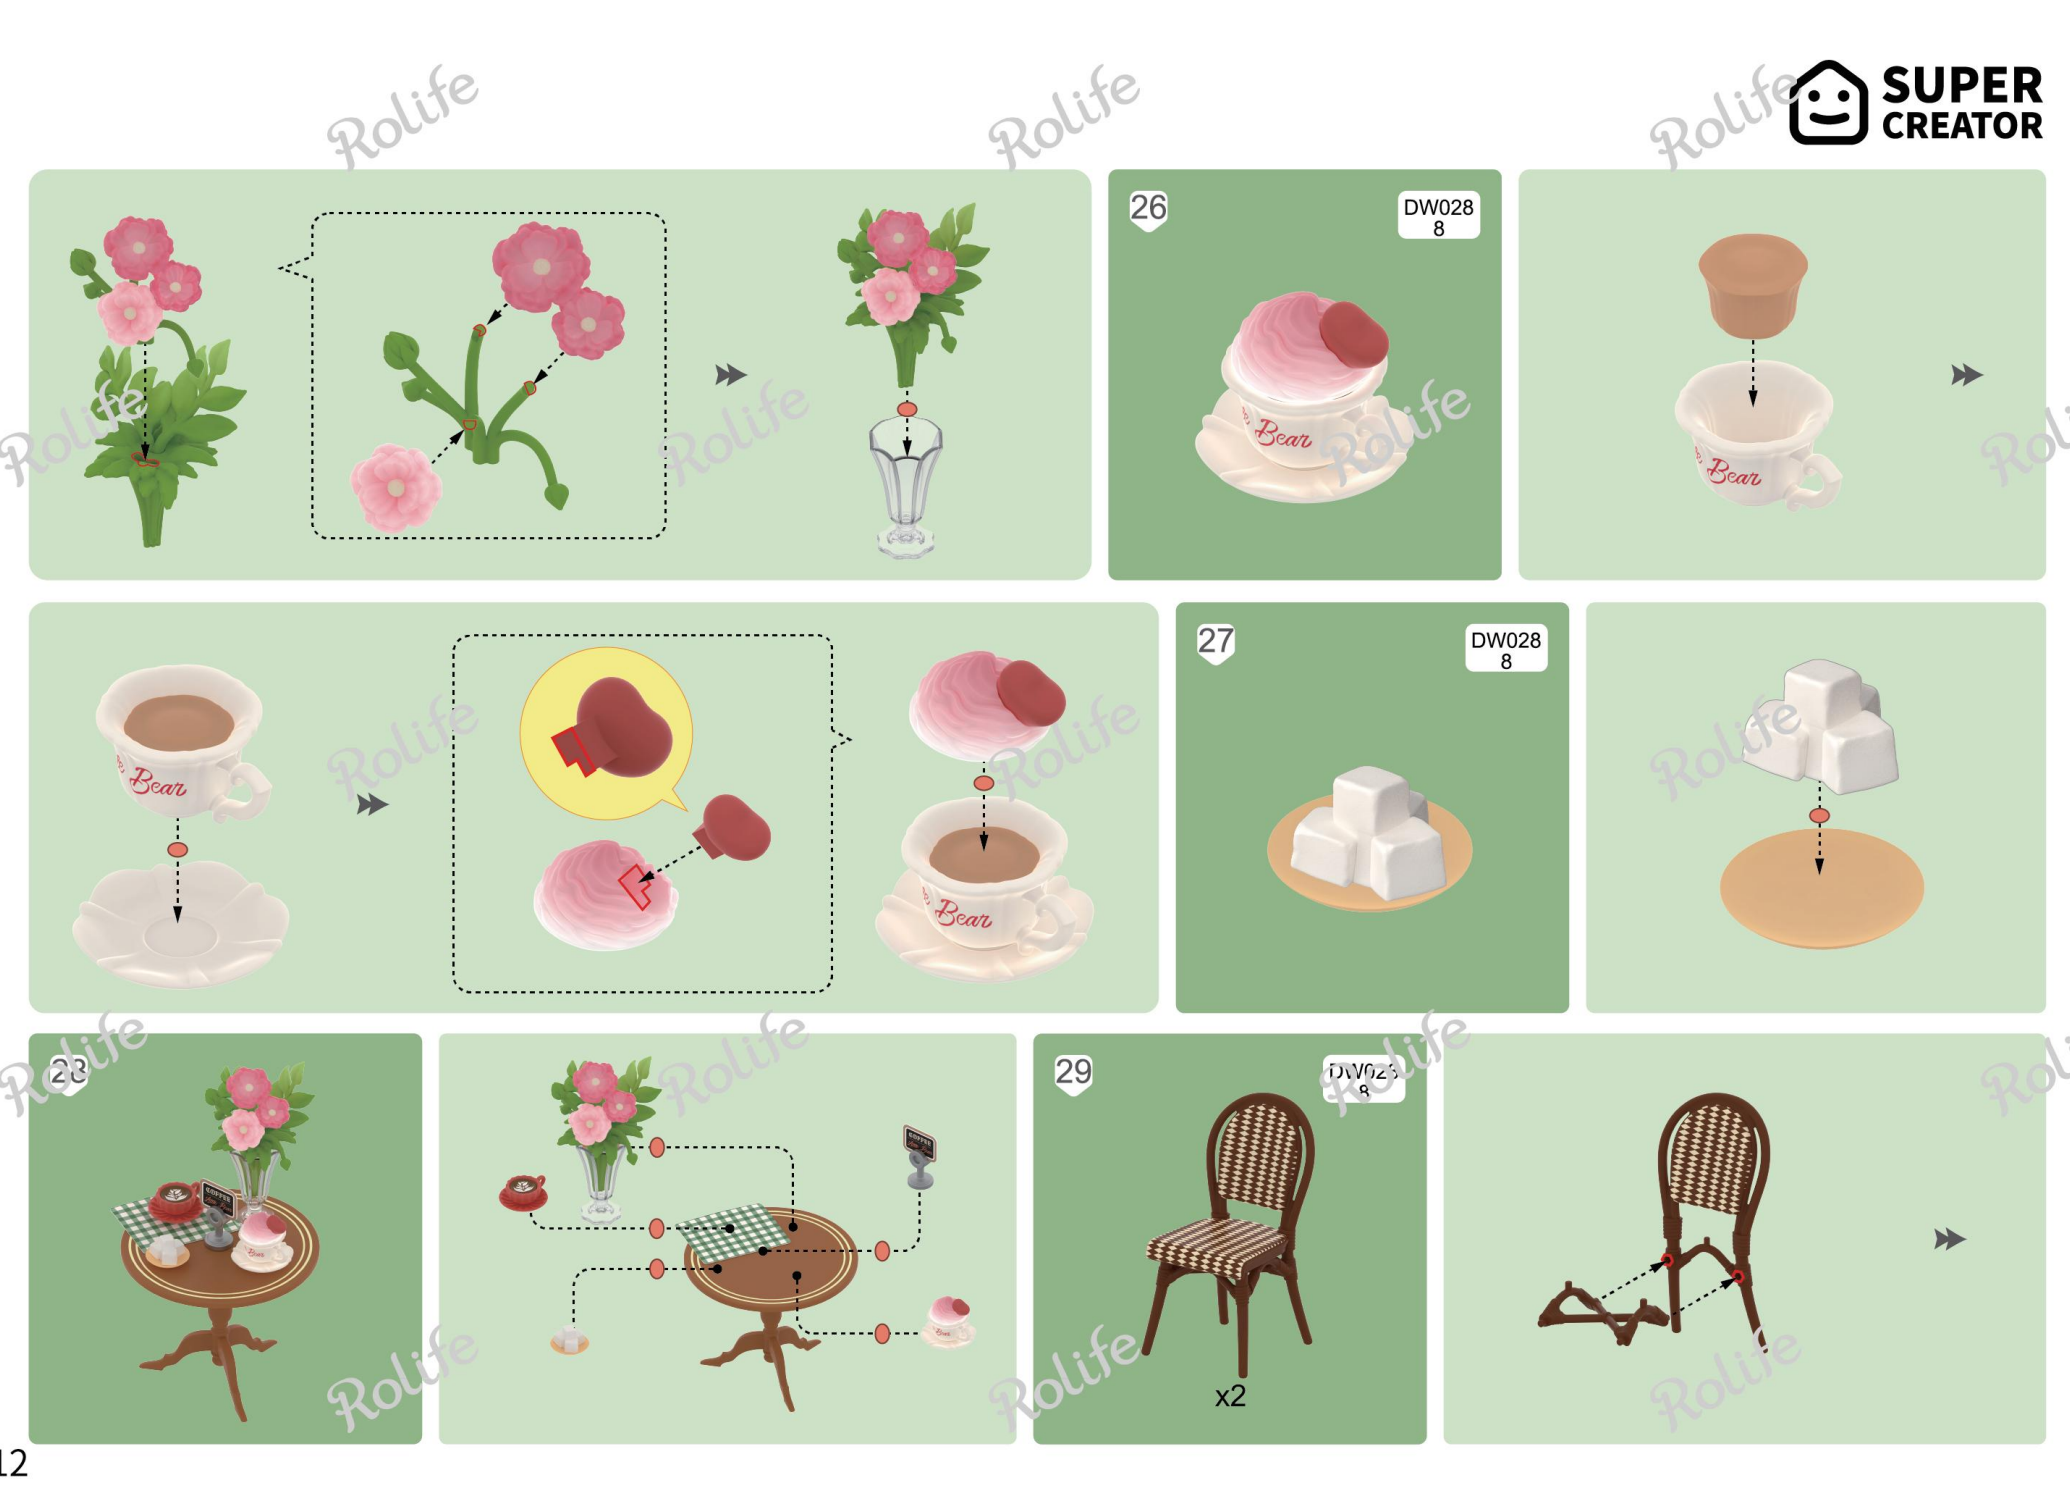

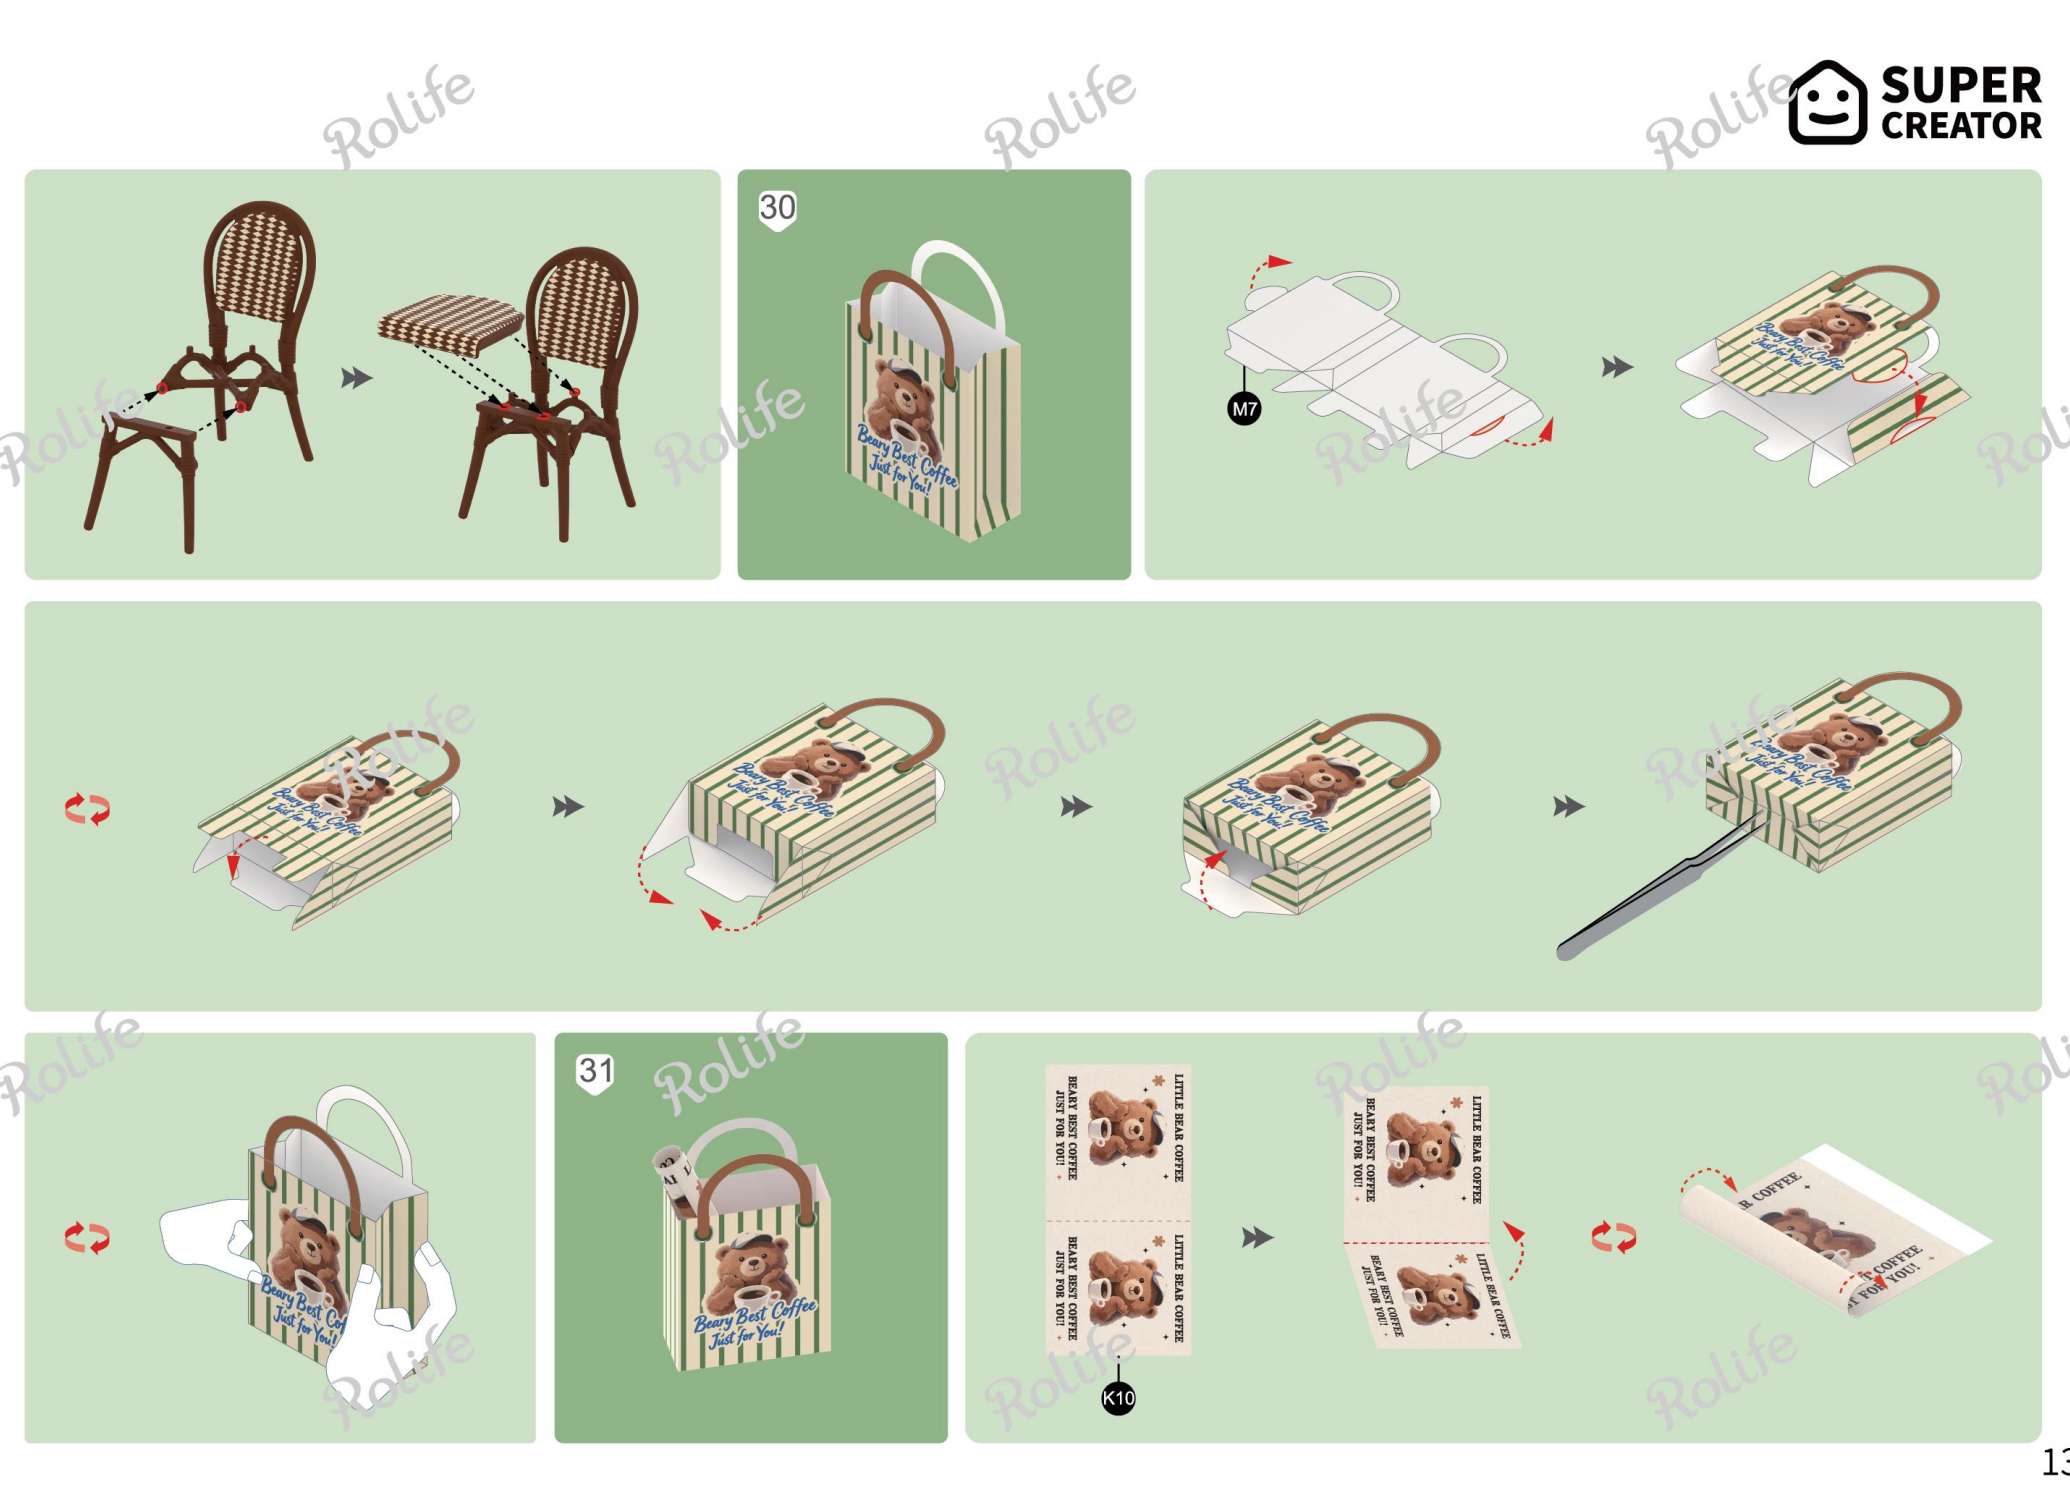

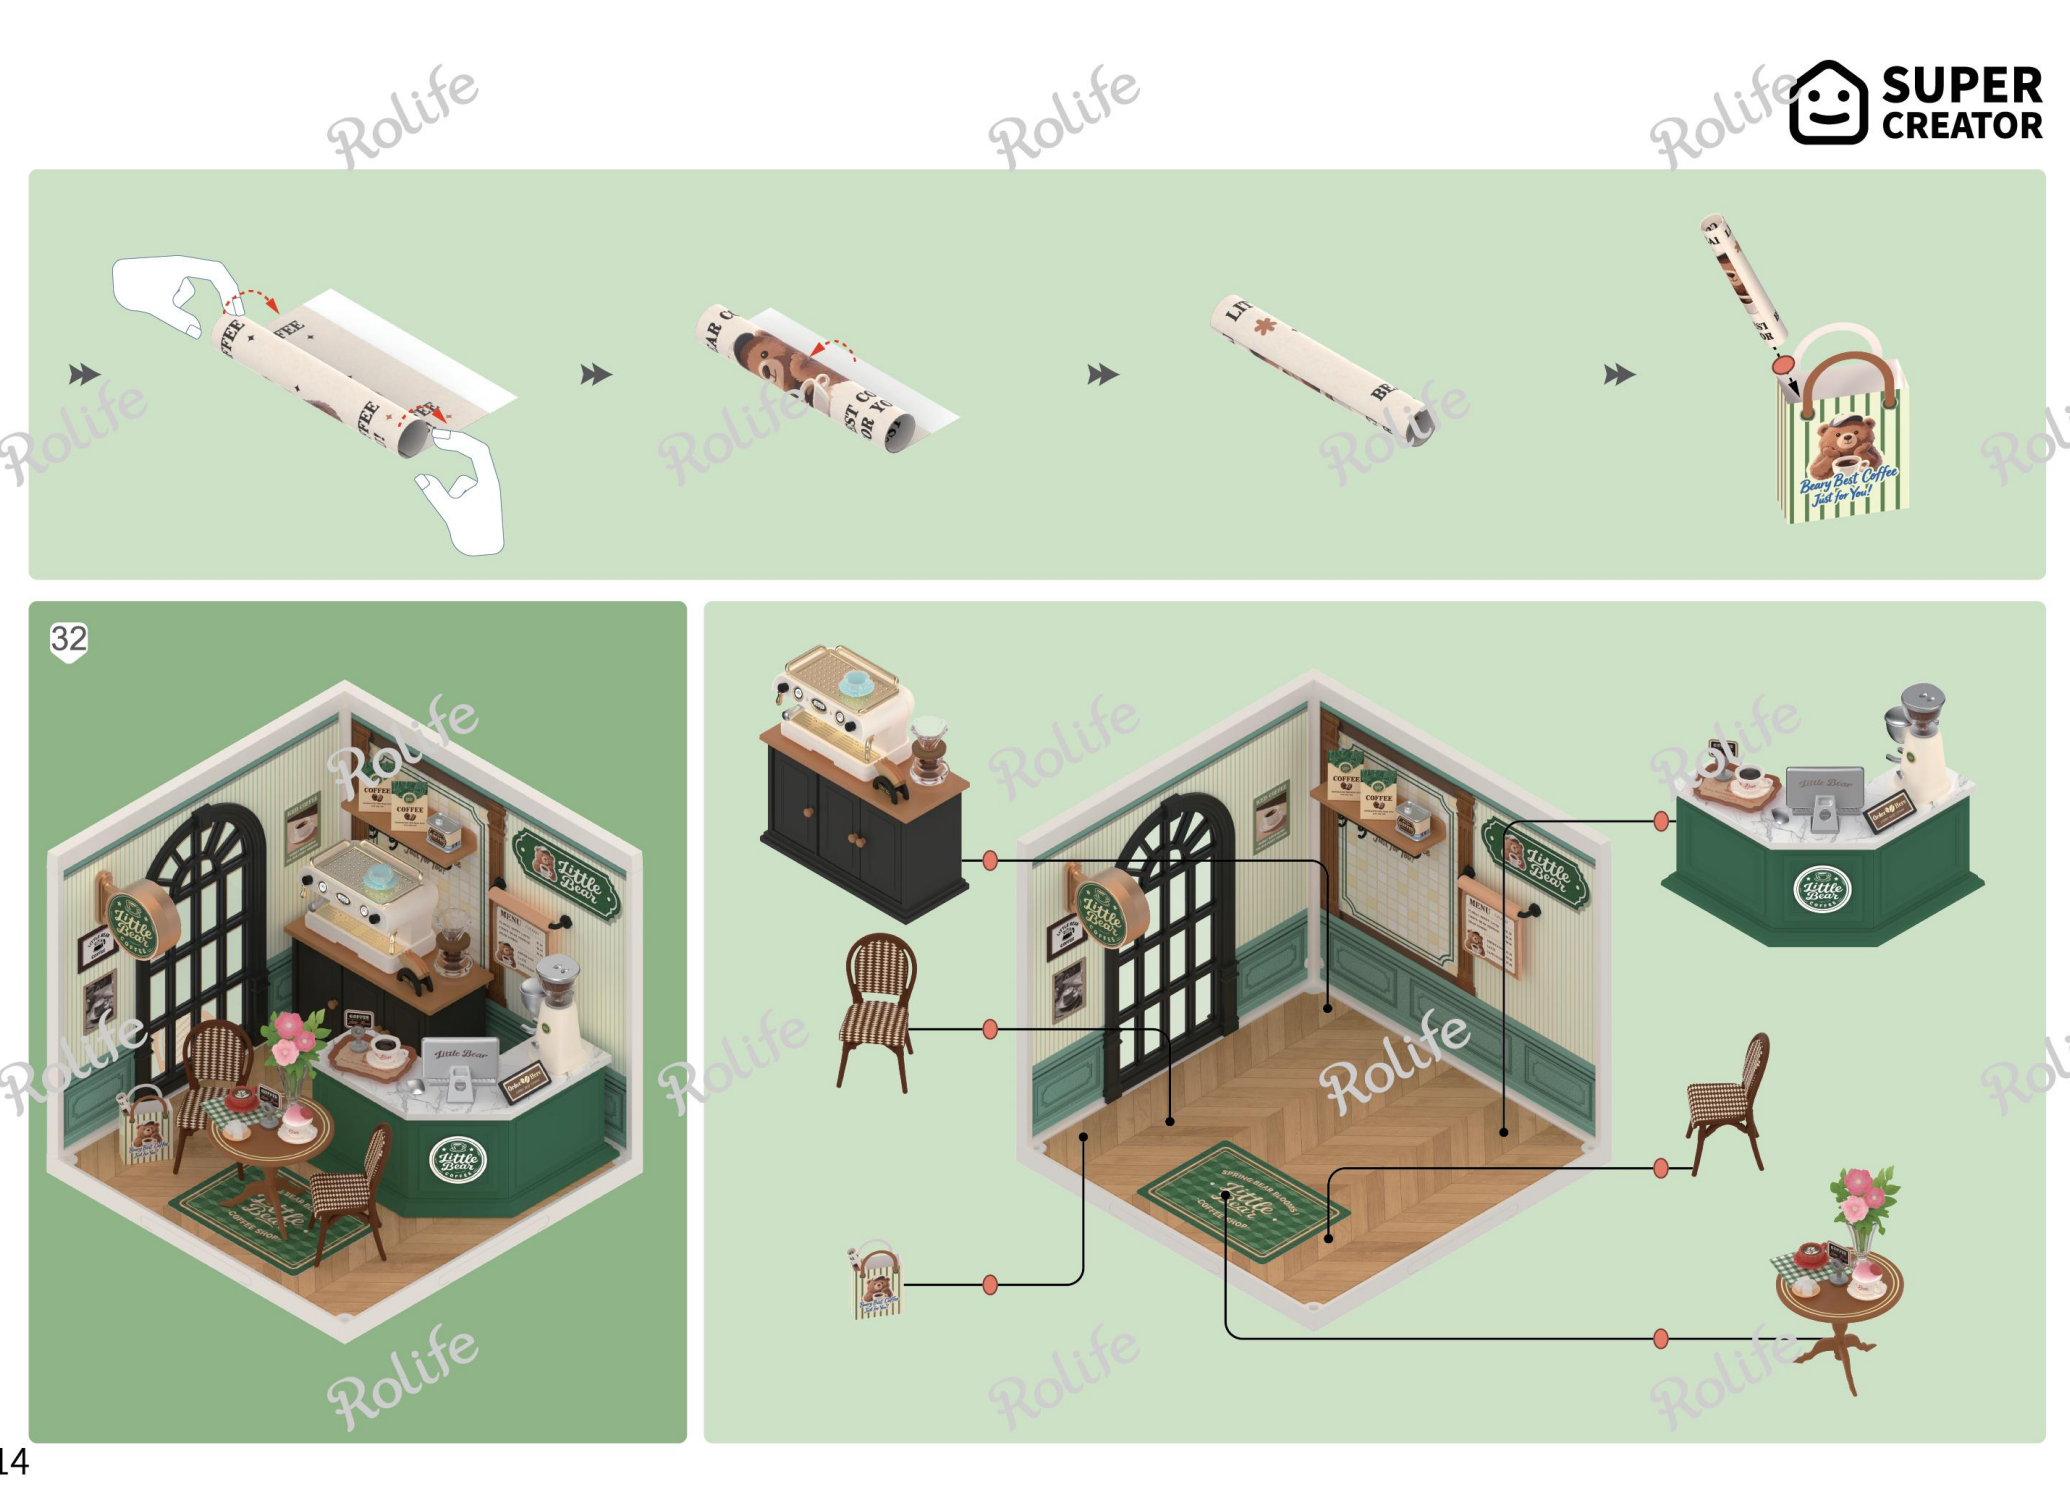

## 06 Add some other tricks

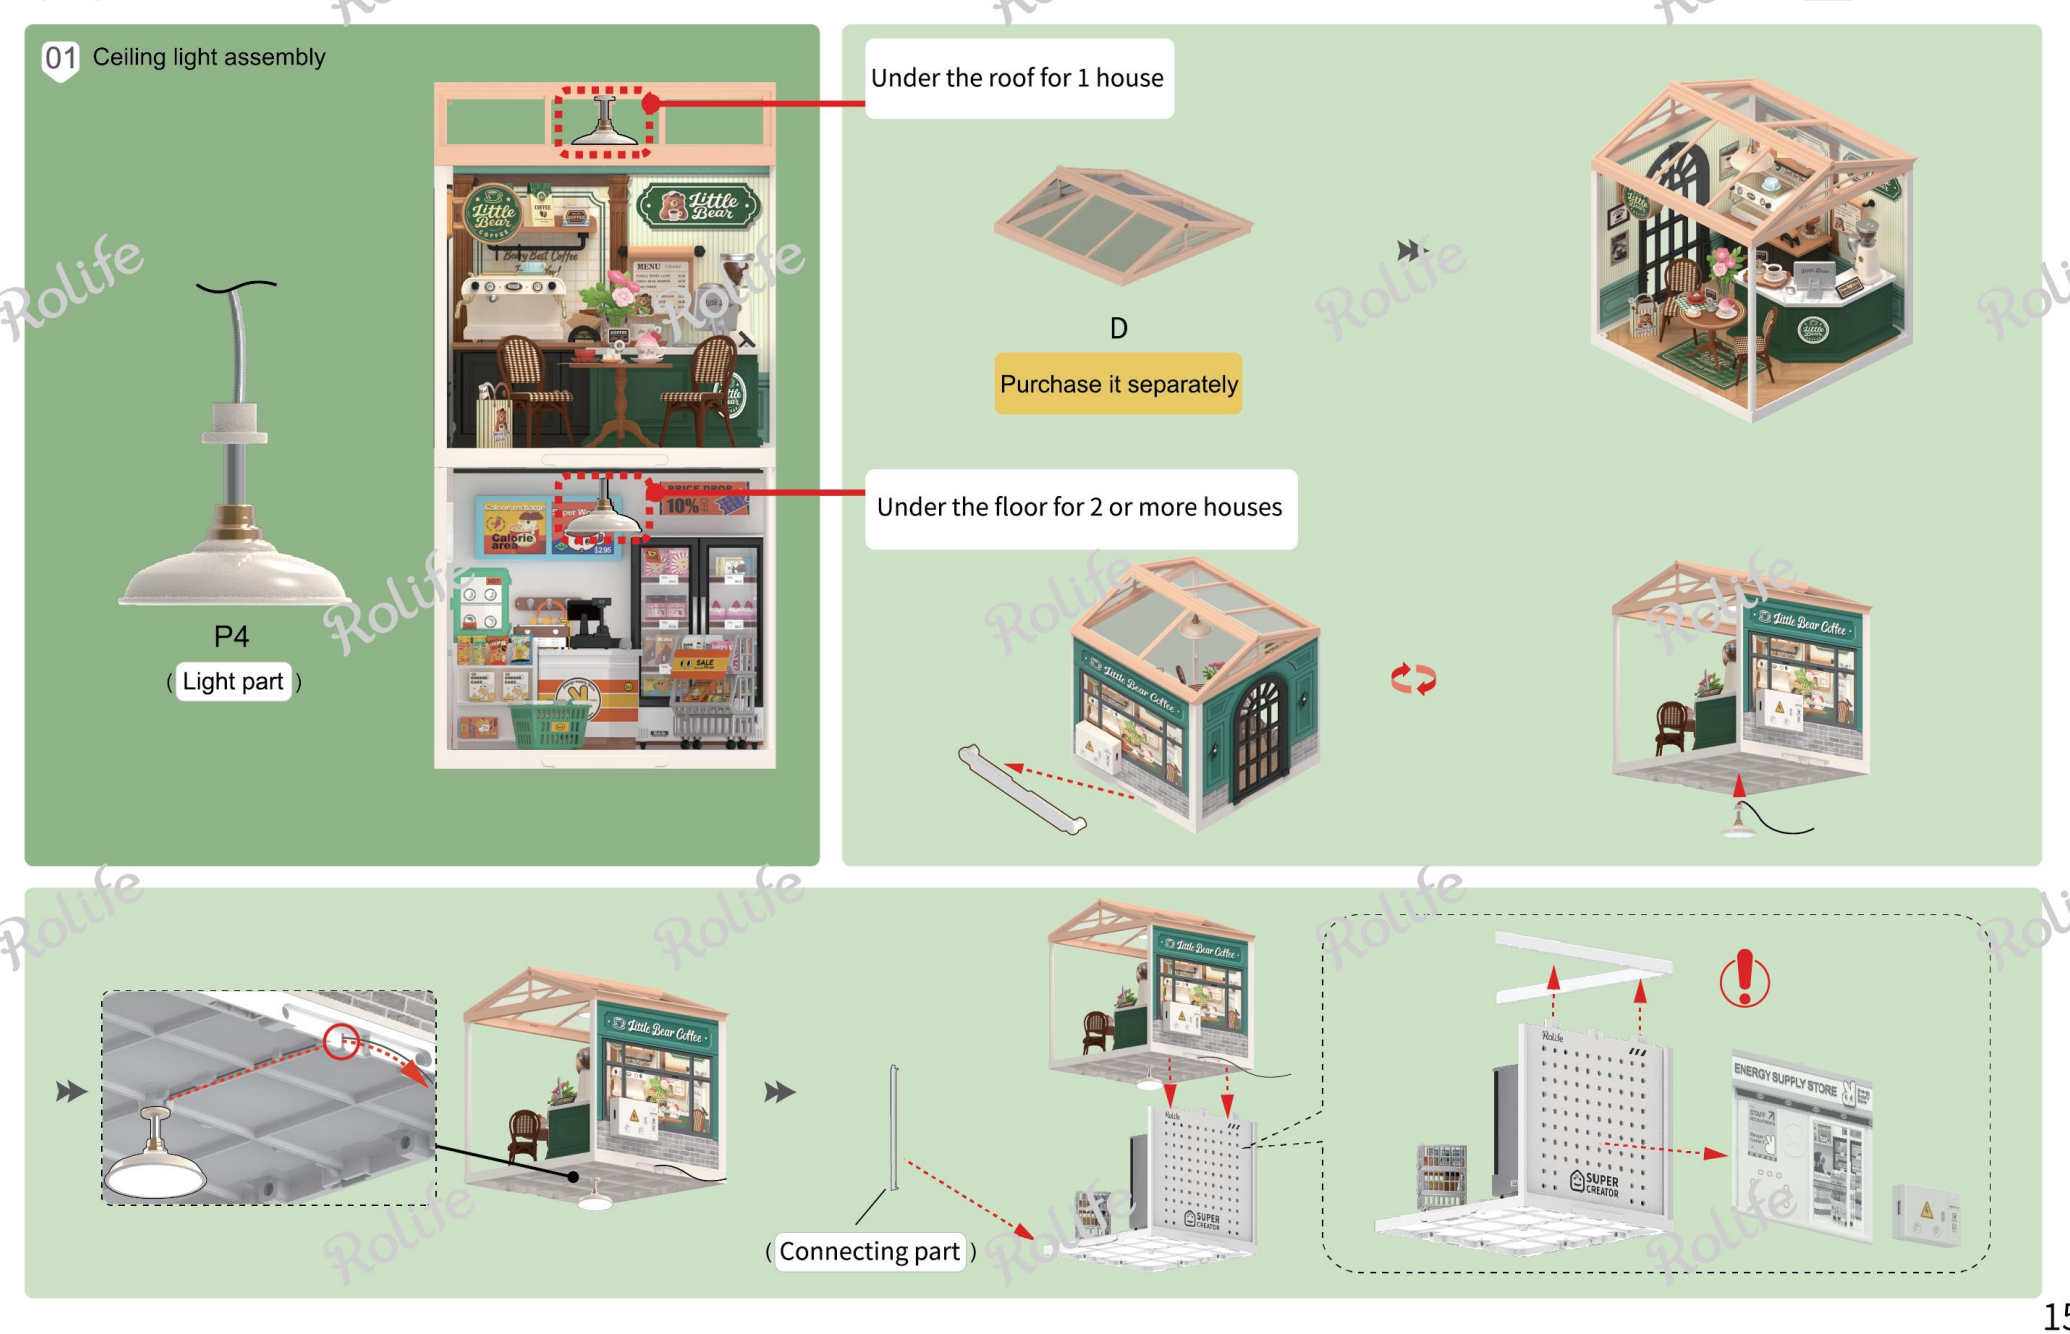

01 Ceiling light assembly
P4
( Light part )
Under the roof for 1 house
D
Purchase it separately
Under the floor for 2 or more houses
( Connecting part )

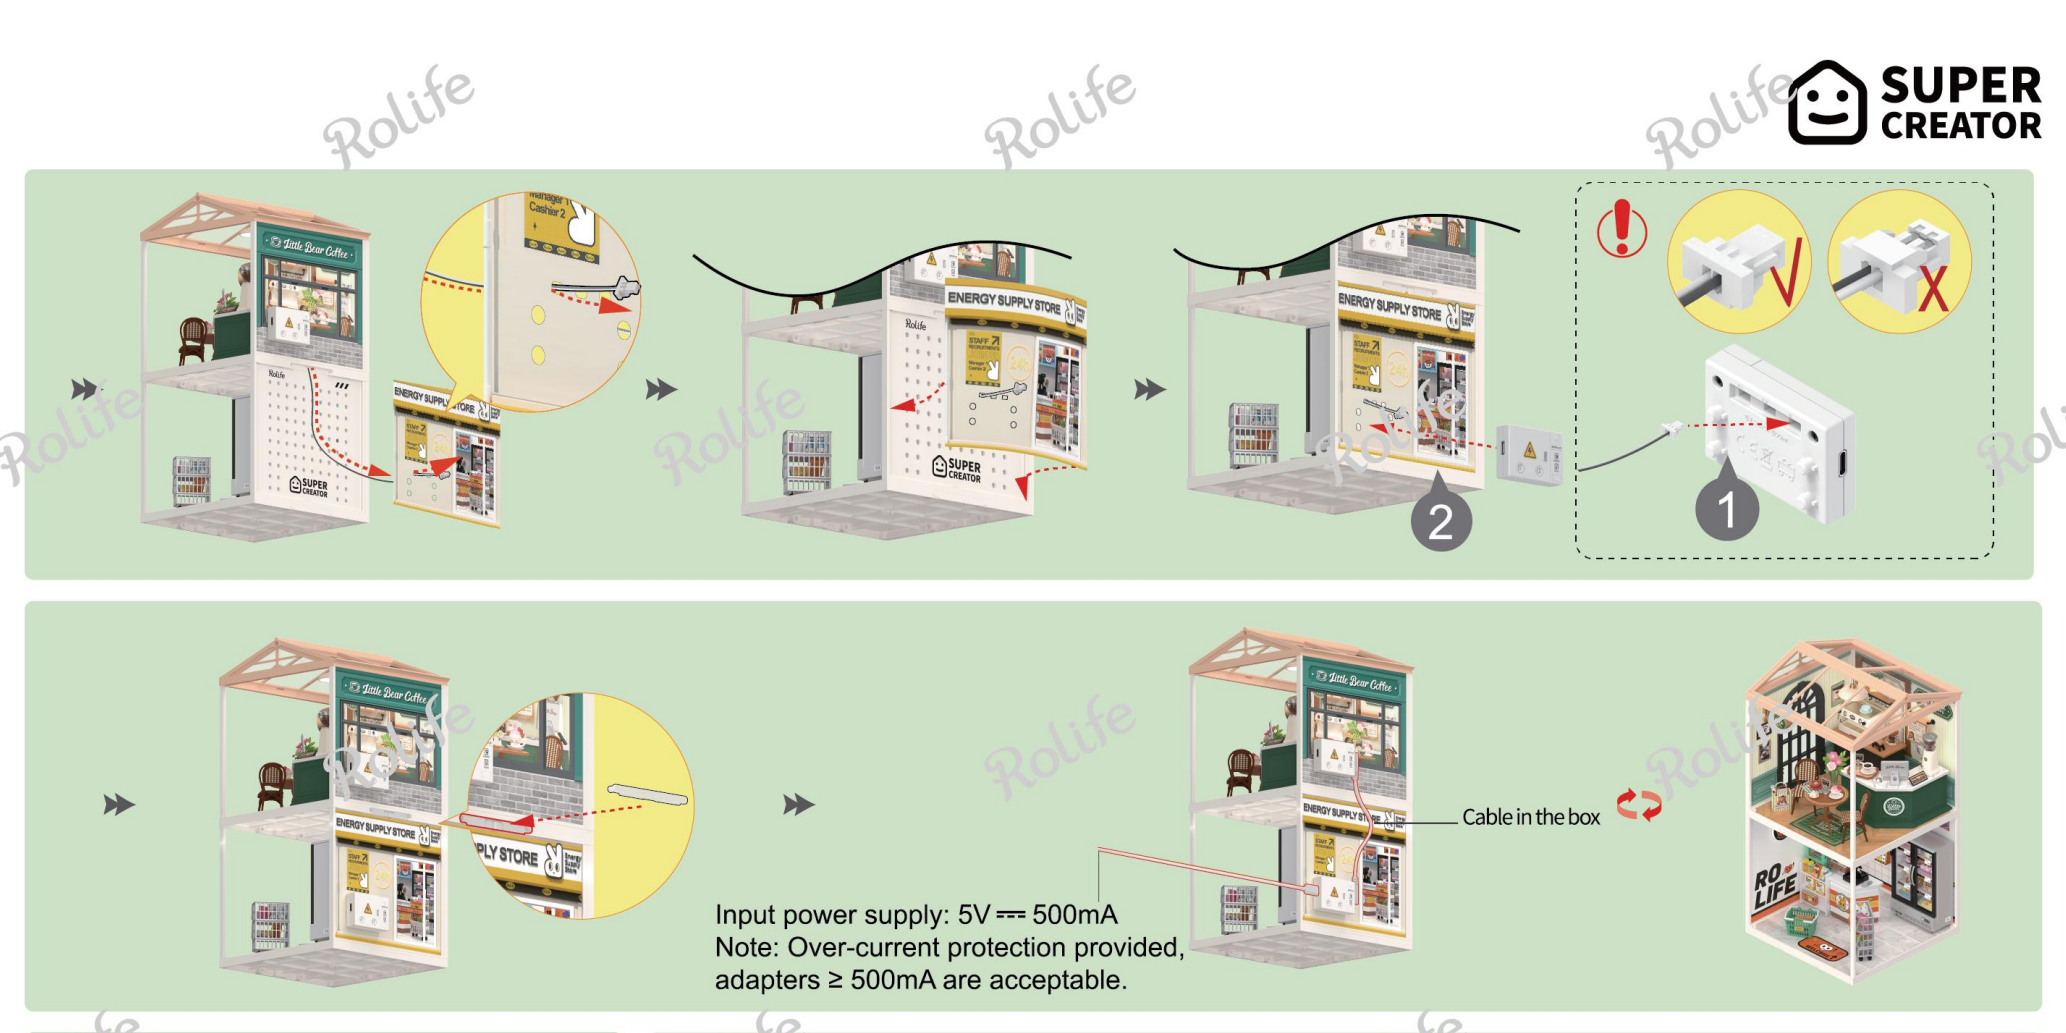

Input power supply: 5V ⎓ 500mA
Note: Over-current protection provided, adapters ≥ 500mA are acceptable.

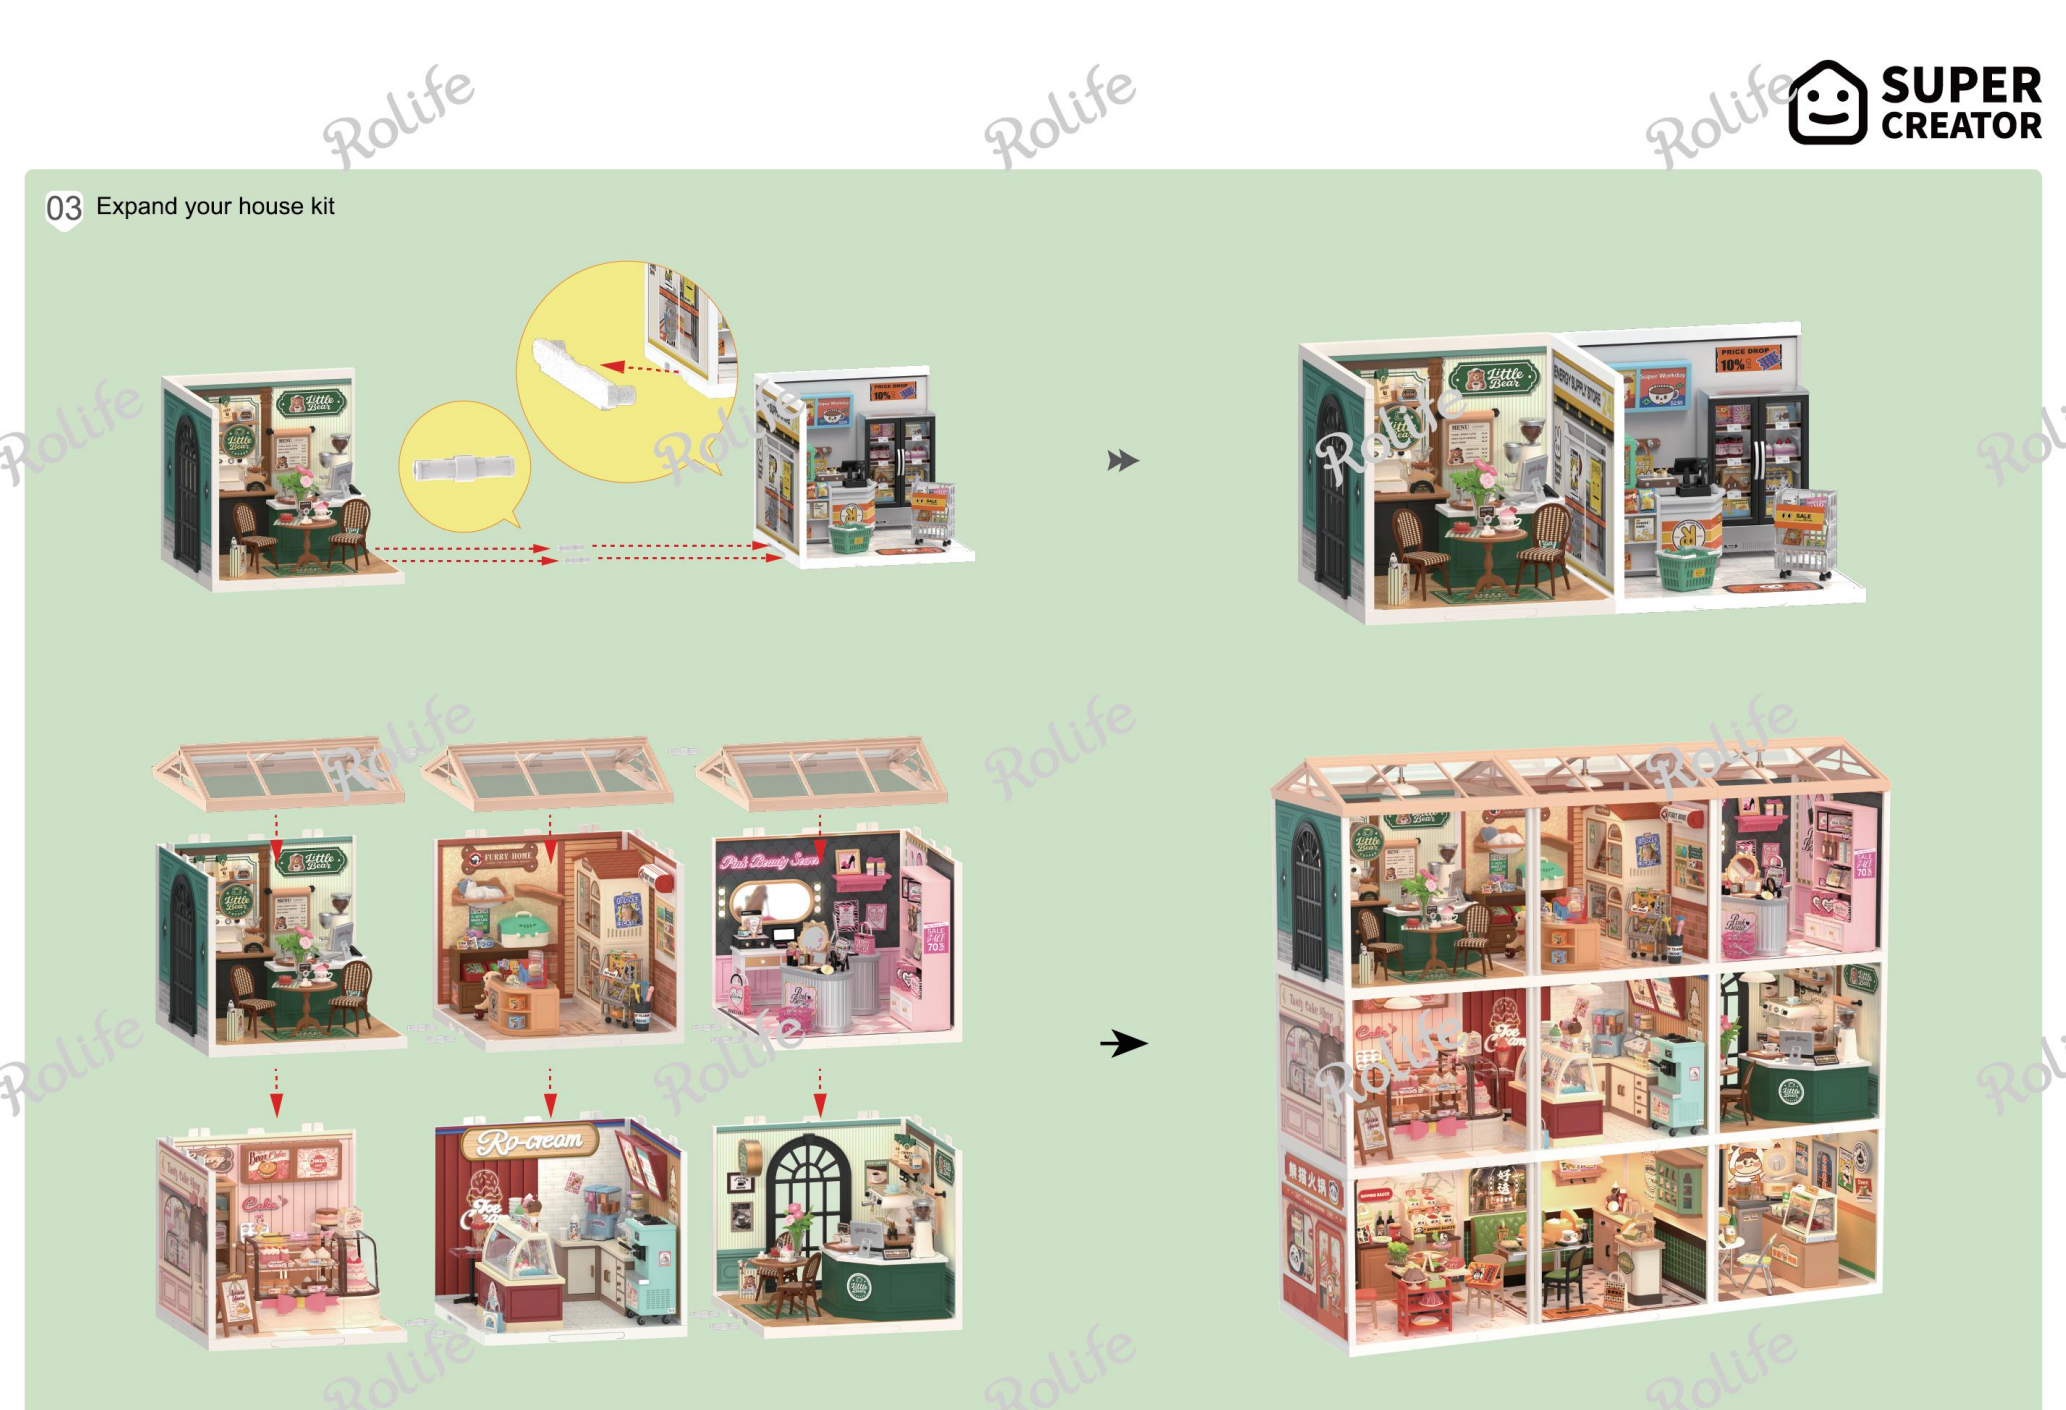

**MANUFACTURER:**
Robotime C&C ( Jiangsu) Co., Ltd.

**AFTER-SALES SERVICE CONTACT:**
service@robotime.com

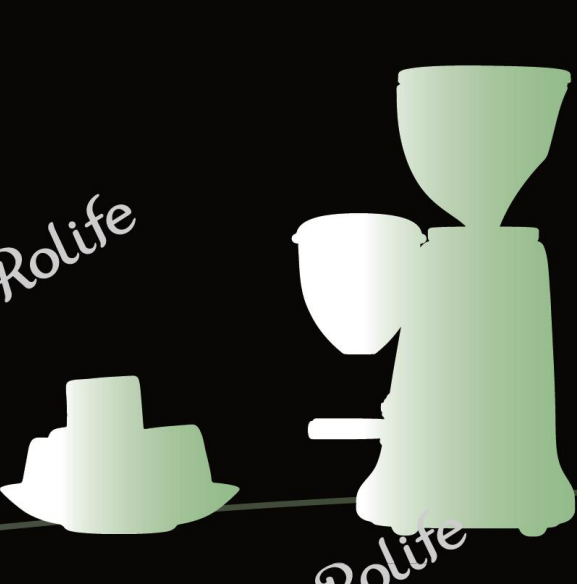

49.1DW028.100