Rolife

Gingerbread House

DIY3Dpz



Pictures for reference only. Please subject to our existing products.

Assembly tips



Put small parts into the bag to prevent loss.



Remove the part by pressing its back to reduce burrs.



Polish the edges with sandpaper if there are burrs on pieces or it 's hard to insert.

Tips of assembling

1. All the dimension in the instruction is shown in millimeter.
2. The included double-sided tape is an auxiliary tool for sticking. Glue needs self-preparation.
3. Do not stick and peel the double-sided tape repeatedly, considering its initial tack.
4. Only the tool icon appears in the assembly step.
5. Check if the light parts are securely welded.

Part number illustration

Refer to the part number paper, find the piece, and compare it with the 1:1 figure. Then assemble it after confirmation. (Only for wooden pieces marked with 🔑)



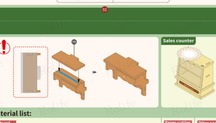
Part list illustration

1. Compare part bags with the part list before assembling to ensure all parts are included.
2. Find the part referring to the part number in the part list, and compare the part with the illustration to ensure it is right before assembling.



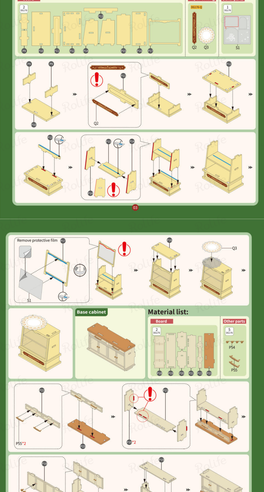
Tools required

(The right of the arrow "➡" corresponds with the tool icon.)

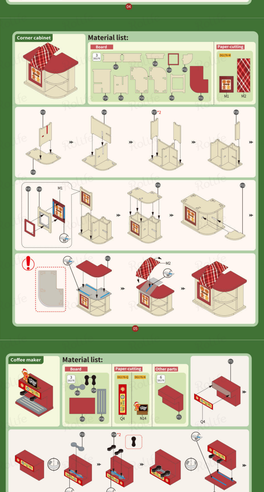


1 Sandpaper (Bag No. 1)
2 Double-sided tape (Bag No. 1)
3 Tweezers (Bag No. 4)
4 Screwdriver (Bag No. 4)
5 Tool (Separation)
Scissors

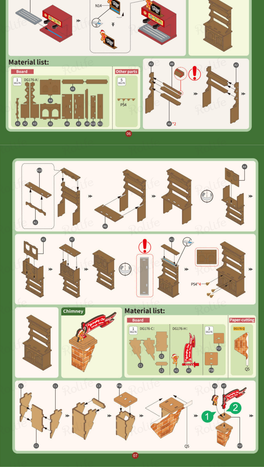
01



02



03



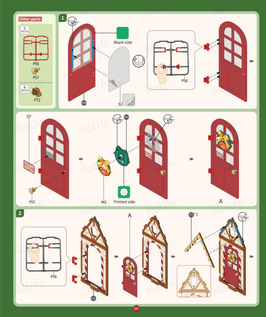
04

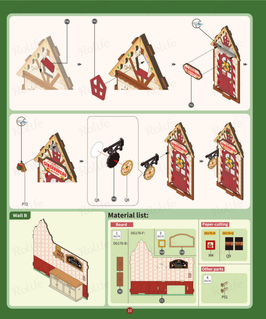
05

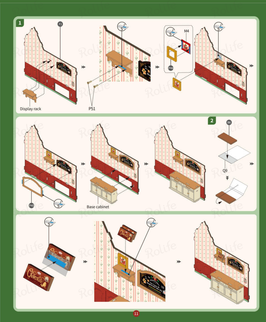
06

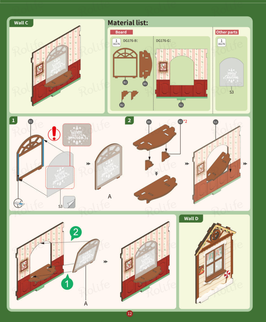
07

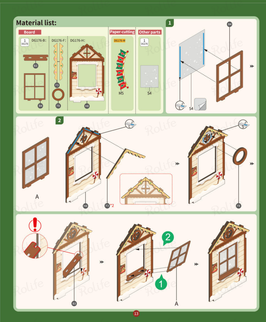

Christmas tree
Material list:
Wall A
Material list:

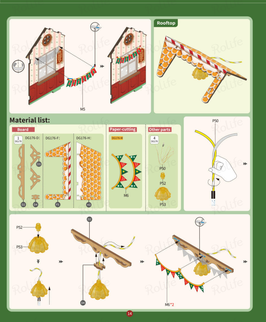

Other parts
Blank side
Printed side

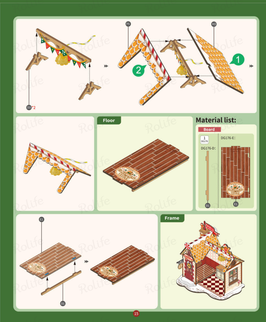

Wall B
Material list:

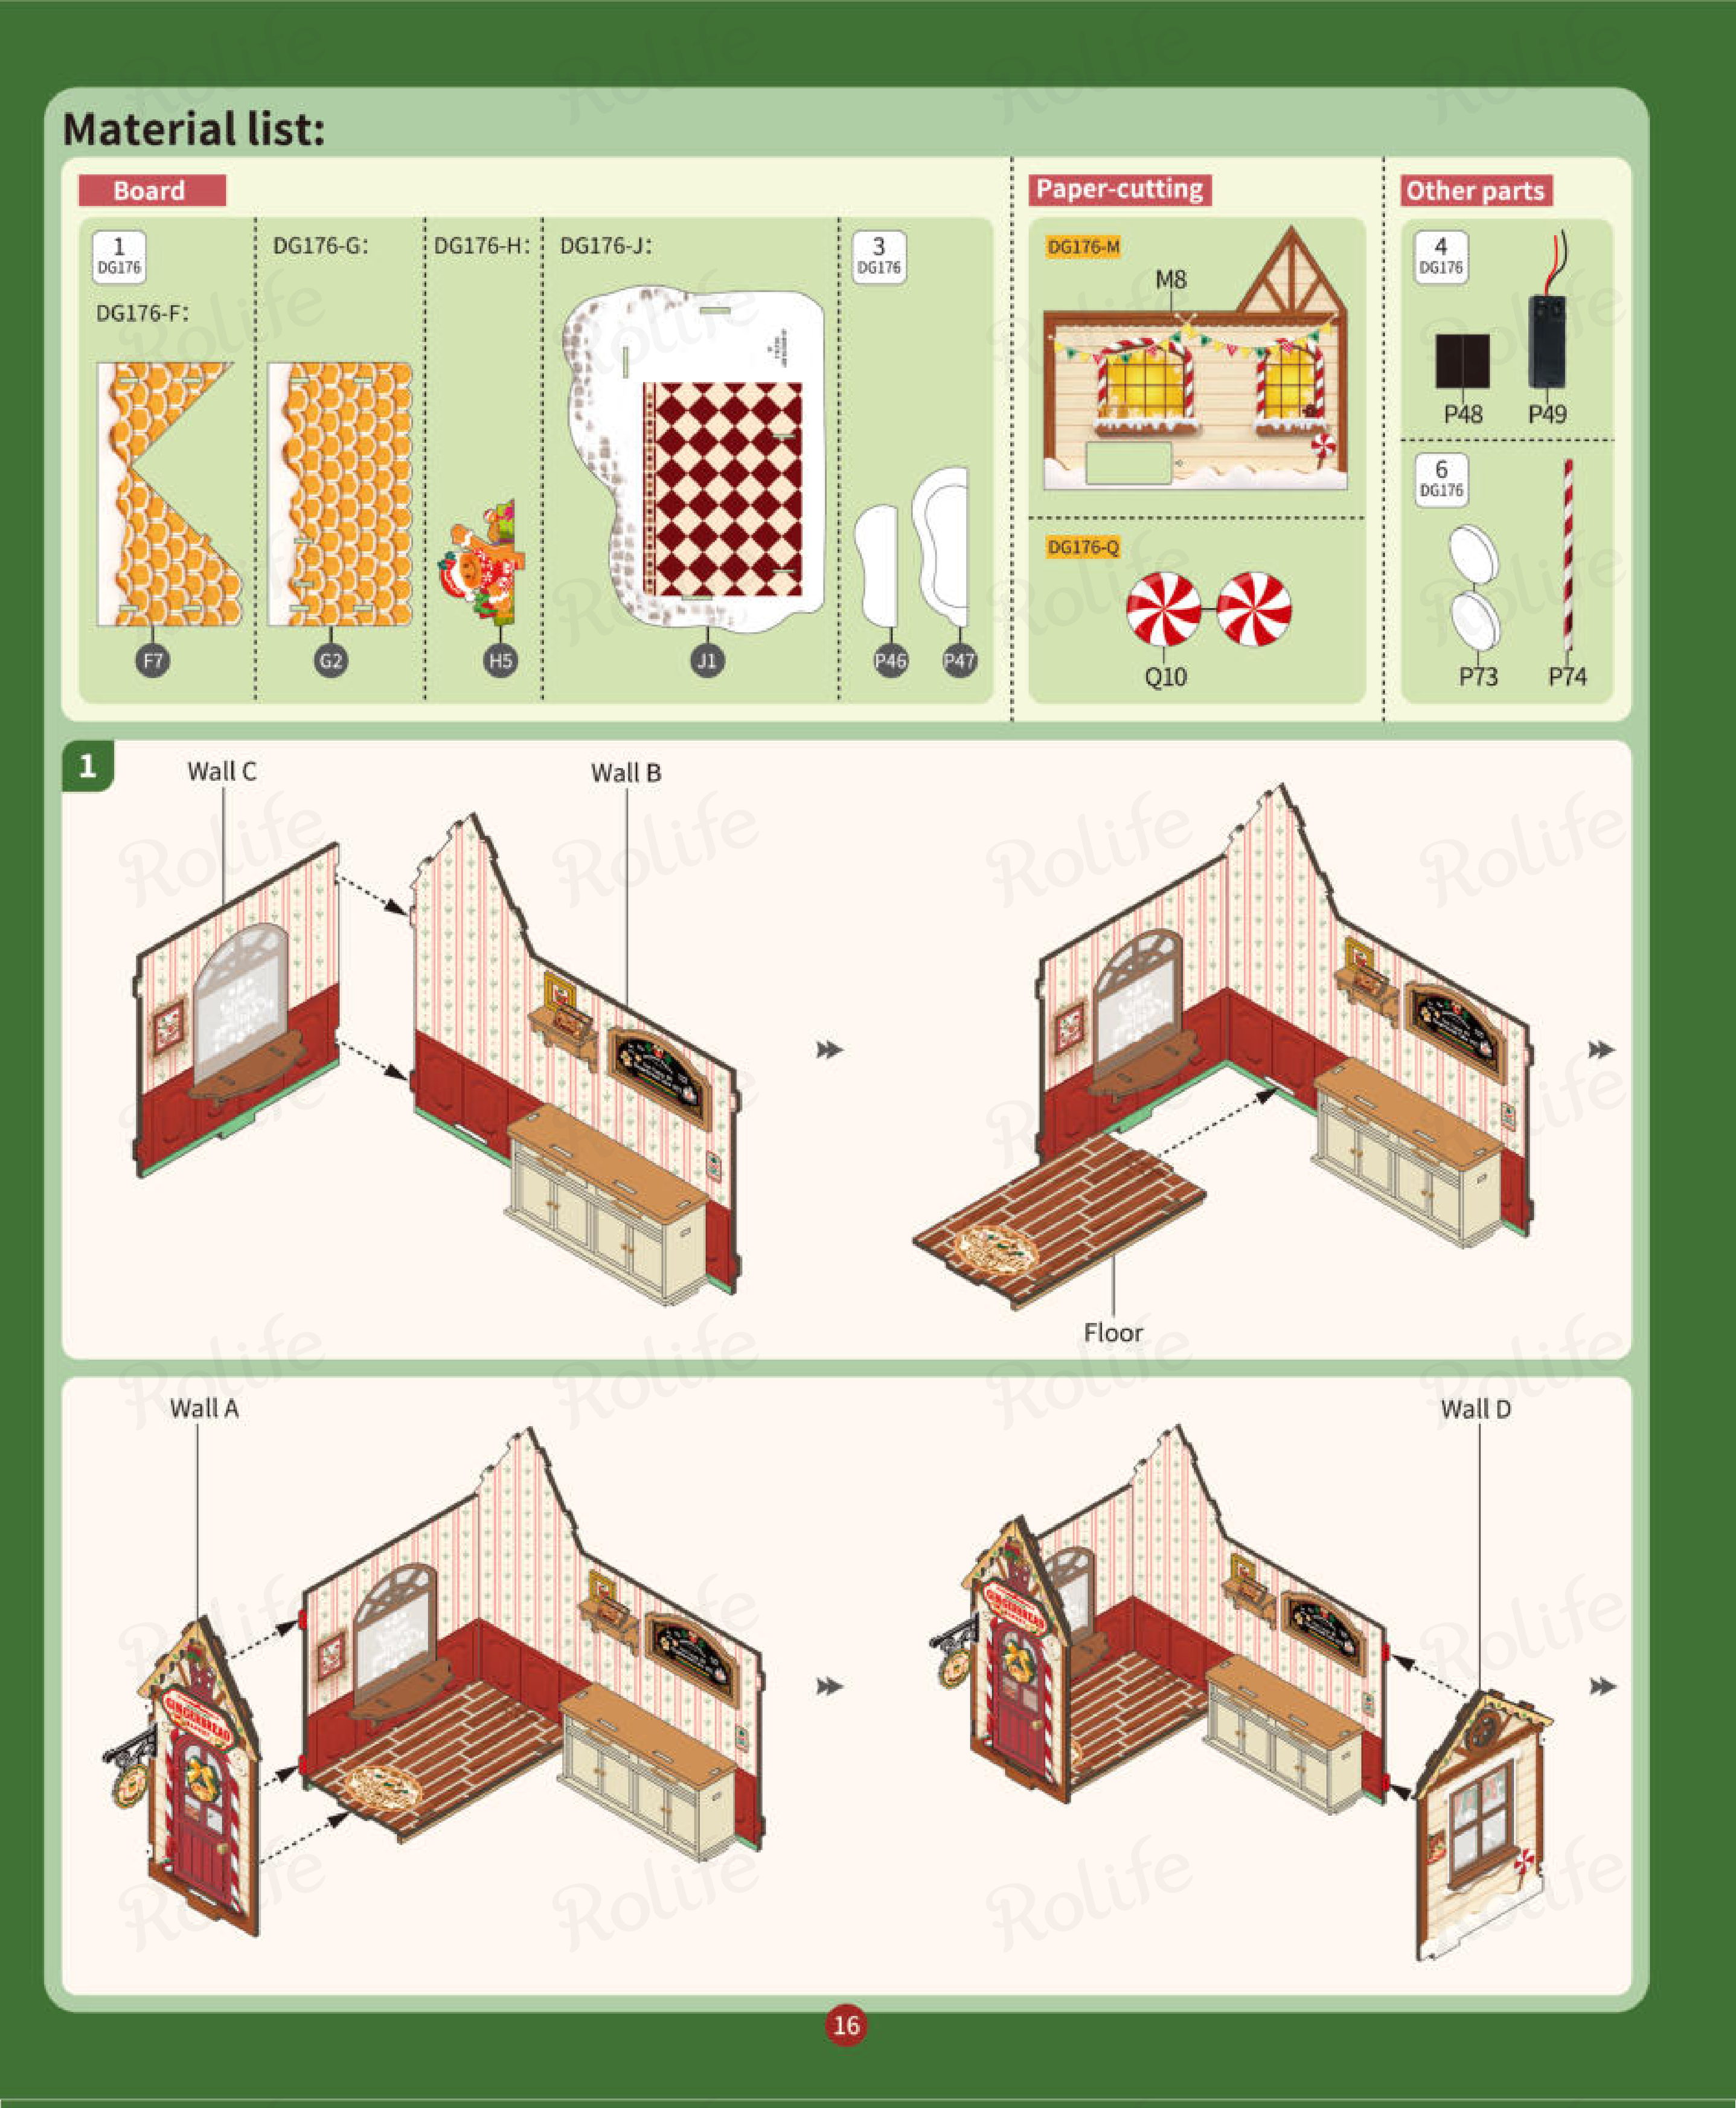

Display rack
Base cabinet

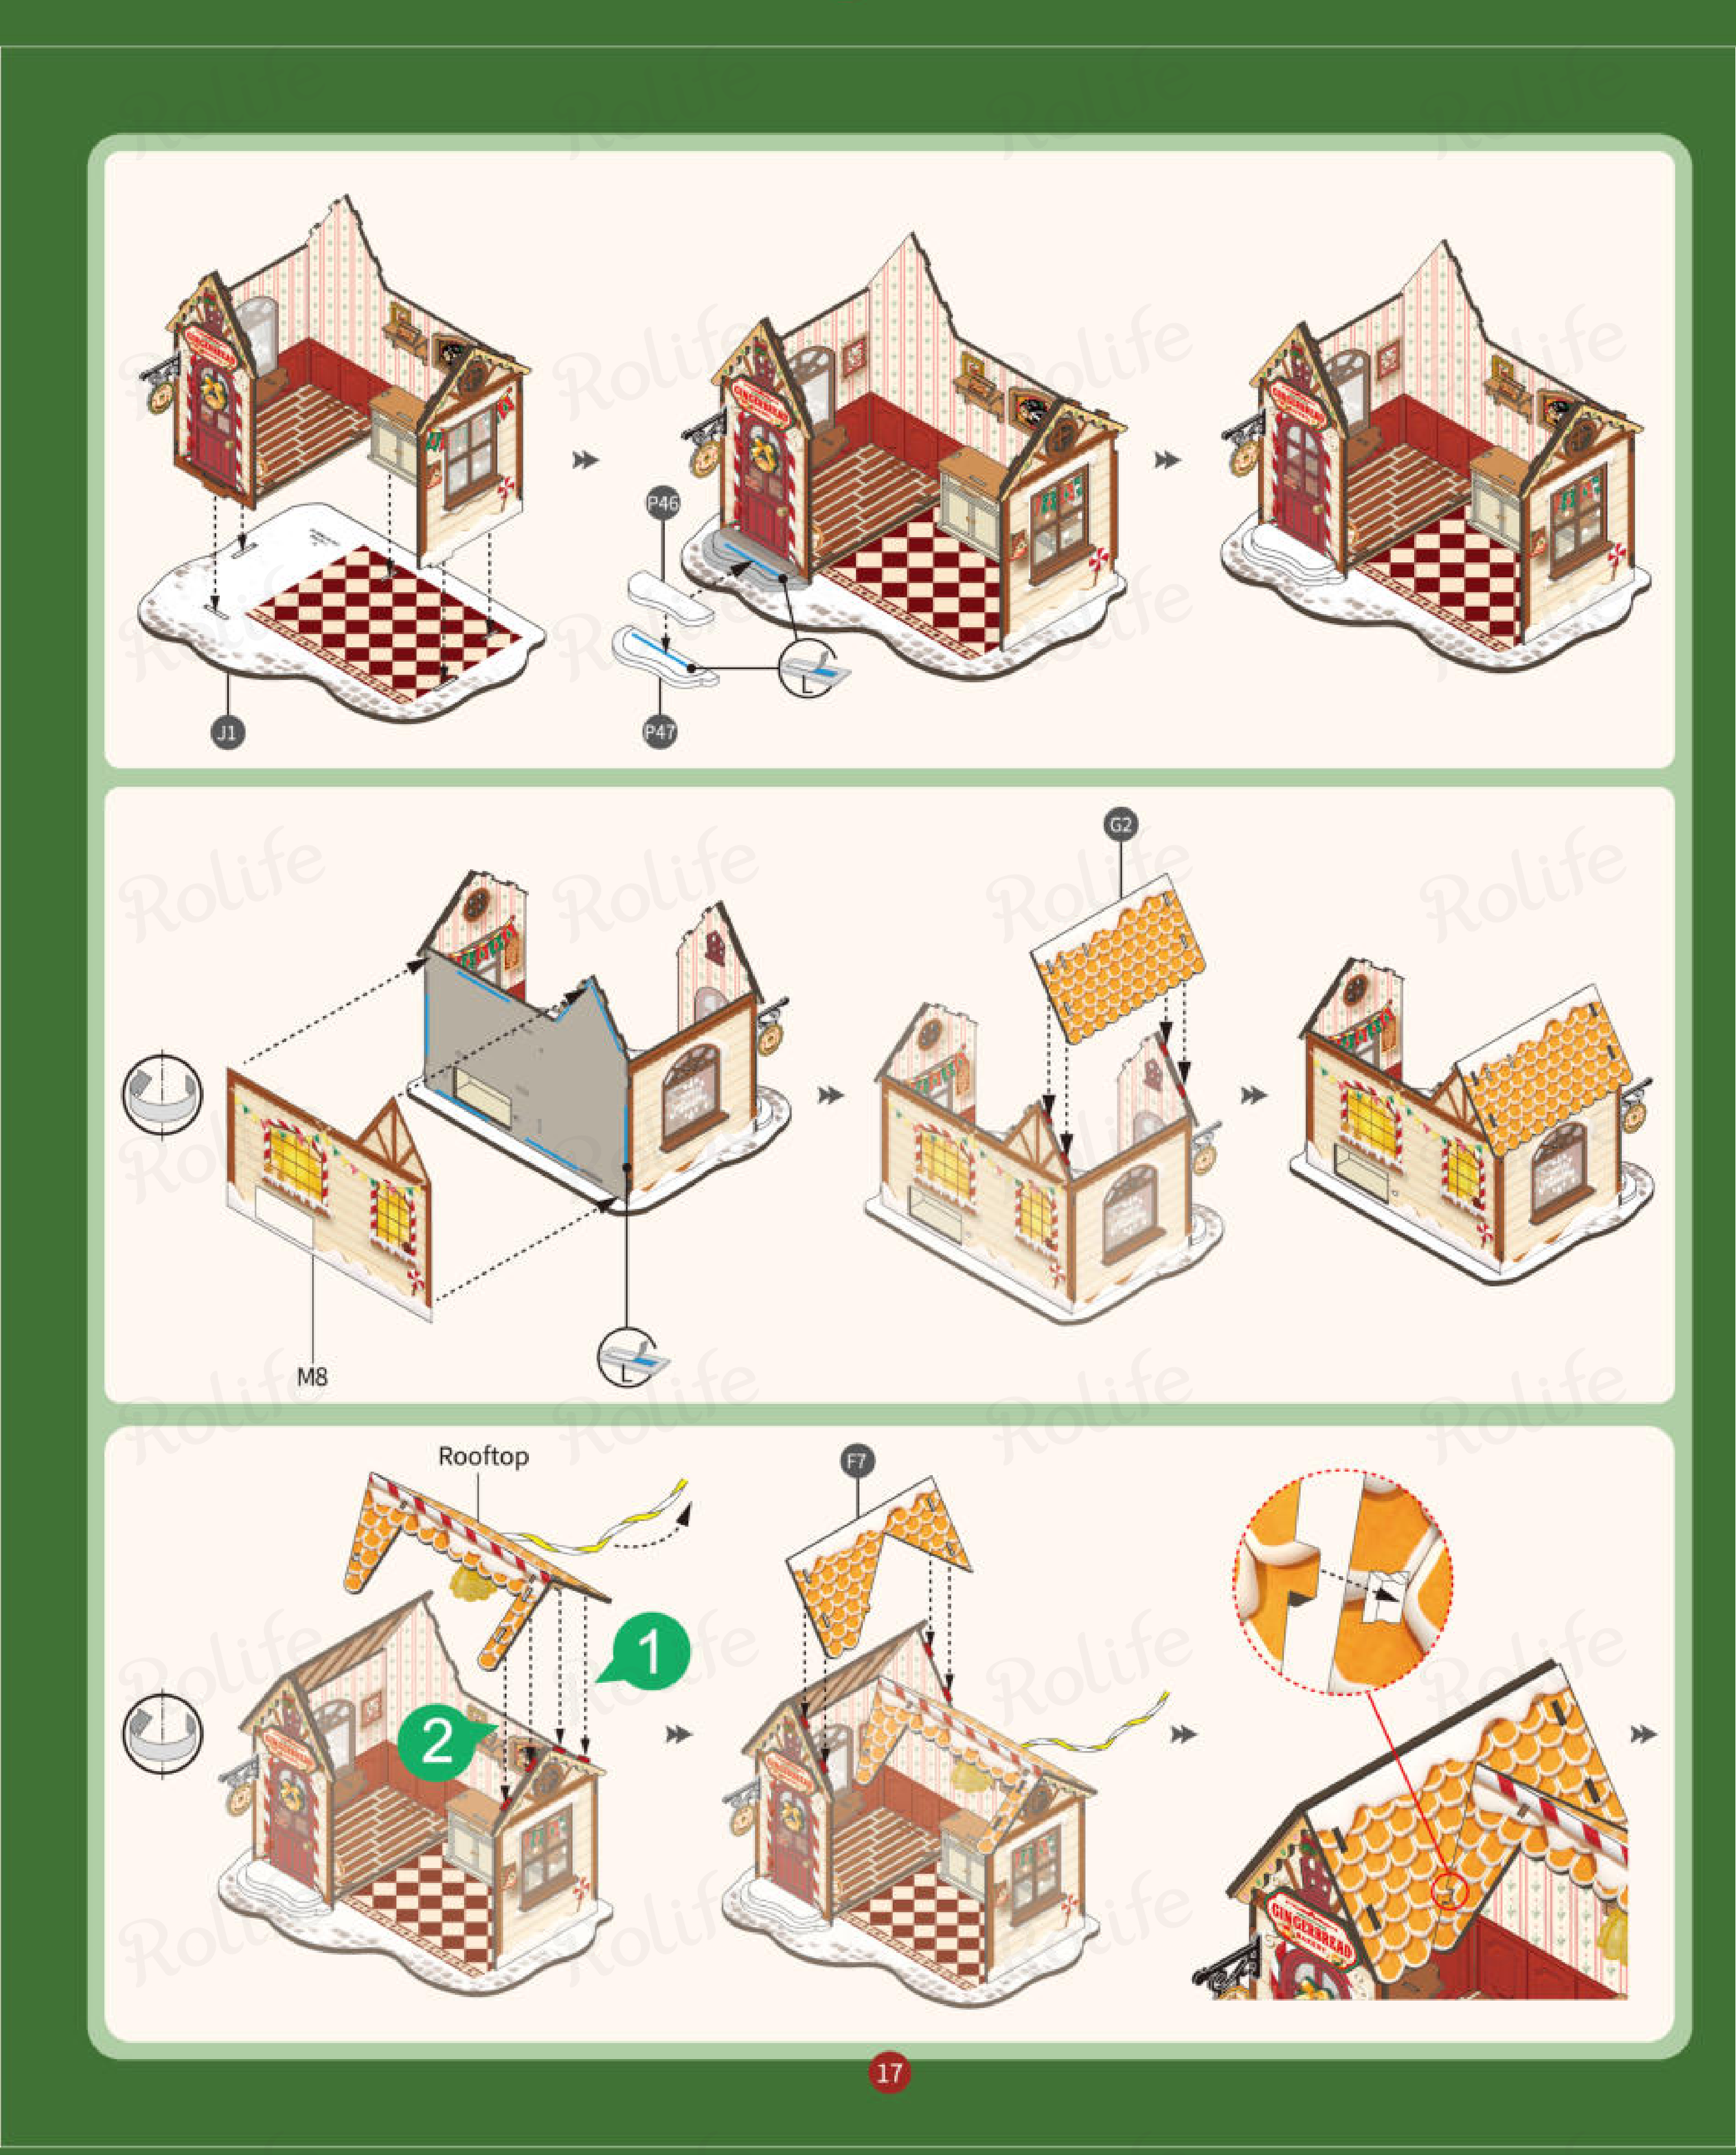

Wall C
Material list:
Wall D


Material list:

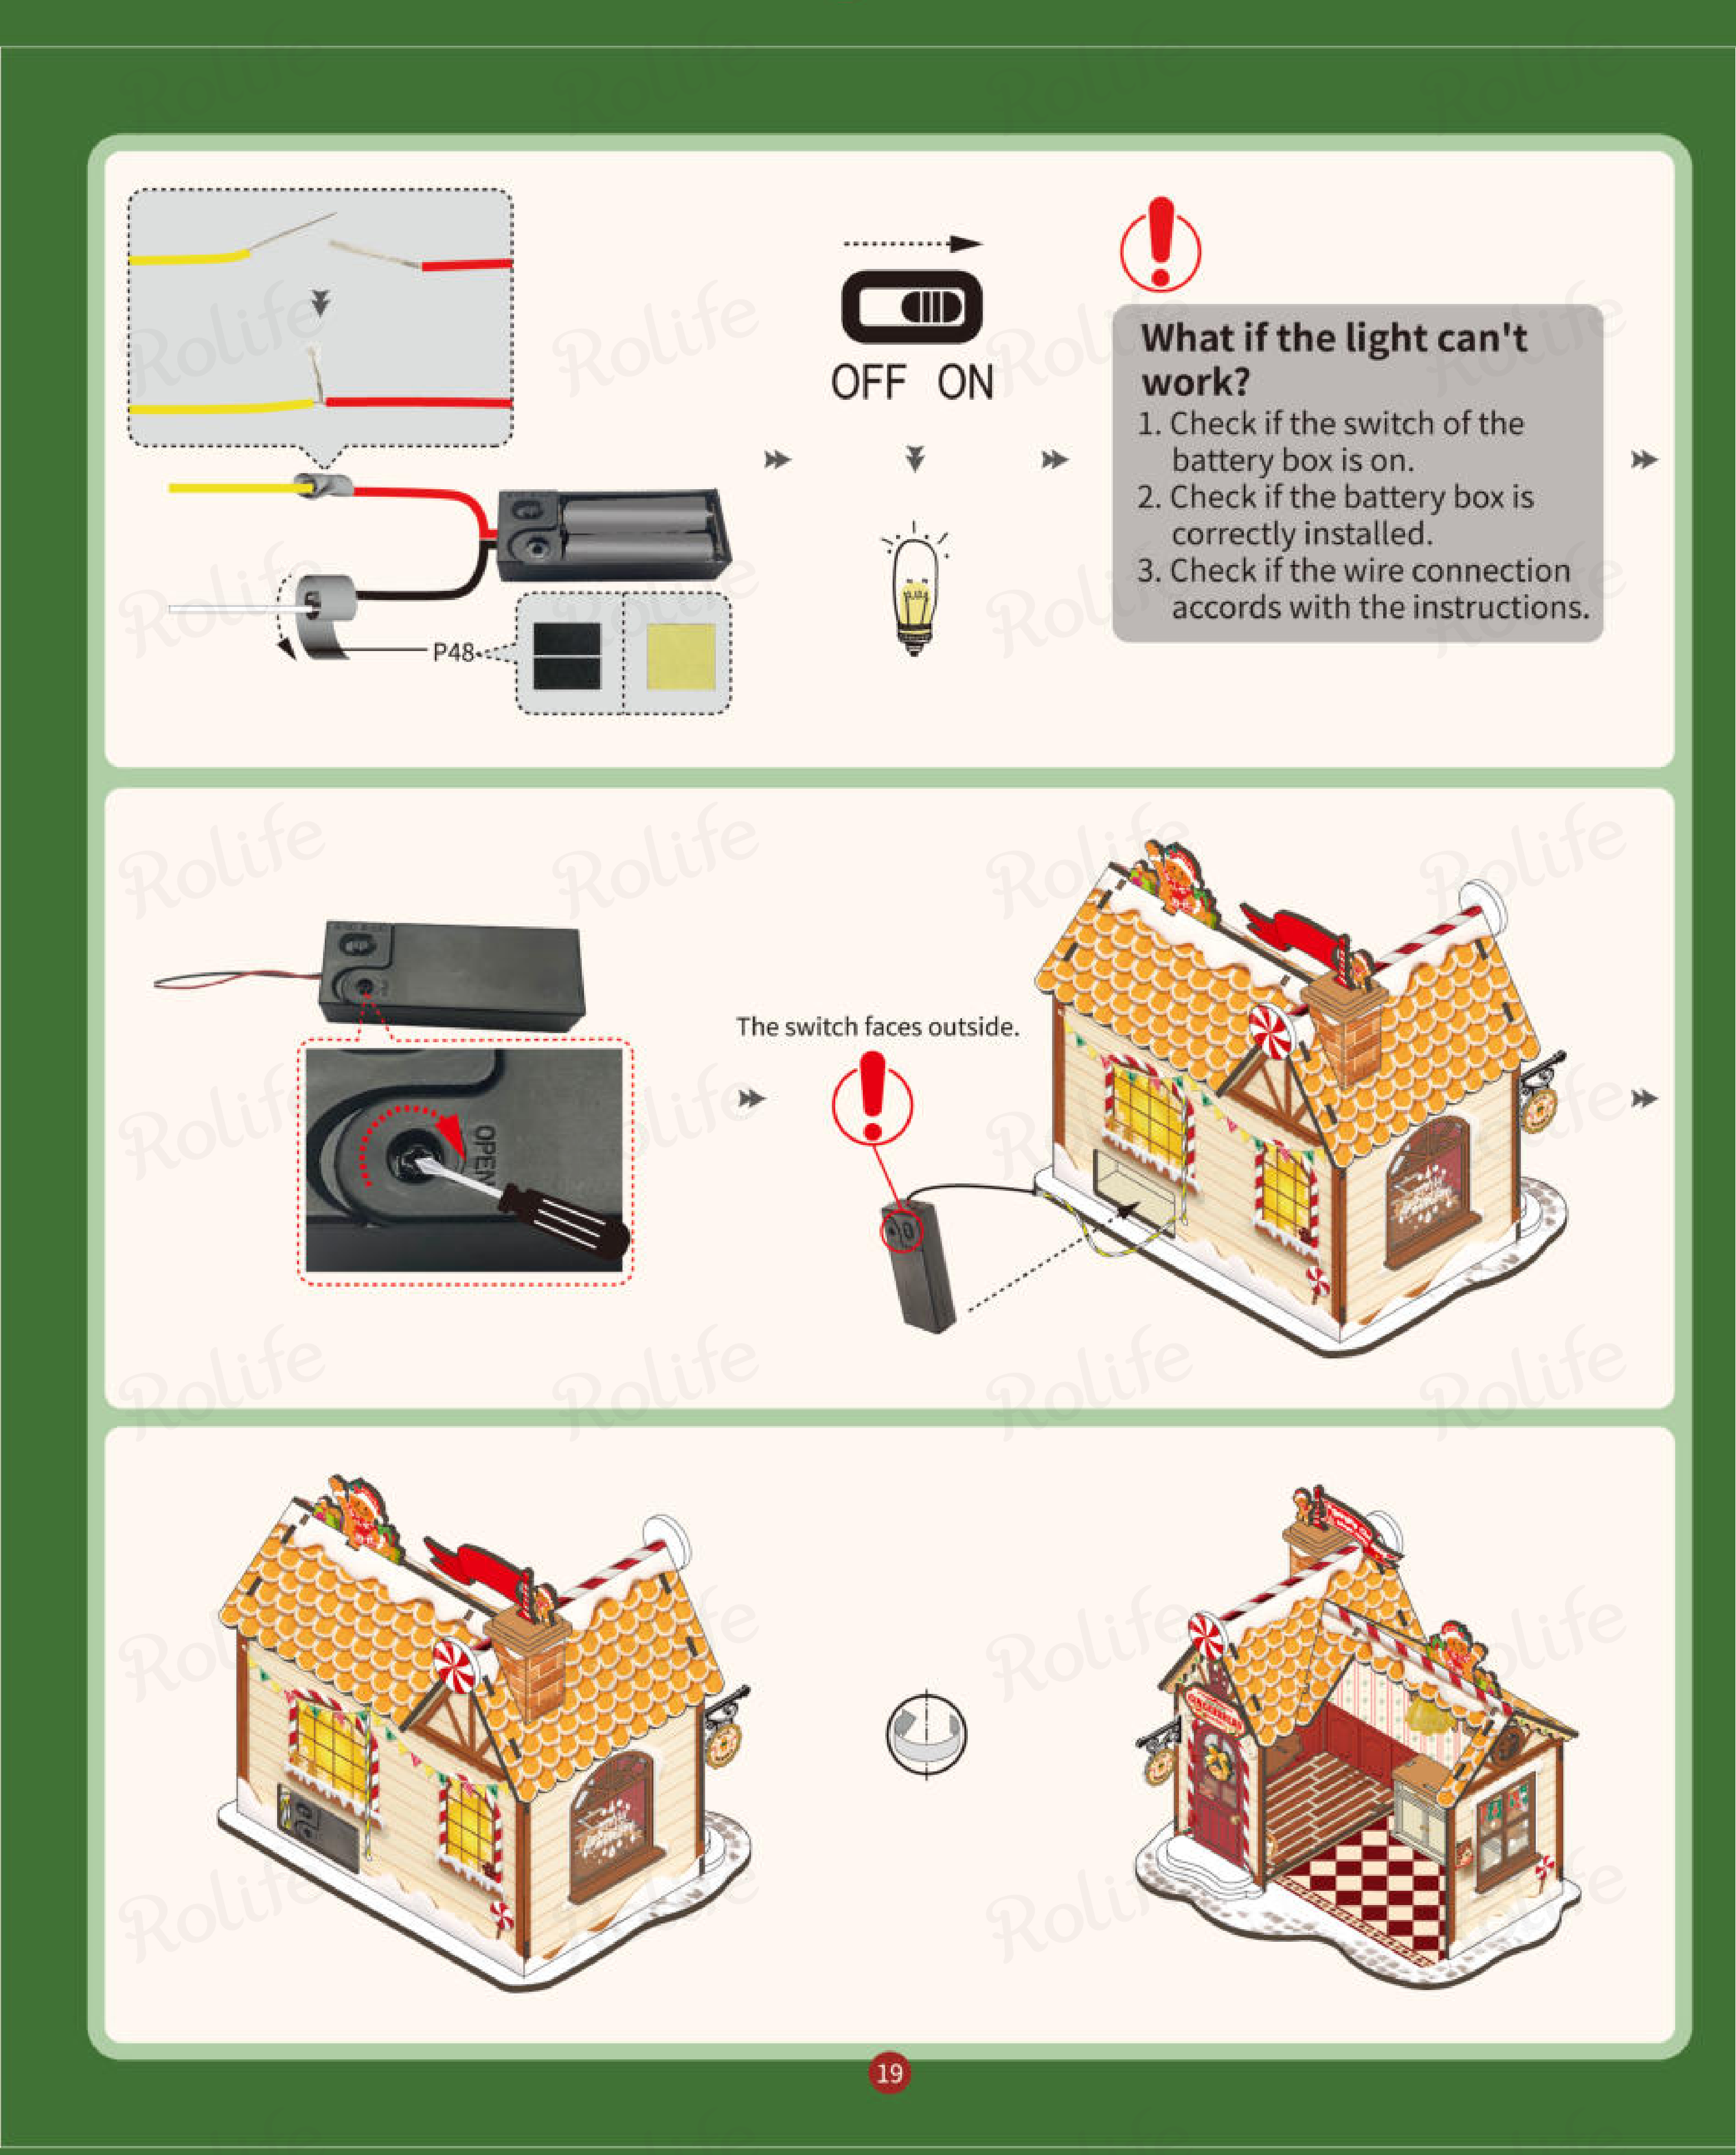

Roofing
Material list:


Floor
Material list:
Frame

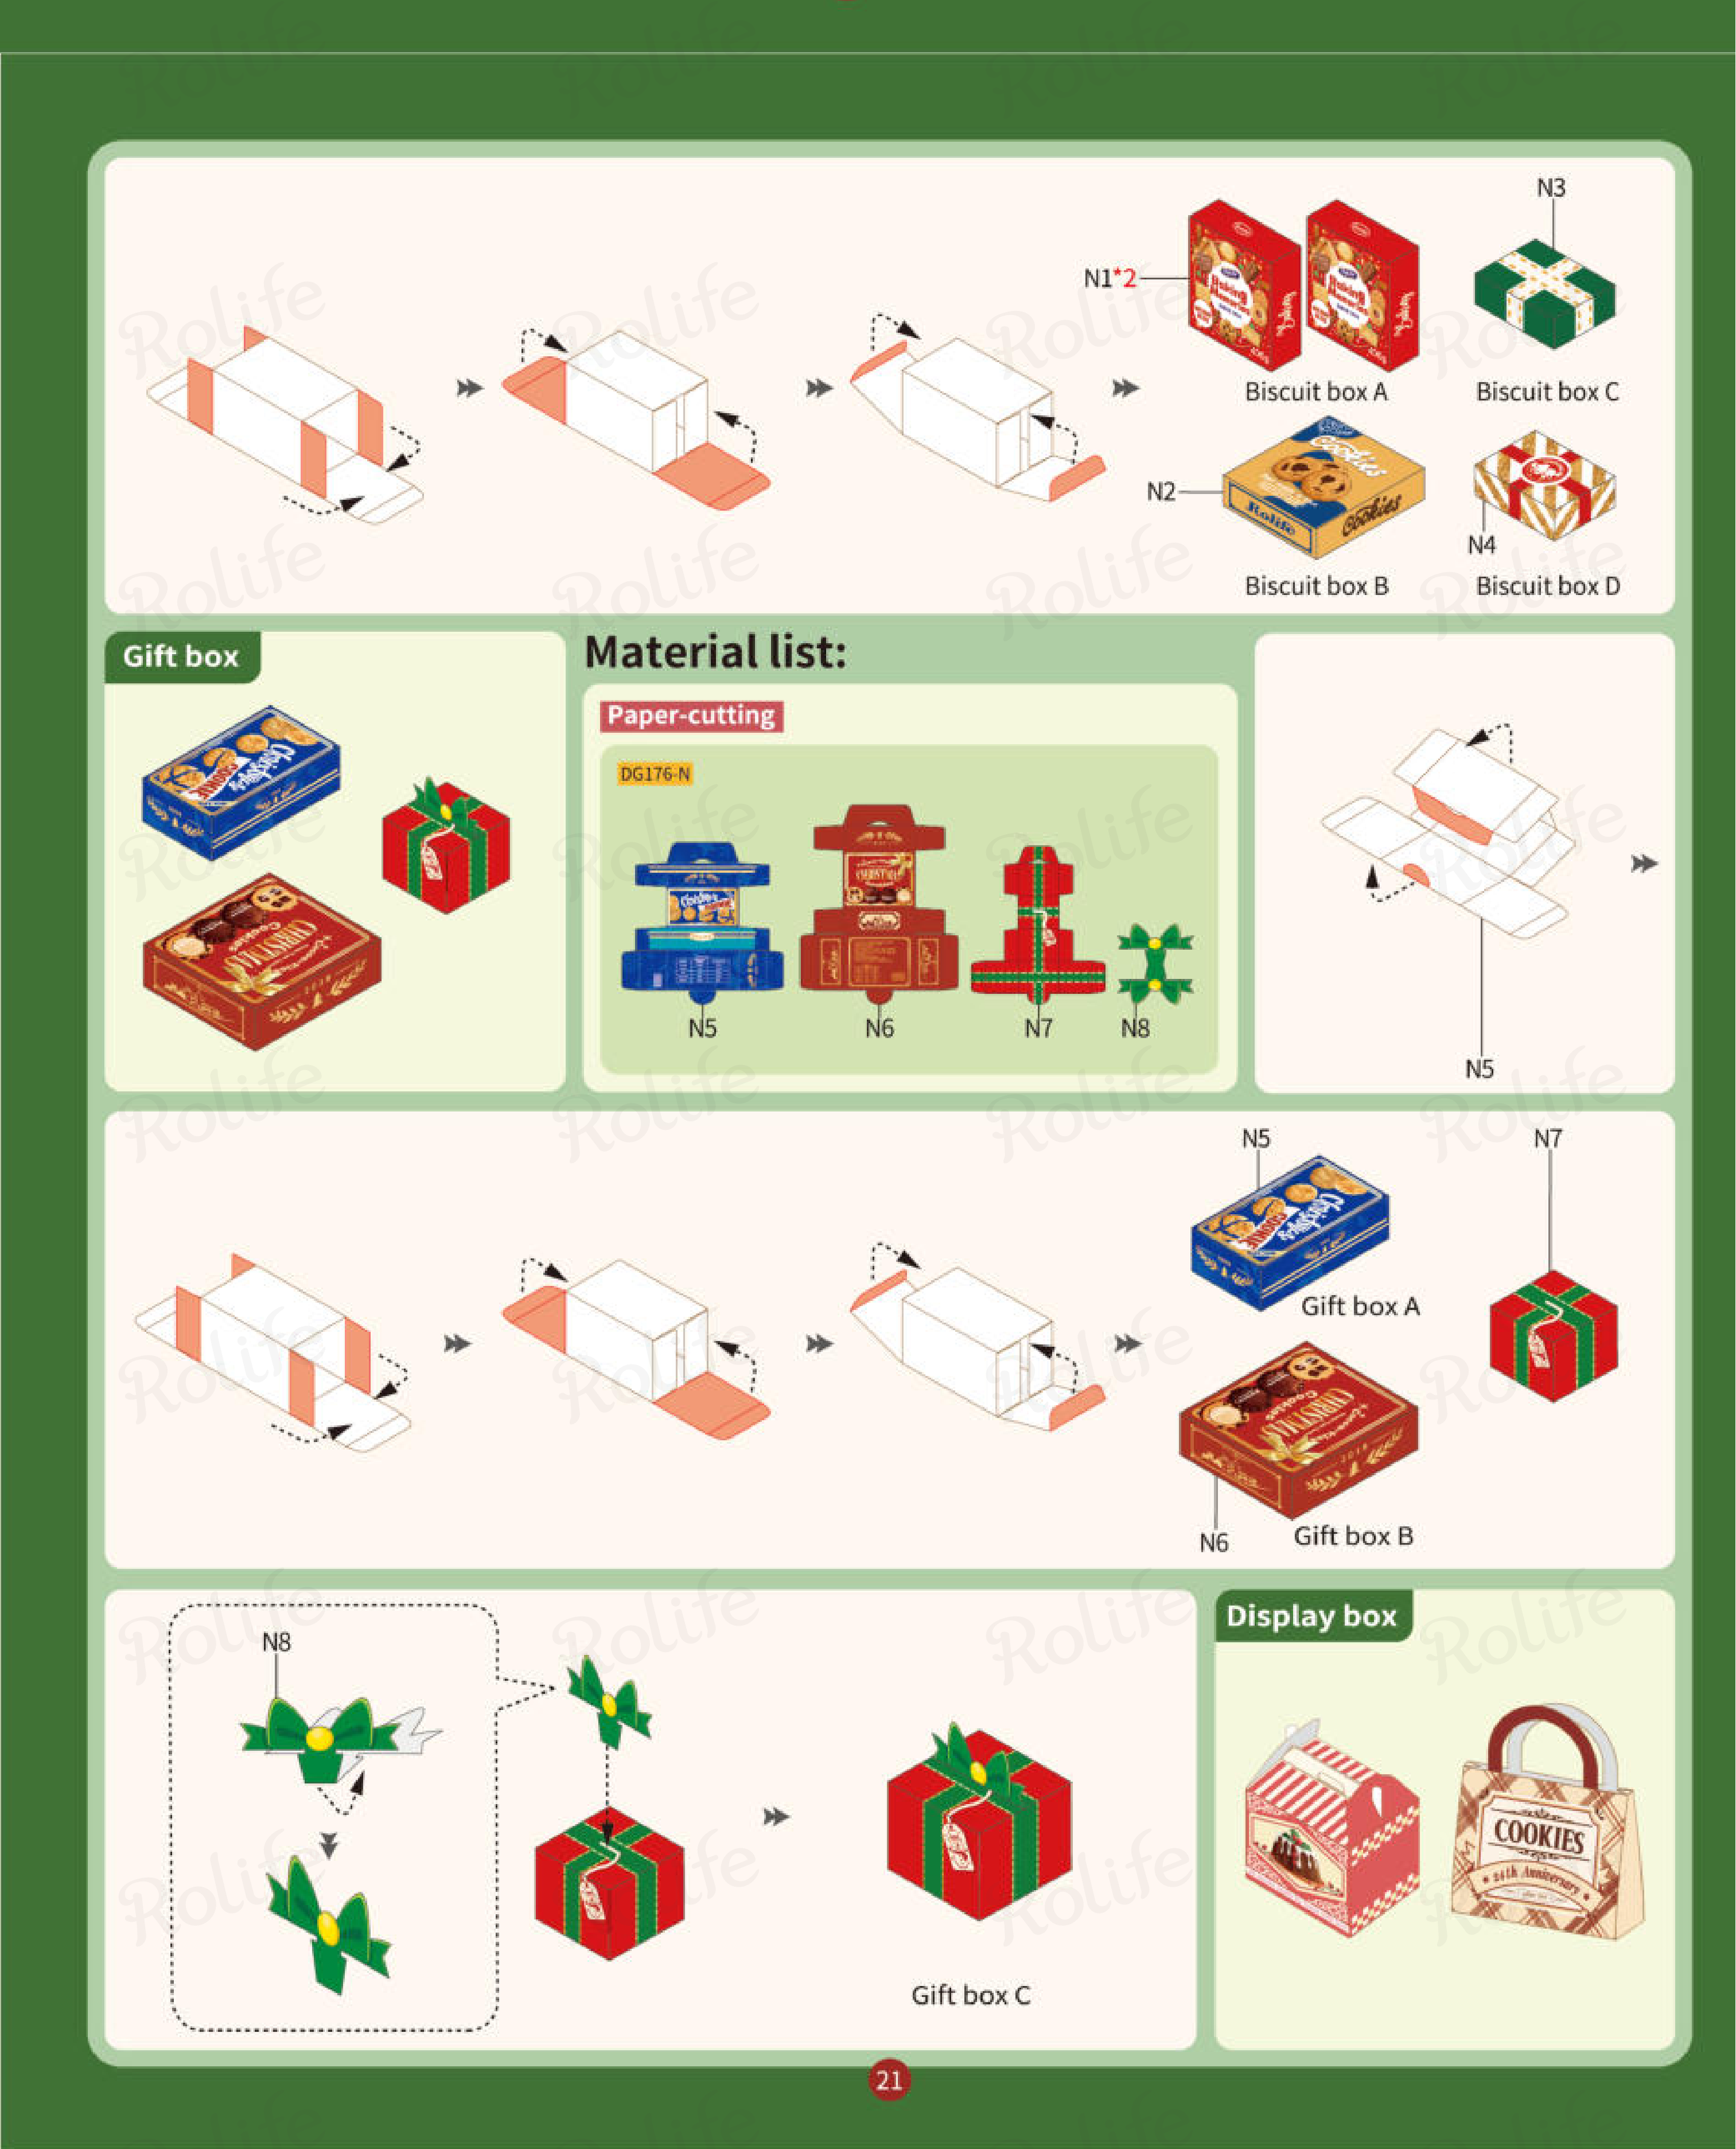

Material list:
Board
1 DG176
DG176-F:
F7
DG176-G:
G2
DG176-H:
H5
DG176-J:
J1
3 DG176
P46
P47
Paper-cutting
DG176-M
M8
DG176-Q
Q10
Other parts
4 DG176
P48
P49
6 DG176
P73
P74
1
Wall C
Wall B
Floor
Wall A
Wall D
16

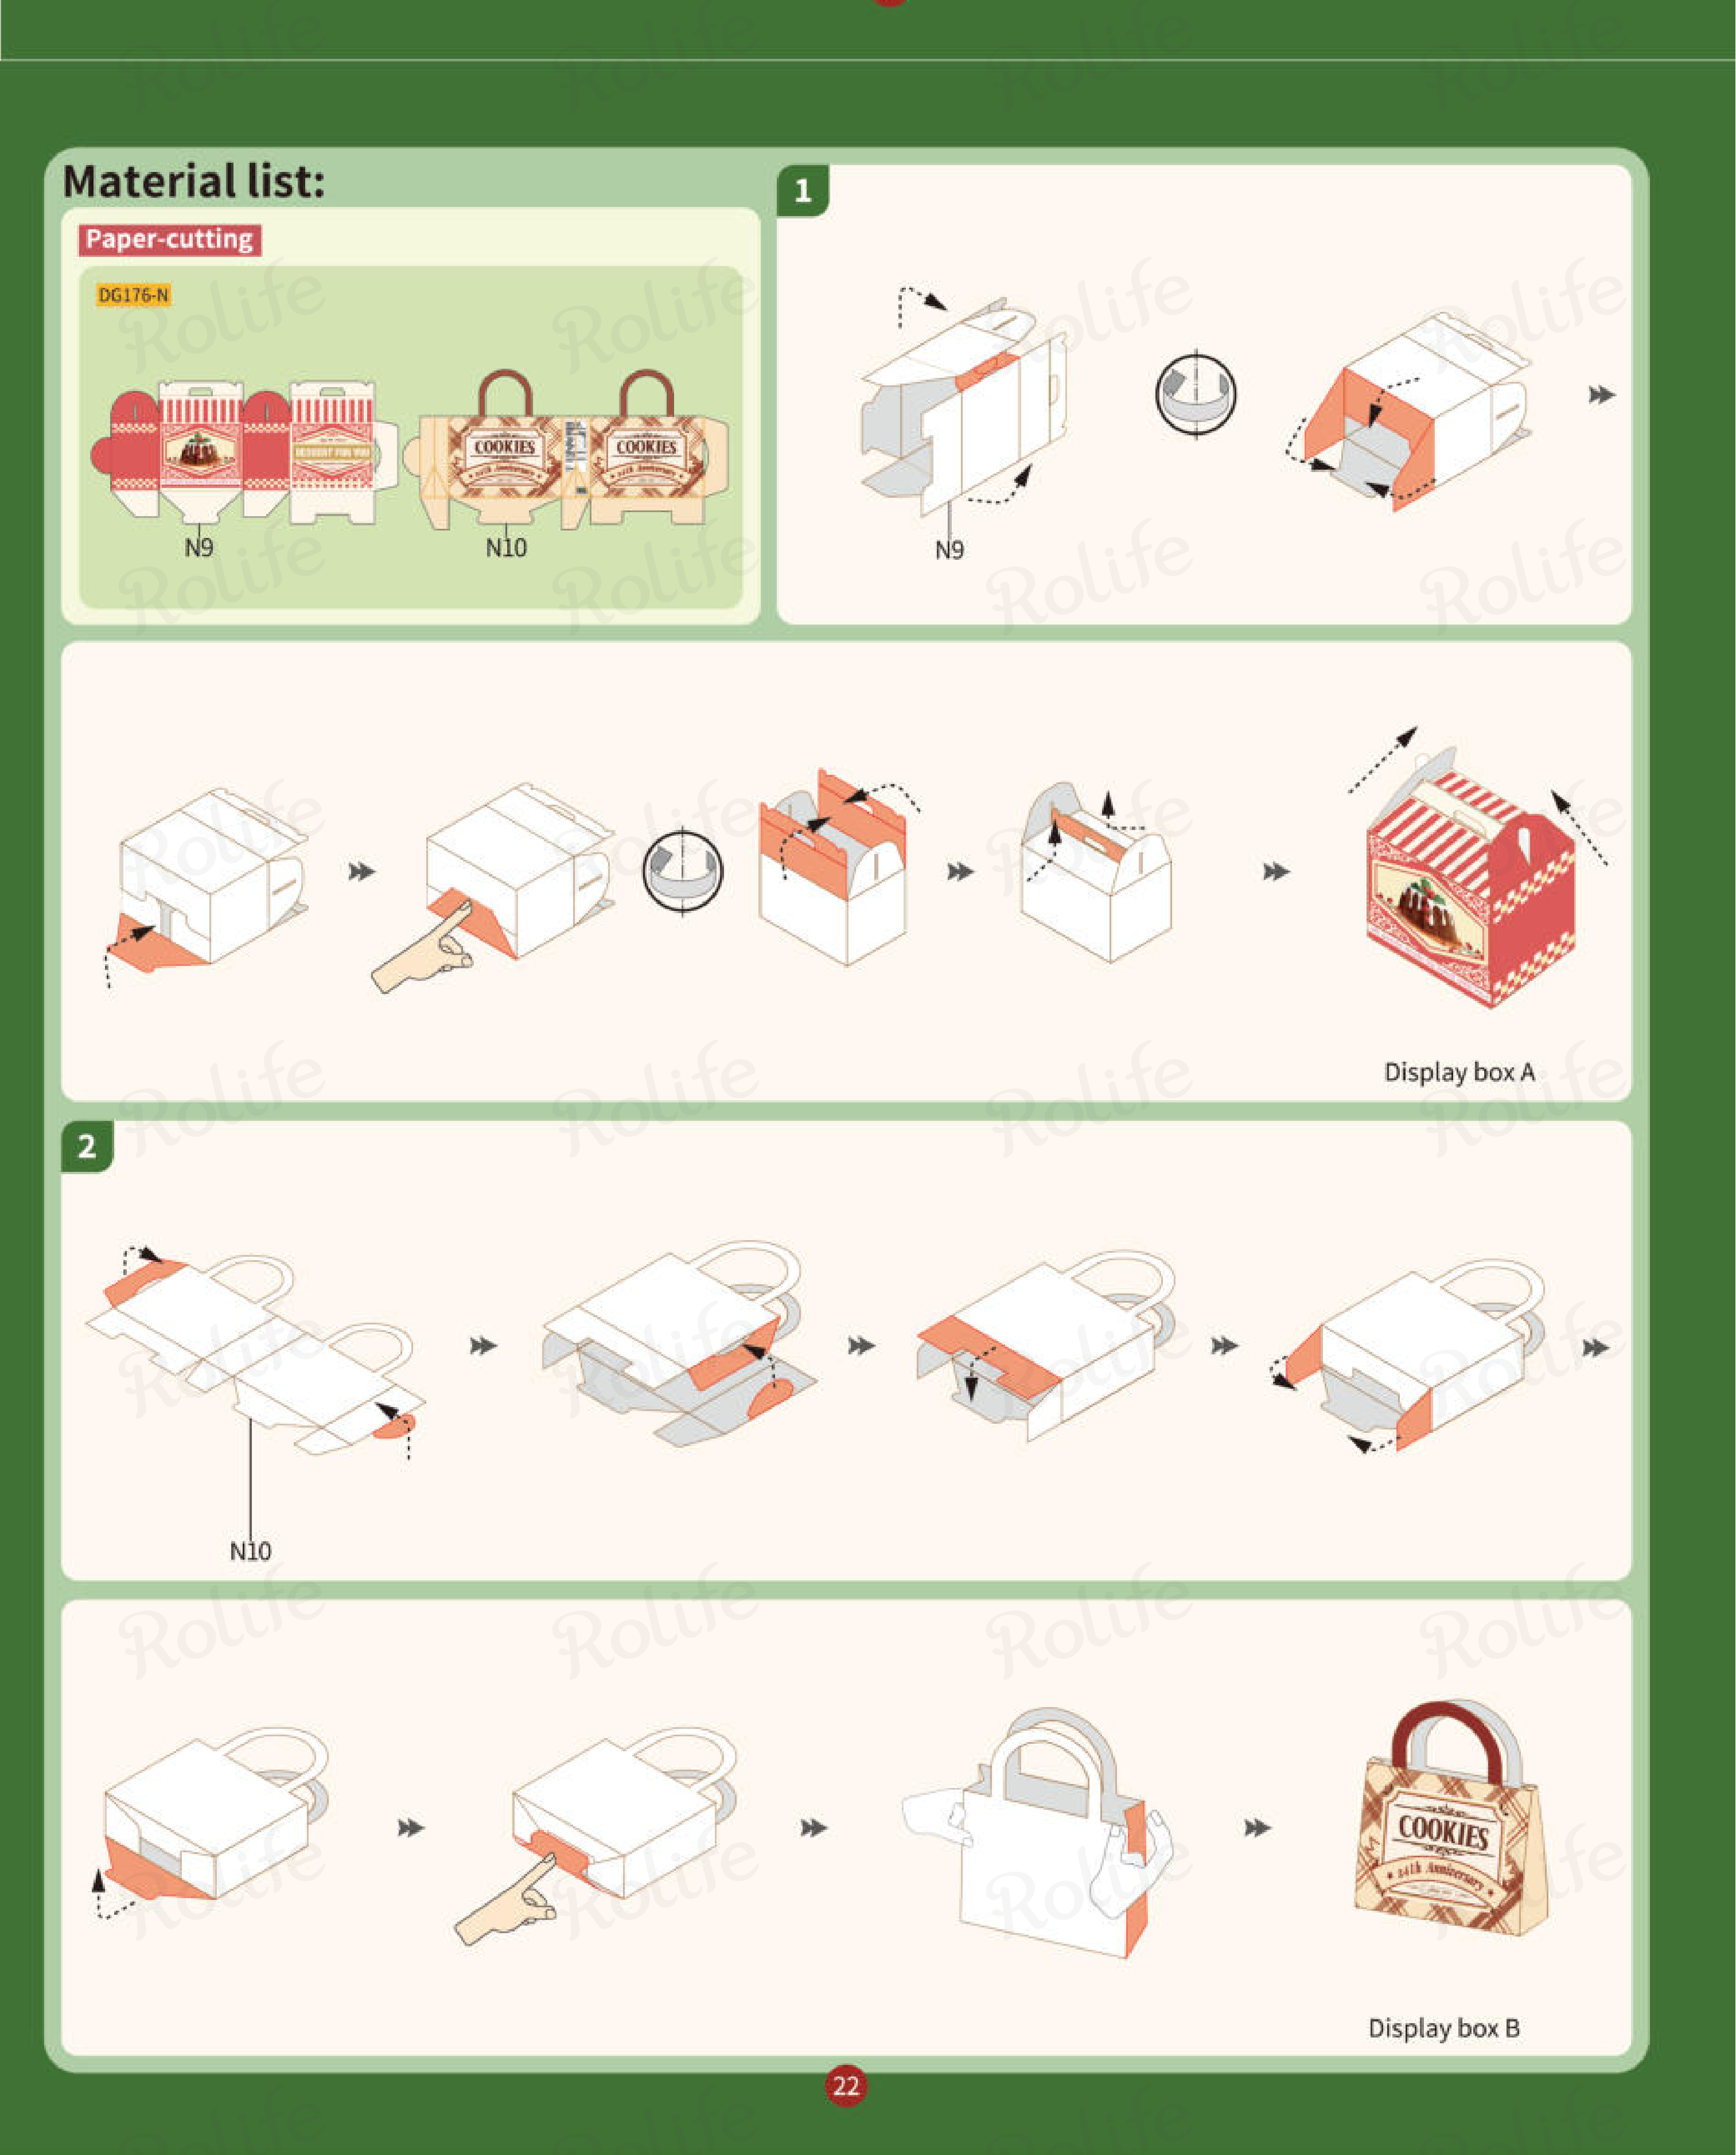

J1
P46
P47
M8
G2
Rooftop
F7
1
2
17

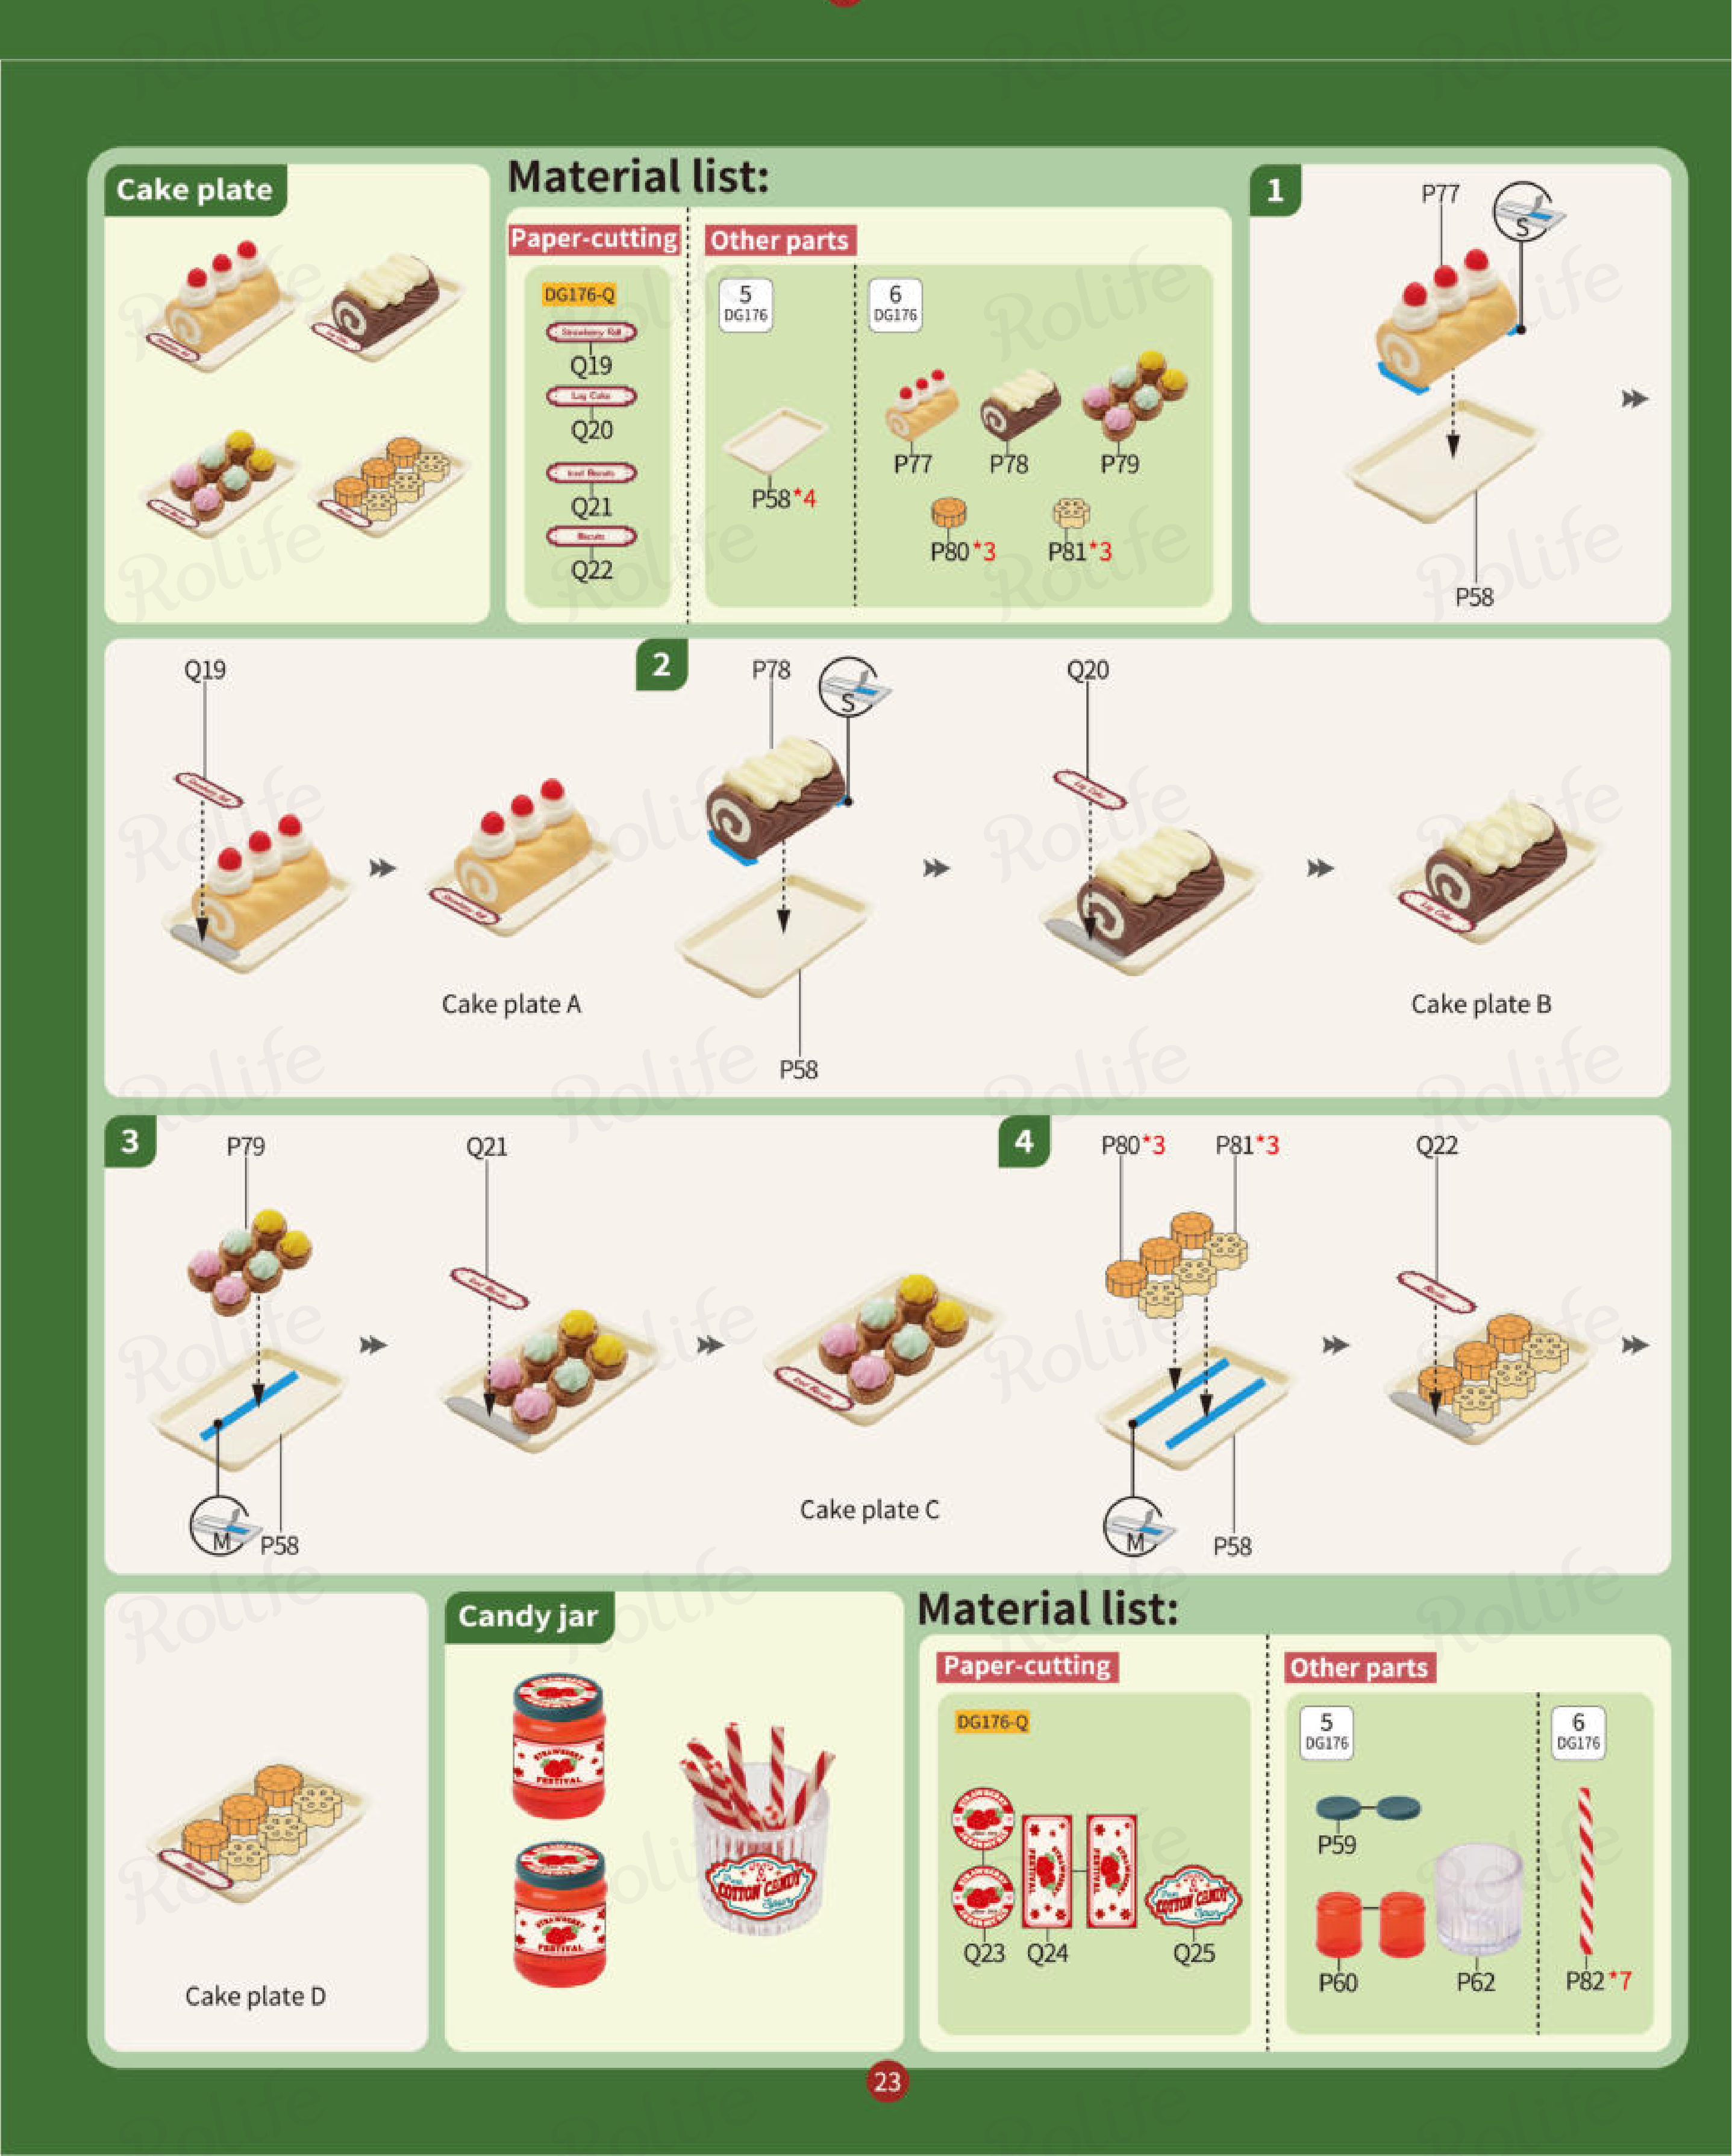

P74
Q10
P73
H5
Chimney
2
P49
Self-prepare "AAA/LR03/AM4 1.5V" batteries.
18


P48
OFF
ON
What if the light can't work?
1. Check if the switch of the battery box is on.
2. Check if the battery box is correctly installed.
3. Check if the wire connection accords with the instructions.
OPEN
The switch faces outside.
19

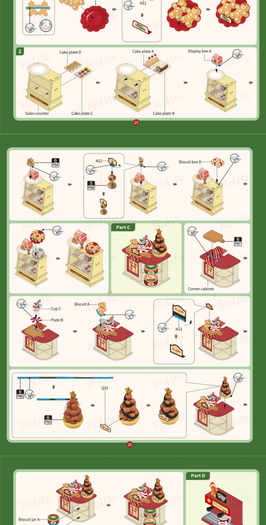

Biscuit jar
Material list:
Paper-cutting
DG176-Q
Q11
Q12
Q13
Q14
Q15
Q16
Q17
Q18
Other parts
6 DG176
P75
P76
1
P75*2
Q11
Q15
Biscuit jar A
Q12
Q16
Biscuit jar B
Q13
Q17
Biscuit jar C
2
P76*2
Q14
Q18
Biscuit jar D
Biscuit box
Material list:
Paper-cutting
DG176-N
N1
N2
N3
N4
20

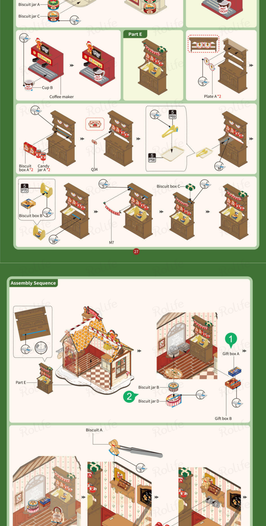

N1*2
Biscuit box A
N3
Biscuit box C
N2
Biscuit box B
N4
Biscuit box D
Gift box
Material list:
Paper-cutting
DG176-N
N5
N6
N7
N8
N5
Gift box A
N7
N6
Gift box B
N8
Gift box C
Display box
21


Material list:
Paper-cutting
DG176-N
N9
N10
1
N9
Display box A
2
N10
Display box B
22


Cake plate
Material list:
Paper-cutting
DG176-Q
Q19
Q20
Q21
Q22
Other parts
5 DG176
P58*4
6 DG176
P77
P78
P79
P80*3
P81*3
1
P77
P58
Q19
Cake plate A
2
P78
P58
Q20
Cake plate B
3
P79
Q21
P58
Cake plate C
4
P80*3
P81*3
Q22
P58
Cake plate D
Candy jar
Material list:
Paper-cutting
DG176-Q
Q23
Q24
Q25
Other parts
5 DG176
P59
P60
P62
6 DG176
P82*7
23











MANUFACTURER:
Robotime CAC (Jiangsu) Co., Ltd.

AFTER-SALES SERVICE CONTACT:
service@robotime.com

Designed in China
www.robotime.com
Made in China
49-10426L-100