Rolife

Baking Kitchen

DG172

Pictures for reference only. Please subject to our existing products.

Assembly tips

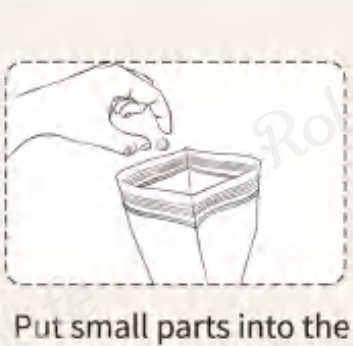

Put small parts into the bag to prevent loss.

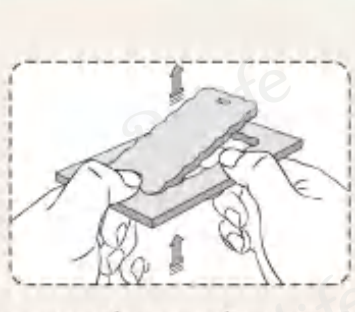

Remove the part by pressing its back to reduce burrs.

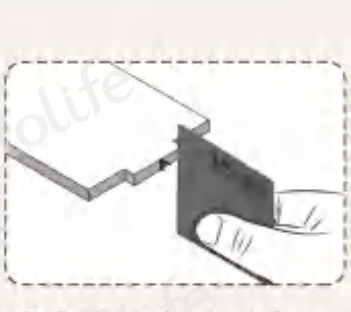

Polish the edges with sandpaper if there are burrs on pieces or it' s hard to insert.

Tips of assembling

1. All the dimension in the instruction is shown in millimeter.
2. The included double-sided tape is an auxiliary tool for sticking. Glue needs self-preparation.
3. Do not stick and peel the double-sided tape repeatedly, considering its initial tack.
4. Only the tool icon appears in the assembly step.
5. Check if the light parts are securely welded.

Part number illustration

Refer to the part number paper, find the piece, and compare it with the 1:1 figure. Then assemble it after confirmation. (Only for wooden pieces marked with Ⓡ)

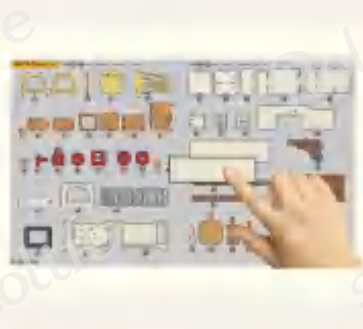

Part list illustration

1. Compare part bags with the part list before assembling to ensure all parts are included.
2. Find the part referring to the part number in the part list, and compare the part with the illustration to ensure it is right before assembling.

Tools required

(The right of the arrow " ➤" corresponds with the tool icon.)

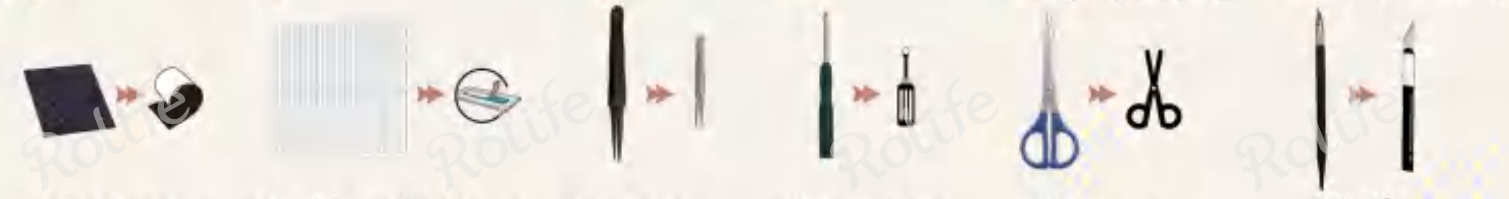

①
②
③
④
⑤ (Self-preparation)
⑥ (Self-preparation)

Sandpaper (Bag No. 1)
Double-sided tape (Bag No. 1)
Tweezers (Bag No. 4)
Screwdriver (Bag No. 4)
Scissors
Knife

Chair

Insular shelf

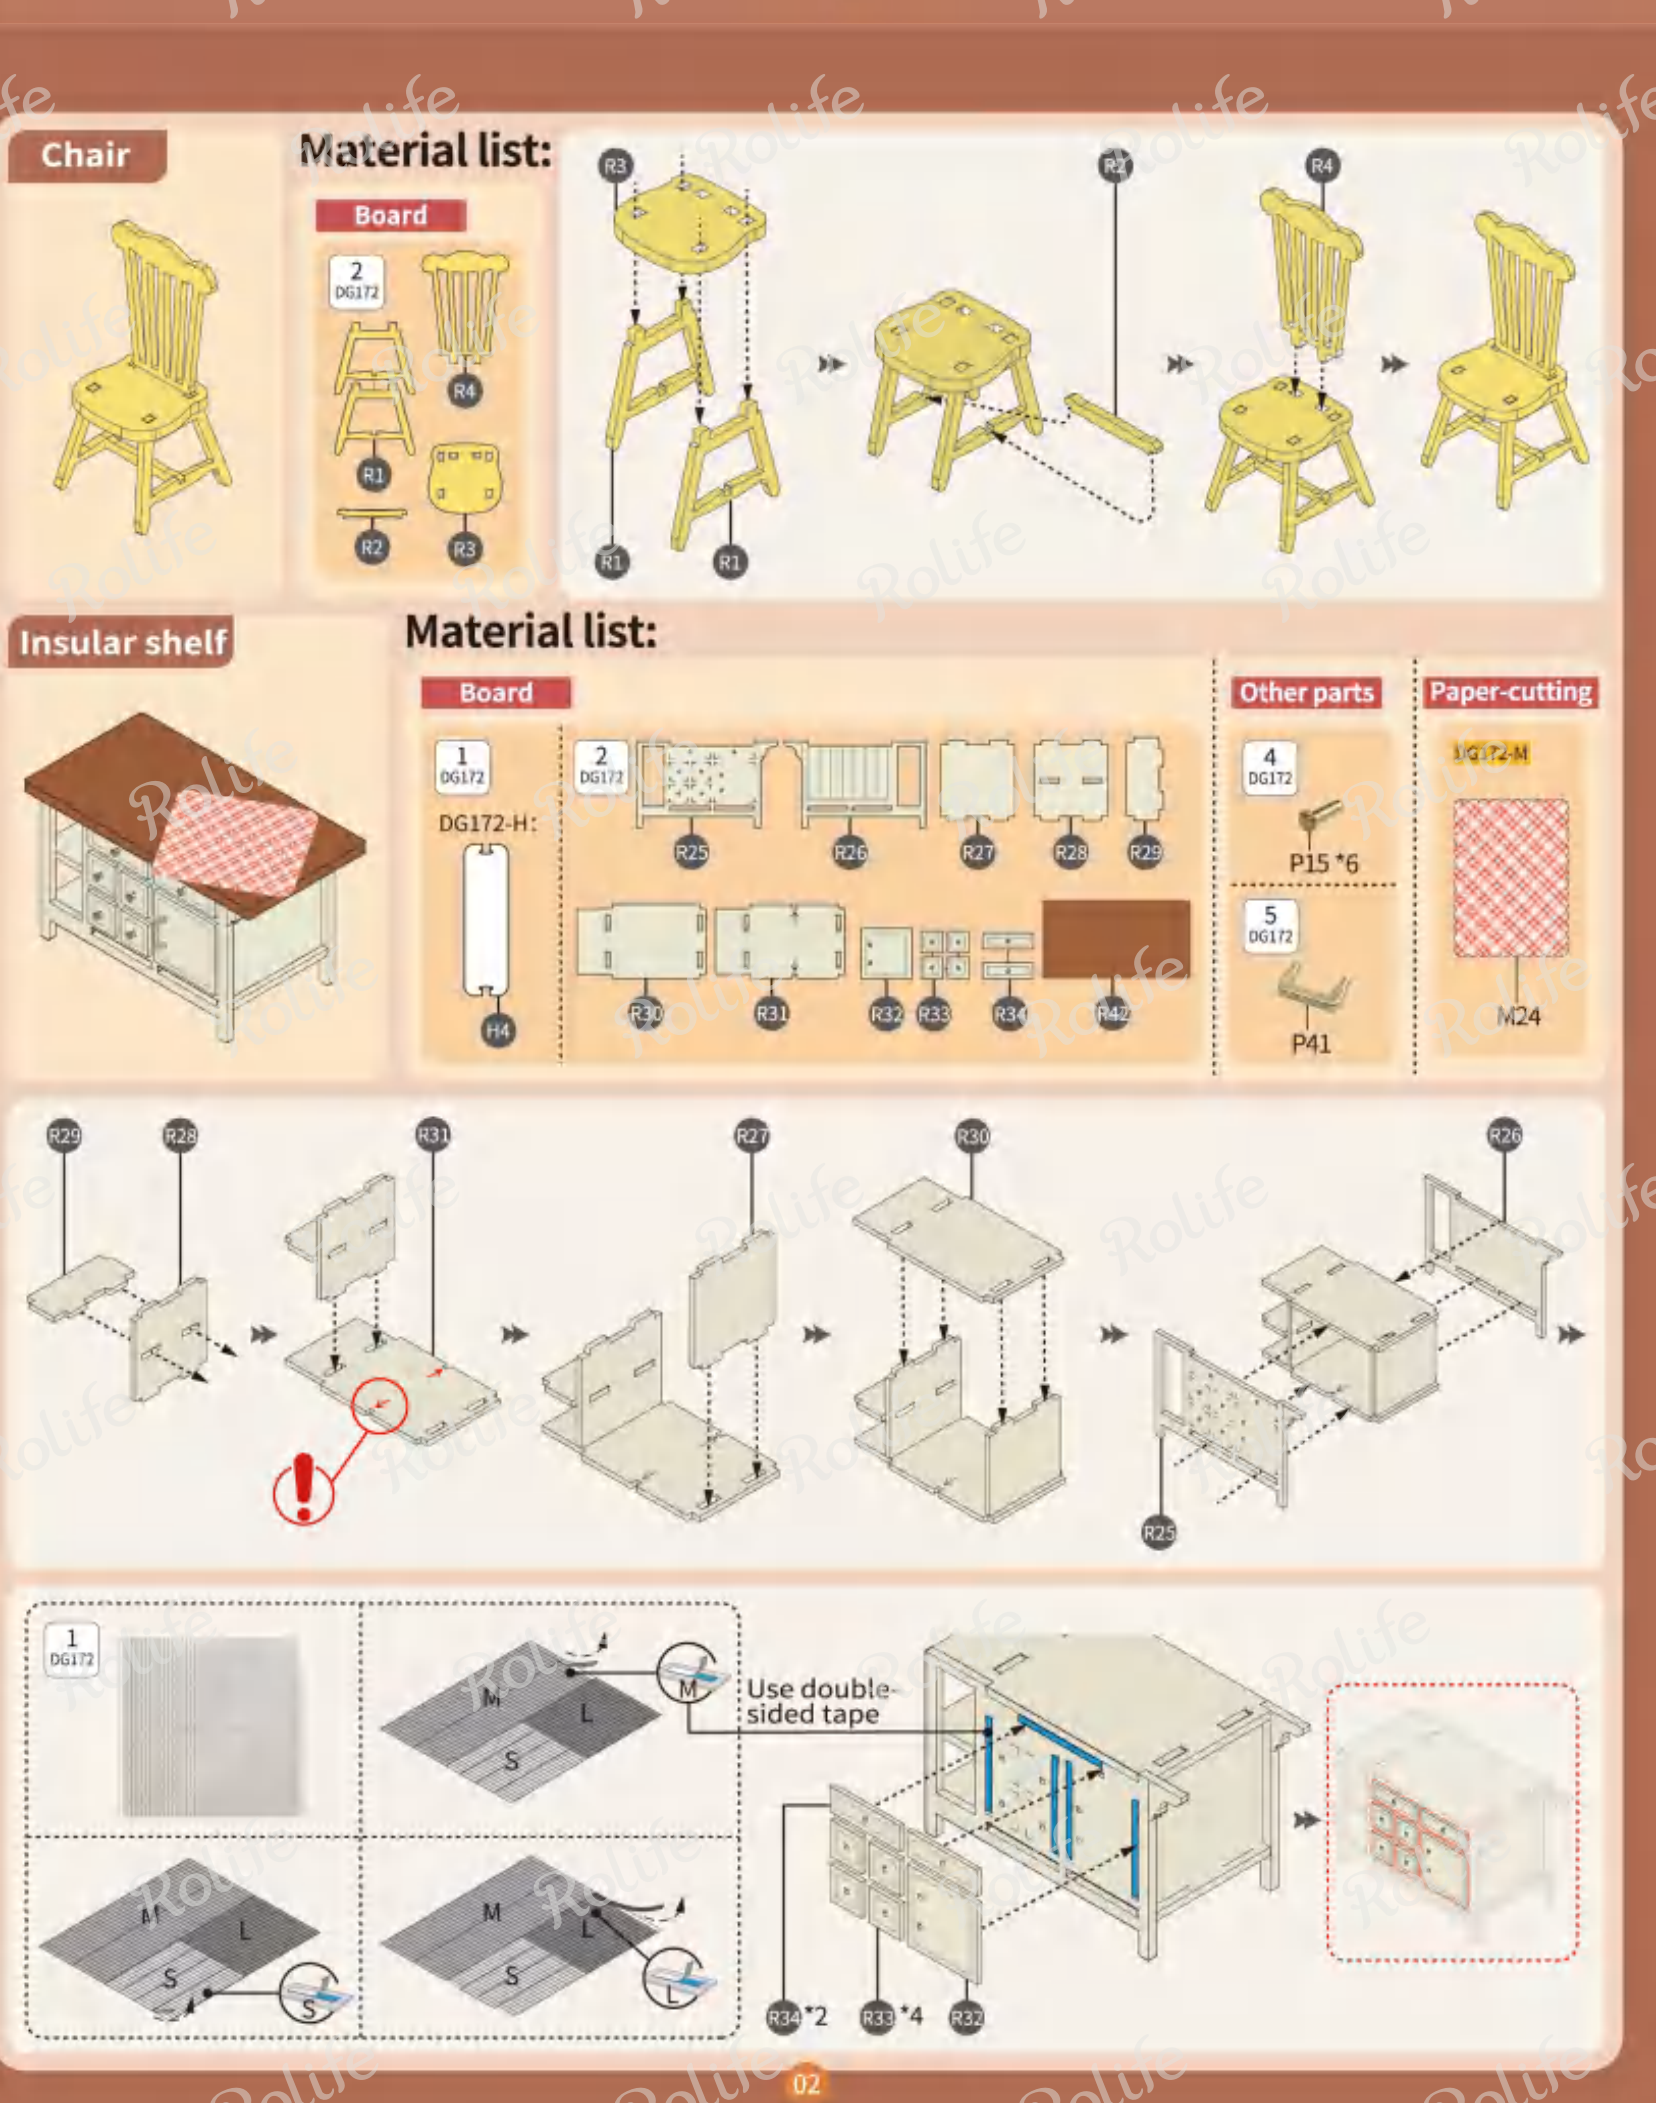

Chair
Material list:
Board
2 DG172
R1
R2
R3
R4
Insular shelf
Material list:
Board
1 DG172
2 DG172
DG172-H:
H4
R25
R26
R27
R28
R29
R30
R31
R32
R33
R34
R42
Other parts
4 DG172
P15 *6
5 DG172
P41
Paper-cutting
DG172-M
M24
1 DG172
M
L
S
Use double-sided tape
R34 *2
R33 *4
R32

Scale

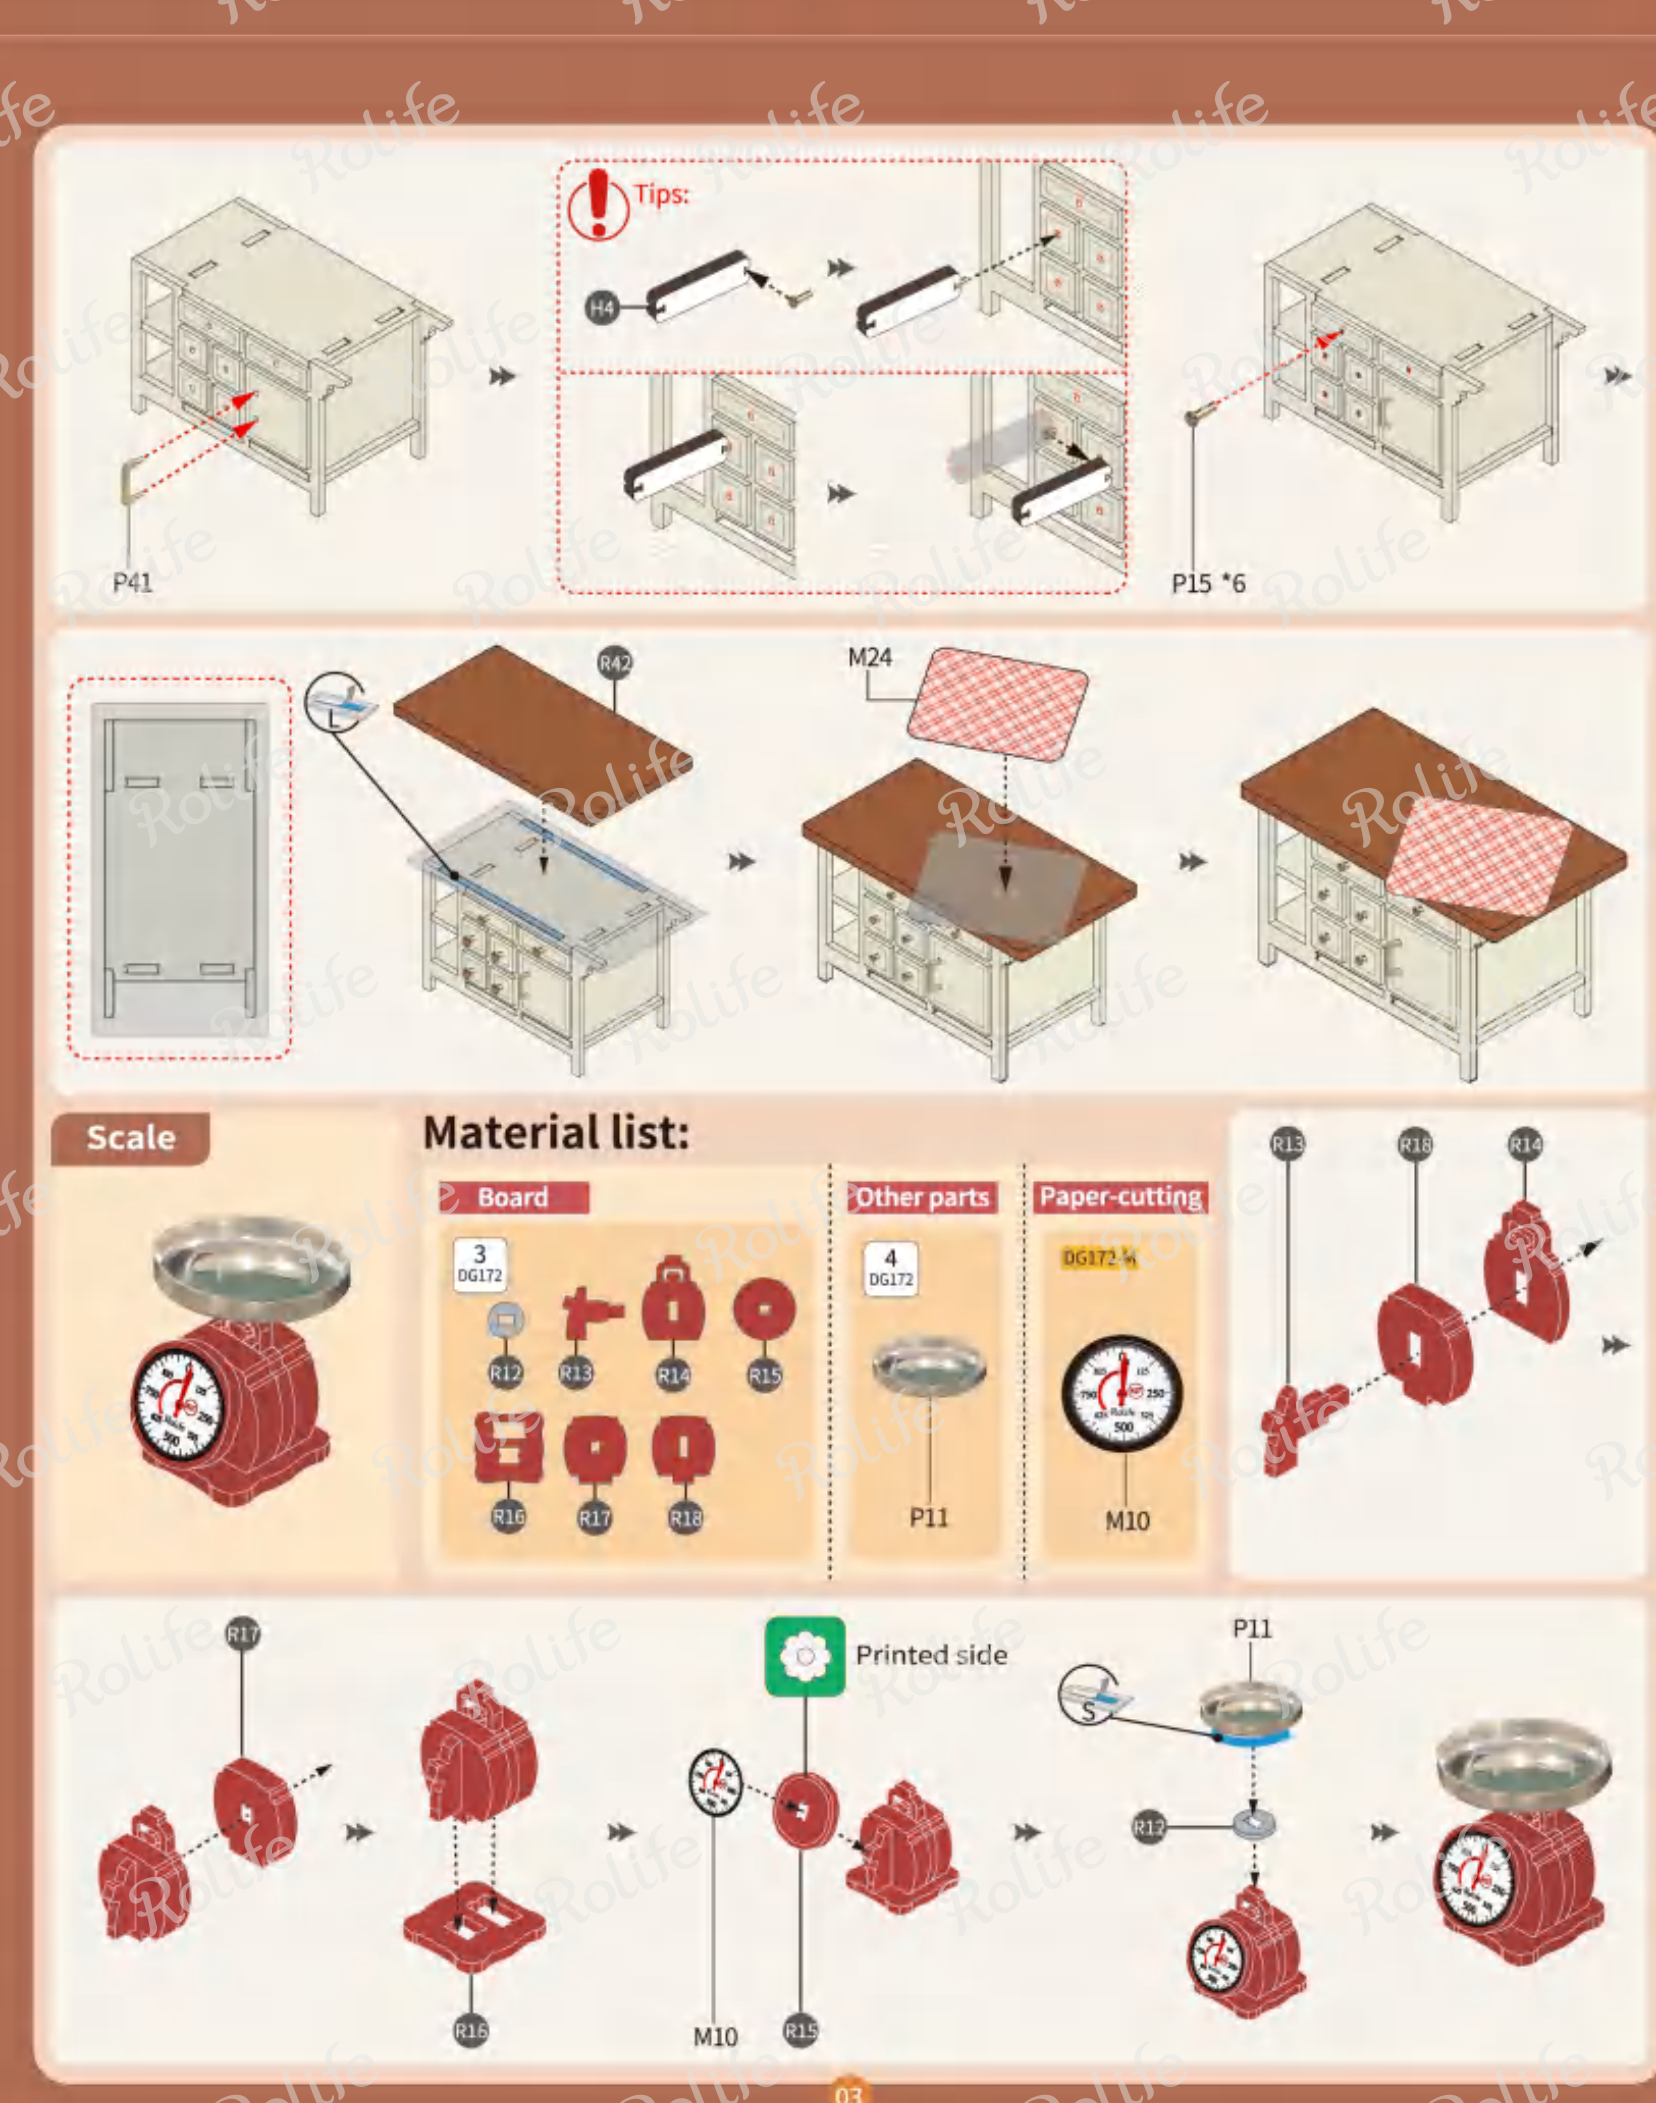

Tips:
H4
P41
P15 *6
R42
M24
Scale
Material list:
Board
3 DG172
R12
R13
R14
R15
R16
R17
R18
Other parts
4 DG172
P11
Paper-cutting
DG172-N
M10
R17
R16
M10
R15
Printed side
P11
R12

Single door cabinet

Cabinet B

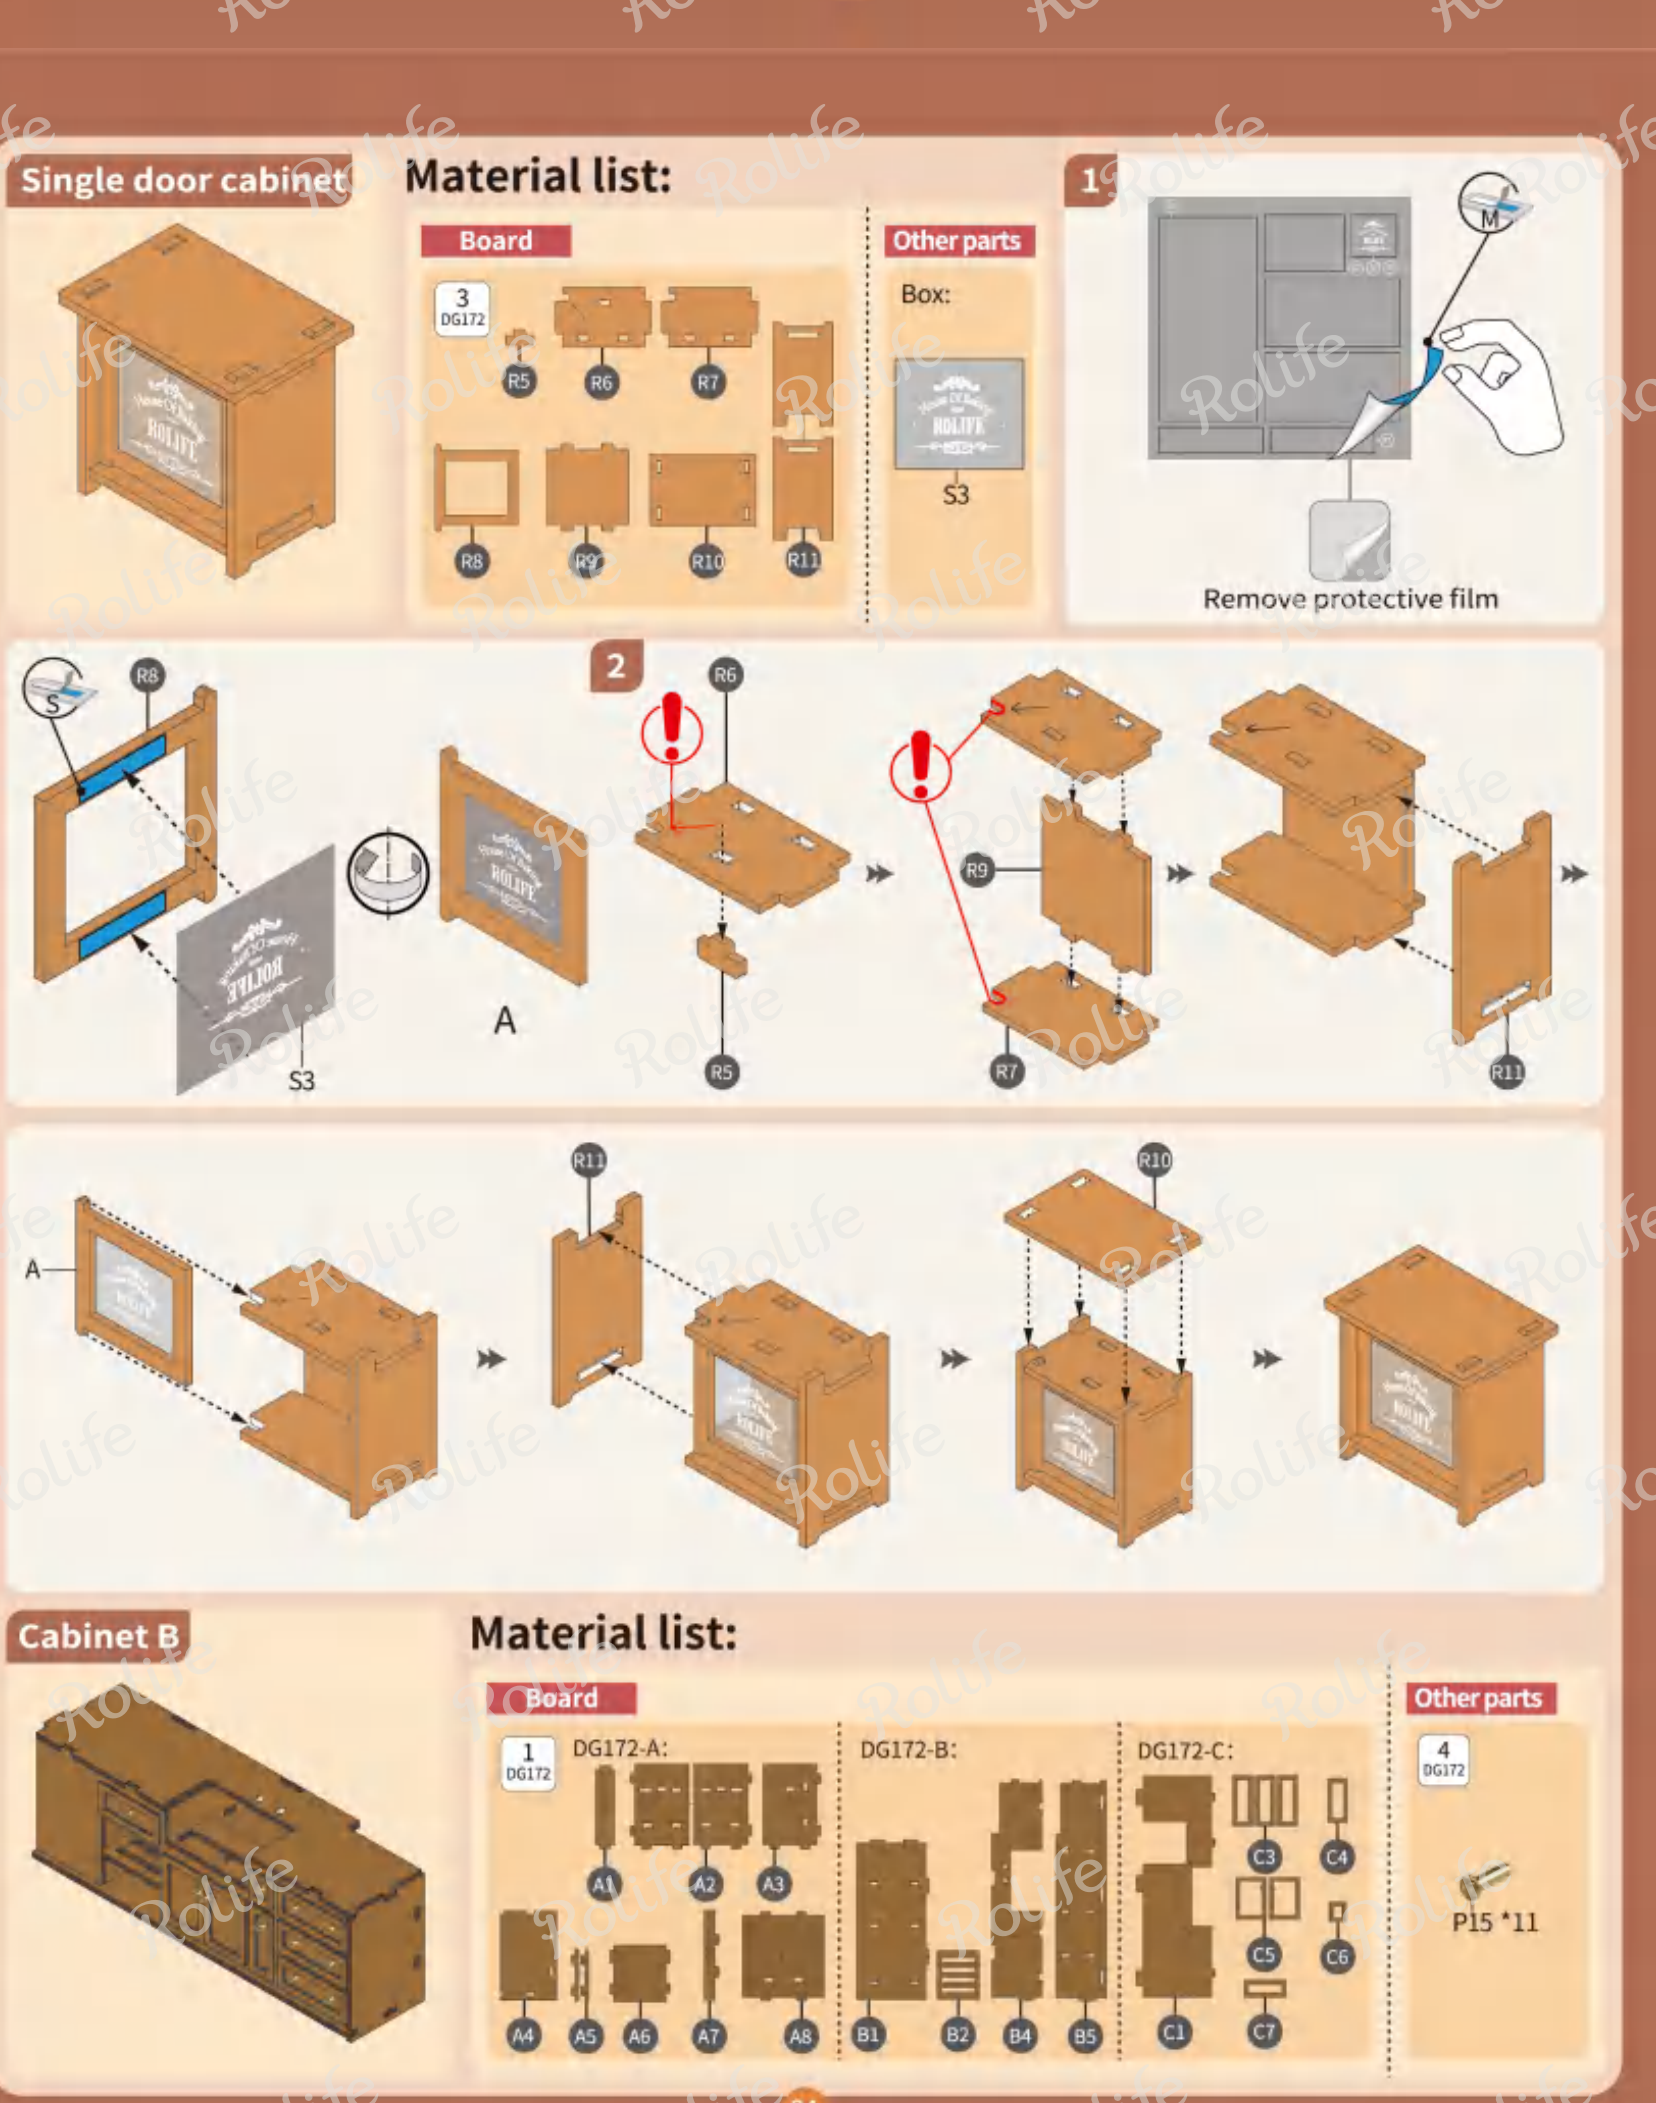

Single door cabinet
Material list:
Board
3 DG172
R5
R6
R7
R8
R9
R10
R11
Other parts
Box:
S3
1
M
Remove protective film
S
A
2
Cabinet B
Material list:
Board
1 DG172
DG172-A:
A1
A2
A3
A4
A5
A6
A7
A8
DG172-B:
B1
B2
B4
B5
DG172-C:
C1
C3
C4
C5
C6
C7
Other parts
4 DG172
P15 *11

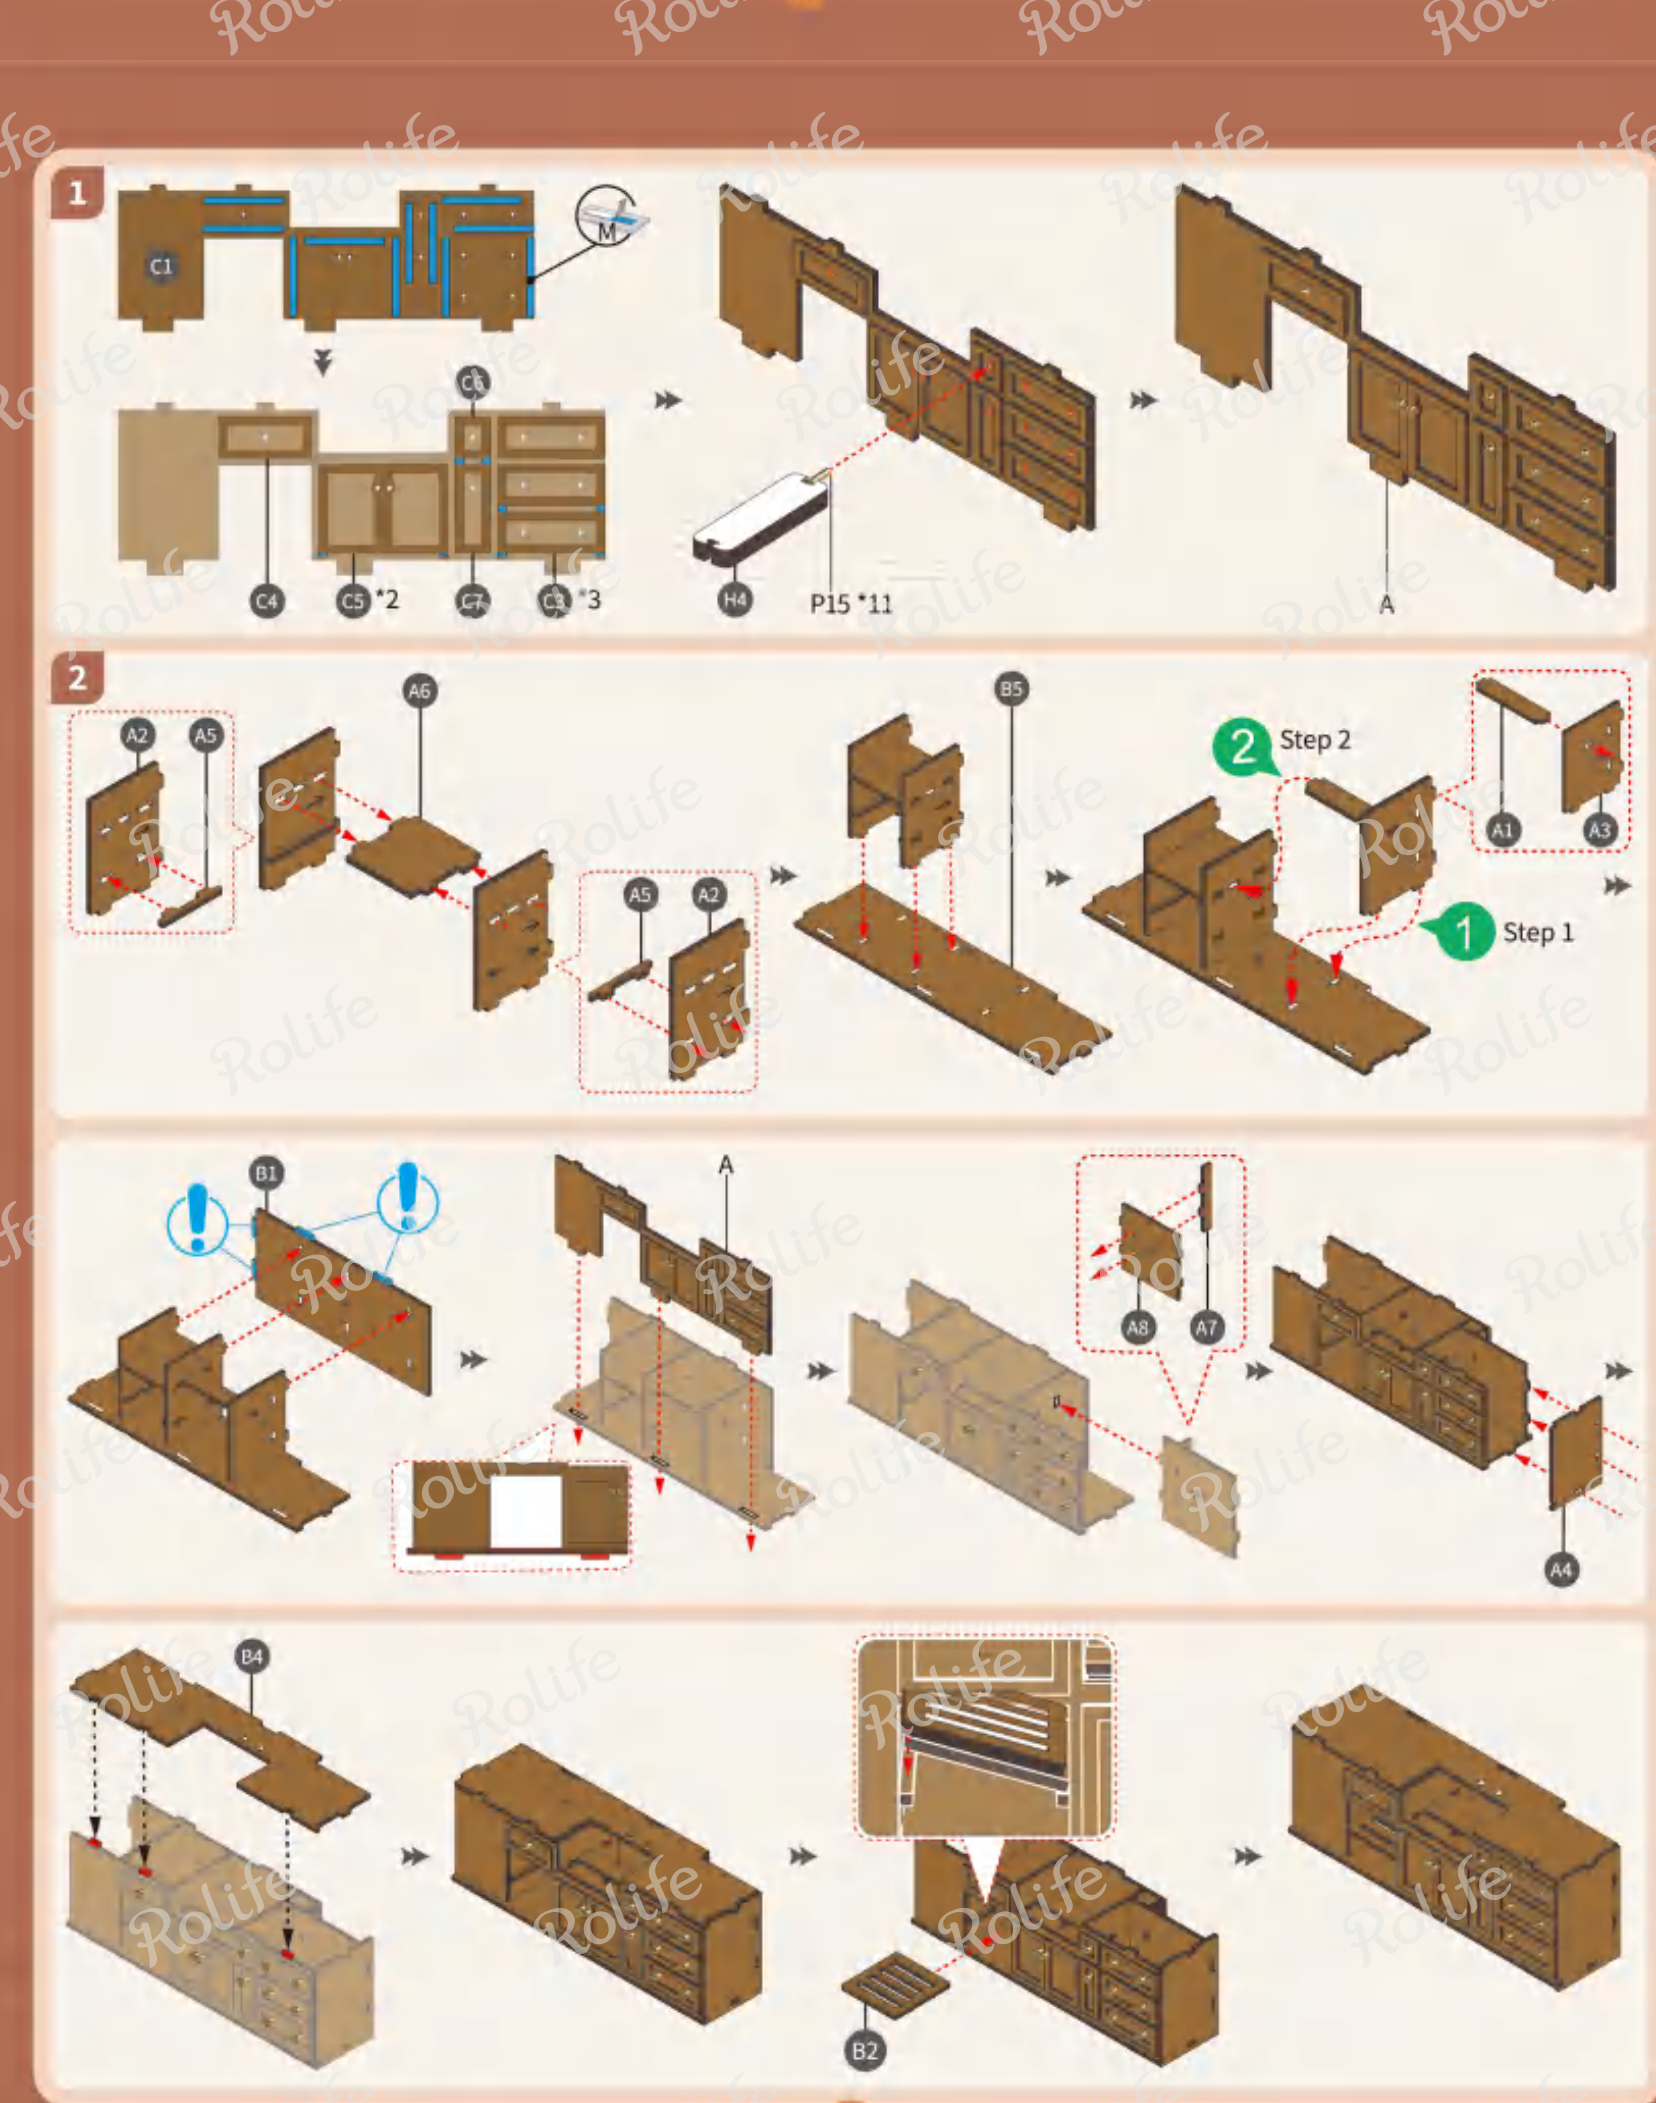

1
M
C1
C4
C5 *2
C6
C3 *3
H4
P15 *11
A
2
A2
A5
A6
B5
Step 2
Step 1
A1
A3
B1
A
A8
A7
A4
B4
B2

Cabinet A

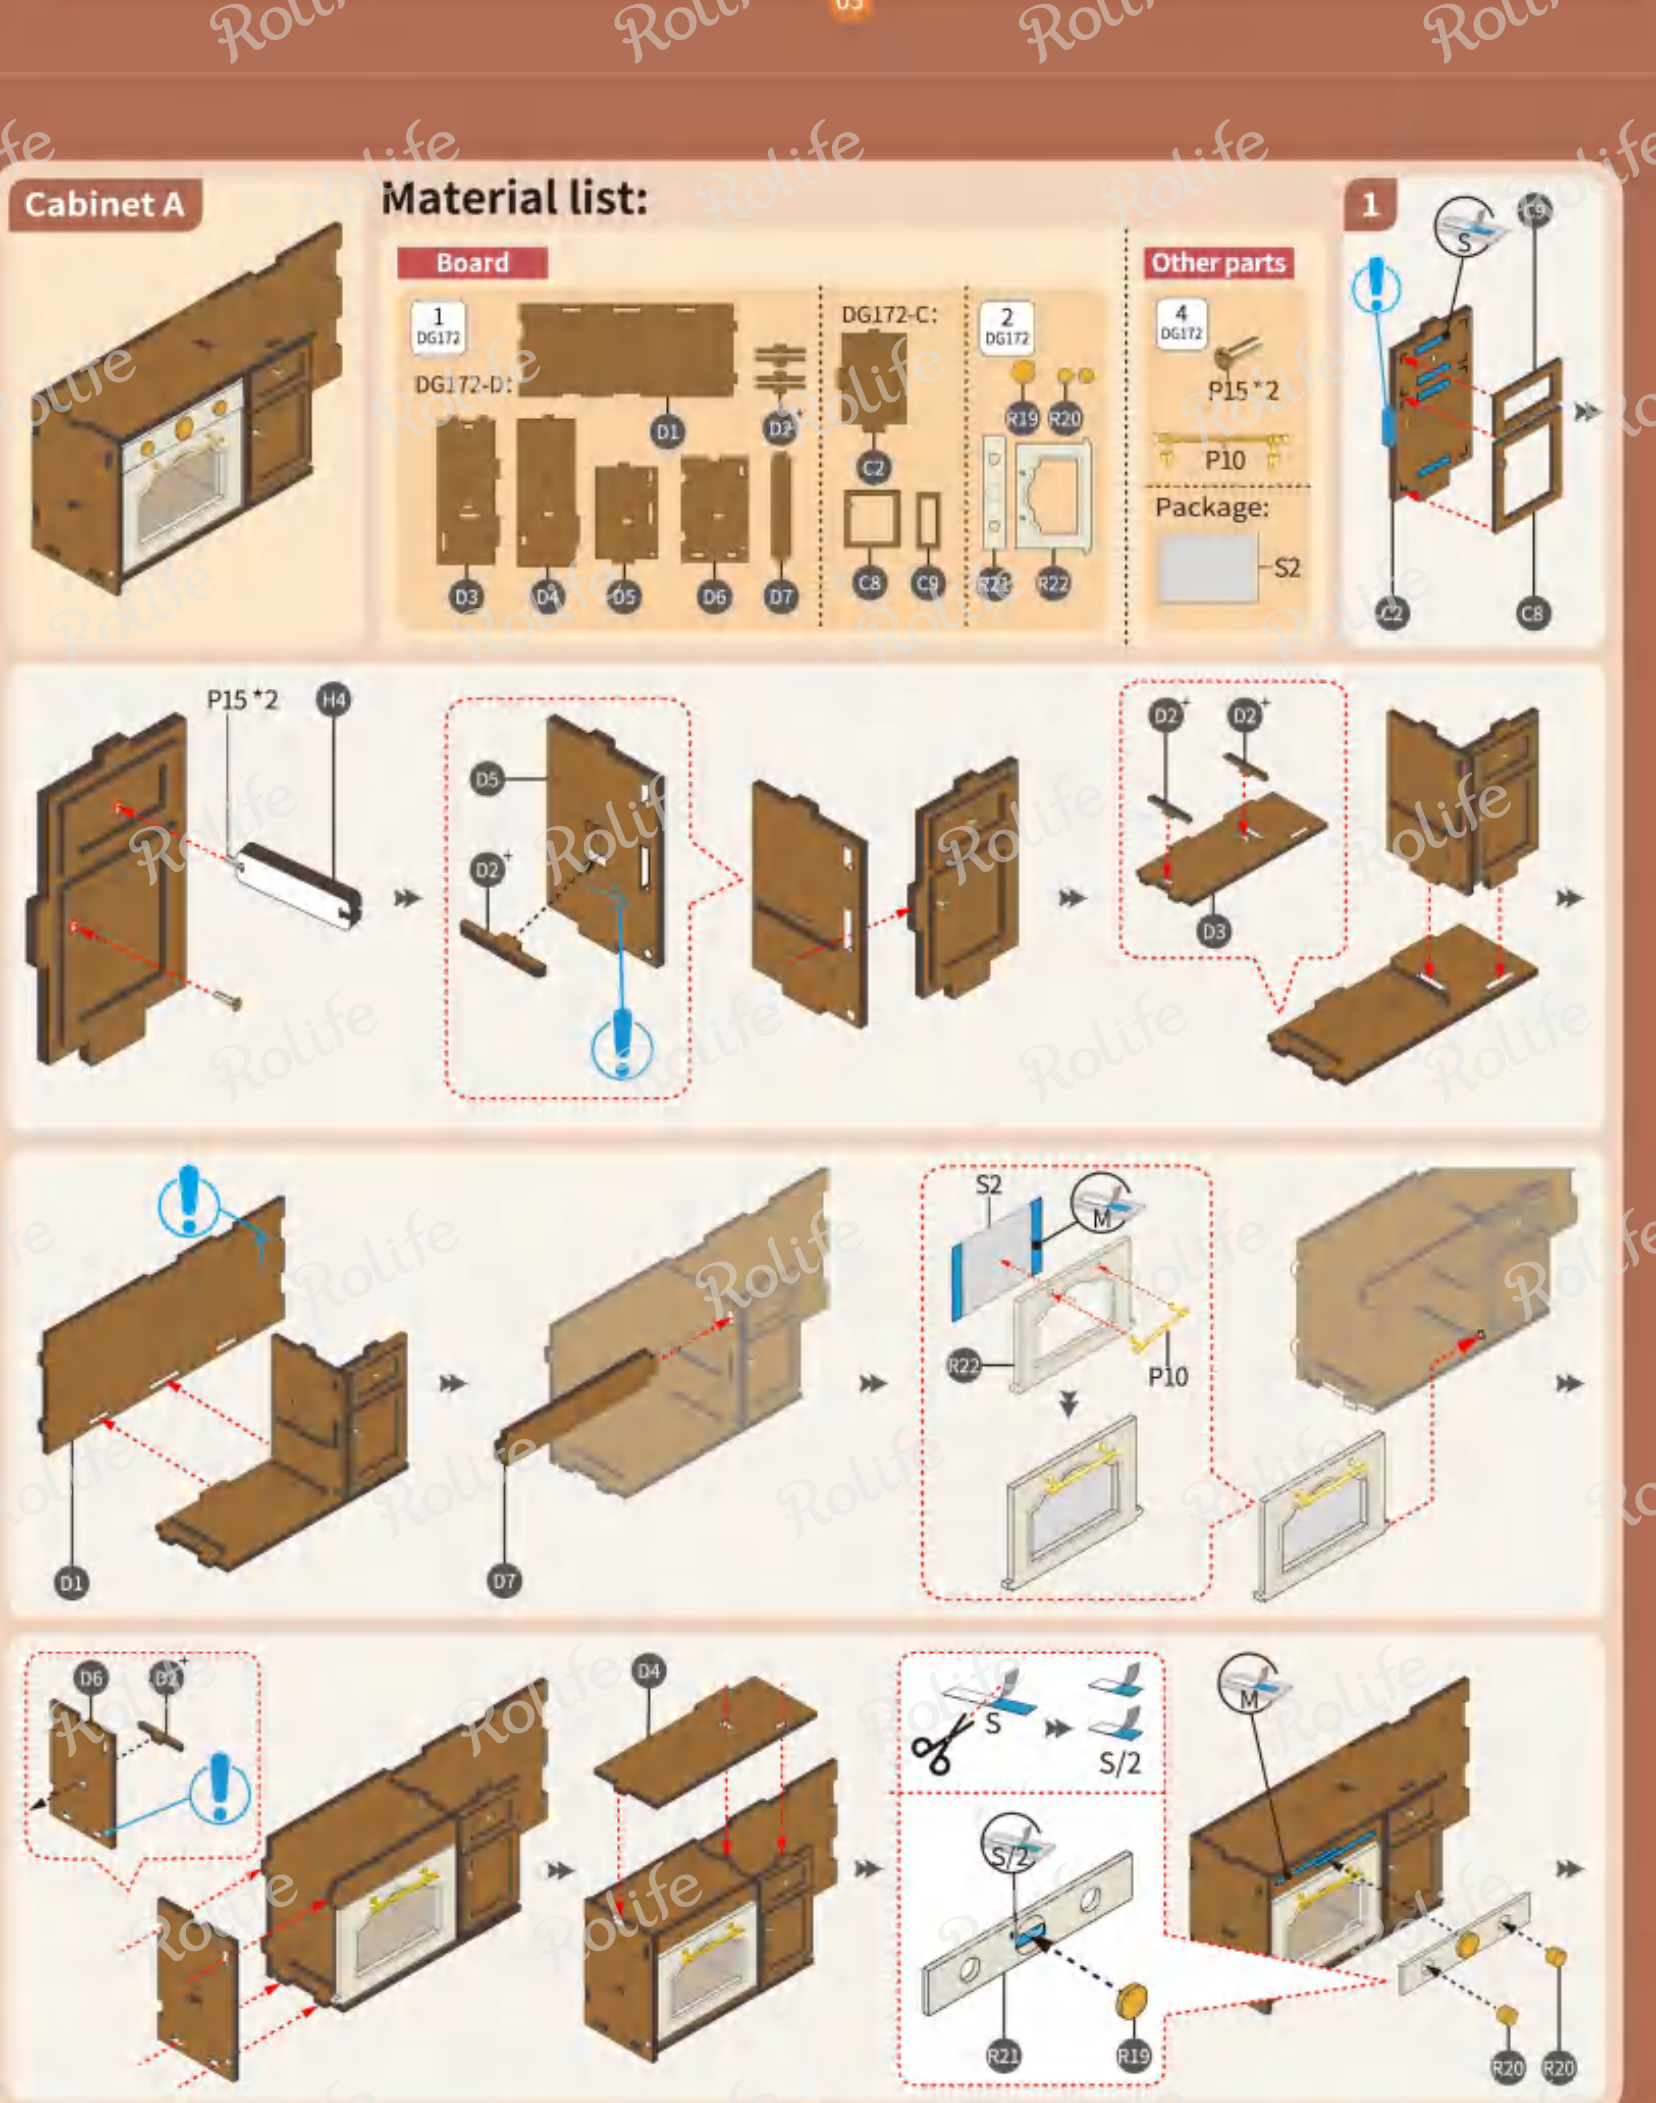

Cabinet A
Material list:
Board
1 DG172
DG172-D:
D1
D2
D3
D4
D5
D6
D7
DG172-C:
C2
C8
C9
2 DG172
R19
R20
R21
R22
Other parts
4 DG172
P15 *2
P10
Package:
S2
1
P15 *2
H4
S2
M
P10
S
S/2

Cabinet

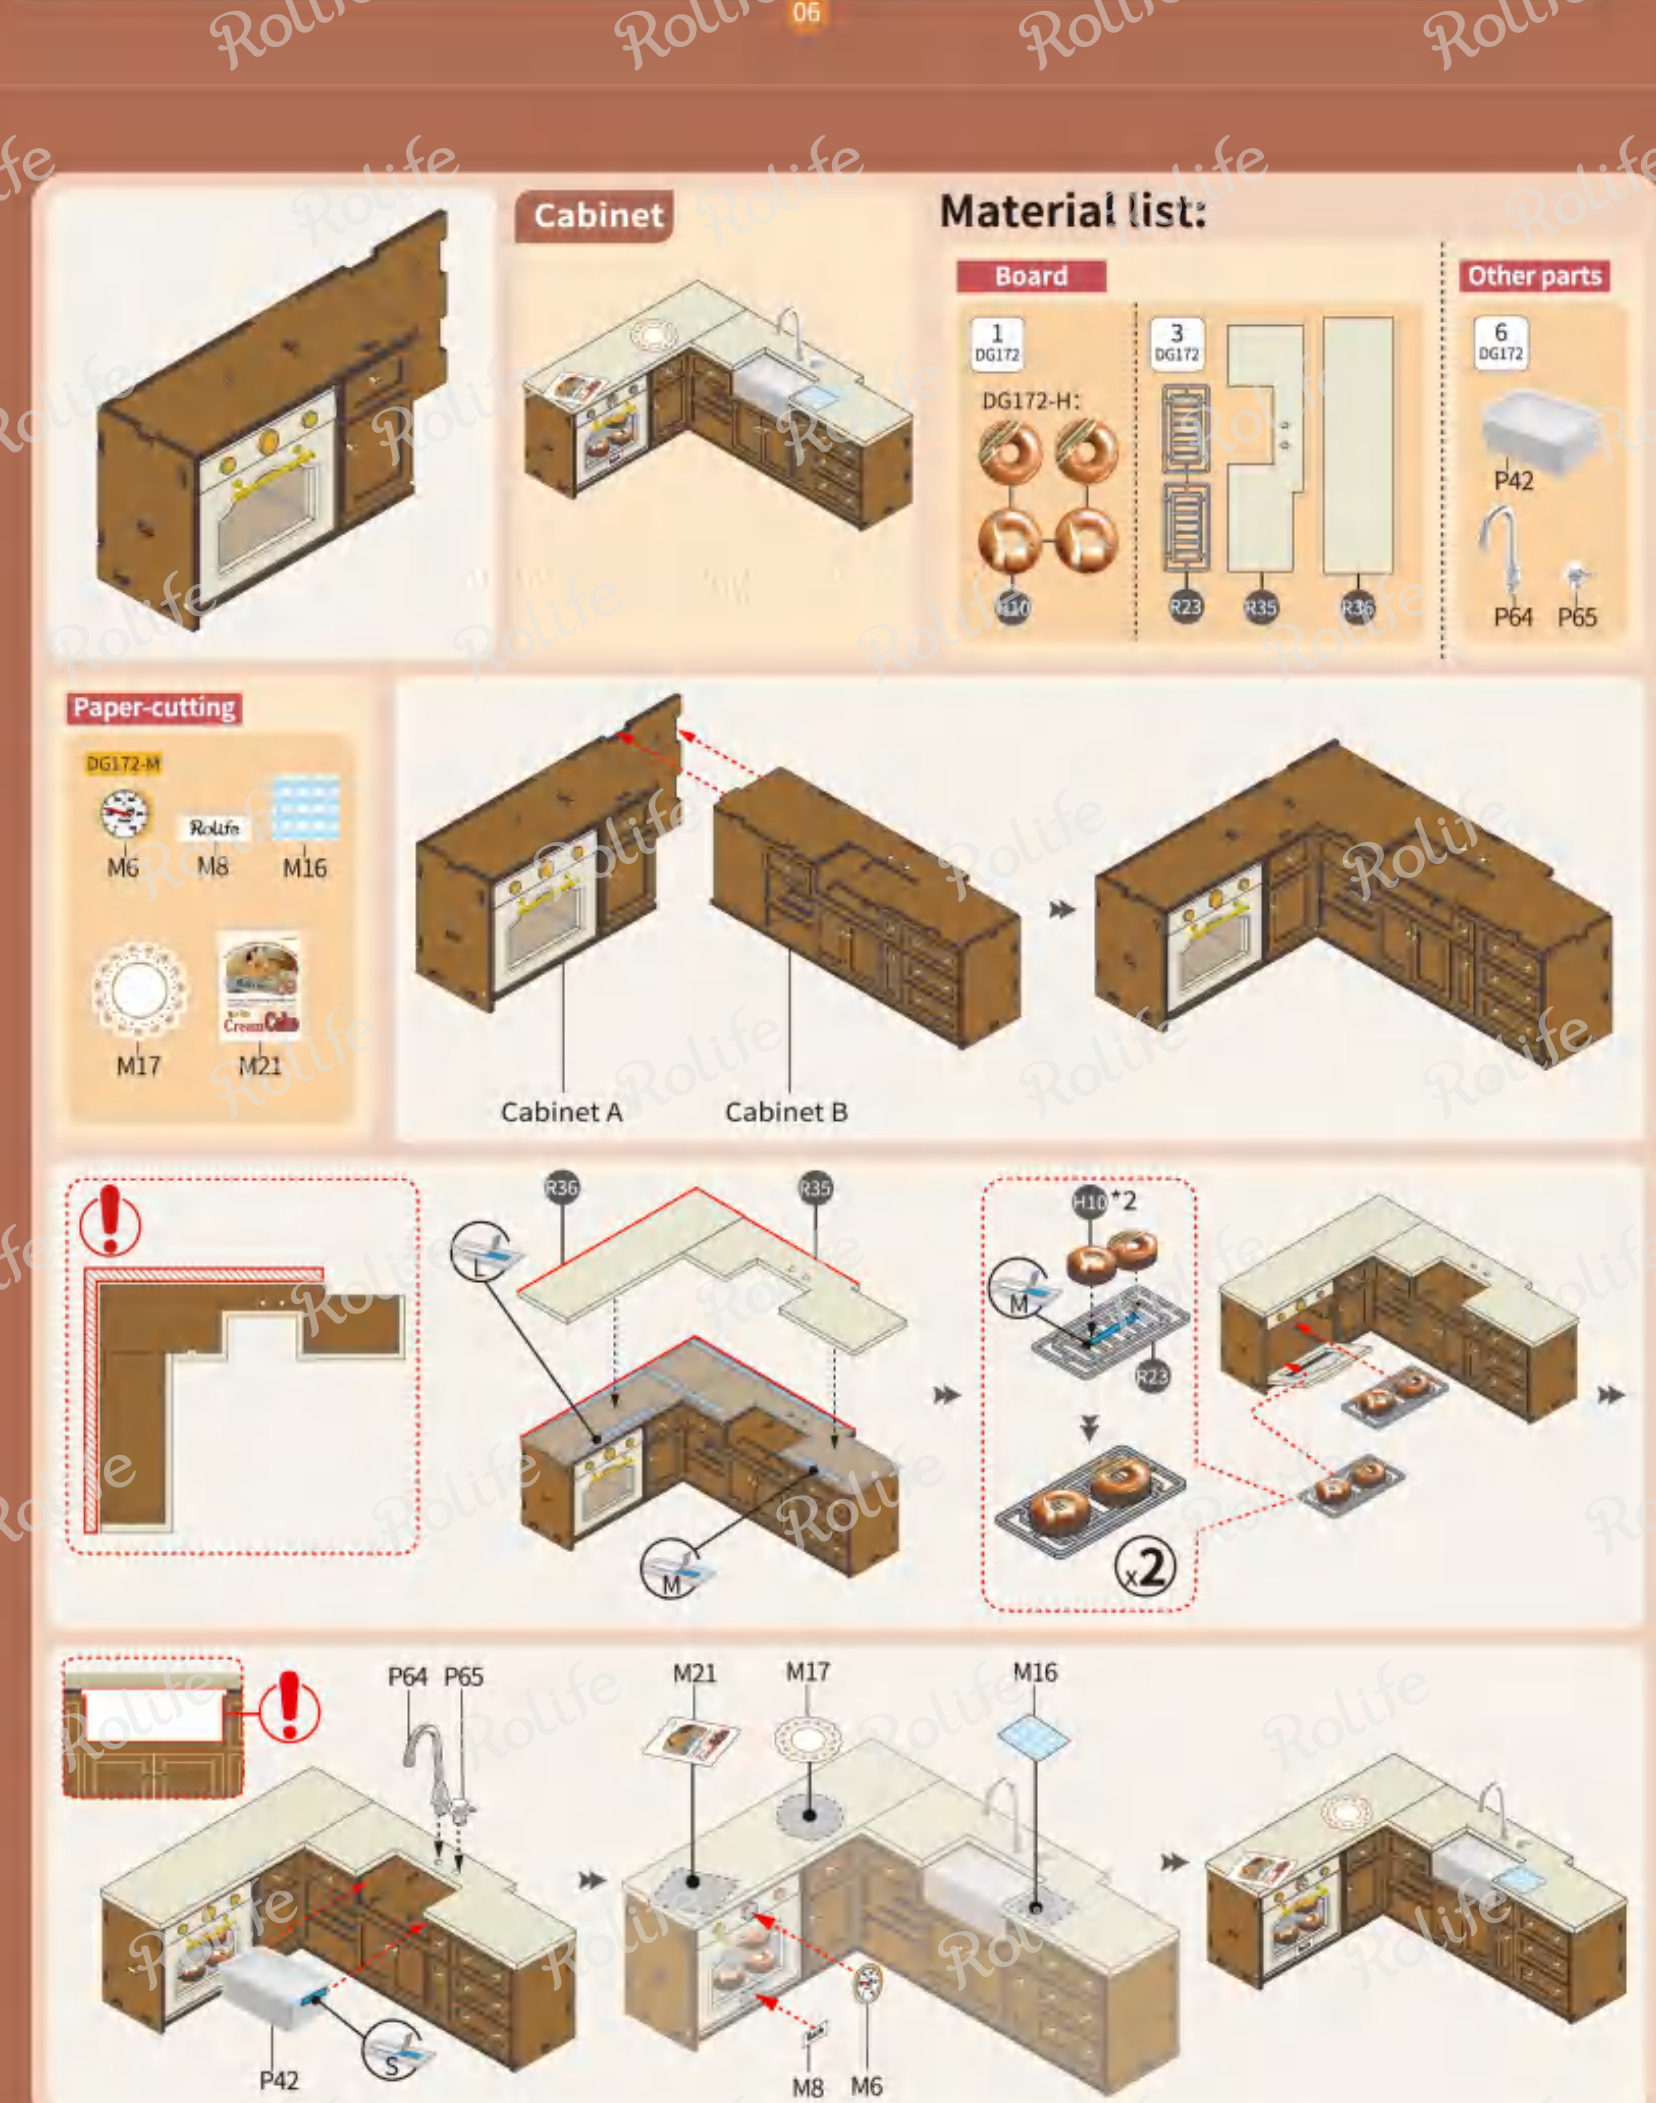

Cabinet
Material list:
Board
1 DG172
DG172-H:
H10
3 DG172
R23
R35
R36
Other parts
6 DG172
P42
P64
P65
Paper-cutting
DG172-M
M6
M8
M16
M17
M21
Cabinet A
Cabinet B
R36
R35
R10 *2
②
P64
P65
M21
M17
M16
P42
M8
M6

Wooden basket A

Wooden basket B

Wall cupboard A

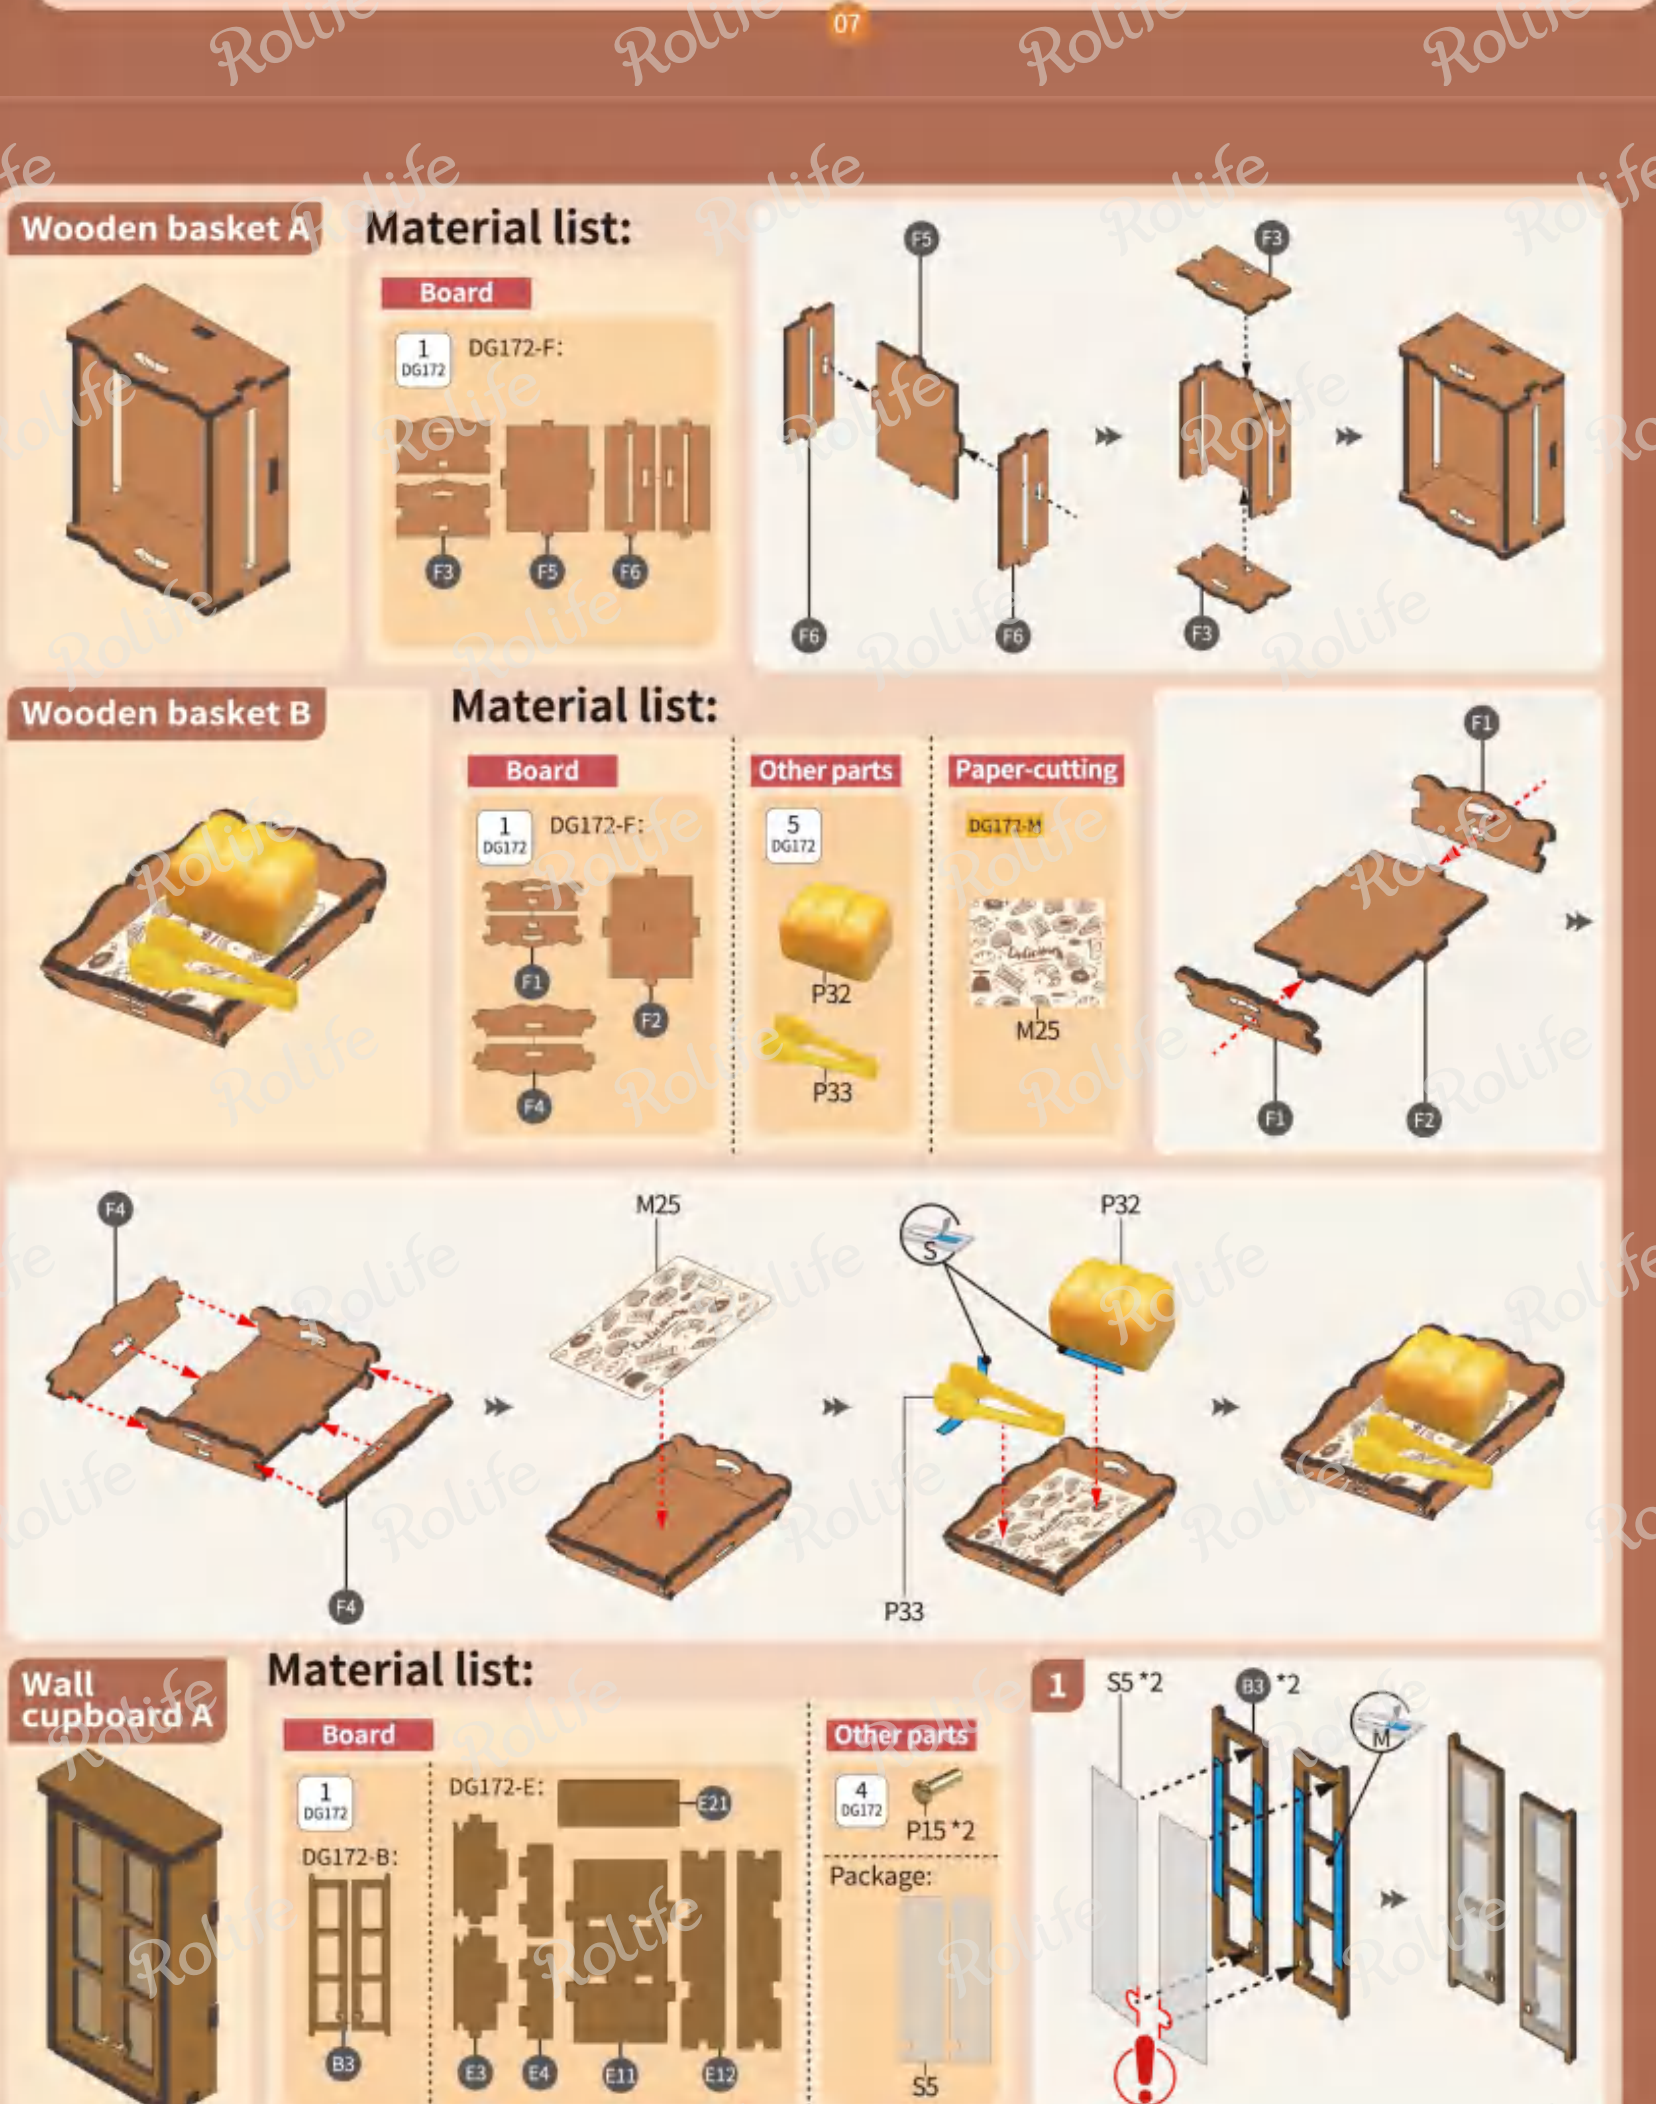

Wooden basket A
Material list:
Board
1 DG172
DG172-F:
F3
F5
F6
Wooden basket B
Material list:
Board
1 DG172
DG172-F:
F1
F2
F4
Other parts
5 DG172
P32
P33
Paper-cutting
DG172-M
M25
Wall cupboard A
Material list:
Board
1 DG172
DG172-E:
E1
E3
E11
E12
E21
DG172-B:
B3
Other parts
4 DG172
P15 *2
Package:
S5
1
S5 *2
B3 *2
M

Wall cupboard B

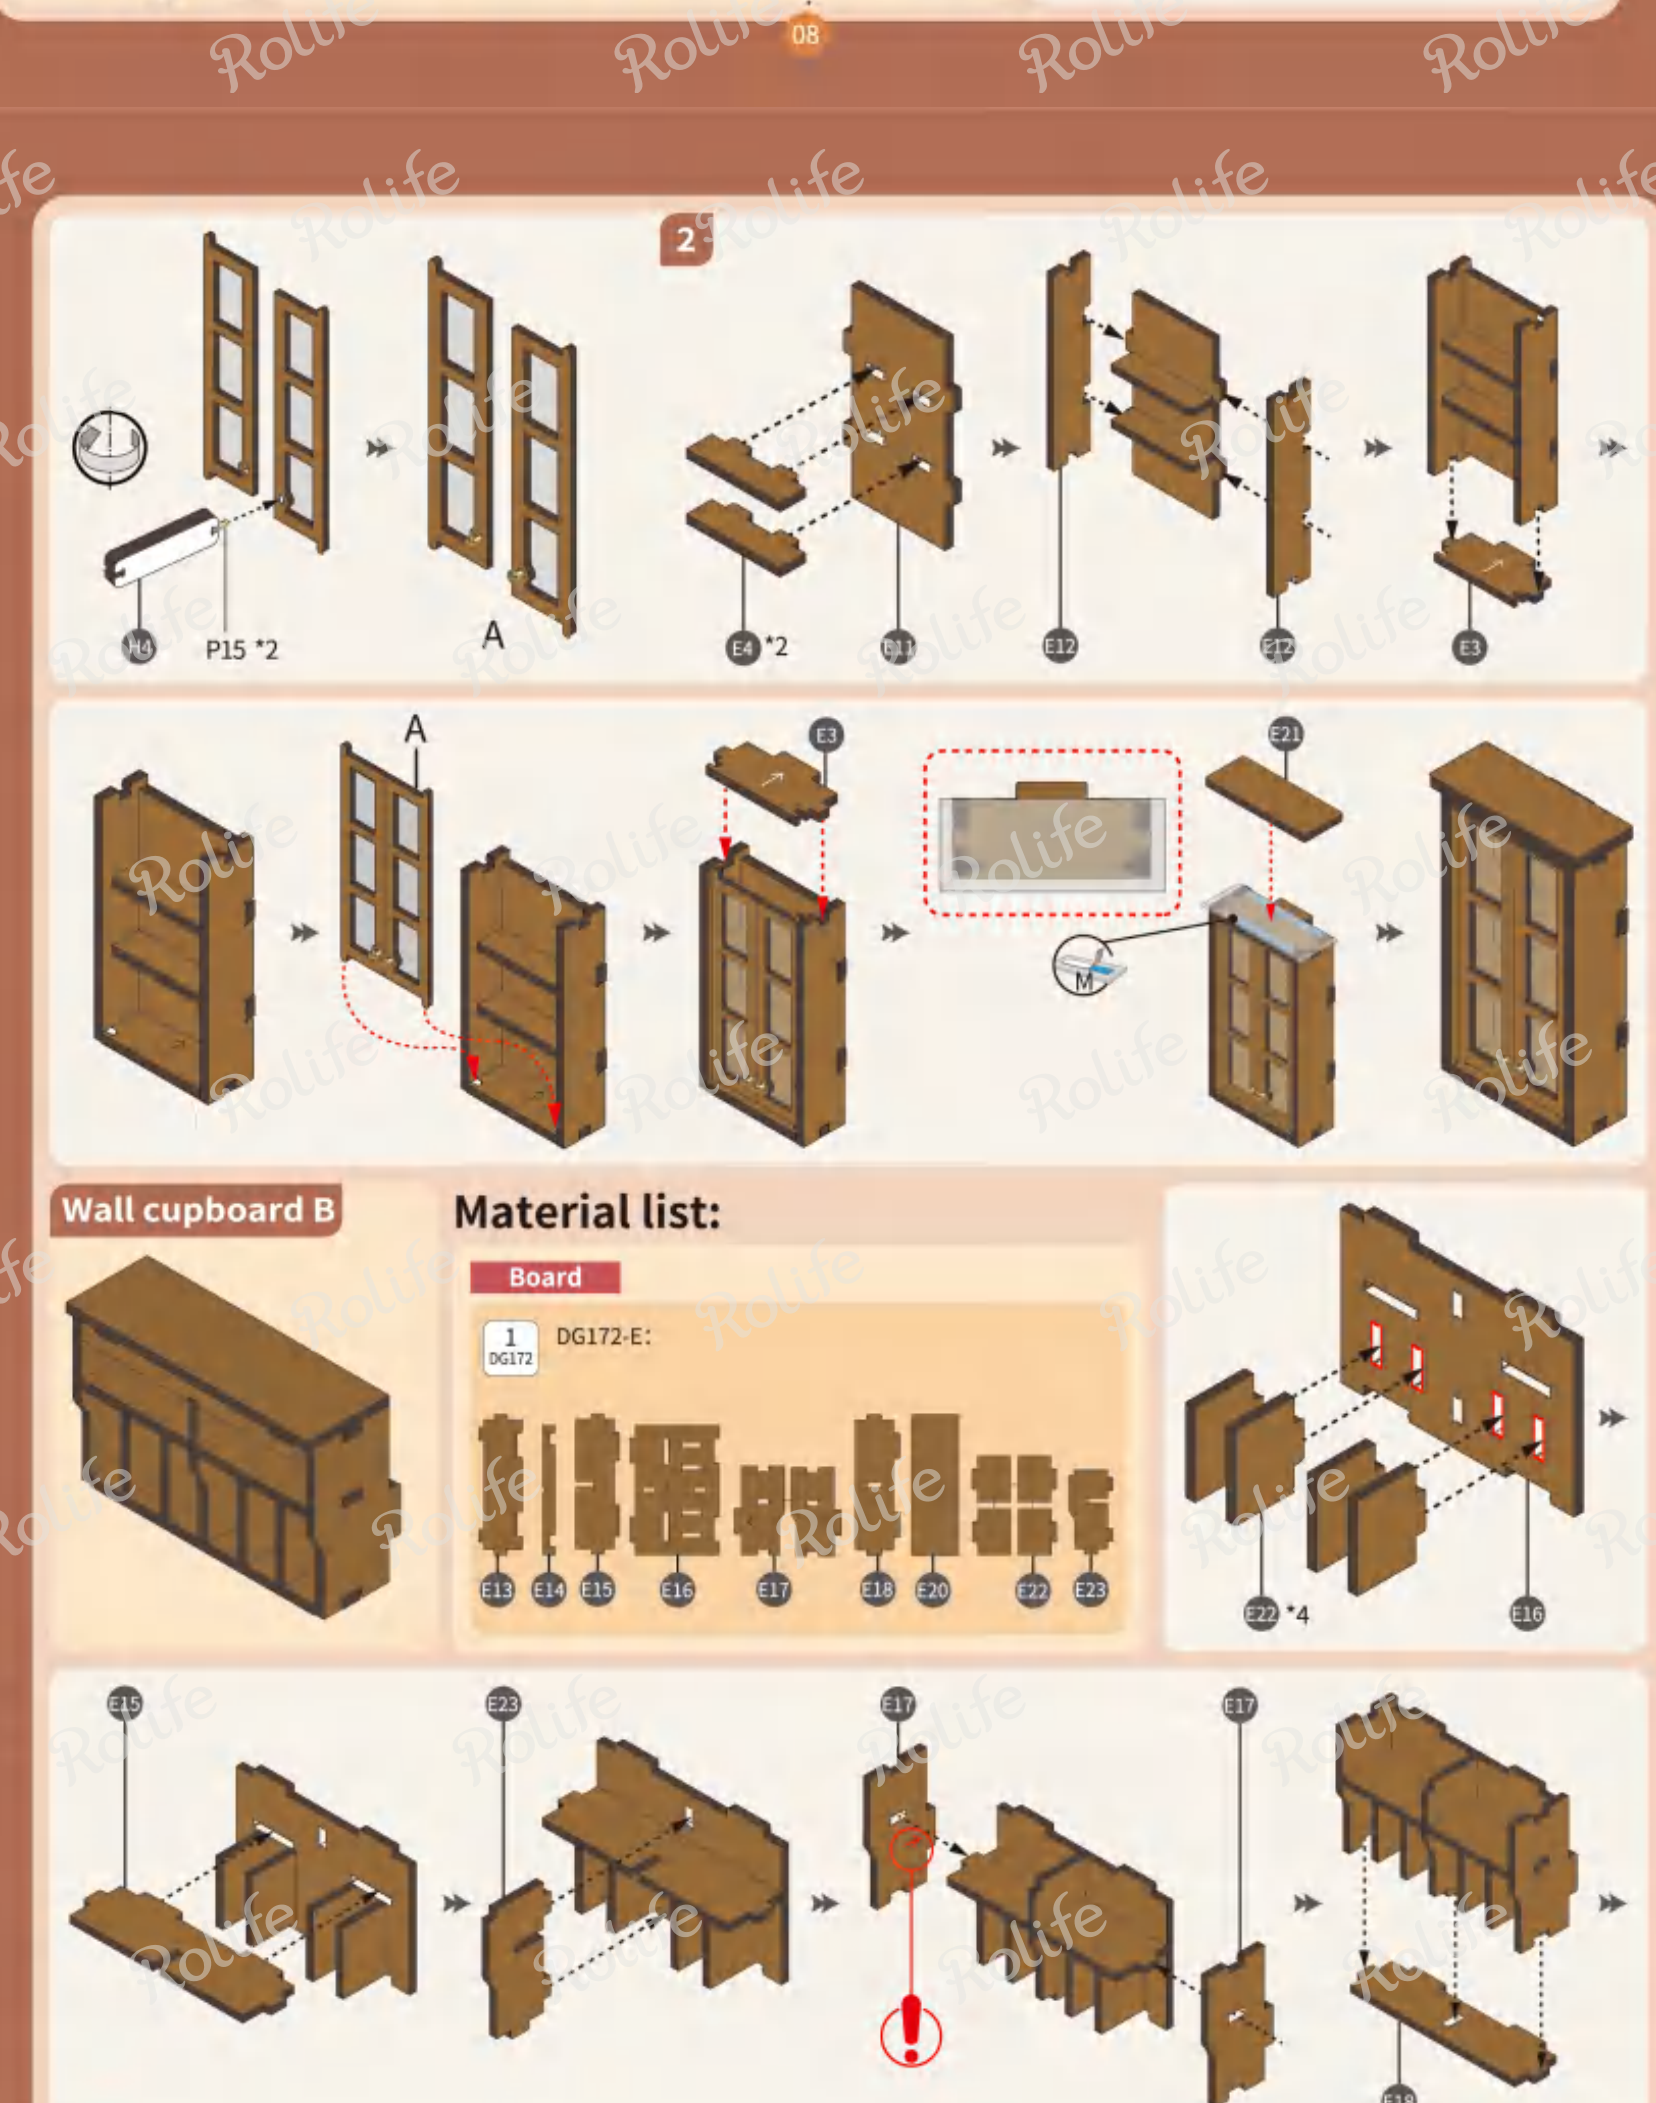

2
P15 *2
A
E4 *2
E11
E12
E21
E3
M
Wall cupboard B
Material list:
Board
1 DG172
DG172-E:
E13
E14
E15
E16
E17
E18
E20
E22
E23
E22 *4
E18

Wall cupboard C

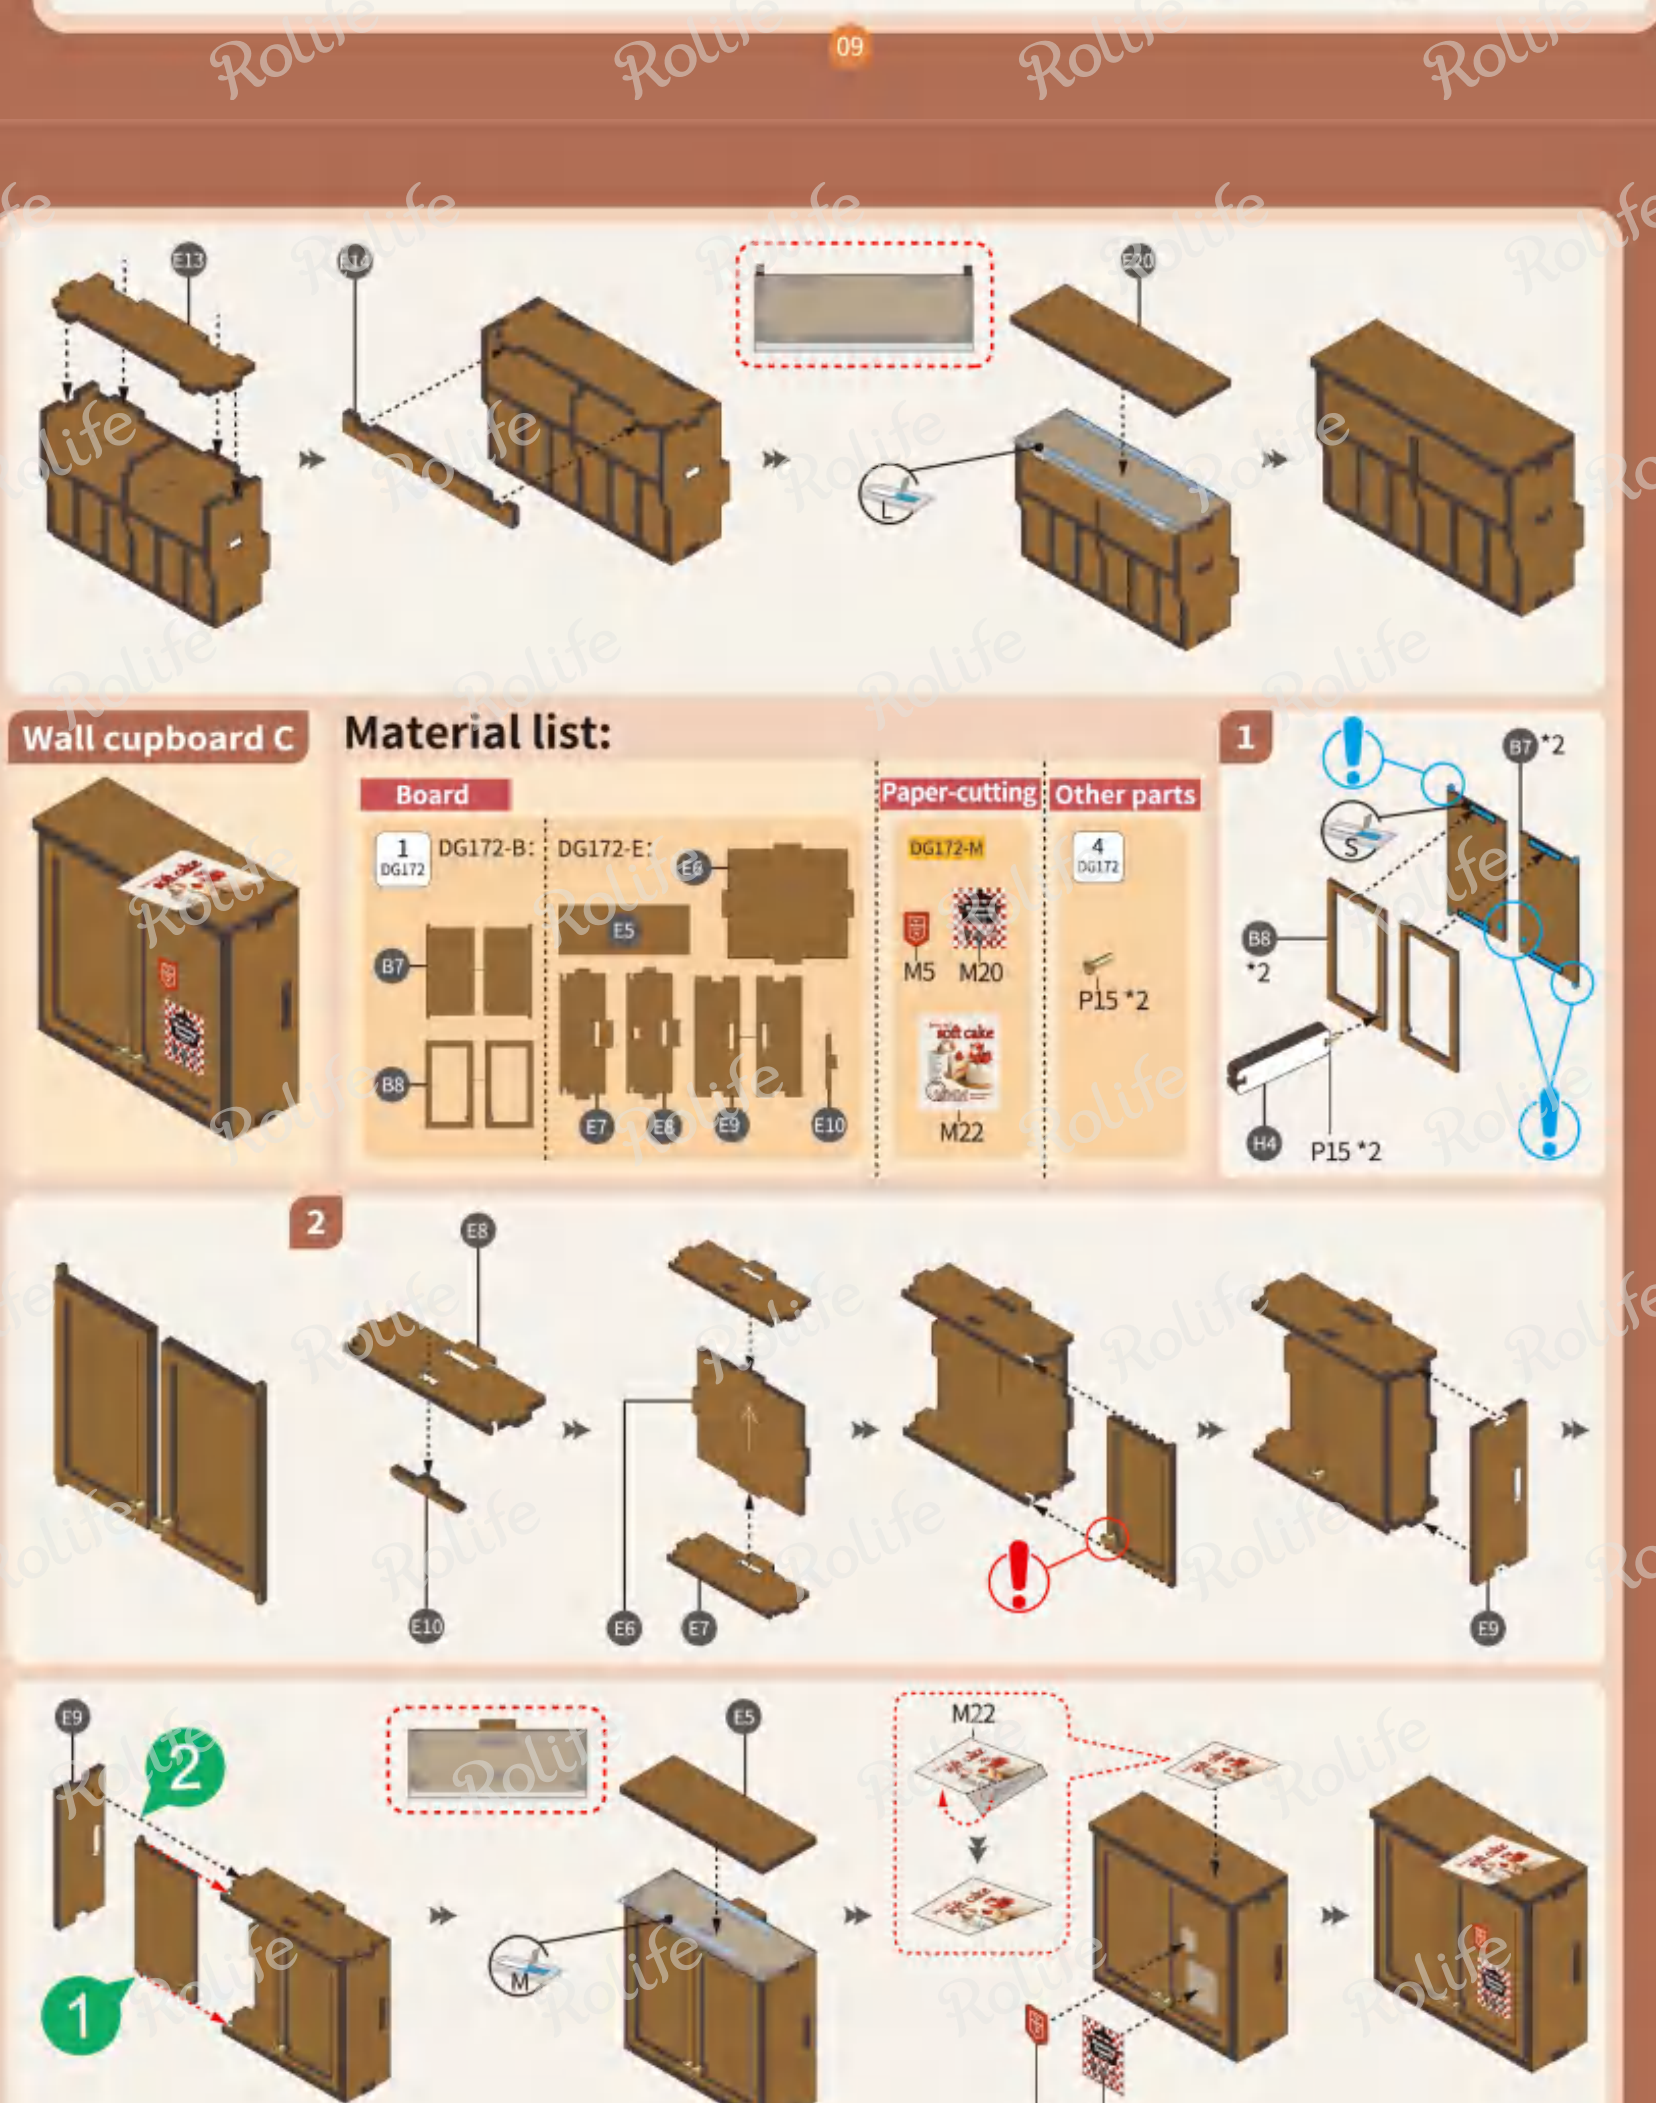

E13
E14
Wall cupboard C
Material list:
Board
1 DG172
DG172-B:
B7
B8
DG172-E:
E5
E6
E7
E8
E9
E10
Paper-cutting
DG172-M
M5
M20
M22
Other parts
4 DG172
P15 *2
1
B7 *2
B6 *2
H4
P15 *2
2
M22
M5
M20

Window

Wall A

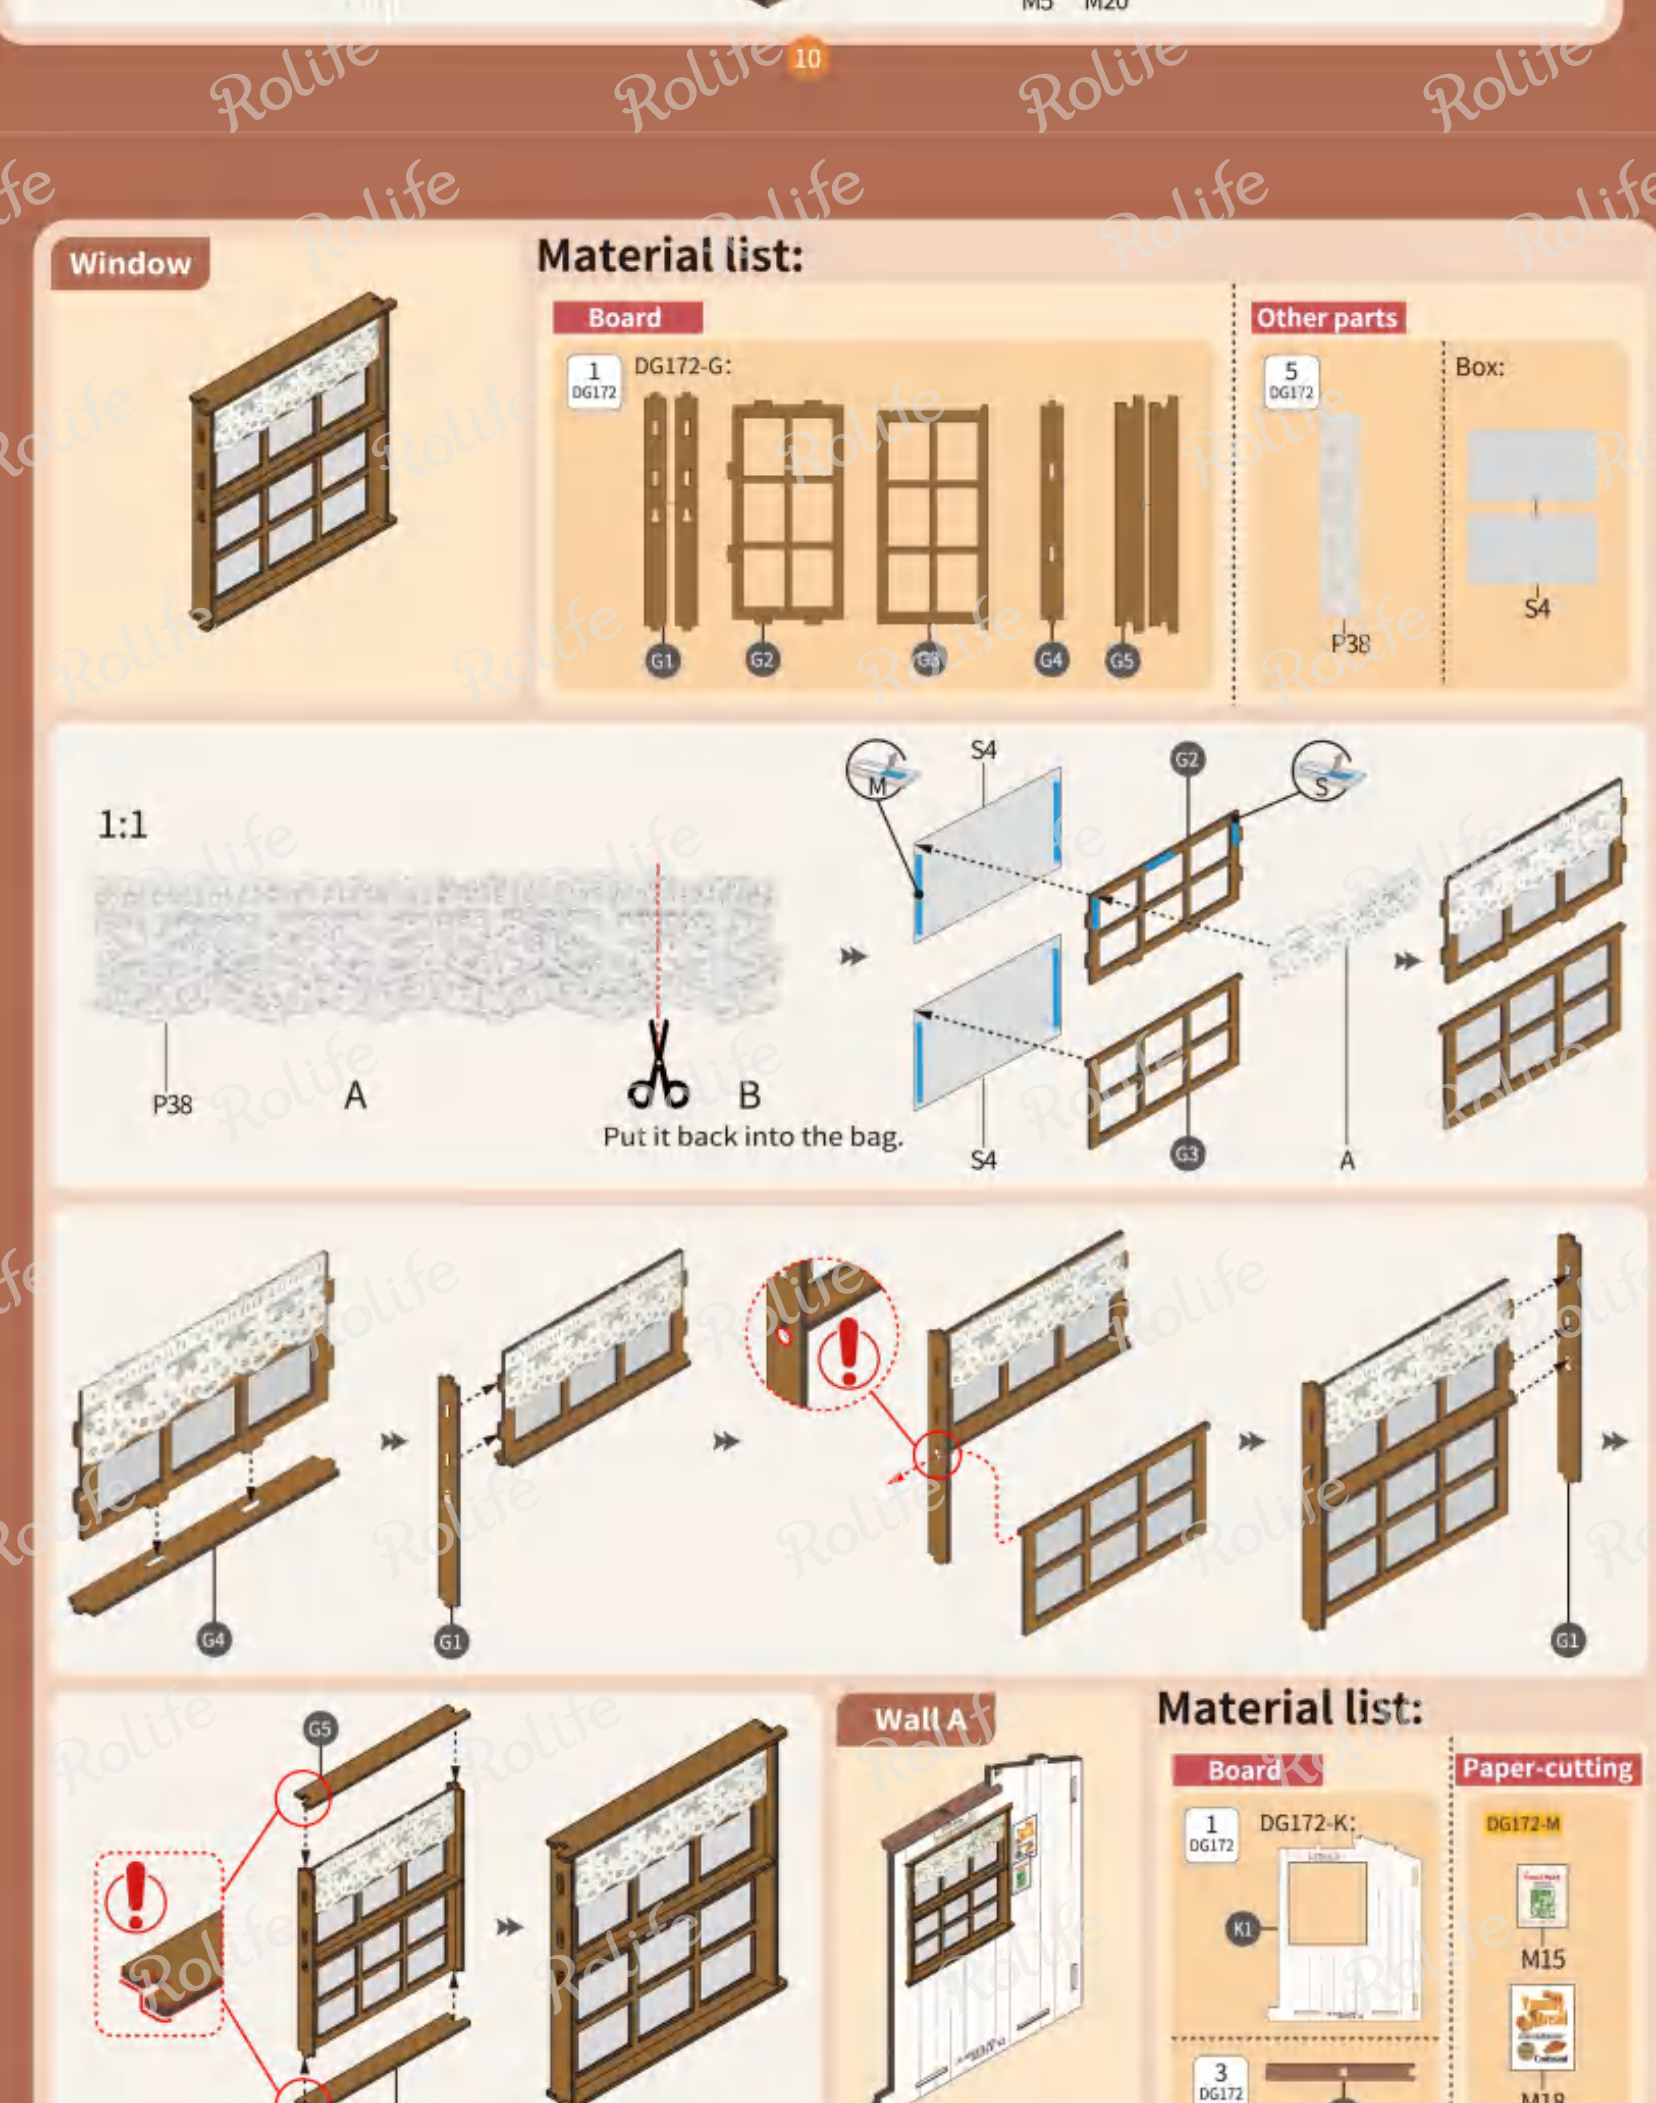

Window
Material list:
Board
1 DG172
DG172-G:
G1
G2
G3
G4
G5
Other parts
5 DG172
P38
Box:
S4
1:1
P38
A
B
Put it back into the bag.
S4
M
S
A
Wall A
Material list:
Board
1 DG172
DG172-K:
K1
3 DG172
R39
Paper-cutting
DG172-M
M15
M18

Wall B

Wall C

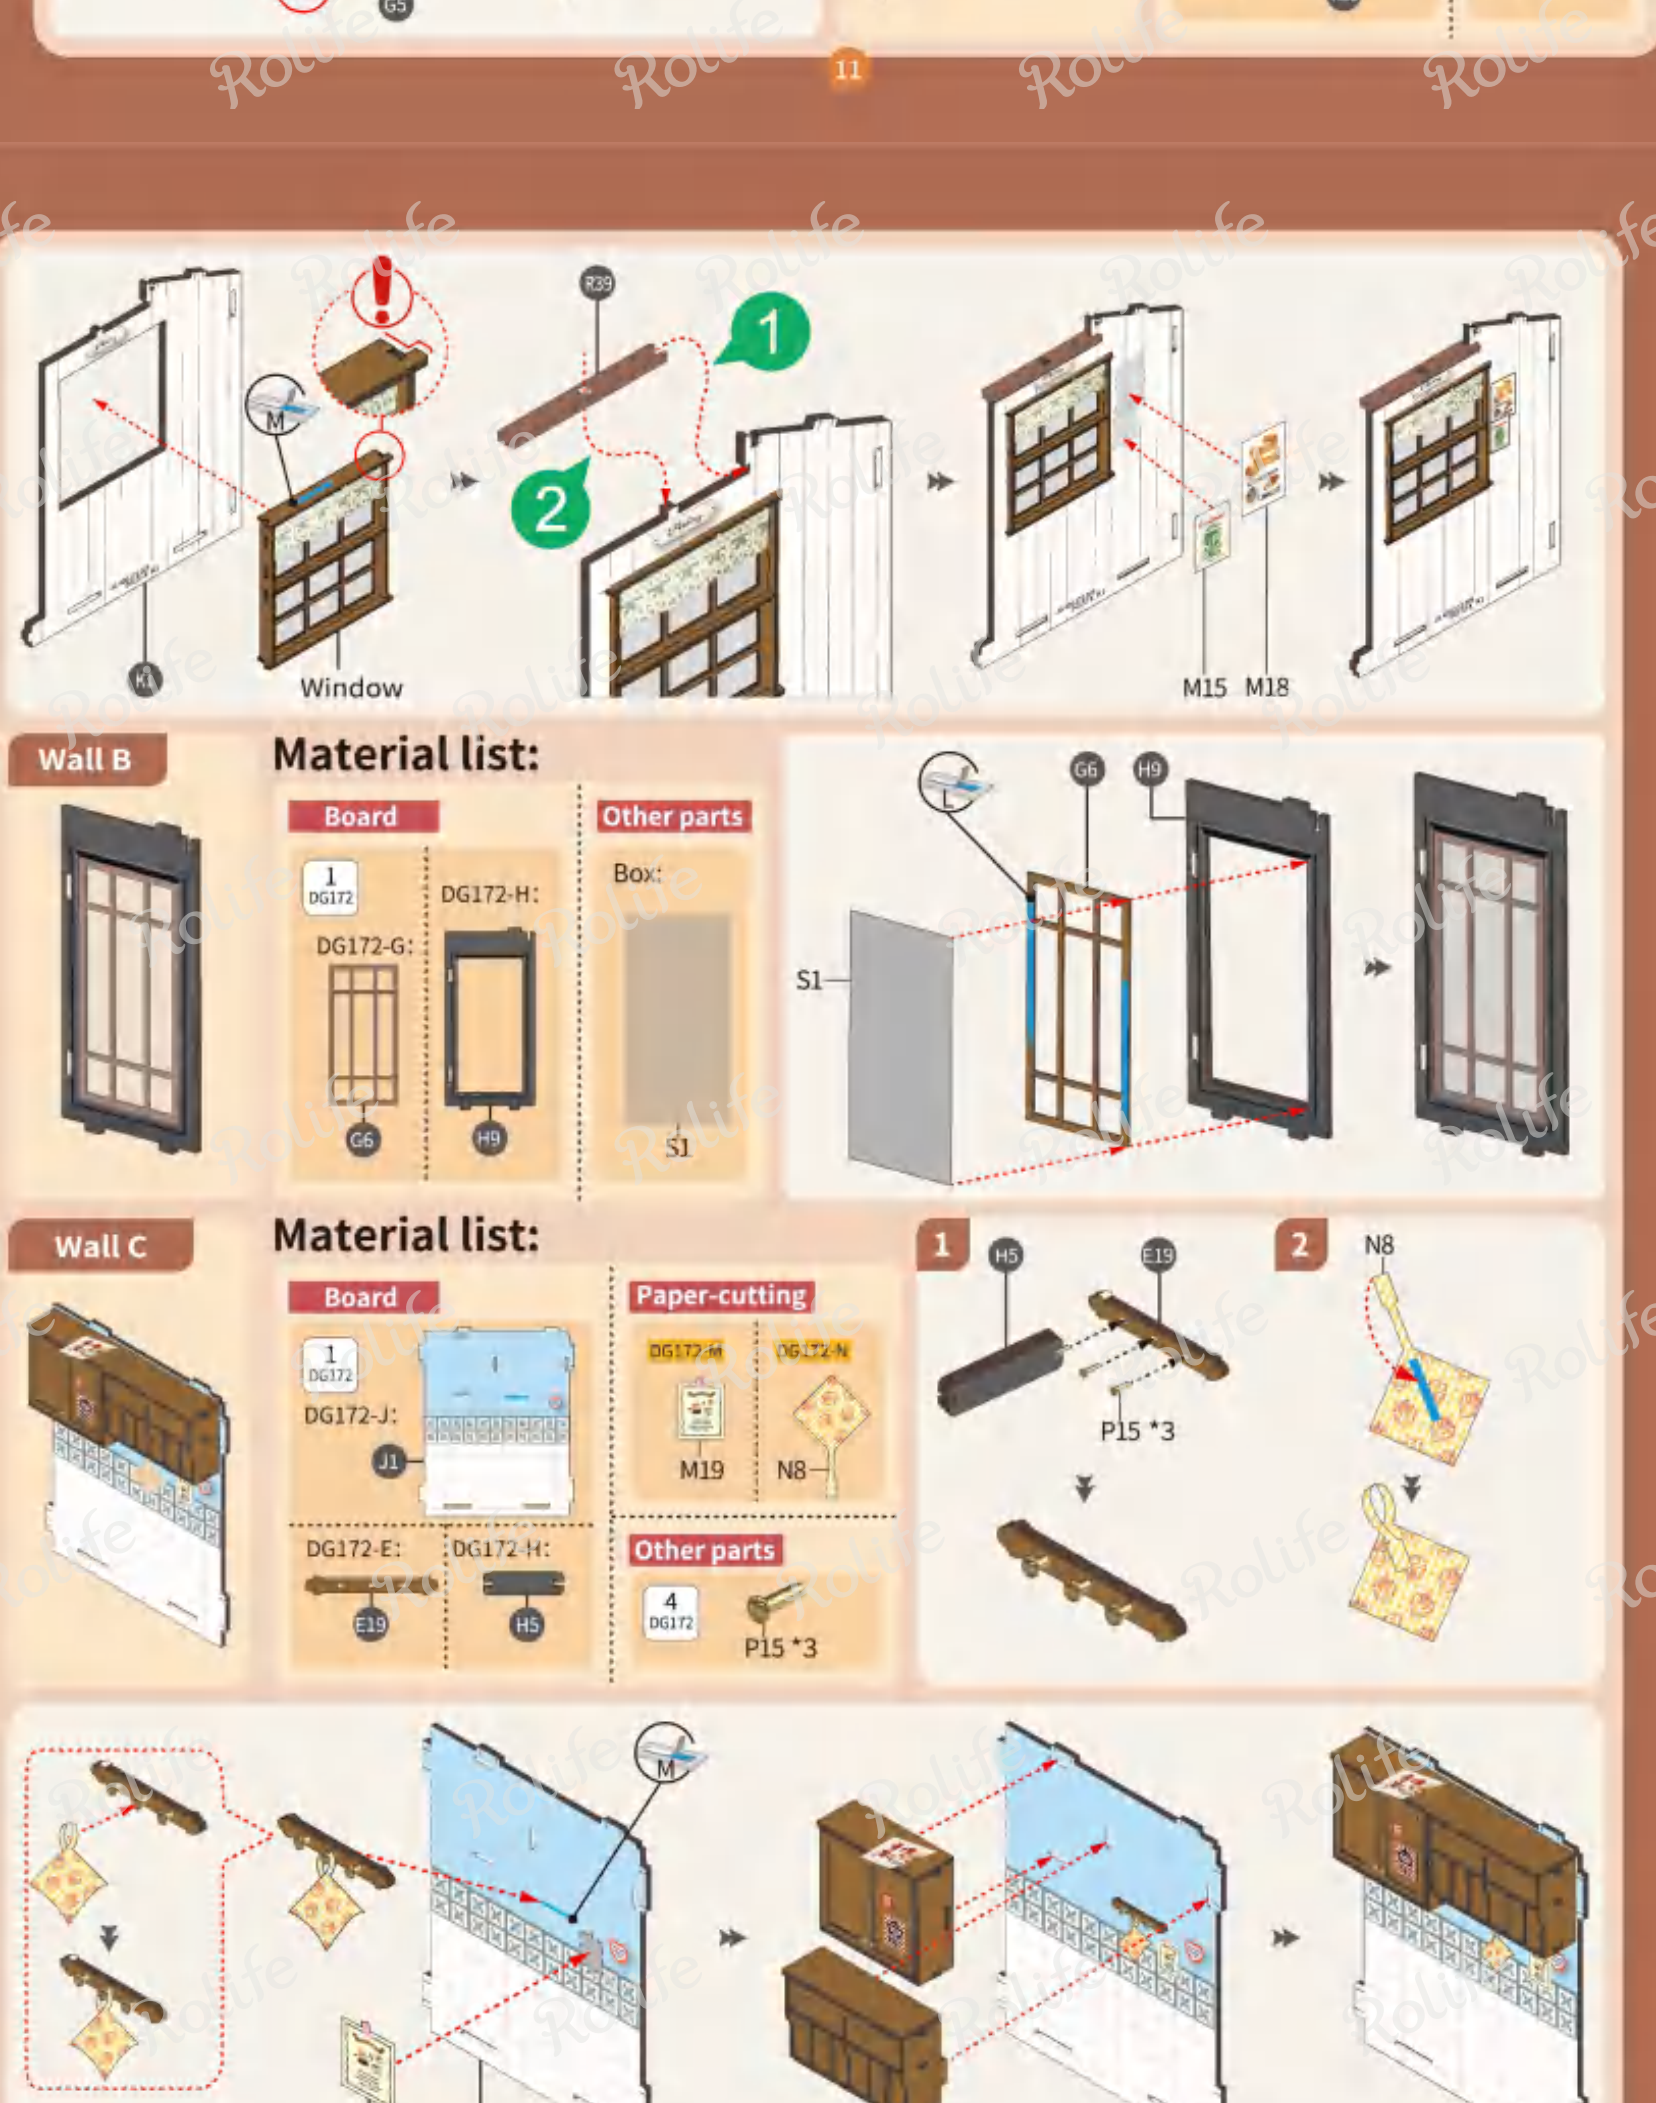

K1
M
Window
R39
1
2
M15
M18
Wall B
Material list:
Board
1 DG172
DG172-G:
G6
DG172-H:
H9
Other parts
Box:
S1
Wall C
Material list:
Board
1 DG172
DG172-J:
J1
DG172-E:
E19
DG172-H:
H5
Paper-cutting
DG172-M
M19
DG172-N
N8
Other parts
4 DG172
P15 *3
1
2
N8
M19
J1

Frame

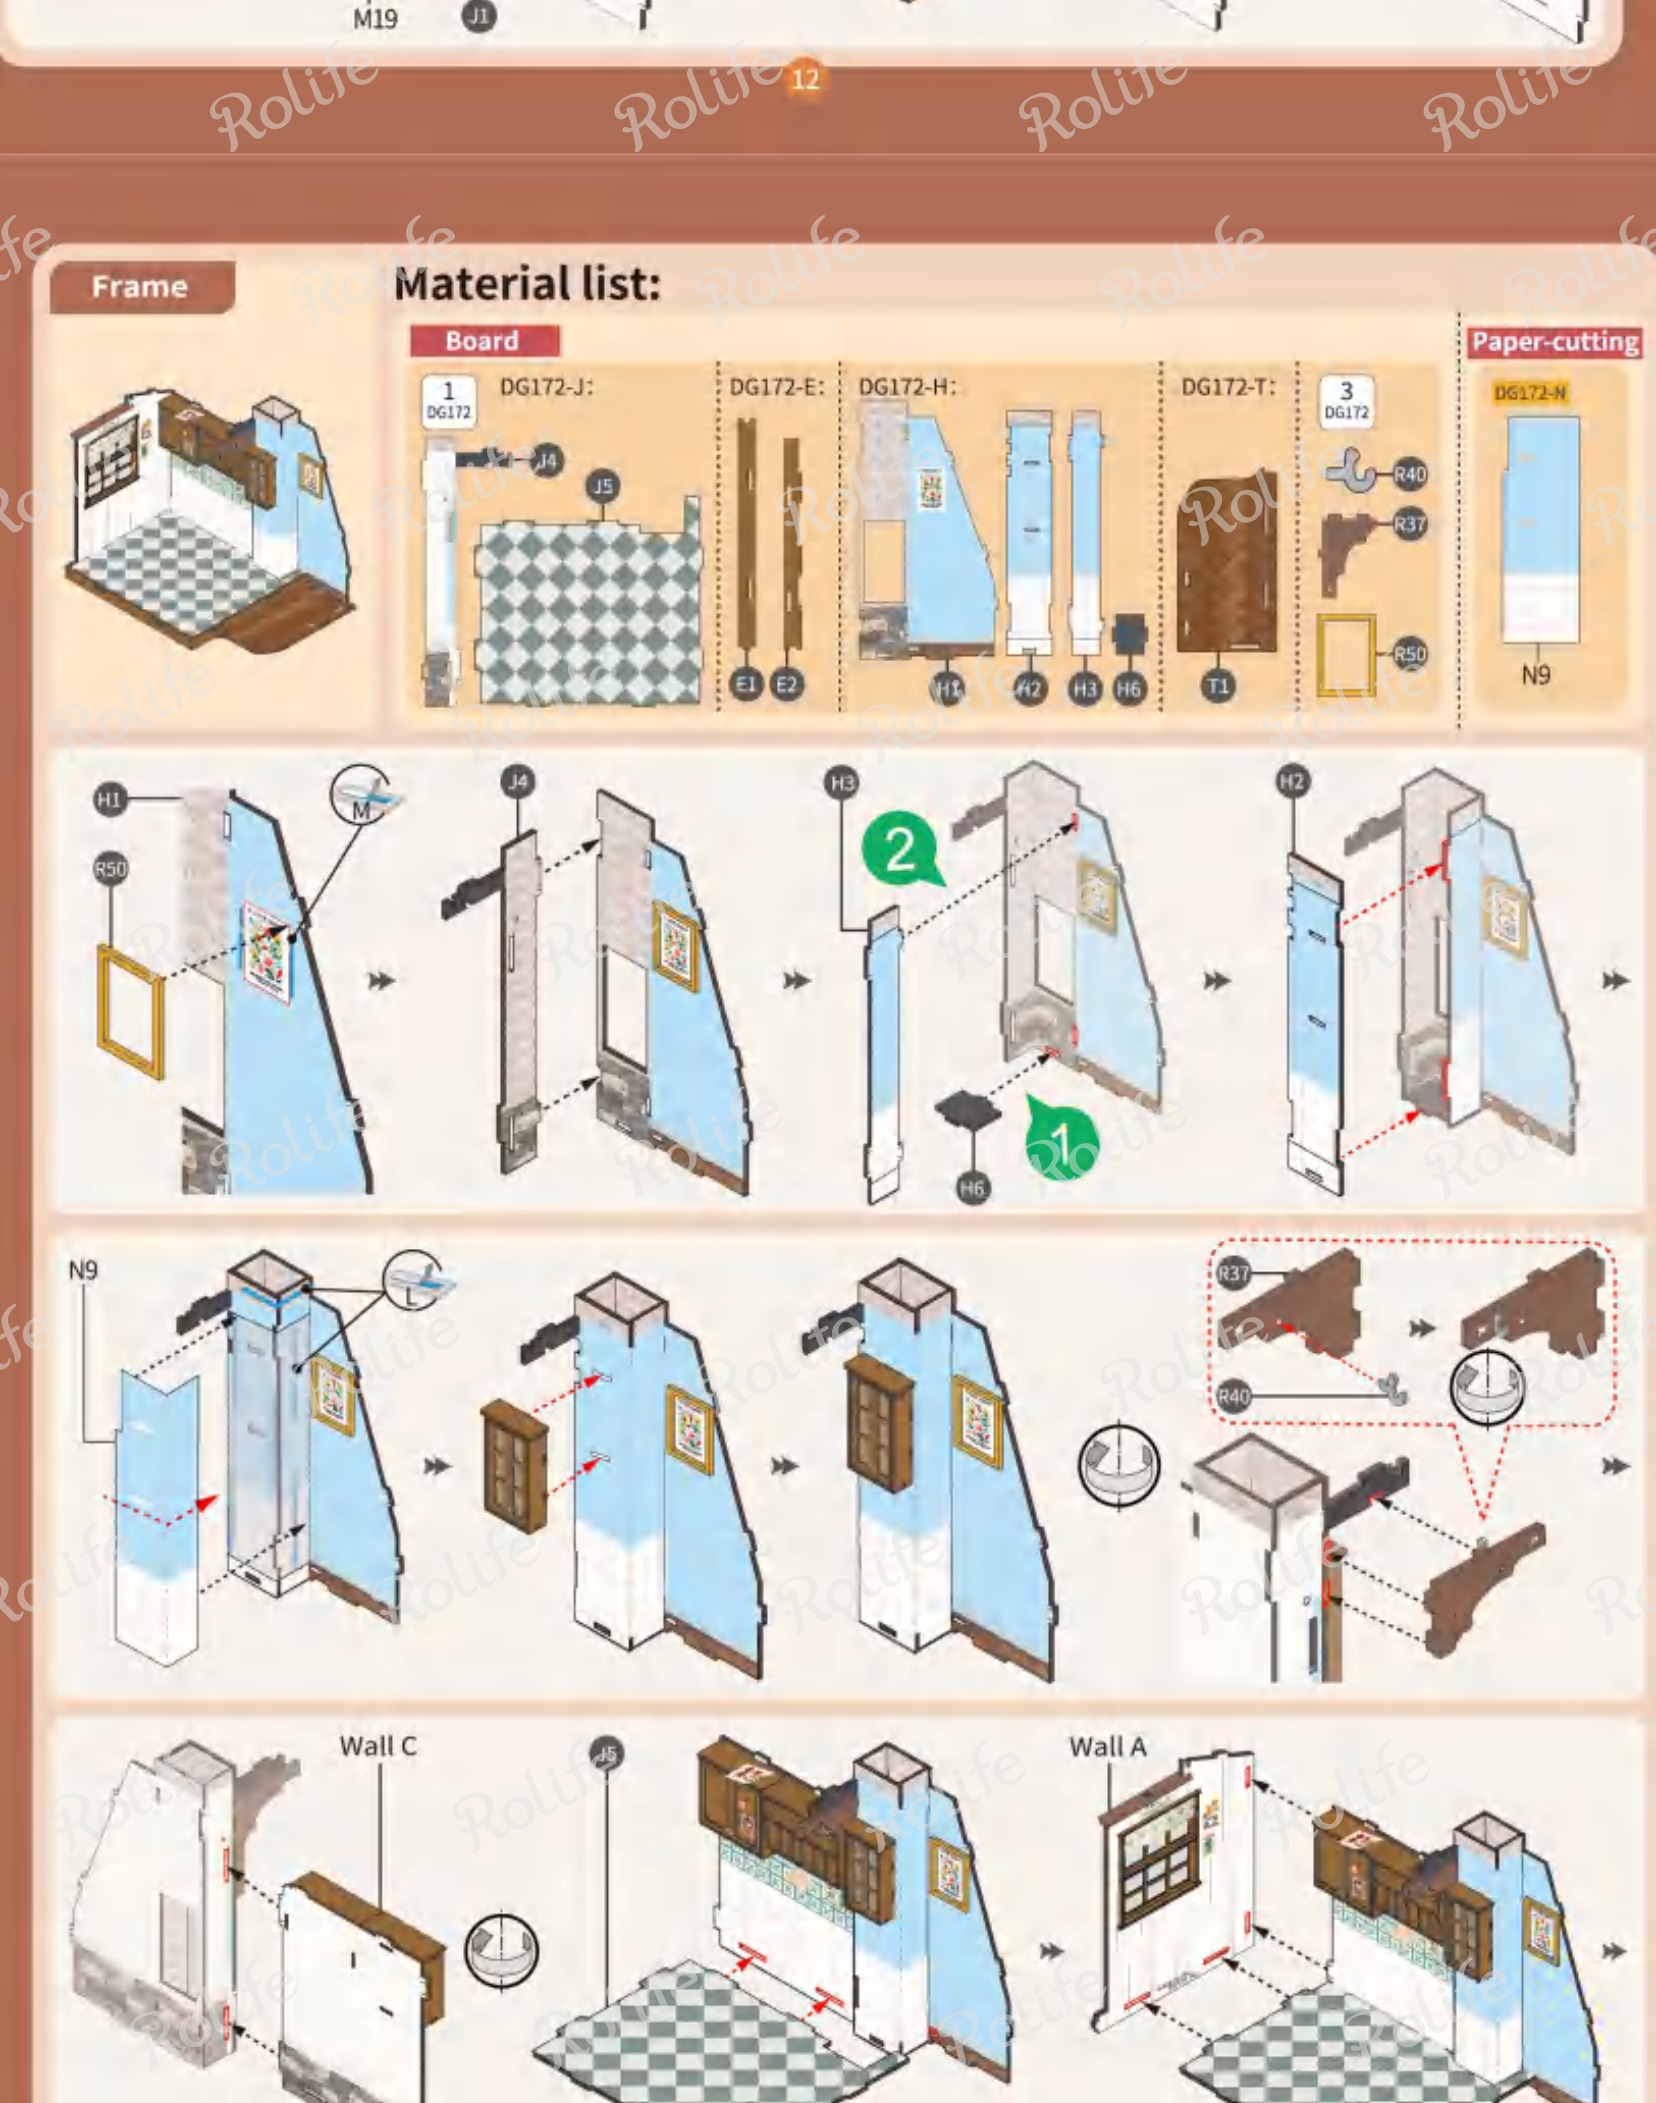

Frame
Material list:
Board
1 DG172
DG172-J:
J4
J5
DG172-E:
E1
E2
DG172-H:
H1
H2
H3
H6
DG172-T:
T1
3 DG172
R37
R40
R50
Paper-cutting
DG172-N
N9
H1
R50
M
J4
H3
H2
H6
N9
Wall C
Wall A
J5

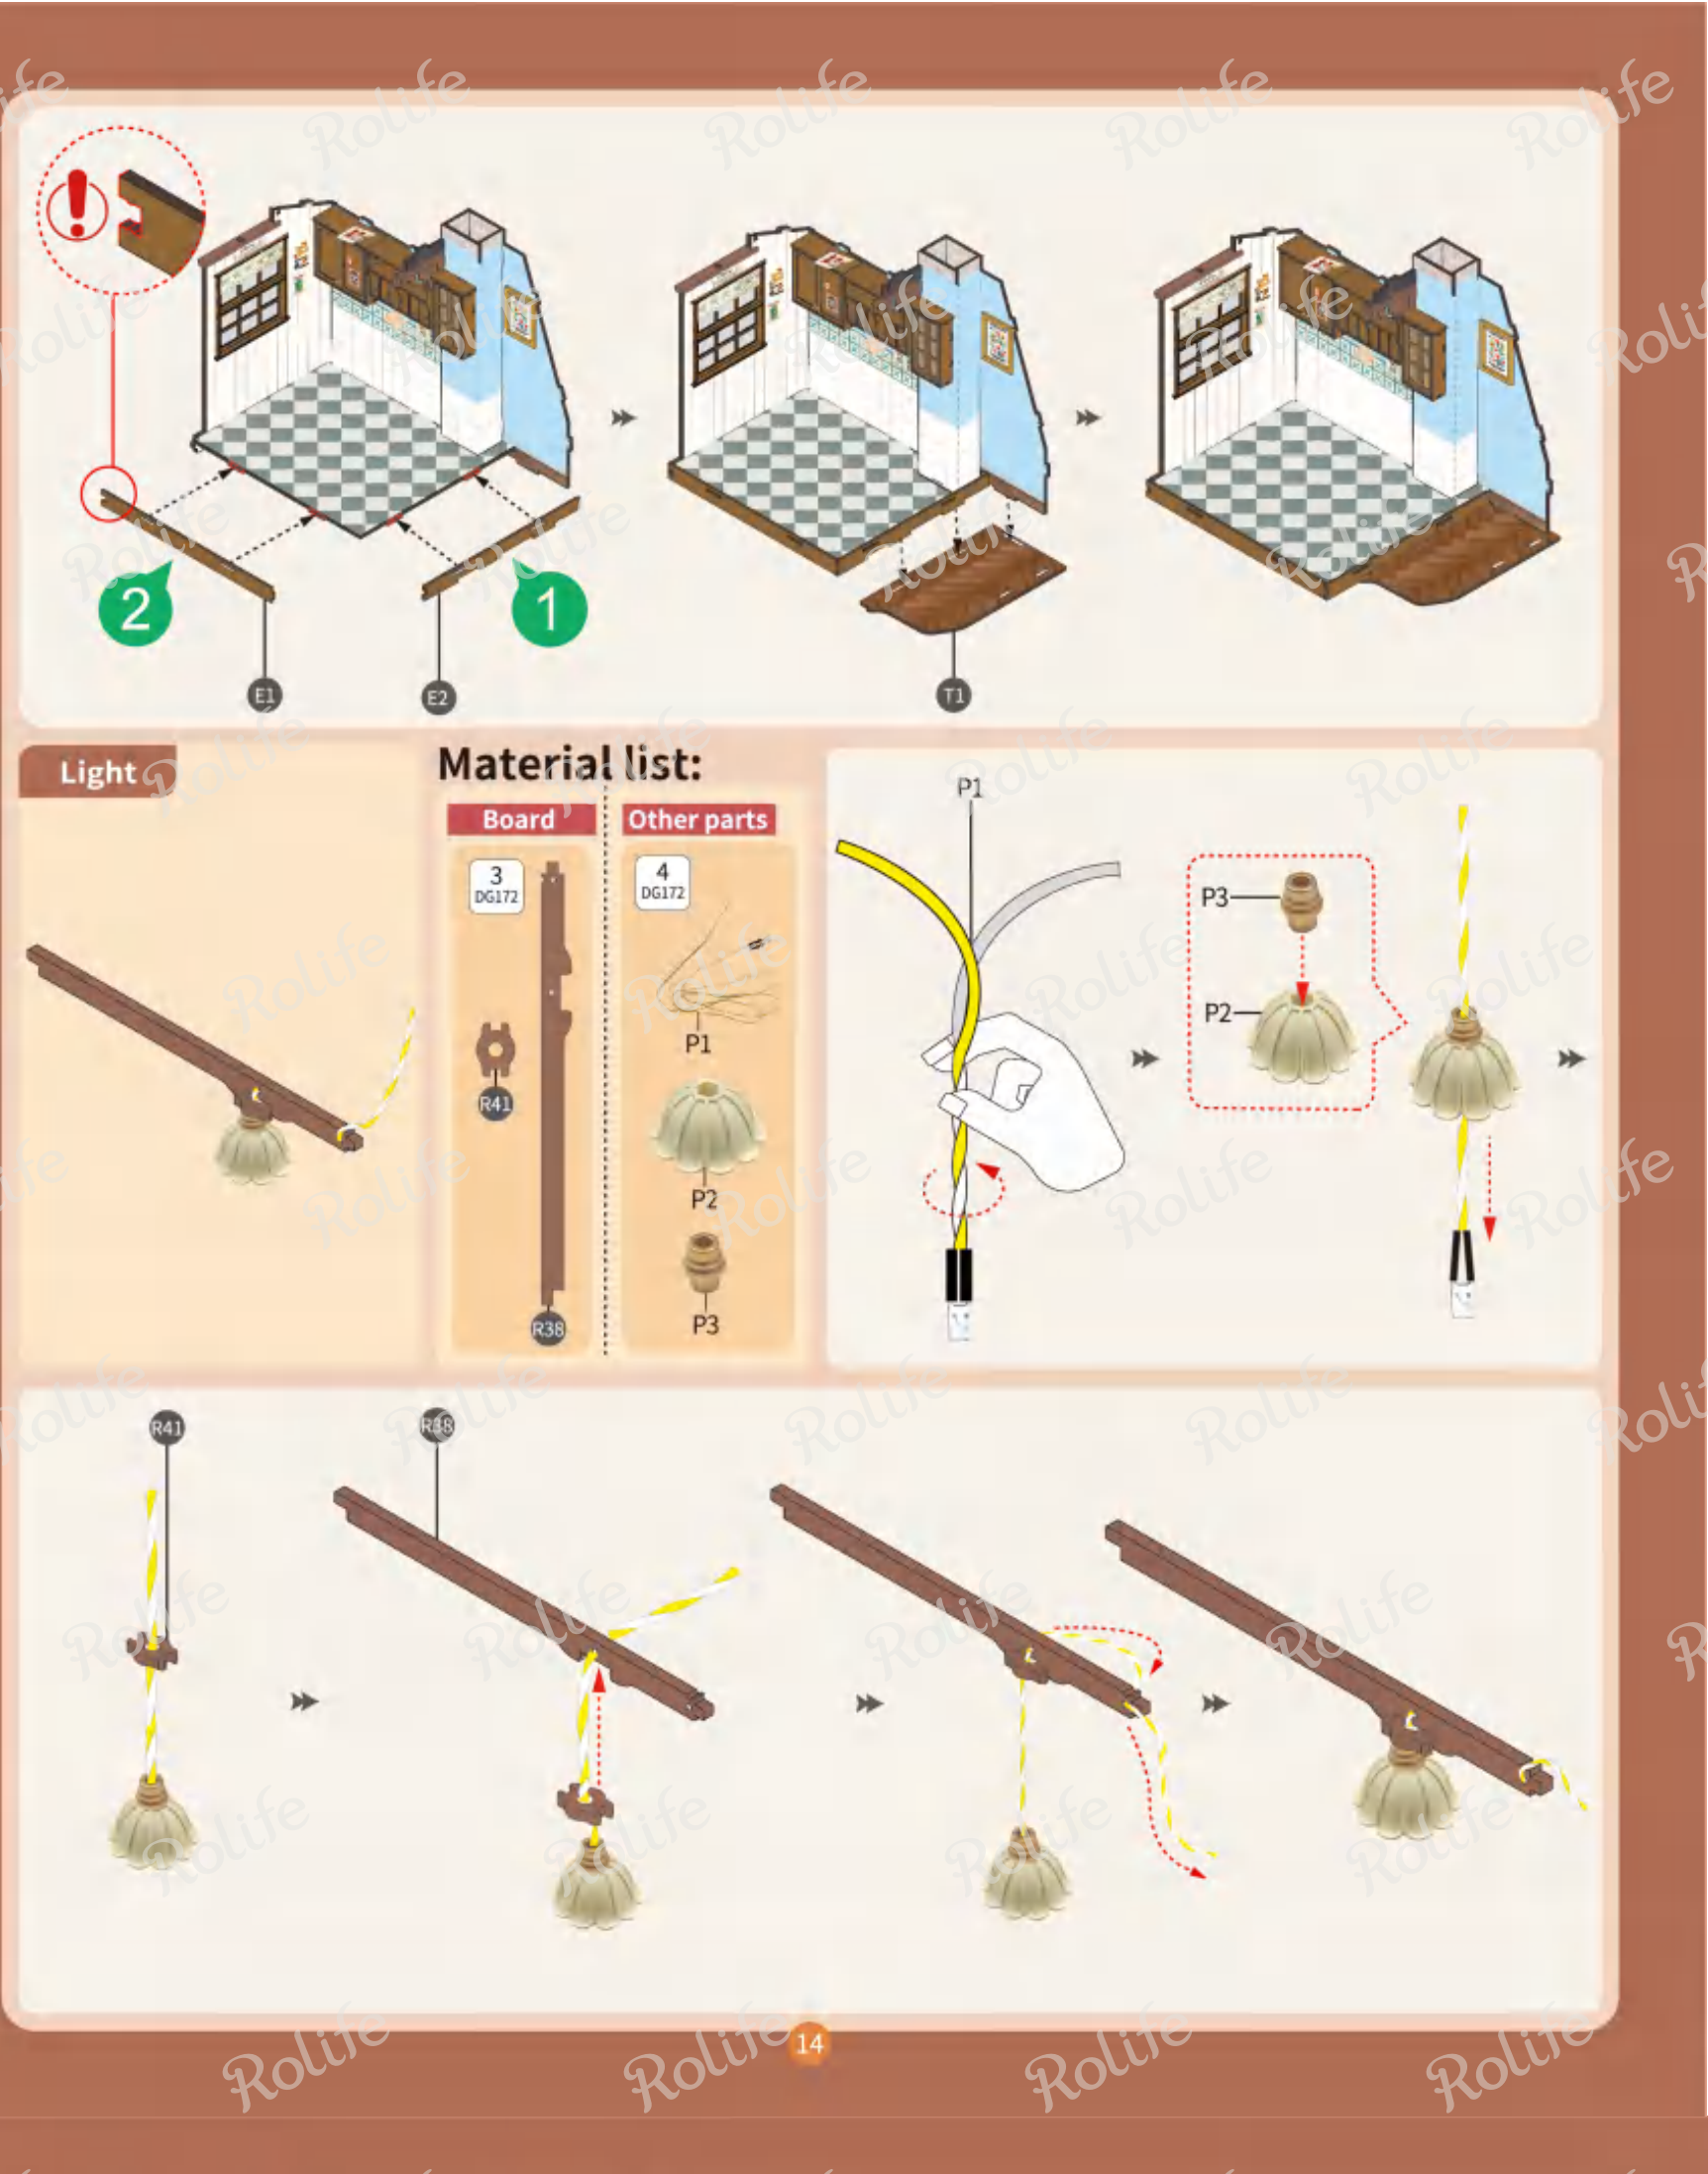
1
2
Light
Material list:
Board
Other parts
P1
P2
P3
14

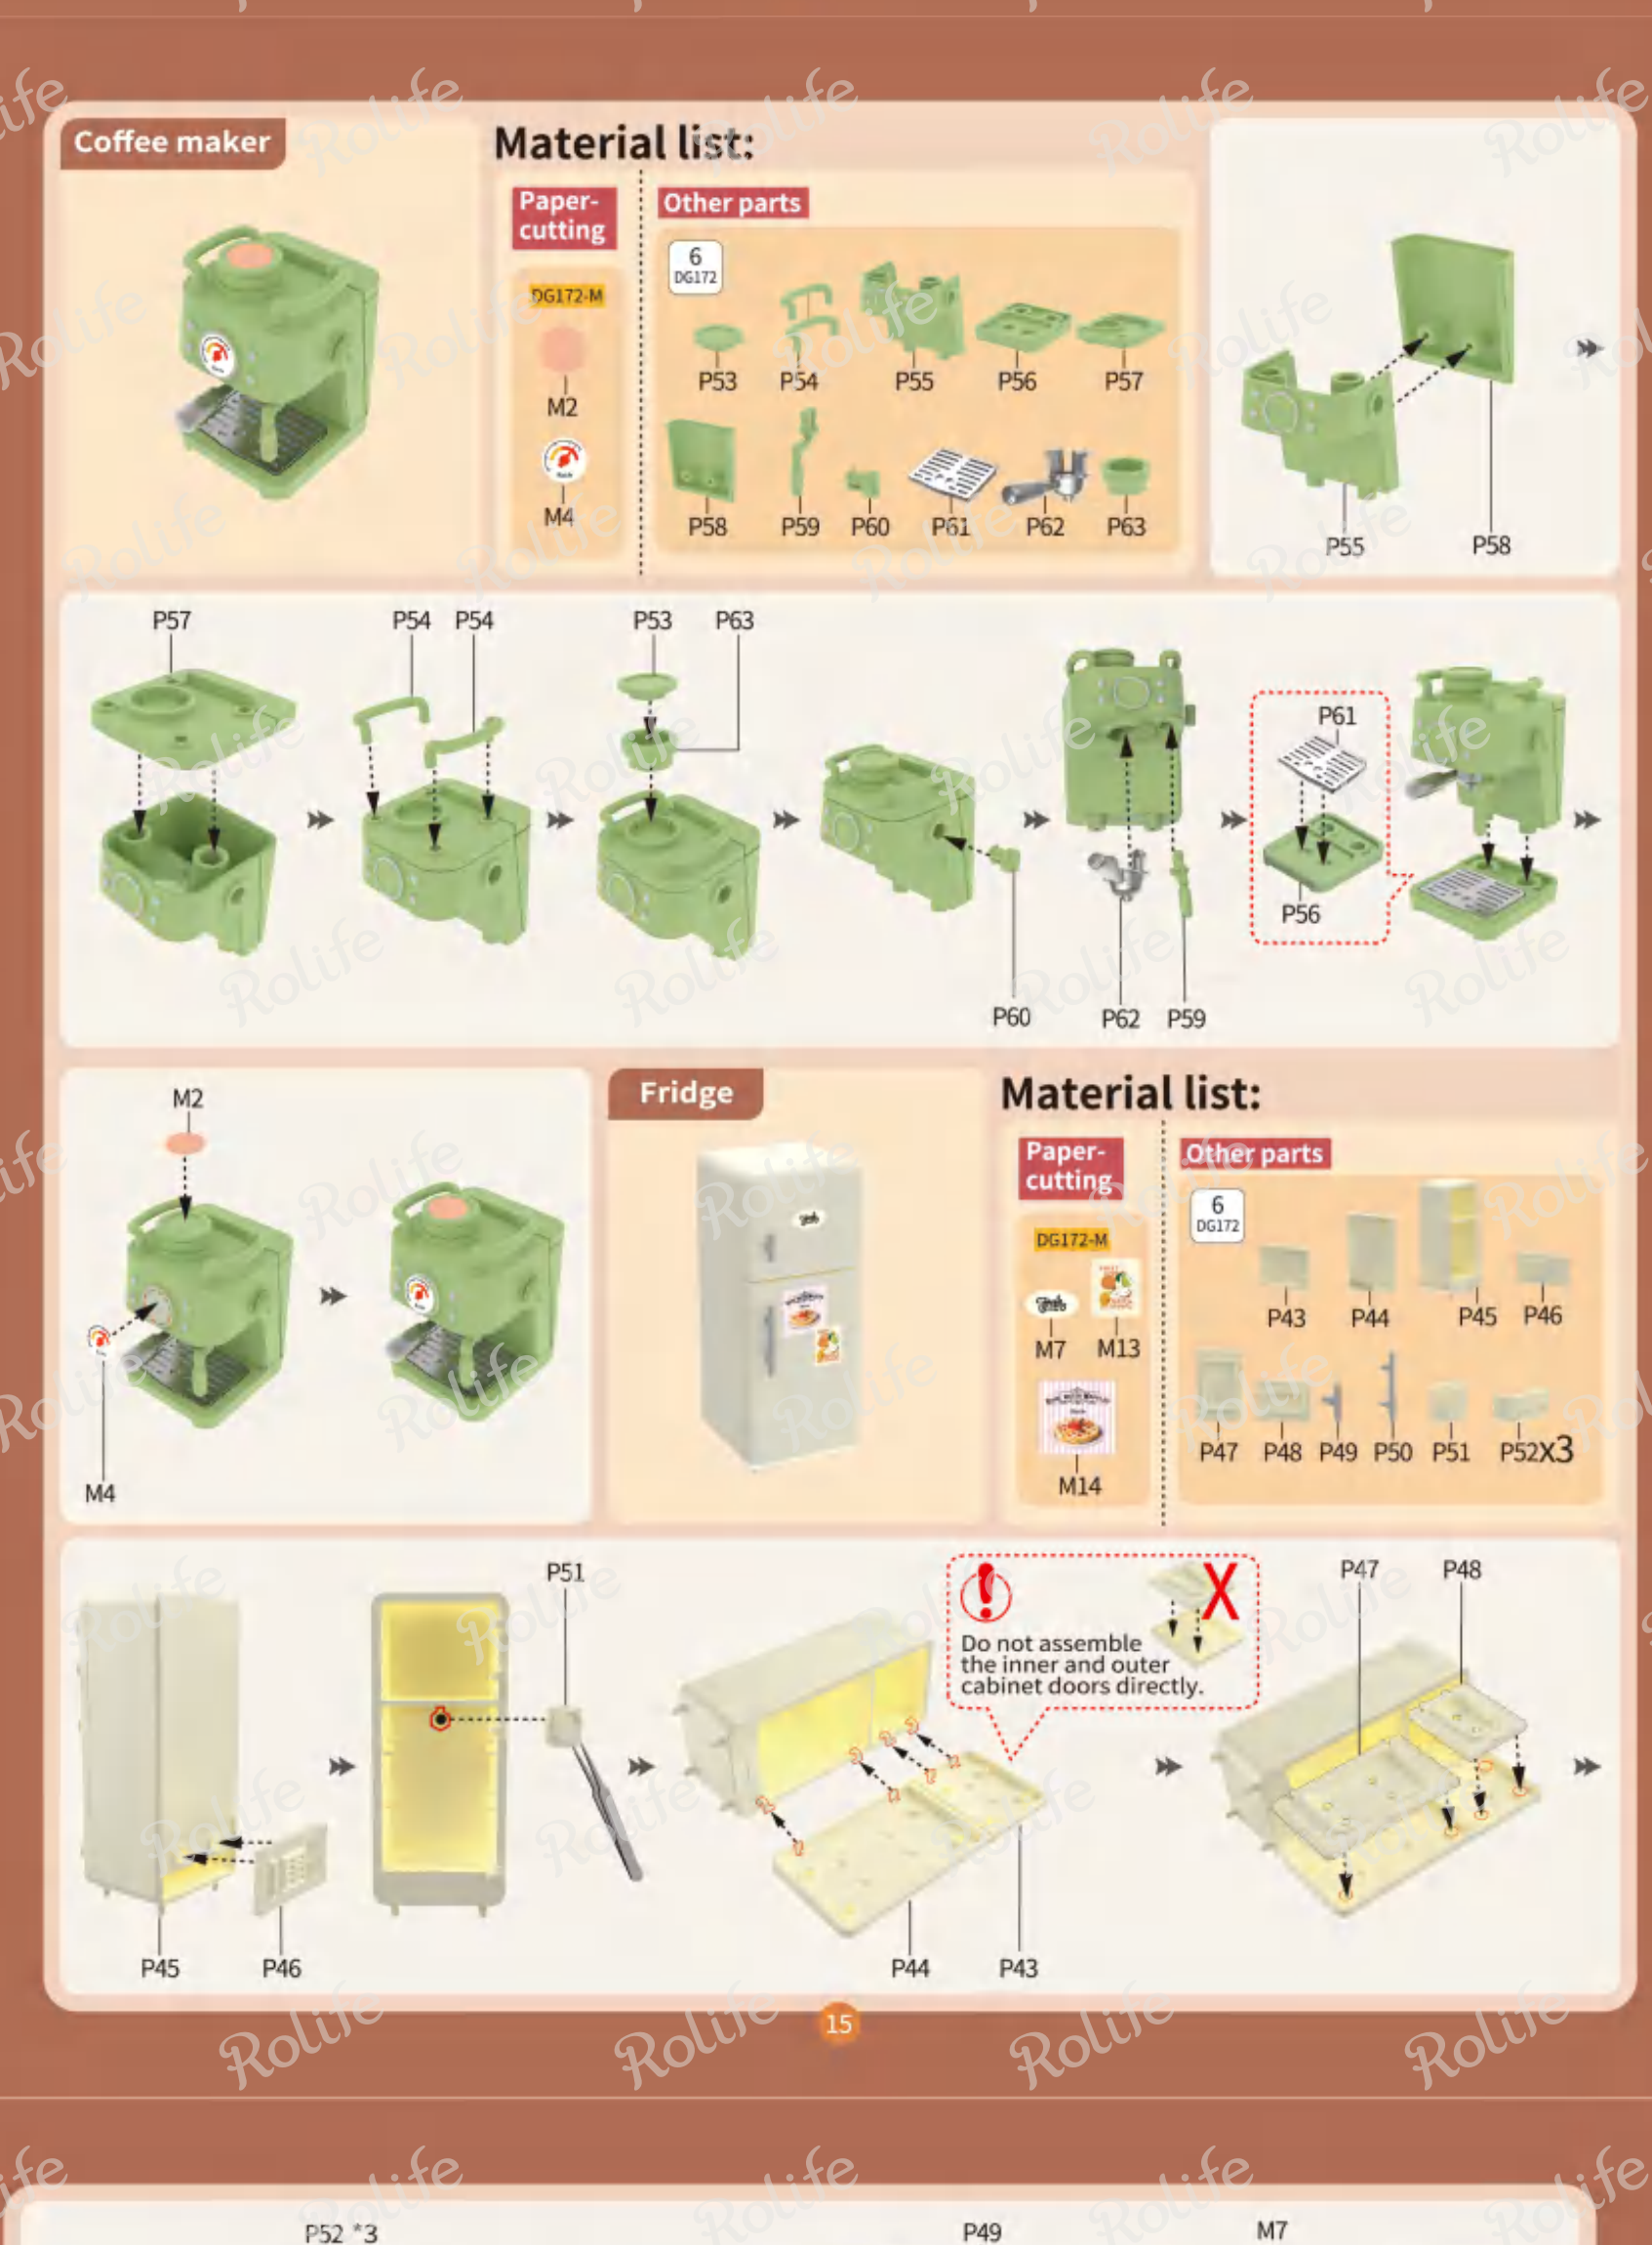
Coffee maker
Material list:
Paper-cutting
Other parts
M2
M4
P53
P54
P55
P56
P57
P58
P59
P60
P61
P62
P63
Fridge
Material list:
Paper-cutting
Other parts
M7
M13
M14
P43
P44
P45
P46
P47
P48
P49
P50
P51
P52×3
Do not assemble the inner and outer cabinet doors directly.
15

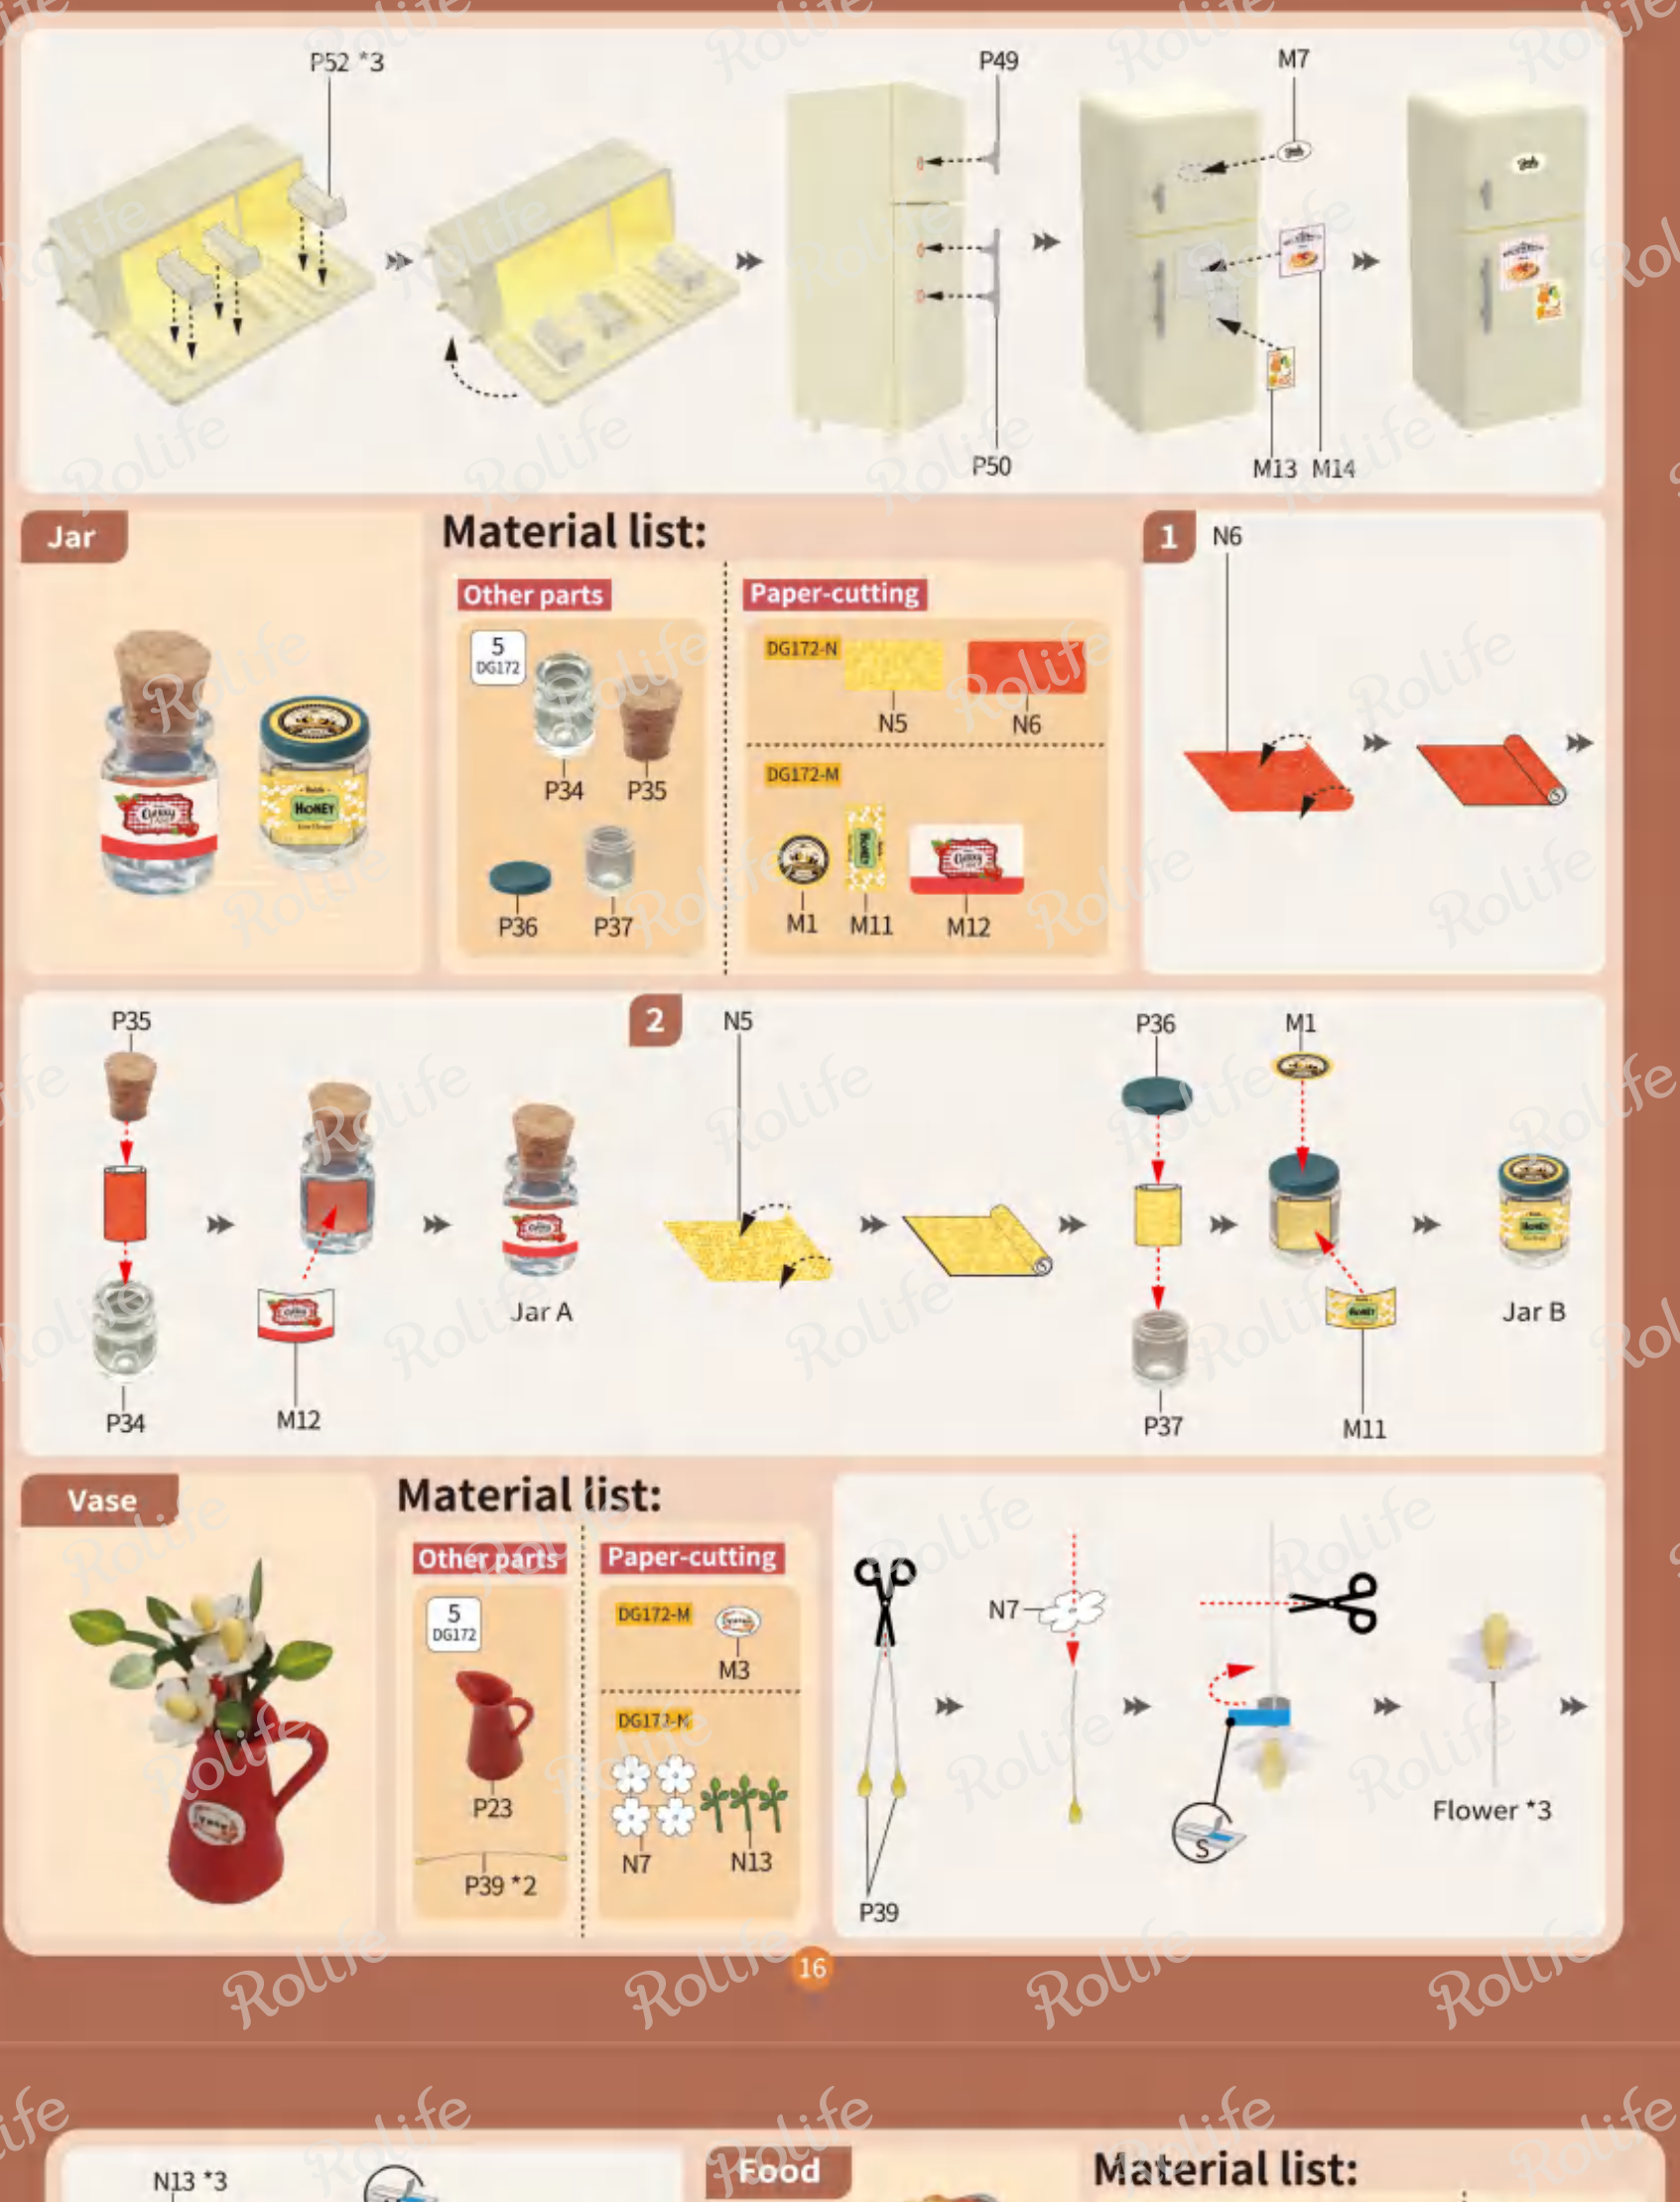
P52 *3
P49
M7
P50
M13
M14
Jar
Material list:
Other parts
Paper-cutting
P34
P35
P36
P37
N5
N6
M1
M11
M12
1
2
Jar A
Jar B
Vase
Material list:
Other parts
Paper-cutting
P23
P39 *2
M3
N7
N13
P39
Flower *3
16

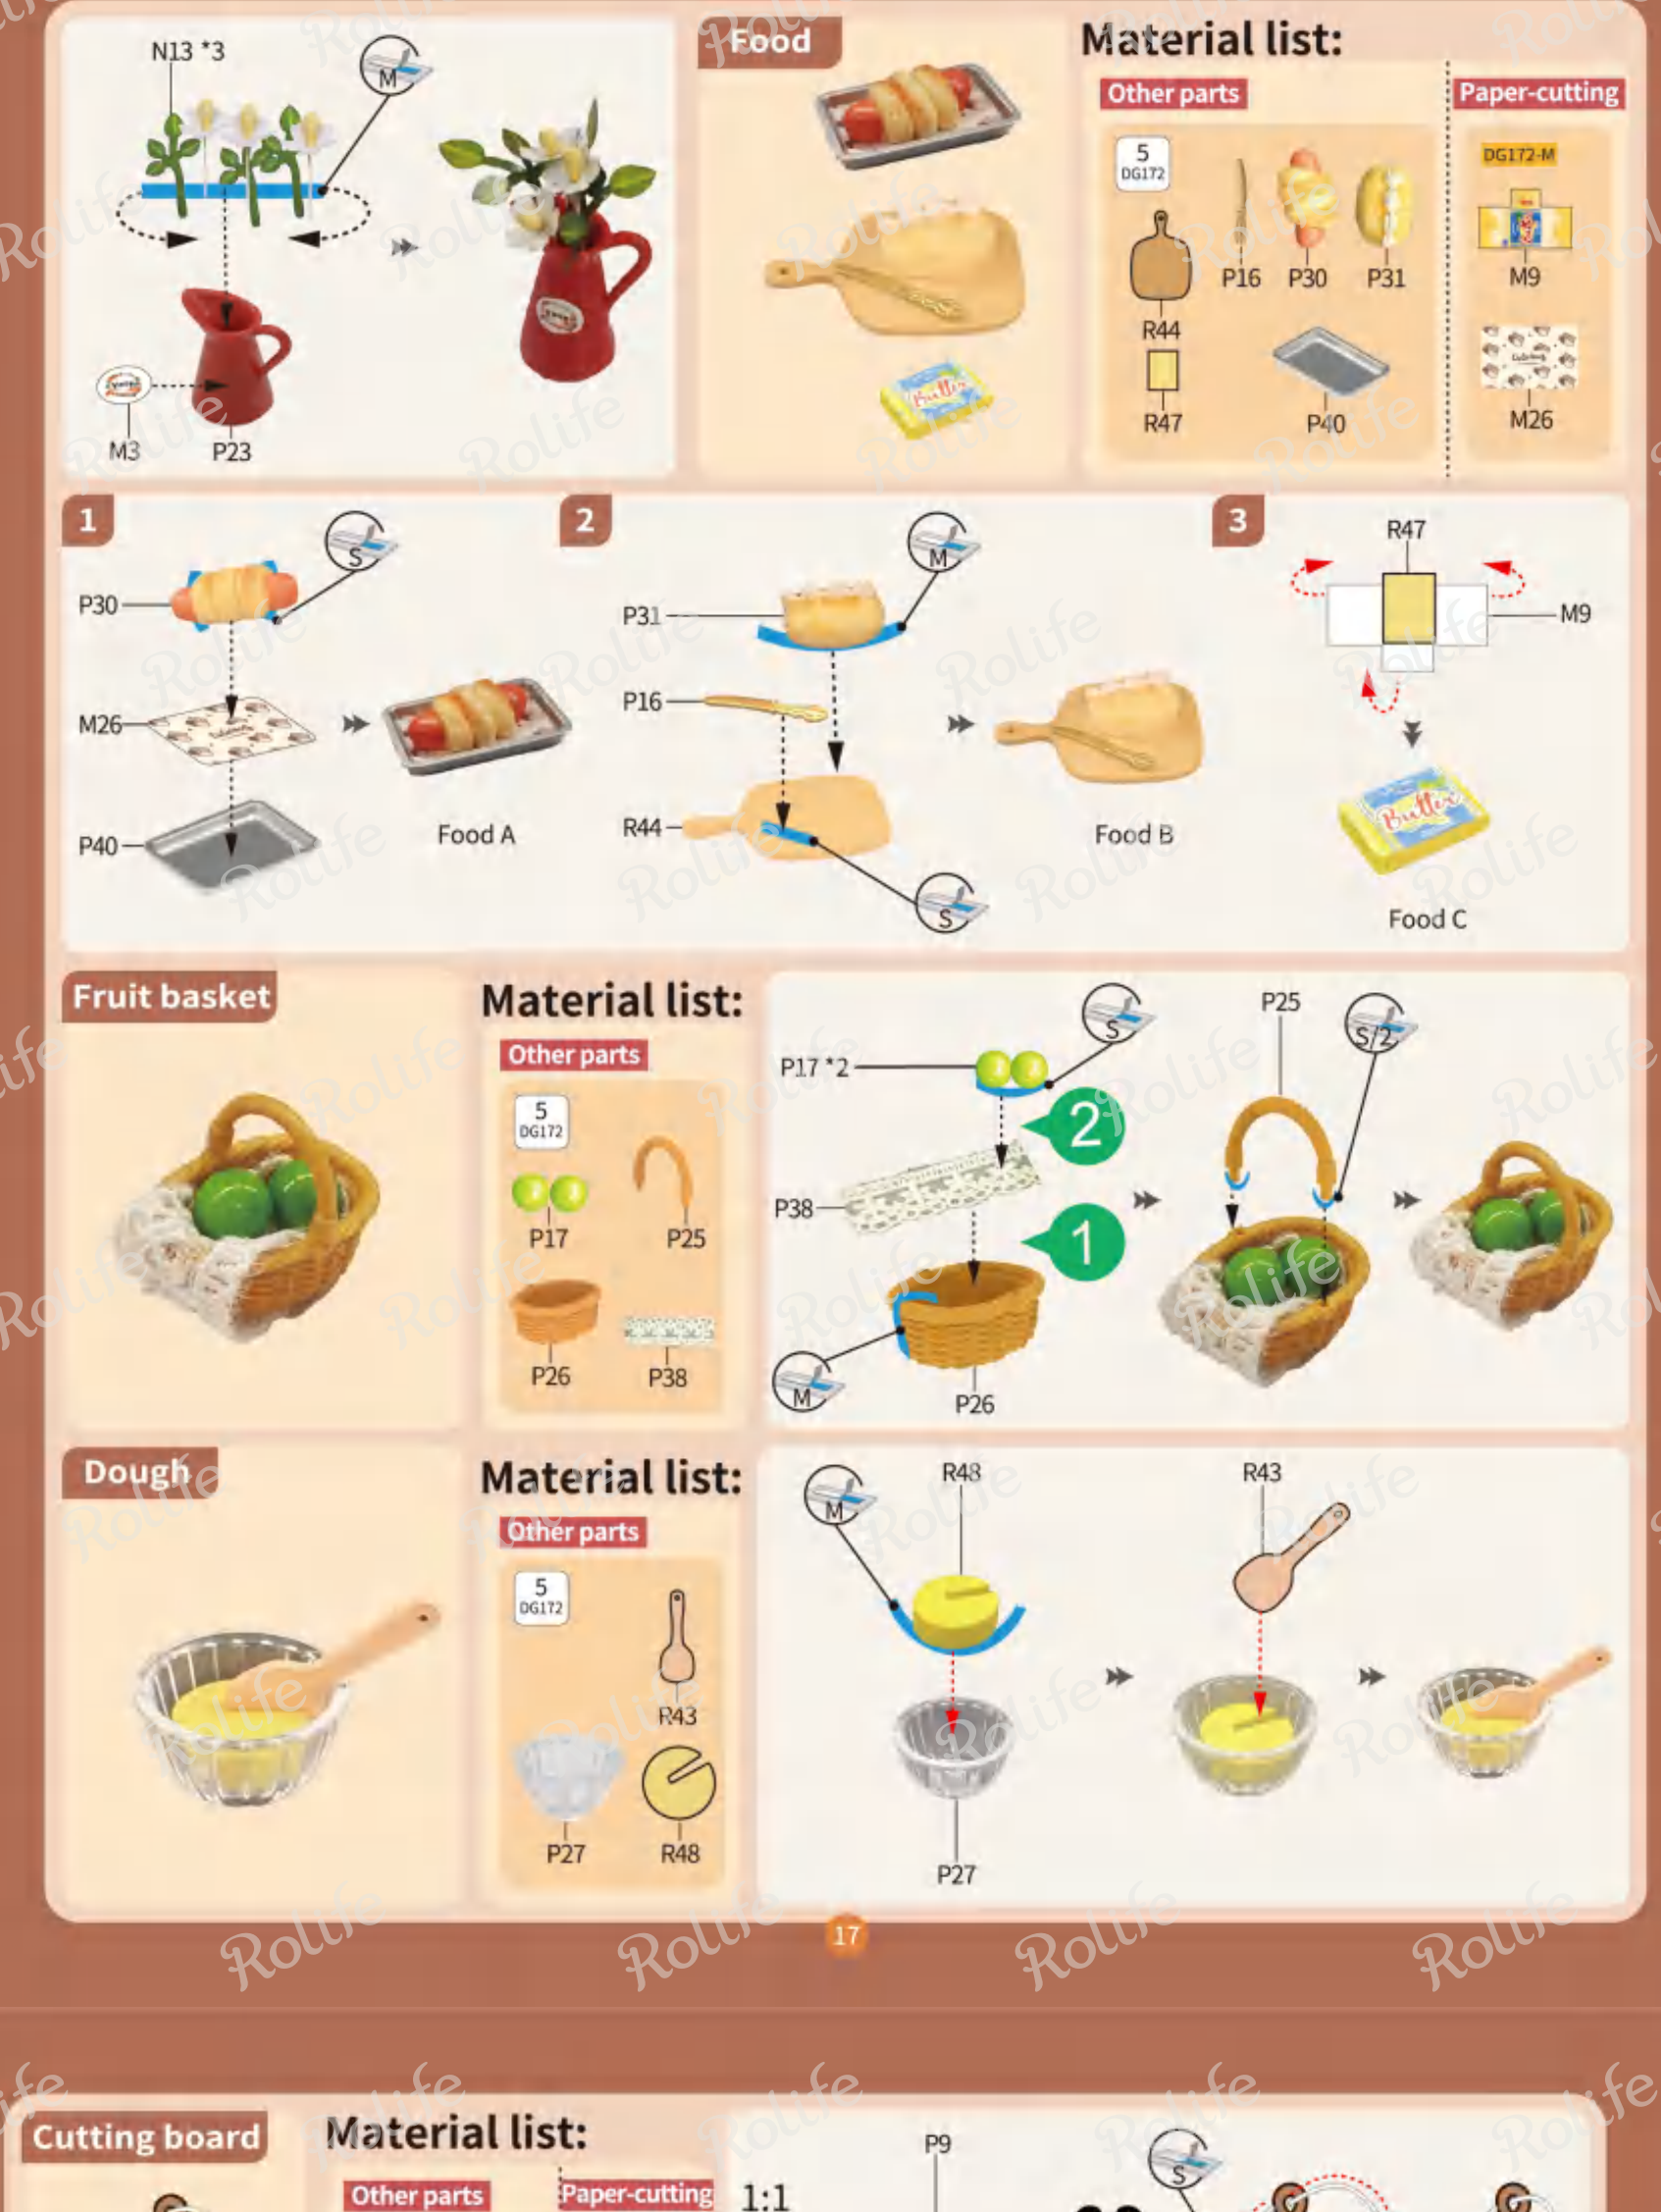
N13 *3
M3
P23
Food
Material list:
Other parts
Paper-cutting
R44
P16
P30
P31
R47
P40
M9
M26
1
2
3
Food A
Food B
Food C
Fruit basket
Material list:
Other parts
P17
P25
P26
P38
P17 *2
Dough
Material list:
Other parts
P27
R43
R48
17

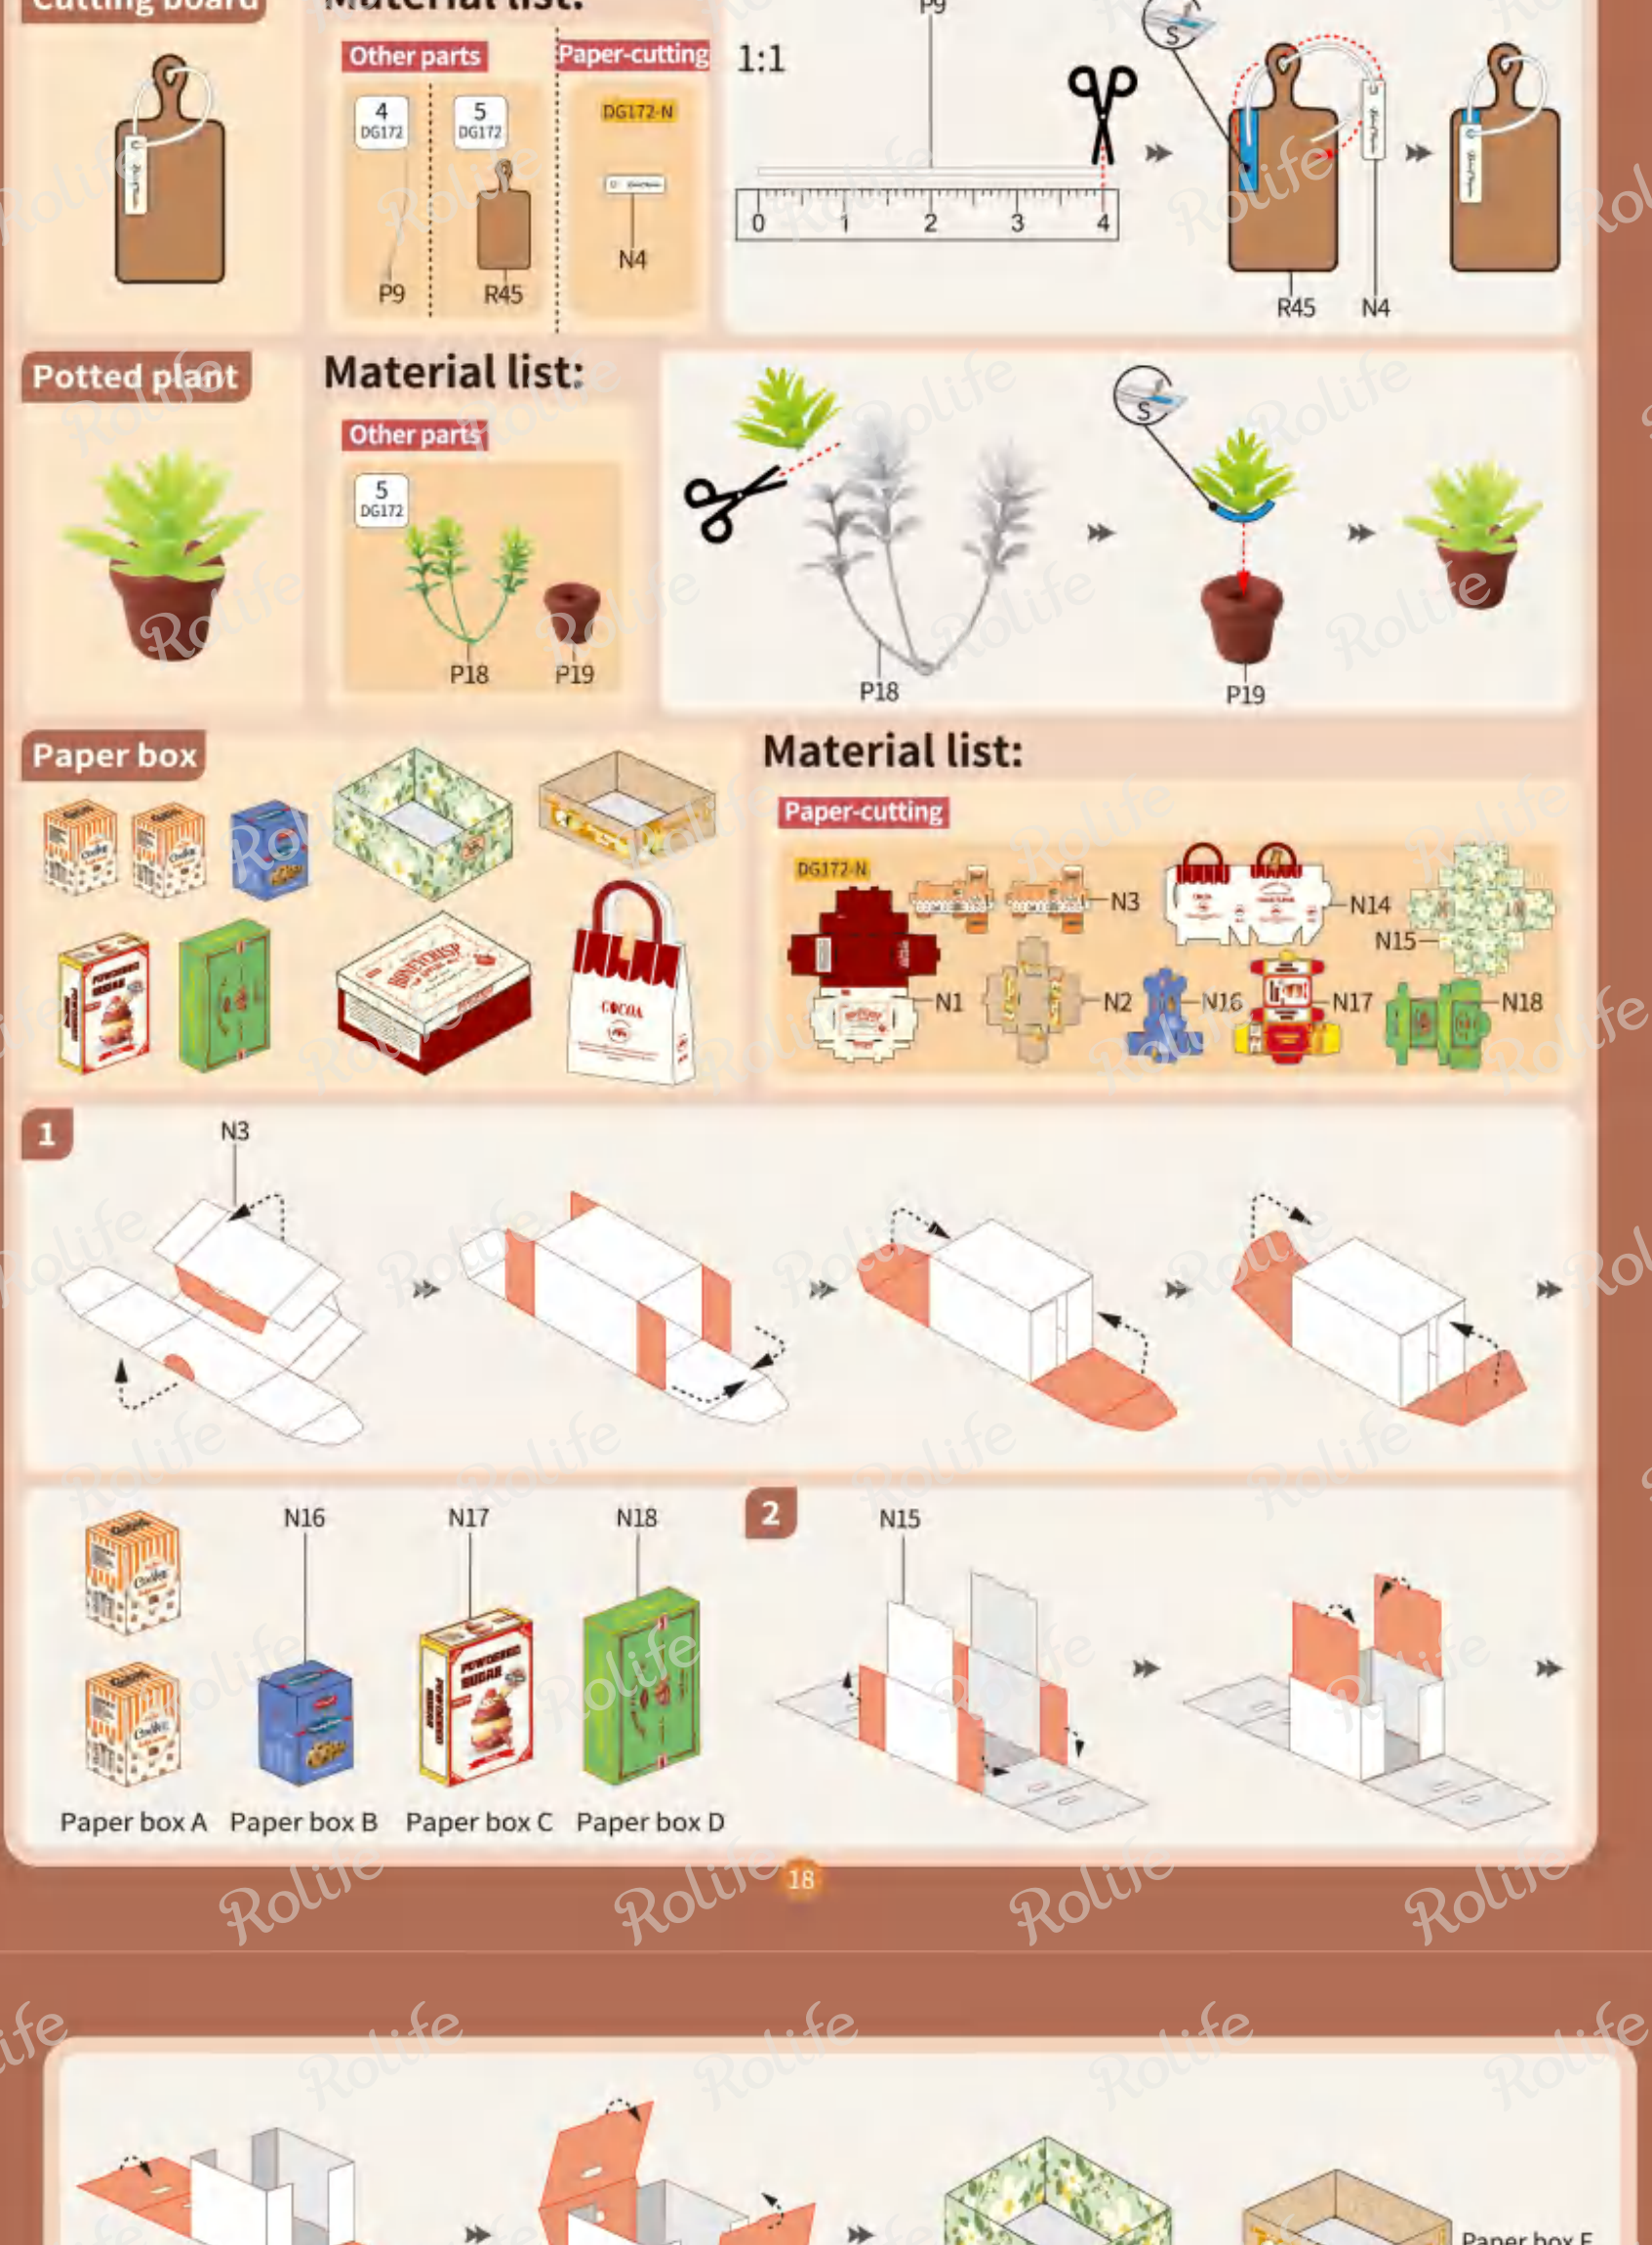
Cutting board
Material list:
Other parts
Paper-cutting
P9
R45
N4
1:1
Potted plant
Material list:
Other parts
P18
P19
Paper box
Material list:
Paper-cutting
N1
N2
N3
N10
N14
N15
N16
N17
N18
1
2
Paper box A
Paper box B
Paper box C
Paper box D
18

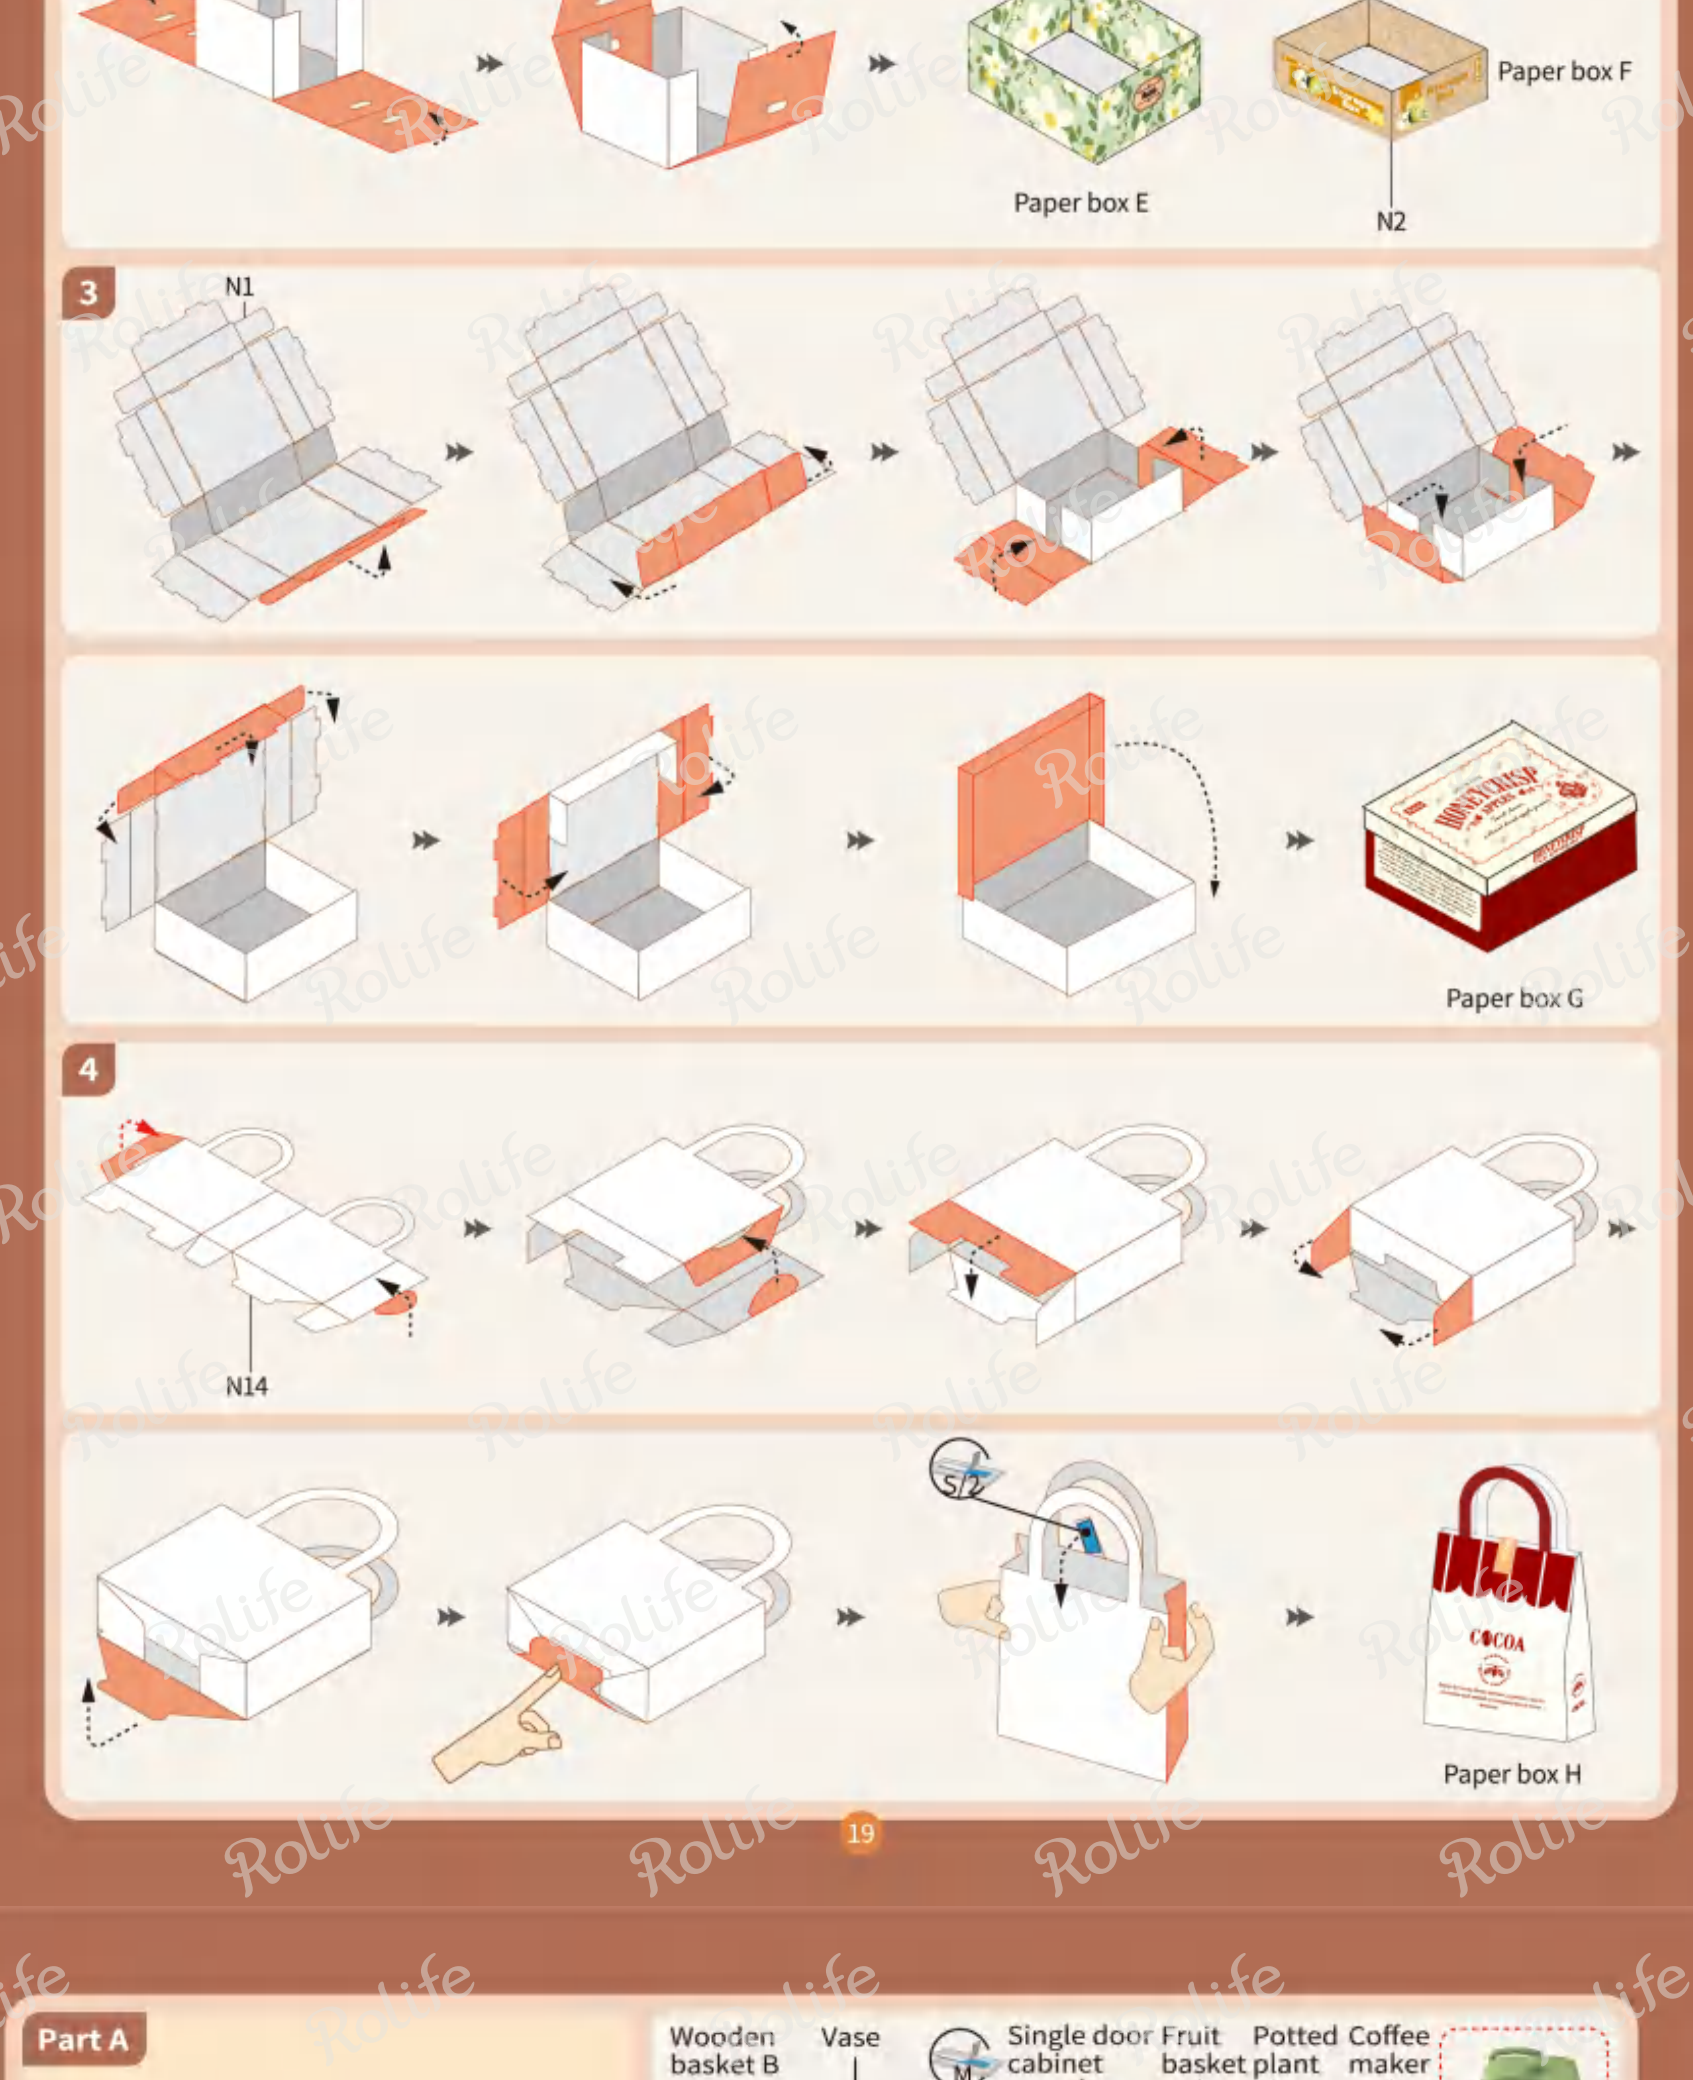
Paper box E
Paper box F
N2
3
N1
Paper box G
4
N14
Paper box H
19

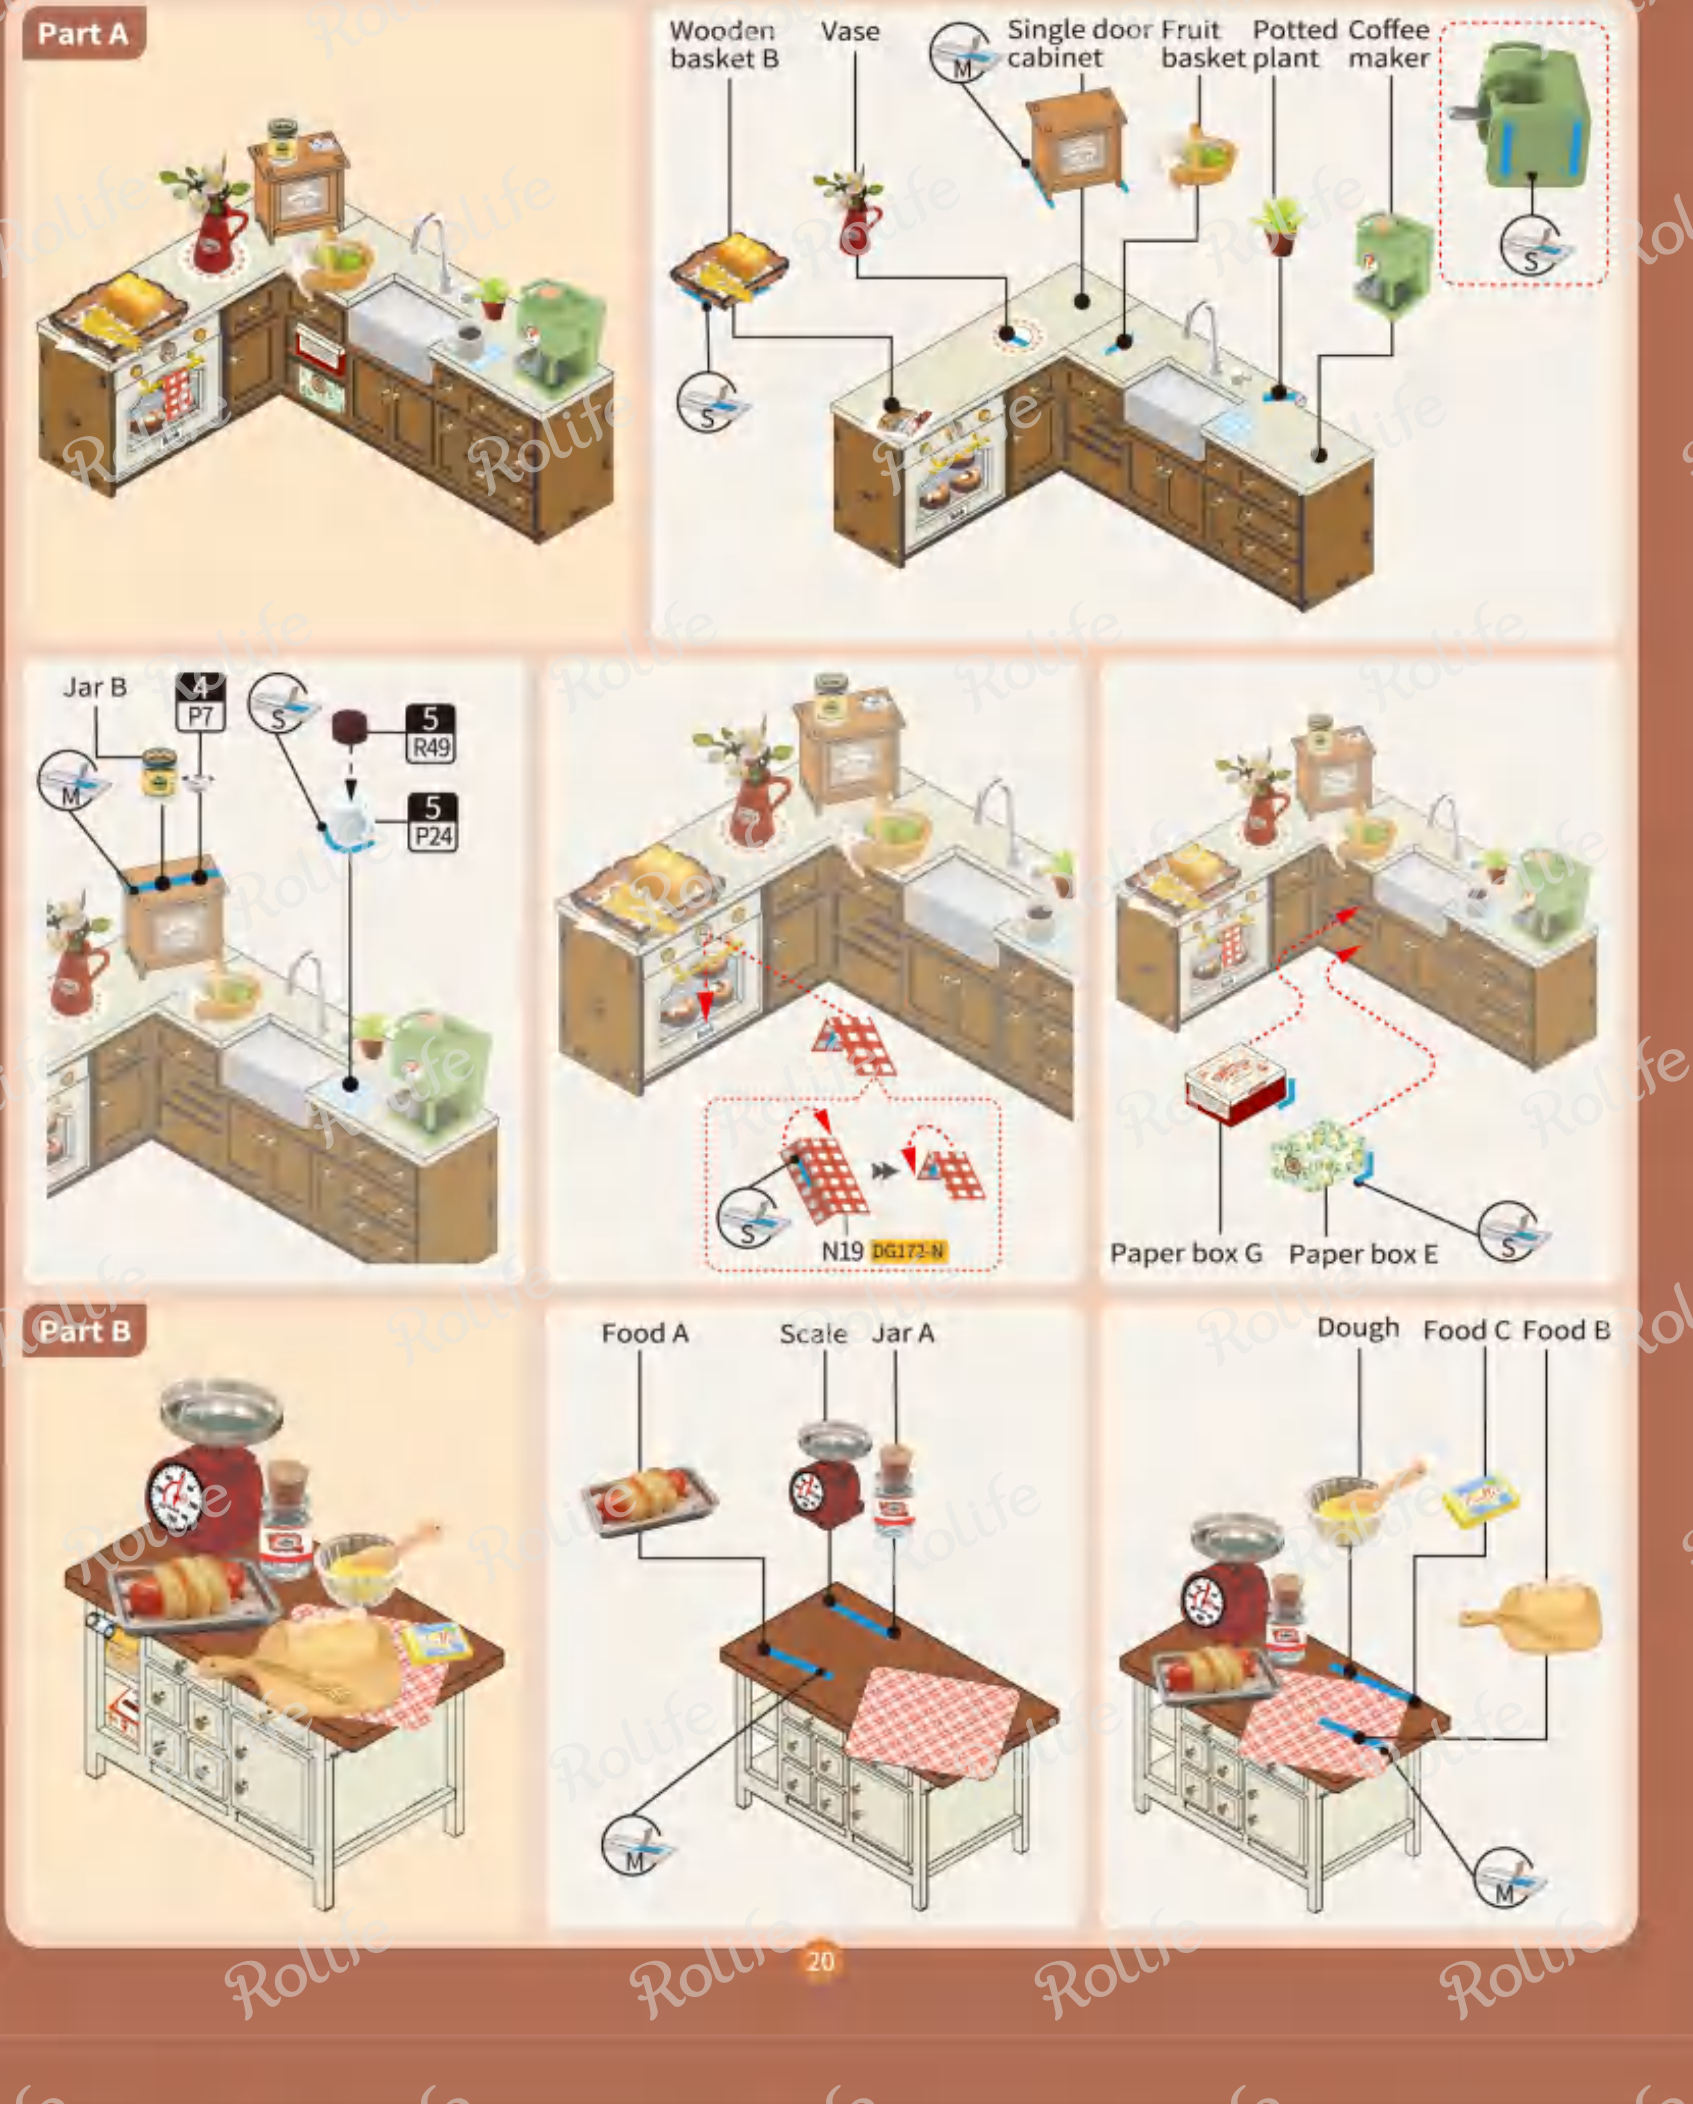
Part A
Wooden basket B
Vase
Single door cabinet
Fruit basket
Potted plant
Coffee maker
Jar B
N19
Paper box G
Paper box E
Part B
Food A
Scale
Jar A
Dough
Food C
Food B
20

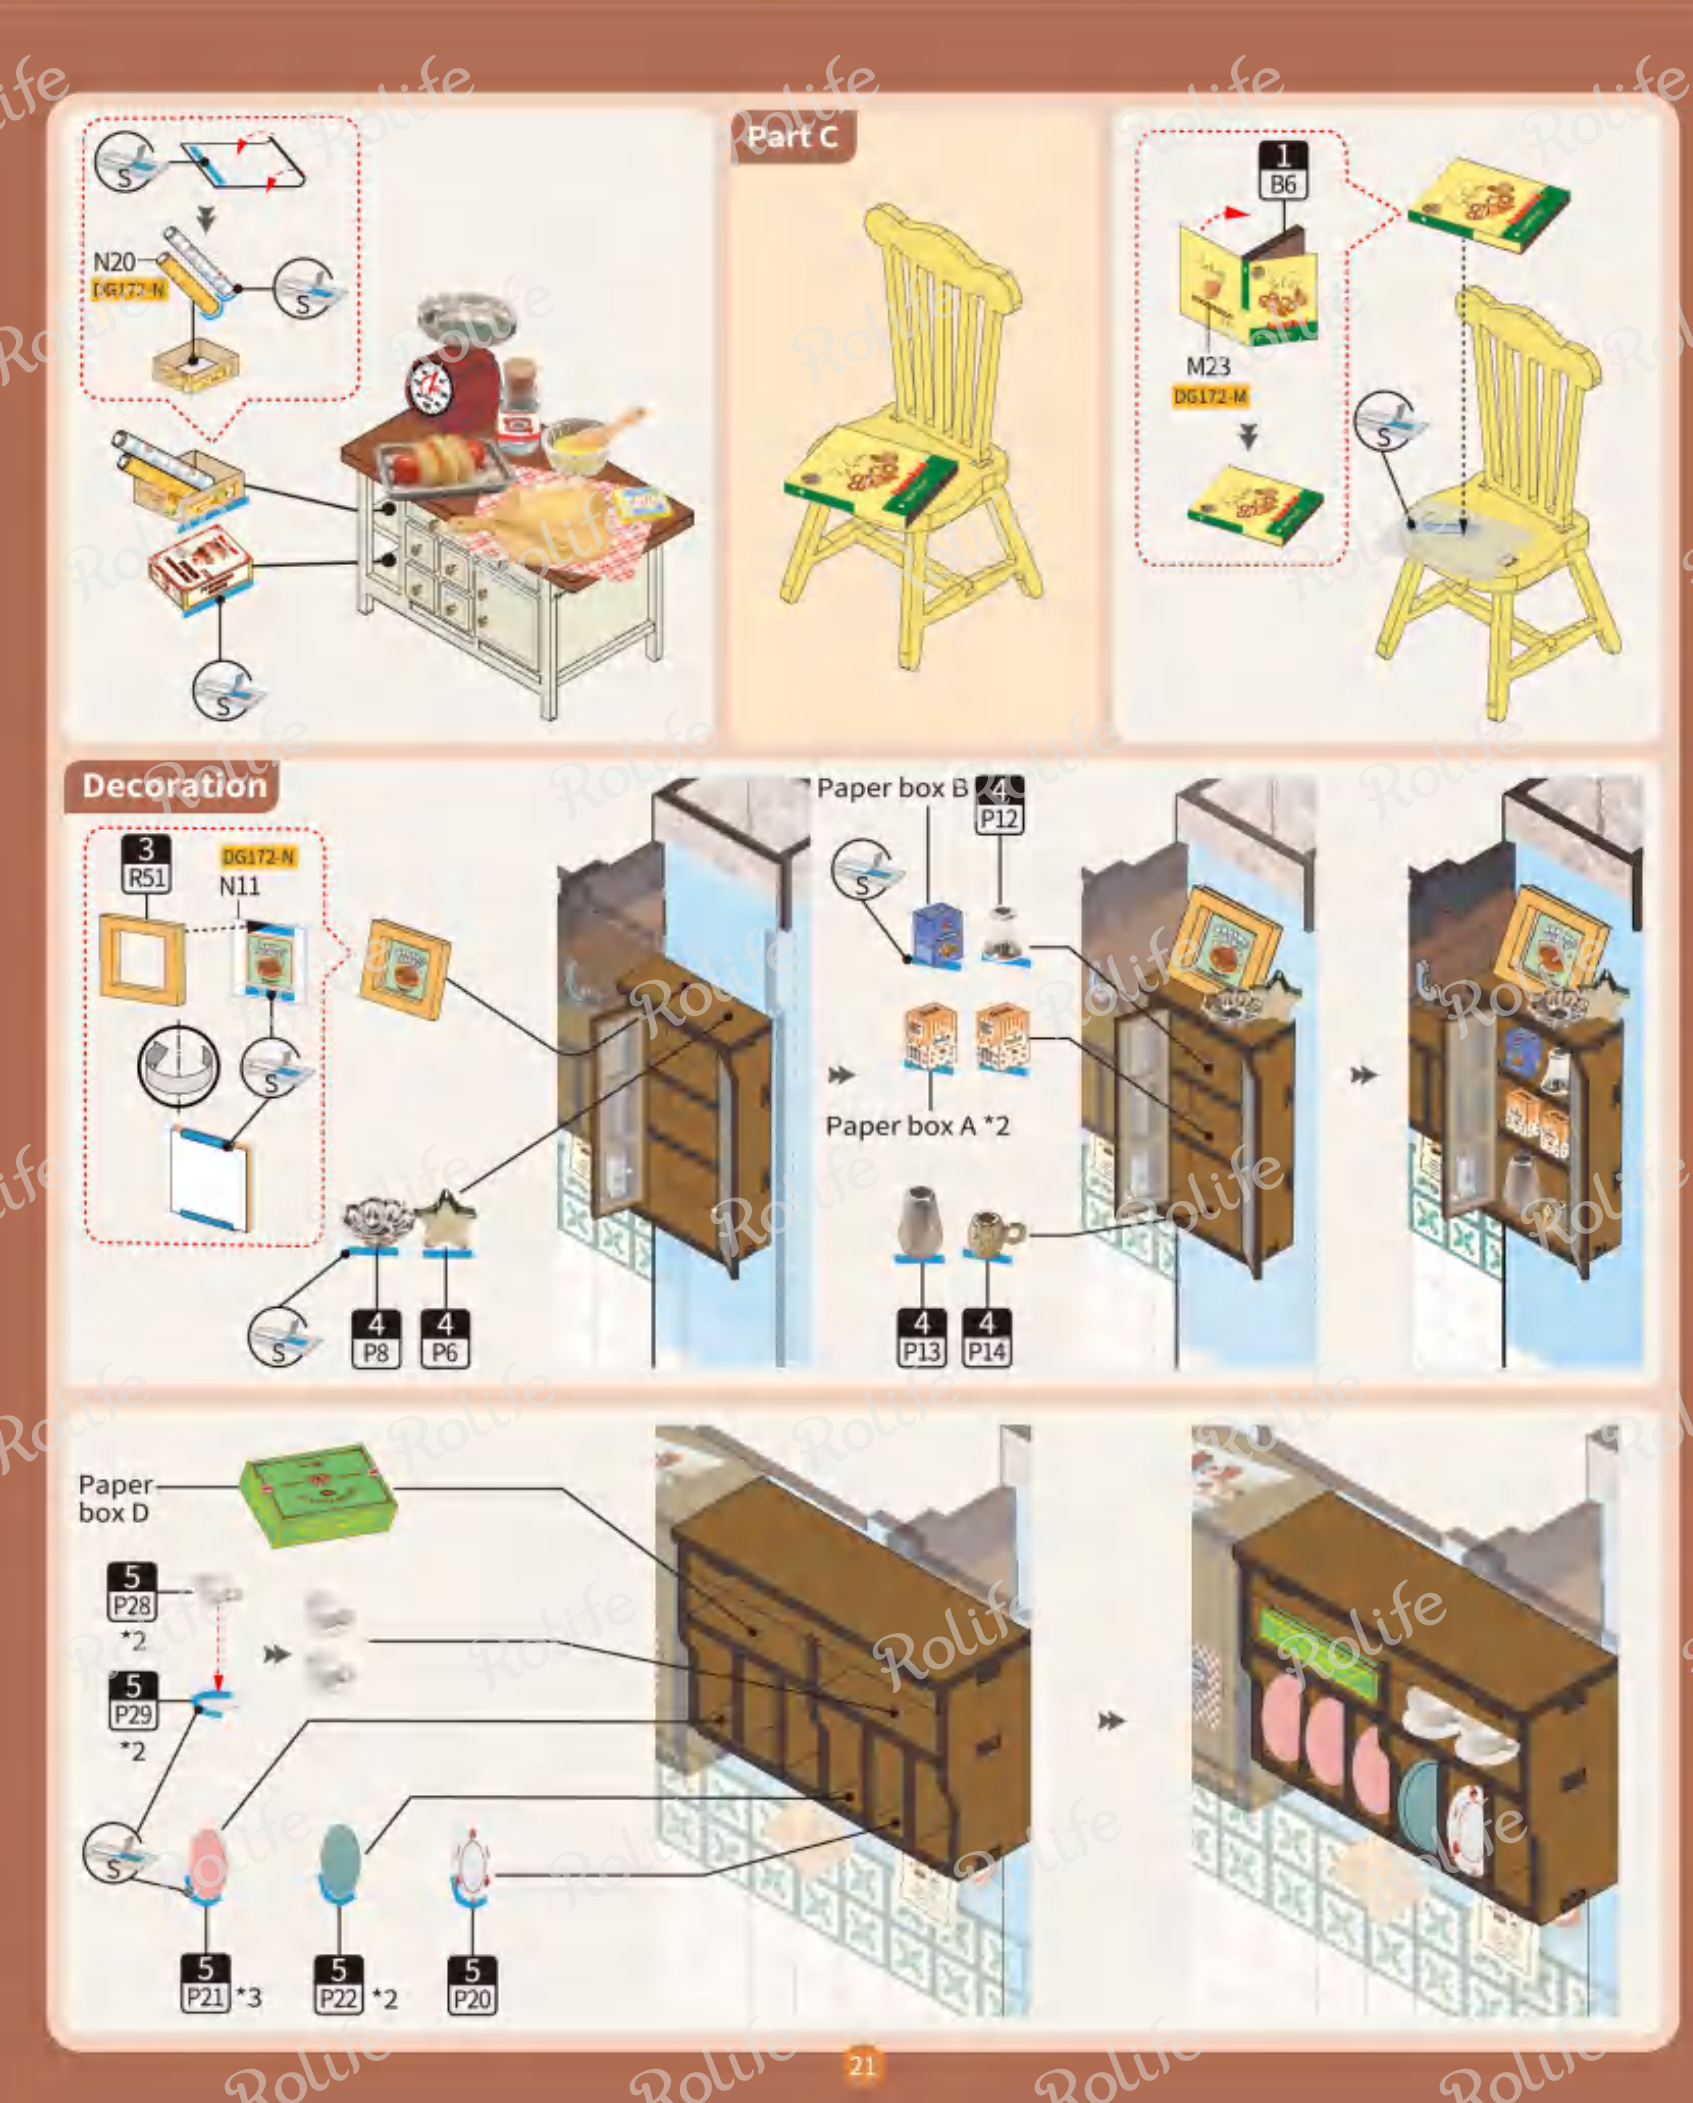
N20
Part C
M23
Decoration
N11
Paper box B
Paper box A *2
P13
P14
Paper box D
21

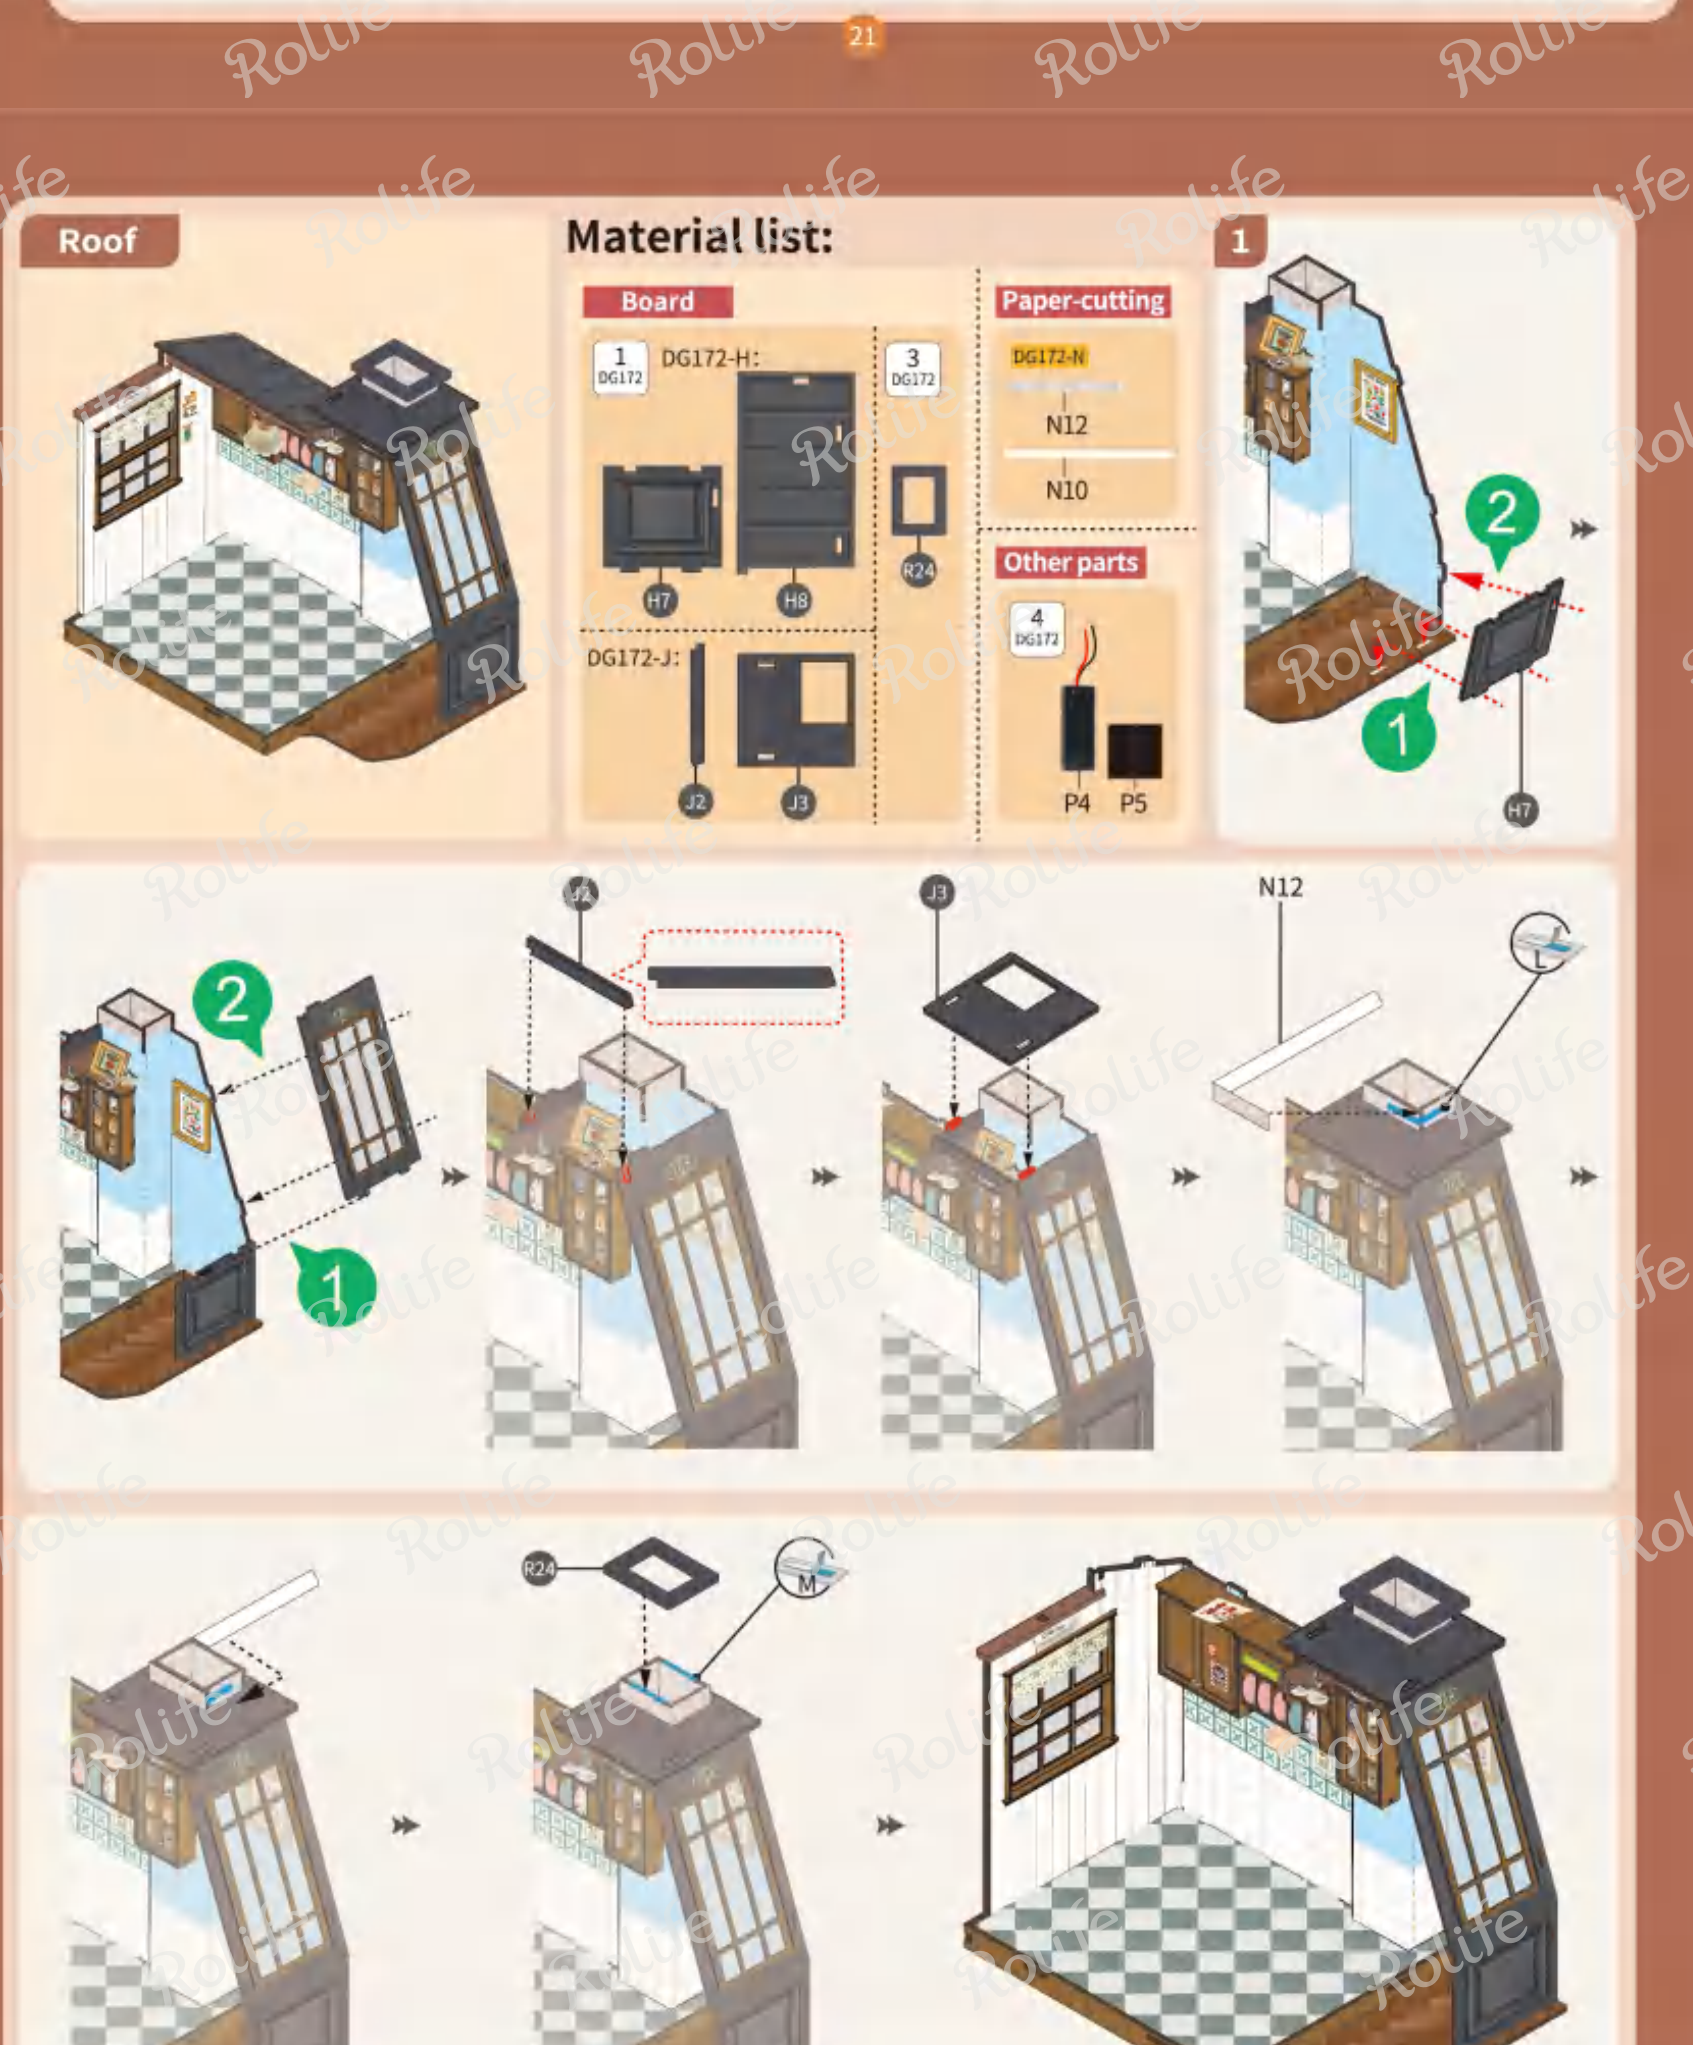
Roof
Material list:
Board
Paper-cutting
Other parts
N12
N10
P4
P5
1
2
22

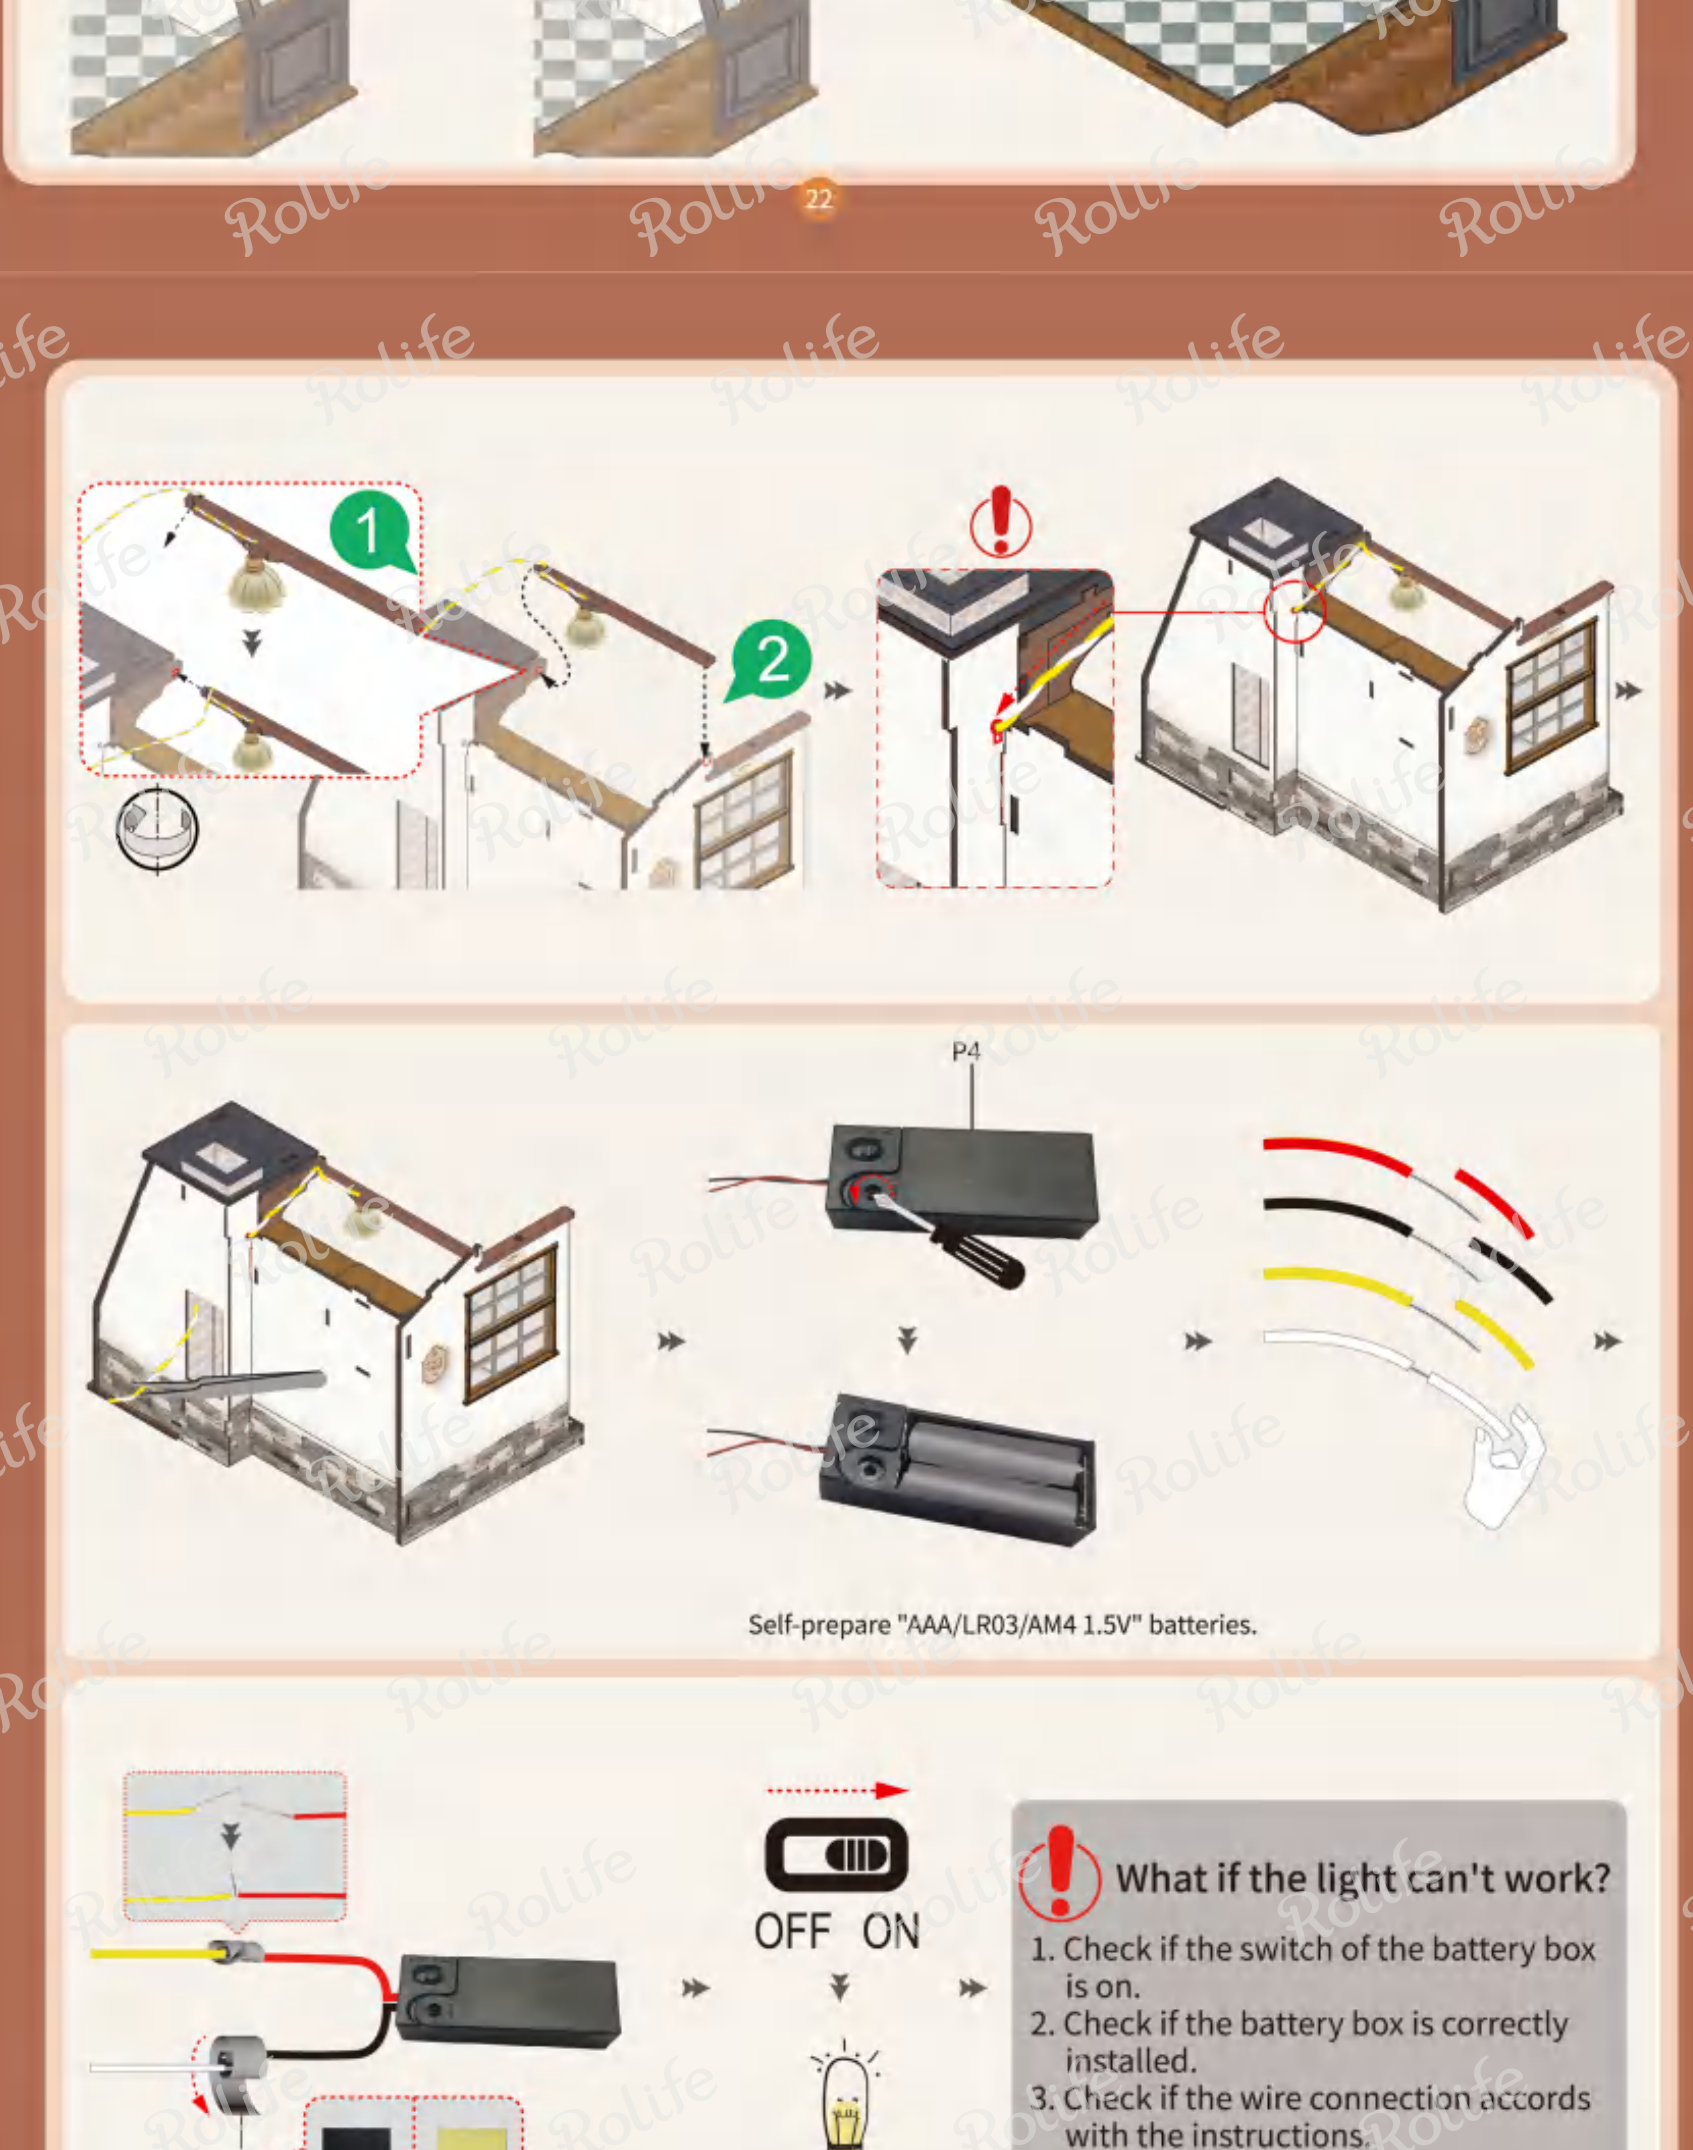
1
2
P4
P5
OFF
ON
23

Self-prepare "AAA/LR03/AM4 1.5V" batteries.

What if the light can't work?

1. Check if the switch of the battery box is on.
2. Check if the battery box is correctly installed.
3. Check if the wire connection accords with the instructions.

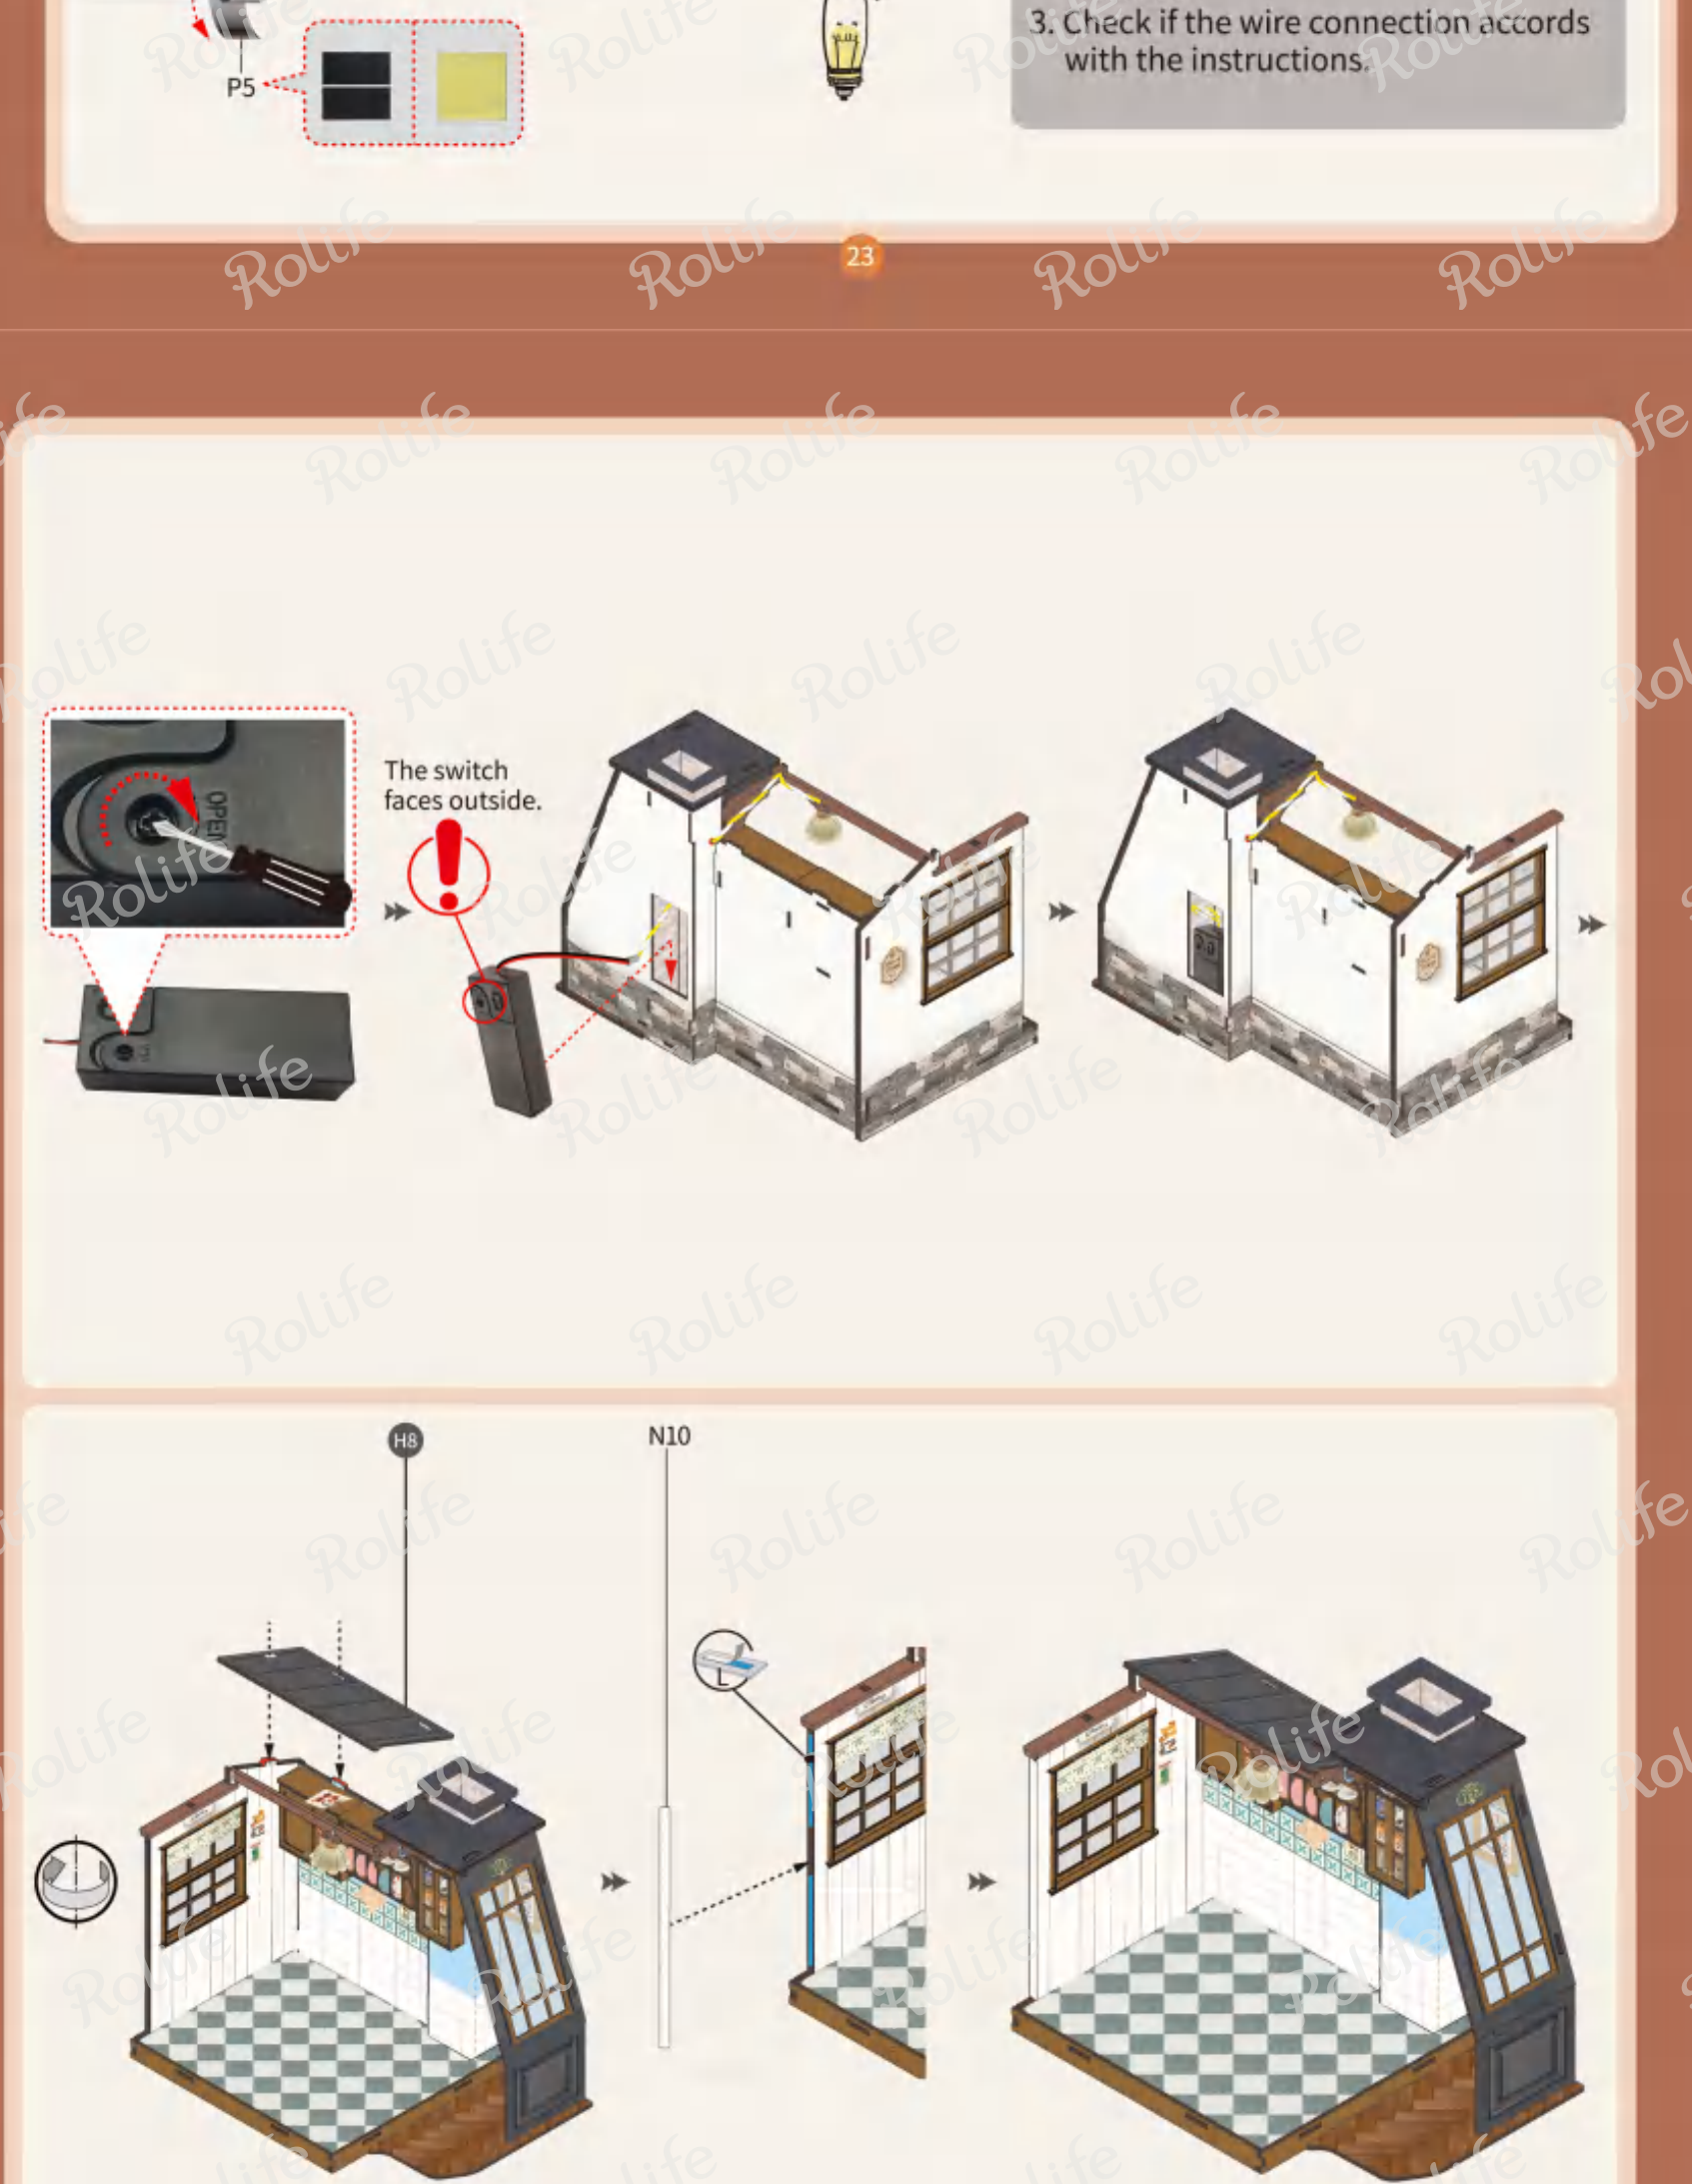
The switch faces outside.
N10
24

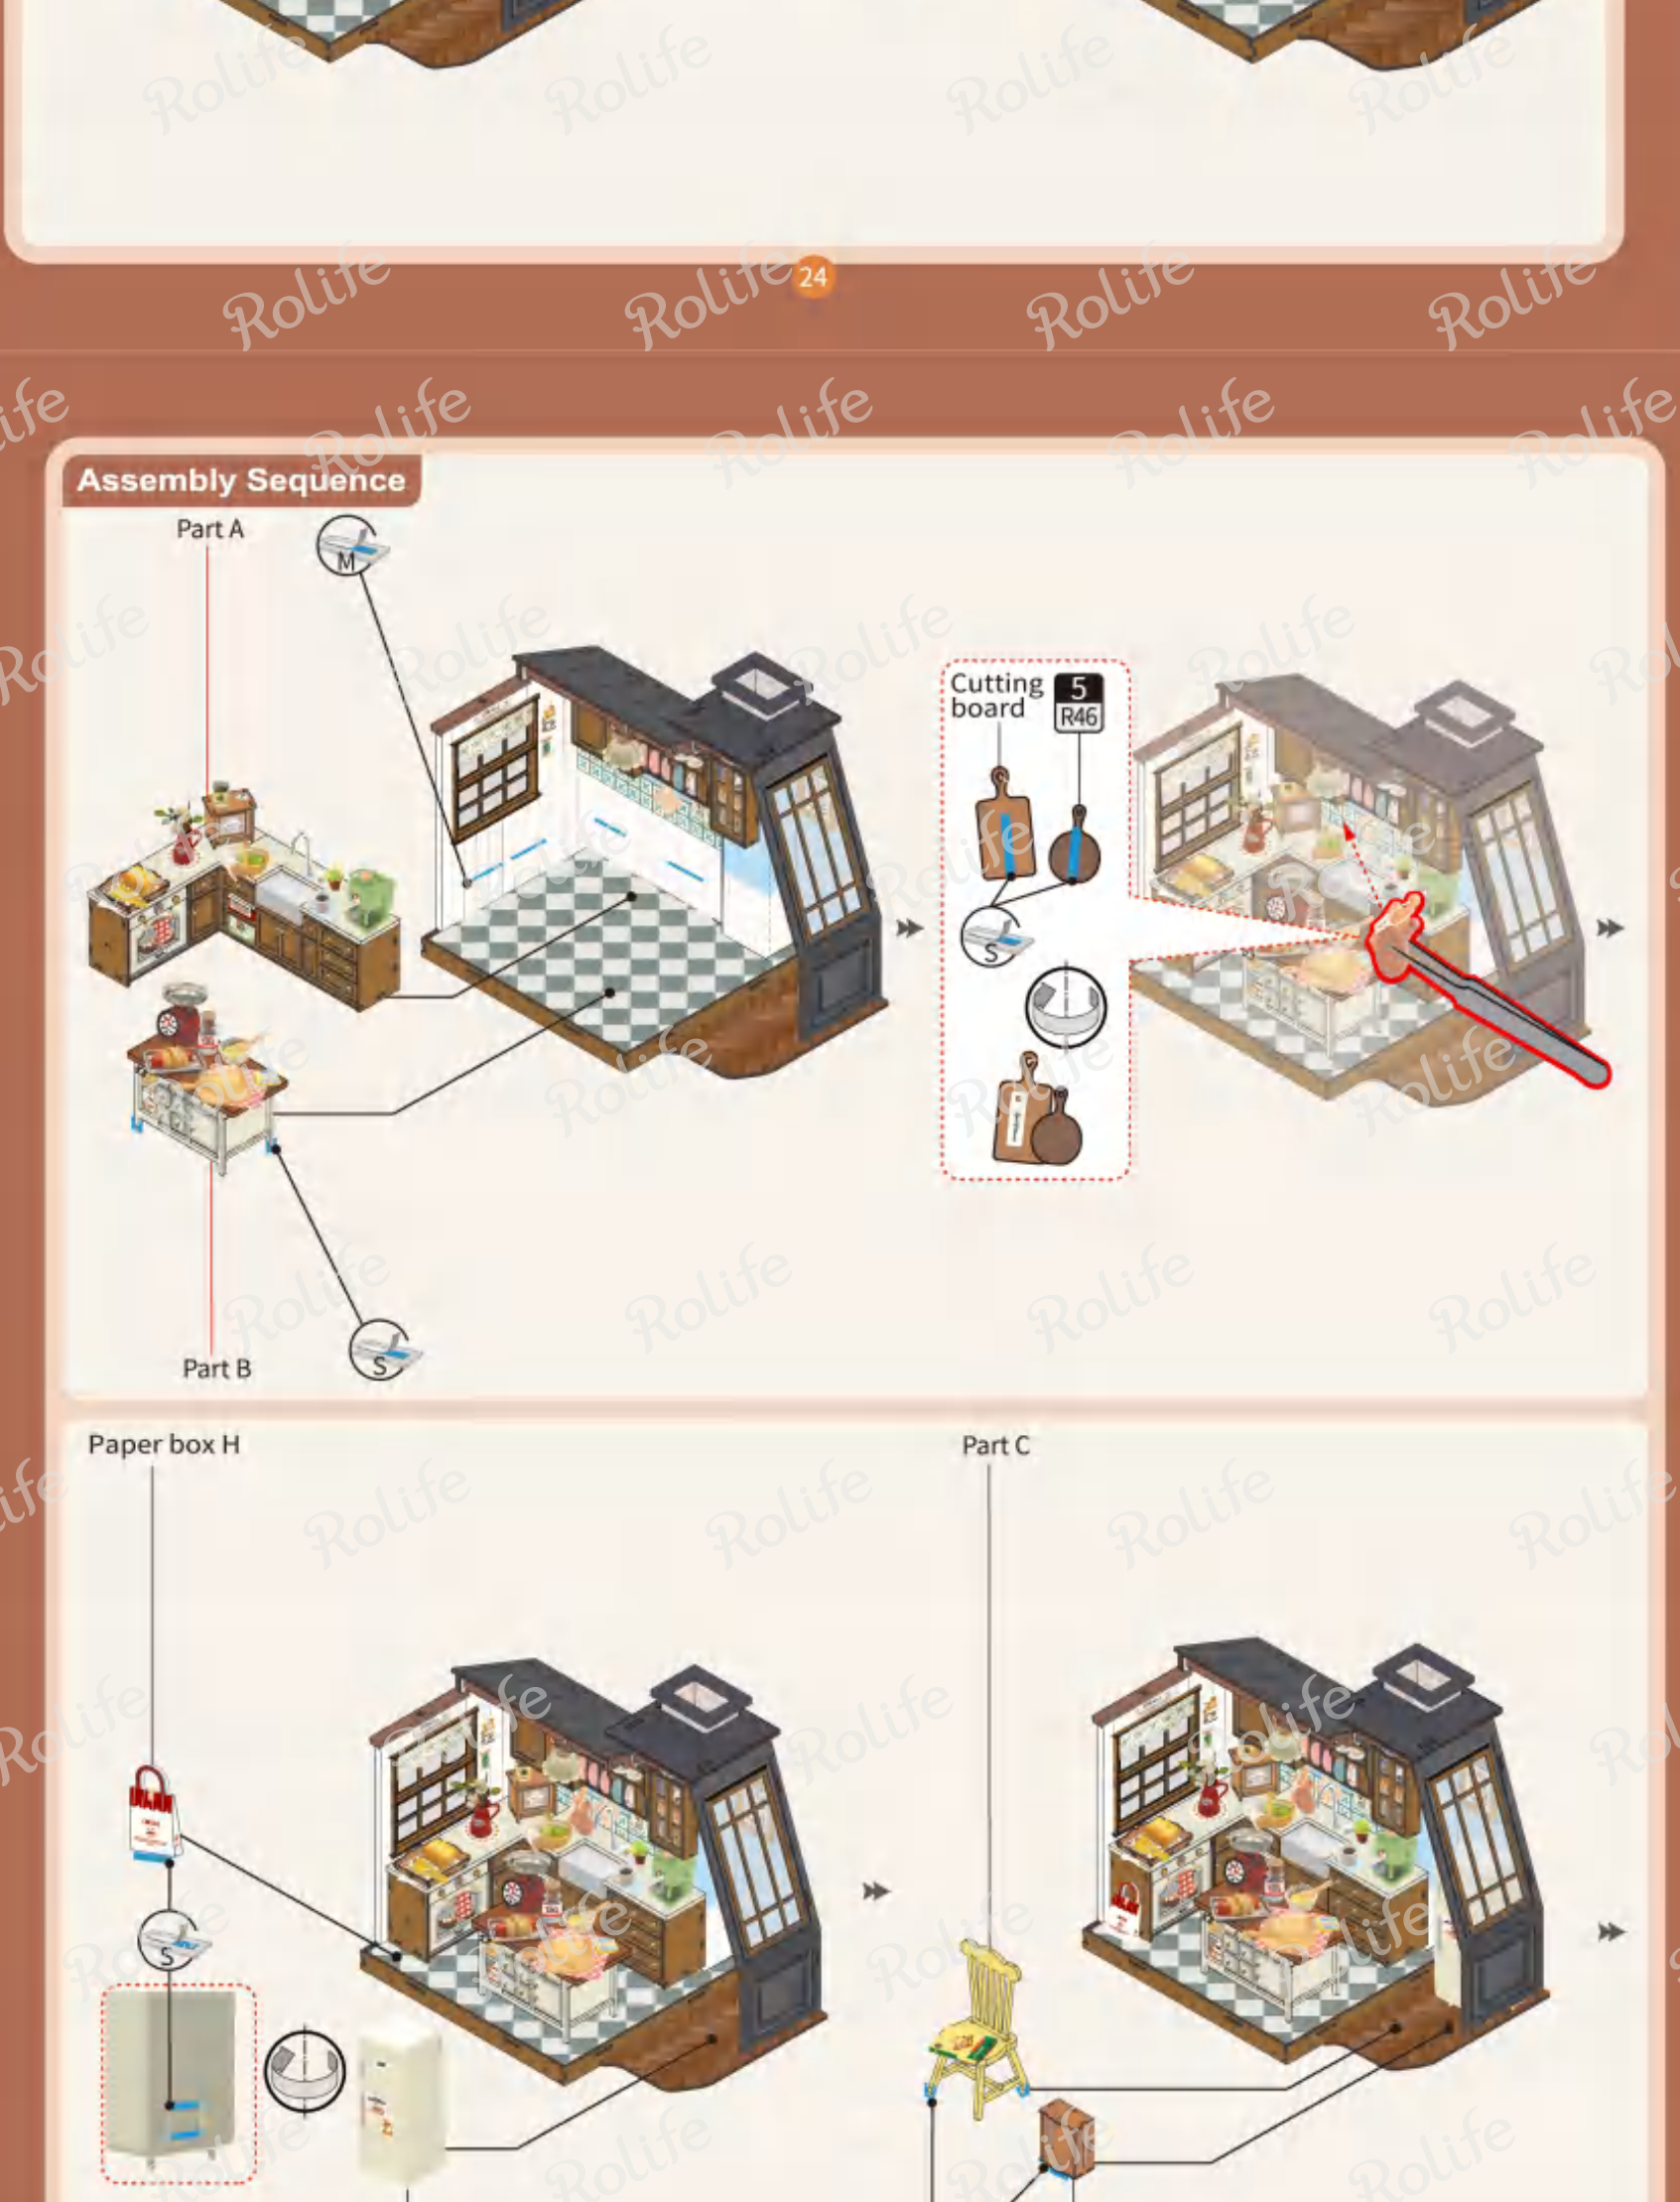
Assembly Sequence
Part A
Cutting board
Part B
Paper box H
Fridge
Part C
Wooden basket A
25

Completion

MANUFACTURER:
Robotime C&C (Jiangsu) Co., Ltd.
AFTER-SALES SERVICE CONTACT:
service@robotime.com

Designed by ROBOTIME
www.robotime.com
MADE IN CHINA

49.1DG172.100