INSTRUCTION

Gamer Queen

DW031

The picture is for reference only.

Scan the QR code or go to Community.robotime.com to discover DIY ideas, quick tips & WIN free kits

Assembly Tips

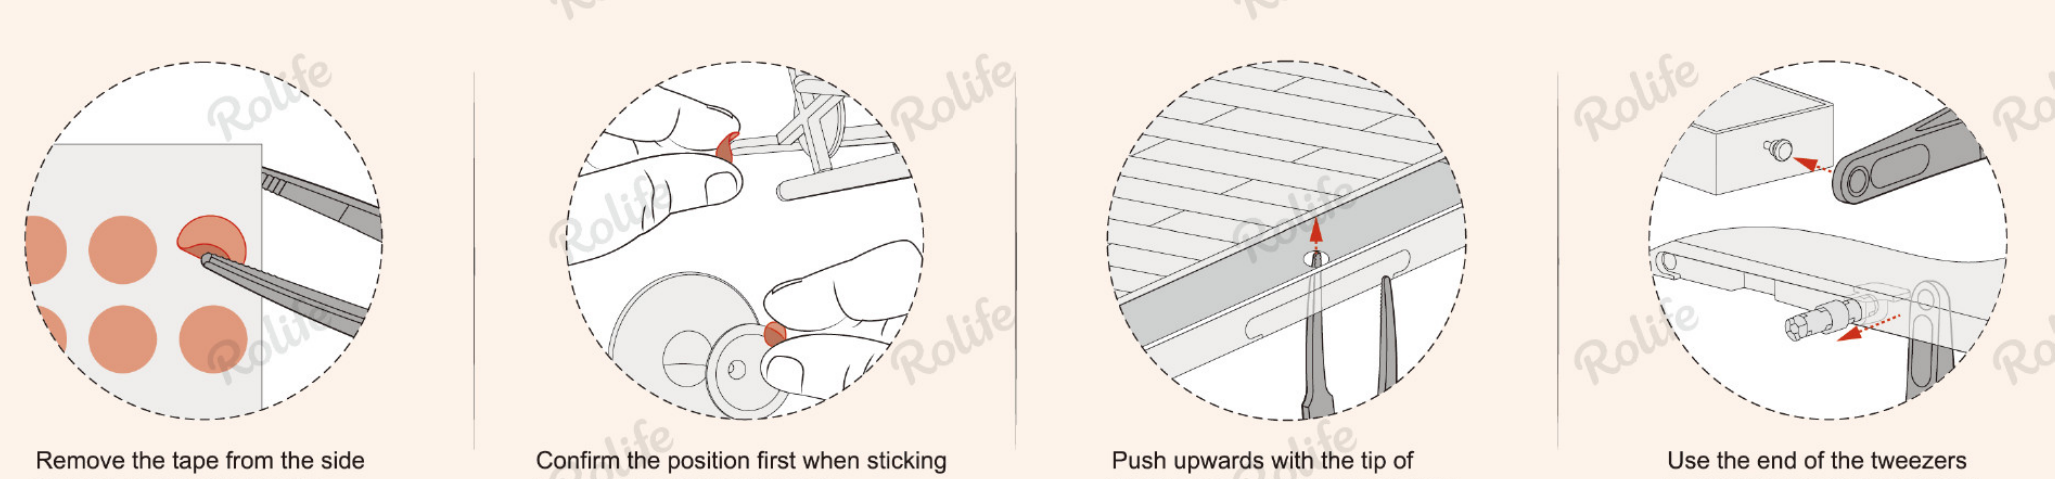

Remove the tape from the side with the tip of the tweezers.

Confirm the position first when sticking the tape on non-flat surfaces, and then remove the film.

Push upwards with the tip of the tweezers to remove the floor.

Use the end of the tweezers to remove the connecting nail or assemble small parts.

01 Notice

WARNING:

- Not suitable for children under 3 years old.
- The product shall only be used with a transformer for product or a power supply for it.
- The product shall be used with the power supply supplied, if the transformer is supplied with the product.
- The transformer or power supply is not a toy or model.
- Misuse of transformer can cause electrical shock.
- The power supply used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Do not connect the wire to output socket.
- The product is not to be connected to more than the recommended number of power supplies.
- If the product contains motor, motor may be a hot component. Do not touch it to avoid burns while operating.
- This product is only to be connected to equipment bearing either of the following symbols: ▣ or ◈
- This product does not need liquid cleaning, and please clean the product with clean soft cloth.
- The instruction must be retained since it contains important information.

NOTICE:

- Children should be accompanied by adults while assembling.
- Please keep the product away from flammable substances and humid environments to prevent damage.

02 Icon

Please secure parts as shown in case of any parts loosening:

Use double-sided adhesive dot	Use long-strip adhesive tape
Special attention in assembly	Perspective changed
x2 Complete 2 same parts	Force point
① Step 1	② Step 2

03 Switch box instructions (P3)

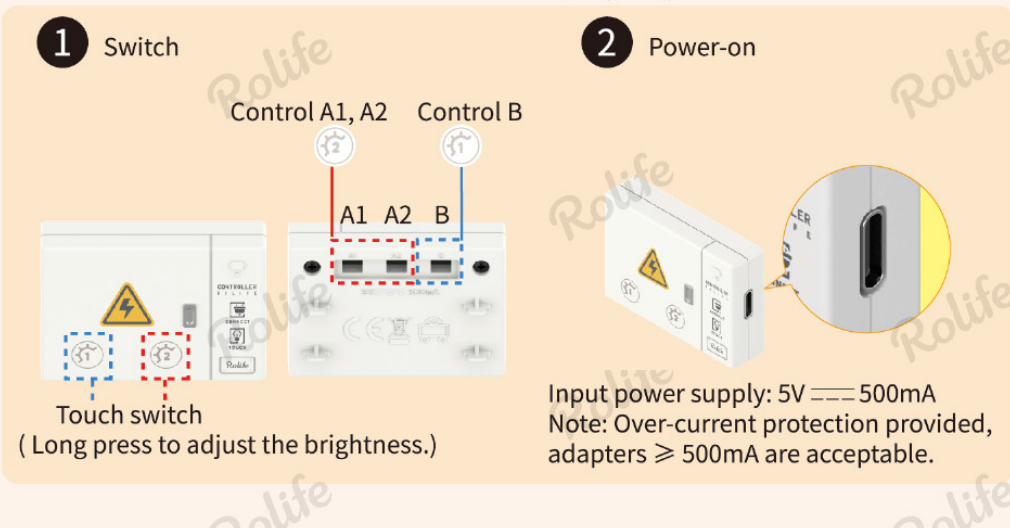
❶ Switch
Control A1, A2
Control B
A1 A2 B
❷ Power-on

Touch switch
(Long press to adjust the brightness.)

Input power supply: 5V ⎓ 500mA
Note: Over-current protection provided, adapters ≥ 500mA are acceptable.

04 Data cable instructions (P2)

❶ Connect to power Charger needs self-preparation

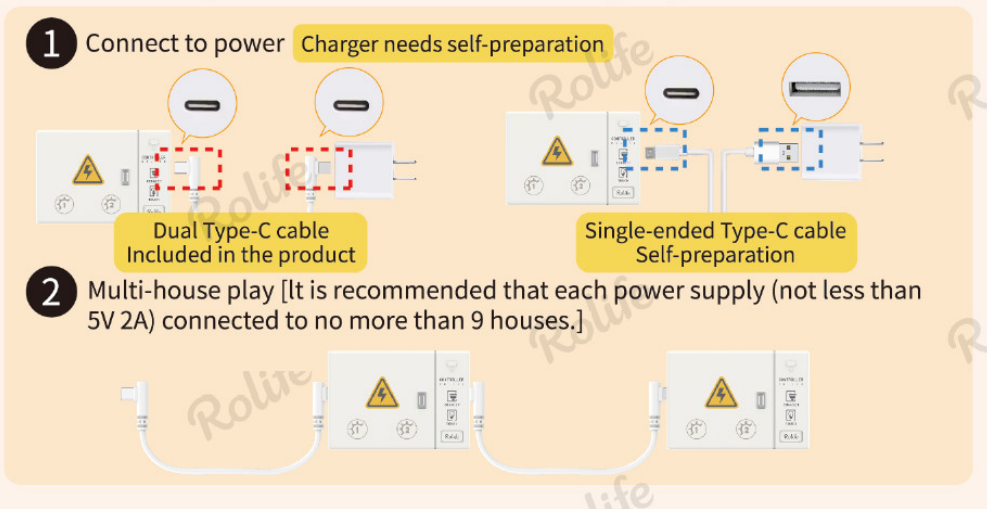
Dual Type-C cable
Included in the product
Single-ended Type-C cable
Self-preparation

❷ Multi-house play [It is recommended that each power supply (not less than 5V 2A) connected to no more than 9 houses.]

05 Assembling steps

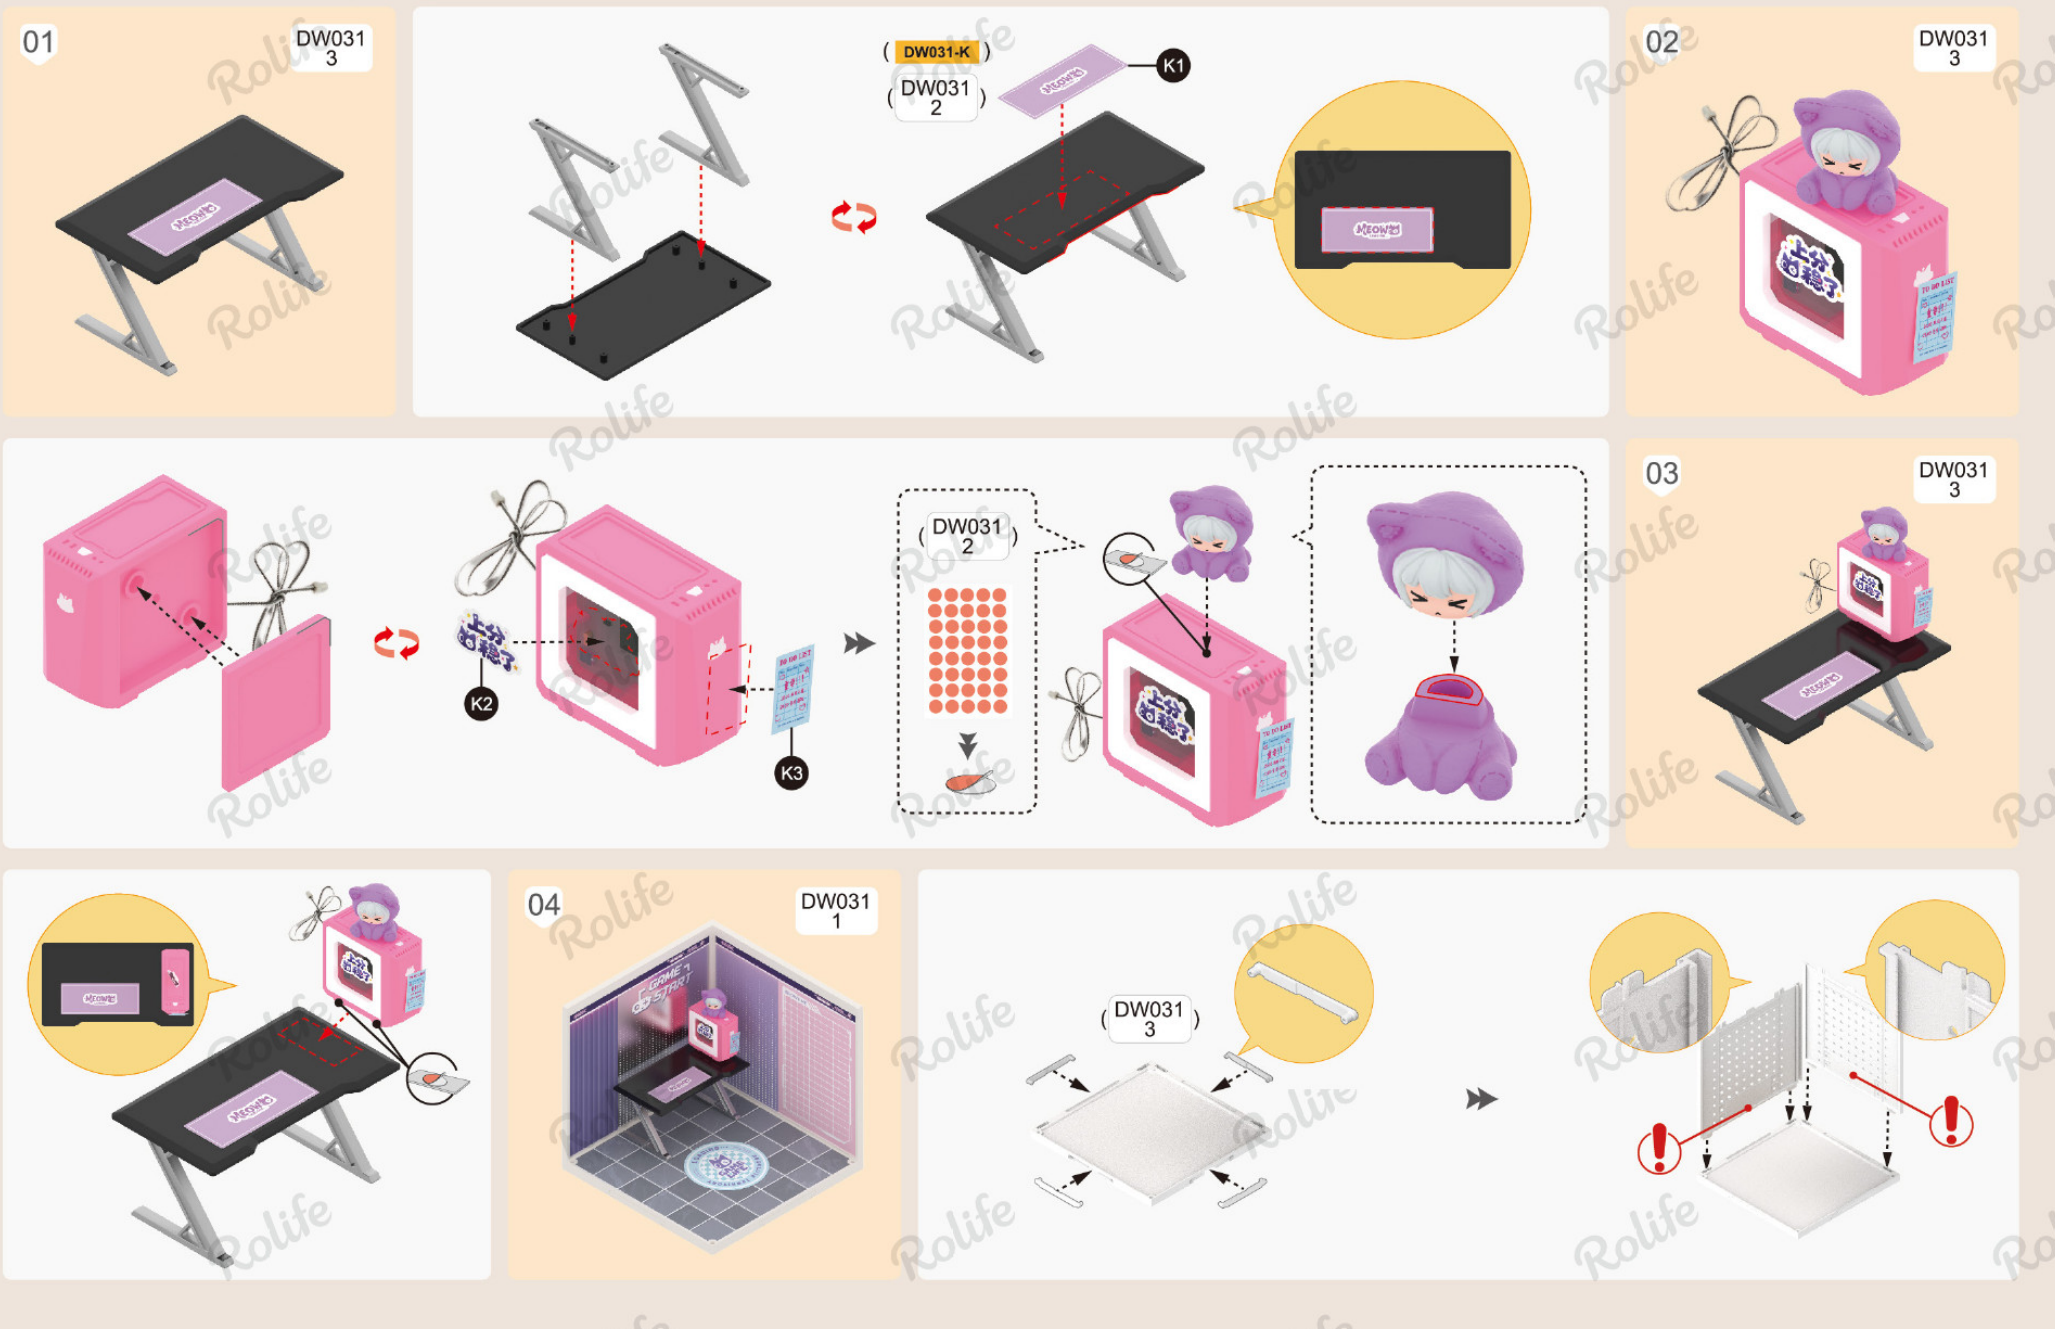
01
DW031 3
DW031-K
DW031 2
K1
02
DW031 3
03
DW031 3
04
DW031 1
DW031 2

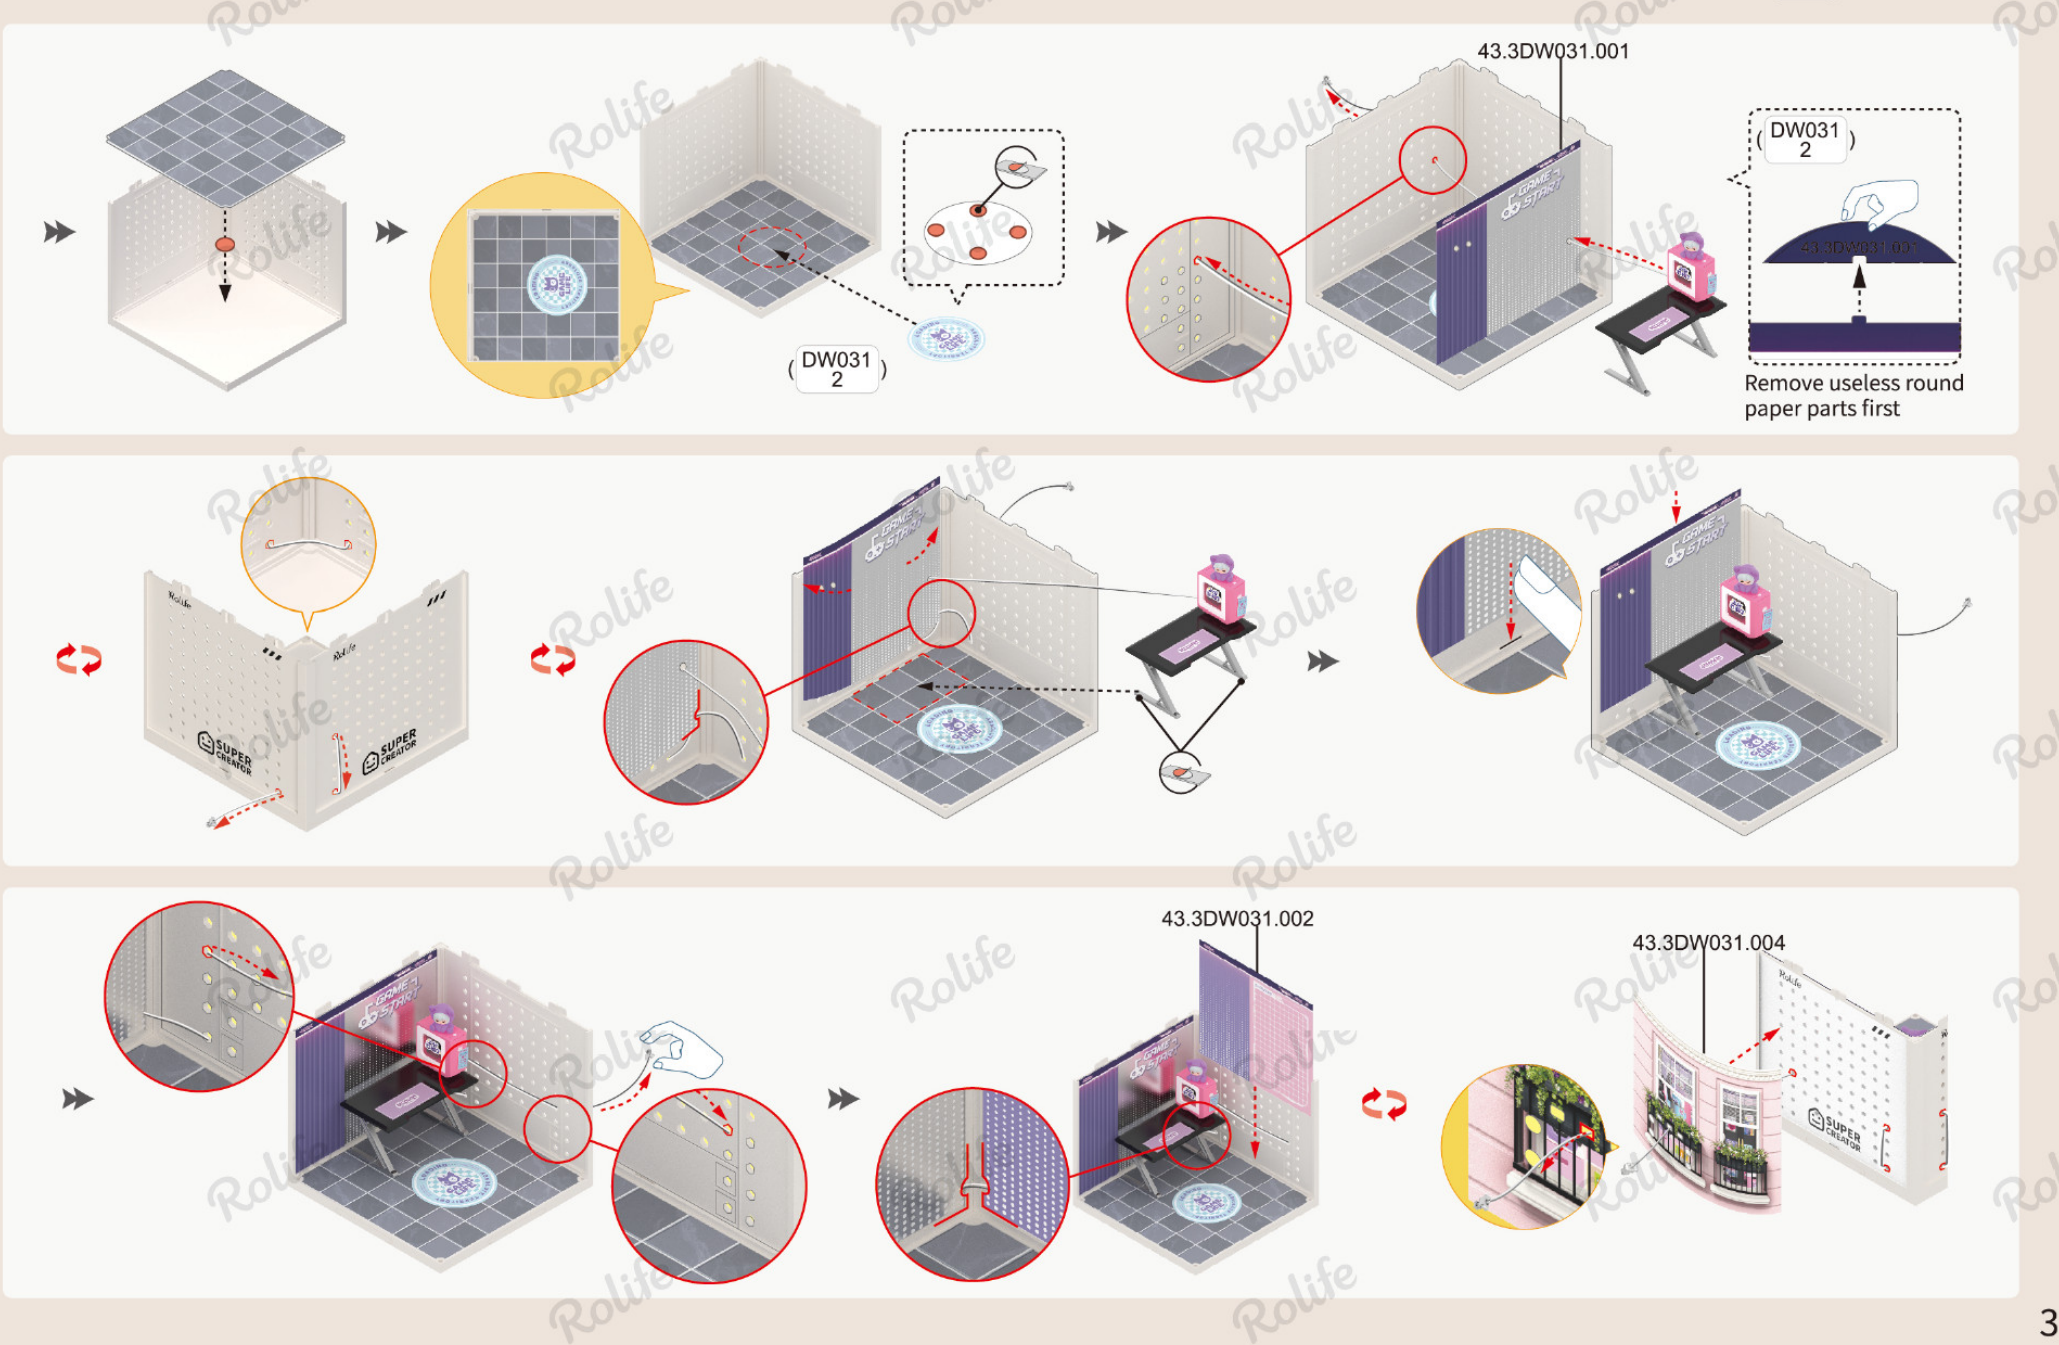
43.3DW031.001
DW031 2
Remove useless round paper parts first
43.3DW031.002
43.3DW031.004

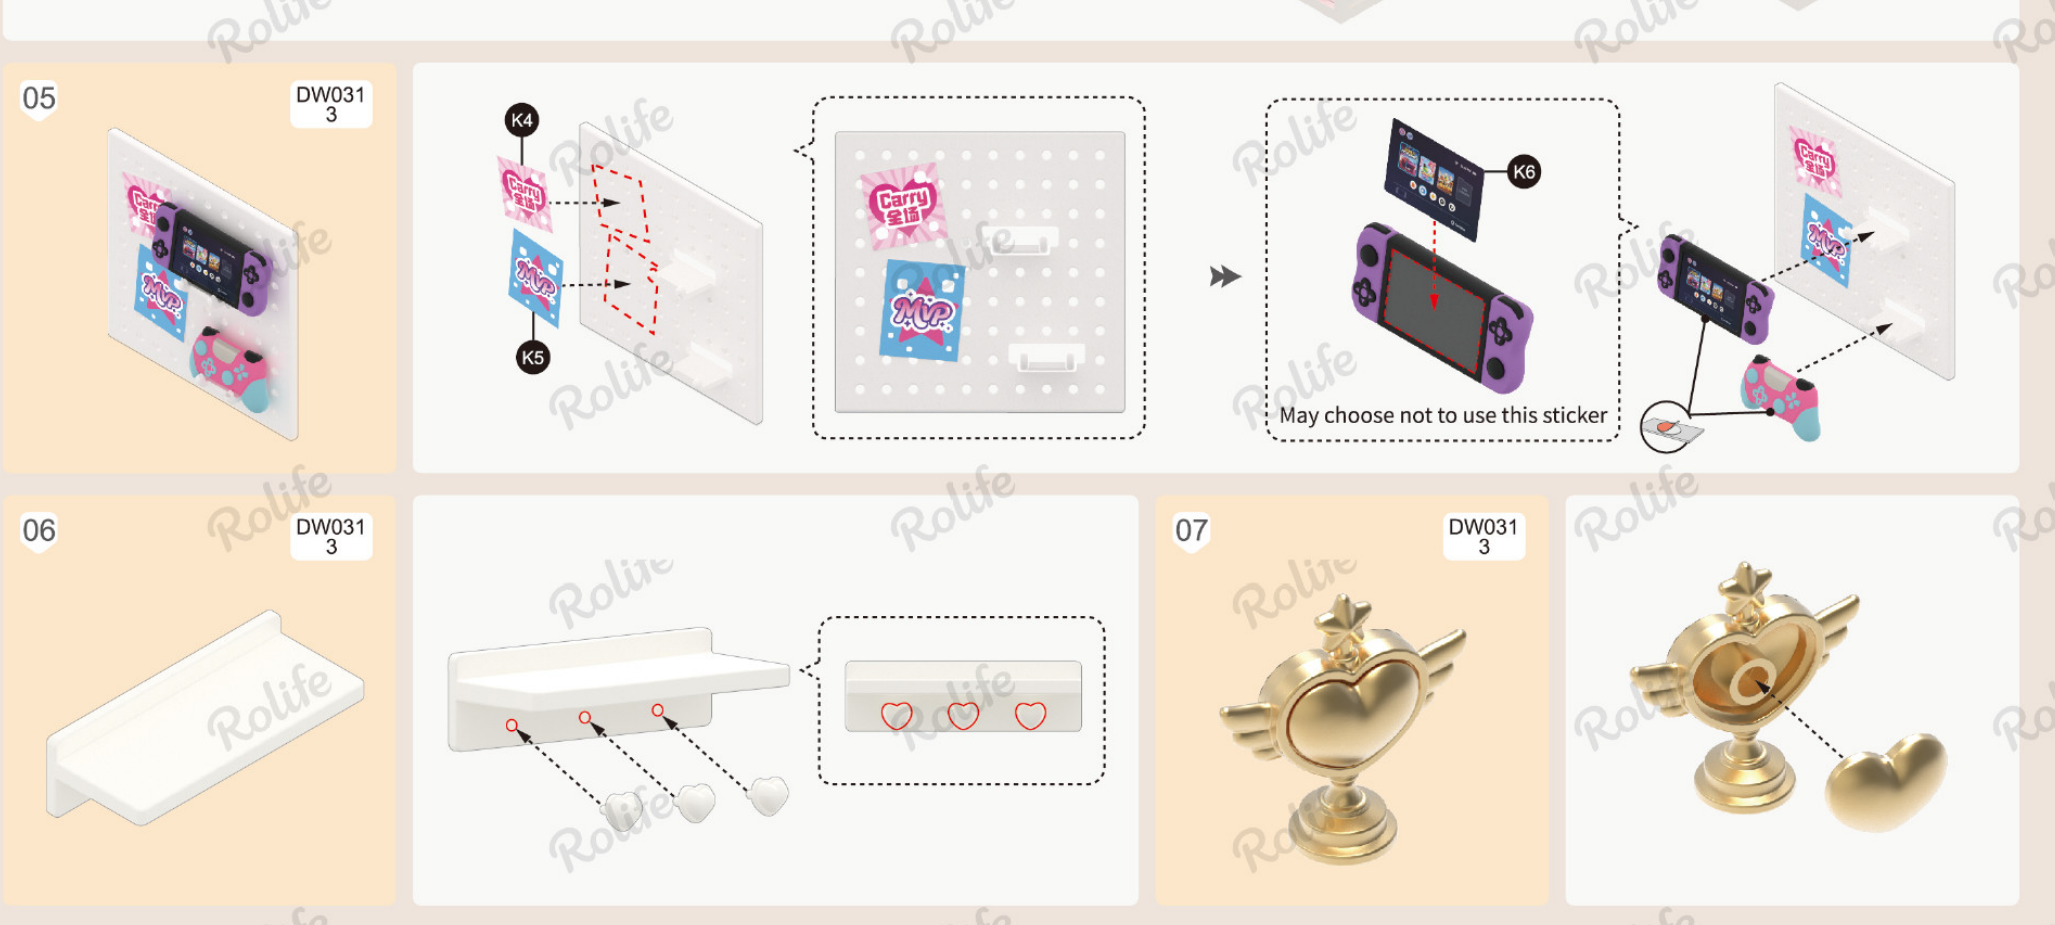
(Light part)
43.3DW031.003
05
DW031 3
May choose not to use this sticker
06
DW031 3
07
DW031 3

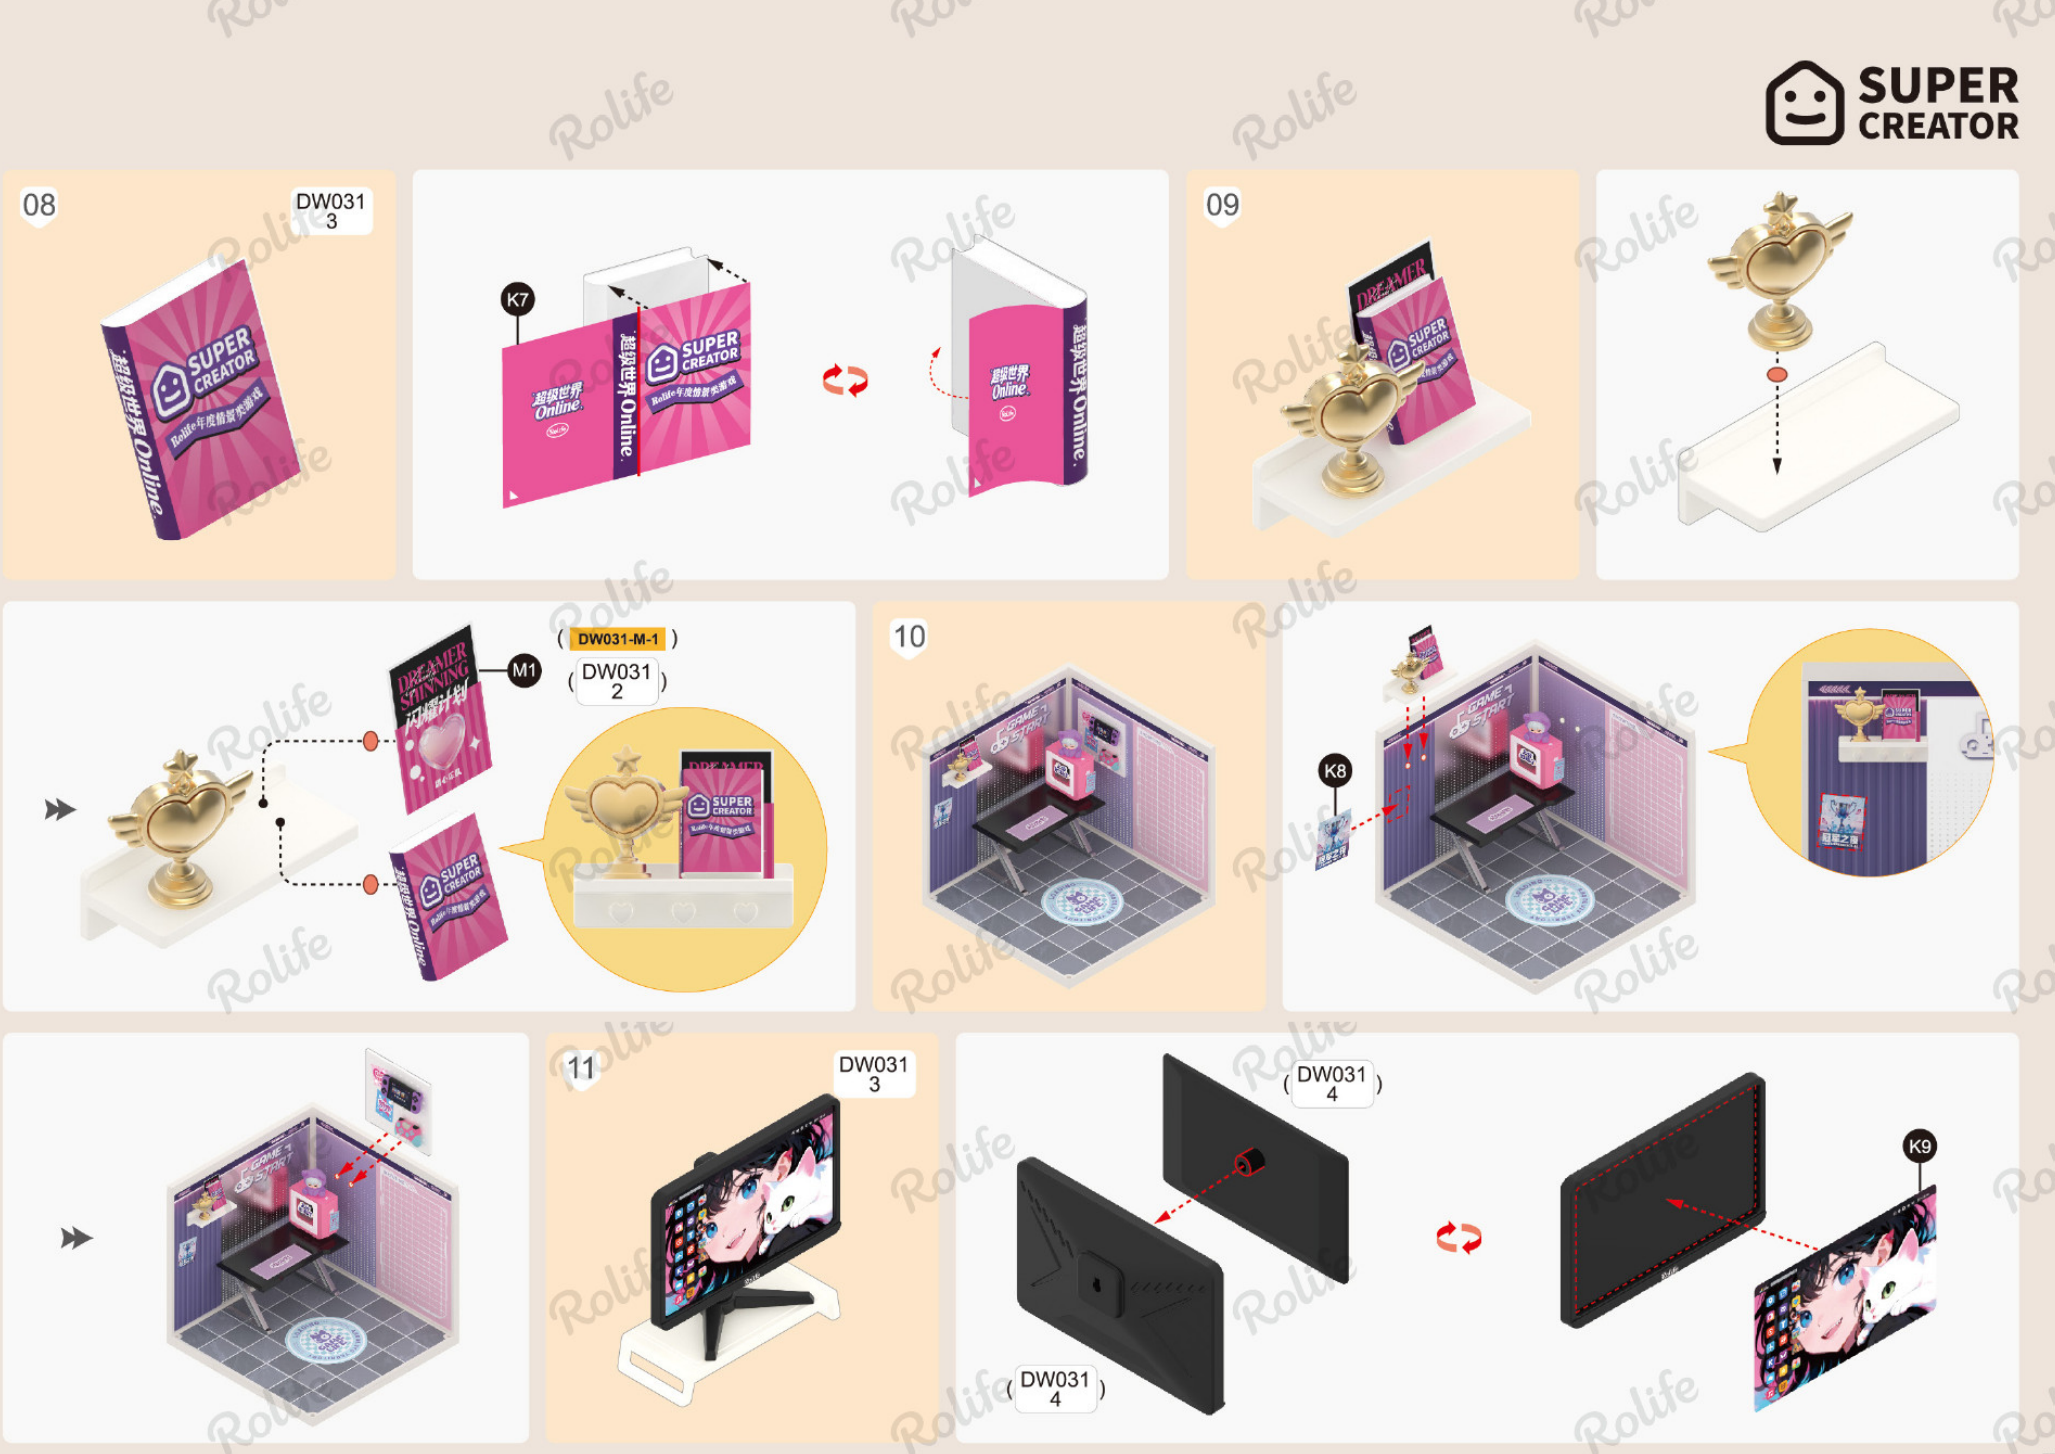
08
DW031 3
09
DW031-K
DW031 2
10
11
DW031 3
DW031 4

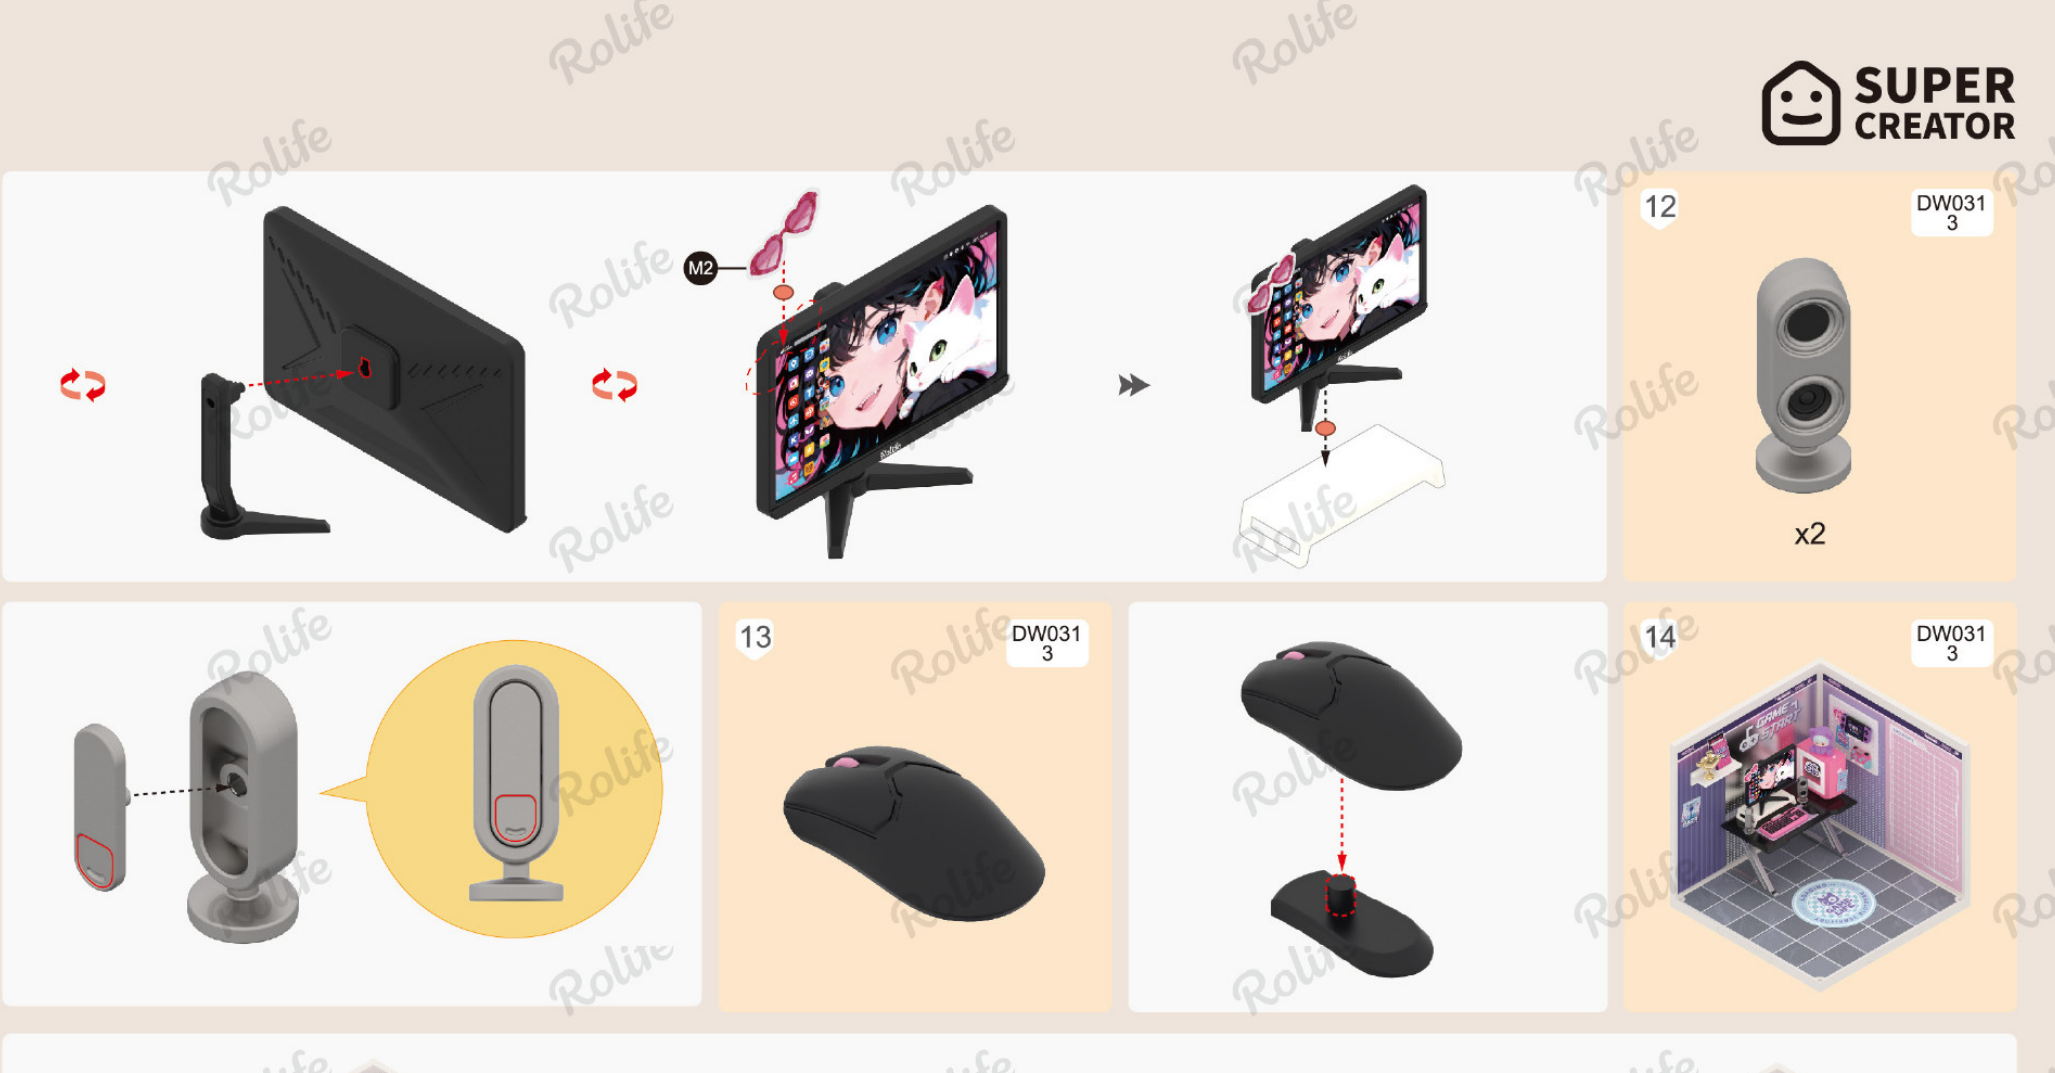
12
DW031 3
x2
13
DW031 3
14
DW031 3

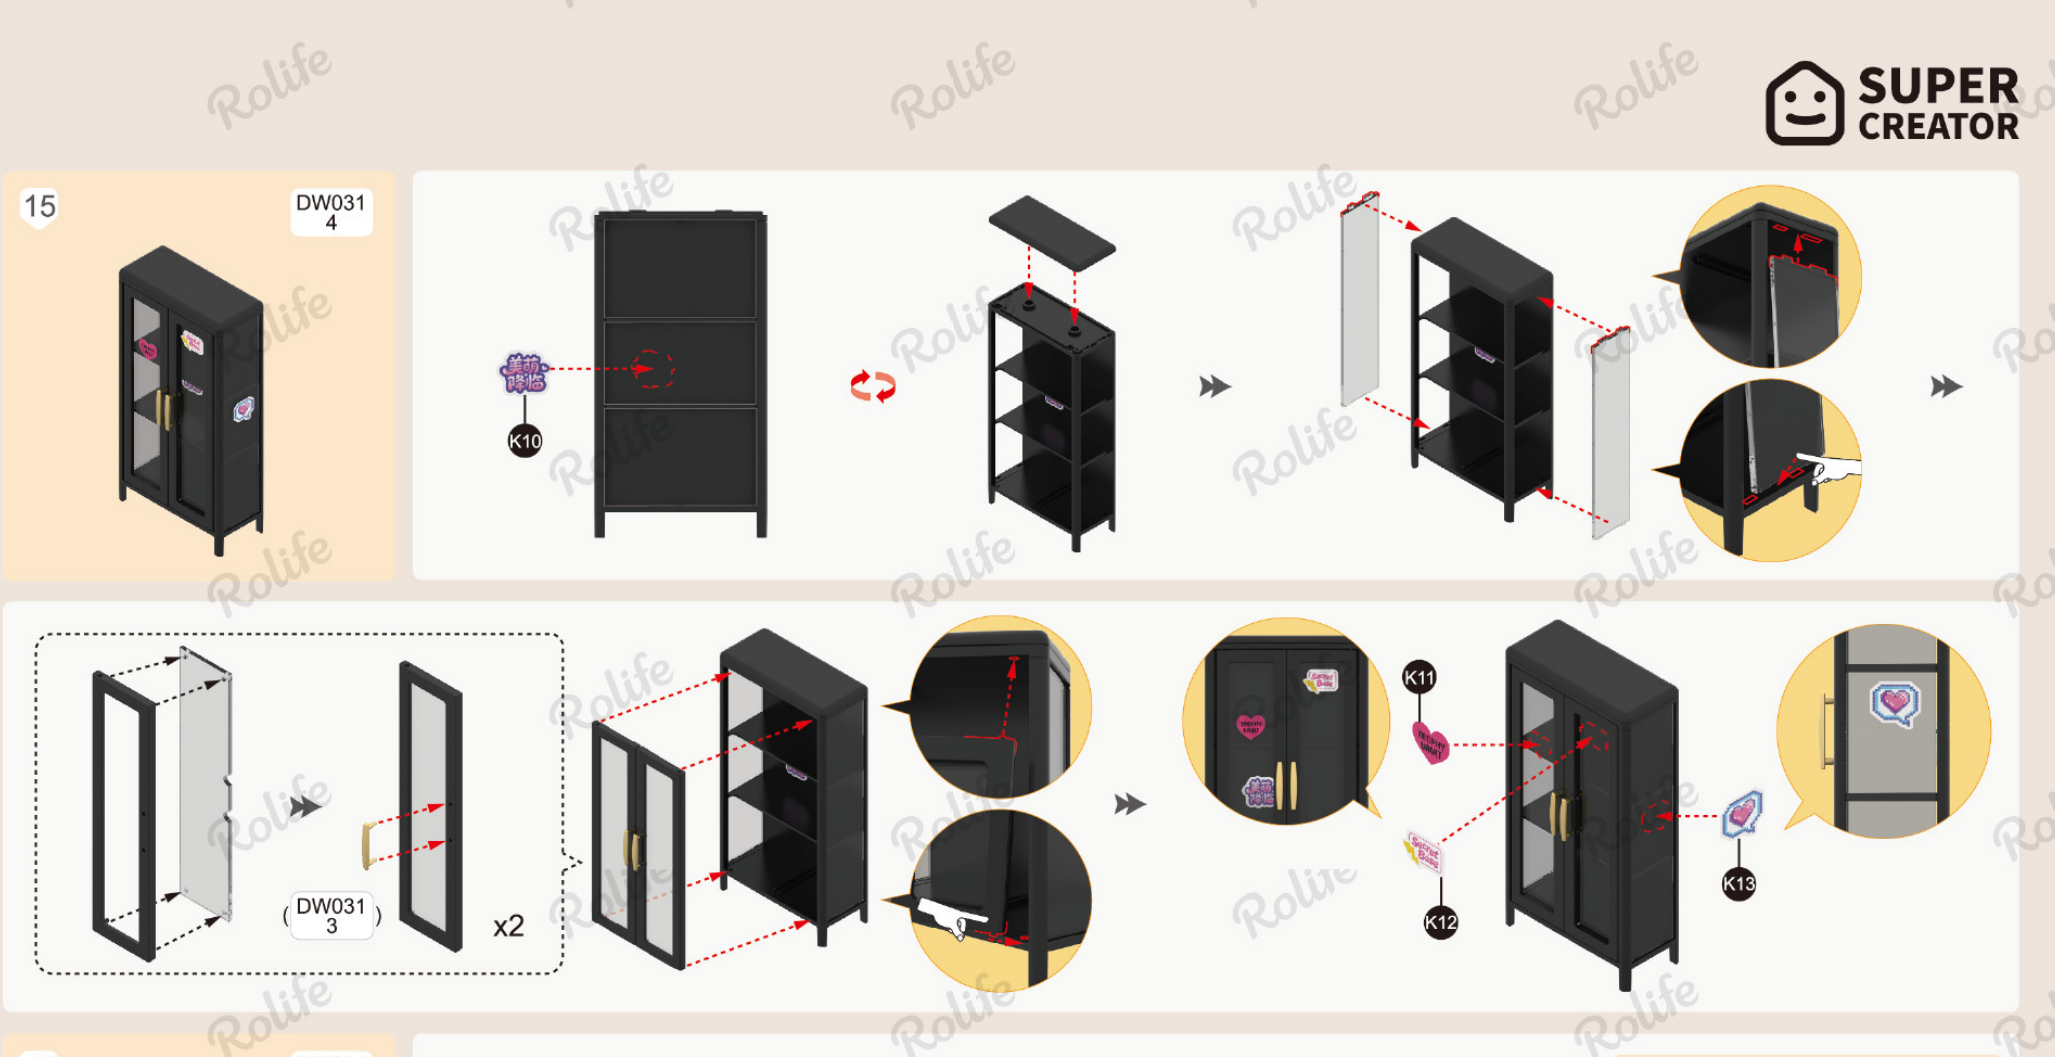
15
DW031 3
DW031 5
x2
16
DW031 3
Assemble in the same way.

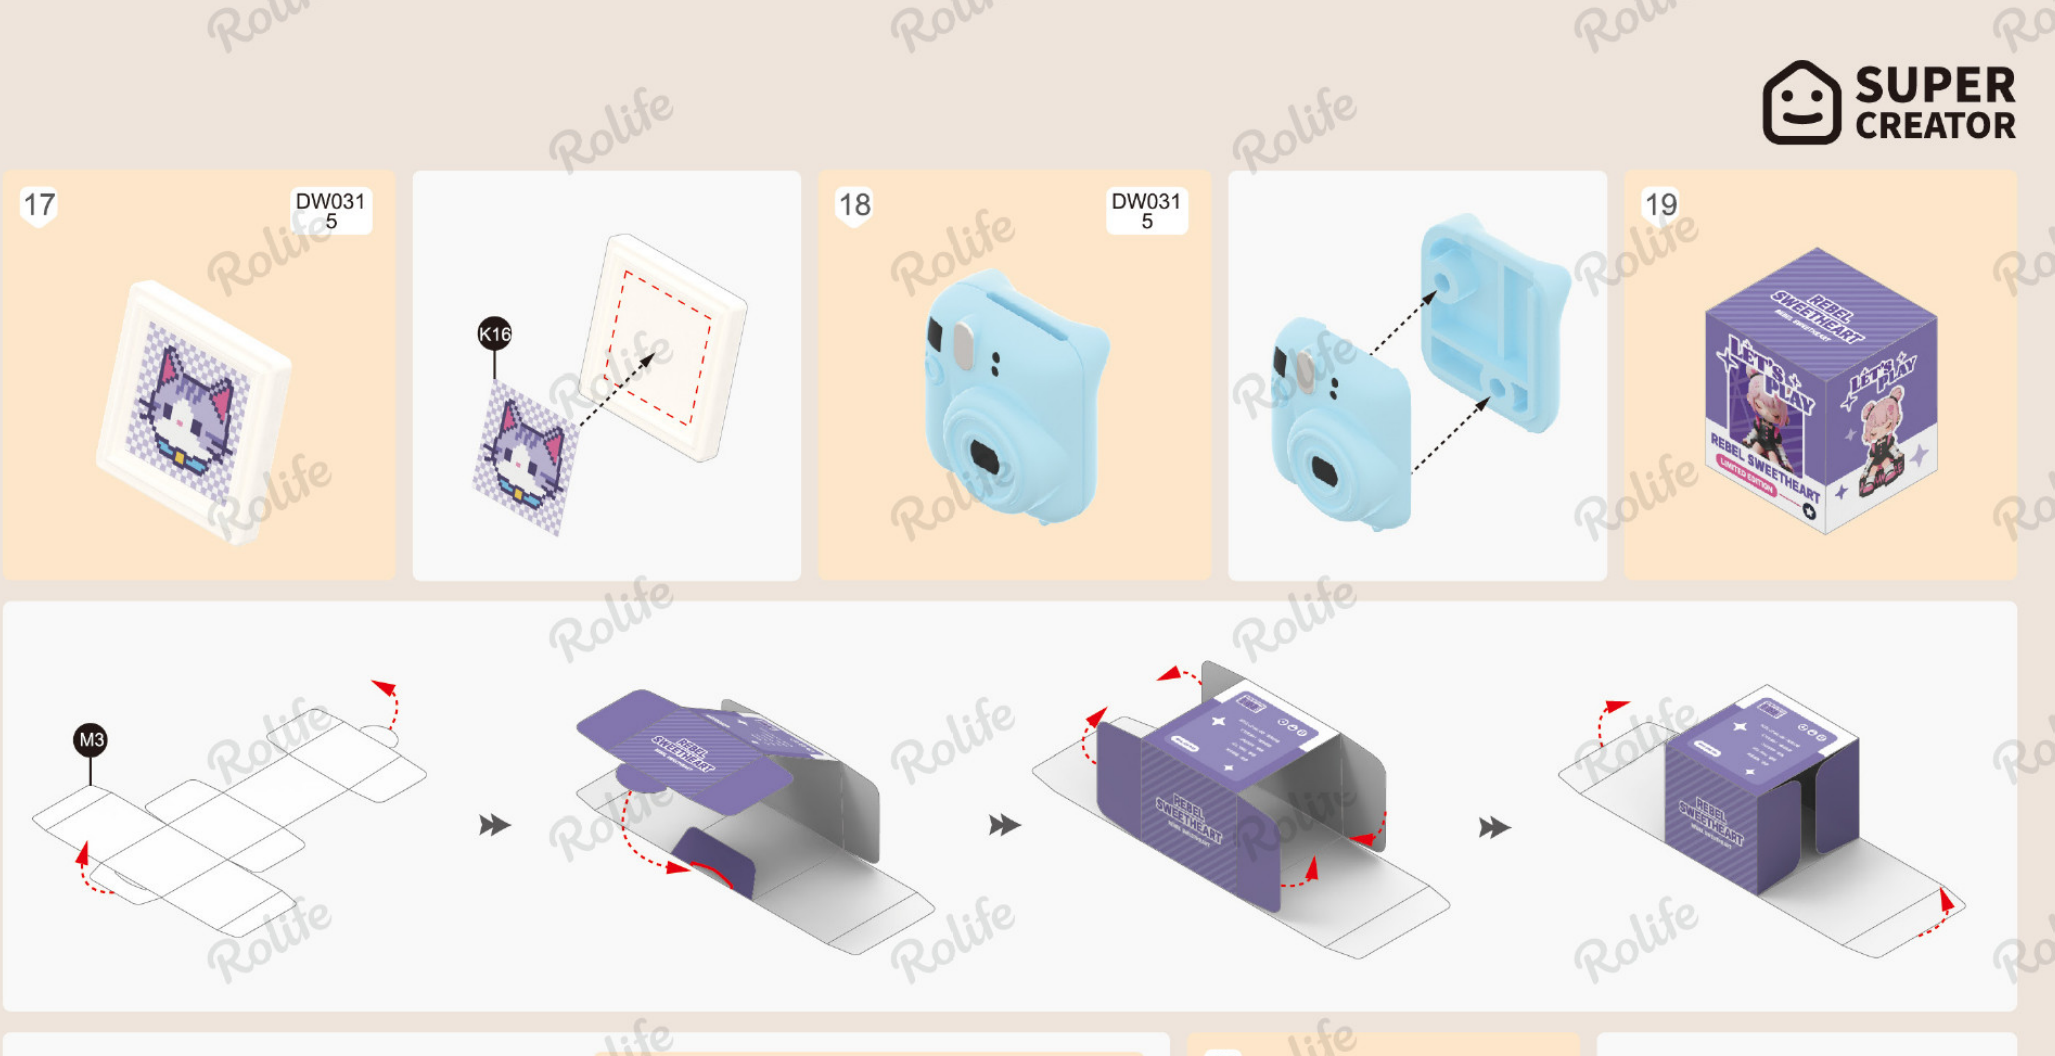
17
DW031 4
18
19
DW031 4
20

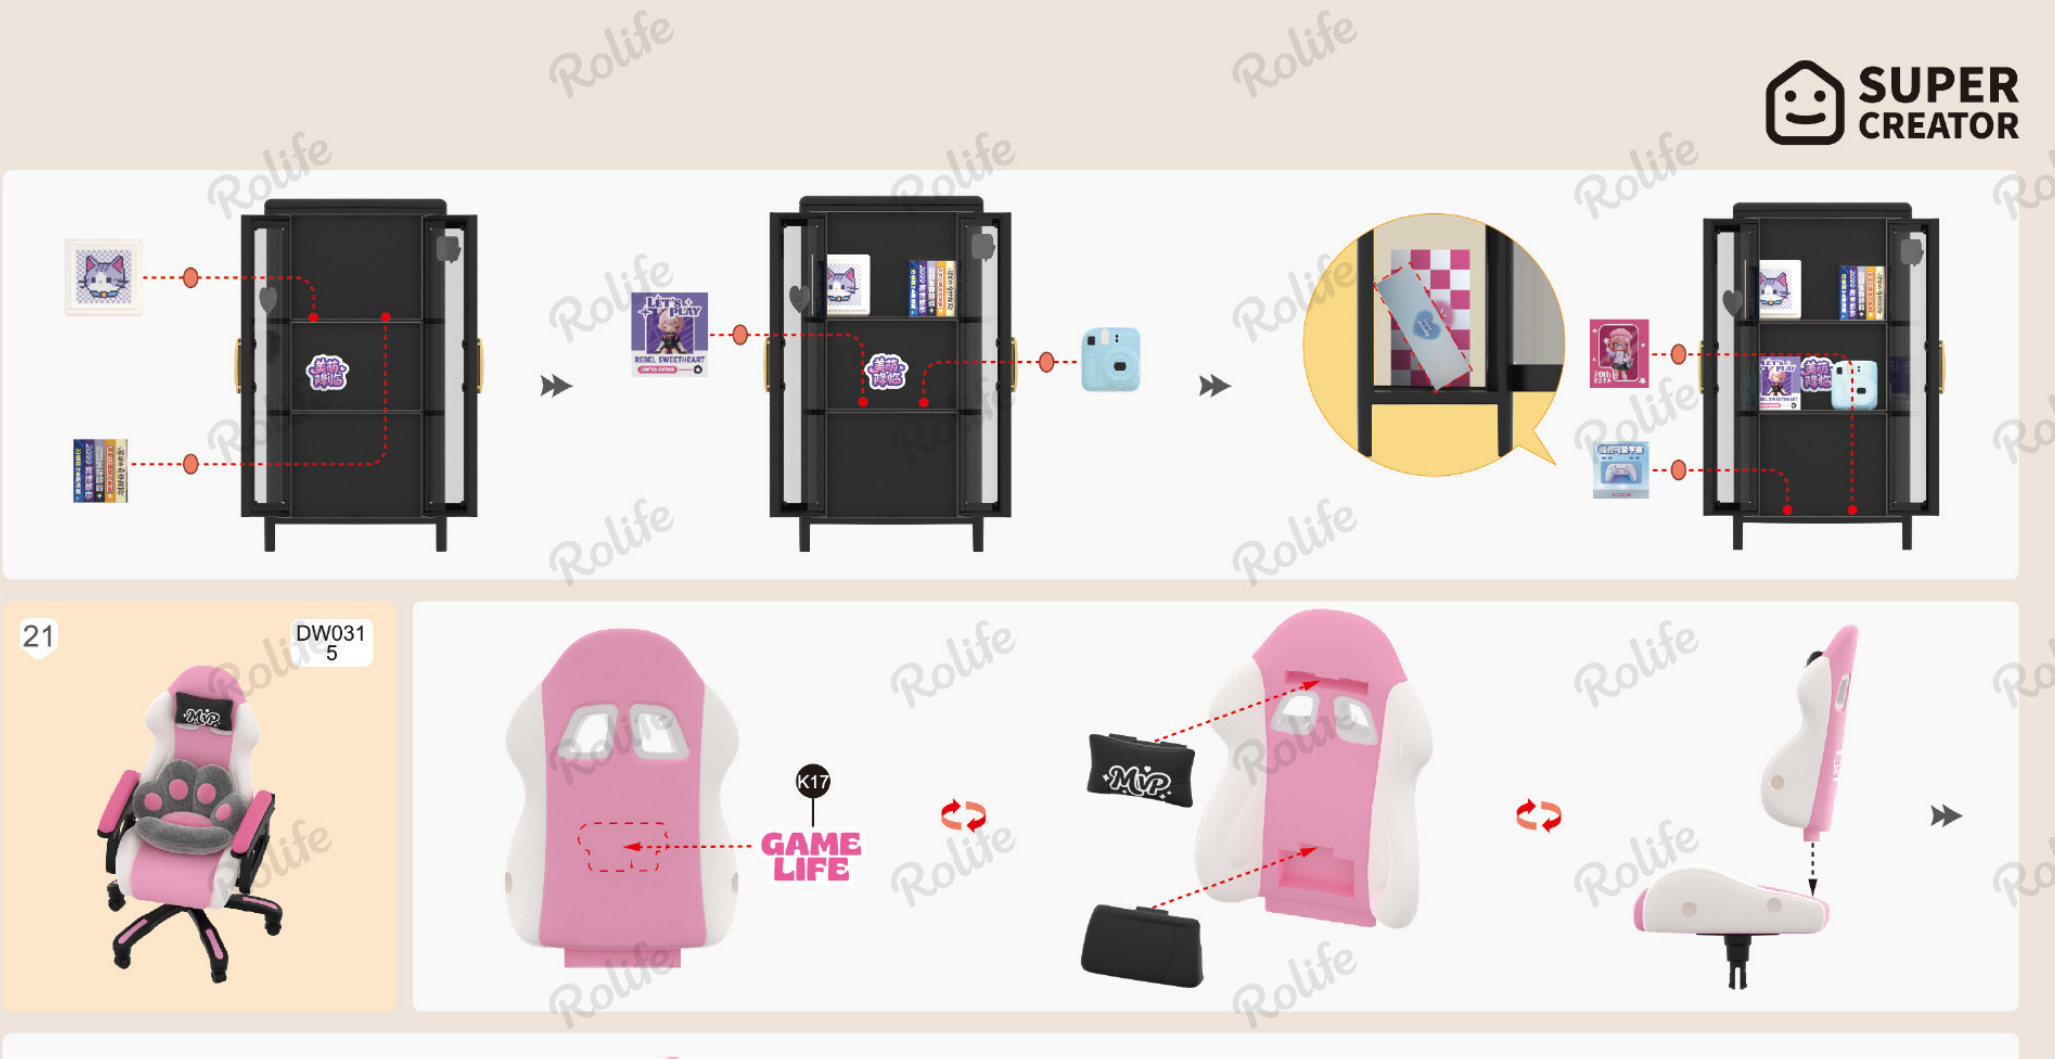
21
DW031 4
GAME LIFE

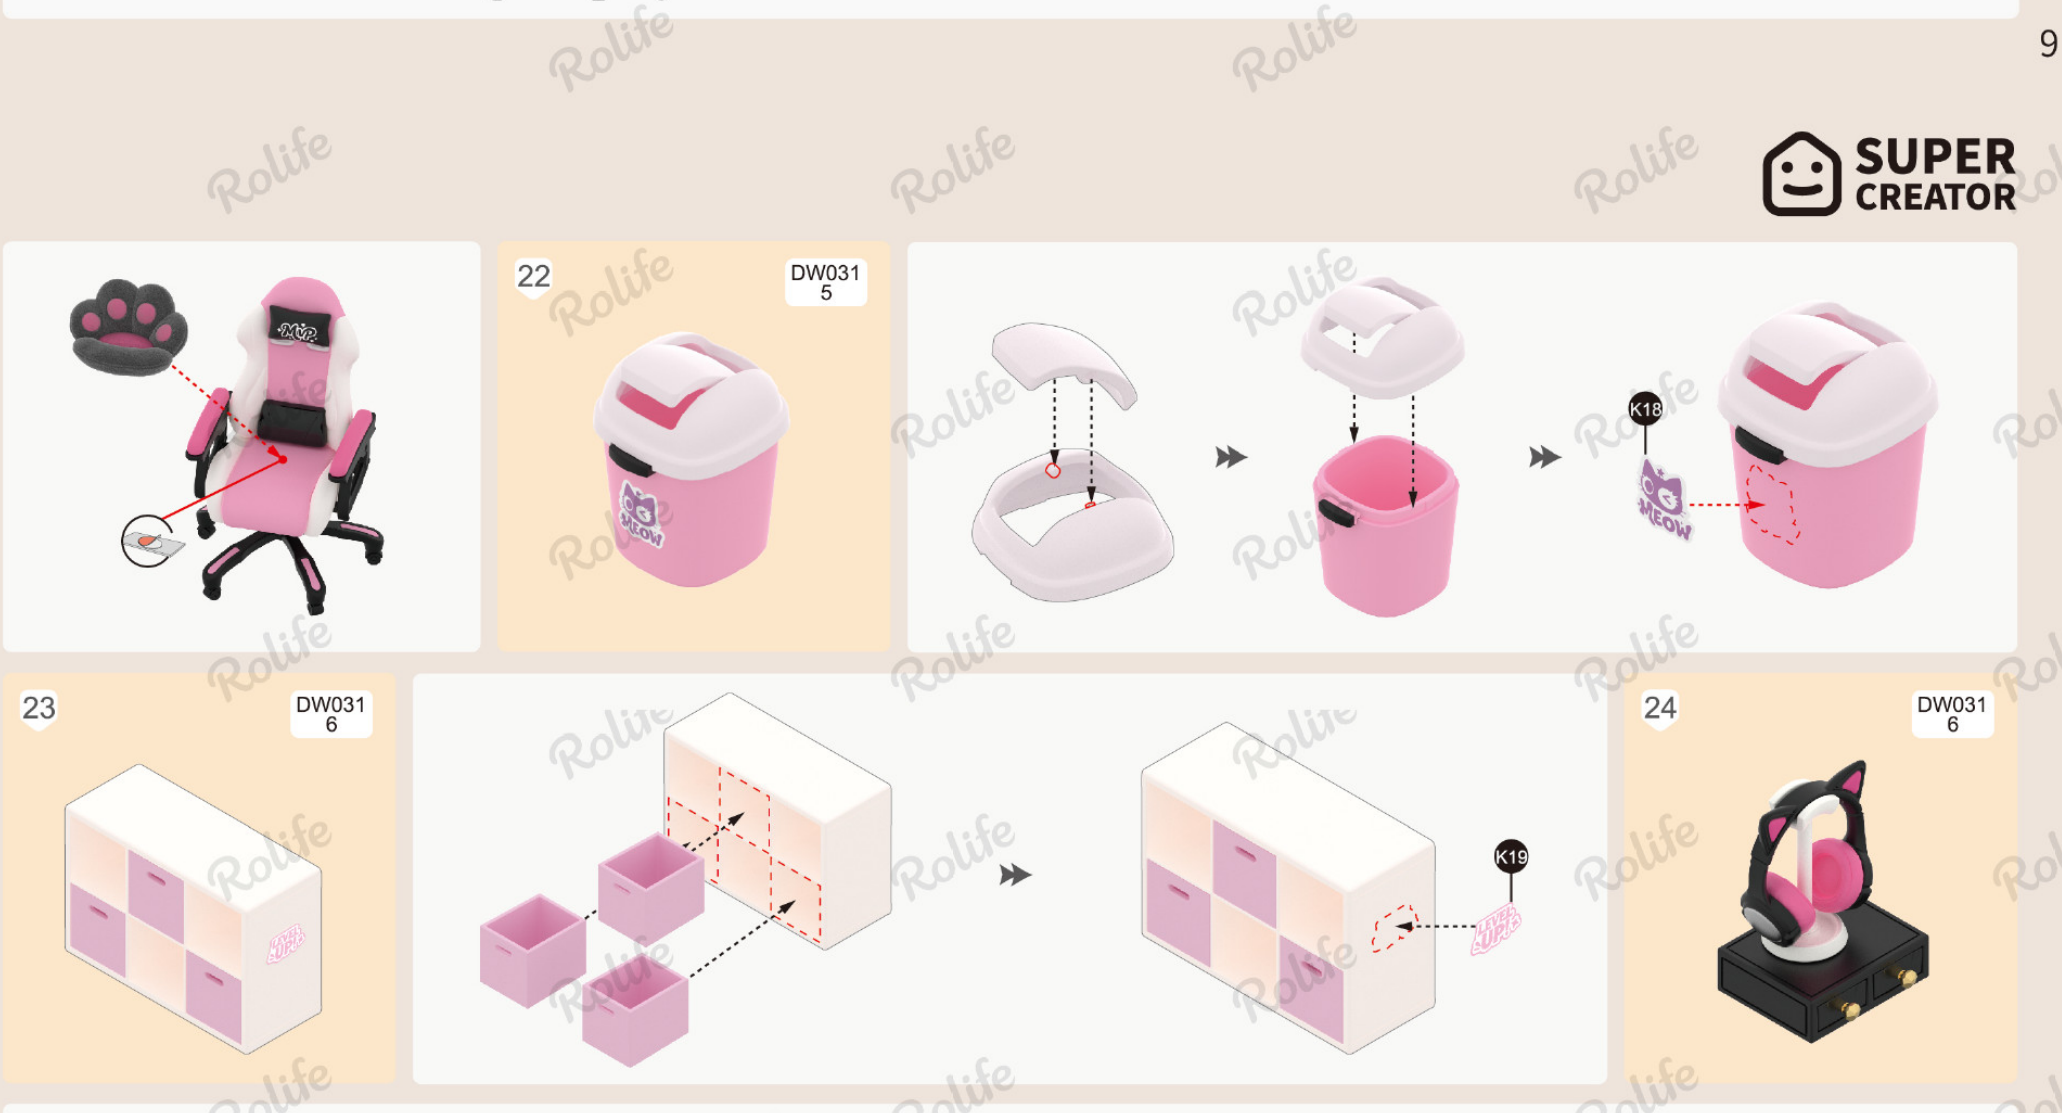
22
DW031 5
23
DW031 6
24
DW031 6
DW031 5
DW031 6

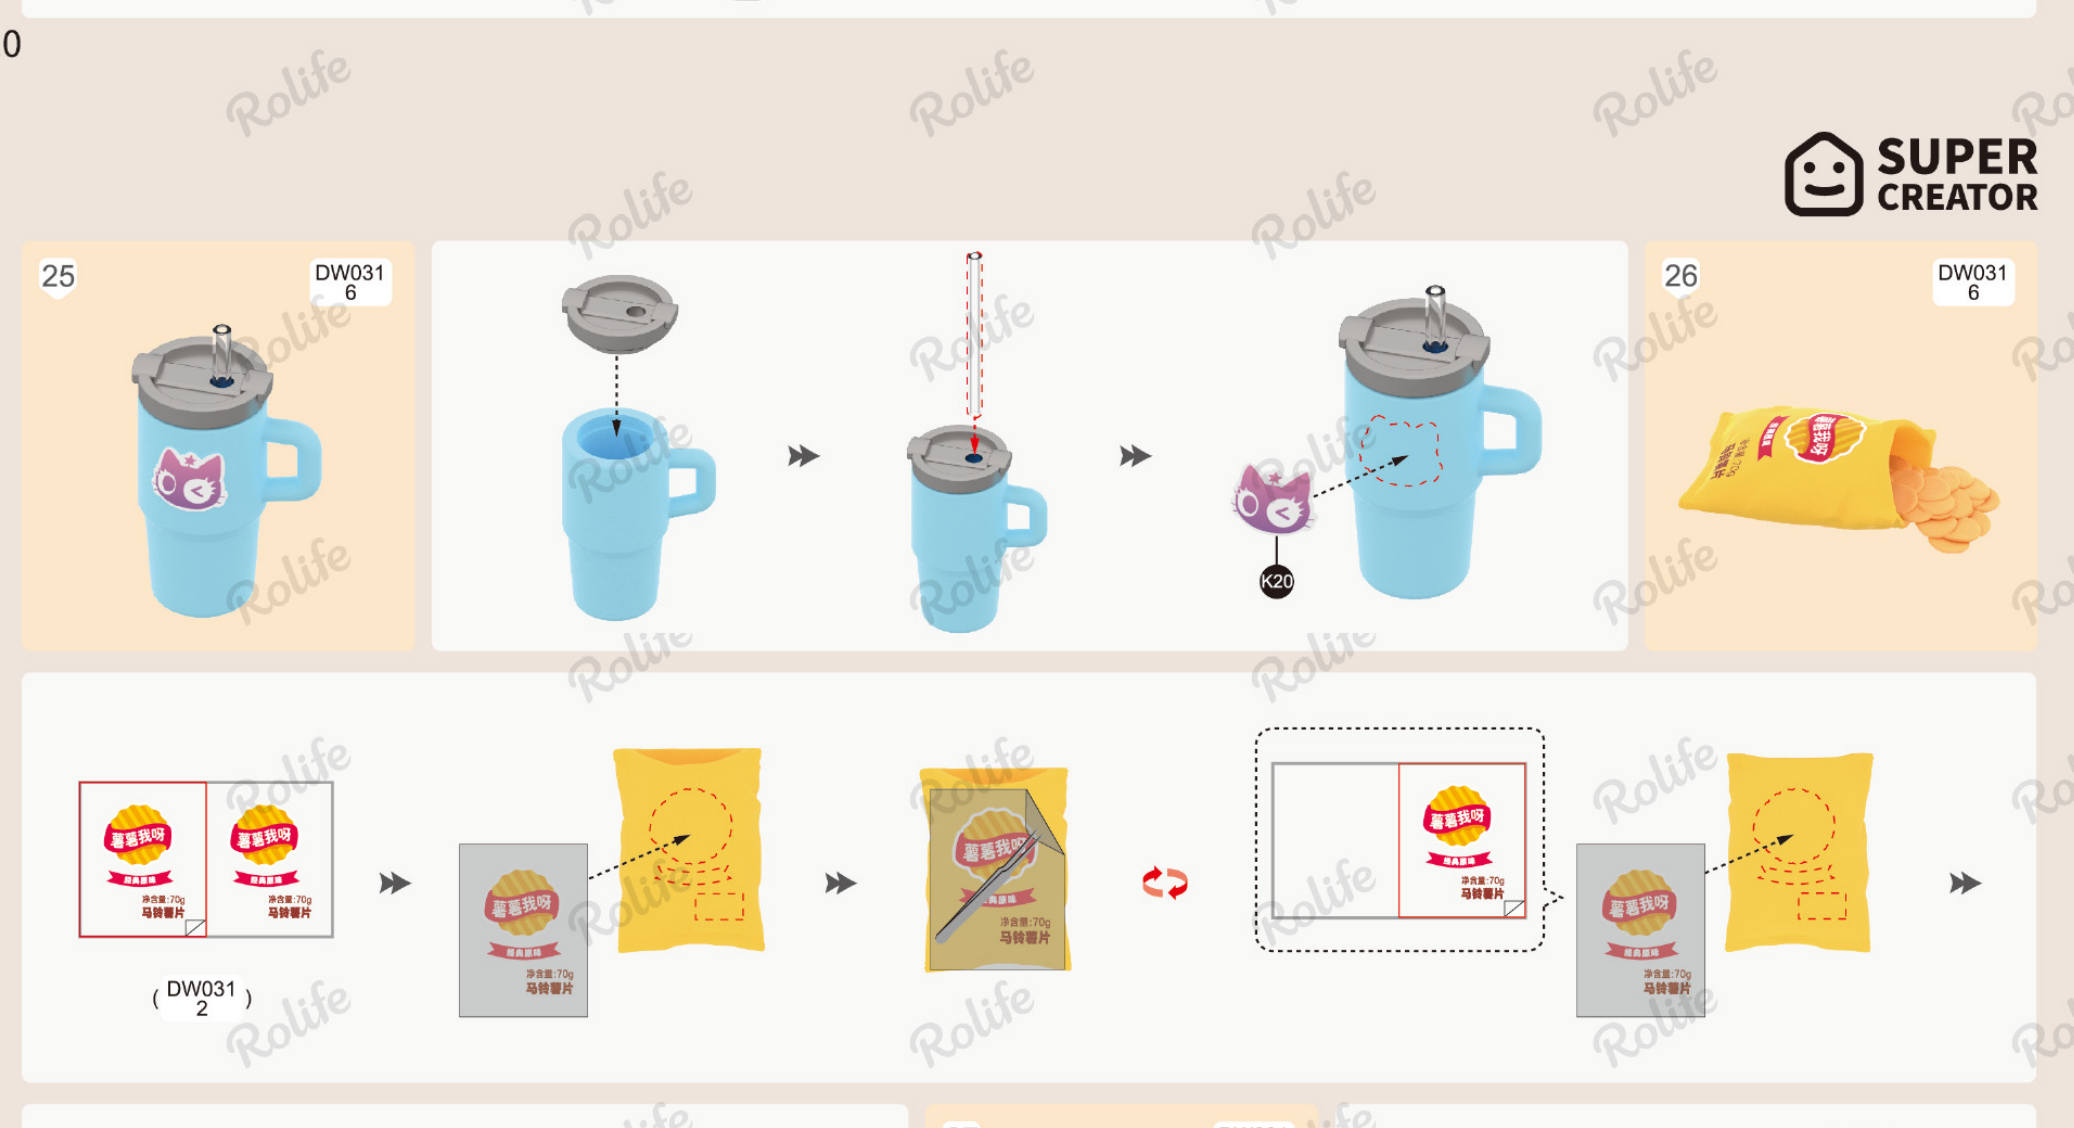
25
DW031 6
26
DW031 2
27
DW031 6

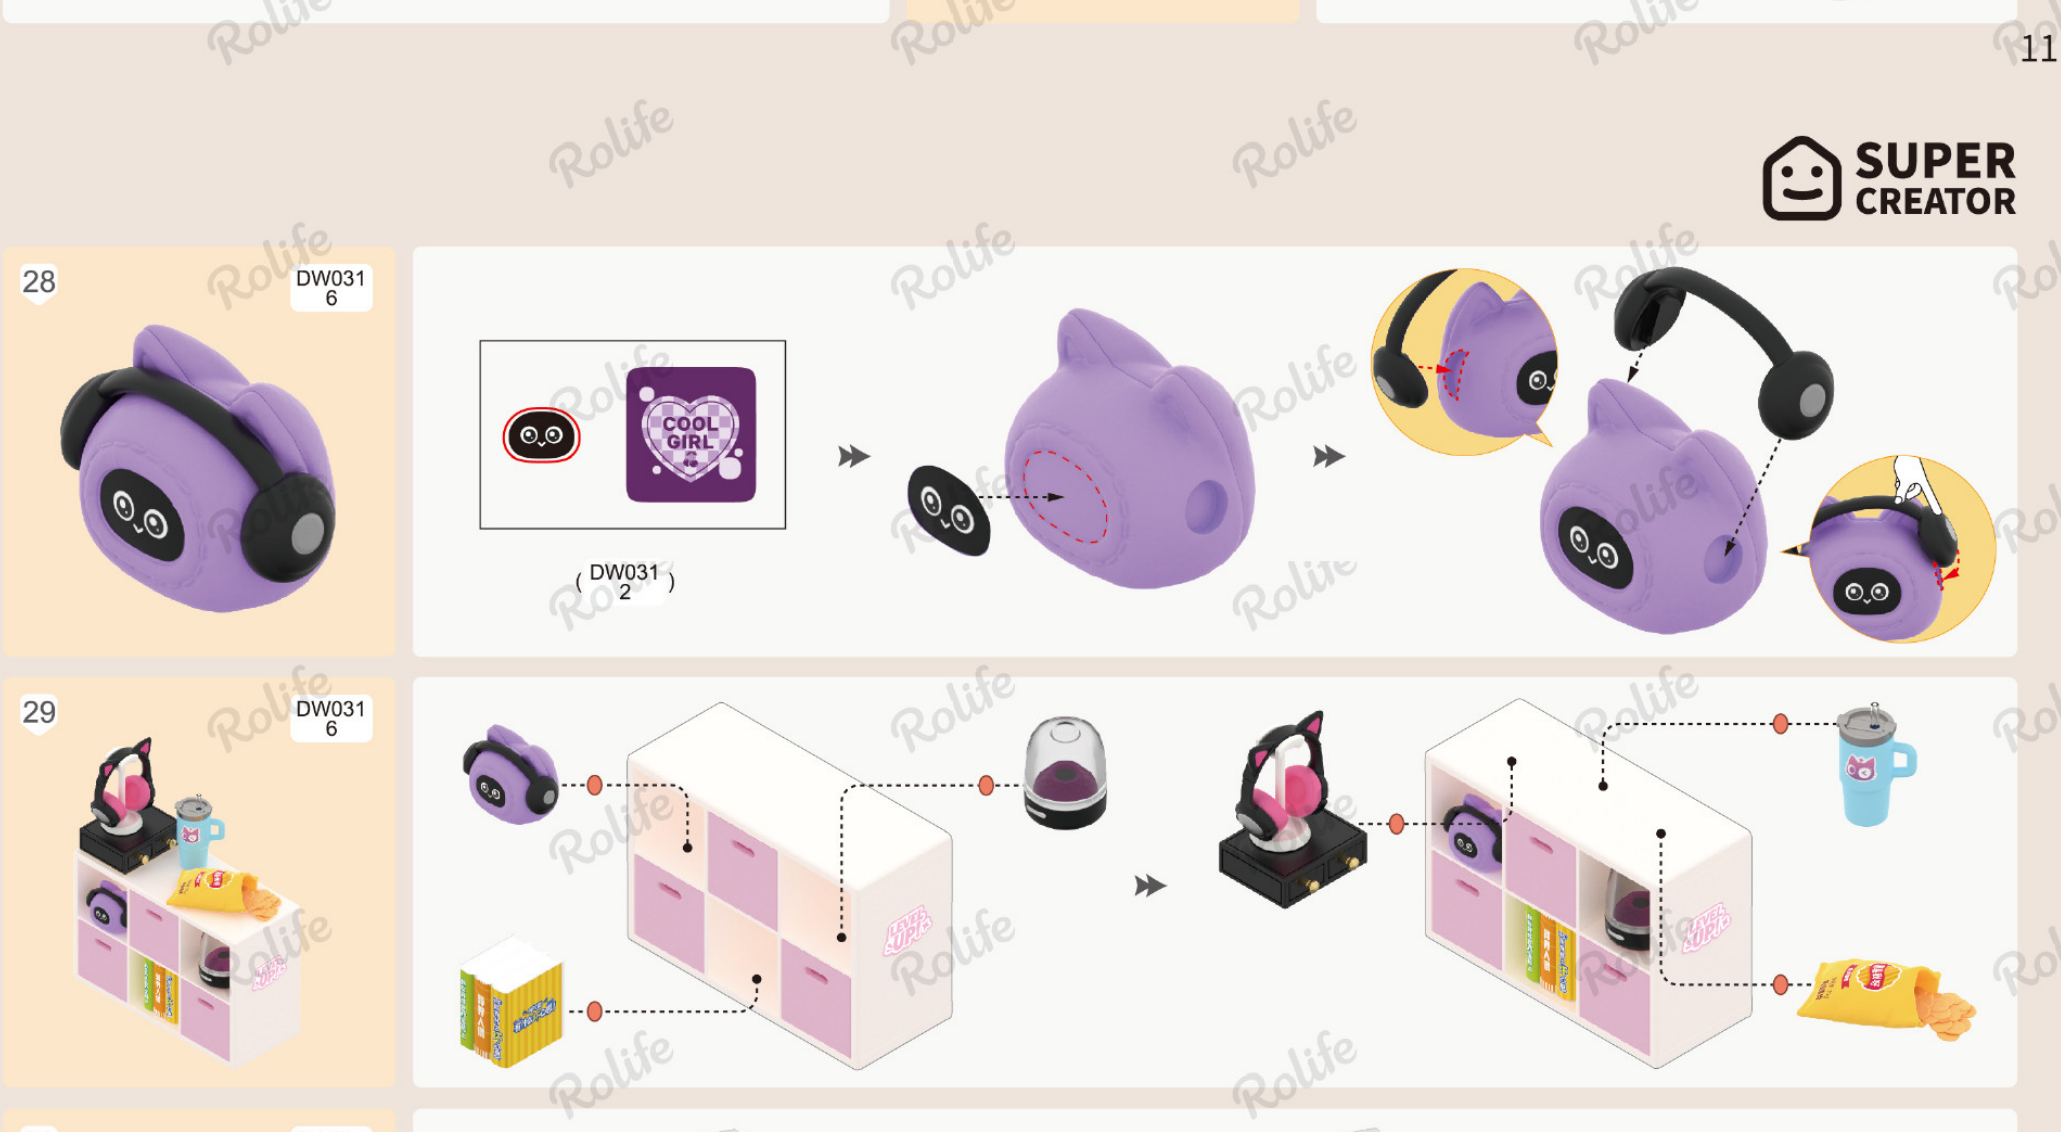
28
DW031 6
DW031 2
29
DW031 6
30
DW031 6

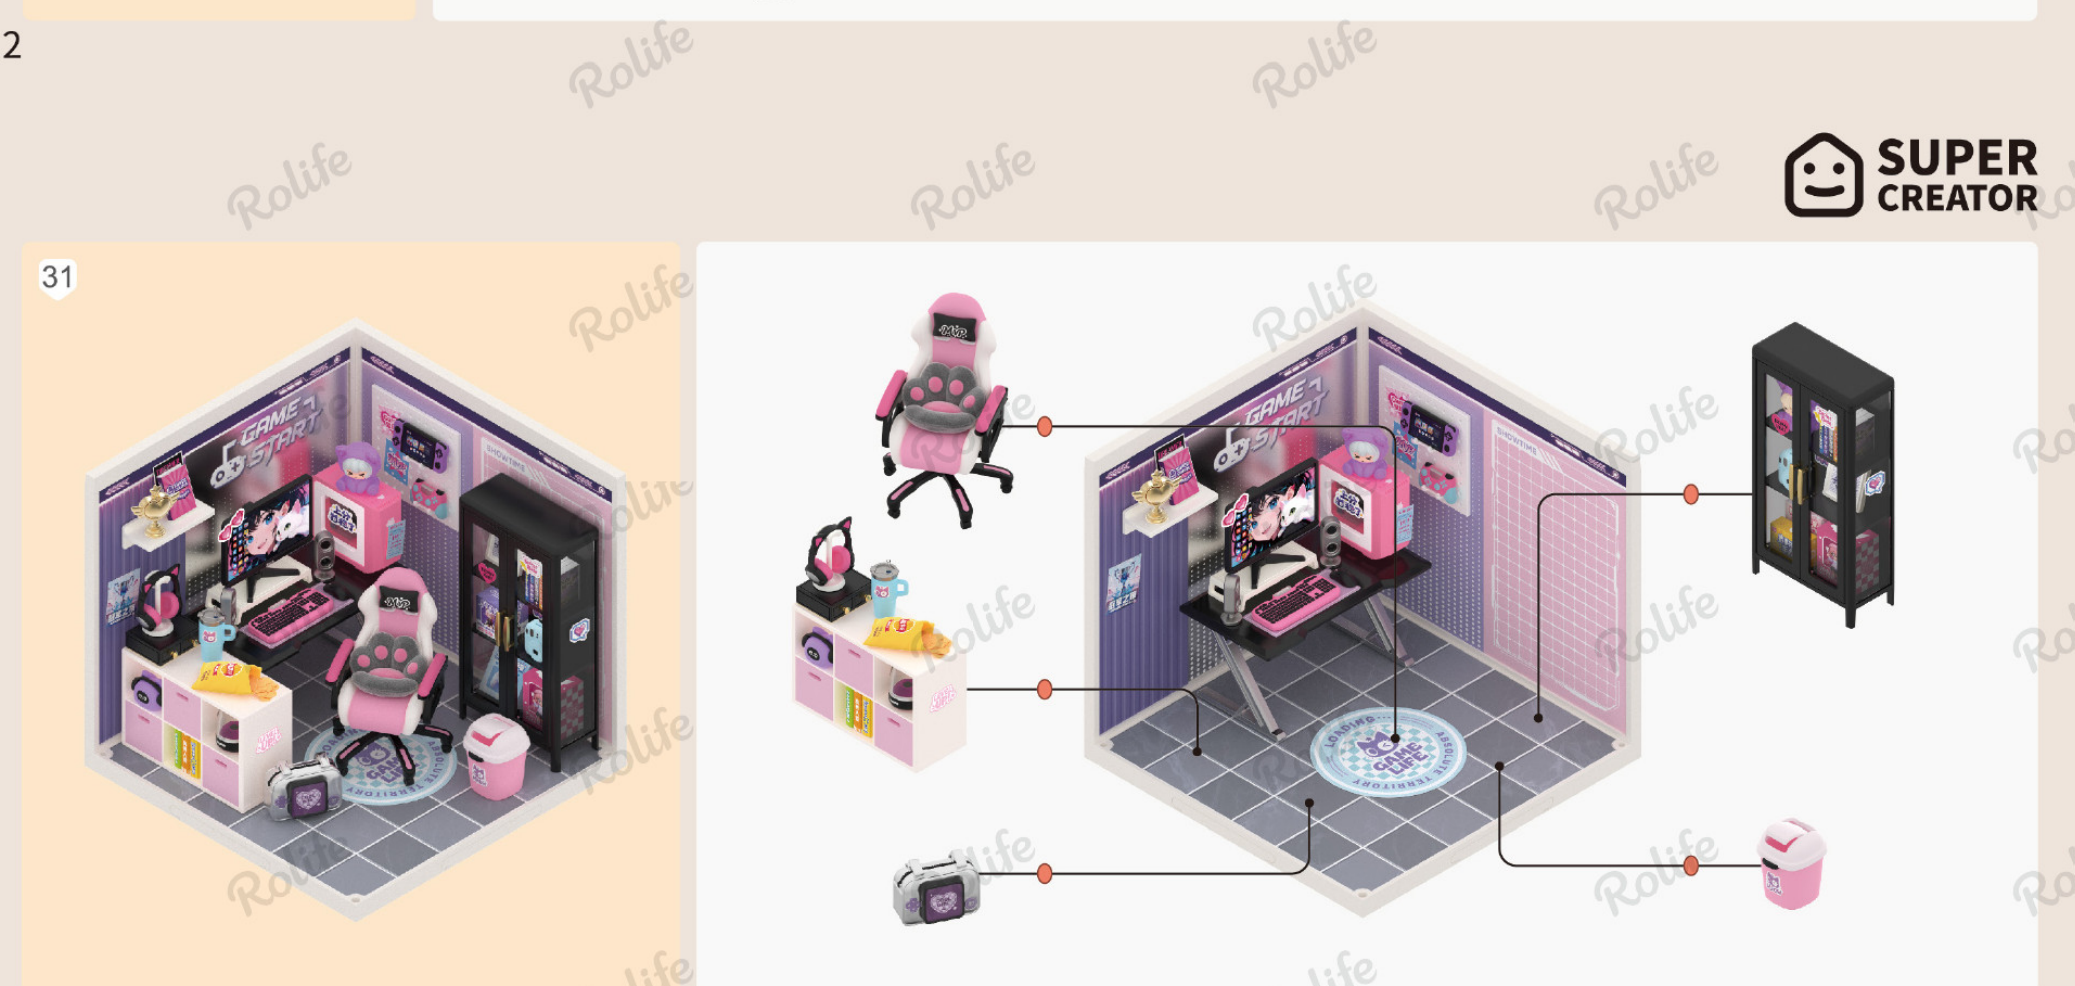

06 Add some other tricks

01 Adjust the position of distribution box and wallpaper.

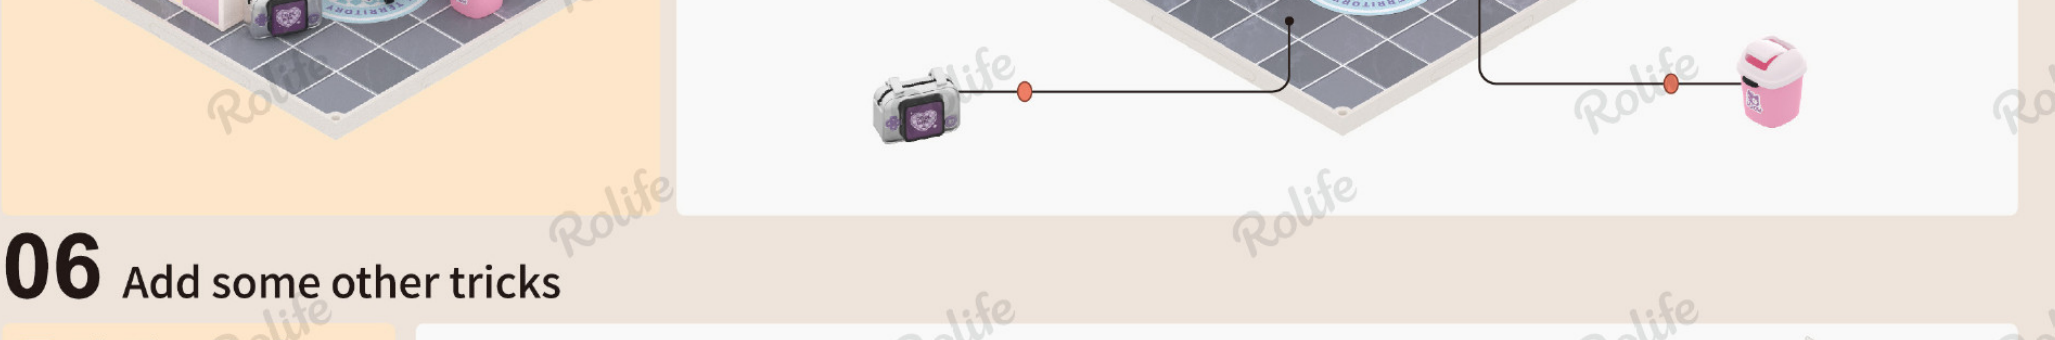

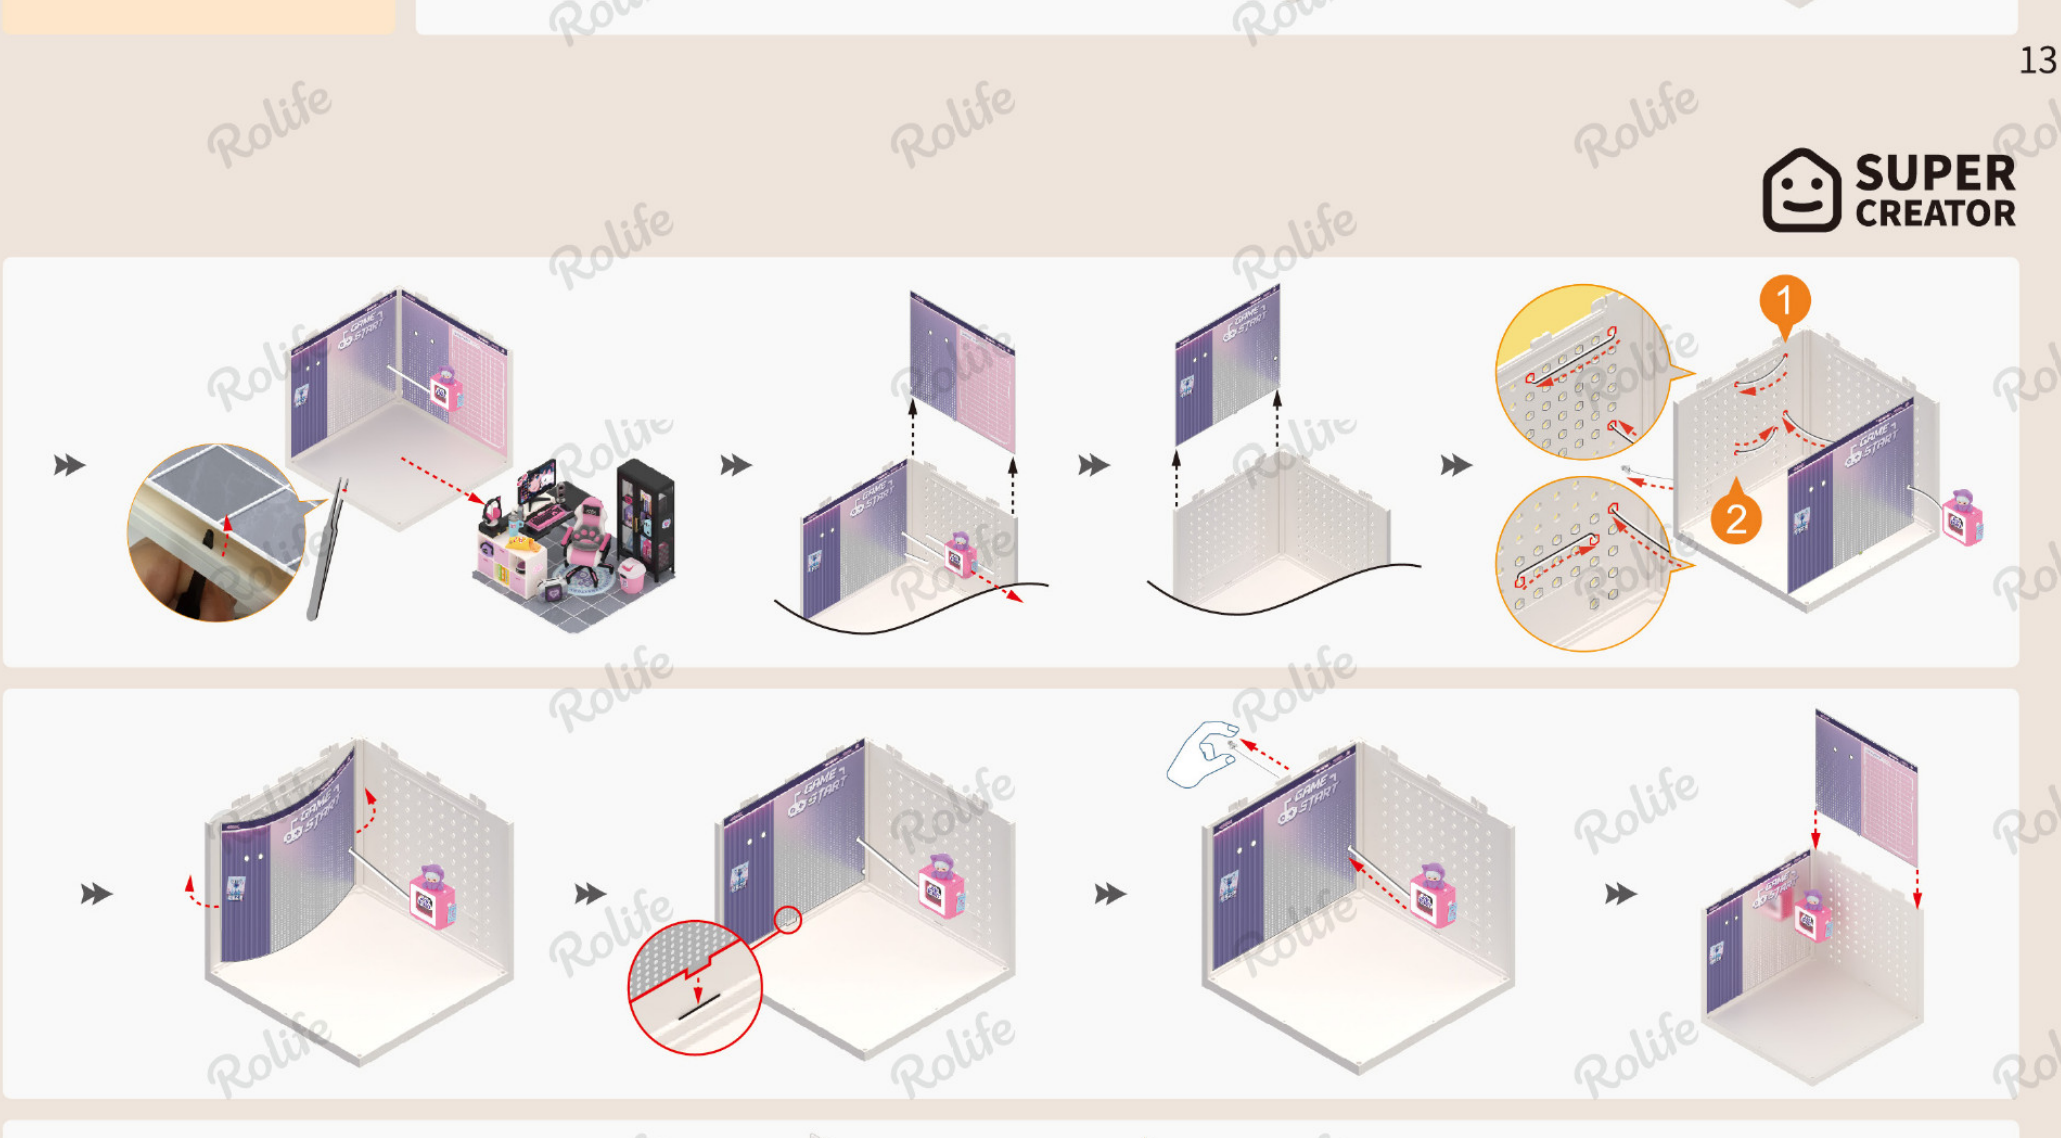

02 Ceiling light assembly

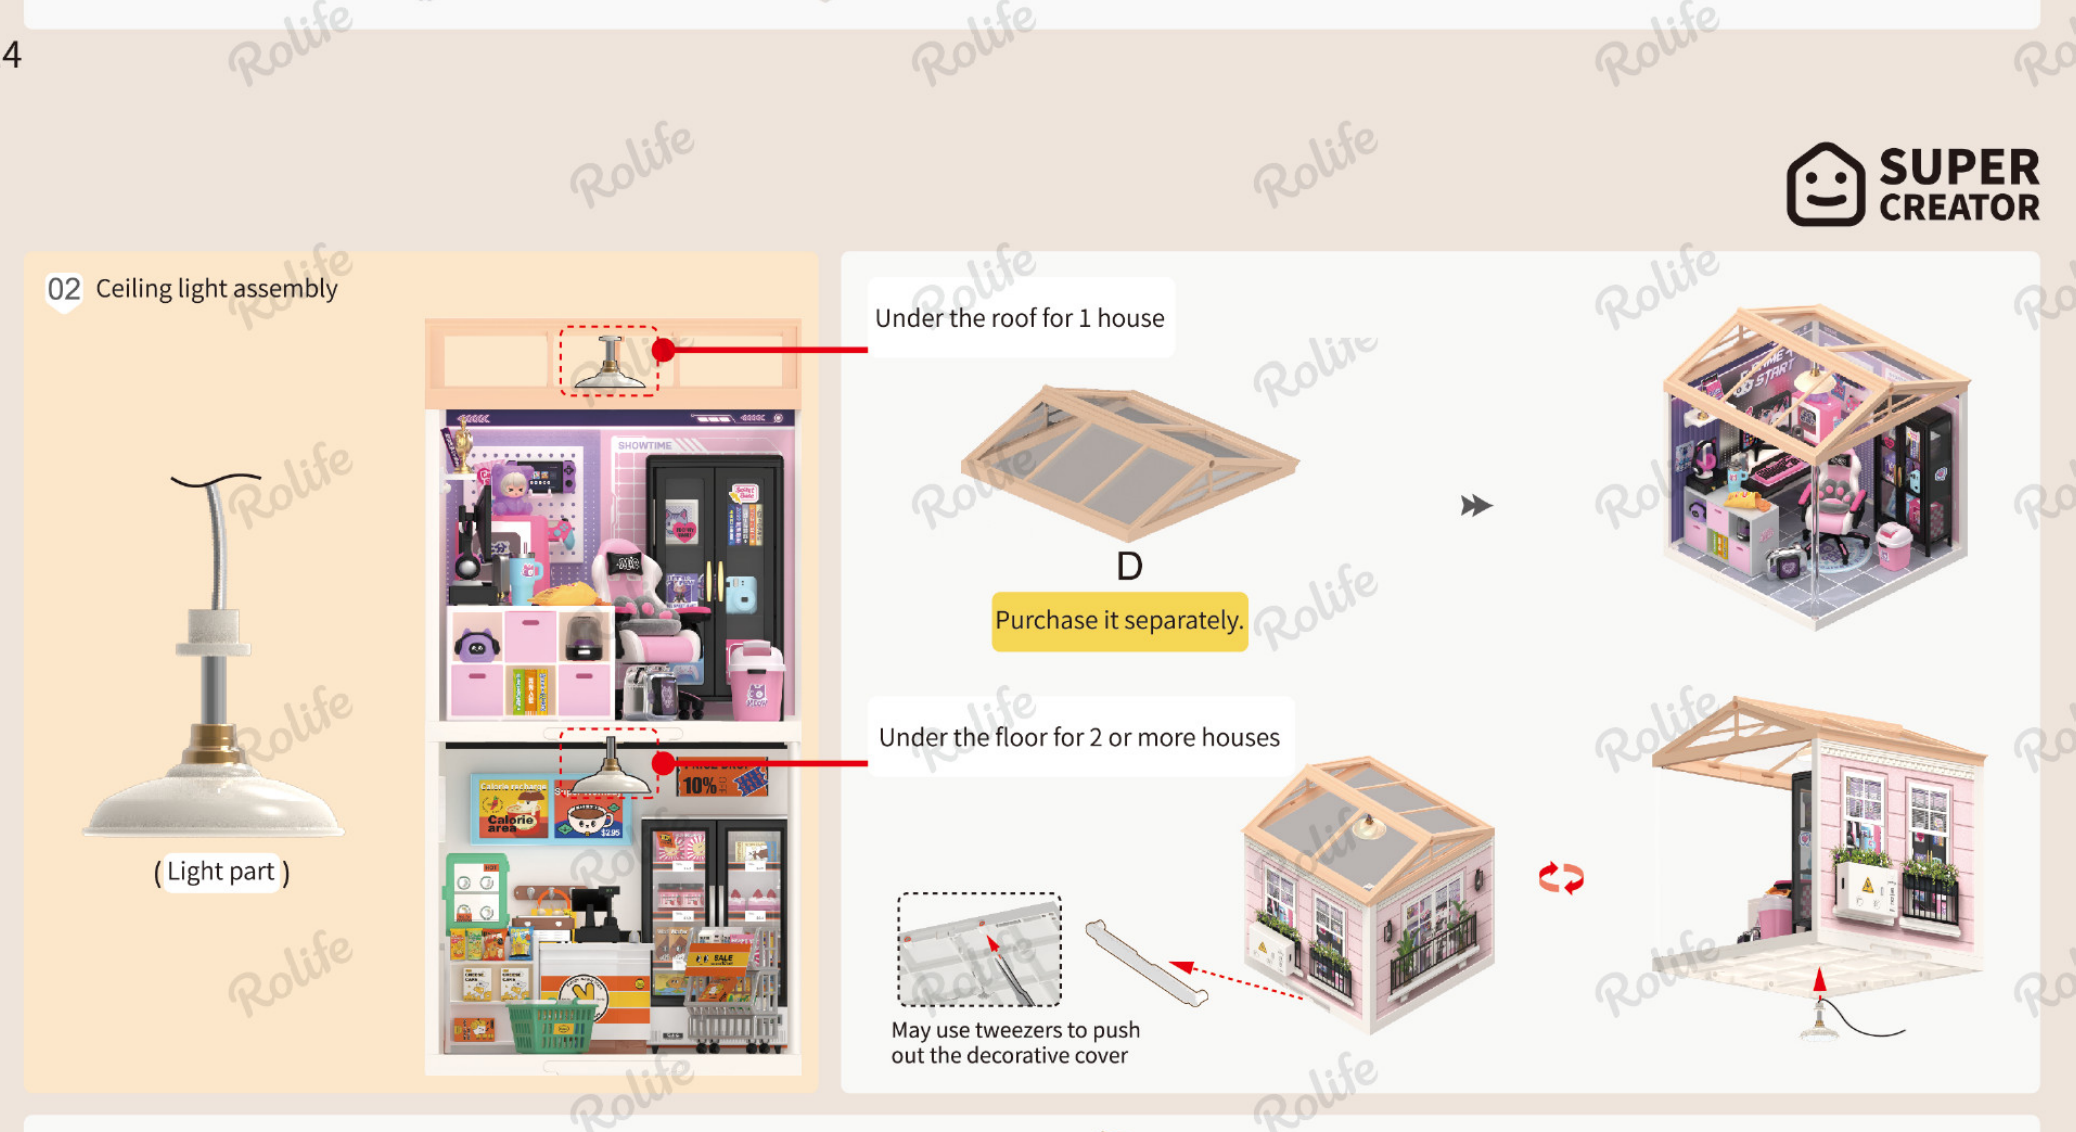
(Light part)
Under the roof for 1 house
D
Purchase it separately.
Under the floor for 2 or more houses
May use tweezers to push out the decorative cover
(Connecting part)

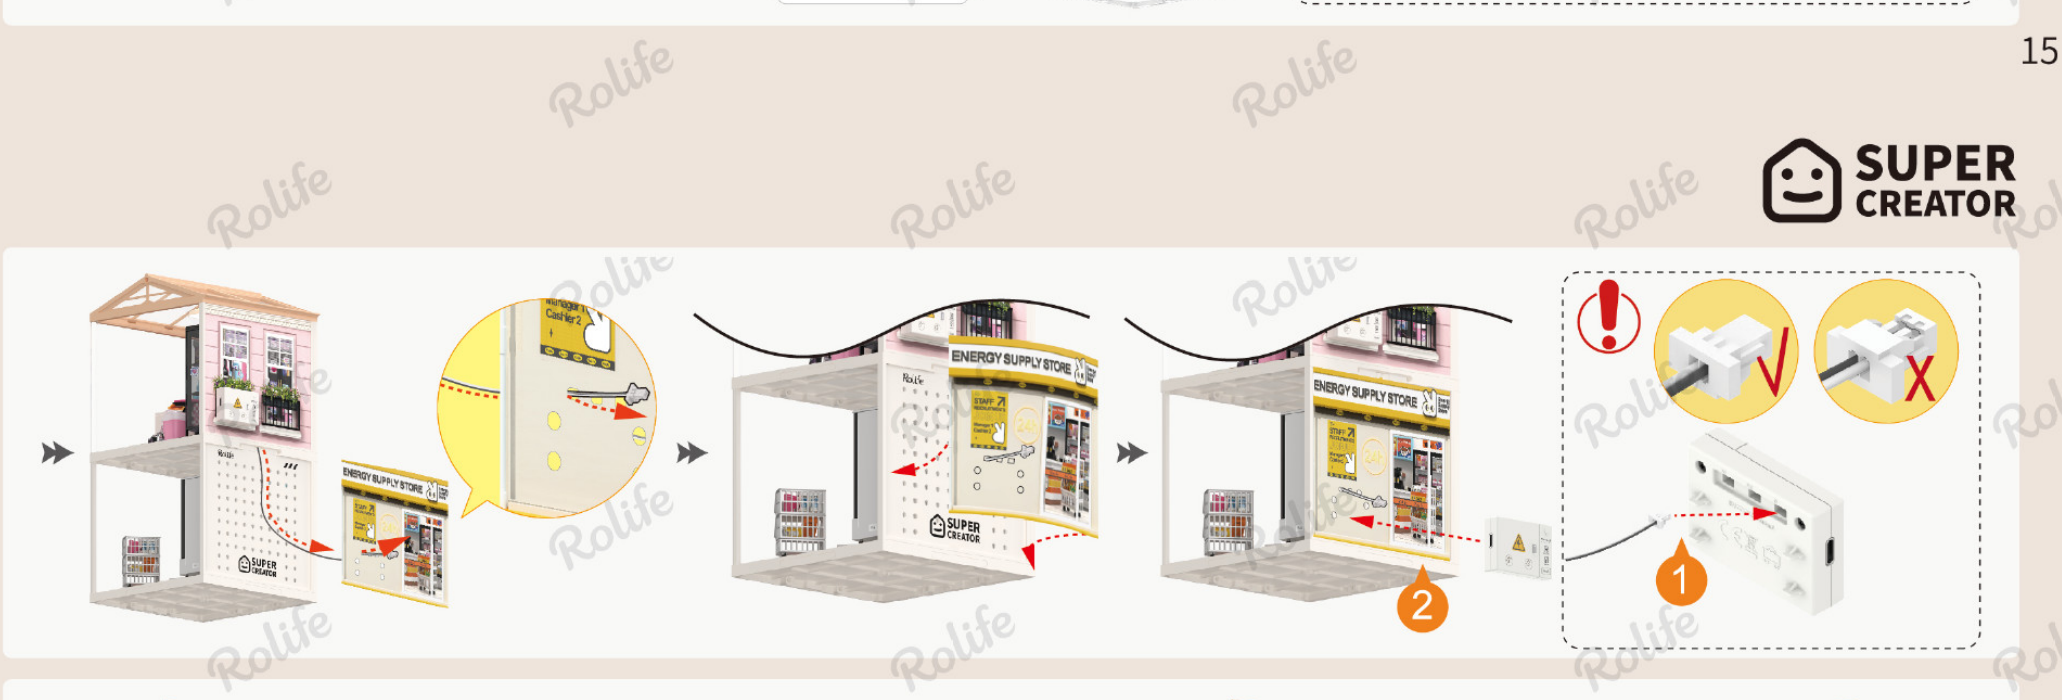
1
2
Cable in the box

Input power supply: 5V ⎓ 500mA
Note: Over-current protection provided, adapters ≥ 500mA are acceptable.

03 Dust-proof dock assembly

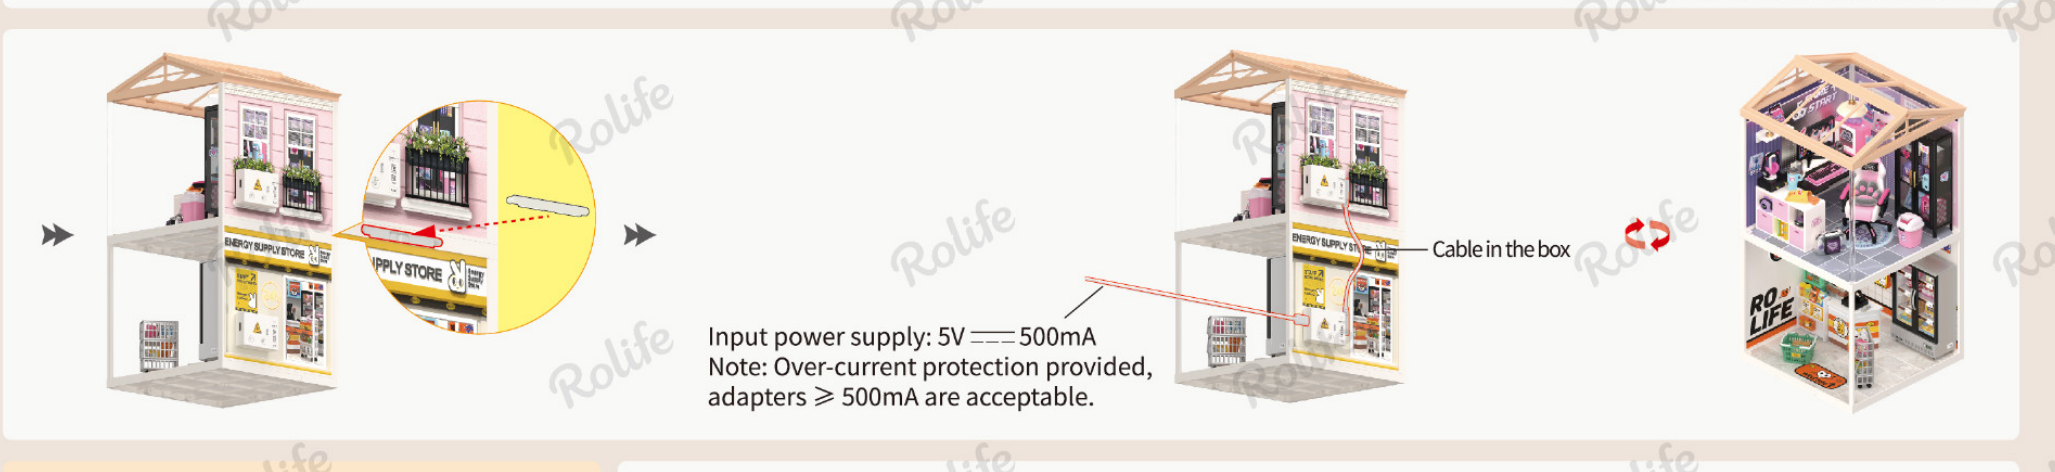
C
Purchase it separately.
D
C

04 Expand your house kit

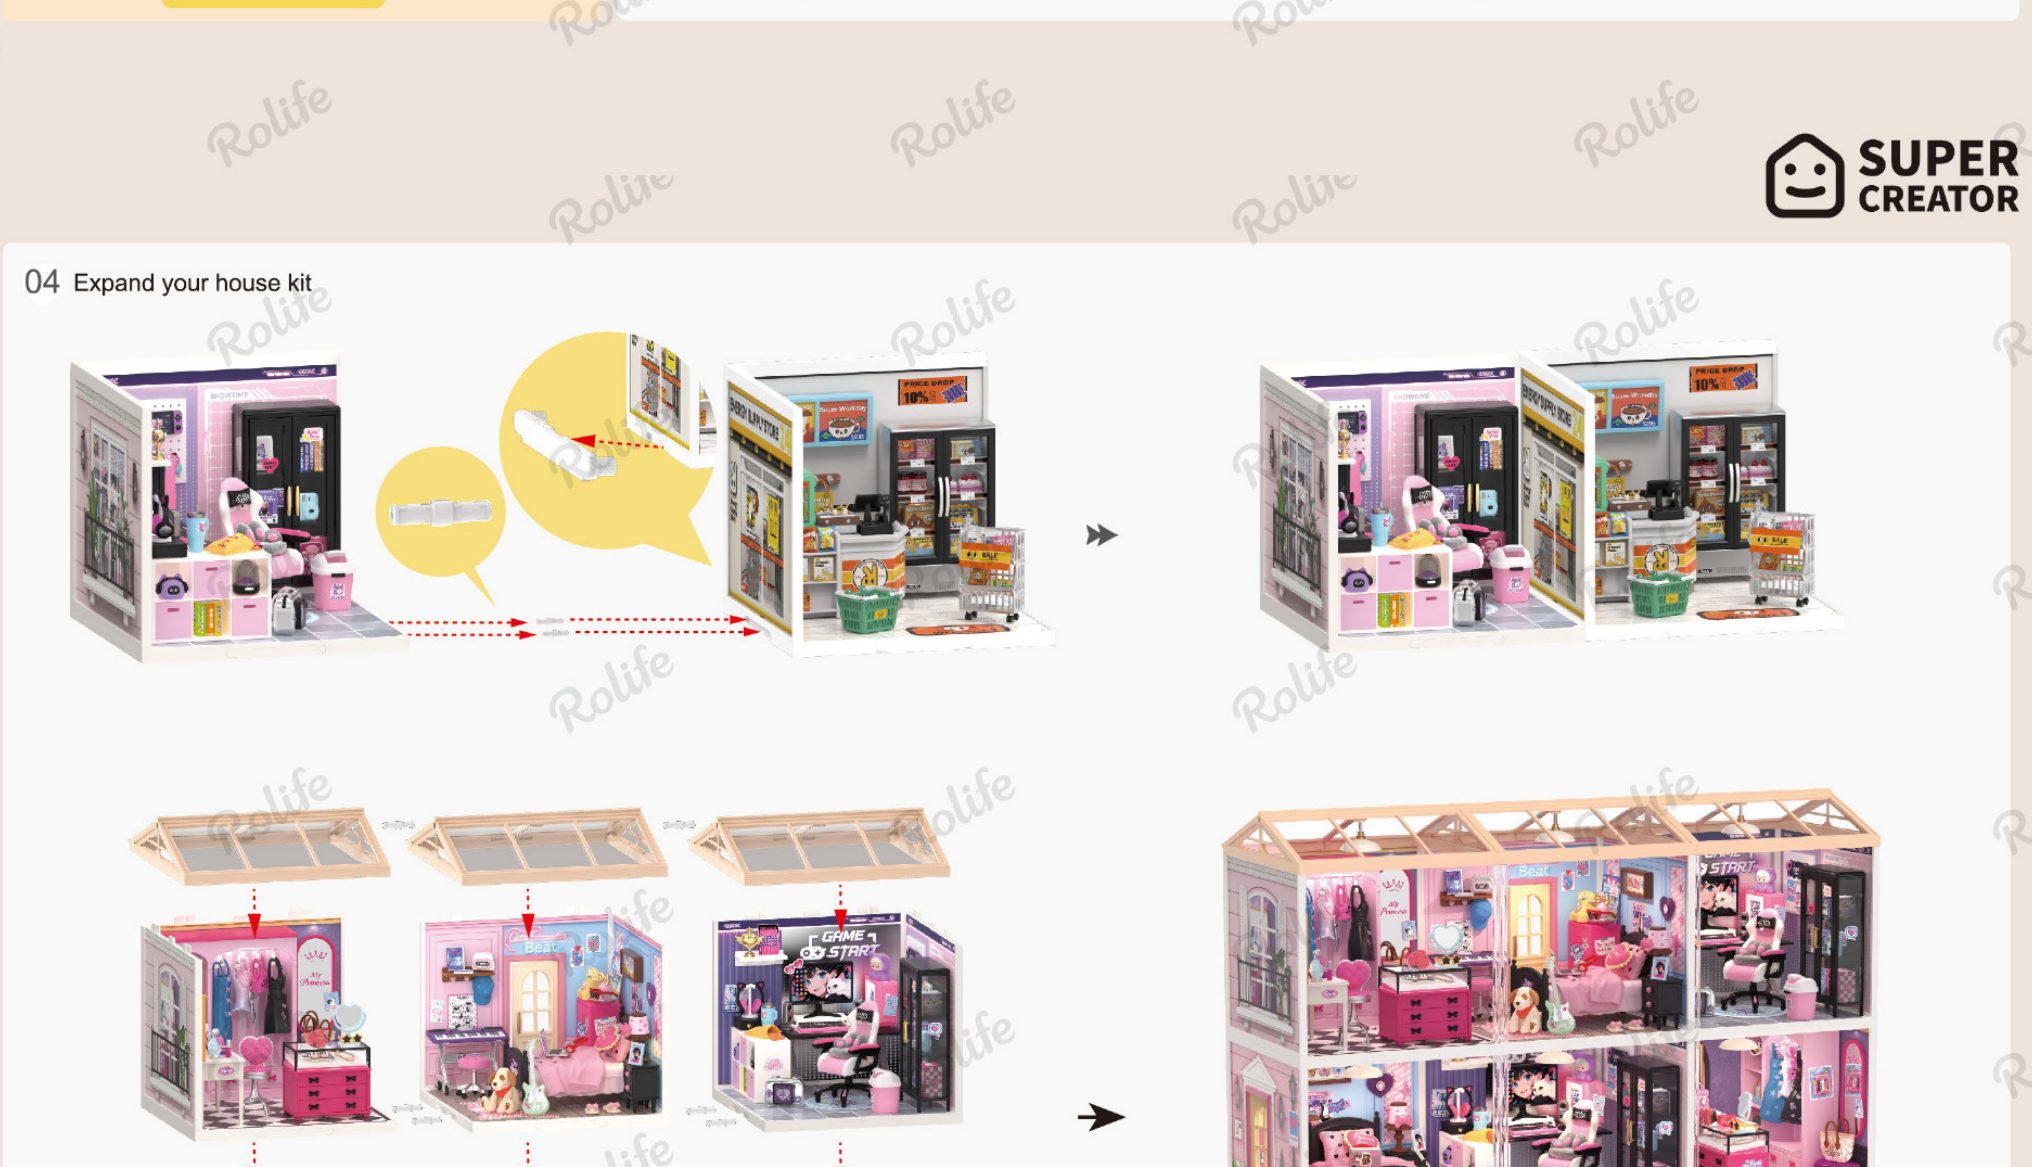

MANUFACTURER:
Robotime C&C (Jiangsu) Co., Ltd.

AFTER-SALES SERVICE CONTACT:
service@robotime.com

49.1DW031.100