DW008

SUPER CREATOR | SUPER STORE | HAPPY MEALS KITCHEN

The picture is for reference only.

01 Notice

⚠ WARNING

- Not suitable for children under 3 years old.
- The product shall only be used with a transformer for product or a power supply for it.
- The product shall be used with the power supply supplied, if the transformer is supplied with the product.
- The transformer or power supply is not a toy or a tool.
- Misuse of transformer can cause electrical shock.
- The power supply used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Do not connect the wire to output socket.
- The product is not to be connected to more than the recommended number of power supplies.
- This product doesn't need liquid cleaning, and please clean it with clean soft cloth.
- Please keep the product away from substances flammable and humid environments to prevent damage.
- The instruction must be retained since it contains important information.

02 Icon

Please fix parts as shown in case of any parts loosening:

Use round double-sided adhesive tape

Use strip double-sided adhesive tape

Special attention in assembly

Perspective conversion

① Step 1 ② Step 2 Force point

03 Switch box instructions

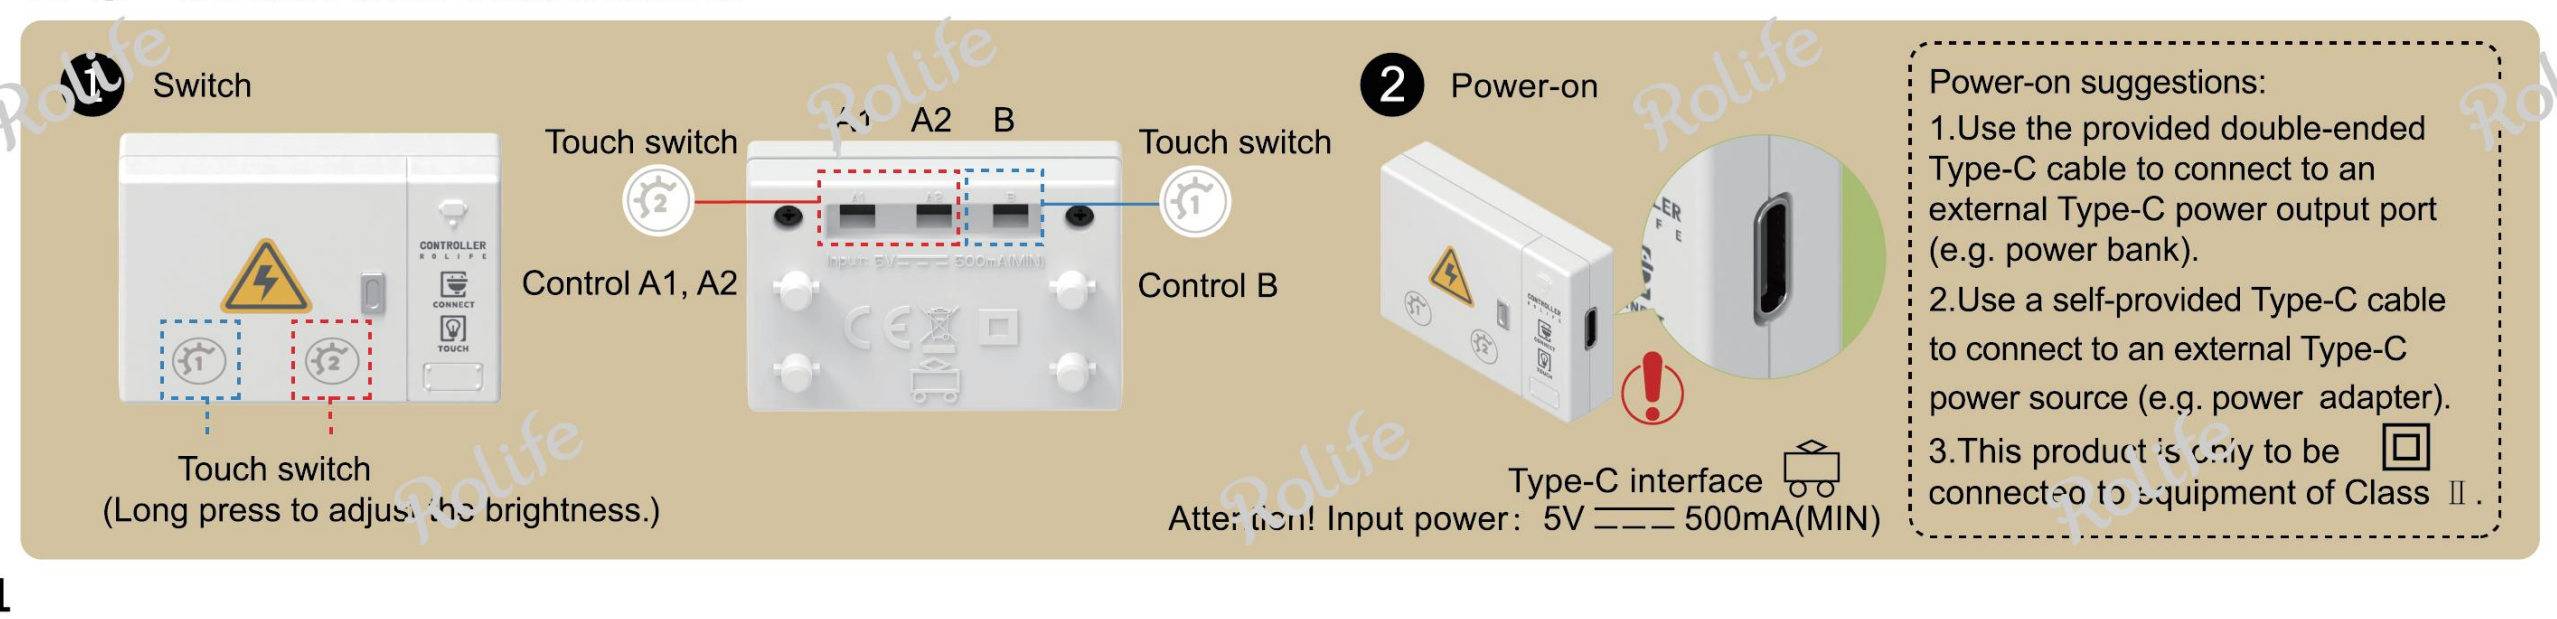
① Switch
Touch switch
Control A1, A2
A1 A2 B
Touch switch
Control B
Touch switch
(Long press to adjust the brightness.)
② Power-on
Type-C interface
Attention! Input power: 5V ⎓ 500mA(MIN)

Power-on suggestions:
1.Use the provided double-ended Type-C cable to connect to an external Type-C power output port (e.g. power bank).
2.Use a self-provided Type-C cable to connect to an external Type-C power source (e.g. power adapter).
3.This product is only to be connected to equipment of Class Ⅱ.

04 Assembling Step

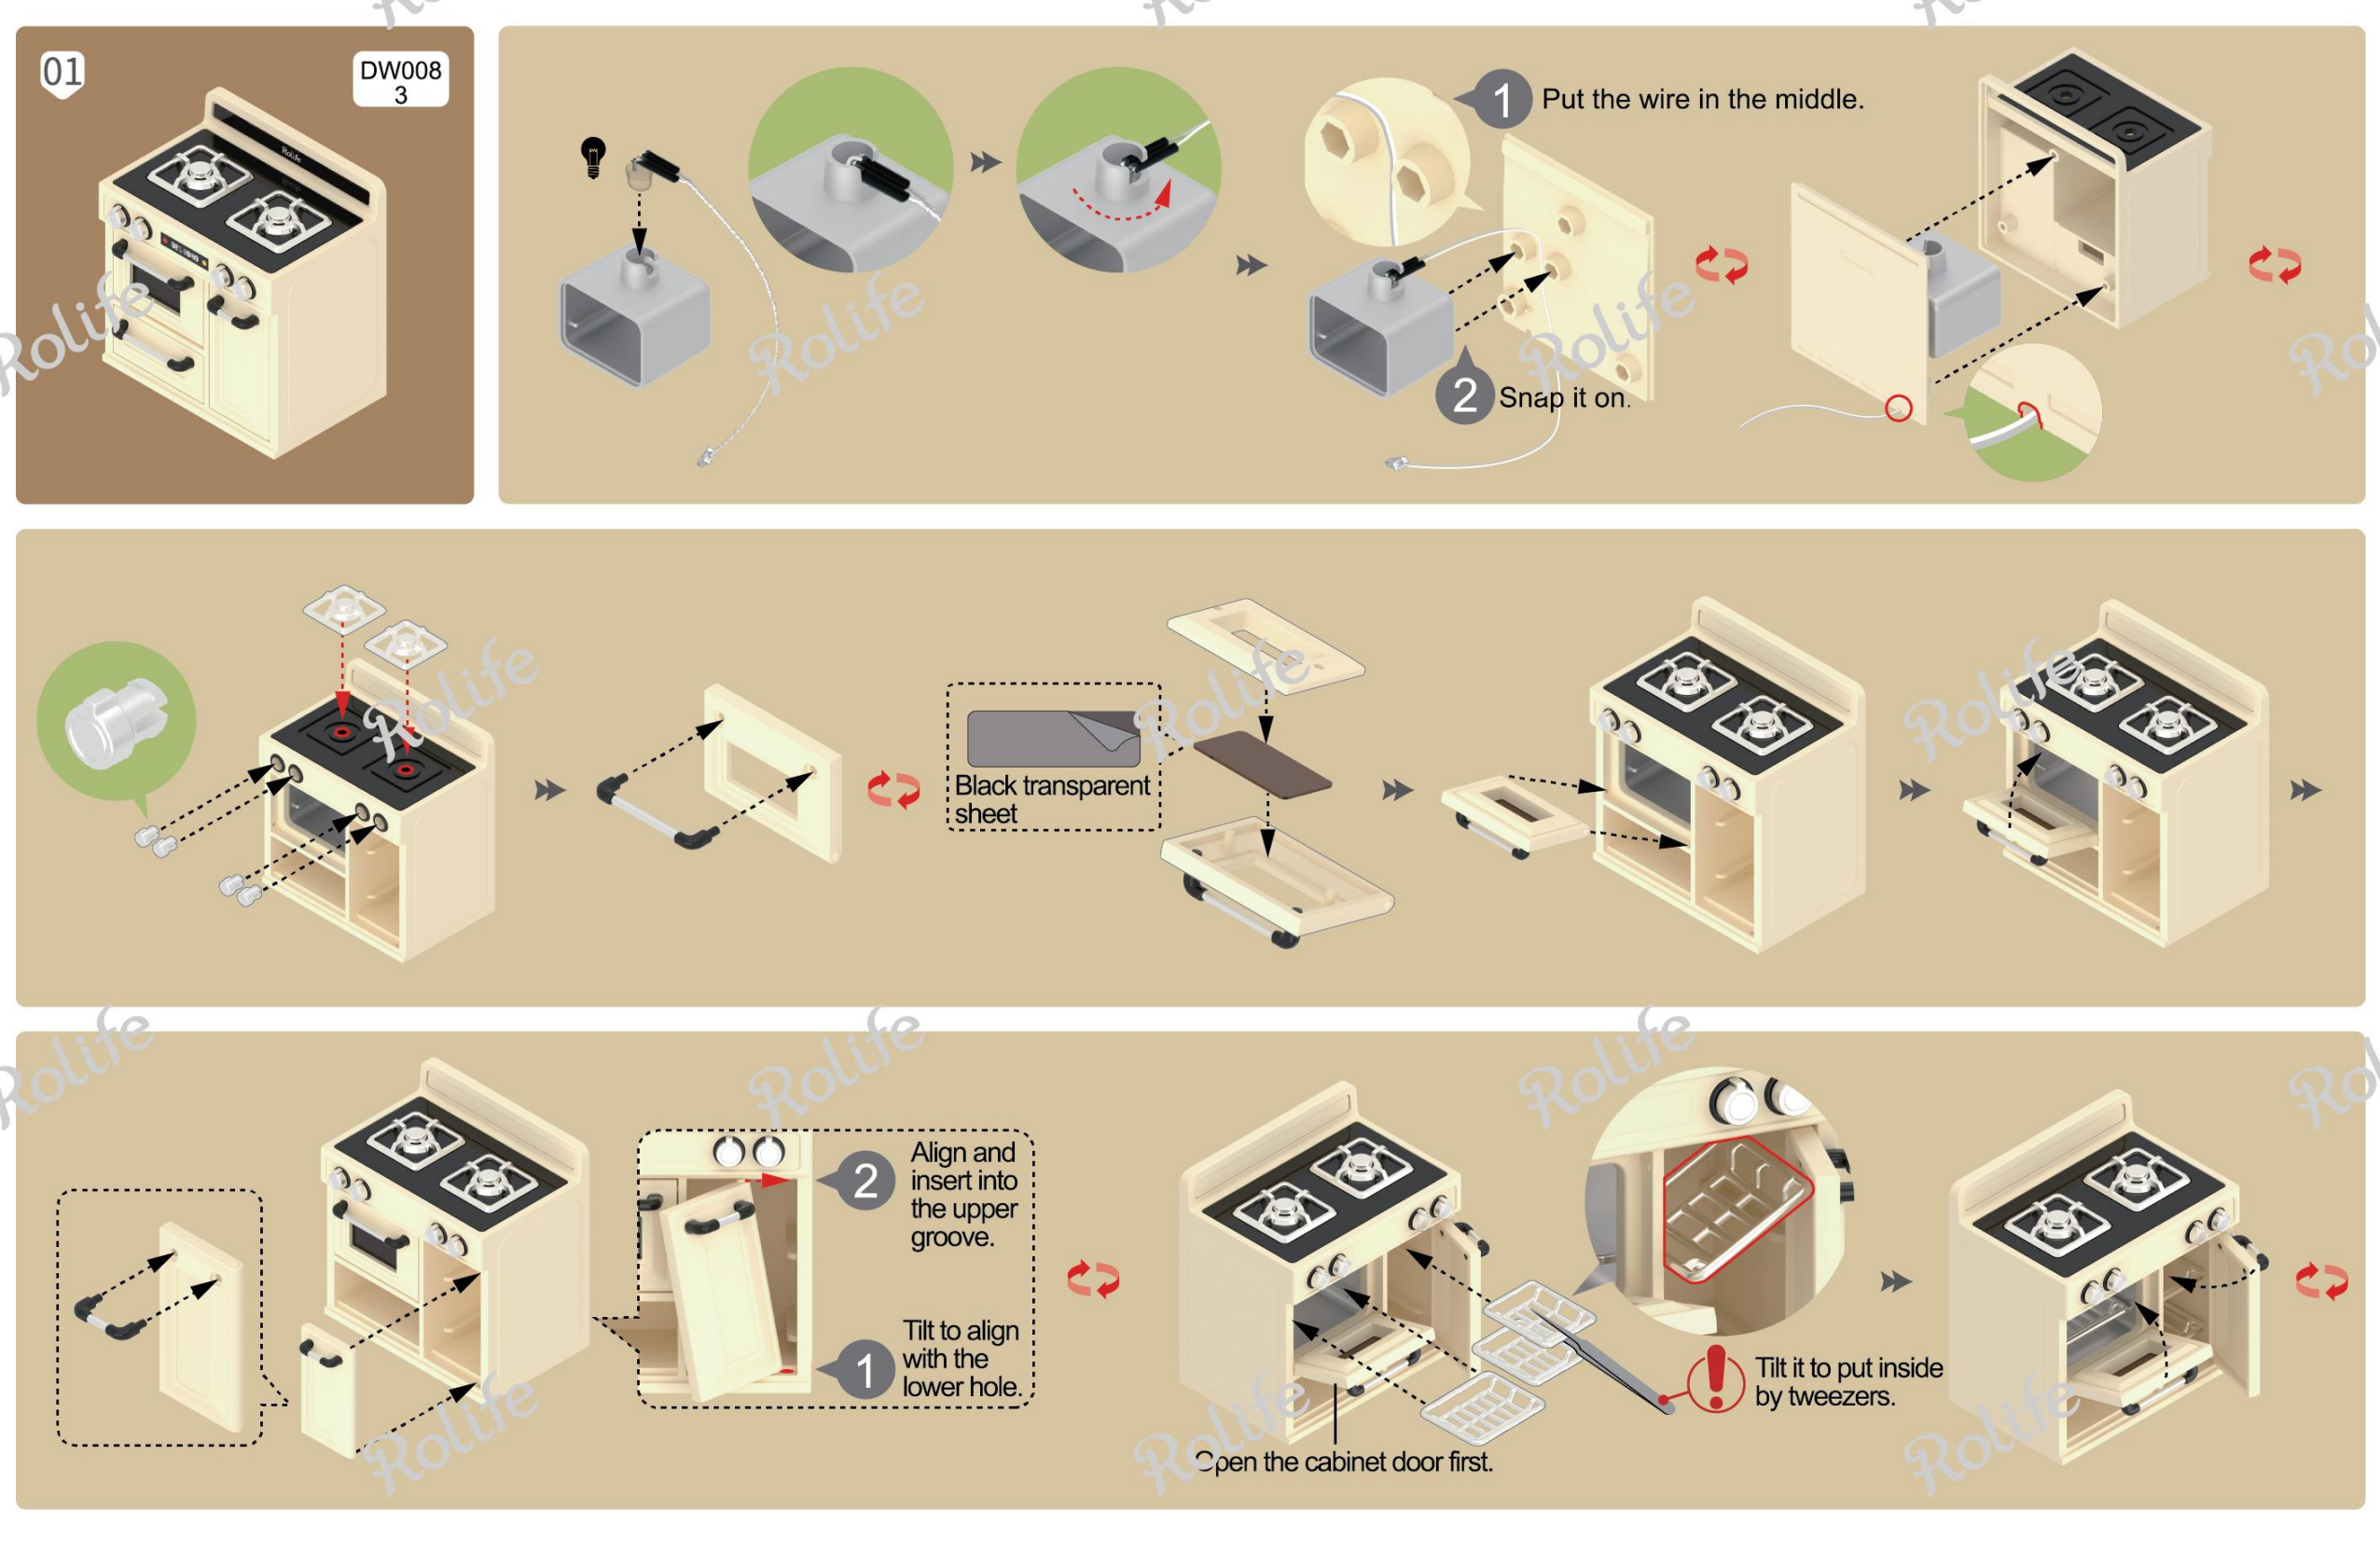
01
DW008 3
① Put the wire in the middle.
② Snap it on.
Black transparent sheet
② Align and insert into the upper groove.
① Tilt to align with the lower hole.
Tilt it to put inside by tweezers.
Open the cabinet door first.

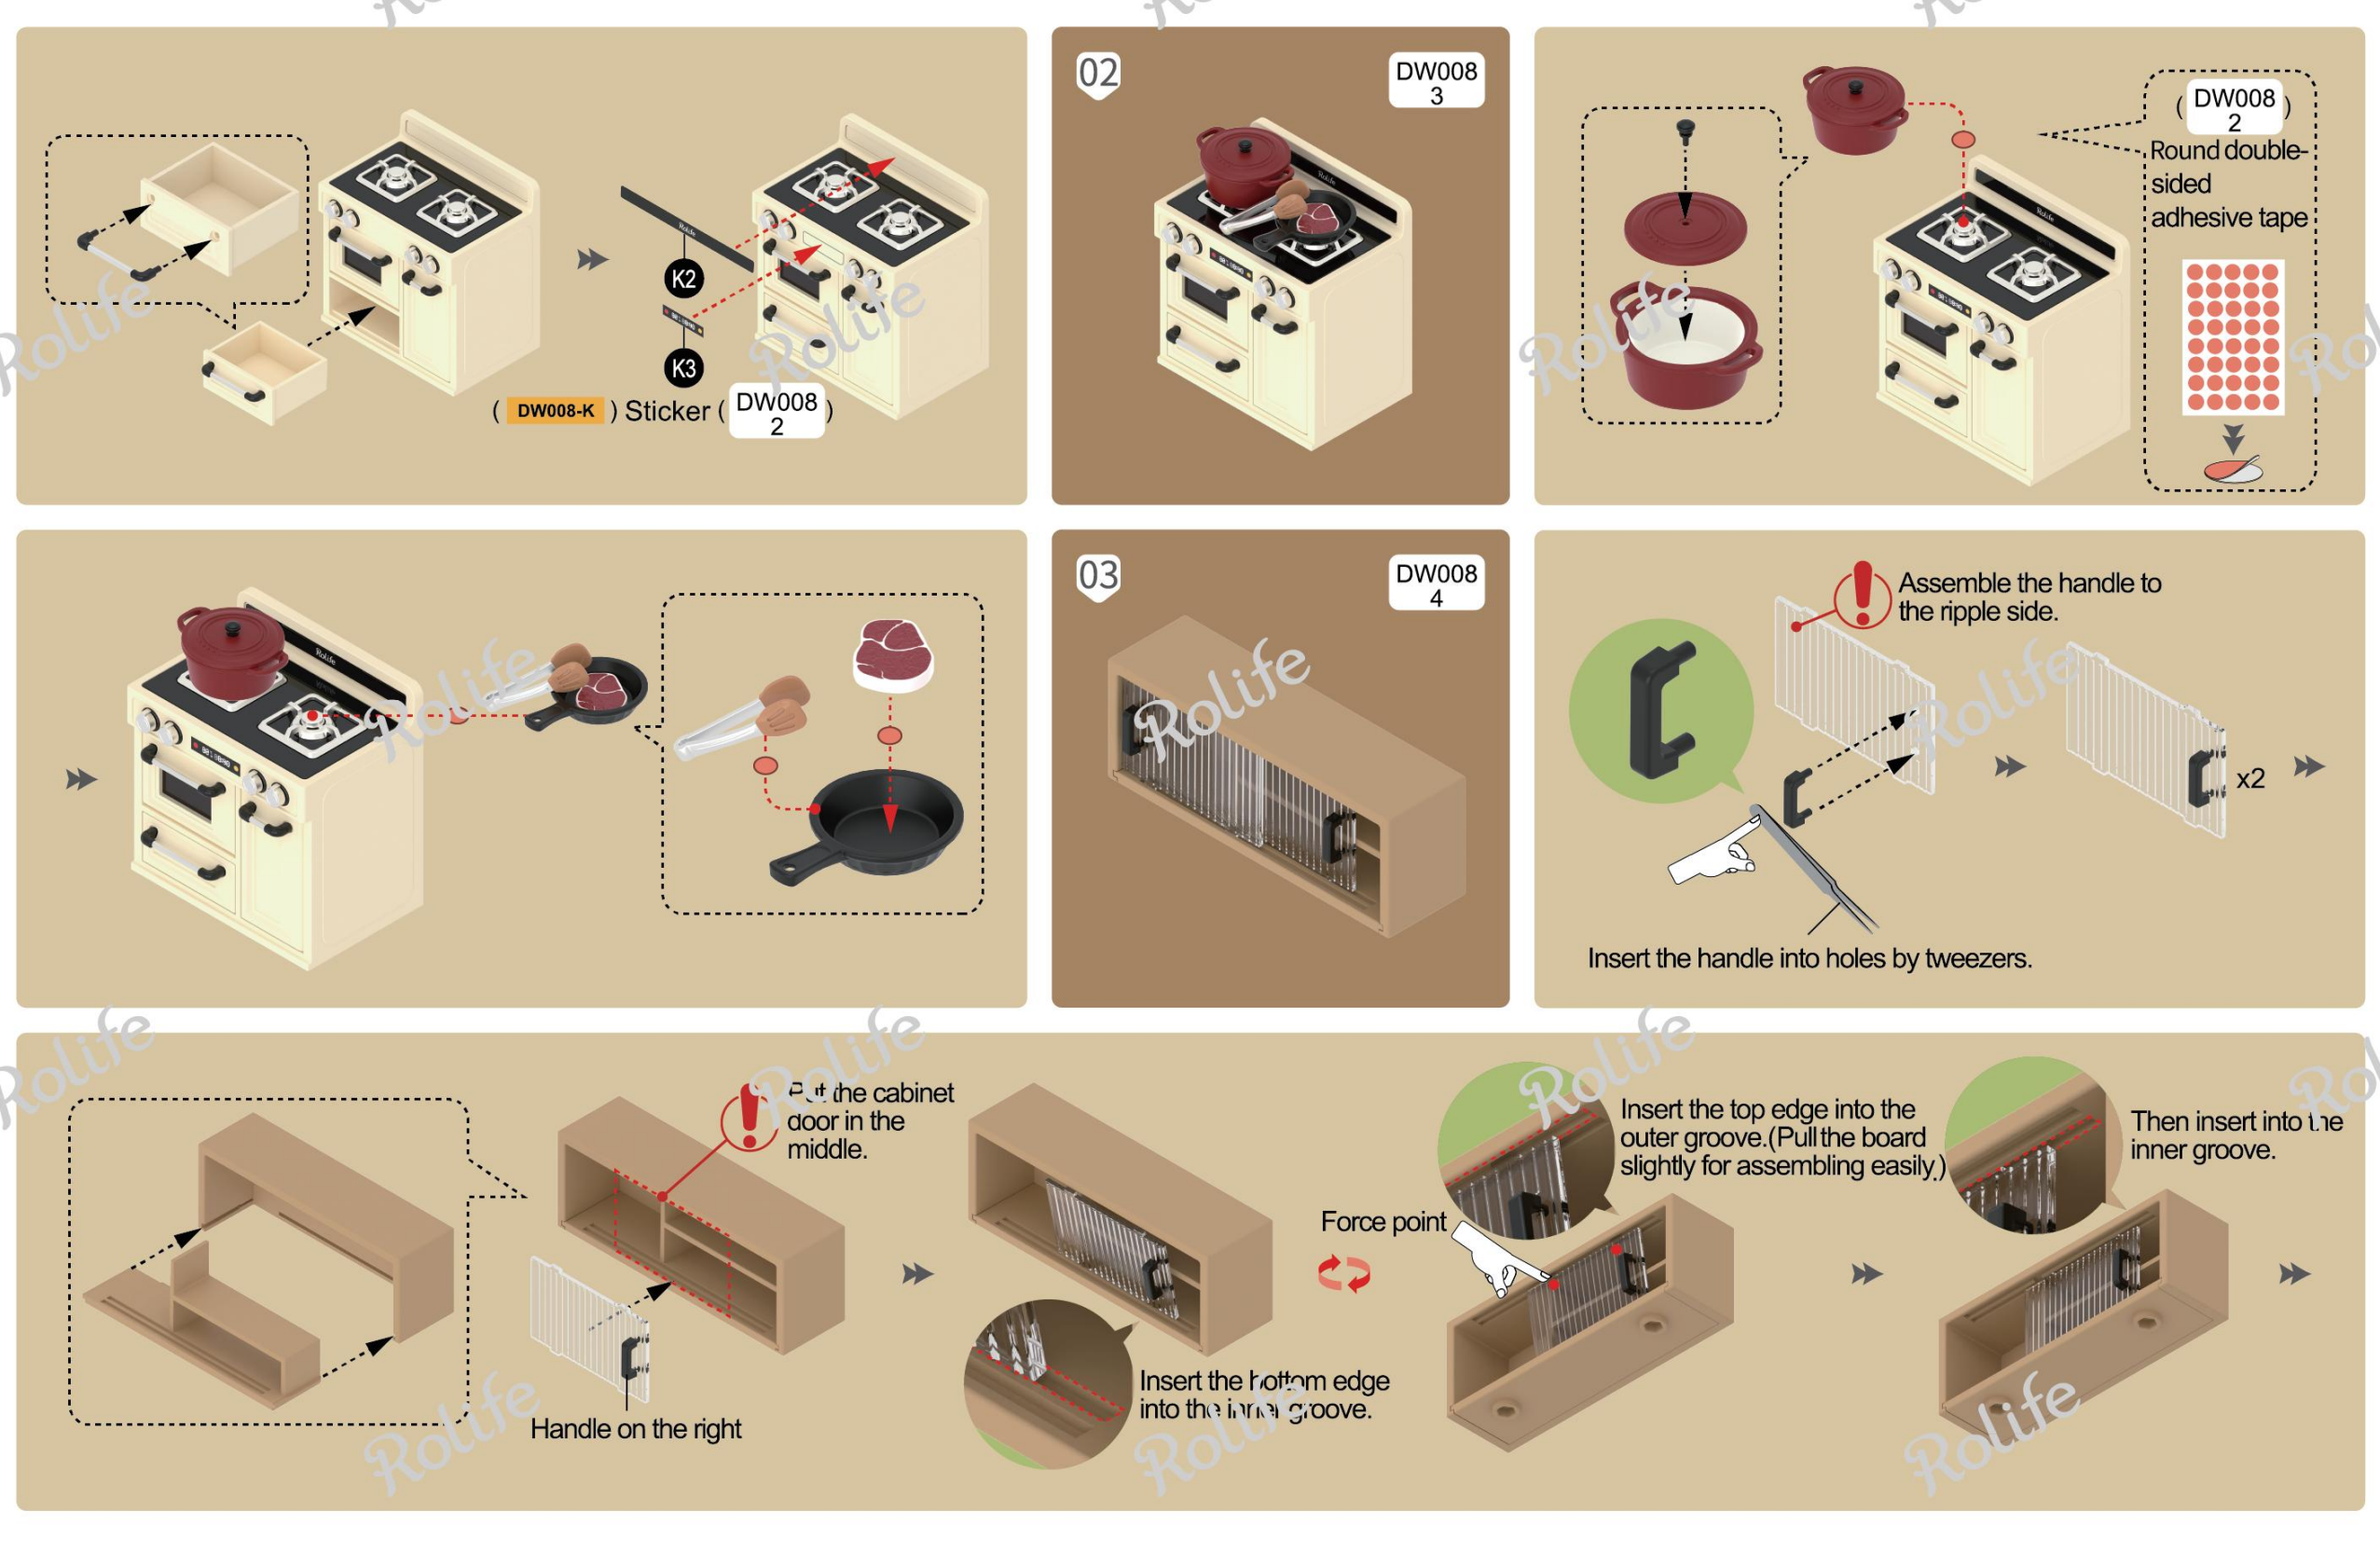
K2
K3
(DW008-K) Sticker (DW008 2)
02
DW008 3
DW008 2
Round double-sided adhesive tape
03
DW008 4
Assemble the handle to the ripple side.
x2
Insert the handle into holes by tweezers.
Put the cabinet door in the middle.
Handle on the right
Force point
Insert the top edge into the outer groove.(Pull the board slightly for assembling easily.)
Then insert into the inner groove.
Insert the bottom edge into the inner groove.

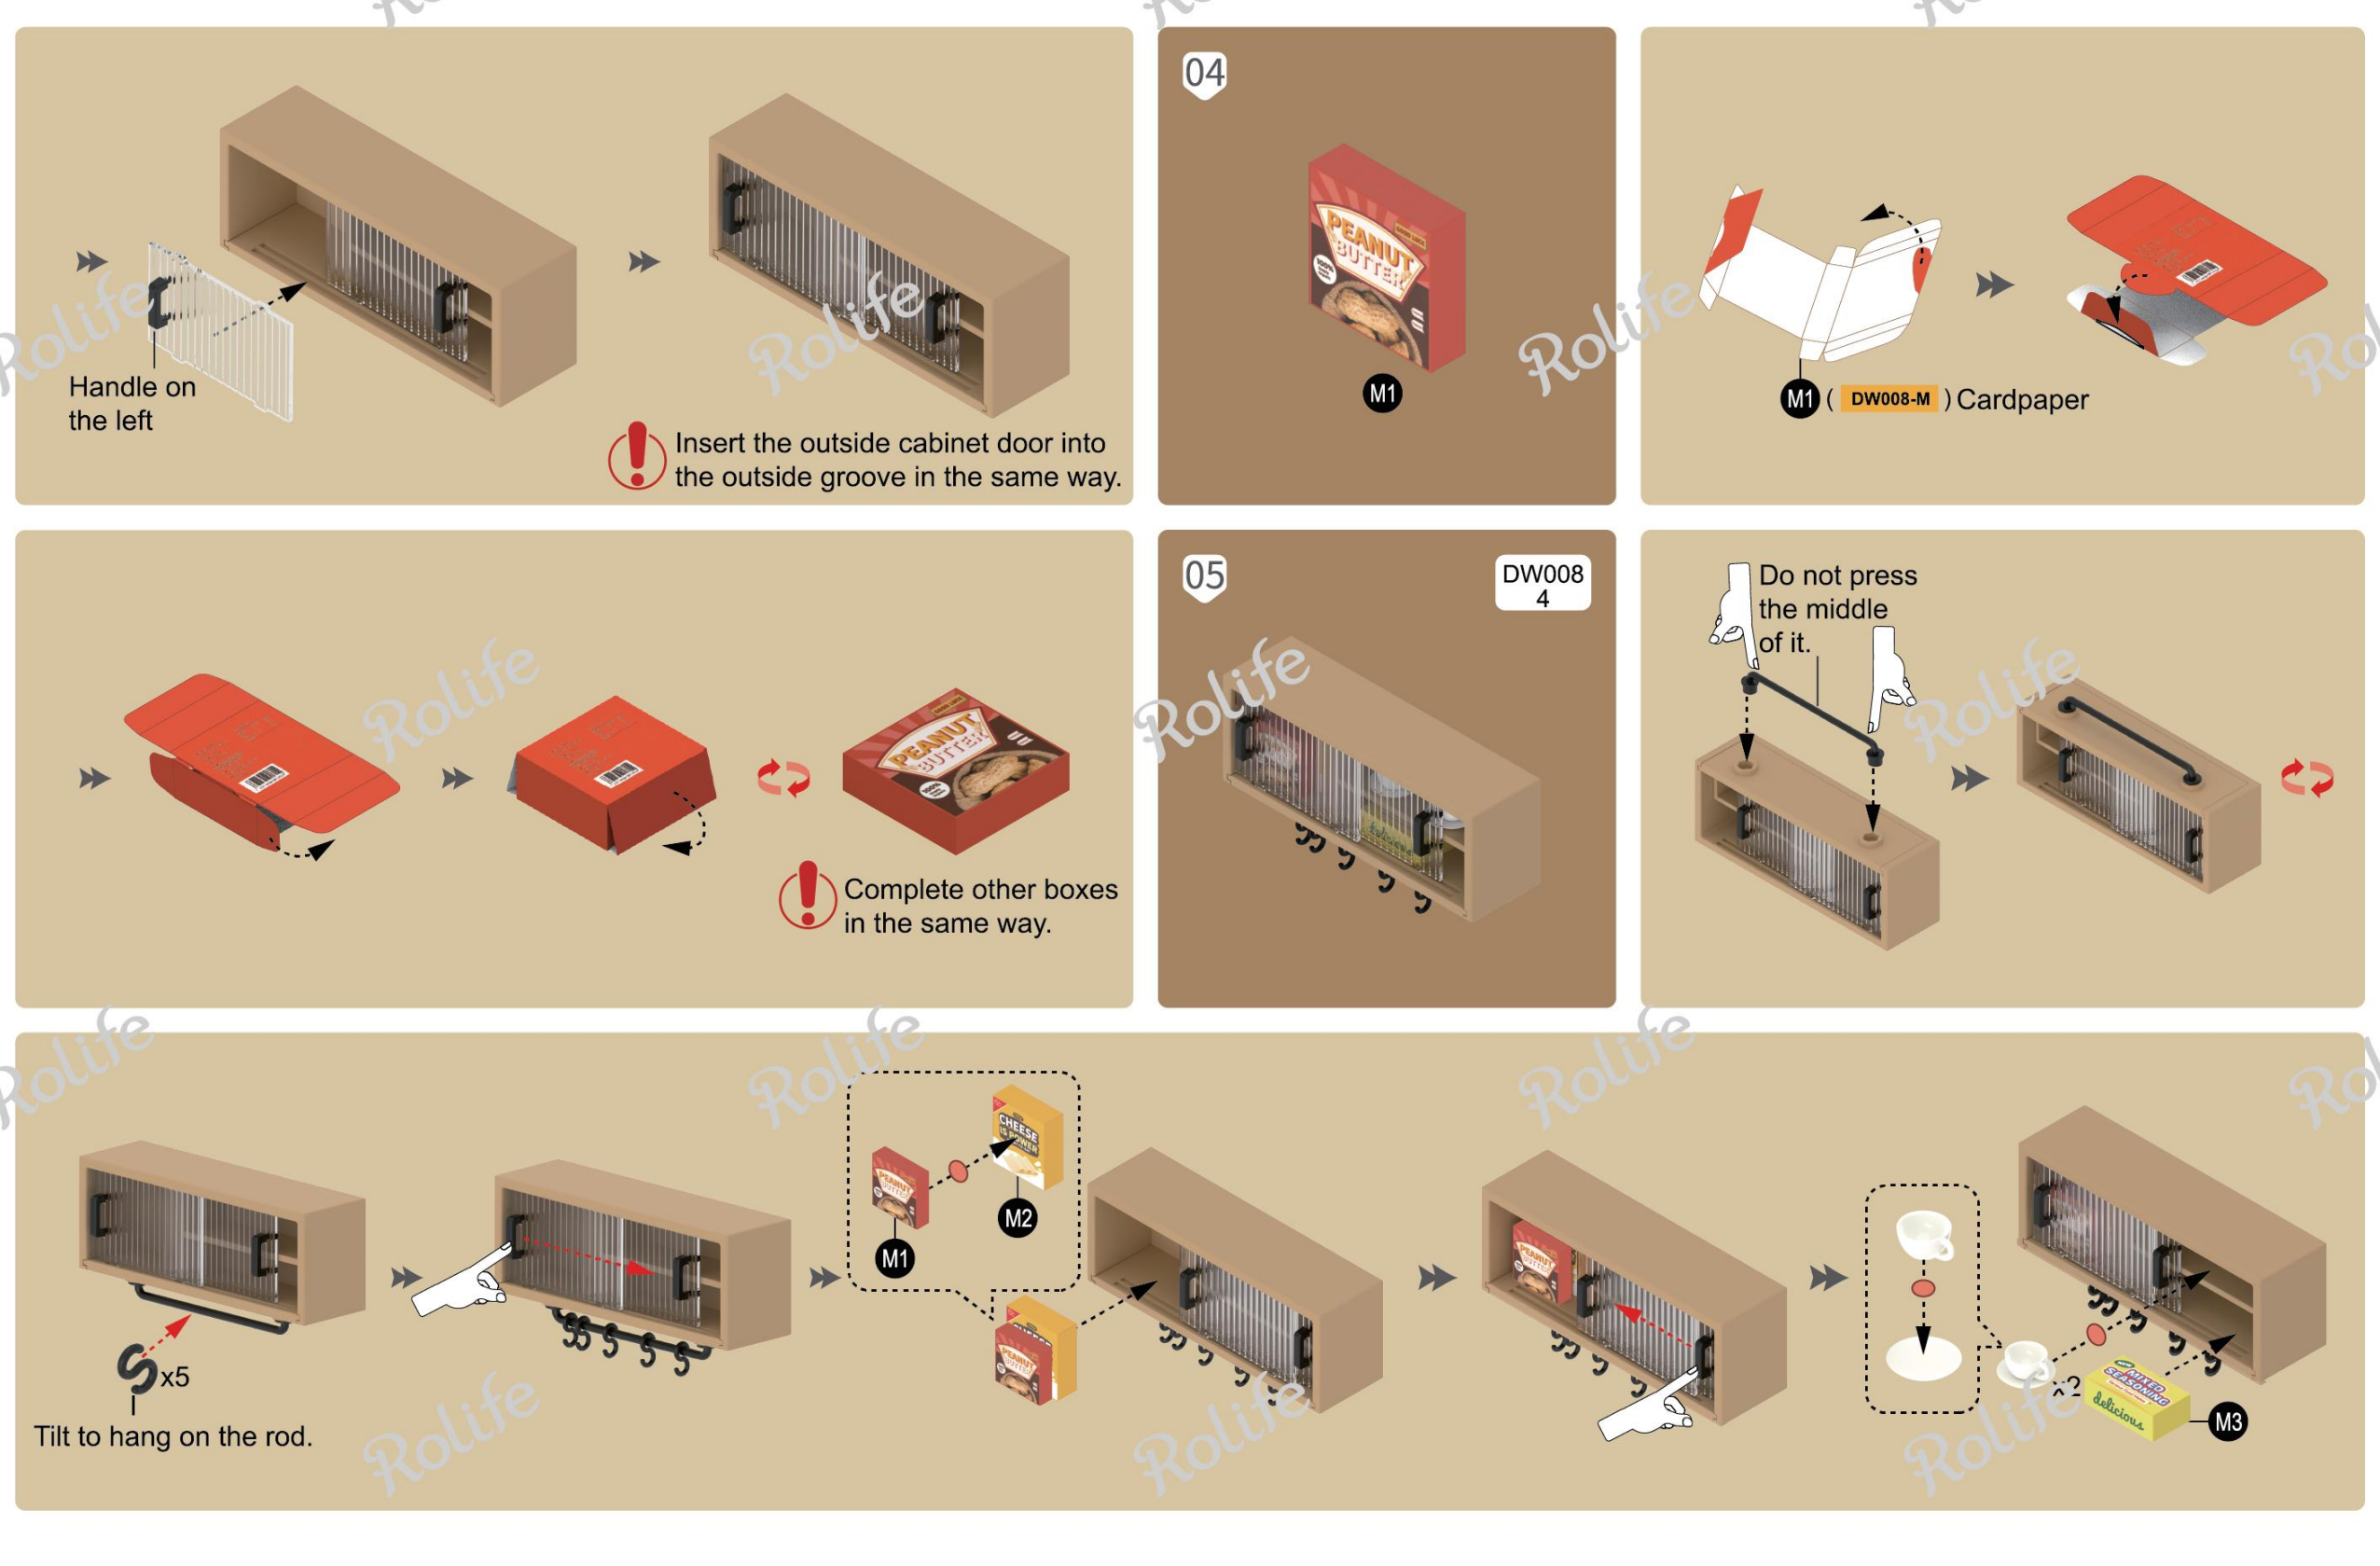
Handle on the left
Insert the outside cabinet door into the outside groove in the same way.
04
M1
M1 (DW008-M) Cardpaper
Complete other boxes in the same way.
05
DW008 4
Do not press the middle of it.
x5
Tilt to hang on the rod.
M1
M2
M3

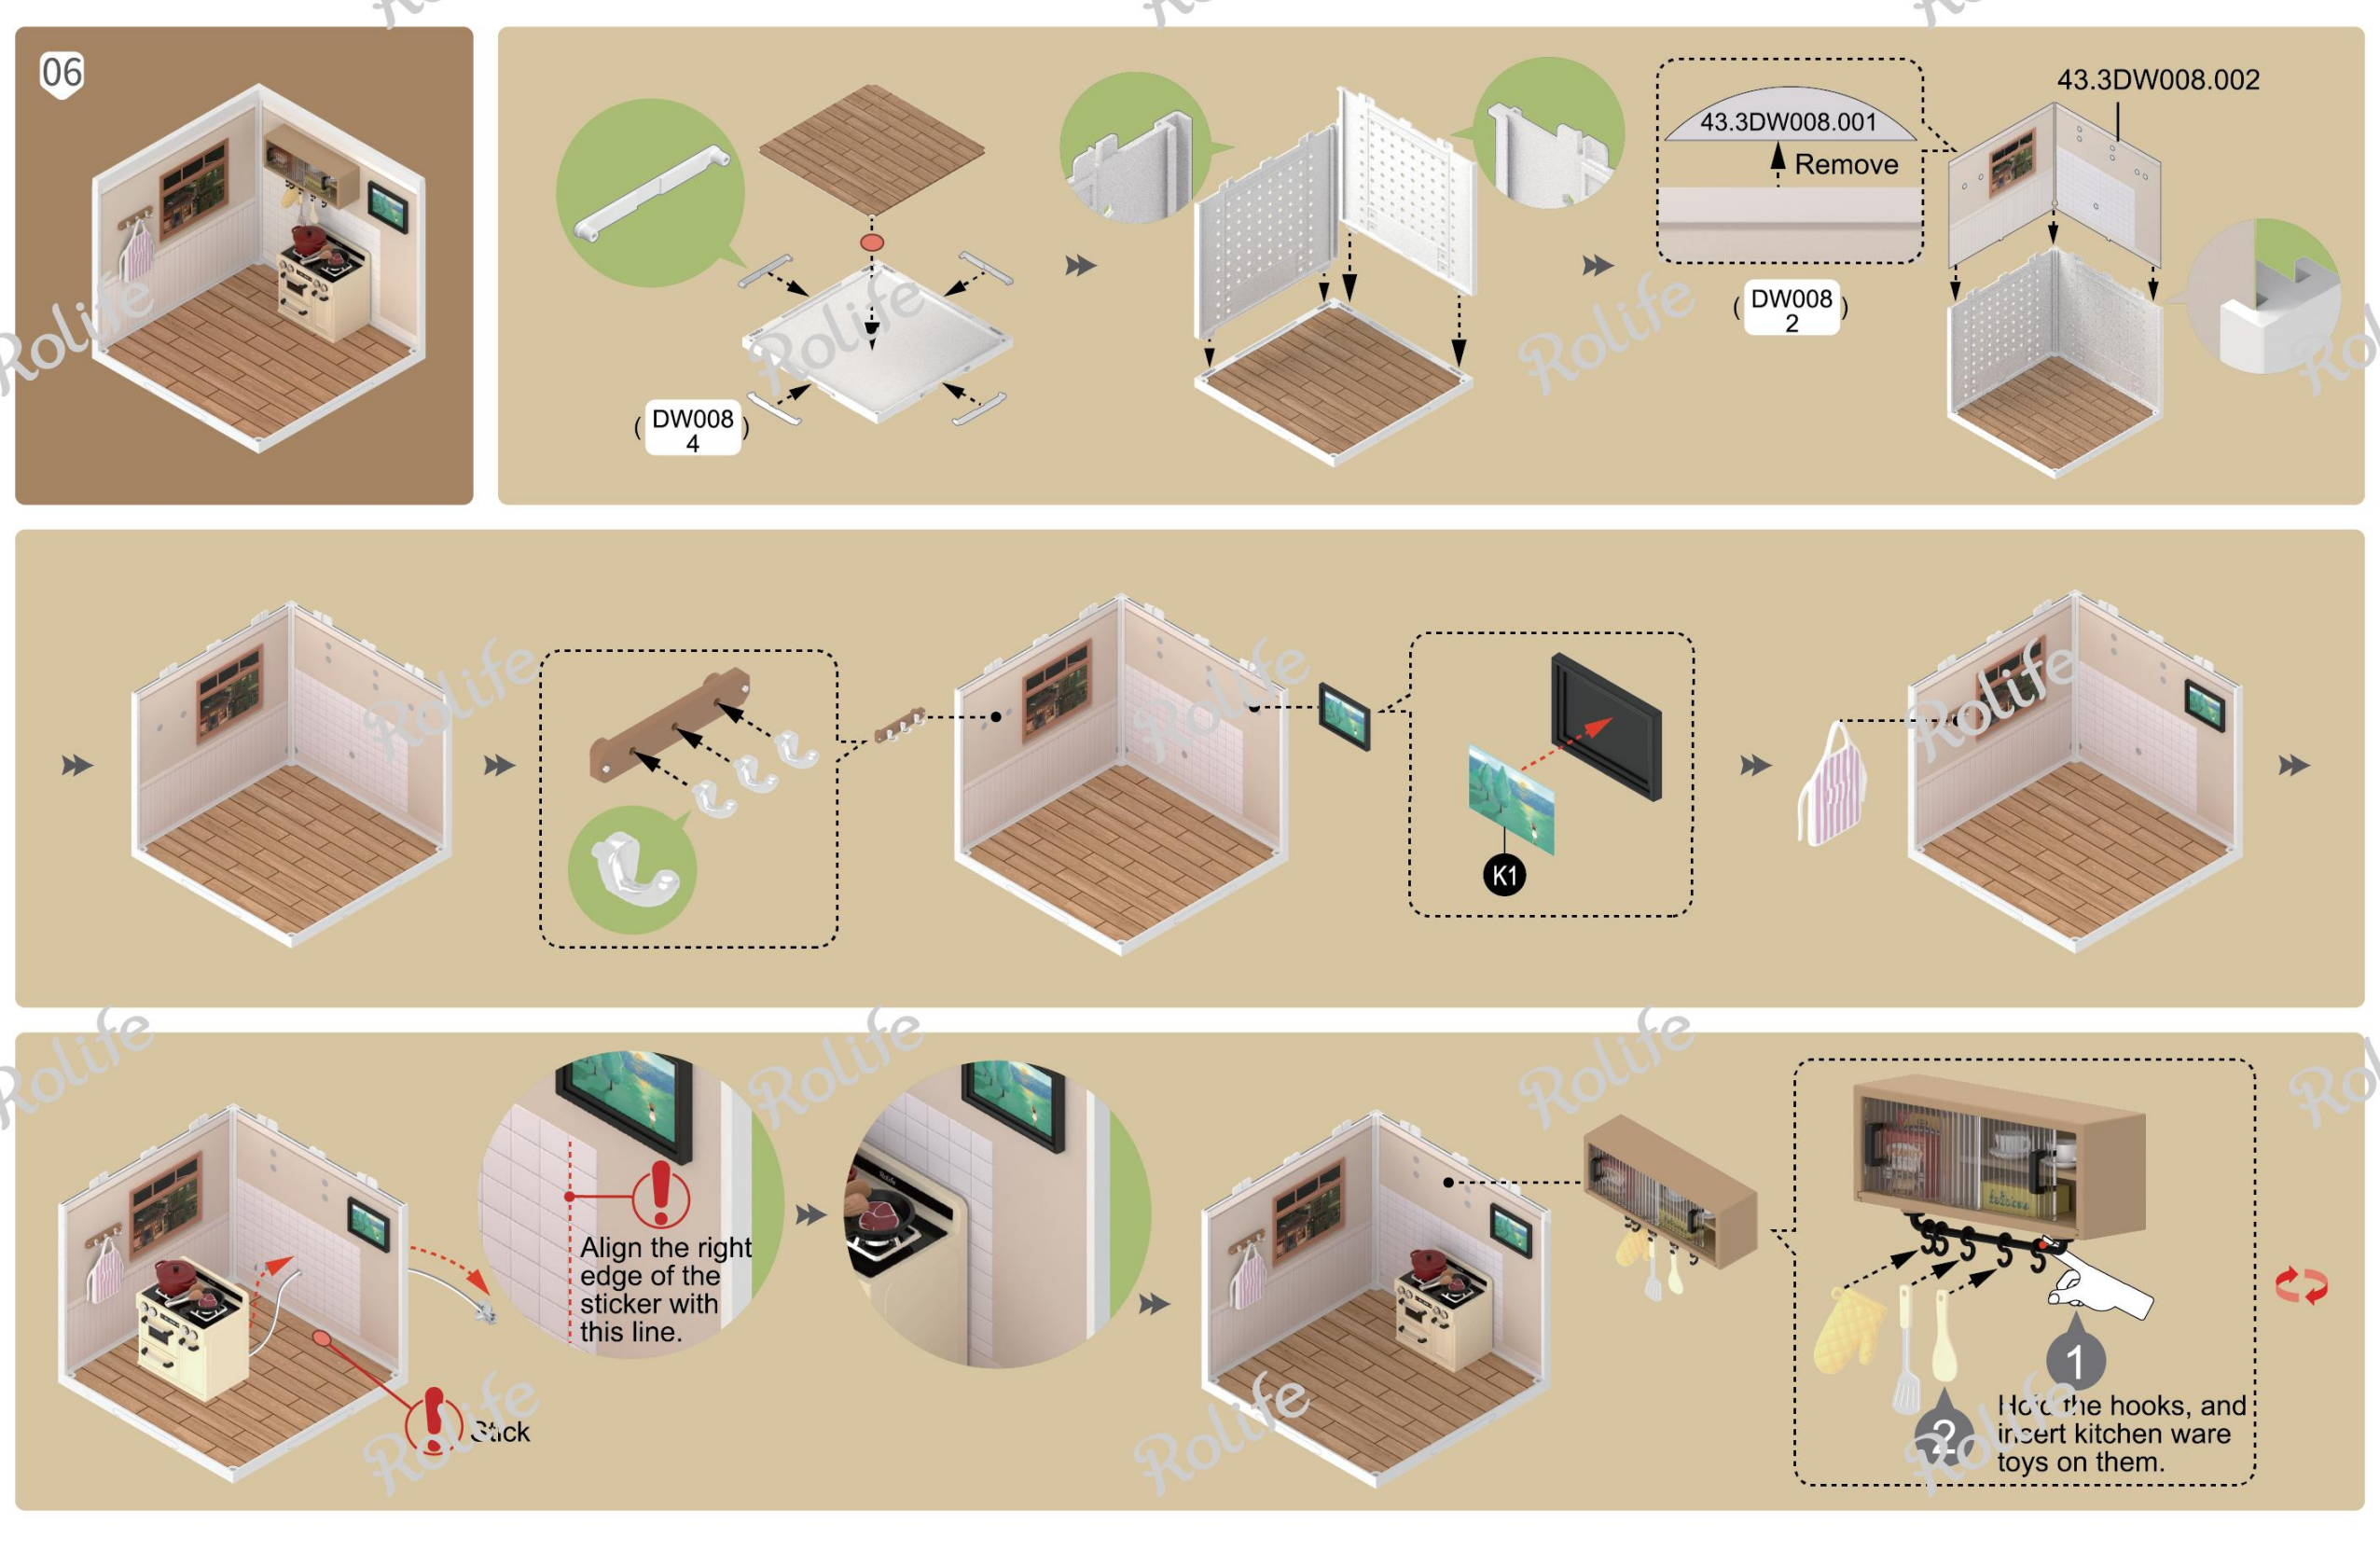
06
DW008 4
43.3DW008.001
Remove
DW008 2
43.3DW008.002
K1
Align the right edge of the sticker with this line.
Stick
① Hang the hooks, and
② insert kitchen ware toys on them.

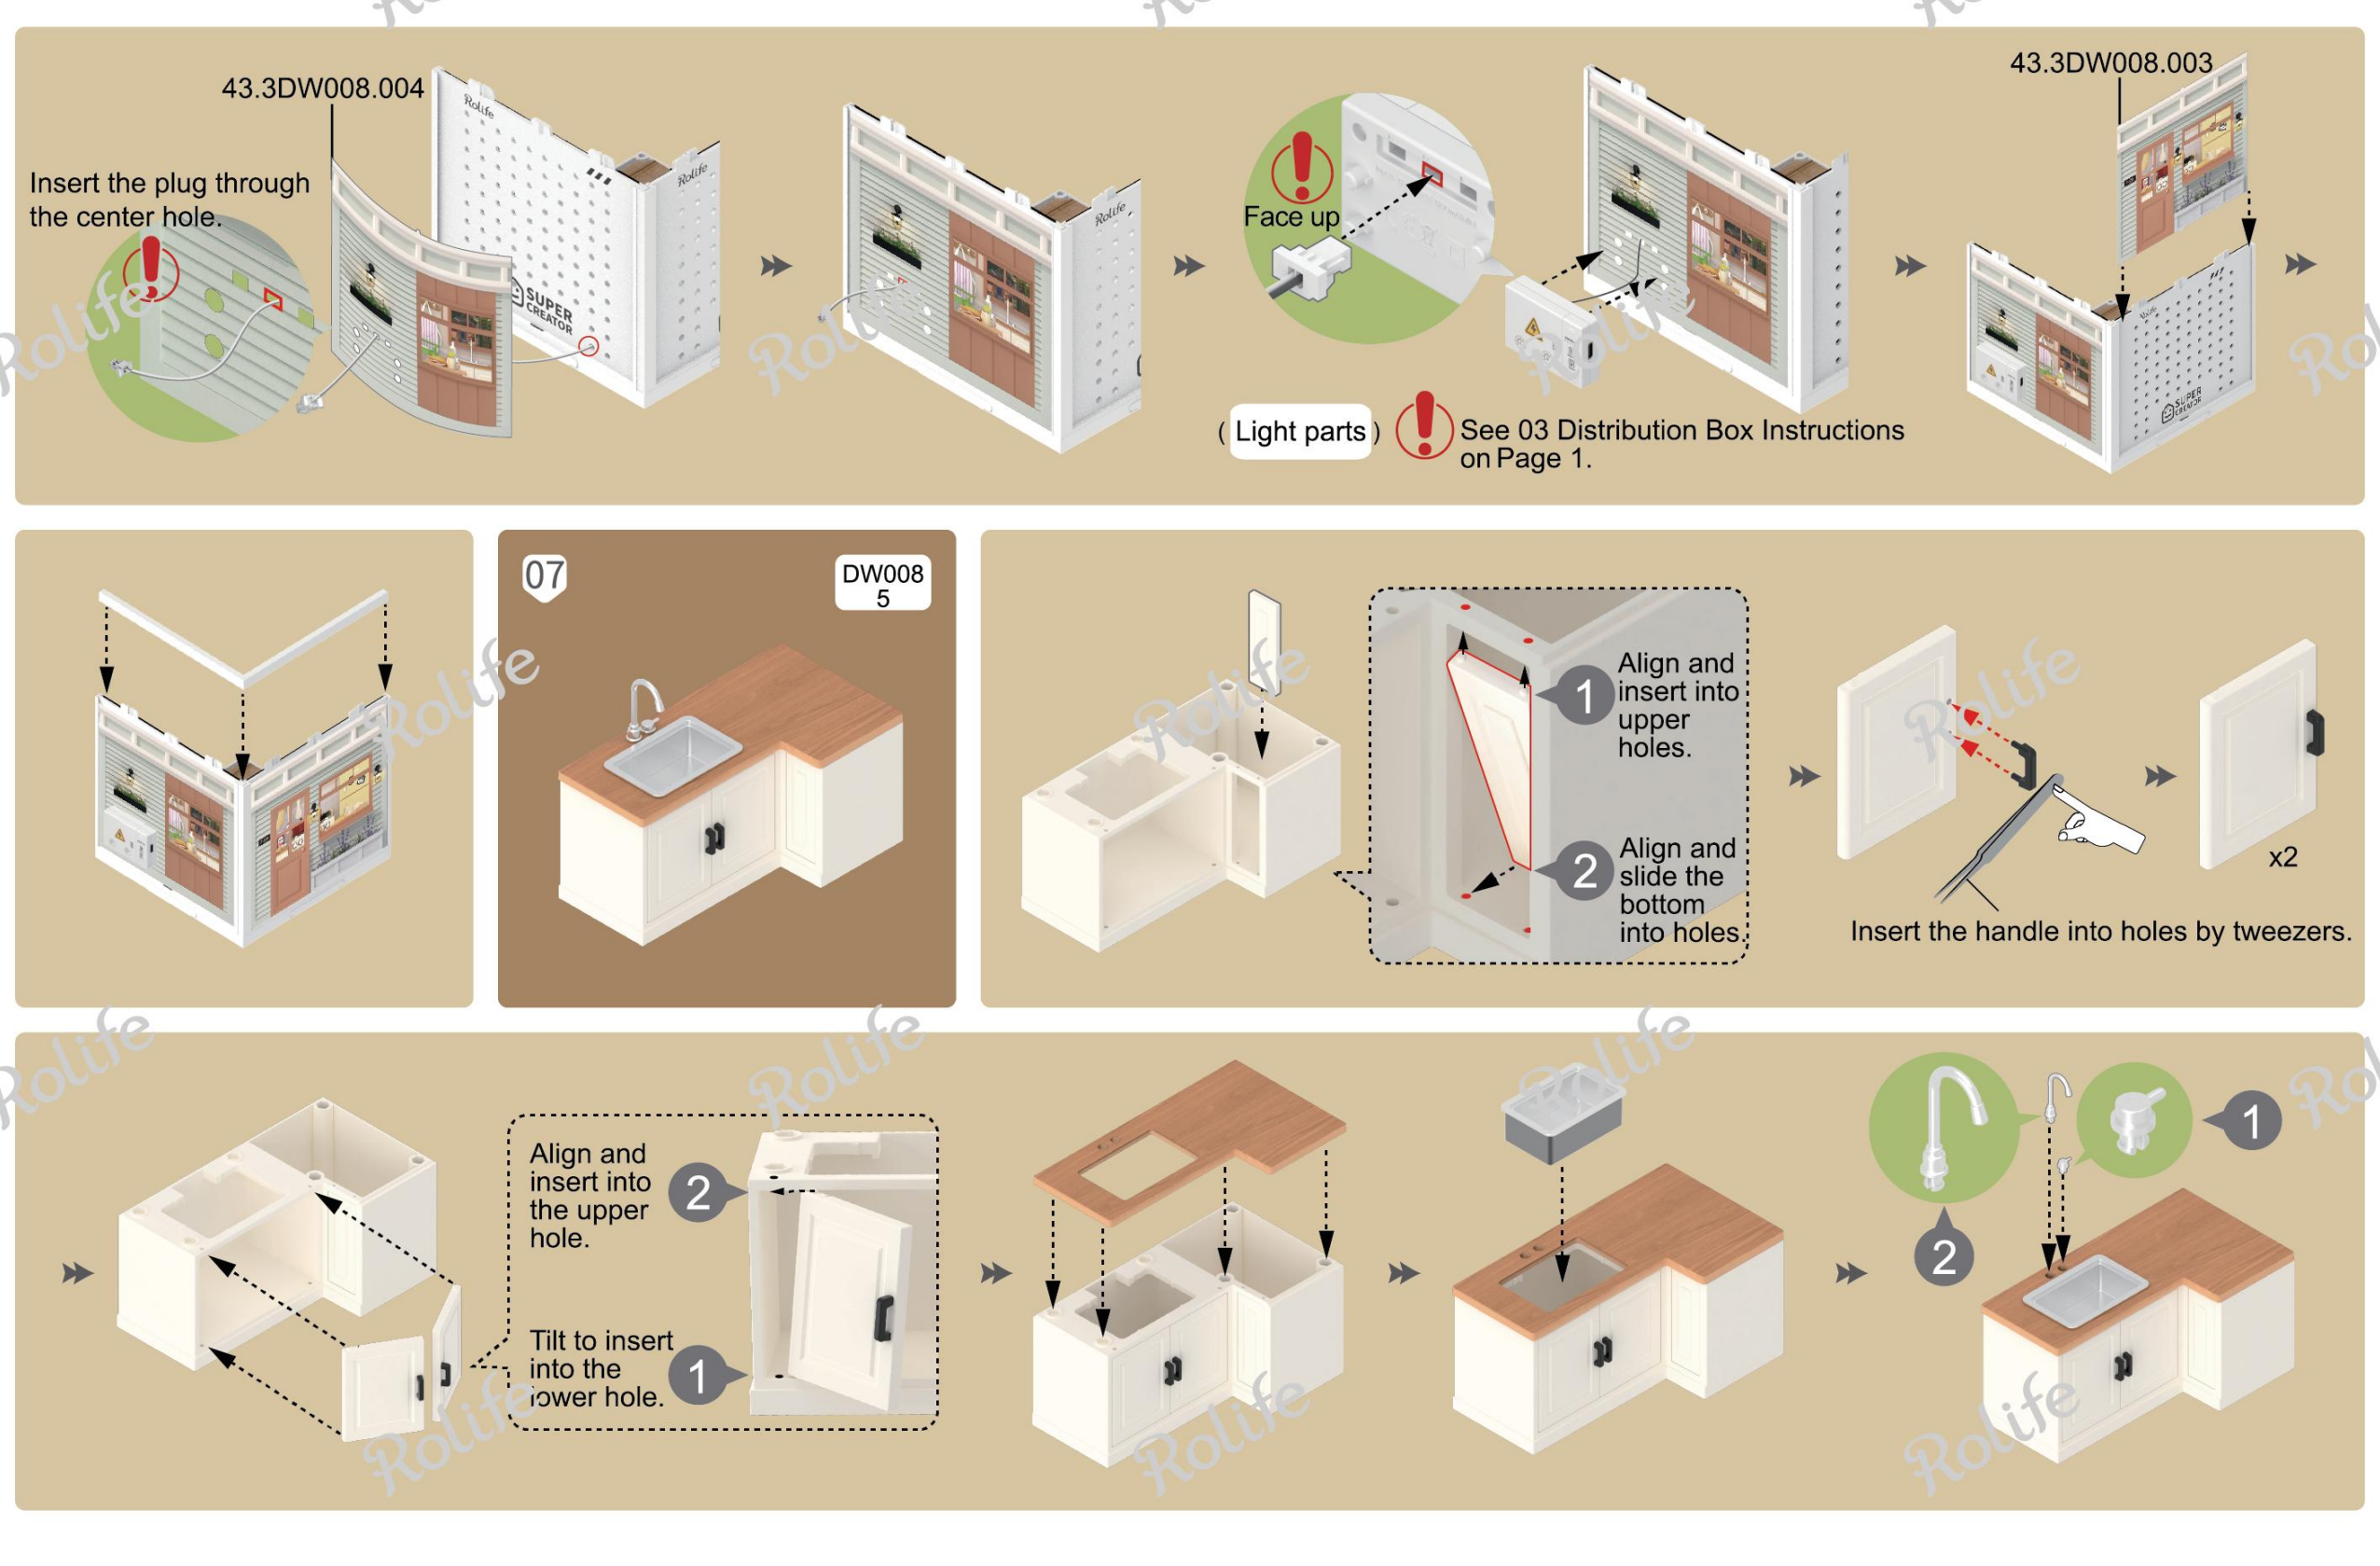
43.3DW008.004
Insert the plug through the center hole.
Face up
Light parts
See 03 Distribution Box Instructions on Page 1.
43.3DW008.003
07
DW008 5
① Align and insert into upper holes.
② Align and slide the bottom into holes.
x2
Insert the handle into holes by tweezers.
② Align and insert into the upper hole.
① Tilt to insert into the lower hole.

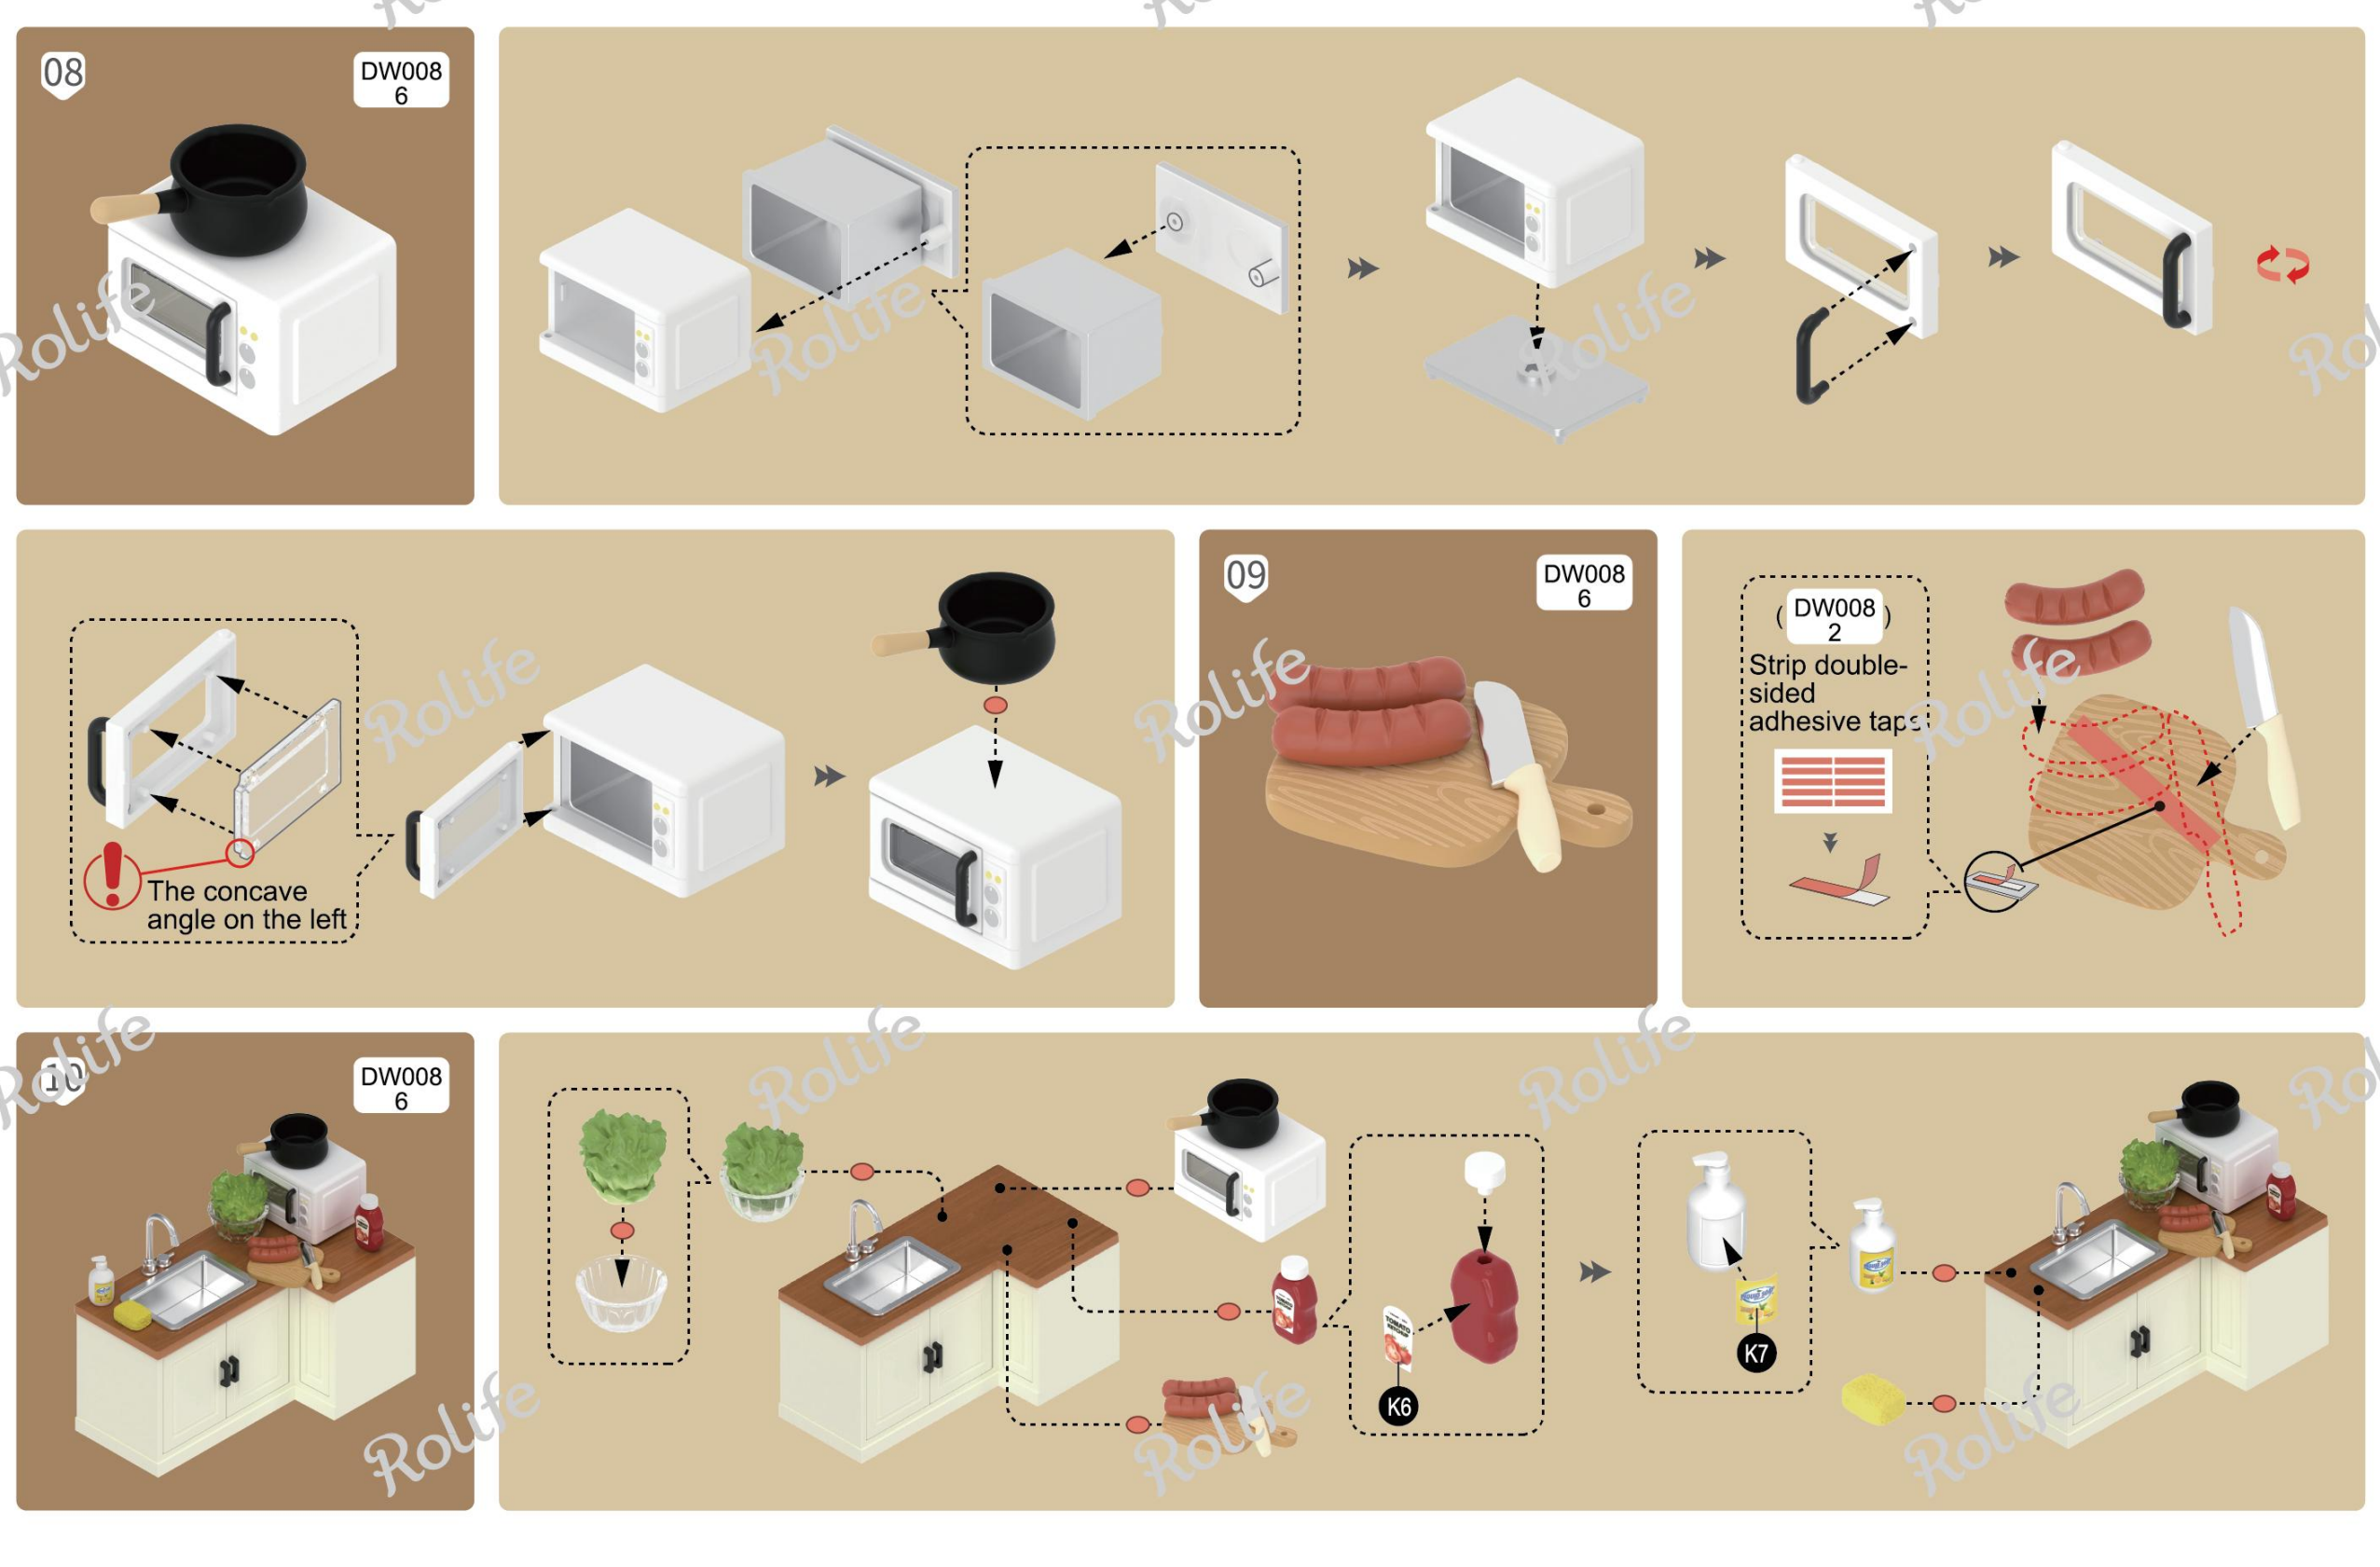
08
DW008 6
The concave angle on the left
09
DW008 6
DW008 2
Strip double-sided adhesive tape
10
DW008 5
K7

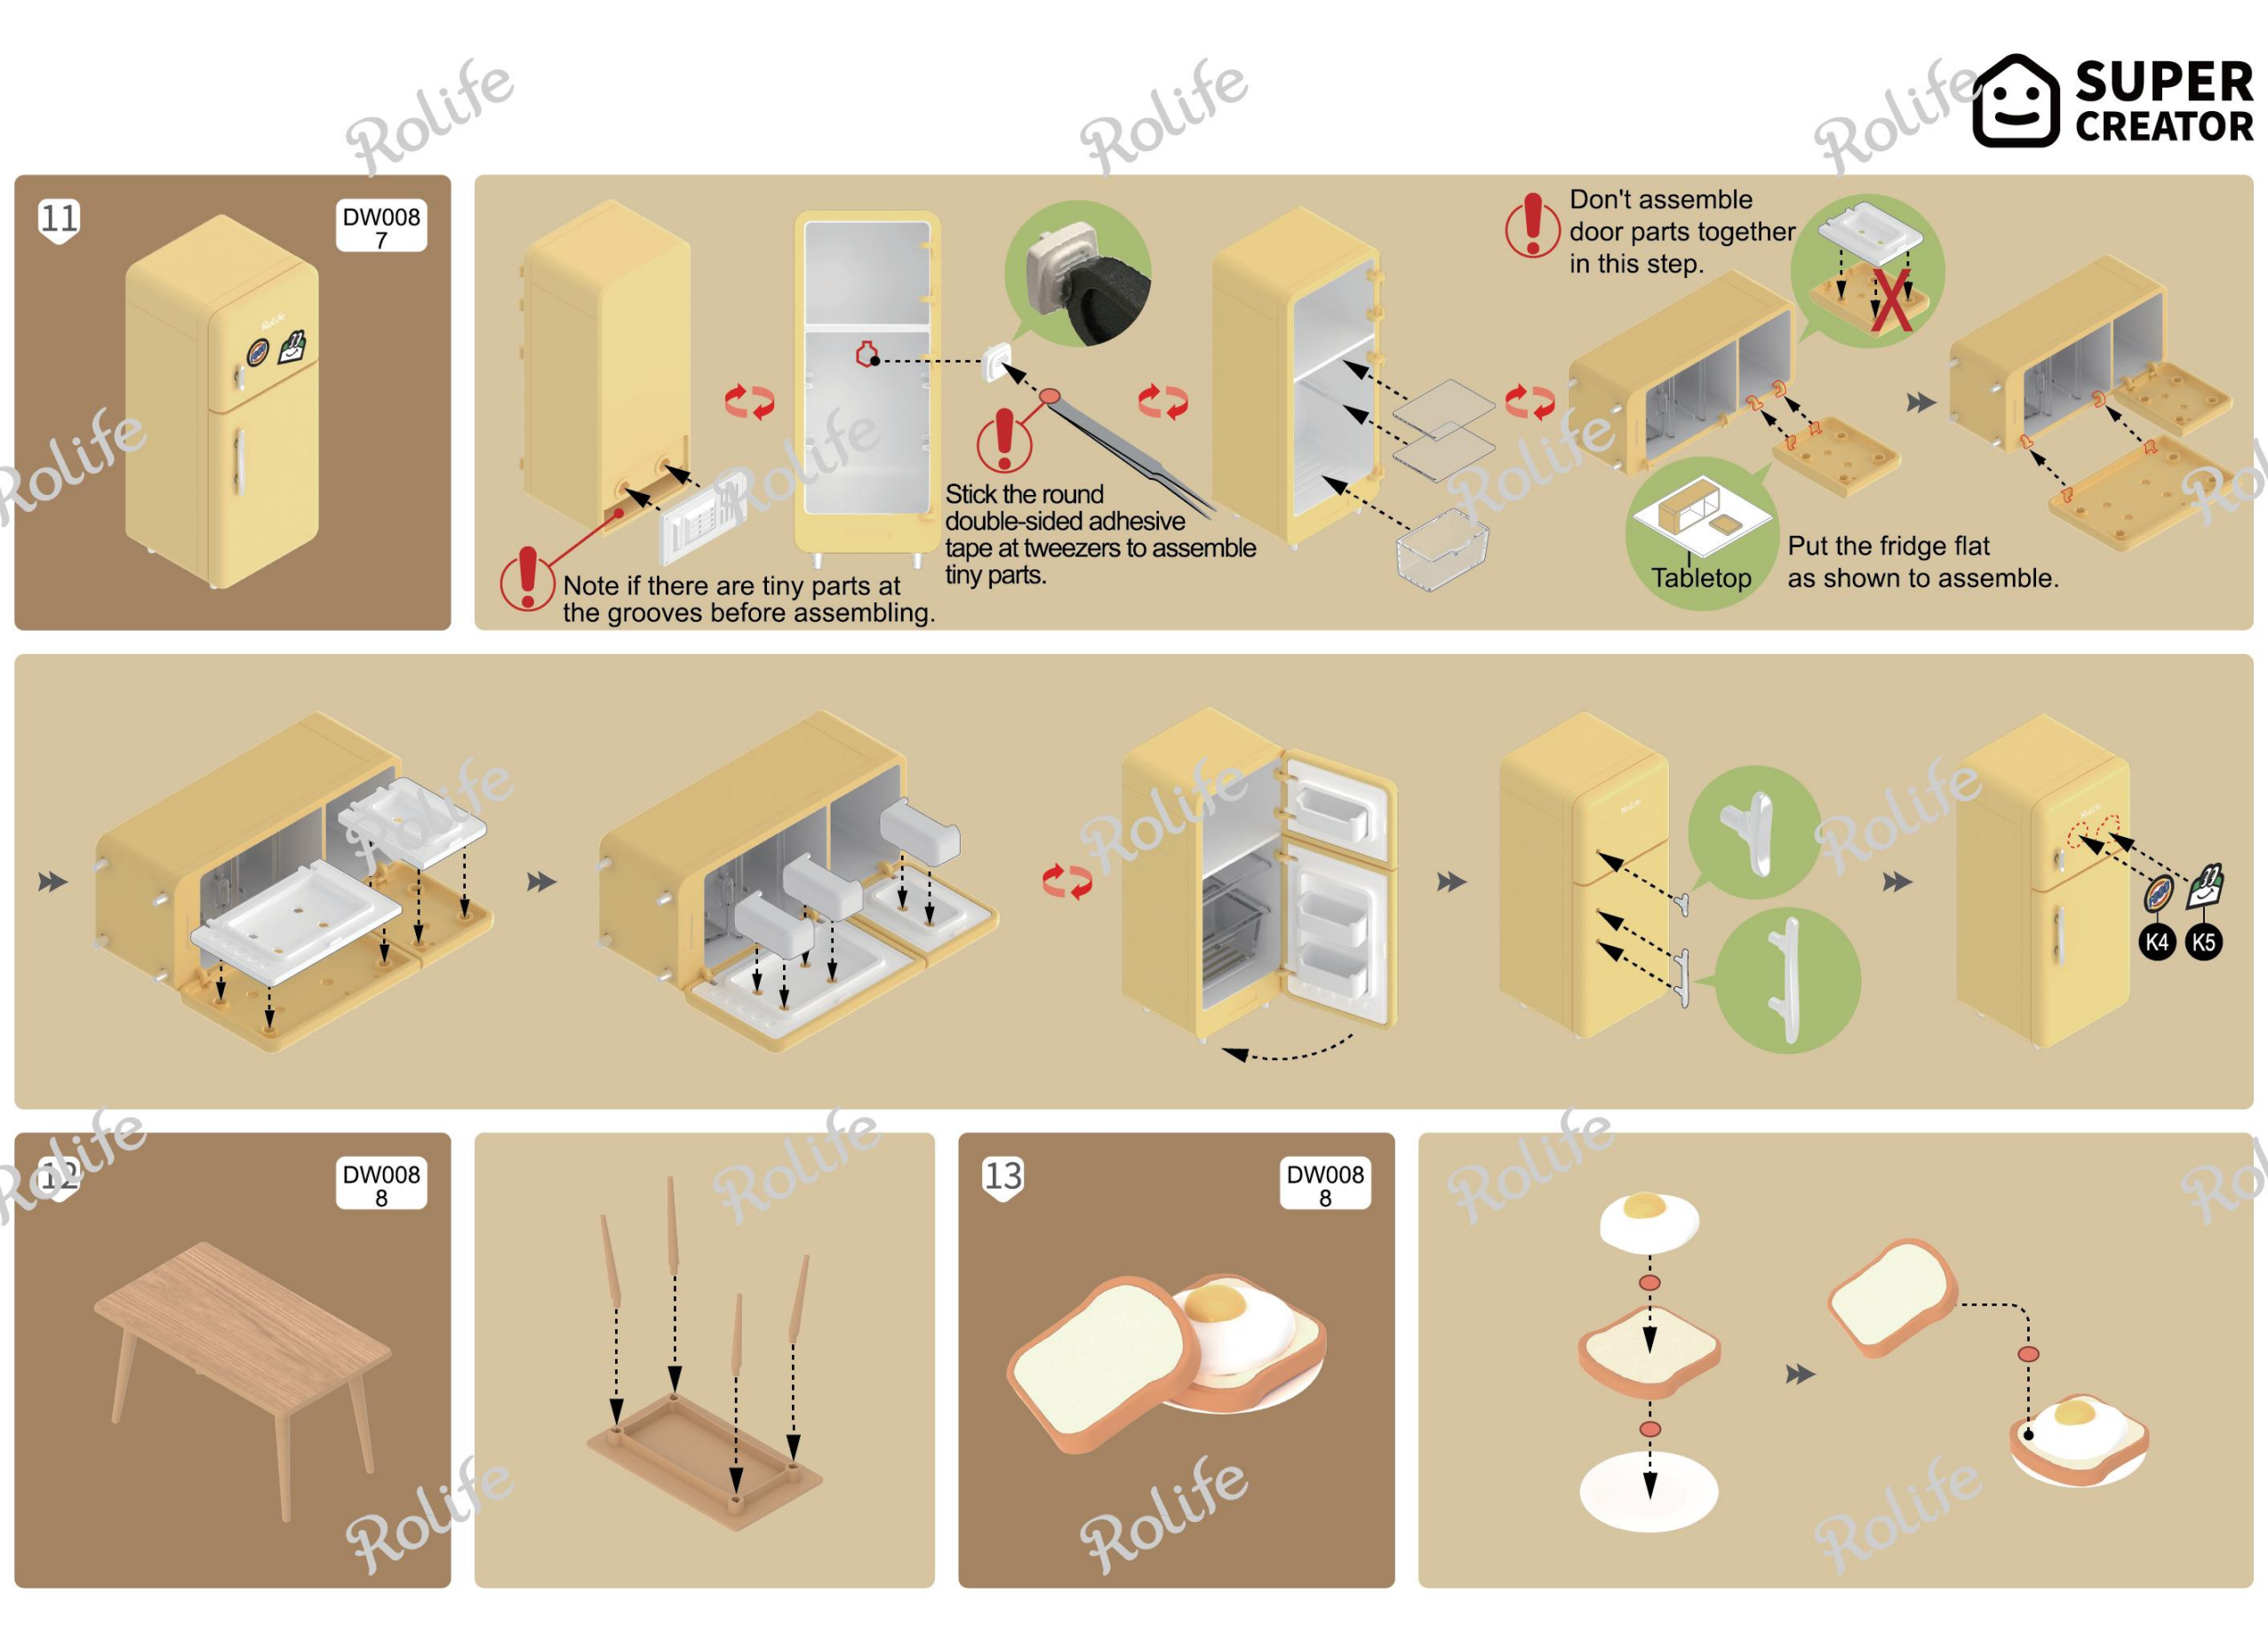
11
DW008 7
Note if there are tiny parts at the grooves before assembling.
Stick the round double-sided adhesive tape at tweezers to assemble tiny parts.
Don't assemble door parts together in this step.
Tabletop
Put the fridge flat as shown to assemble.
K4
K5
12
DW008 8
13
DW008 8

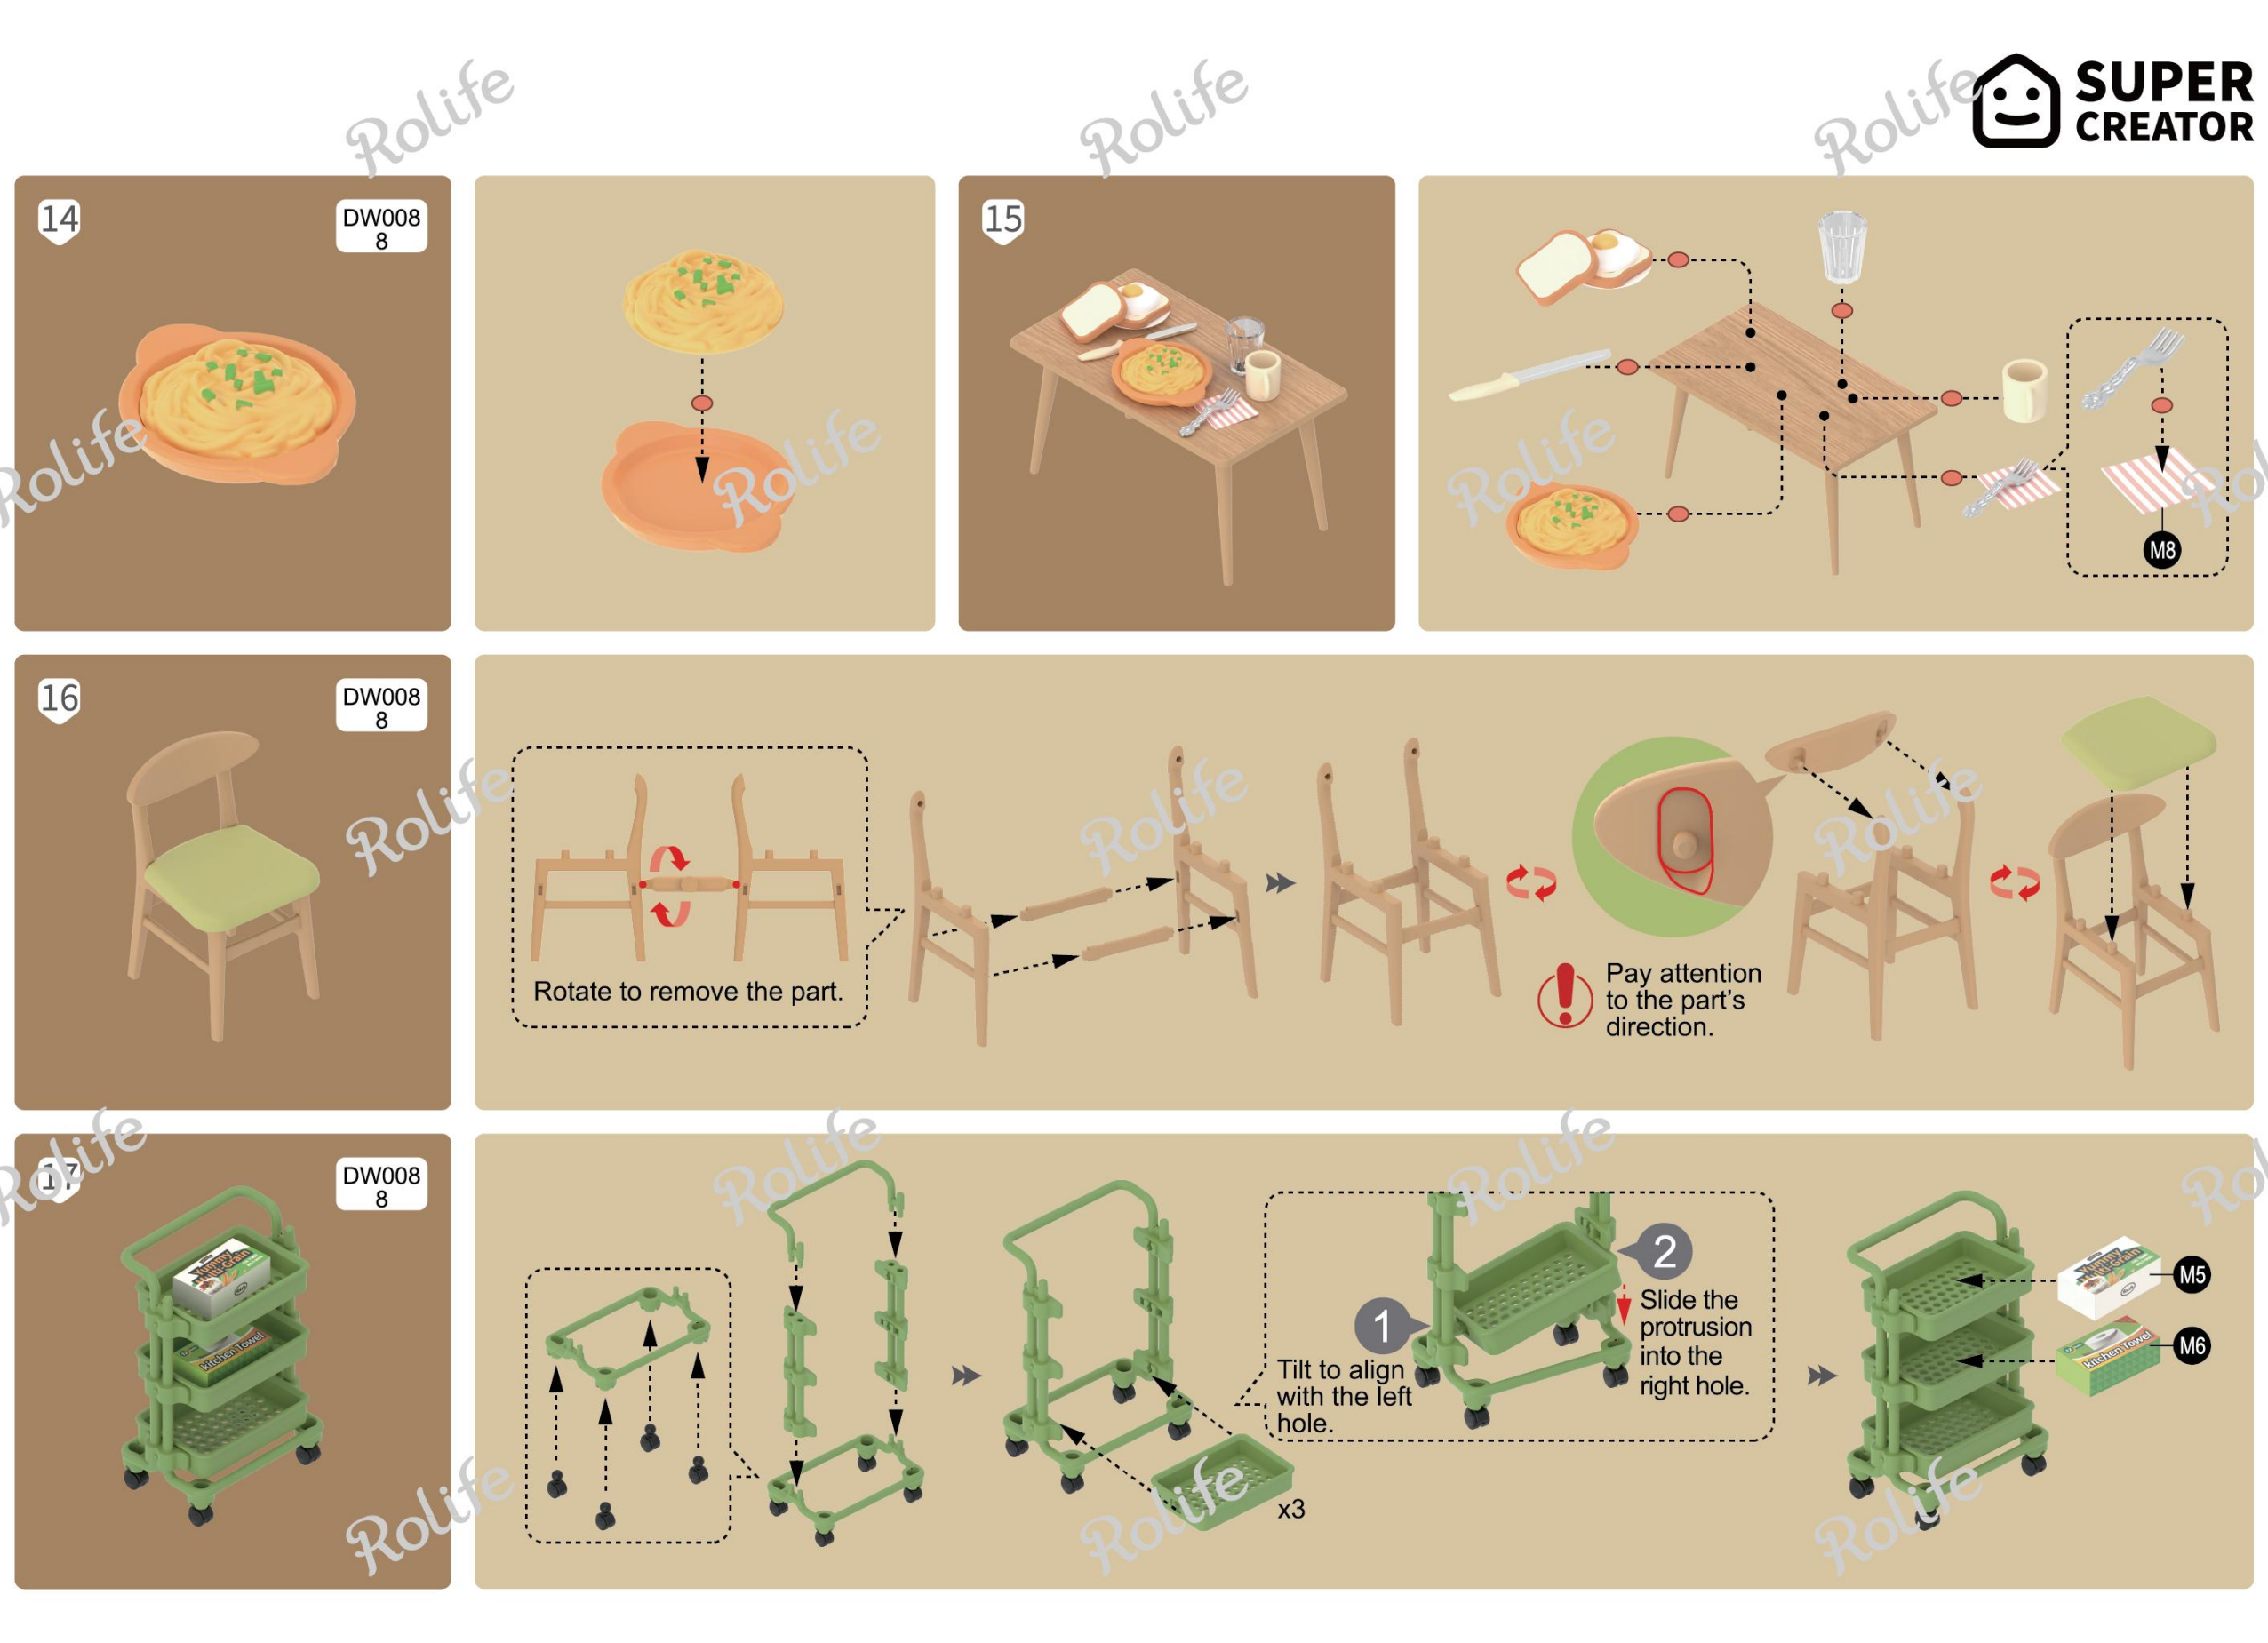
14
DW008 8
15
M6
16
DW008 8
Rotate to remove the part.
Pay attention to the part's direction.
17
DW008 8
① Tilt to align with the left hole.
② Slide the protrusion into the right hole.
x3
M4
M5

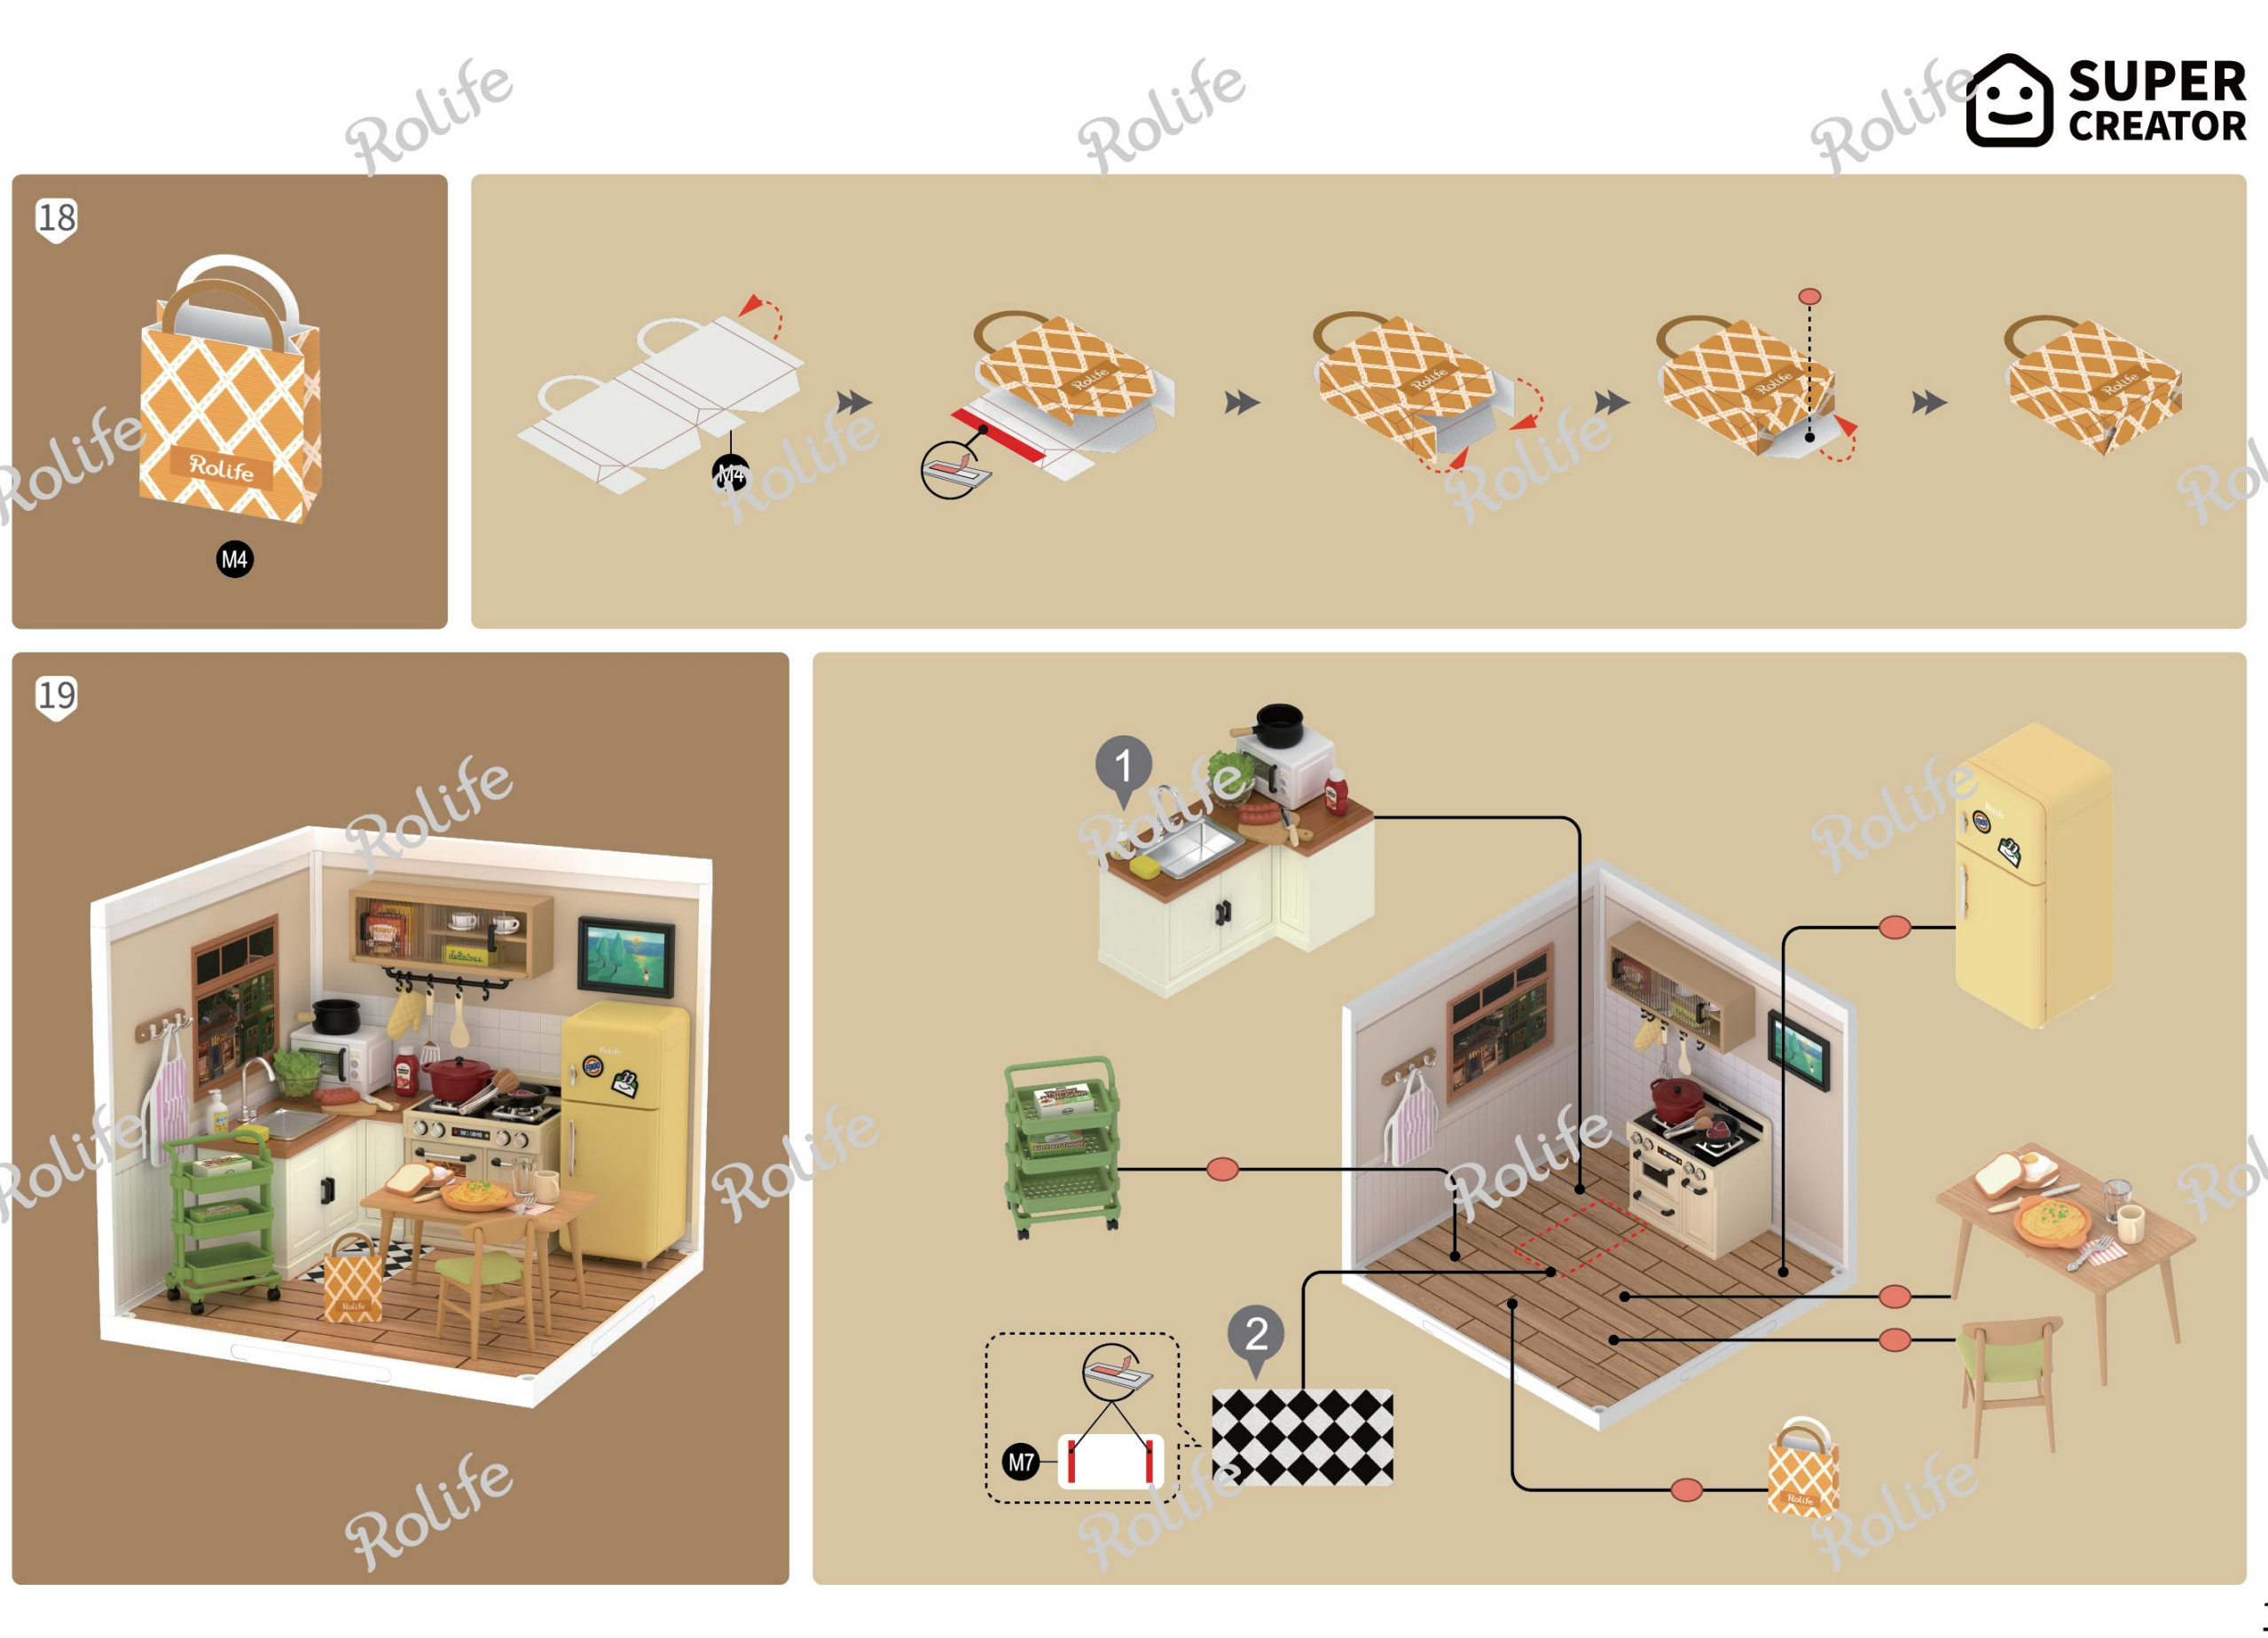

05 Add some other tricks

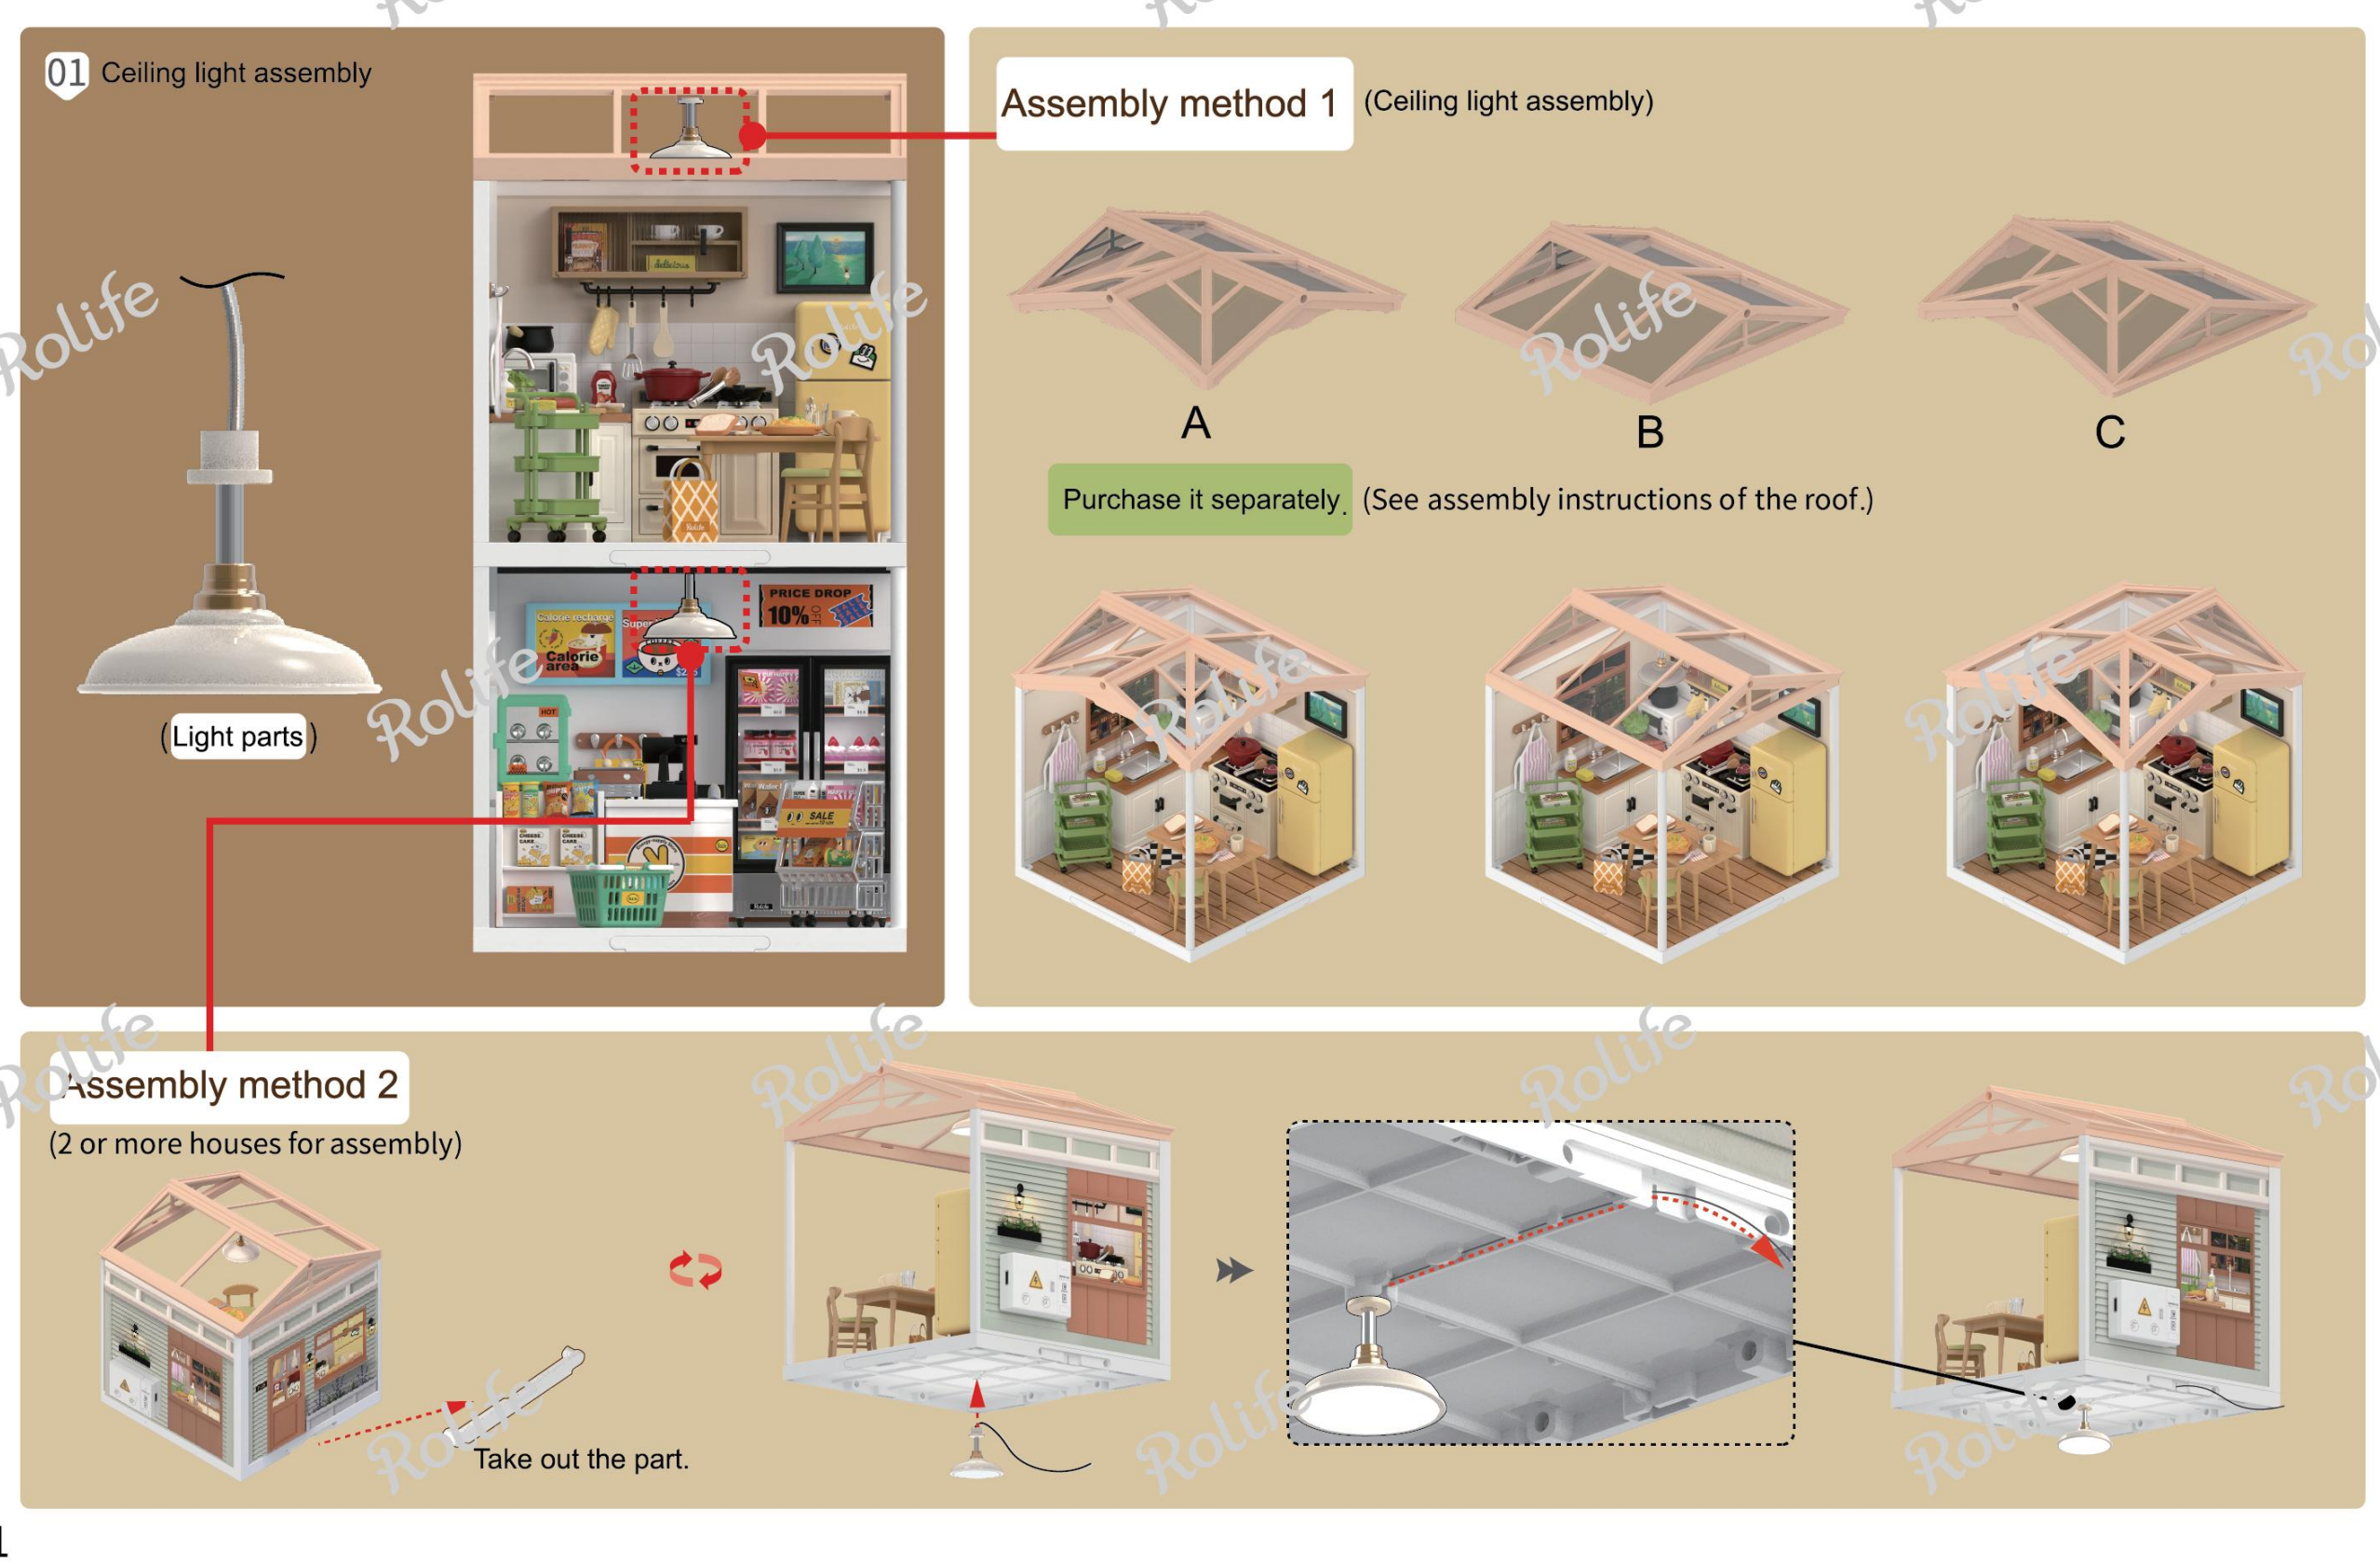
01 Ceiling light assembly
Light parts
Assembly method 1 (Ceiling light assembly)
A
B
C
Purchase it separately. (See assembly instructions of the roof.)
Assembly method 2
(2 or more houses for assembly)
Take out the part.

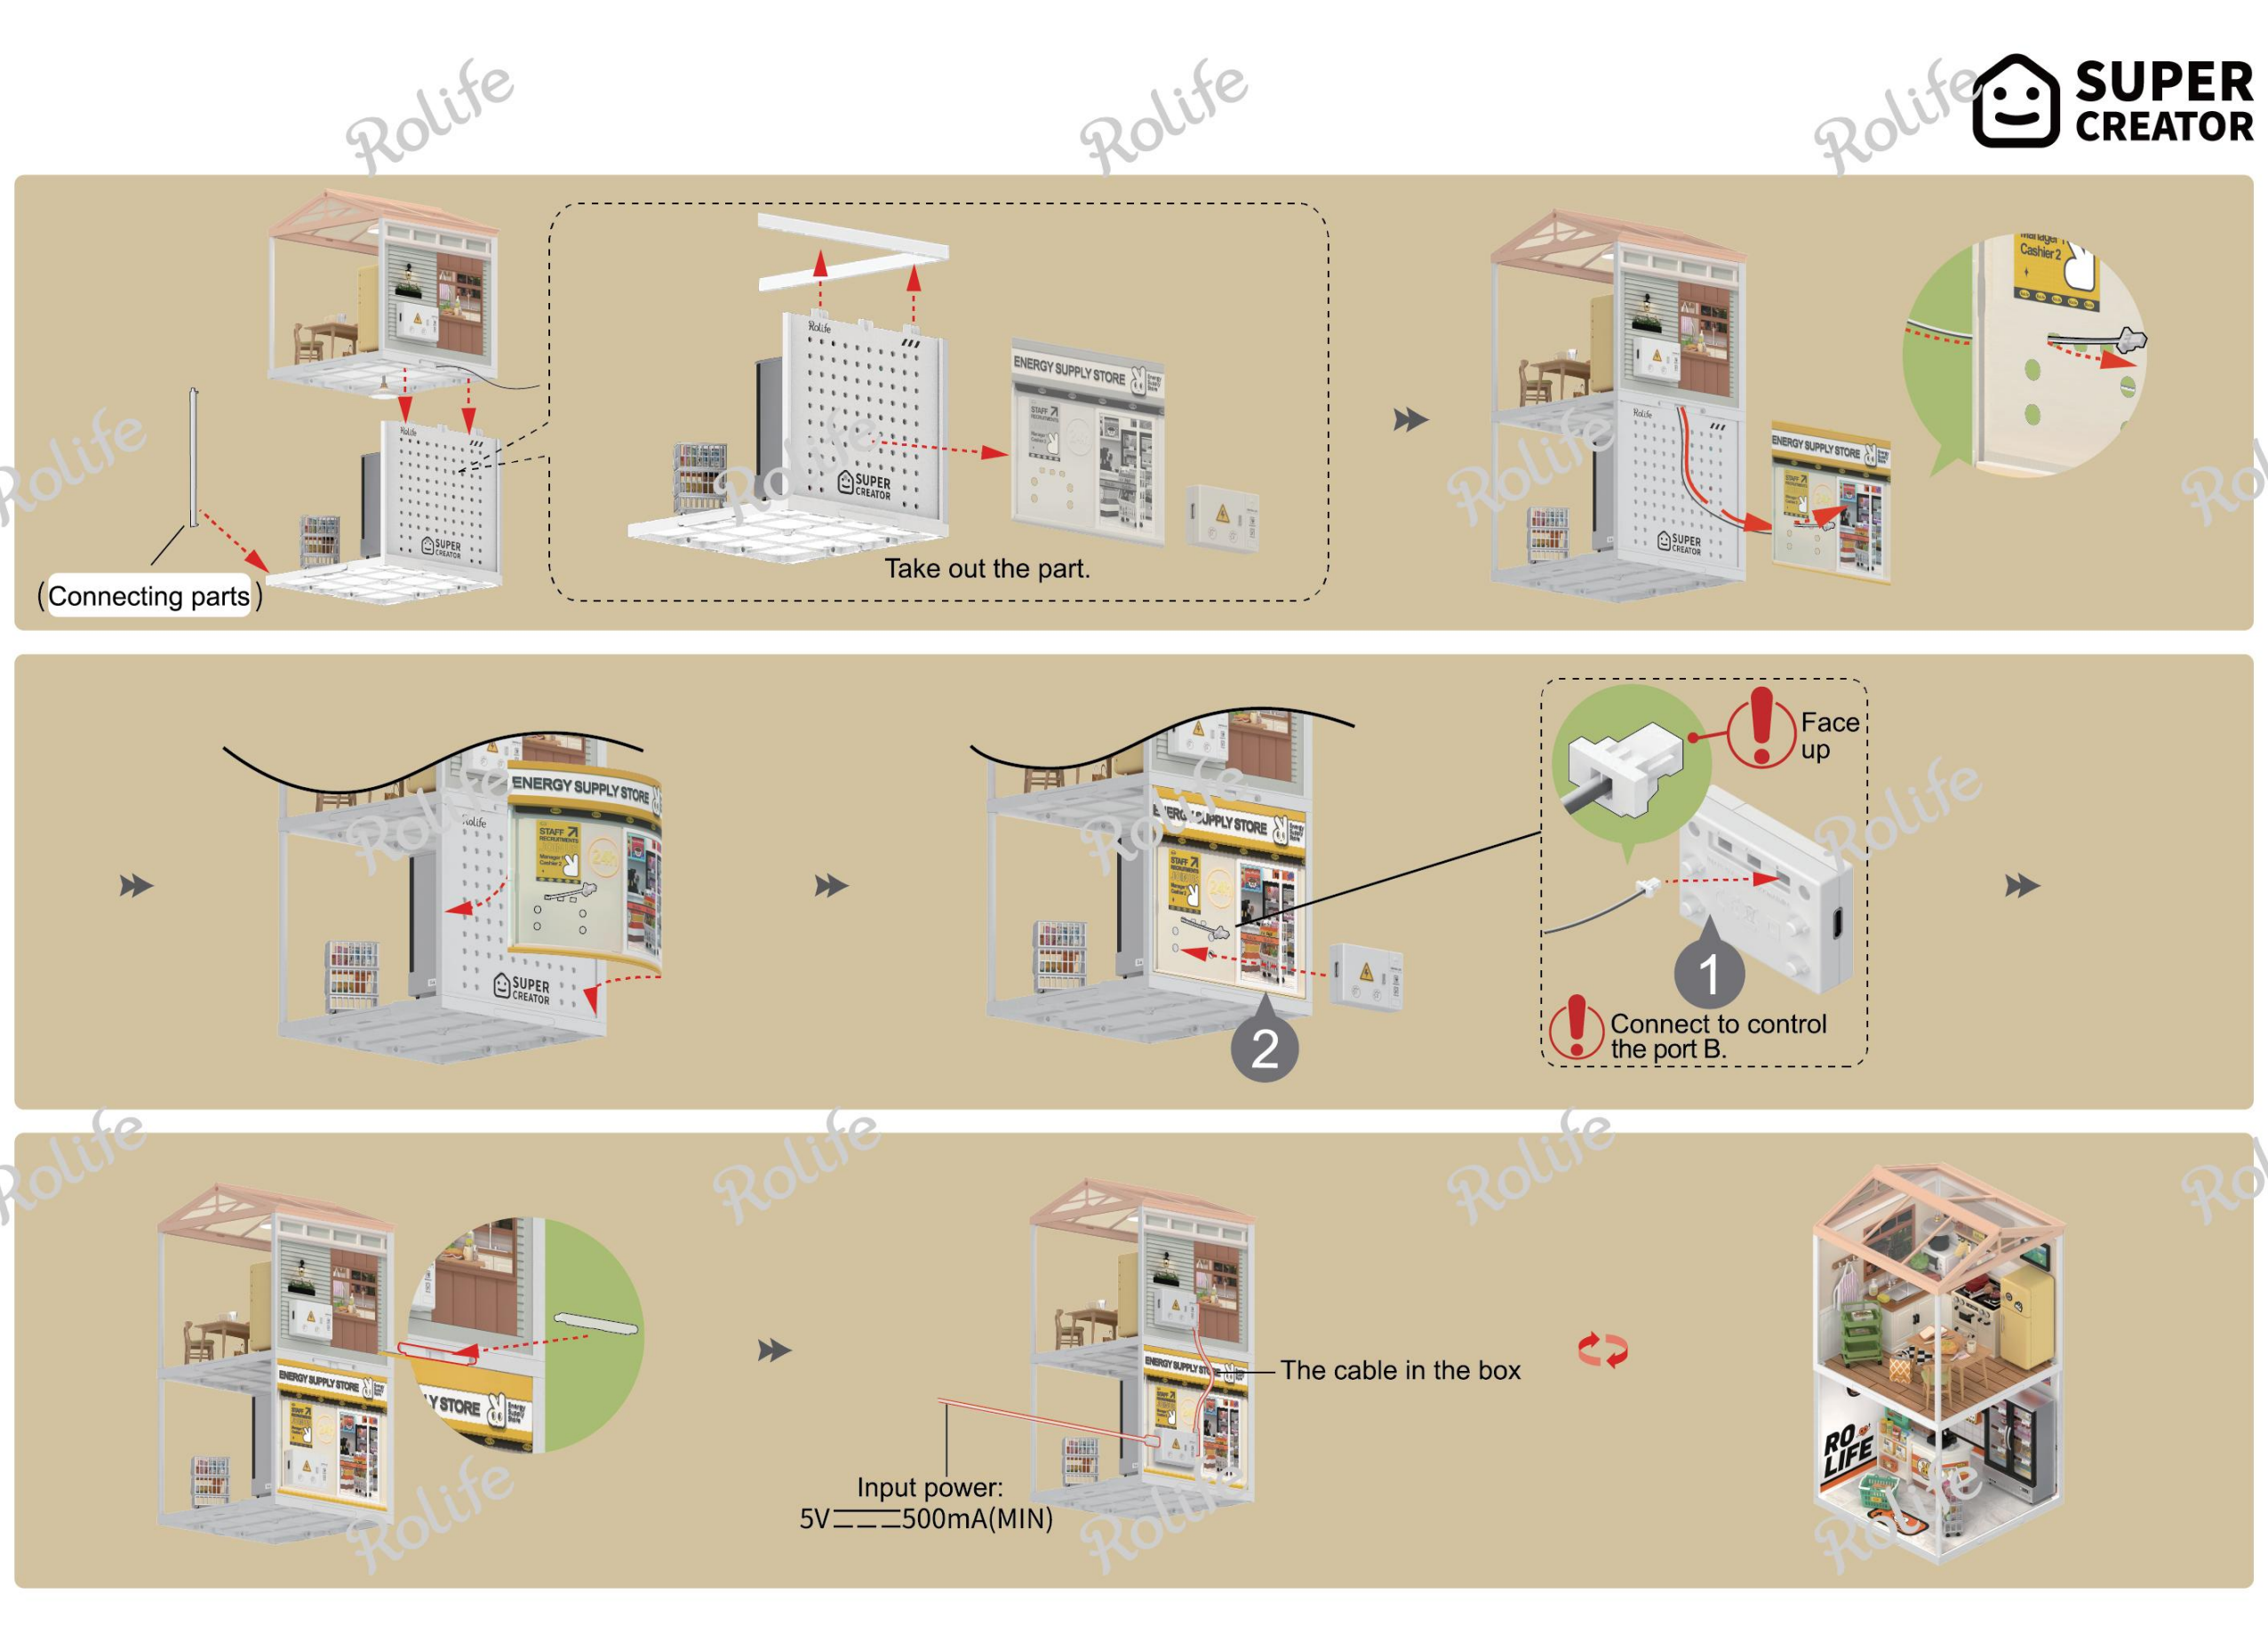
Connecting parts
Take out the part.
Face up
① Connect to control the port B.
②
Input power: 5V ⎓ 500mA(MIN)
The cable in the box.

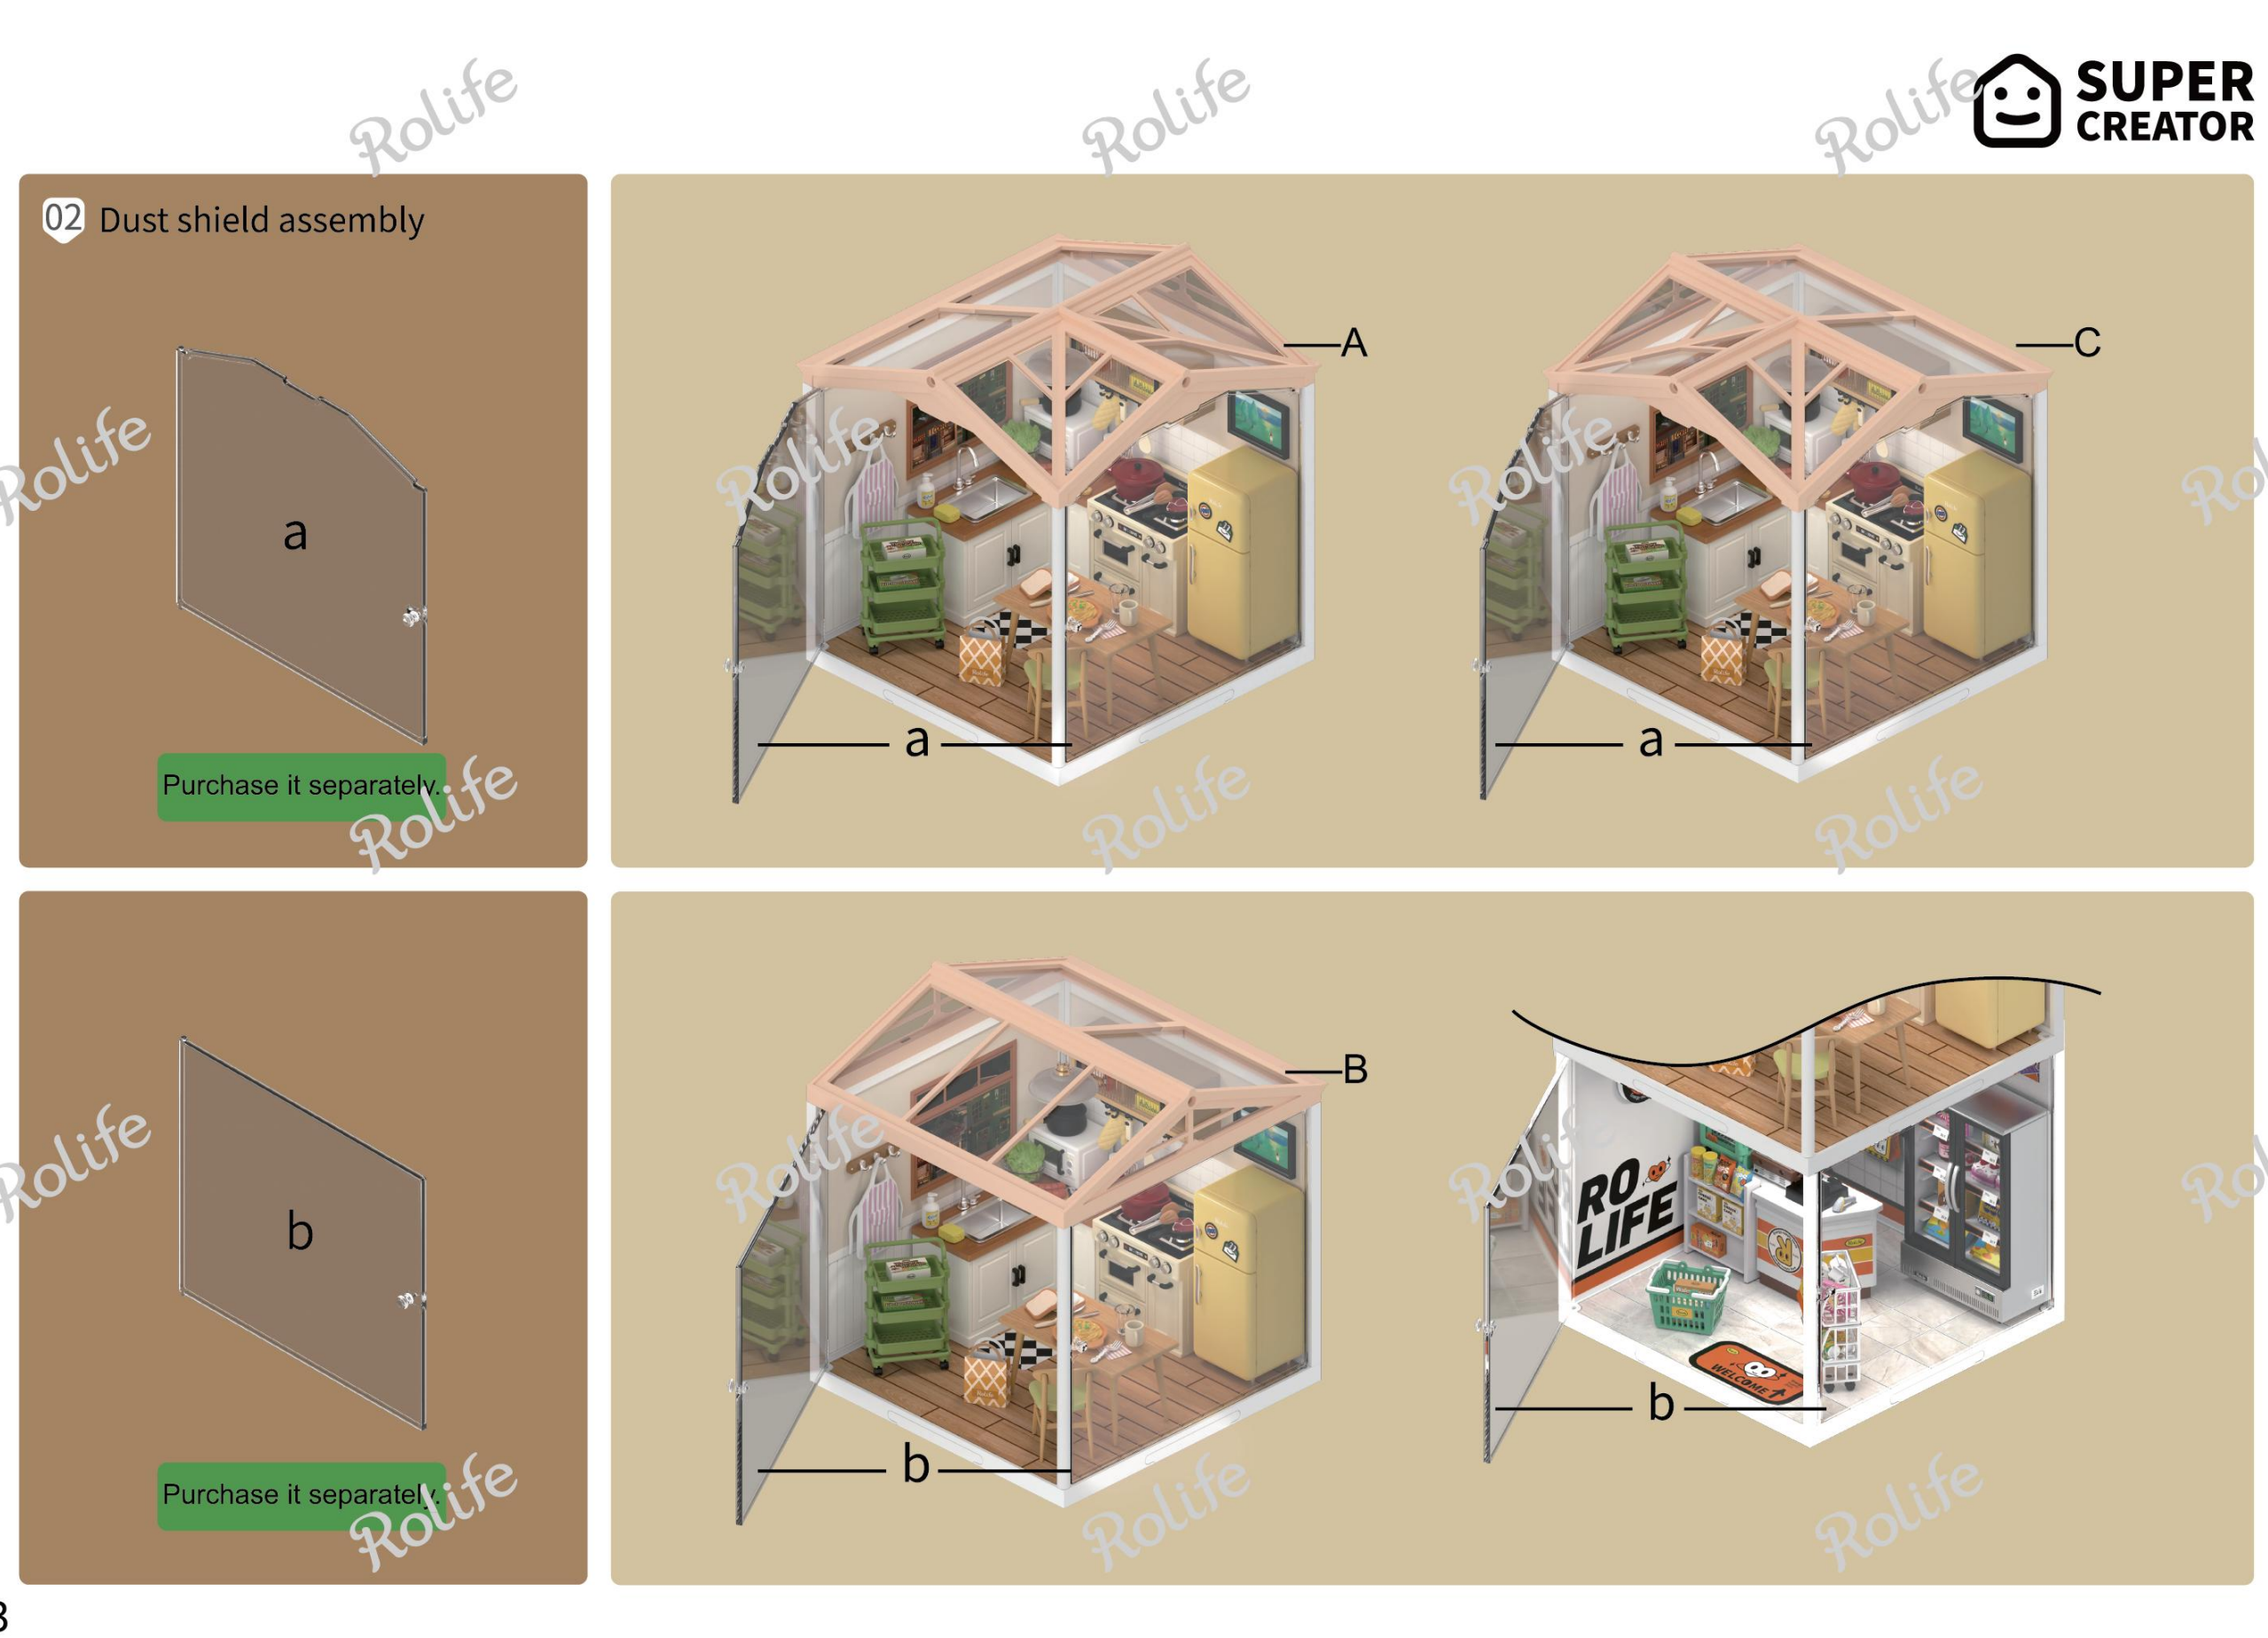
02 Dust shield assembly
a
Purchase it separately
A
C
a
b
Purchase it separately
B
b

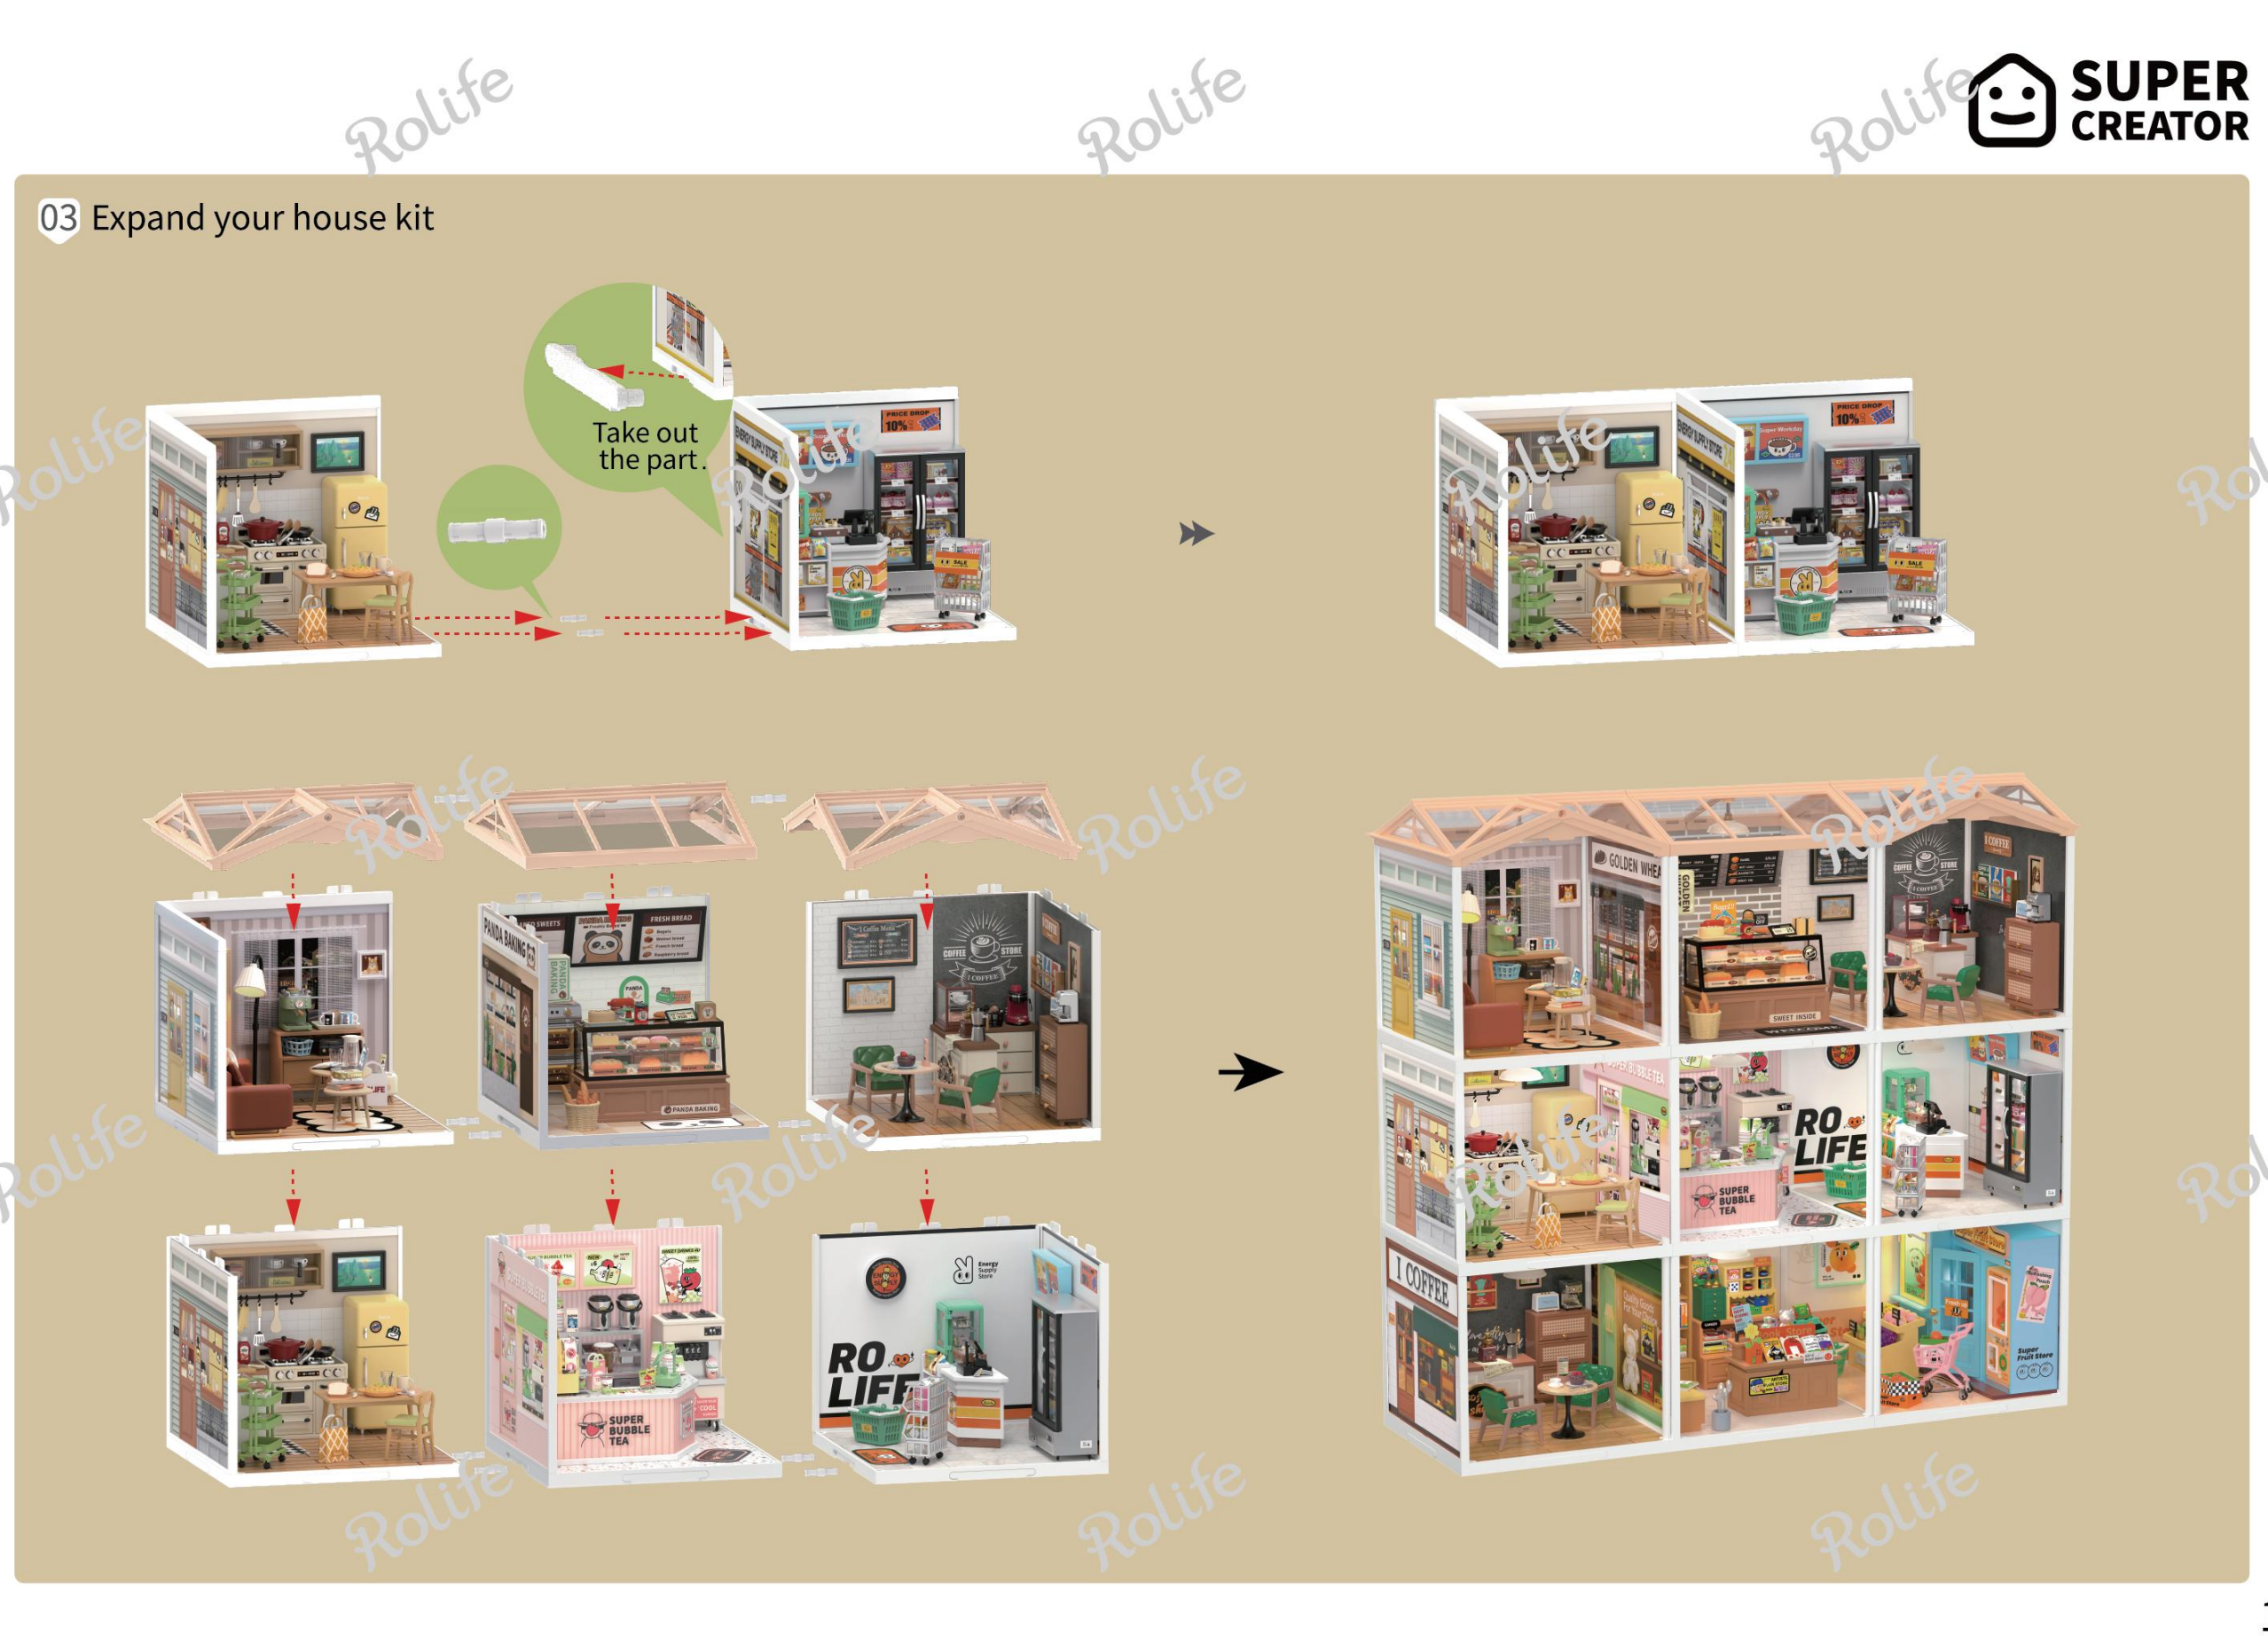
03 Expand your house kit
Take out the part.

MANUFACTURER:
Robotime C&C (Jiangsu

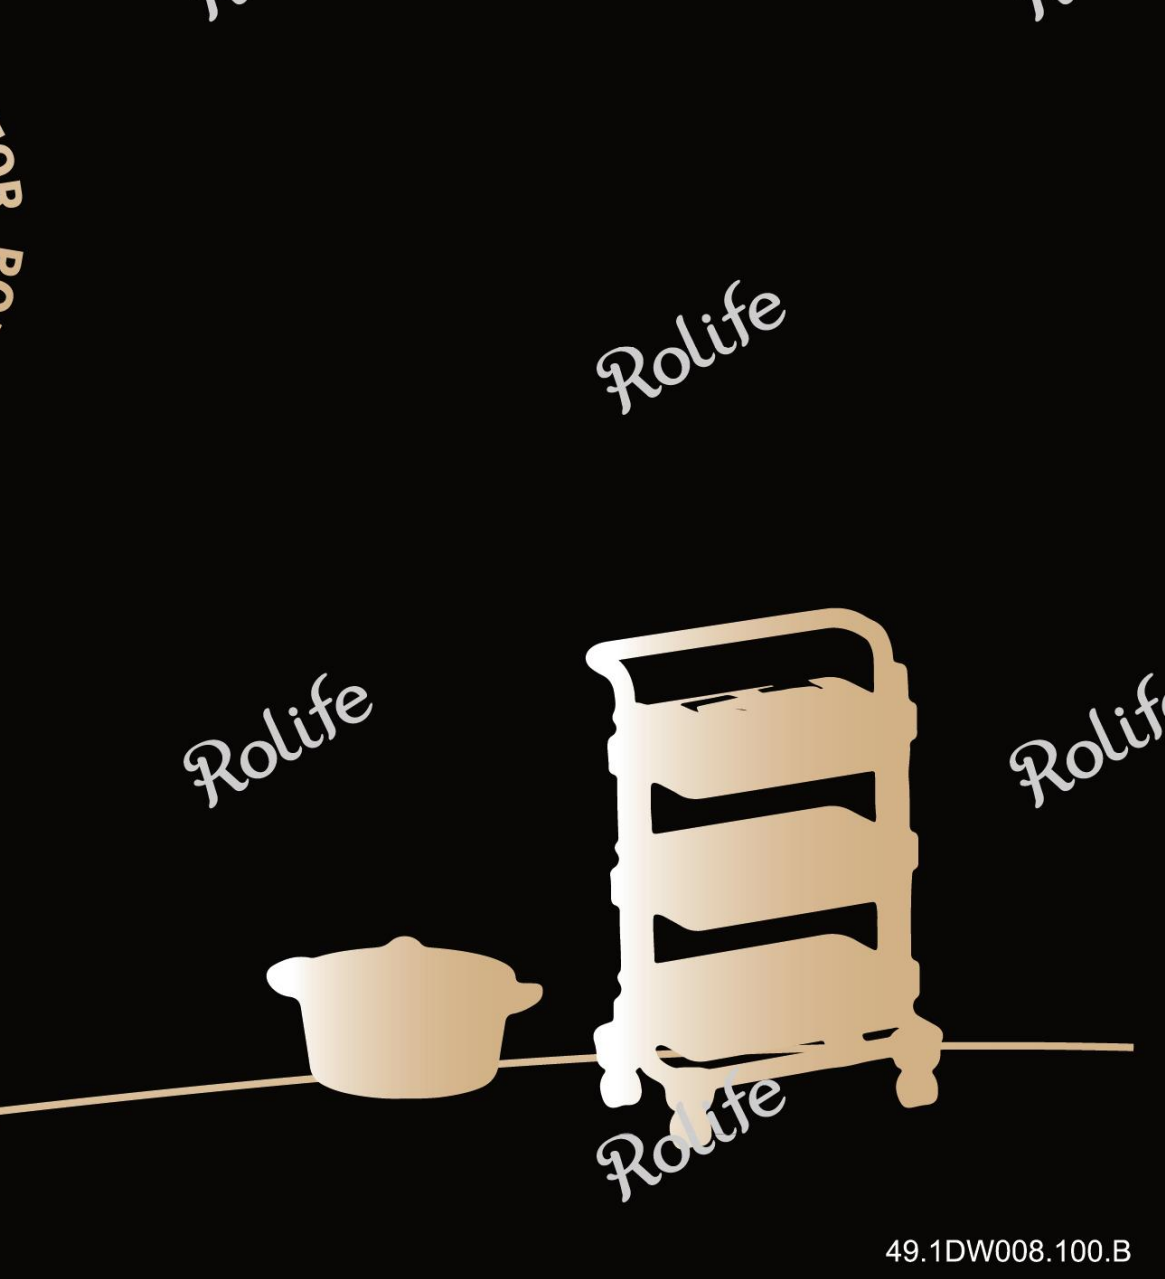ADDRESS:
No. 18 Changxing Road, Shuyang, Suqian City, Jiangsu Province, China