

WARNING:
The product is for people who include and over 14 years old.
Kids should assemble under the guidance of adults.

MAINTENANCE:
Keep the product away from the source of ignition and don't soak it into water.
Don't use chemical solvent like alcohol, ammonium hydroxide or cleaning agent to clean the product.
Use clean and soft fabric to clean the product. Polish the part edge with sandpaper.

Email: service@robotime.com


ROKR Facebook


store.robotime.com

! Special attention in assembly.

⚙️ Ensure the connection of gears running smoothly.

🕯️ Wax the gray part with remind.

👉 Polish the parts with sandpaper.

2 Complete 2 same parts.

🖨️ Printed side

👤 Blank side

1 Step 1

2 Step 2

🔄 Perspective conversion.

Parts List *Due to customs policy in international shipping, the wax and glue may not be included. Please prepare them yourself.

Item	Movement	Small Screw	T-Key	Metal Gasket	Big Screw	Nut	Small Acrylic Tube	Big Acrylic Tube	Screwdriver	Tape	Round Sponge Pad	Square Sponge Pad	Spring	Bead	Wax	Sandpaper
Number	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12	P13	P14	P15	P16
Illustration																
Quantity	1	3	1	1	3	3	1	1	1	6	1	5	1	1	1	1

1

! Arrow on B4 should be alignment with it on B2.

2

! Align the movement with impression.

🔄 Perspective conversion.

! Hold the movement by hand and align the holes.

! Overlap E3 on P4.

🕯️ Wax the gray part.

3

! Insert the gear with ring into the hole of B3.

Wax the double sides.

4

! Wind up the gear and ensure the connection of gears running smoothly.

! Ensure the connection of gears running smoothly.

5

! Ensure the connection of gears running smoothly.

Scan for assembly video.


6

! Ensure A9 insert to the right place.

! Tear off protective film from P8 at first.


49.1AMK52.100

7 ! B10 is easy to break, please be careful.







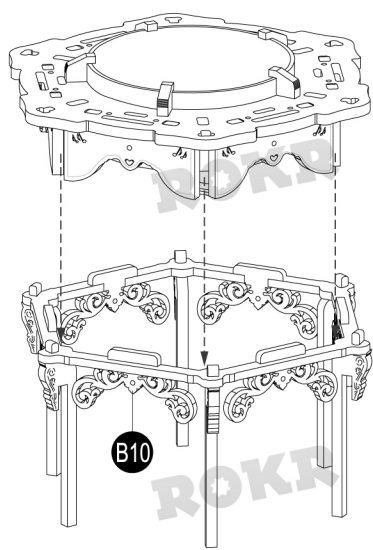


- 1 A4
Press C1 into the right place.
- 2 C1
Align A4 and A1 clasp.
- 3 A4
Align P8 and C3 clasp.
- 4 P8
Align P8 and C3 clasp.

! Align the holes of C1 and A8, then press it.
If you couldn't push C1 to the right place, you need to check if side clasp is in the right place.

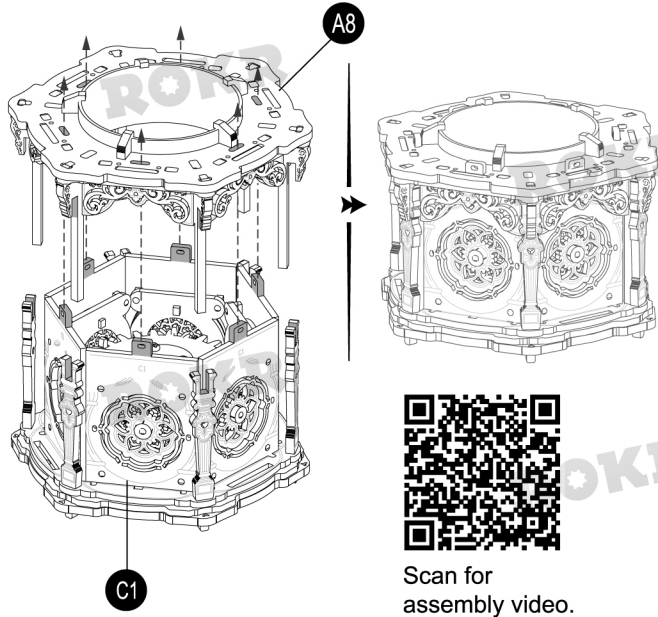

8

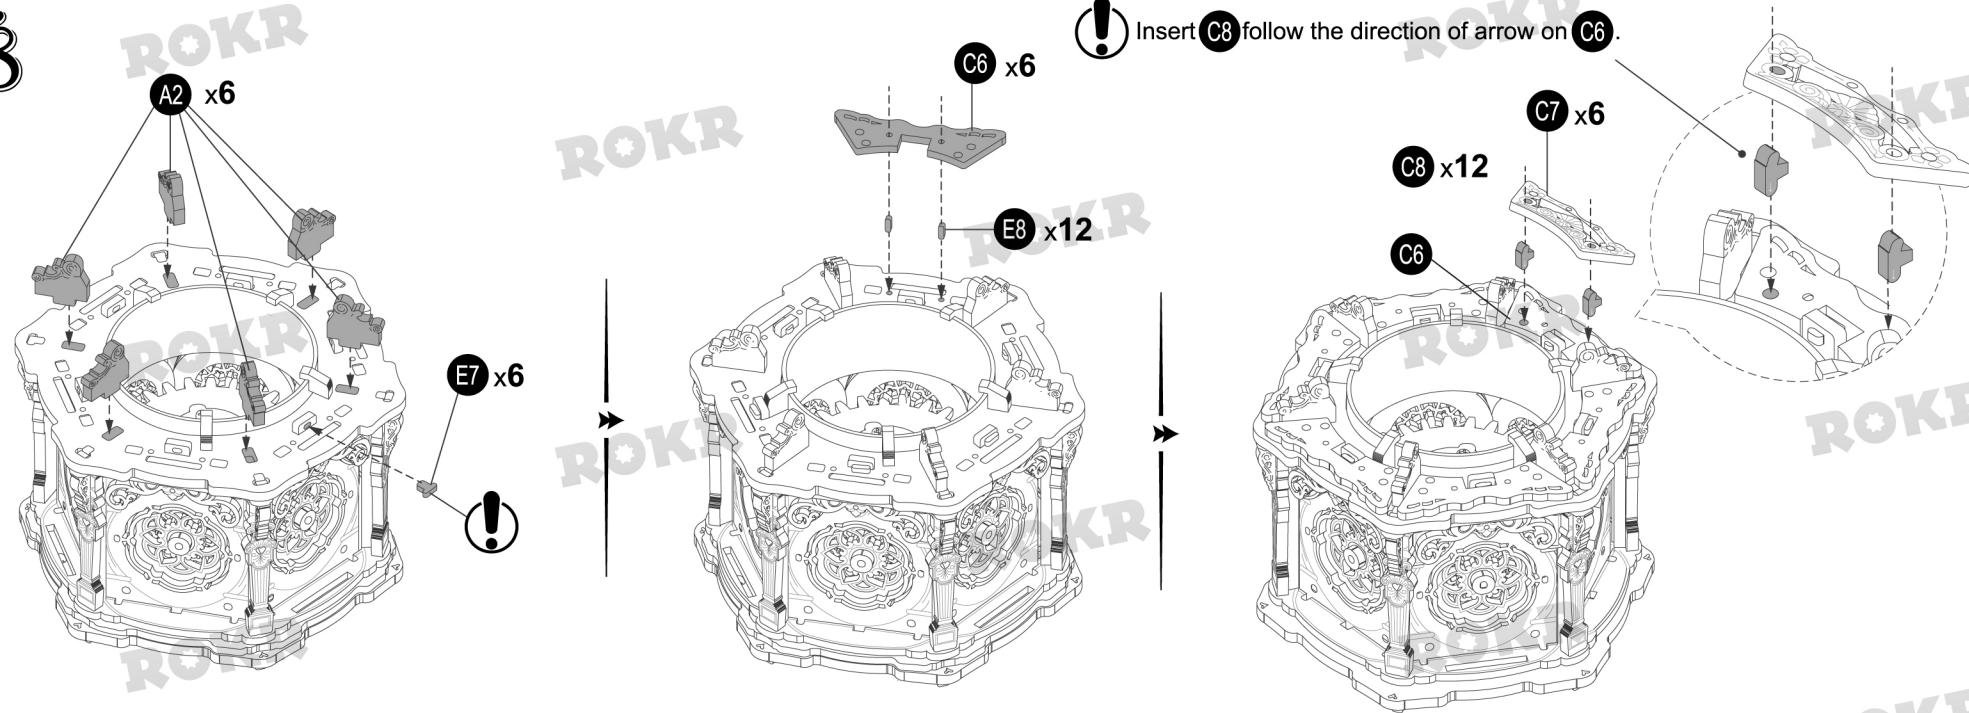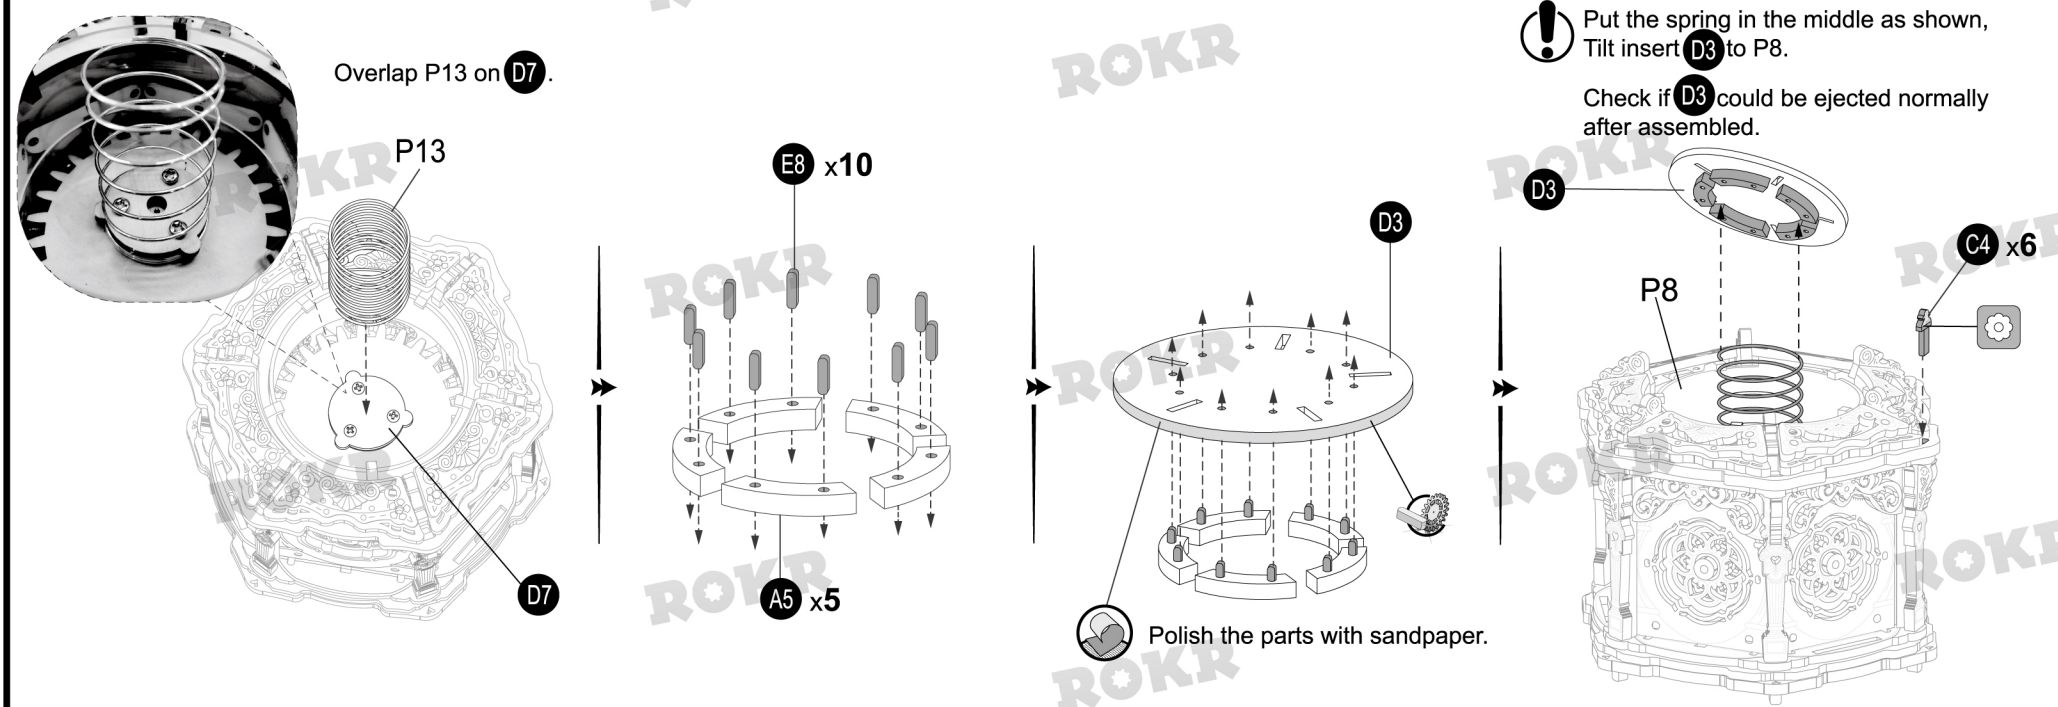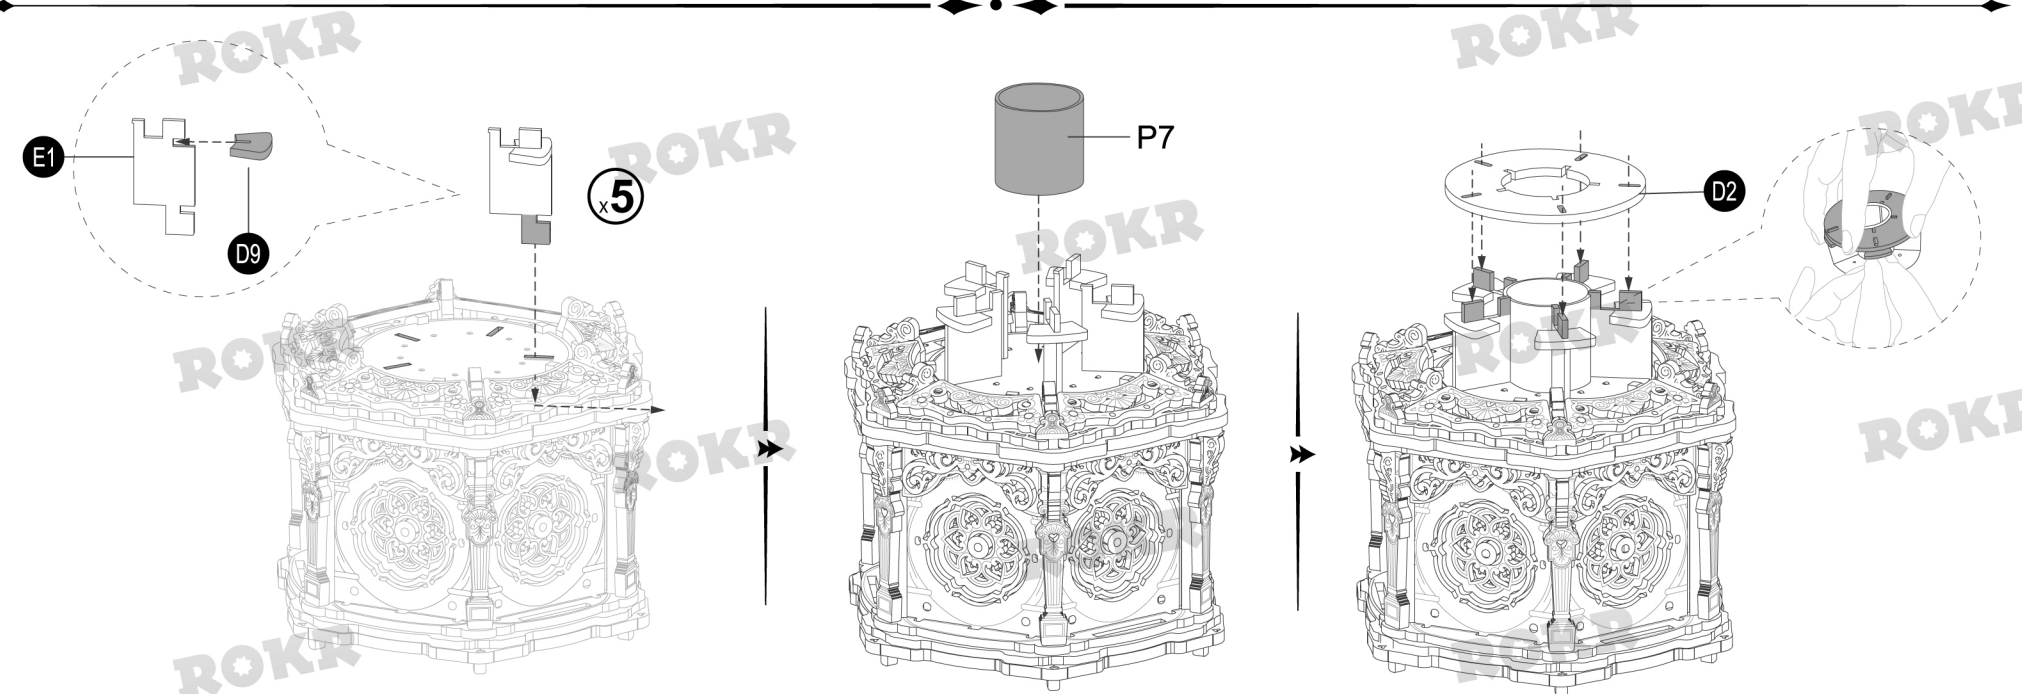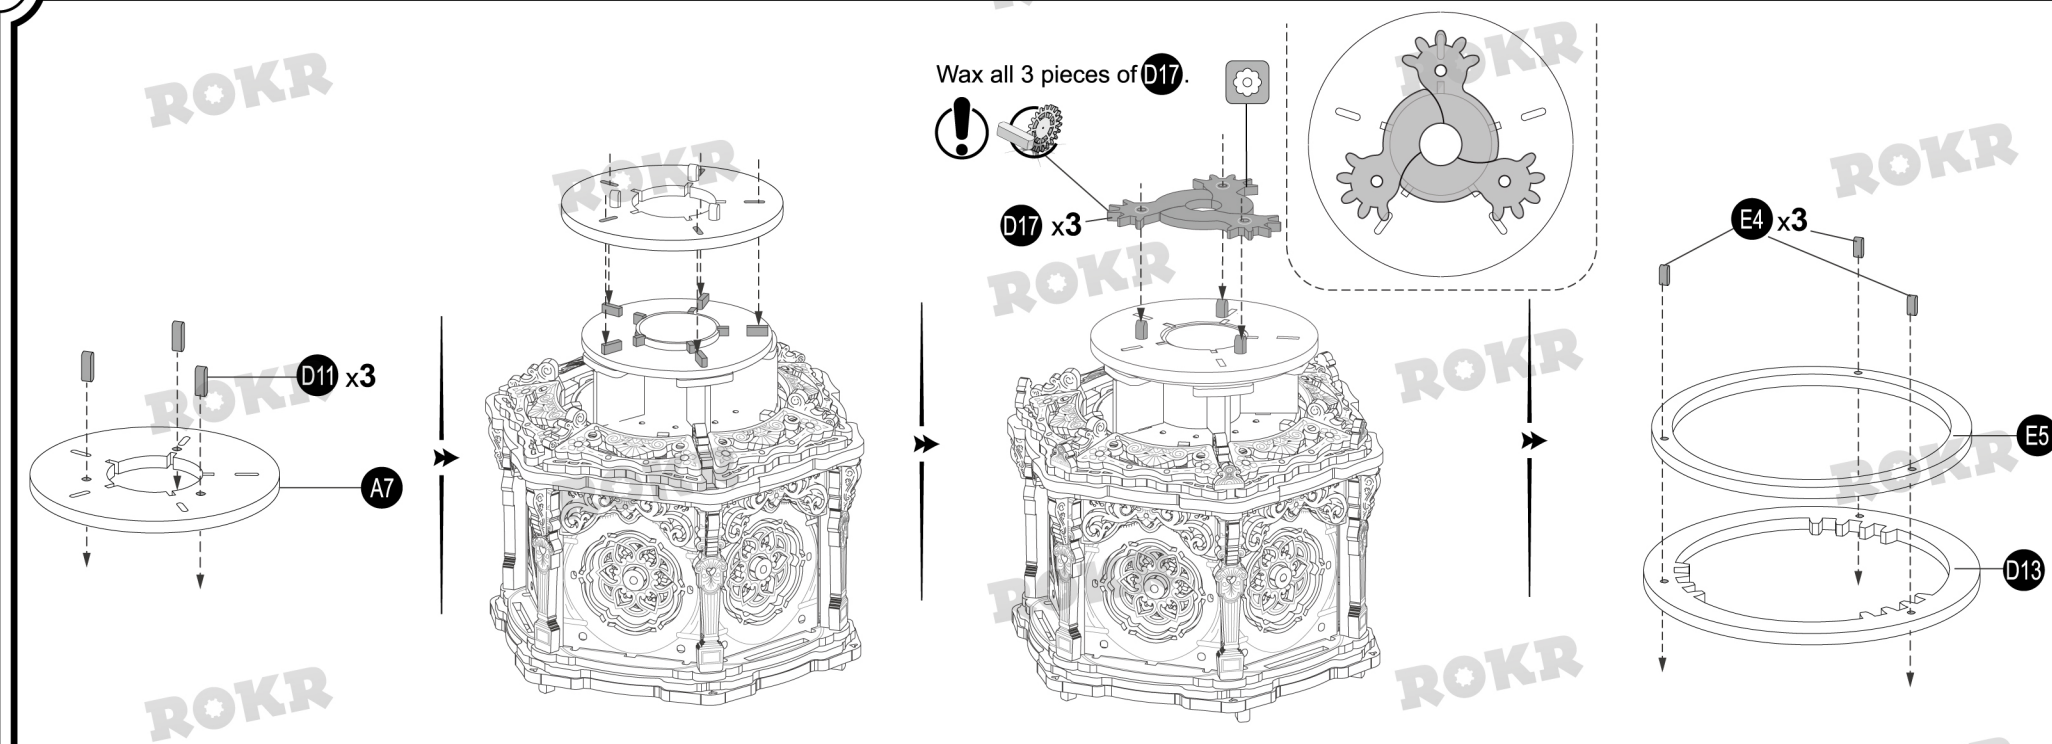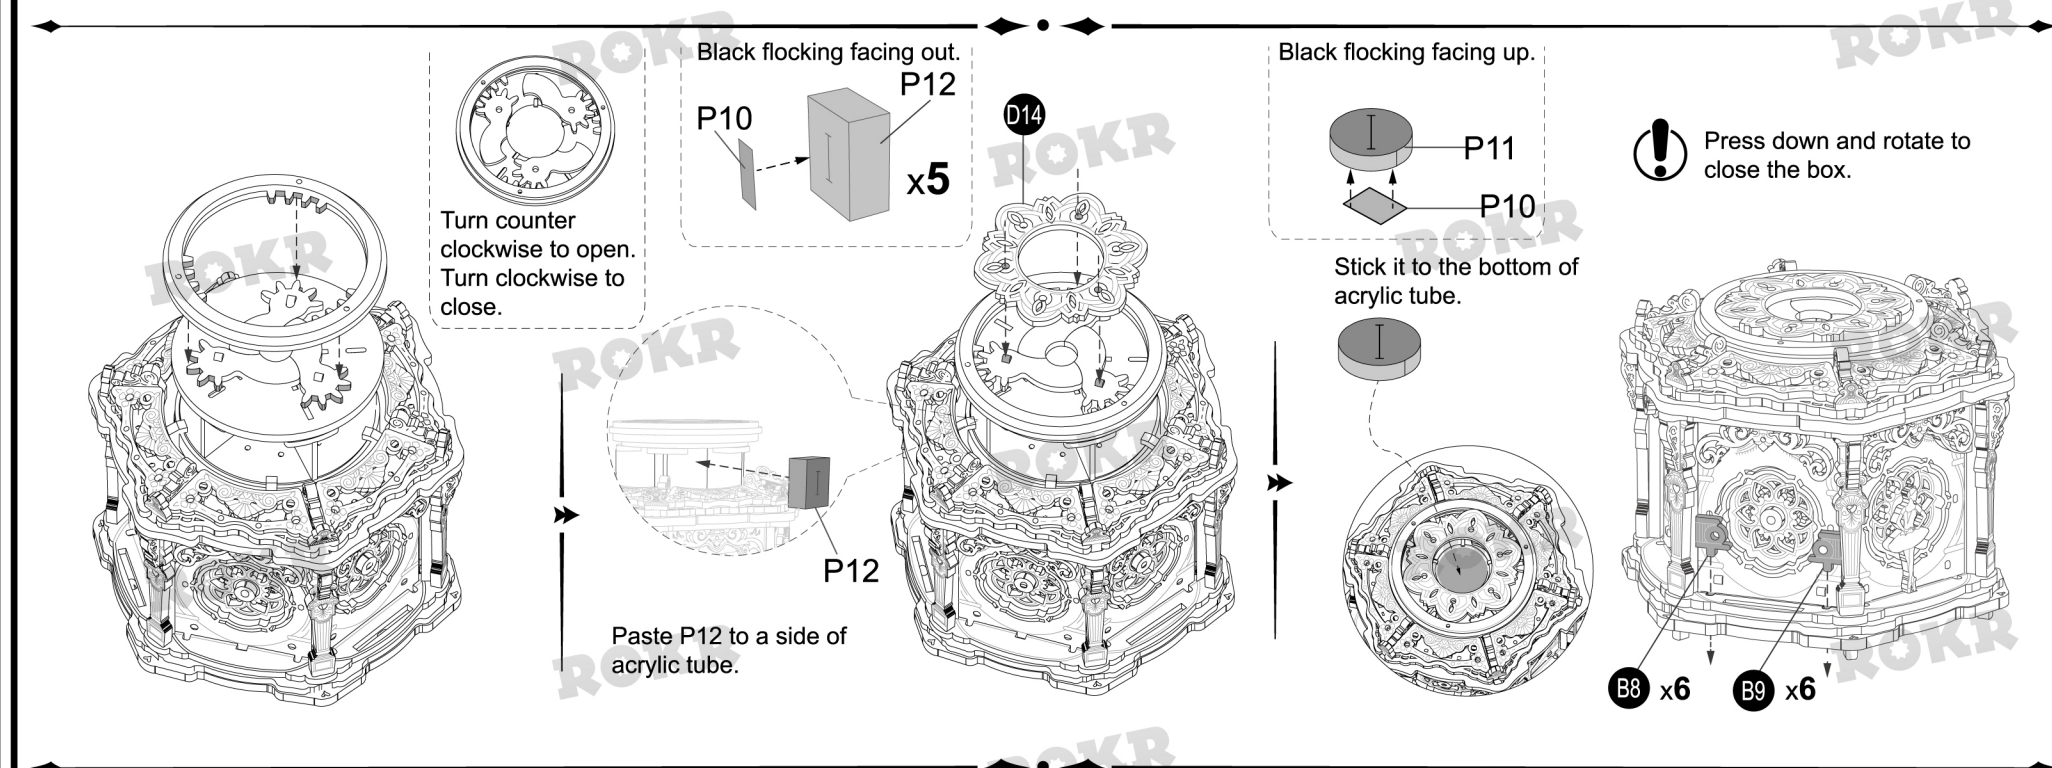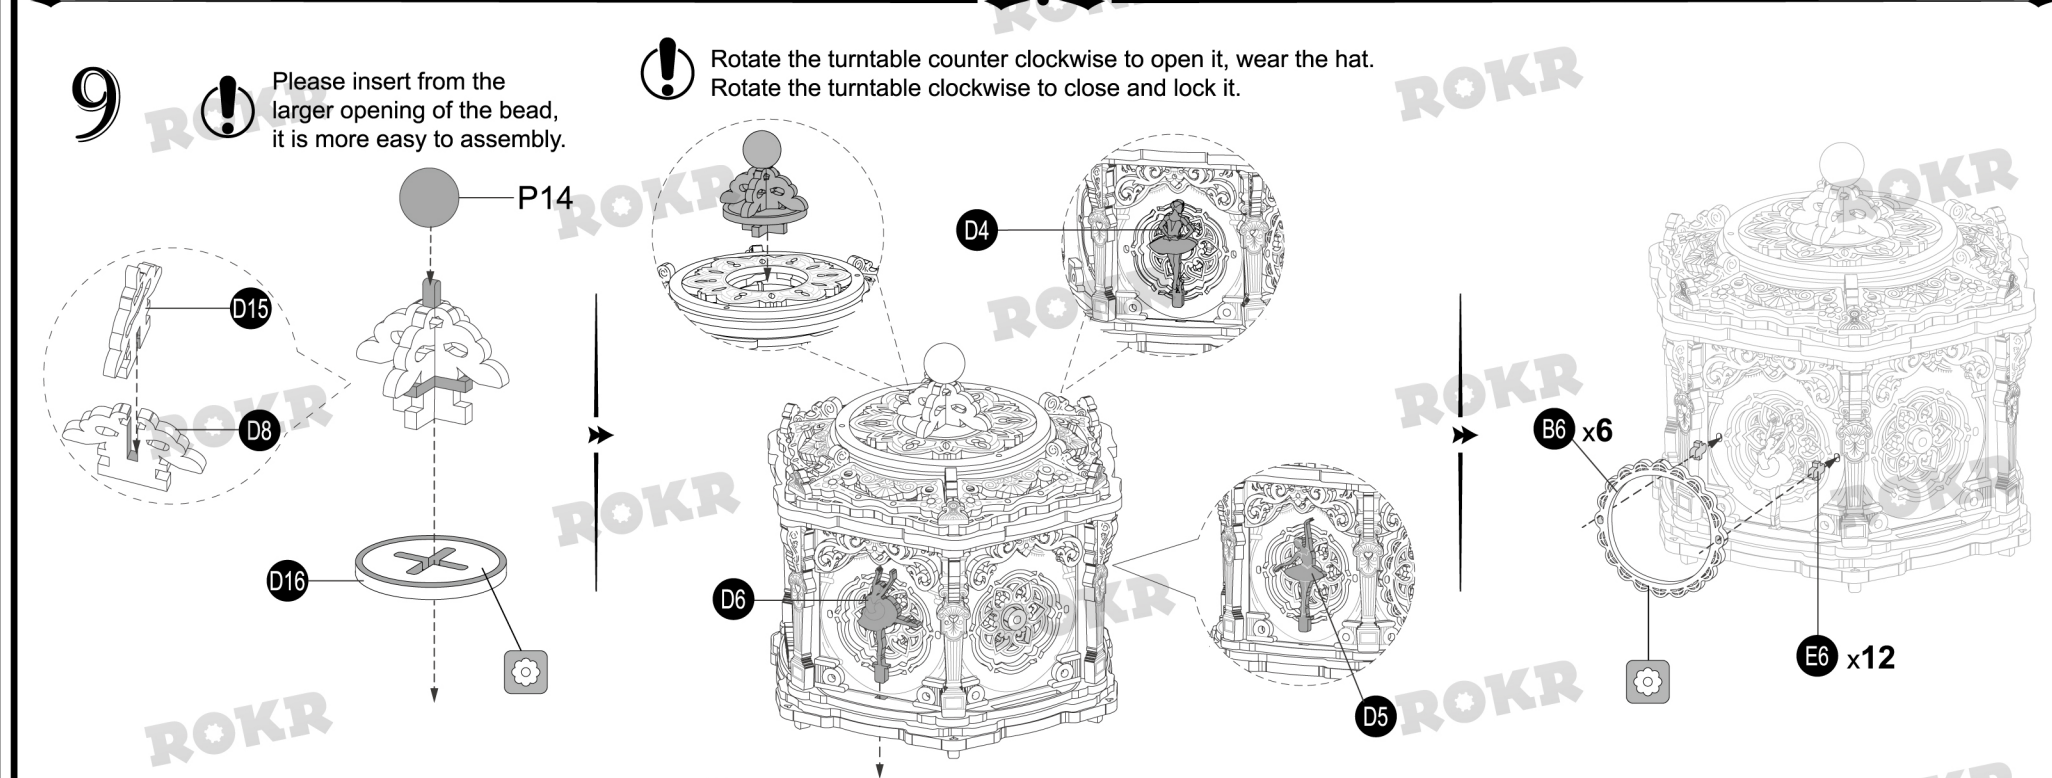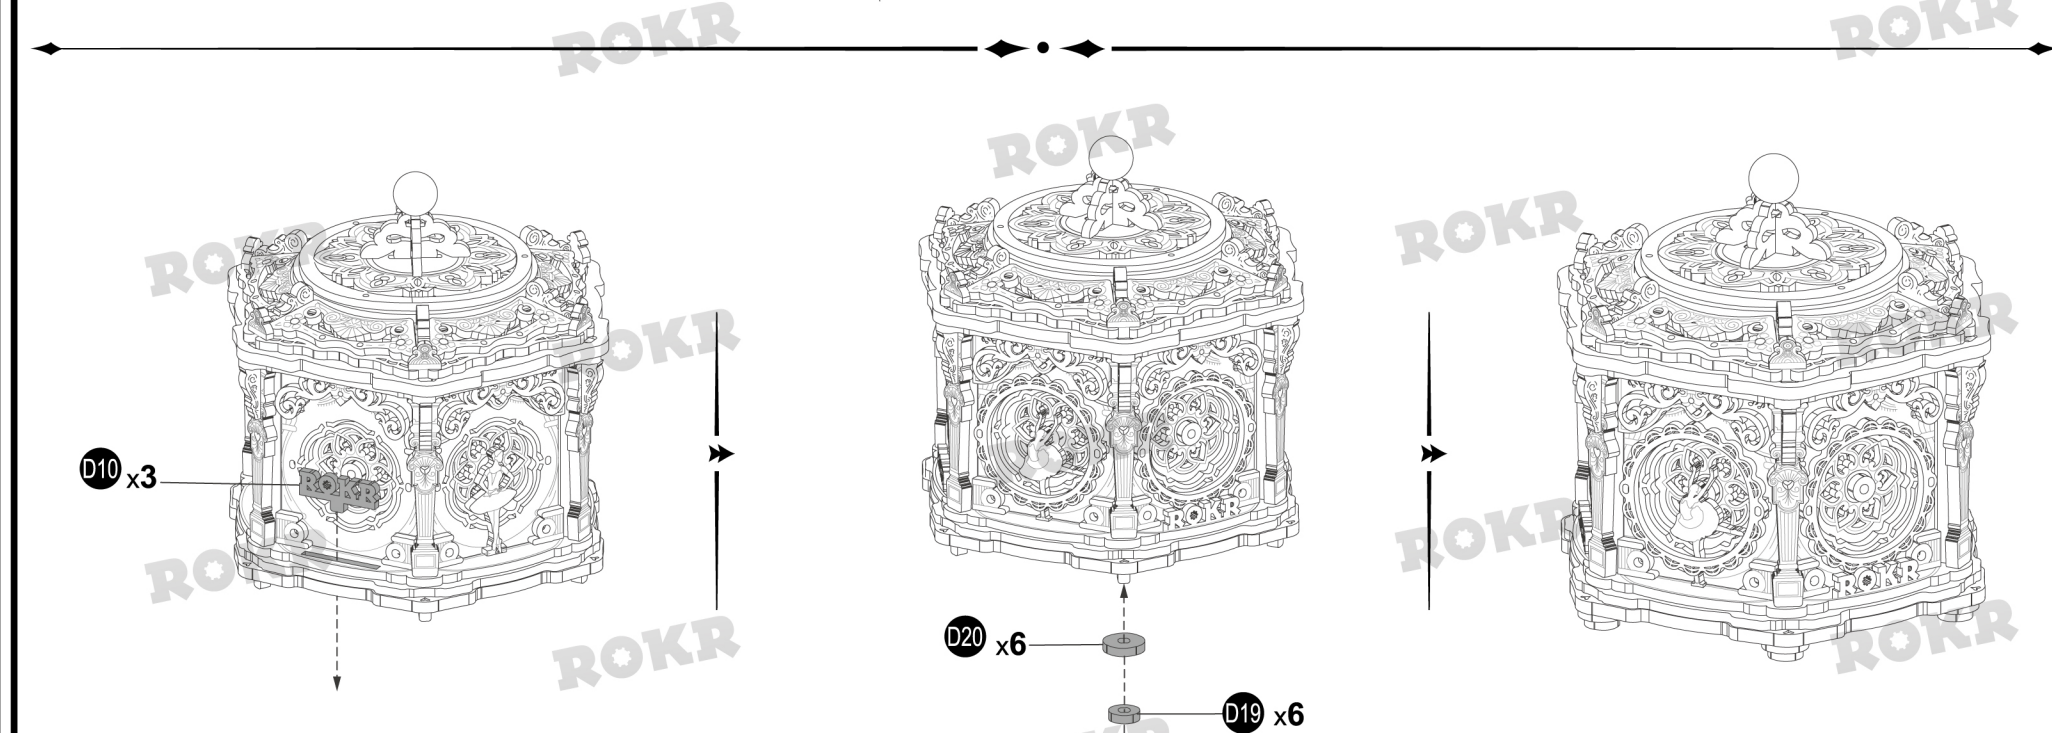

Completed