

Designed by **ROBOTIME**
www.robotime.com
MADE IN CHINA
49.2TGB02.100.C

Rolife

Sunshine TGB02 Town

Pictures for reference only. Please subject to our existing products.



WARNING


- The product requires 2"AAA/LR03/AM4 1.5V" batteries (batteries for self-preparation).
- Before loading or removing batteries, please loosen screws on the cover of the battery box with the screwdriver first.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity (+ and -).
- Remove the exhausted battery in time.
- The power supply terminal cannot be short circuited.
- Do not connect the wire to a mains outlet.
- The product is not to be connected to more than the recommended number of power supplies.
- Check each part before assembly. If the part is damaged, fix it well before assembly.
- Please keep the product away from substances flammable and humid environments to prevent damage.
- The instruction must be retained since it contains important information.

ATTENTION

- The product is suitable for children age 14+. Children should be accompanied by adults while assembling.
- Some small parts and electronic components are included, and children must assemble under the guidance and supervision of adults in case of swallowing by mistake or choking.
- Some auxiliary tools are required to assemble. Please choose reasonably to avoid injury.
- Please read the instructions carefully before assembly to confirm that the parts are not damaged or missing.
- Please carefully cut the parts and make sure they are firmly pasted when using glue.
- Please install the electronic components correctly and test whether the circuit is normal after completion.
- Please don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- Please clean the product with clean soft cloth, and sand the board burr lightly with sandpaper.
- Glue is a gift not for sale. If it becomes dry or excessive glue due to time or environmental problems, you can use your own glue to assemble.

★ Due to customs policy in international shipping, the batteries, glue or pigment may not be included. Please prepare them yourself.

Equipped with 3 controllable lights

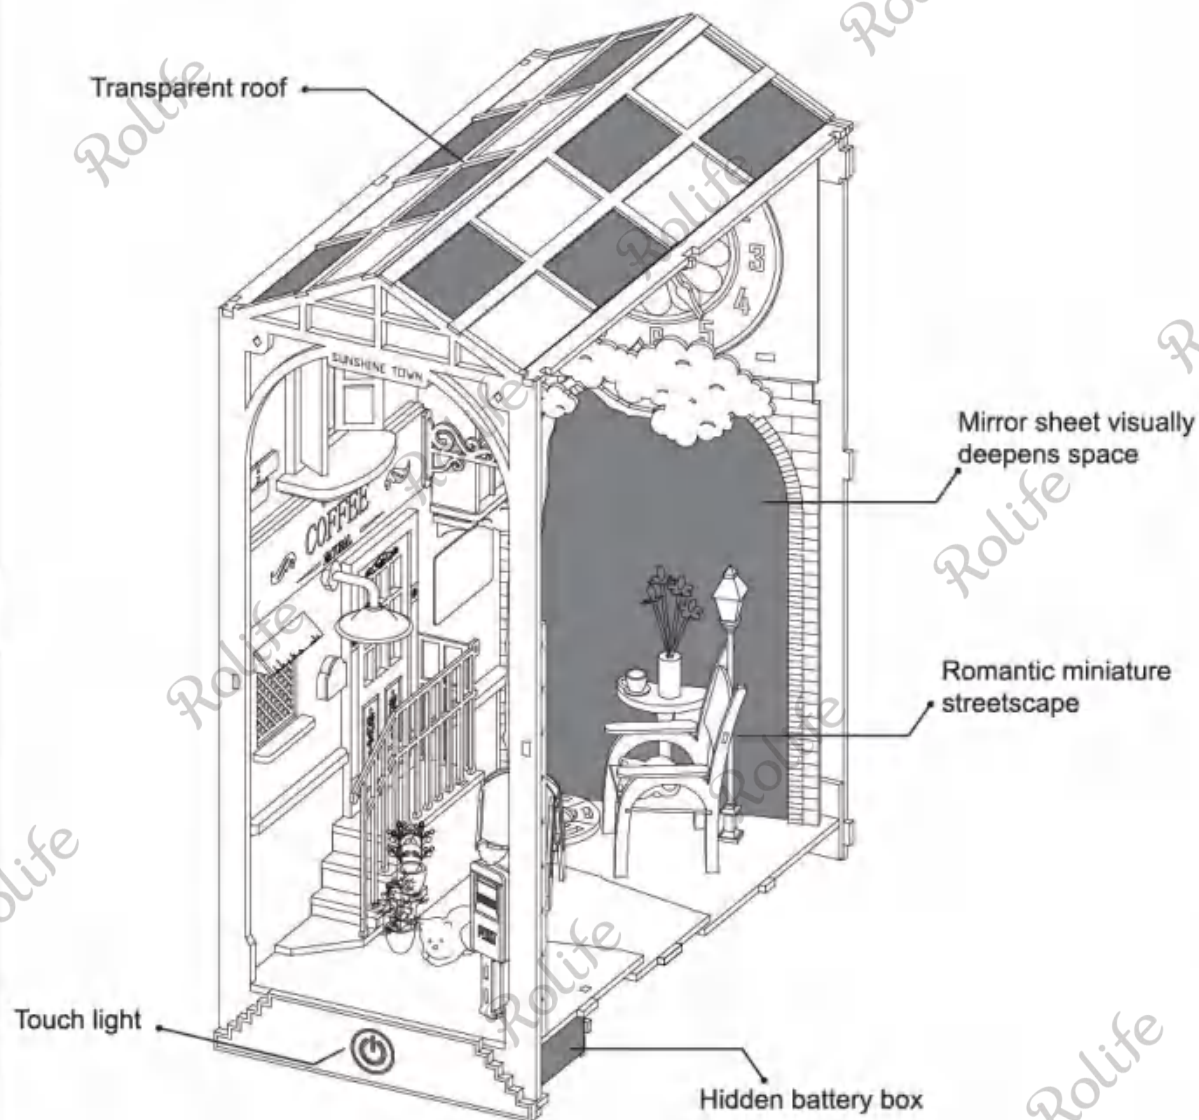

Parts list

Bag No.1

Name	Battery box	Warm light lamp (White-yellow wire)	Warm light lamp (Black-red wire)	Screw	Street lamp
No.	P1	P2	P3	P4	P5
Picture					
Quantity	1	1	1	2	1

Bag No.2

Name	Lamp-shade	Stamen	Screw-driver	White cat	Yellow cat	Flower-pot	Wood post	Saucer	Teacup	Tape
No.	P6	P7	P8	P9	P10	P11	P12	P13	P14	P15
Picture										
Quantity	2	2	1	1	1	2	1	1	1	2

Bag No.2

Name	Artificial fig
No.	P16
Picture	
Quantity	1

Bag No.3

Name	Coral grass
No.	P17
Picture	
Quantity	1

Name	Heat-shrink tube	White latex	Brush	Mirror sheet	Paper-cut	Pigment
No.	P18	P19	P20	P21	P22	P23
Picture						
Quantity	1	1	1	1	1	1

Q&A

Q1: How to assemble flowers into flowerpots & vases?

A1: Cut flowers in different sizes according to illustrations. Apply some glue on the holes and sides of flowerpots. Wait until it gets dried.

Q2: How many times should the shaded areas be painted?

A2: The main color of this product is white. Please paint 2 or 3 times until it gets close to the white board.

Q3: Do all shaded areas need to be painted?

A3: Because some blind spots cannot be seen. Paint all visible borders white of the parts except for some special annotations.

Q4: Some words of parts are reversed and how to handle it?

A4: All words will look normal in the mirror sheet after assembly.

Q5: Why are there some hints about glue when assembling the part J?

A5: Using too much glue on the part J will affect the appearance of completed products. So you should apply a dab of glue here according to illustrations.

Q6: What if the light cannot work after connecting the battery box with the lights?

A6: 1. Firstly, check the wires connection (connect the same color wires together). Then, check if you have loaded the batteries properly and if the switch is turned on.
2. Turn off the battery box switch. Then tear off the insulating tape. Check if copper wires are broken and reconnect the wires.

Instructions


1. The differences of P2&P3

Color	P2	P3
	Yellow-white wire	Black-red wire
Thickness	P2	P3
	Thin wire	Thick wire

2. Signs illustration

- Step 1 The printed side
 - Step 2 The blank side
 - Step 3 Notice
- Apply a dab of glue here and press 5s.


1 Please read Q&A in the previous page before assembling.

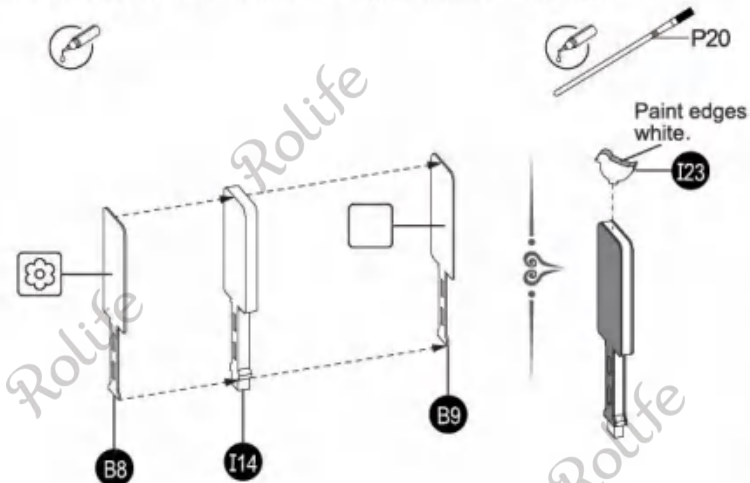


Paint edges
white.

Top view

—Apply
glue here




2

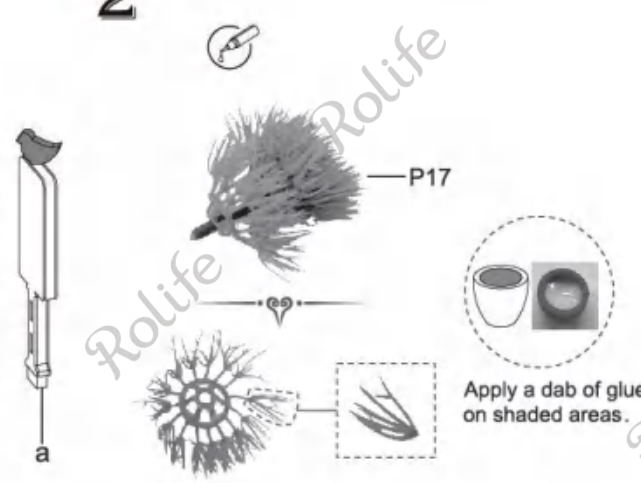

Apply a dab of glue on shaded areas.

Trim P17 at will. Fix with glue. Do not pass P17 through the bottom hole of P11.


3

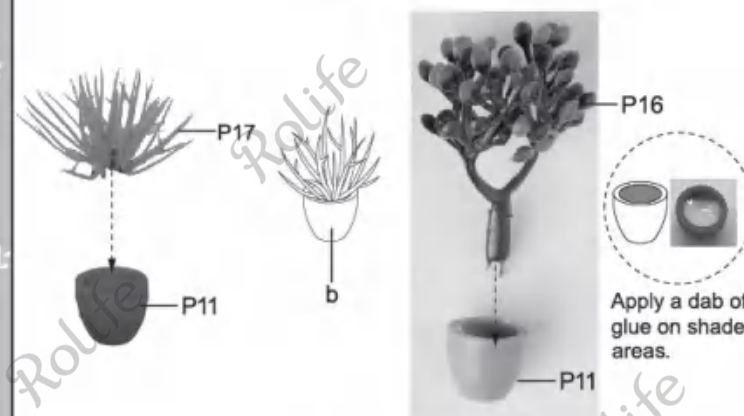


Apply a dab of glue on shaded areas.

Trim P16 at will. Then twine the bottom into one string. Swirl its end into P11 and glue.


① Cut the excess part. Then put the remaining into P11.

4  Do not paint the shaded areas white.

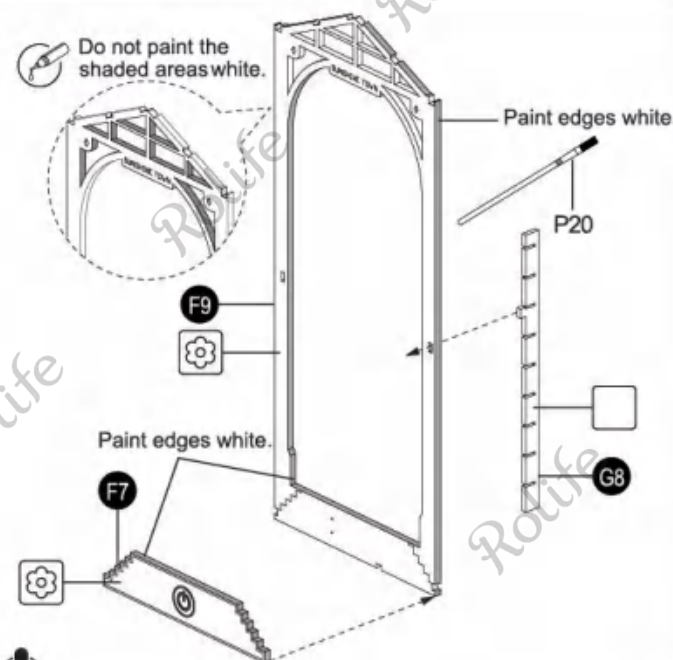


- Paint edges white

Paint edges white


 Glue along reference lines.

6

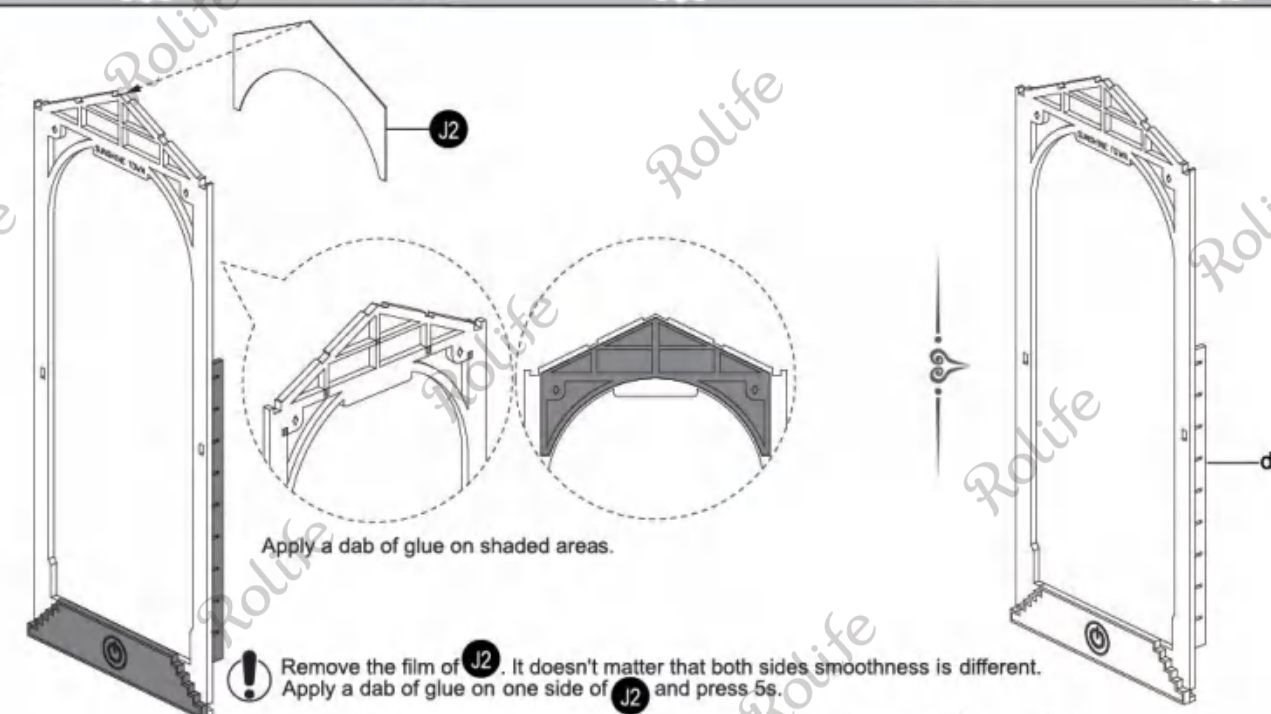


Remove the film of J2. It doesn't matter that both sides smoothness is different. Apply a dab of glue on one side of J2 and press 5s.

Cut P7 into 2 pieces based on the length as shown. Trim the flowers' shape at will.

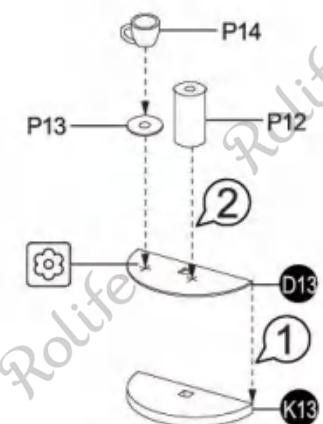



 Glue along location marks.

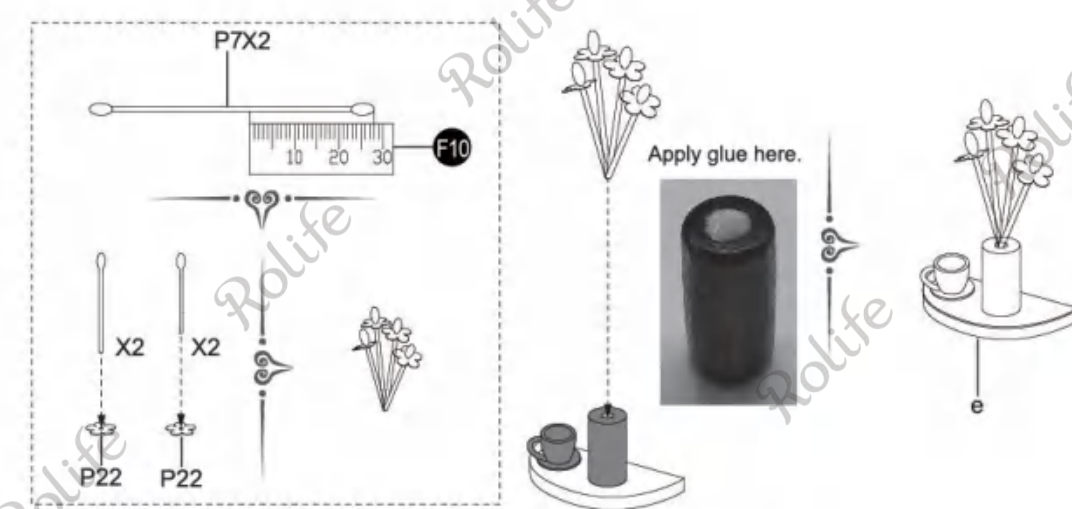




Apply glue here.

(I) Glue along reference lines.

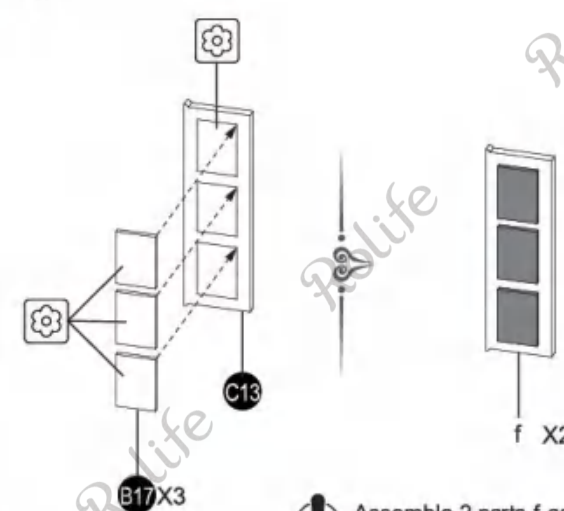


 Assemble 2 parts f as shown. Note that do not damage the projections at two ends.




7

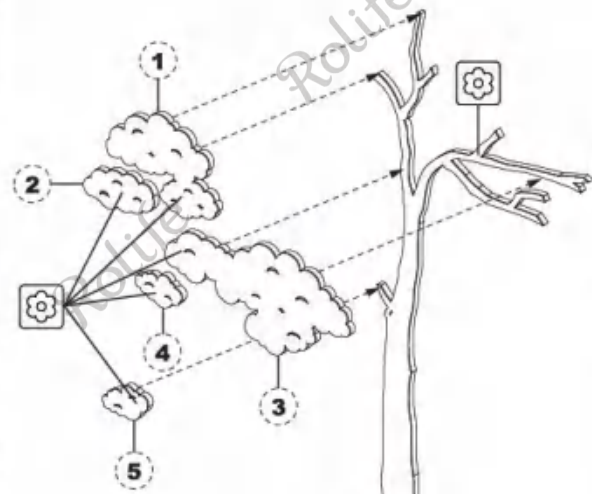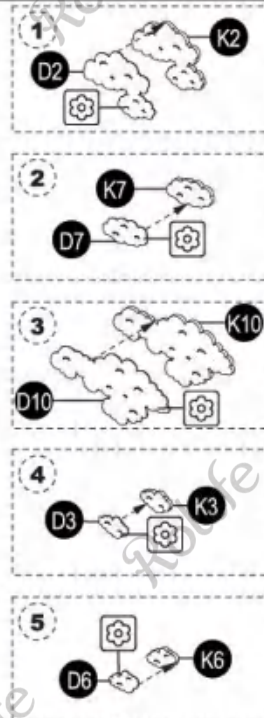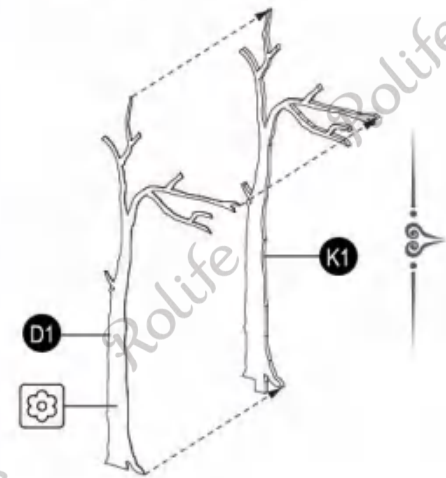

8

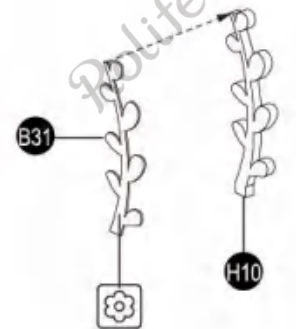




9

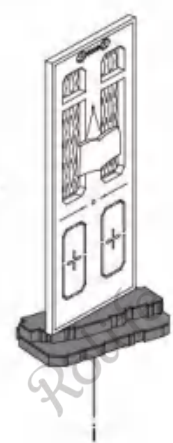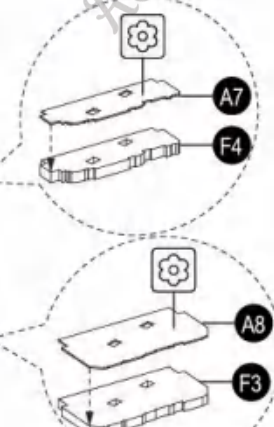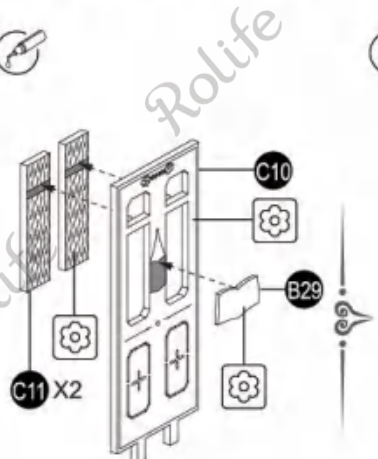

Align shaded areas and glue.

10

Paint all frames white except for the blank areas.





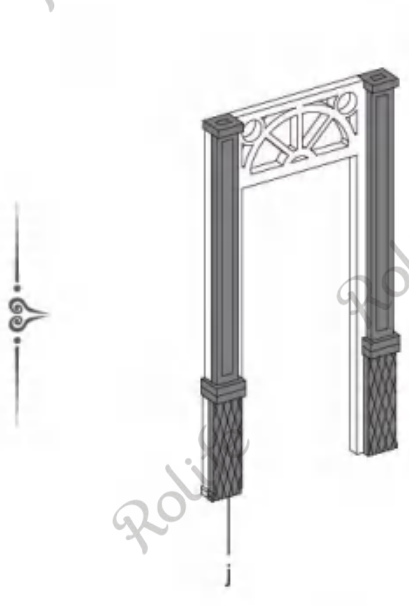
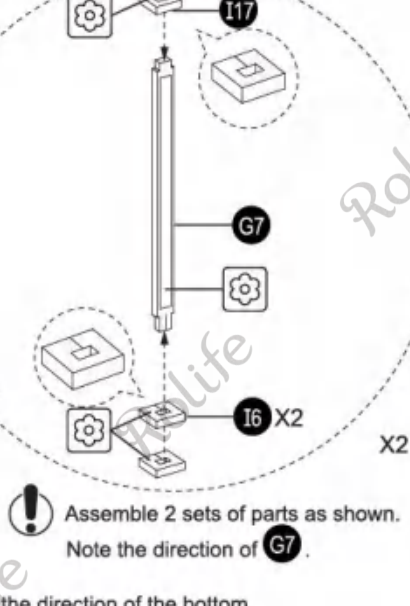
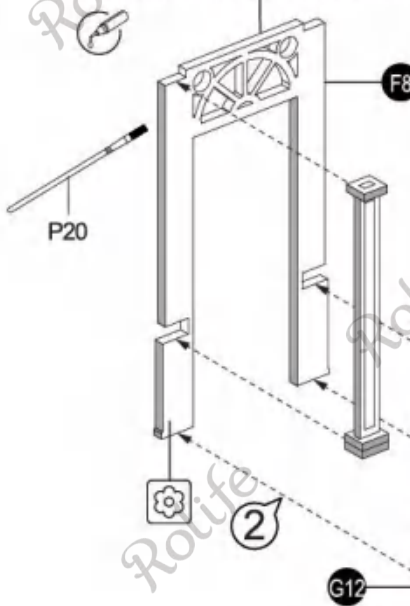


Paint all frames white.

Assemble 2 sets of parts as shown. Note the direction of G7.

Note the direction of the bottom bulges of G5 & G12.

11

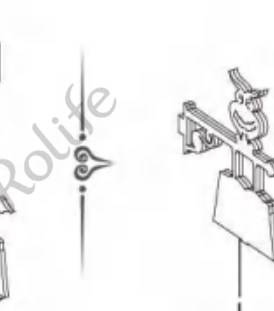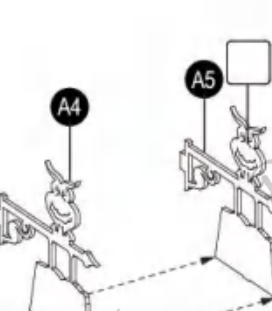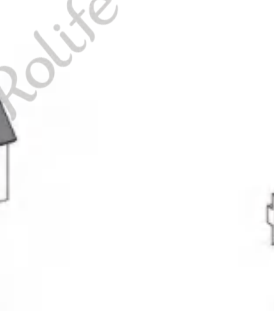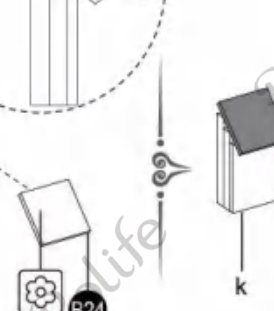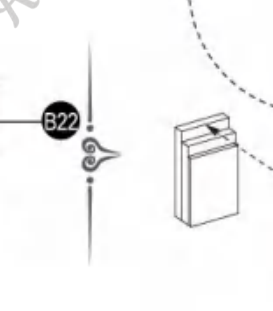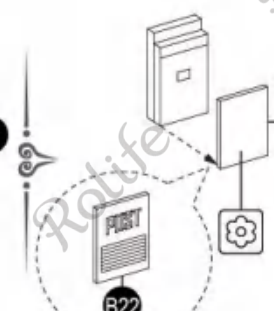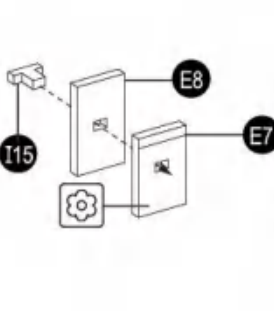



Spare parts for I15.

Glue along reference lines.

Glue on the back of B24. Note the paste position.


Apply a dab of glue to avoid the glue overflowing.

12

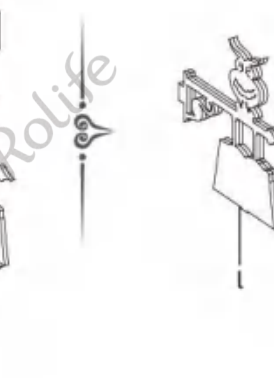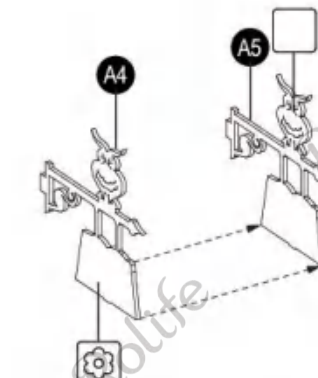


6


13

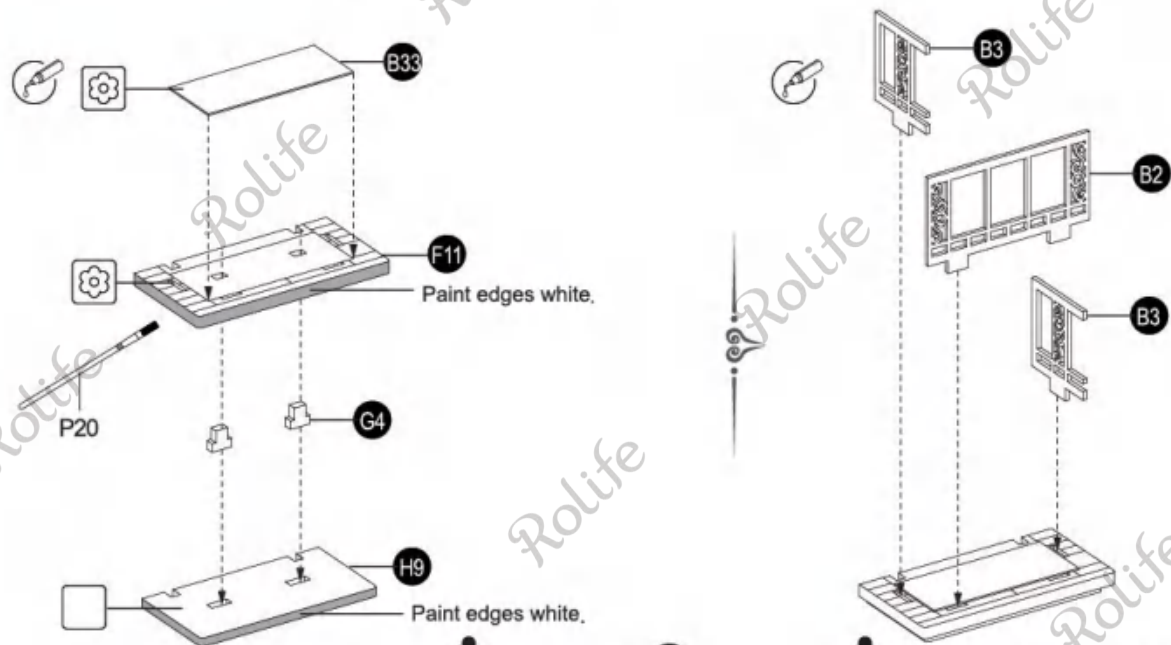


Apply a dab of glue on junctions to fix the parts.

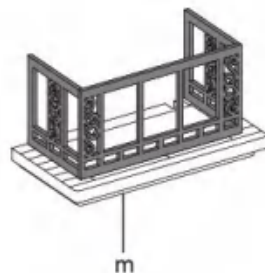

14

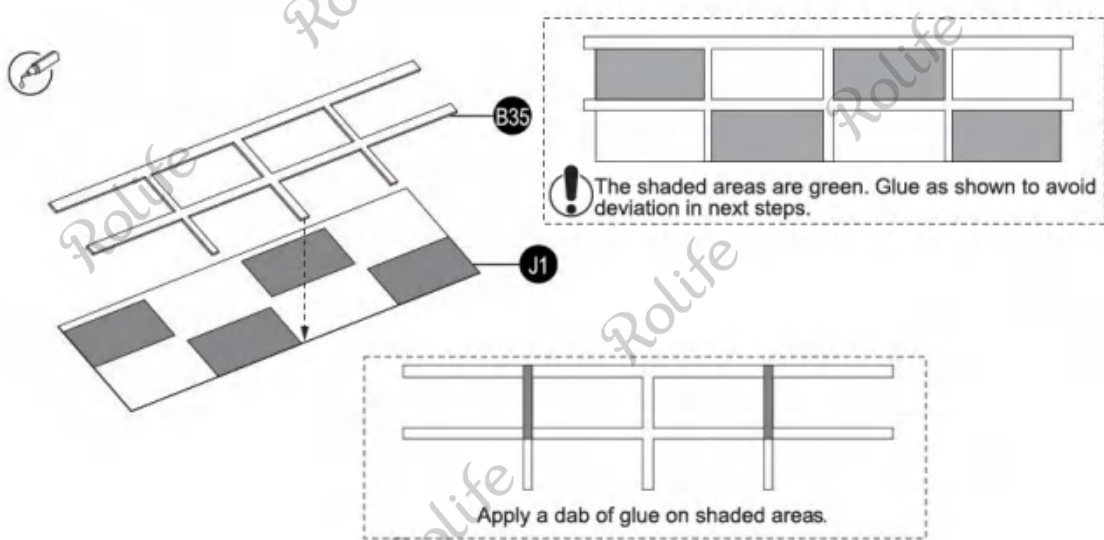






Apply a dab of glue on shaded areas.

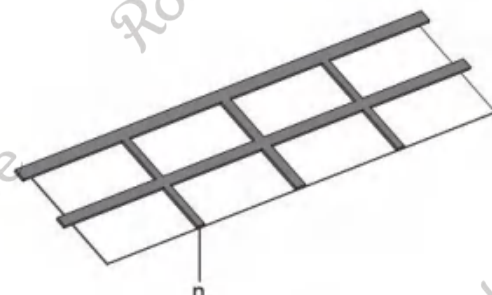


X2

Assemble 2 parts as shown.





15

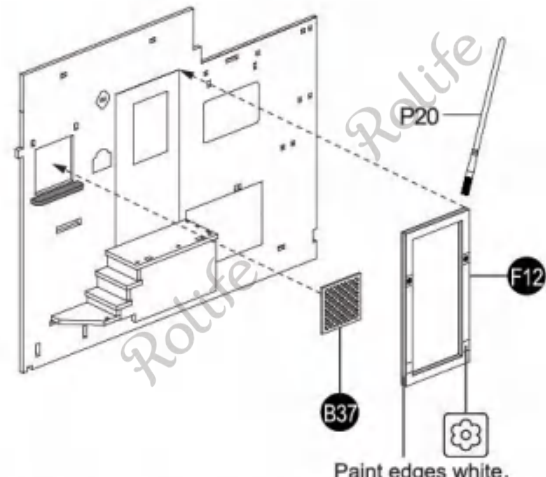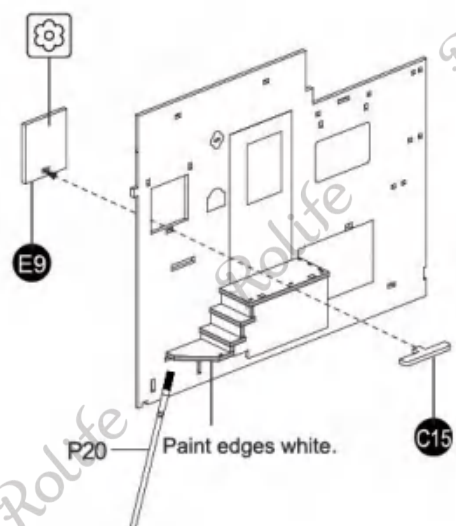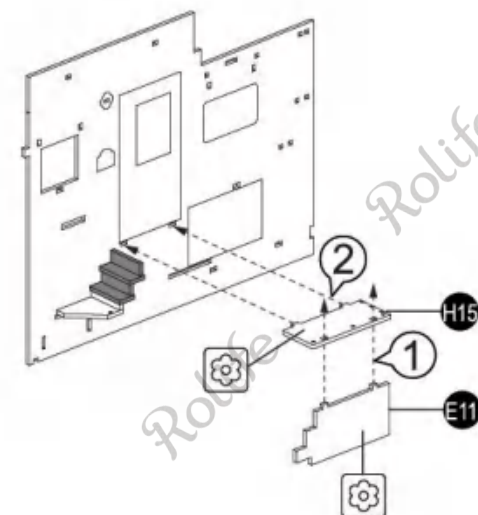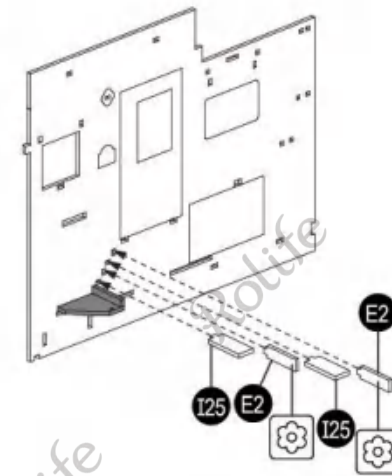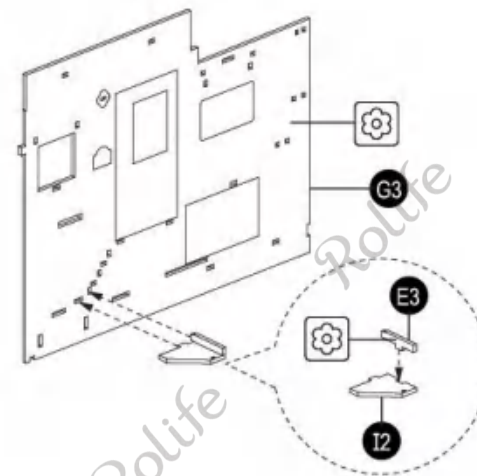





Paint inside and outside frames of F12 white. Apply a dab of glue and press 5s.




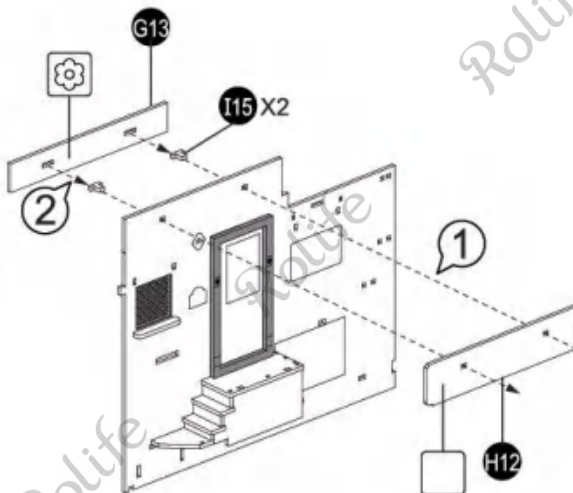






Spare parts for I15.

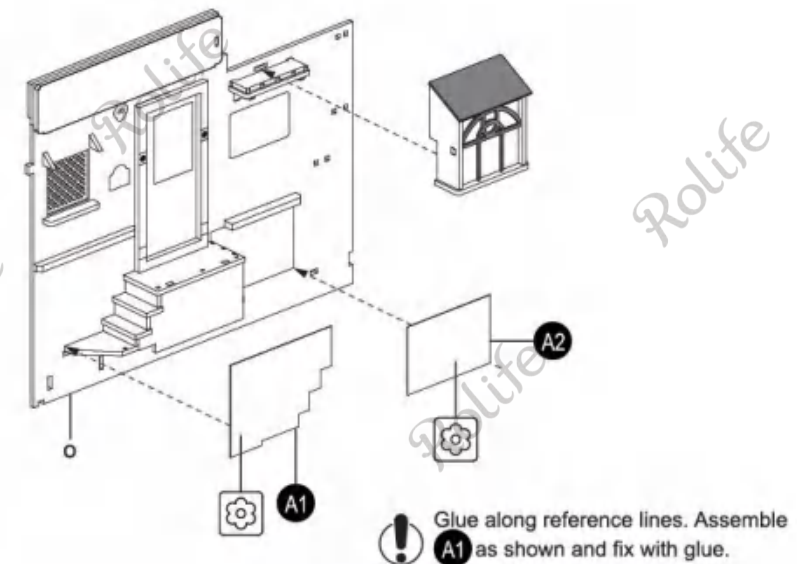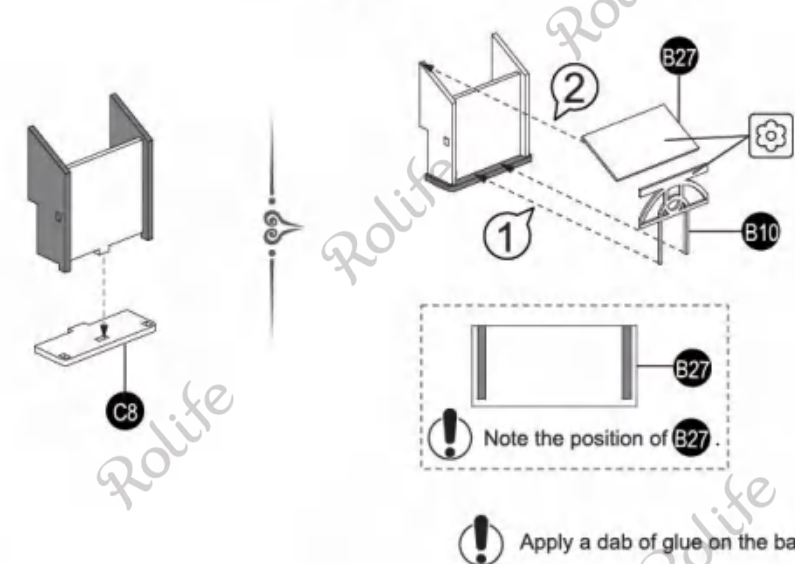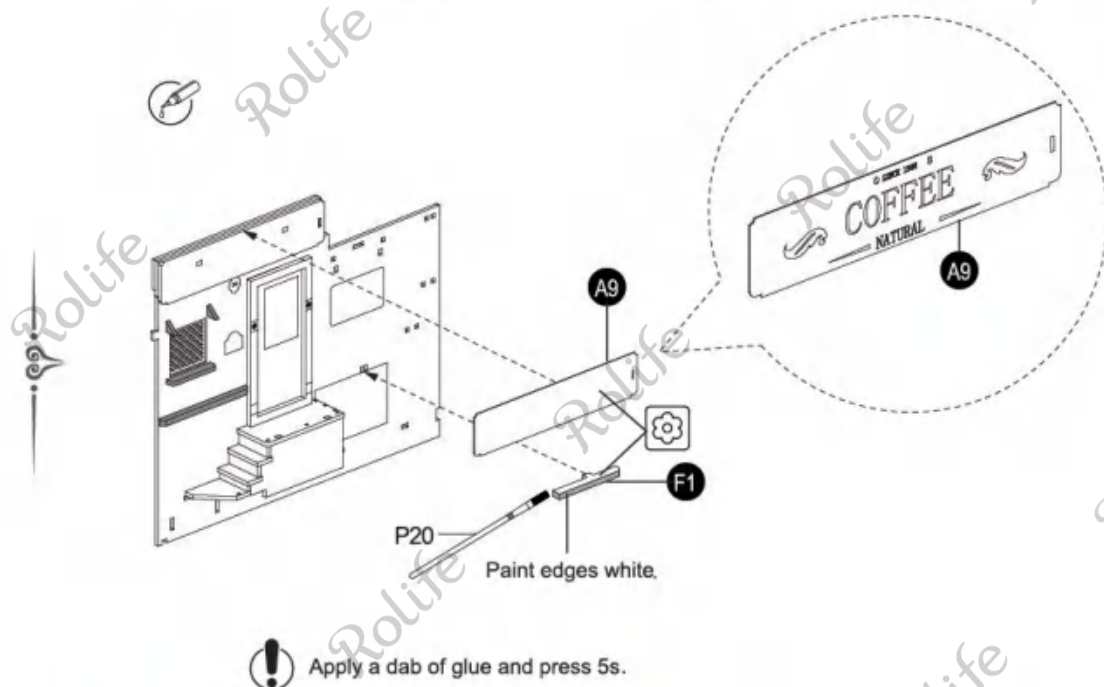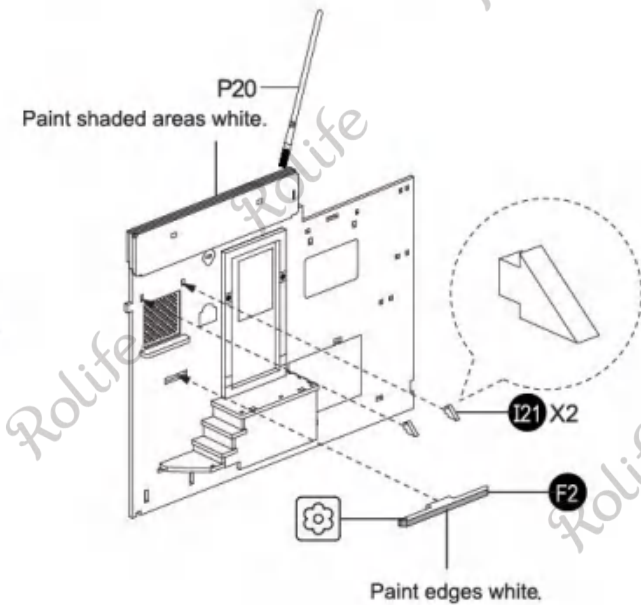


16

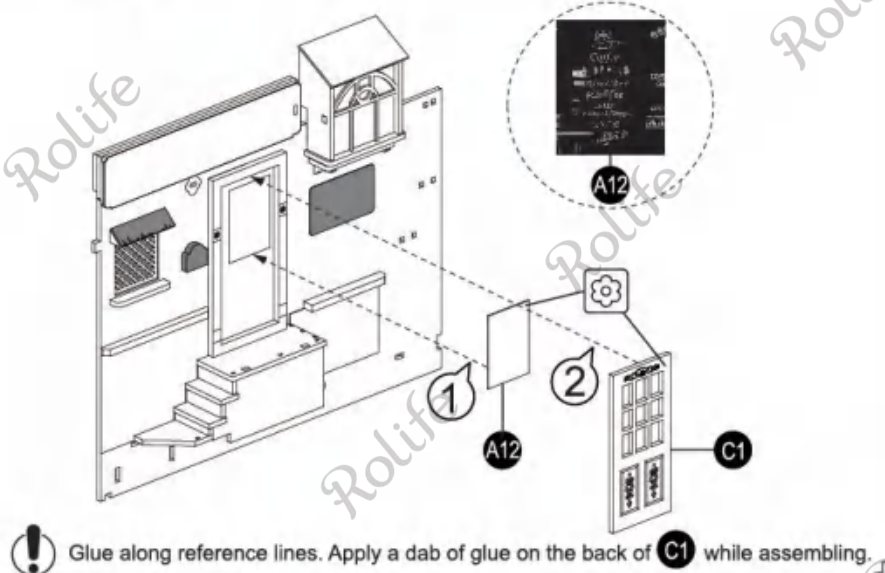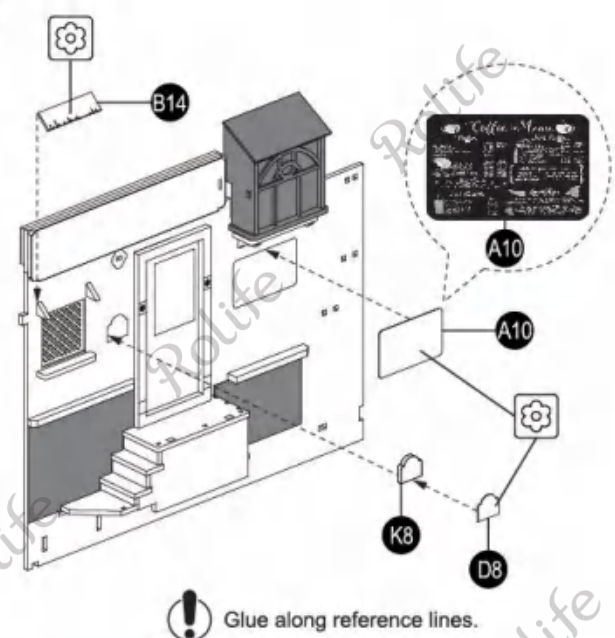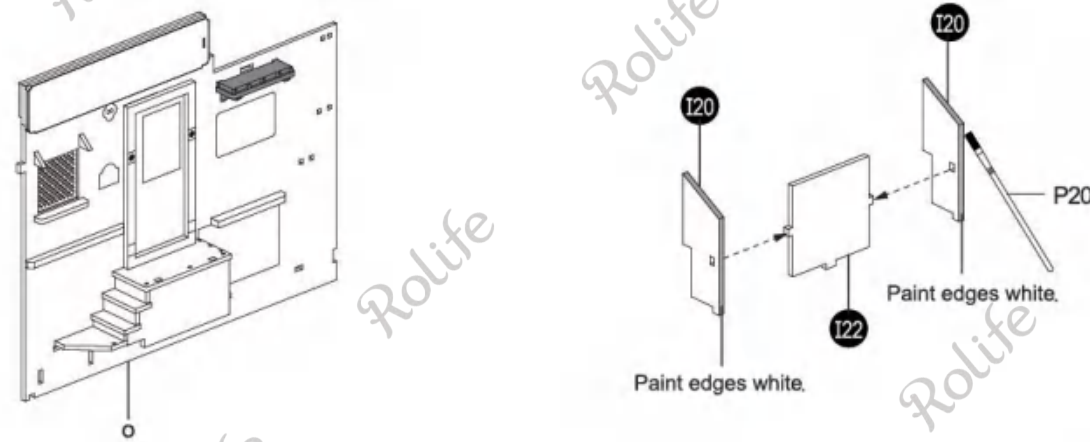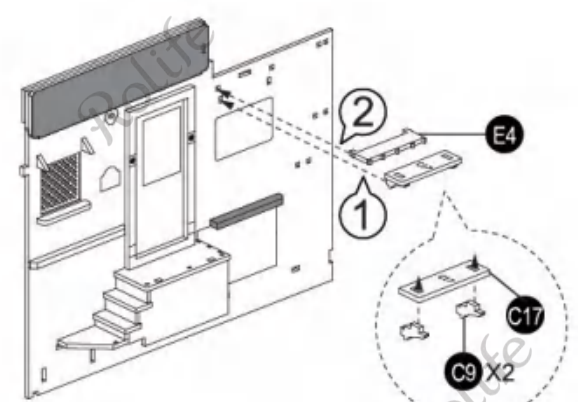

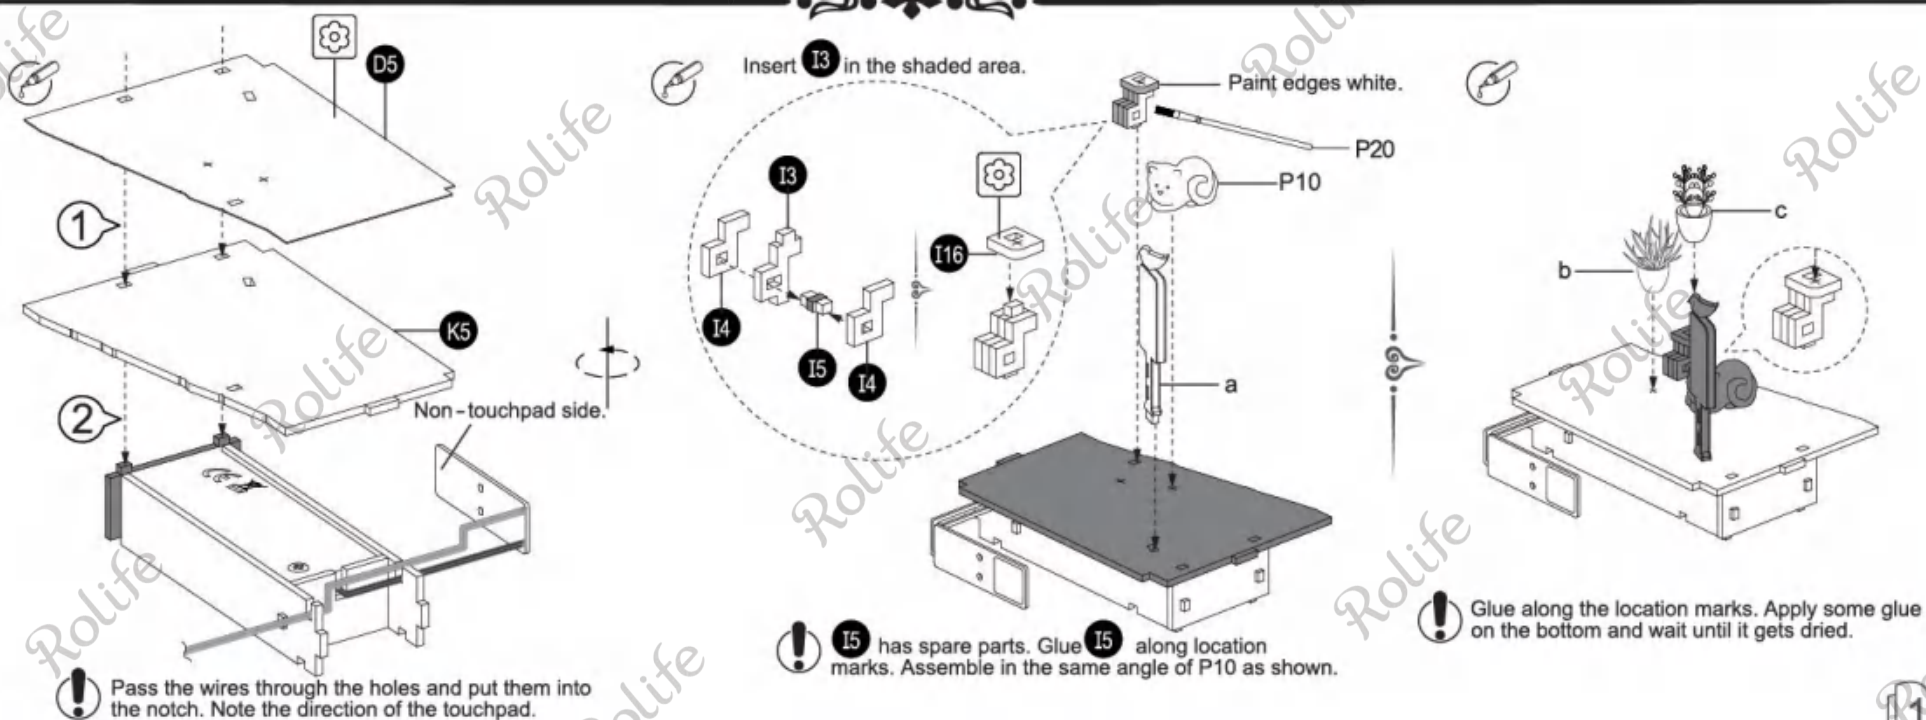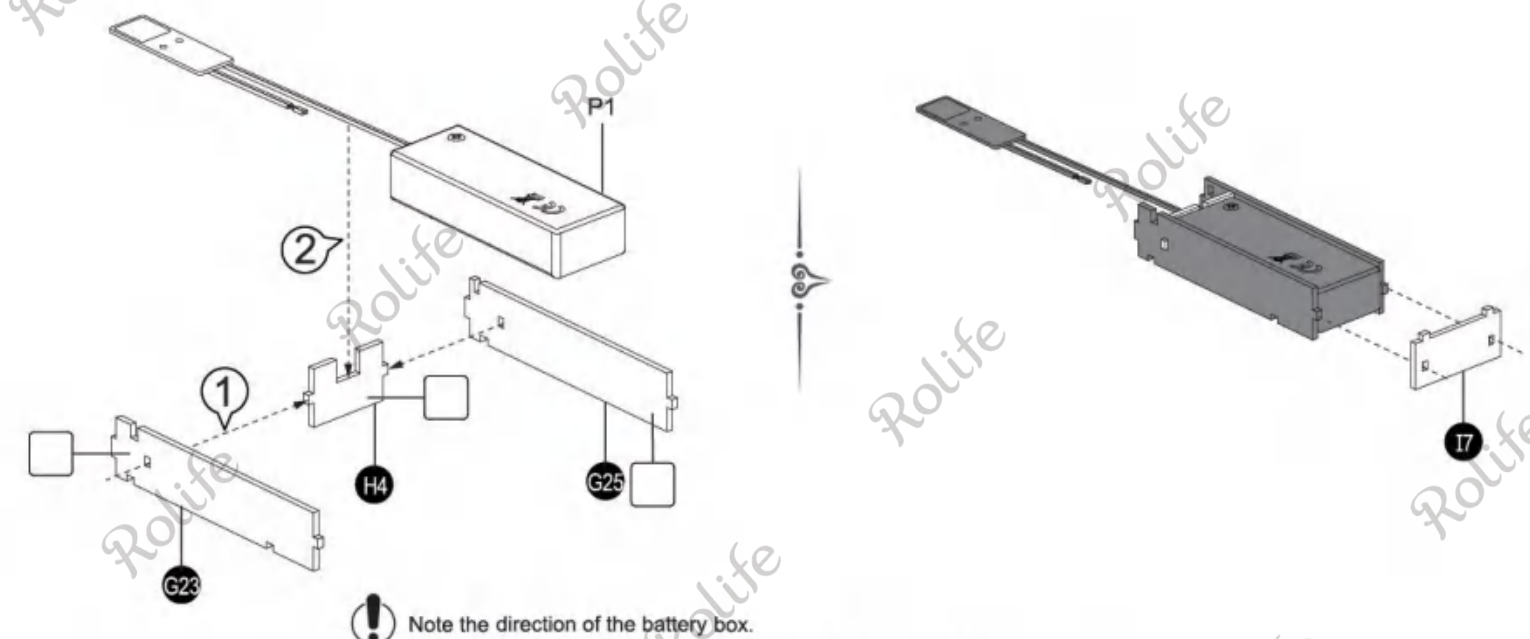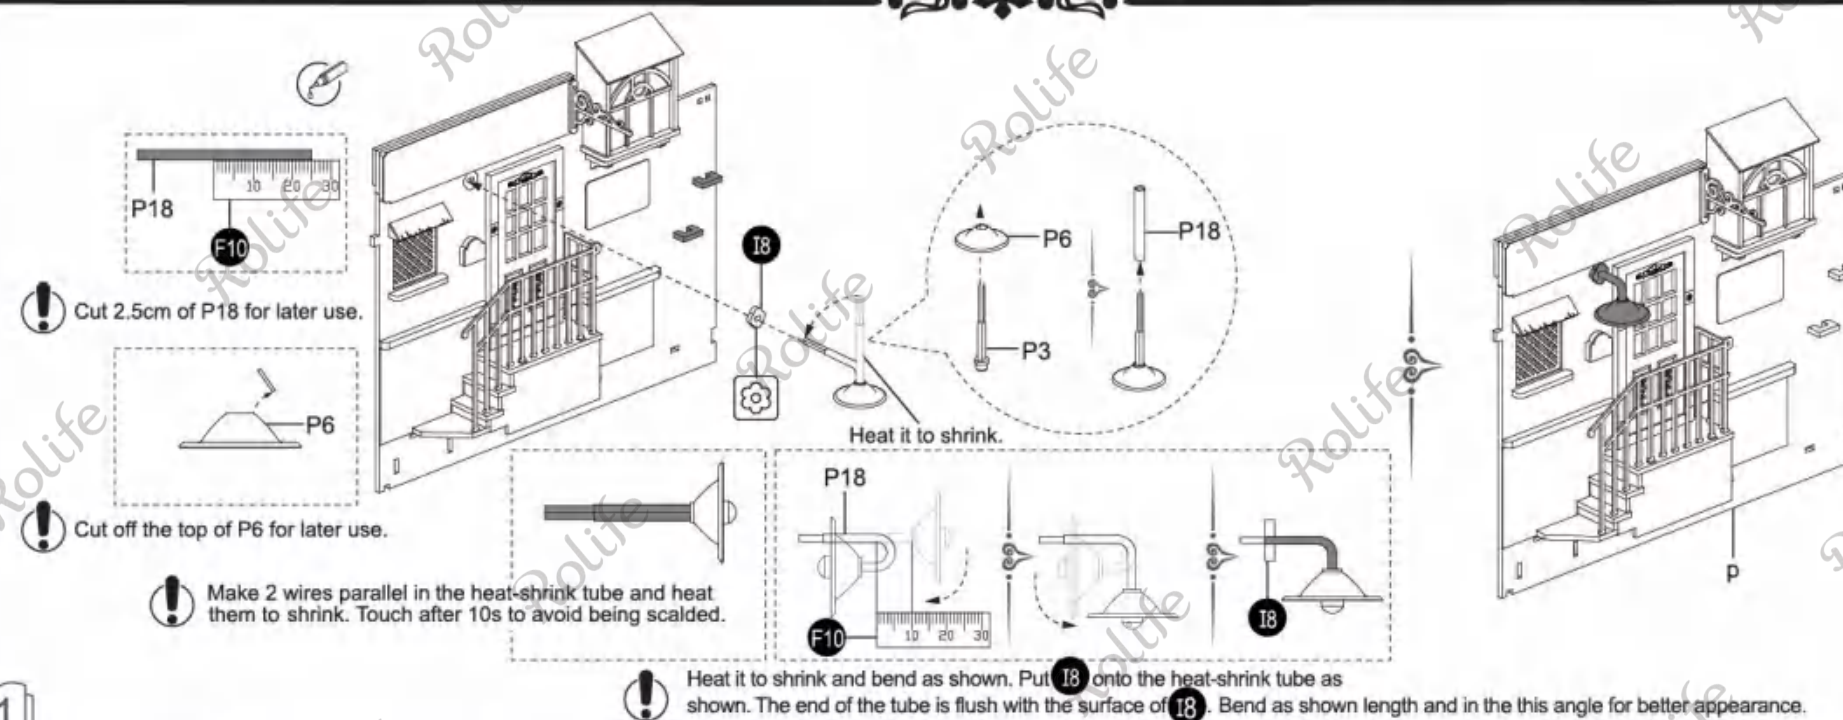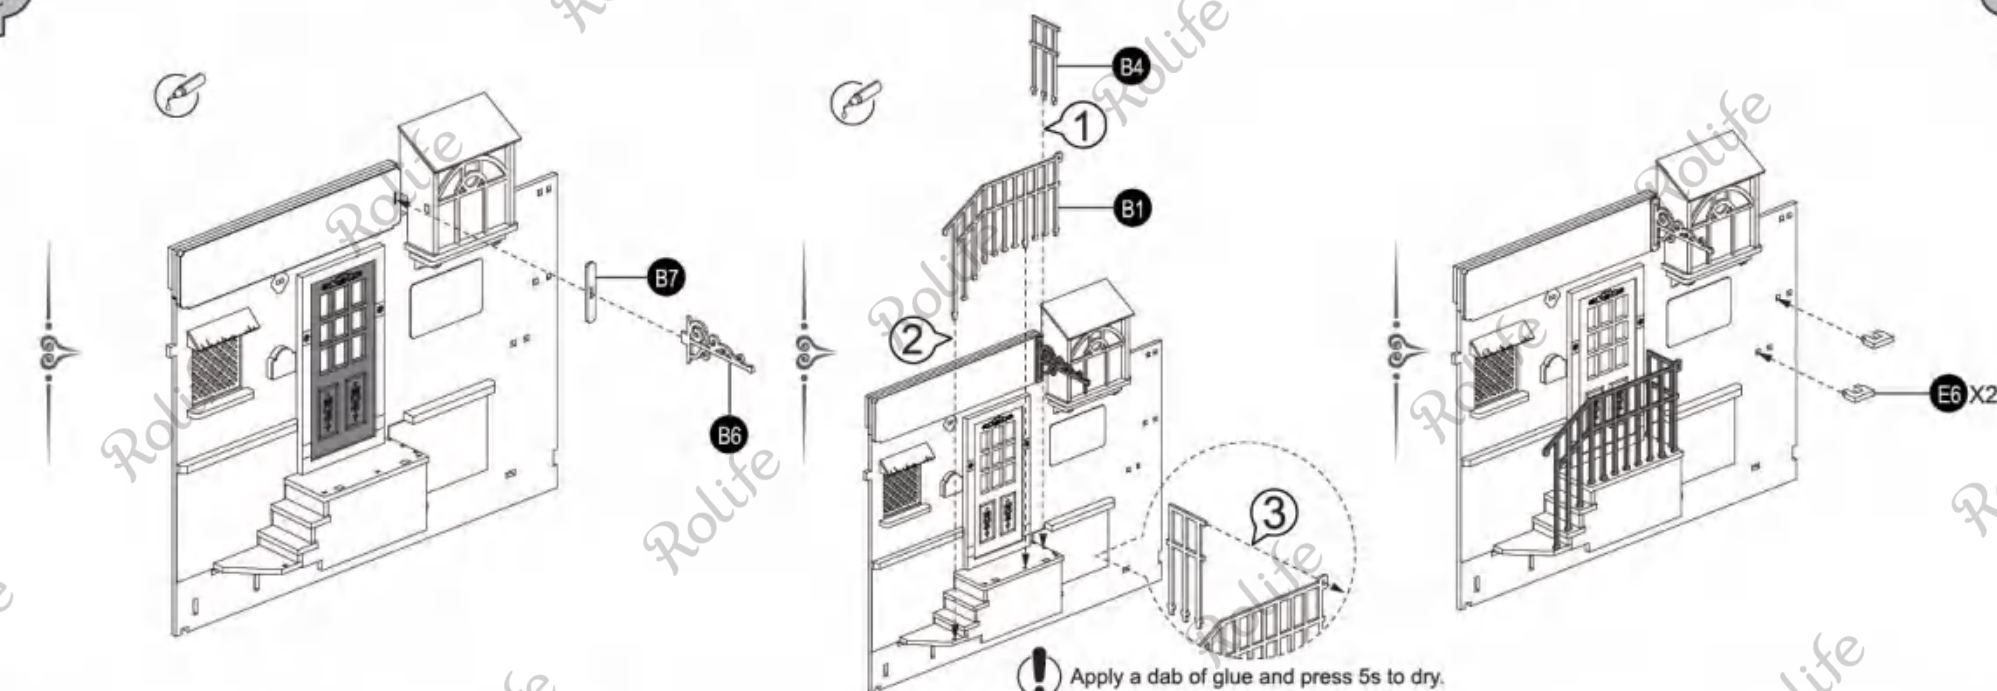


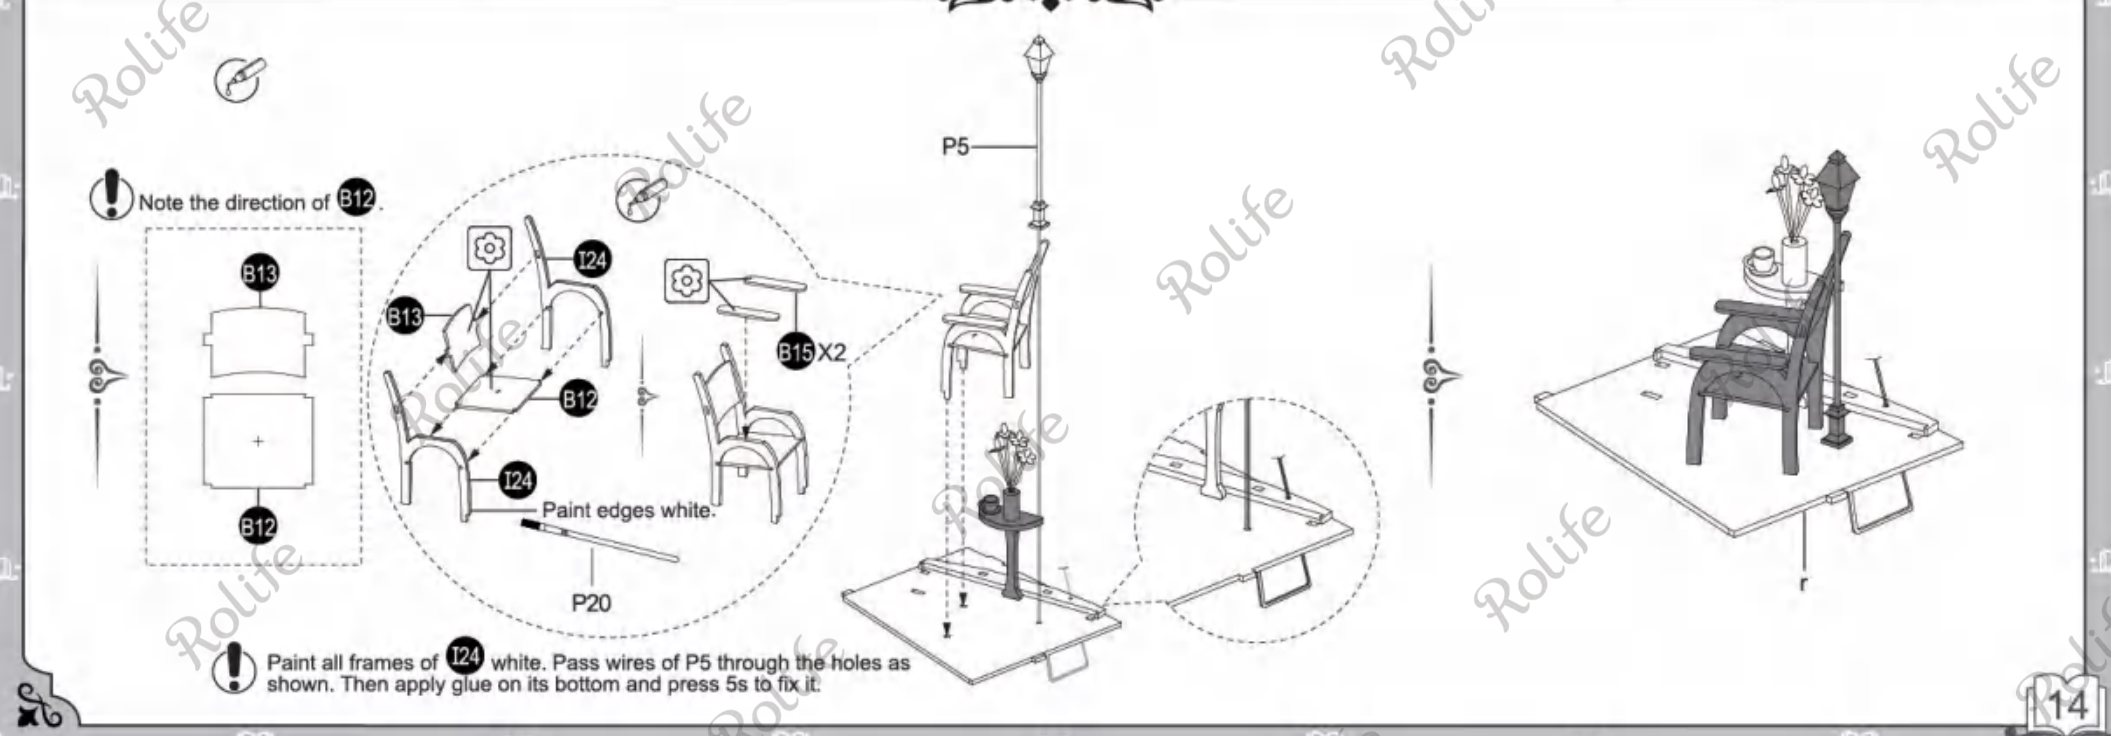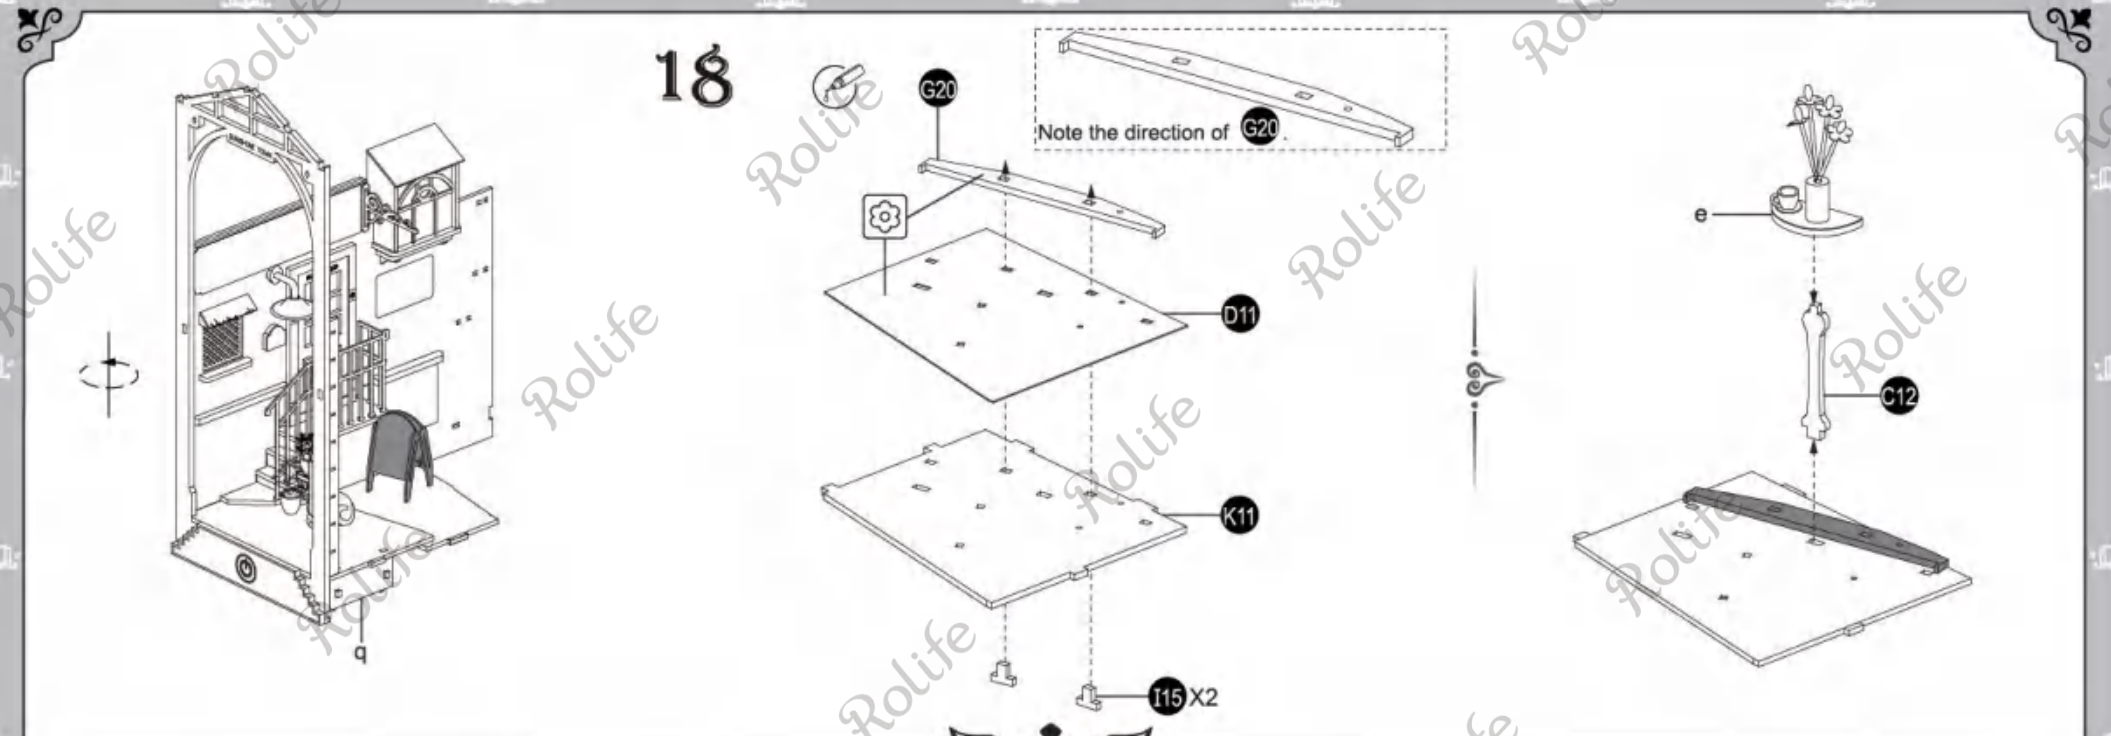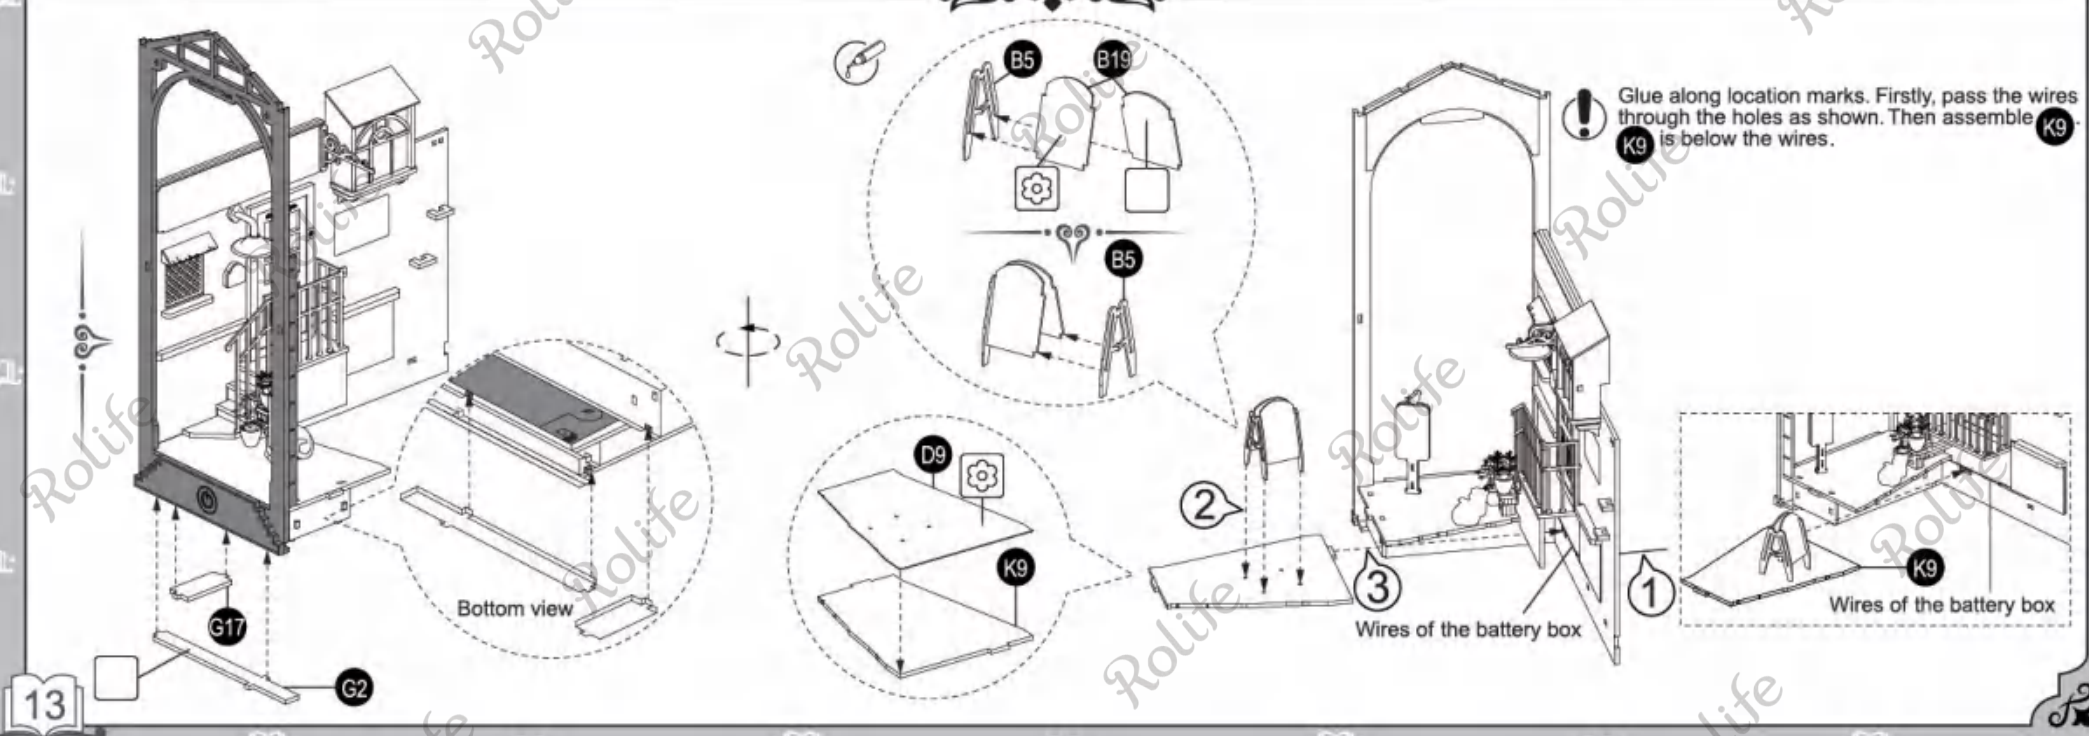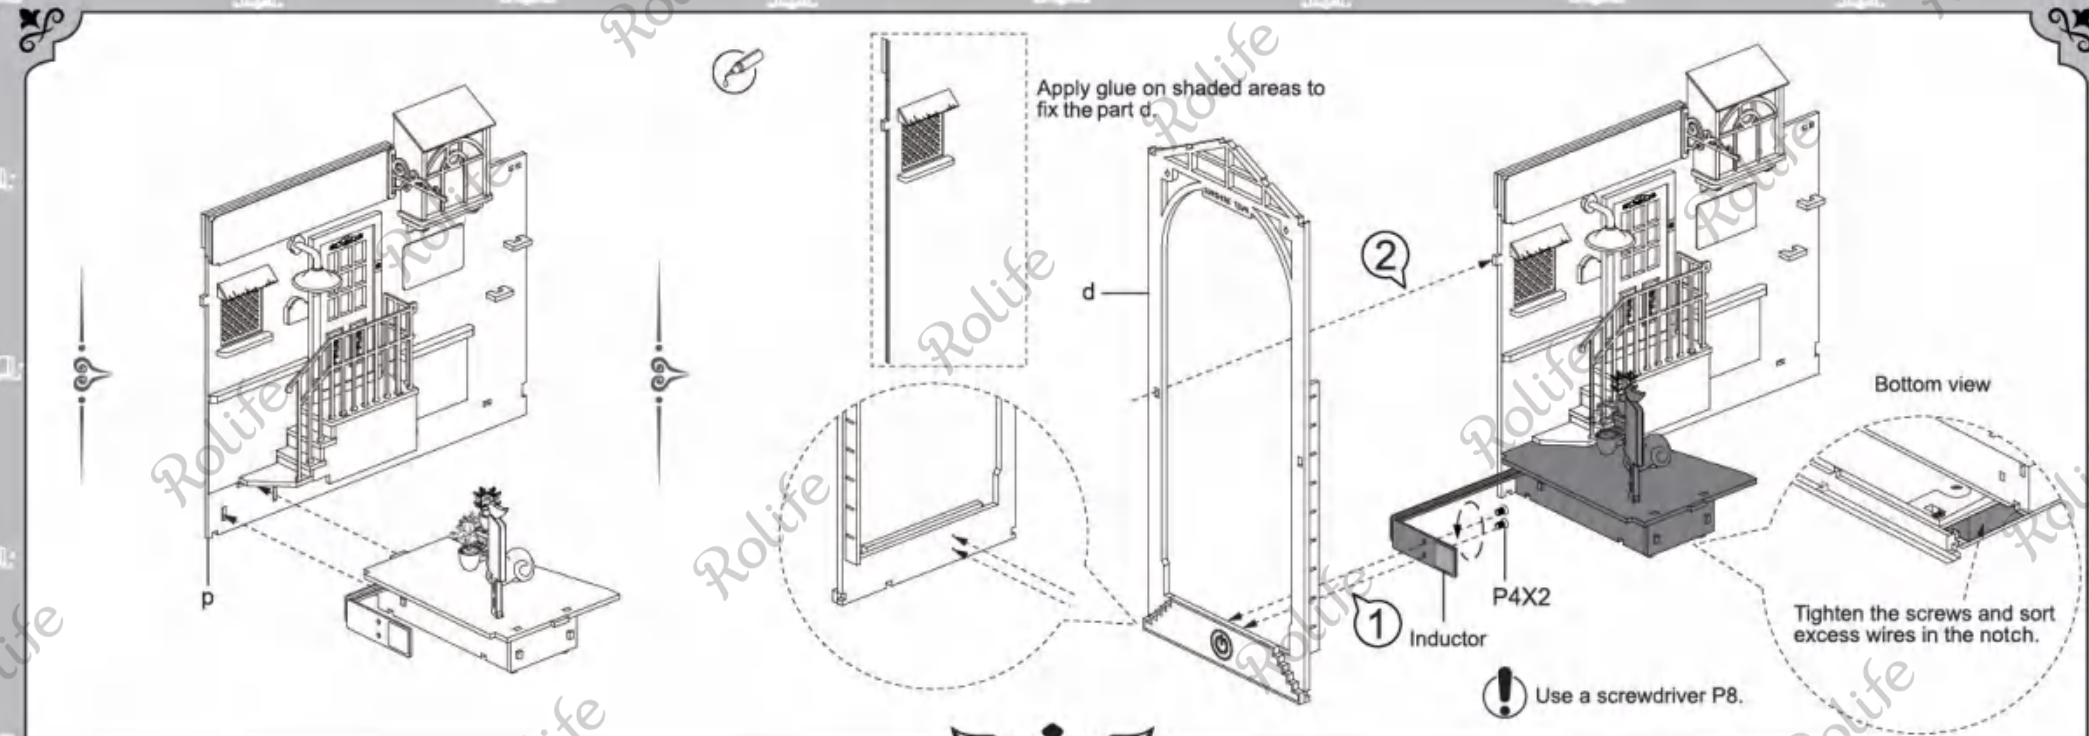


19

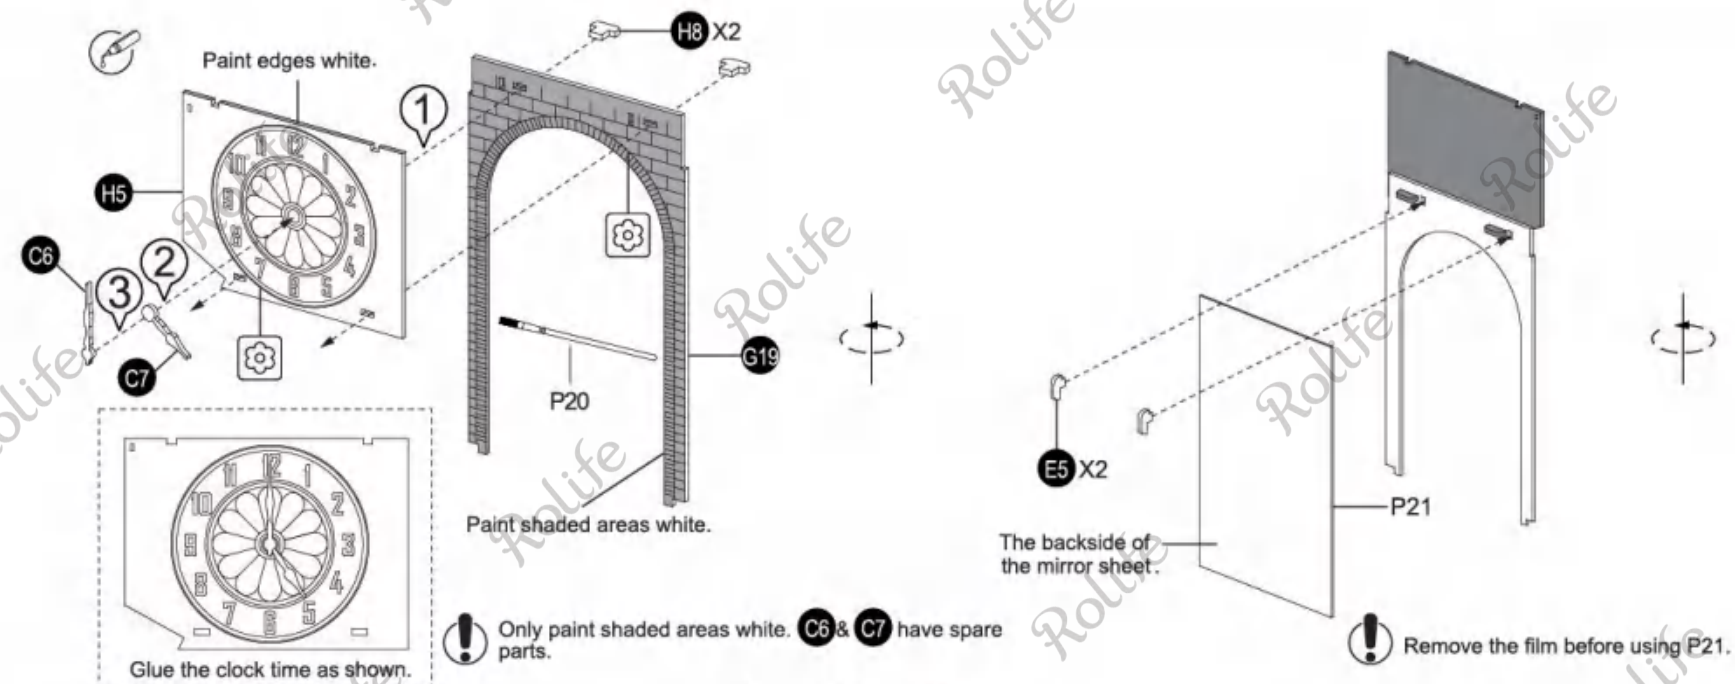











15




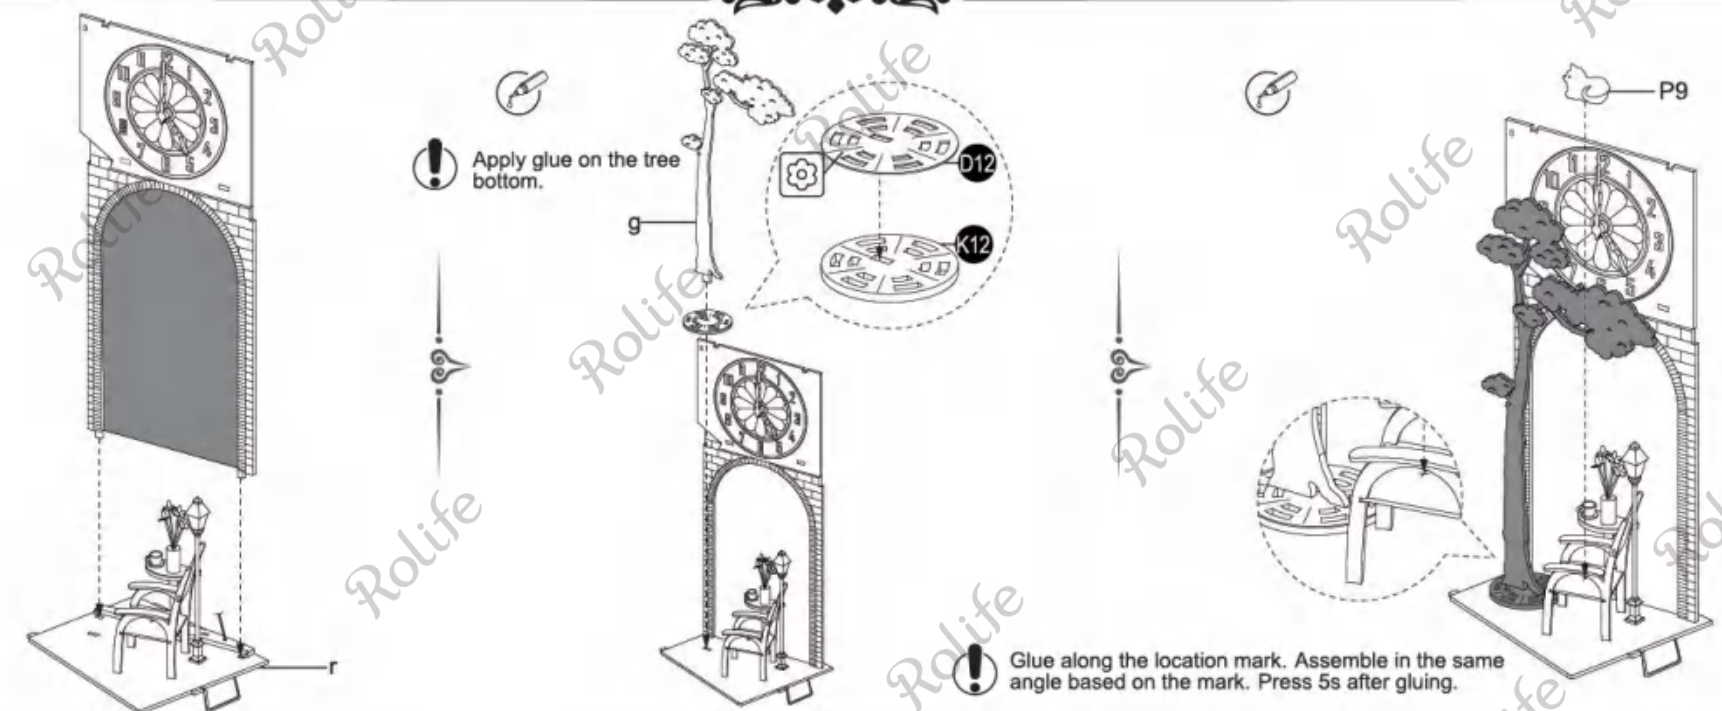





20

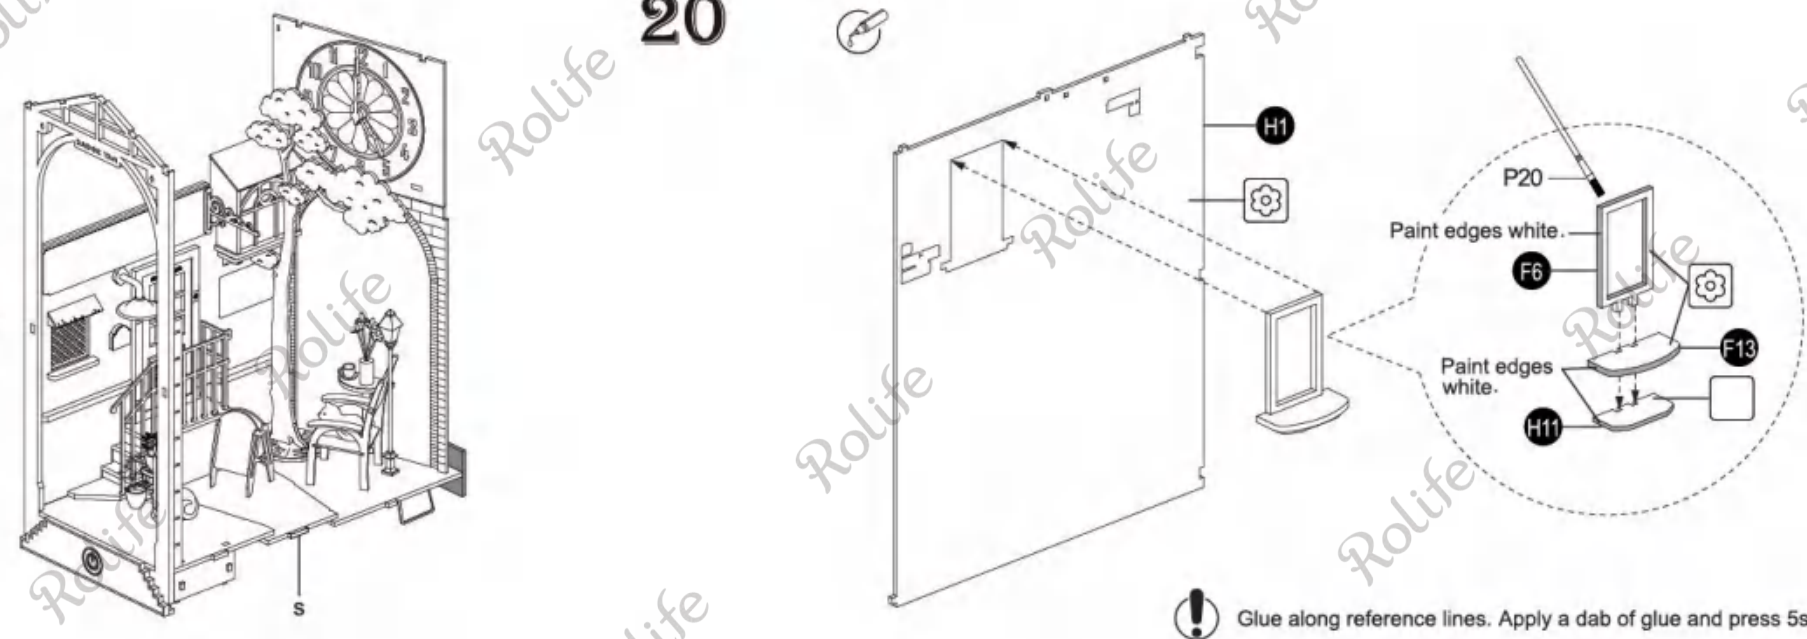





16

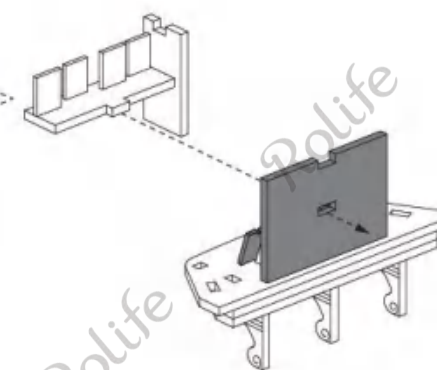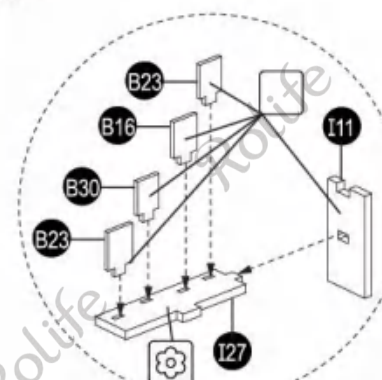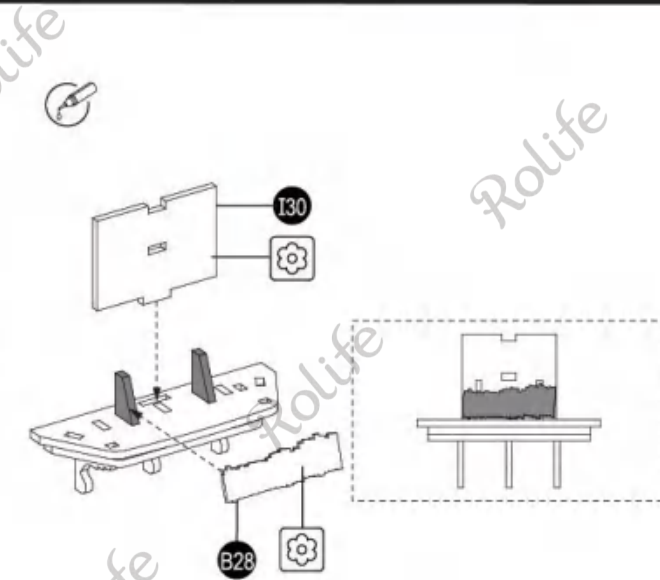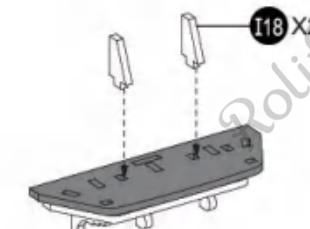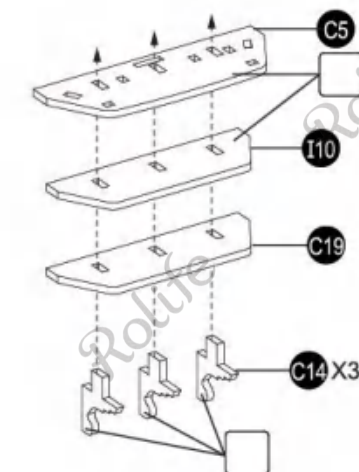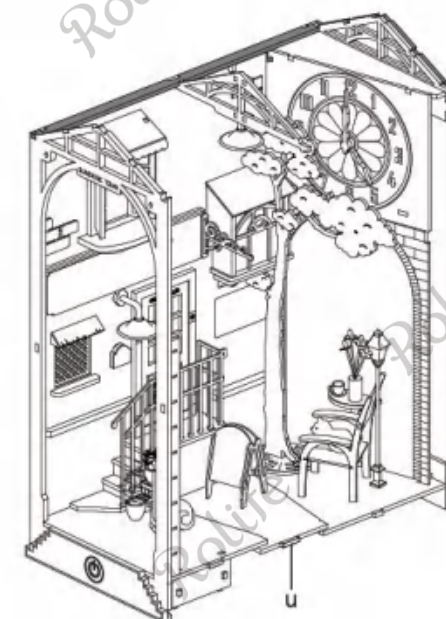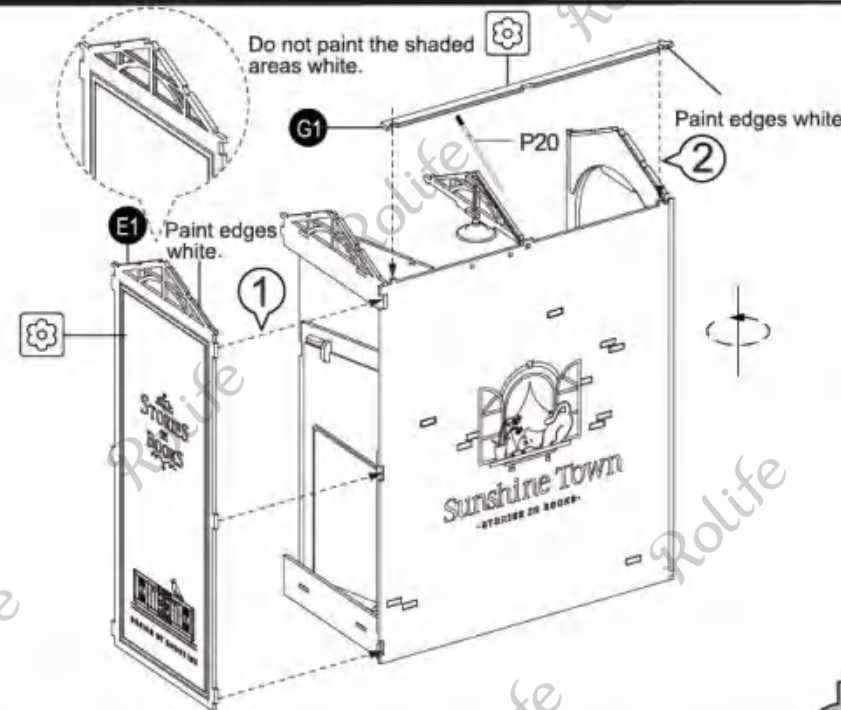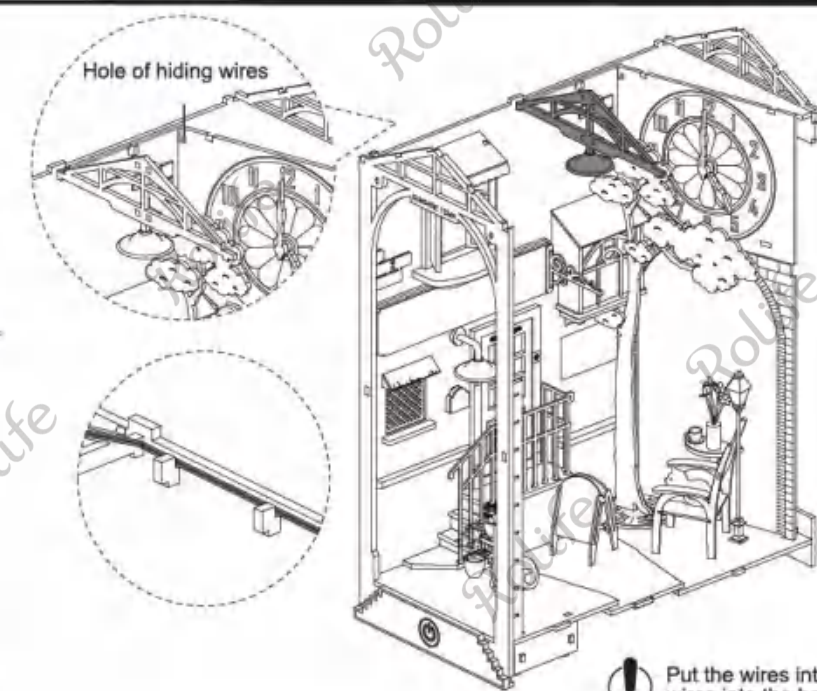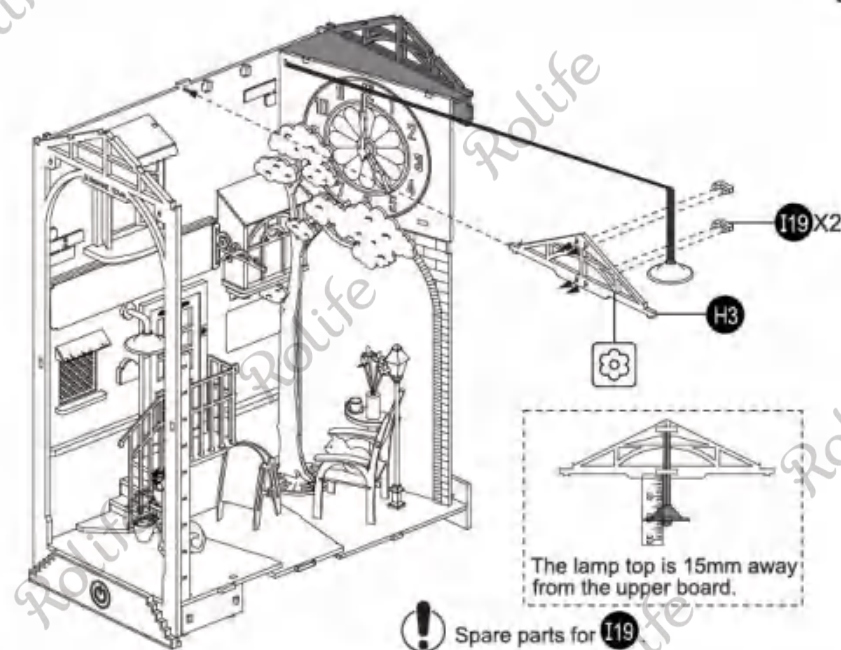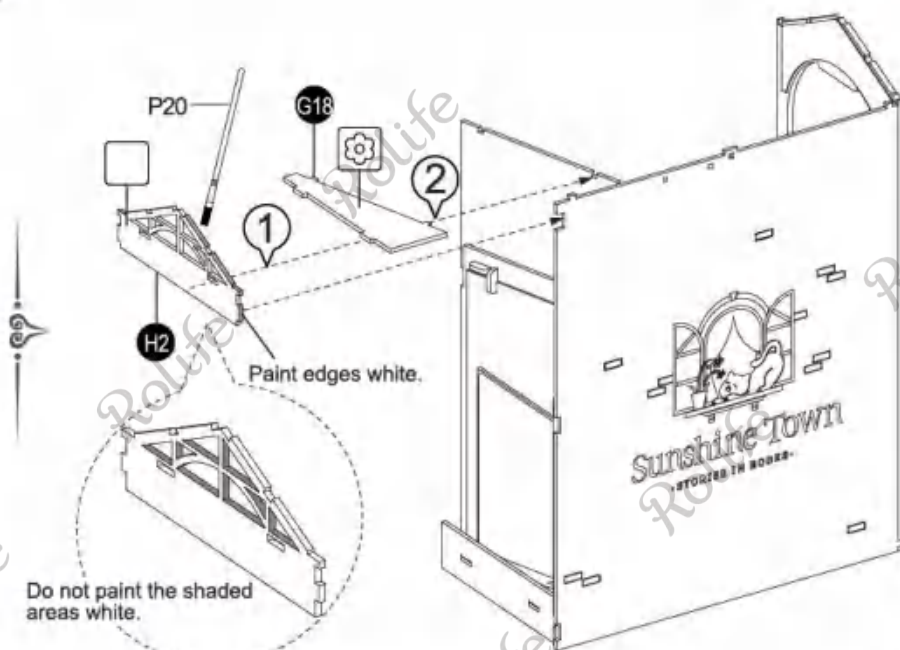

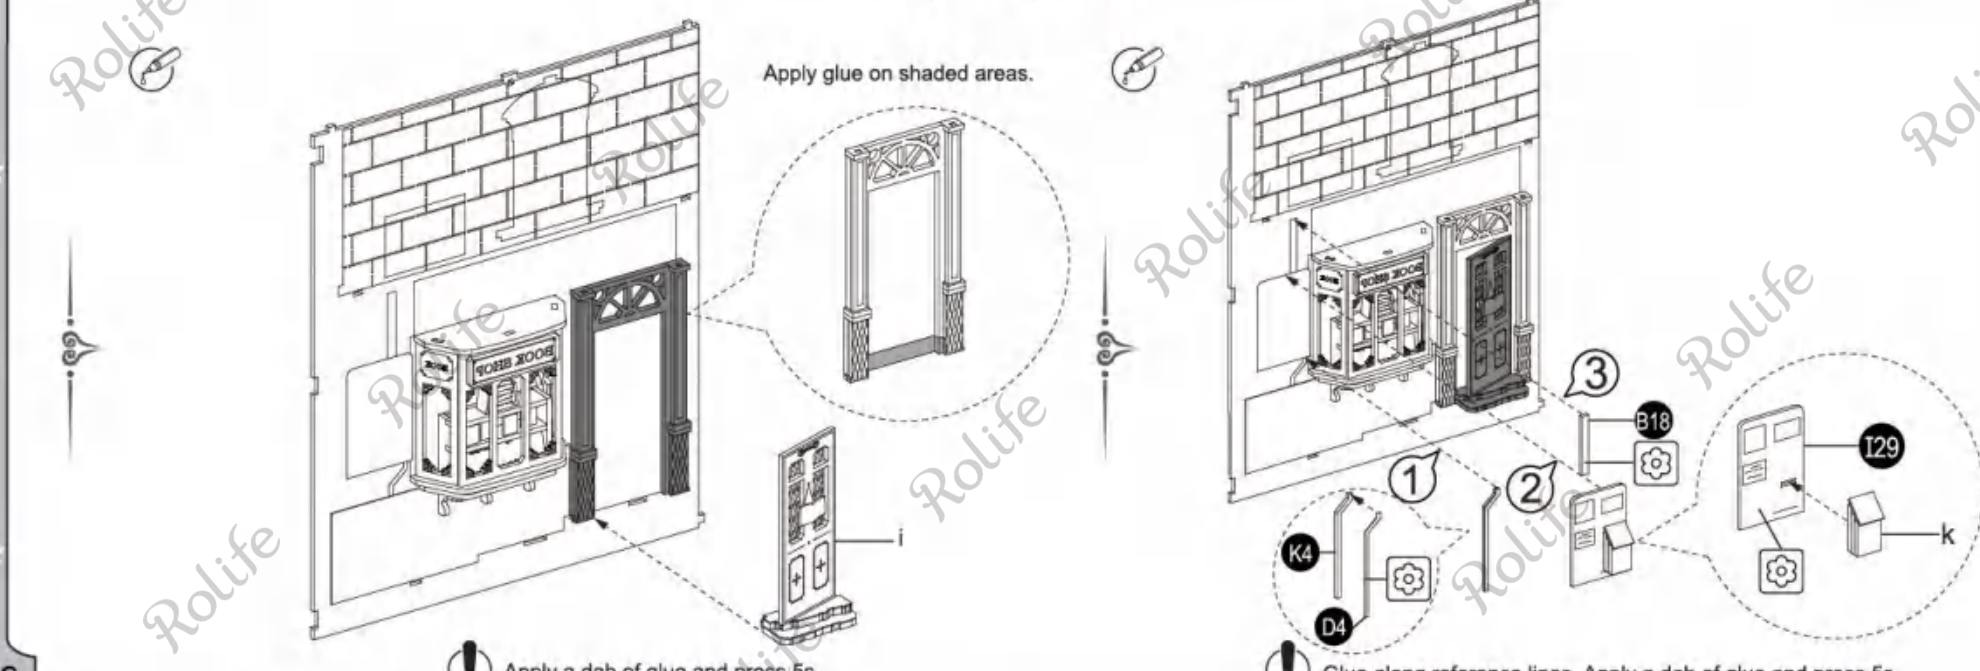
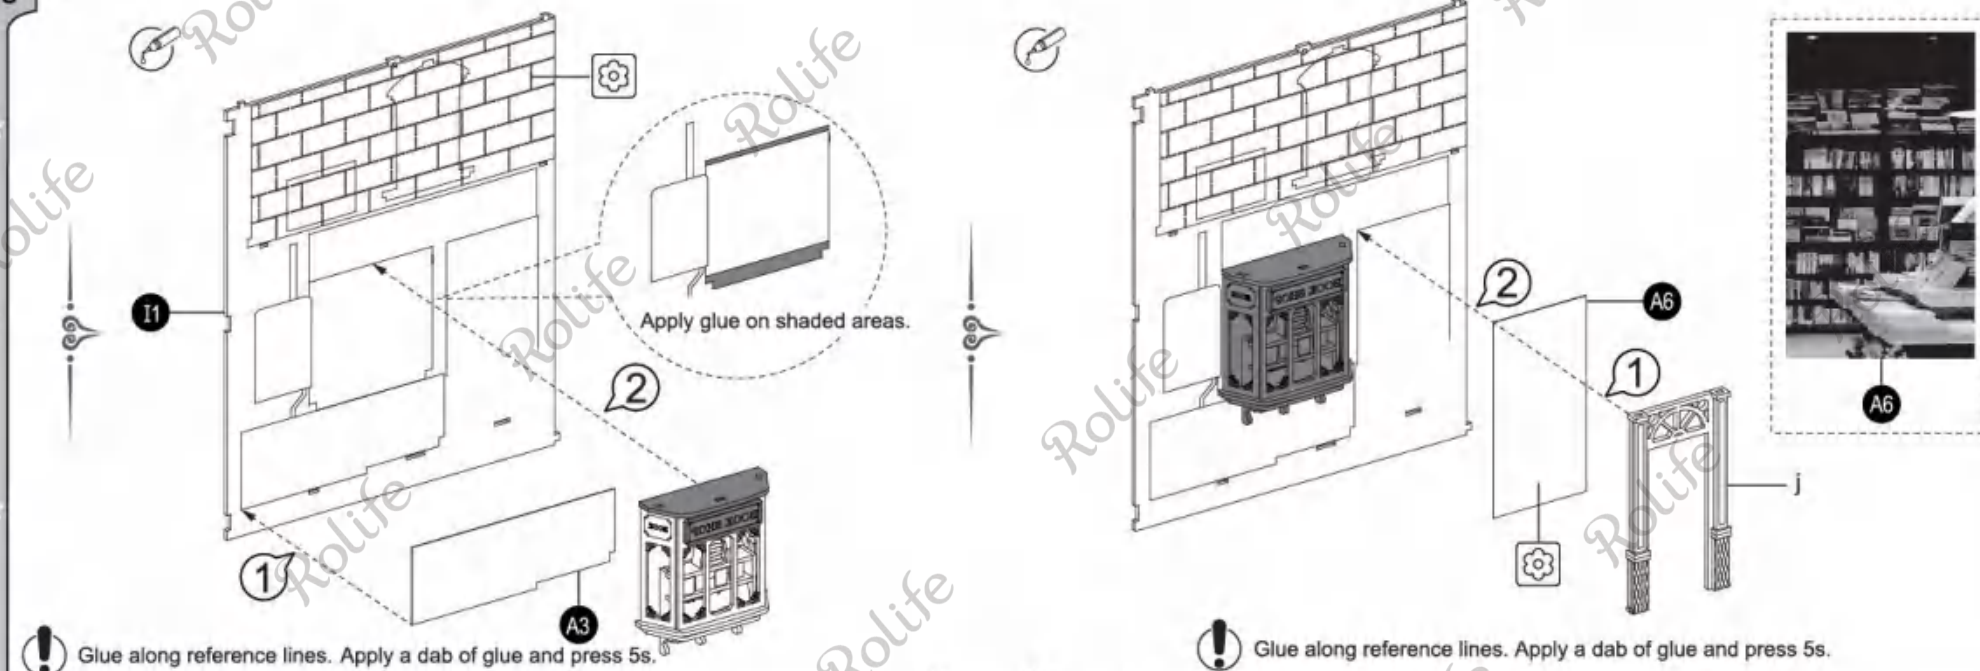
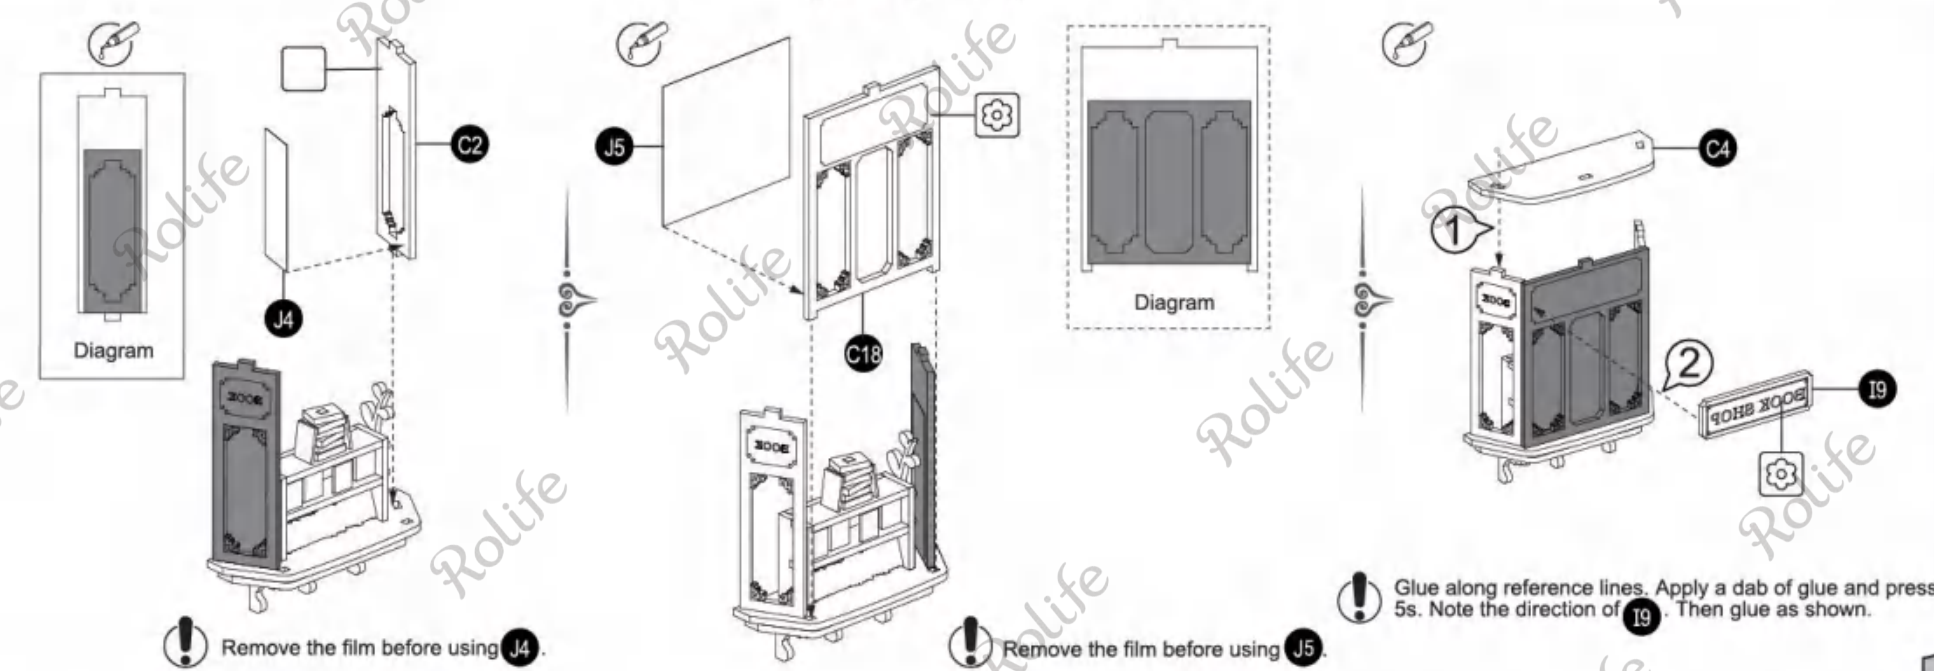
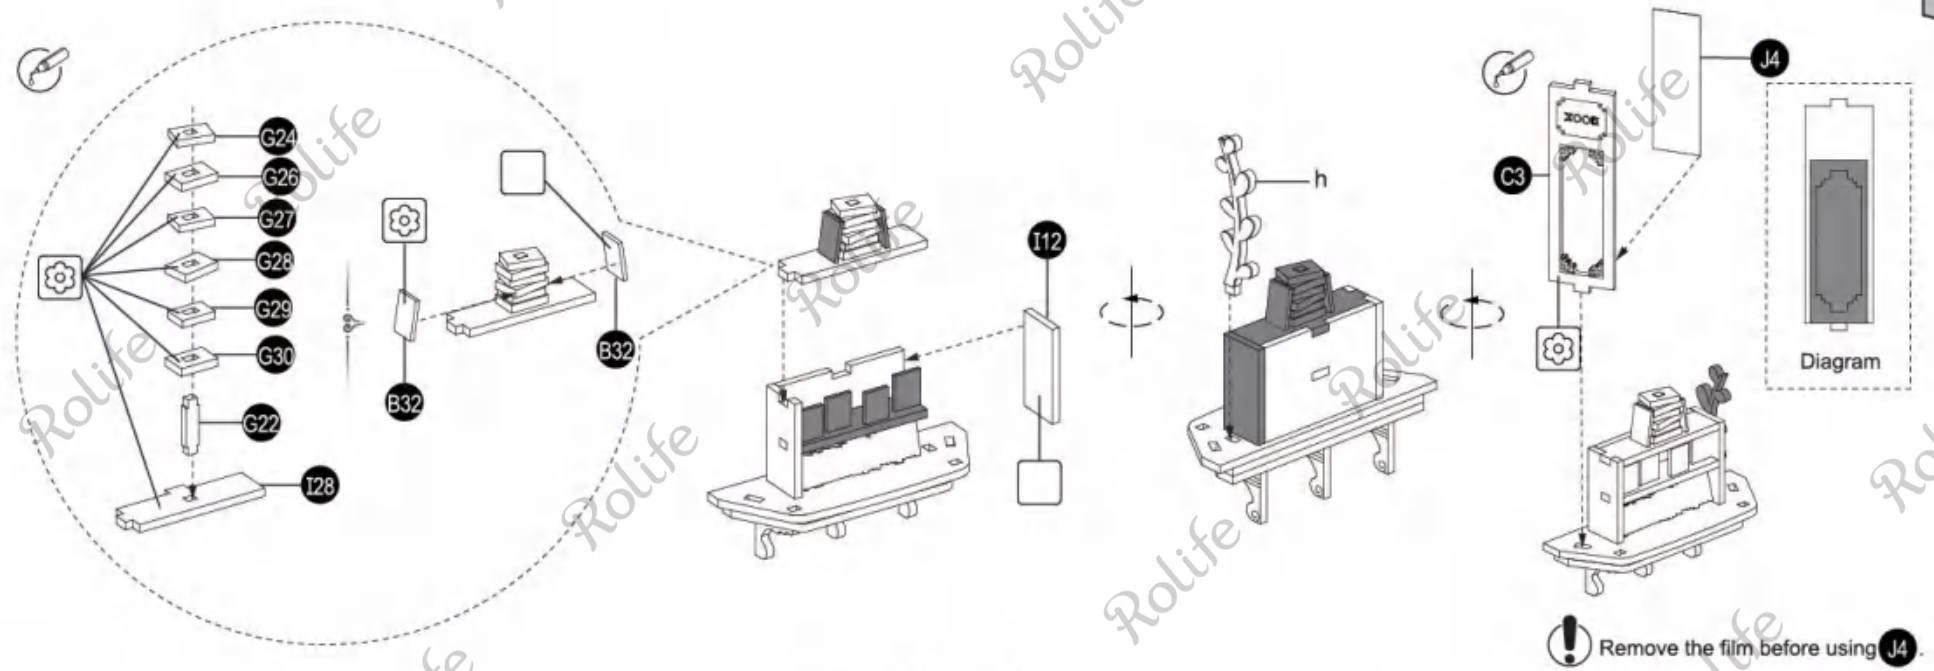


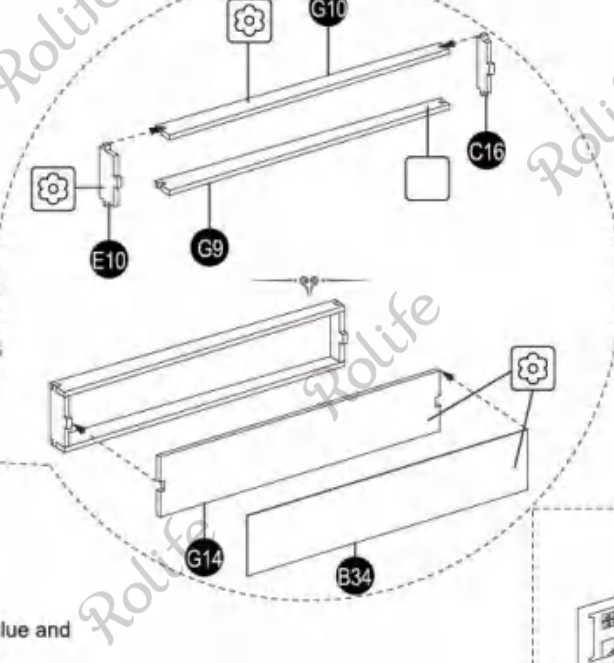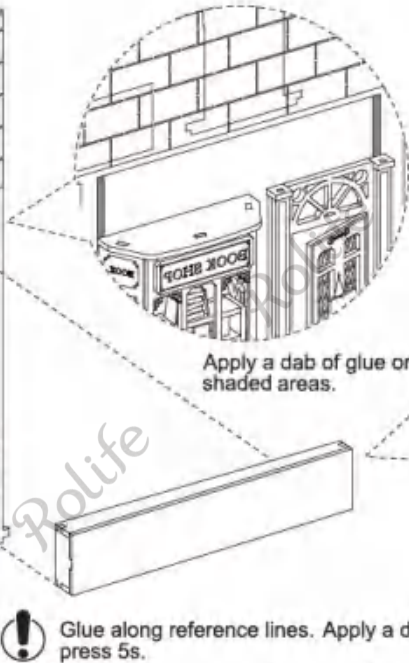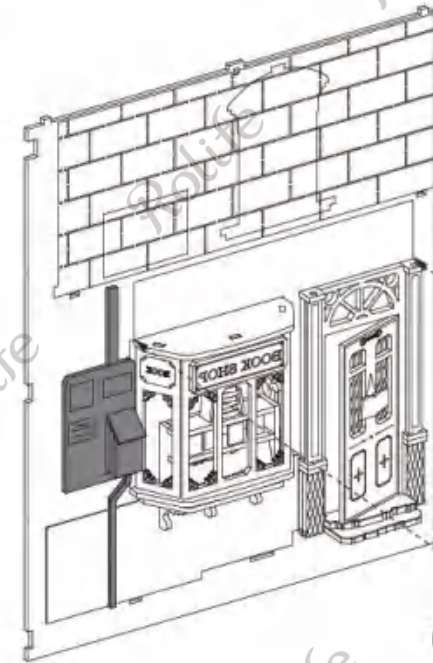

! Glue along reference lines. Apply a dab of glue and press 5s.

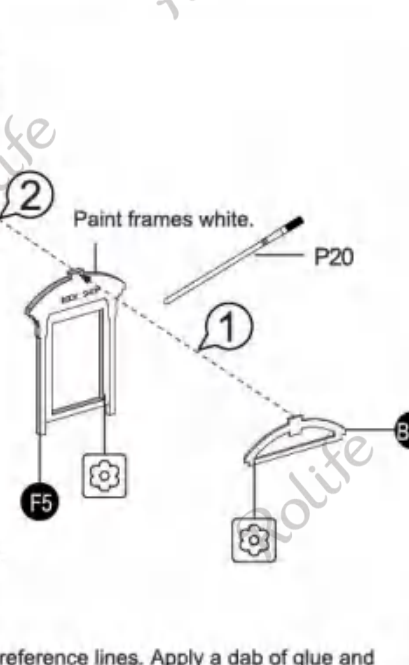
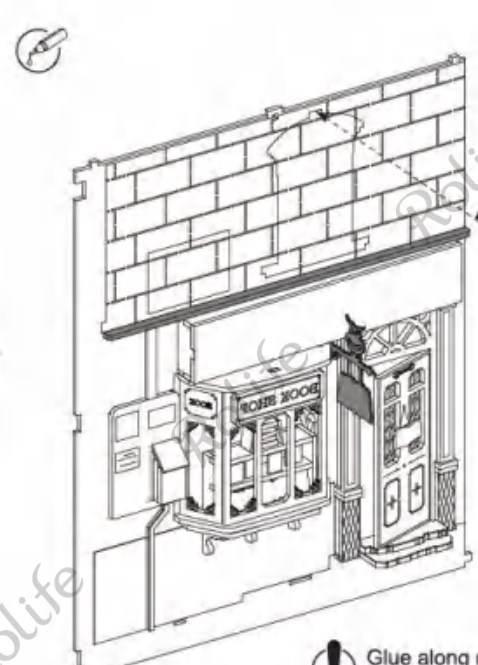
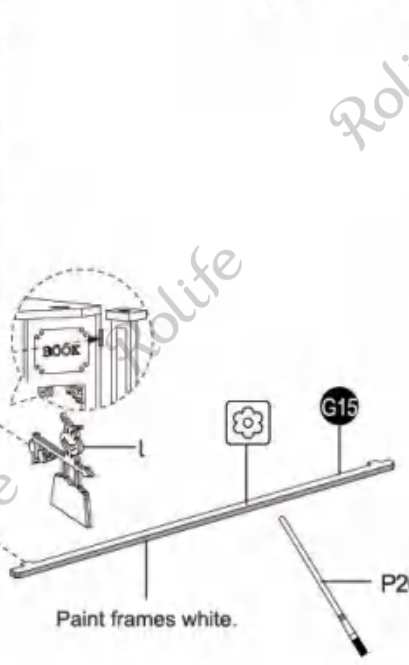
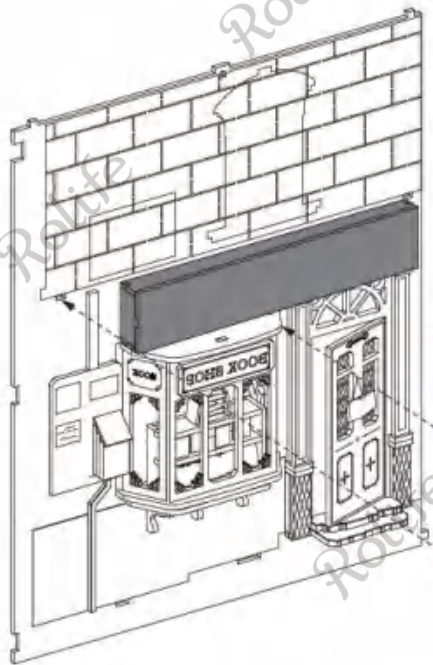


! Glue along reference lines. Apply a dab of glue and press 5s.

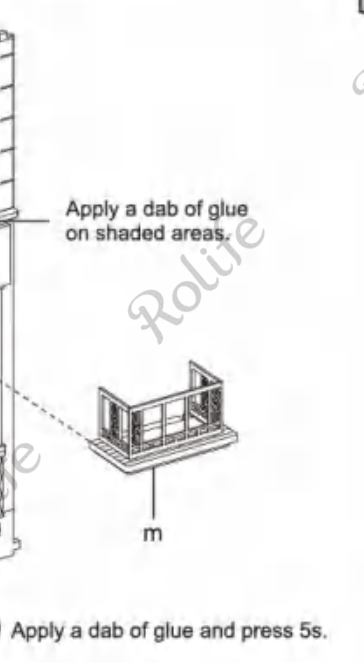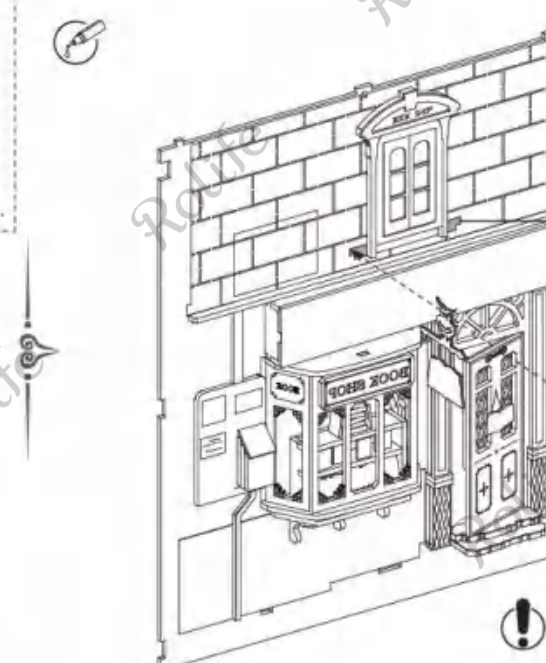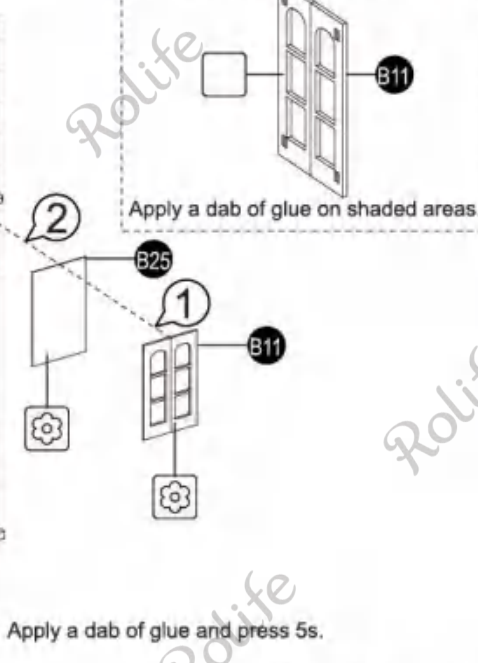
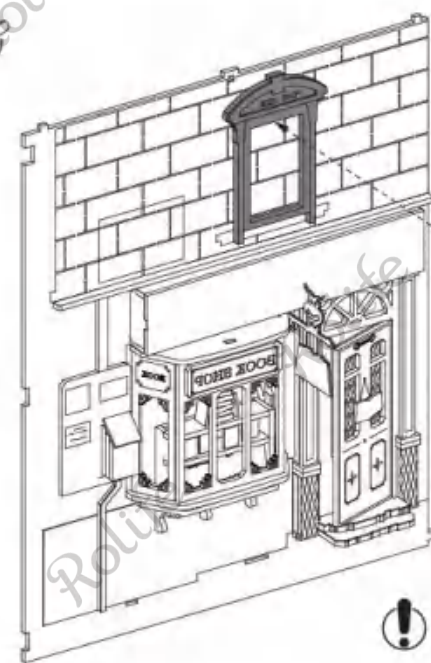


! Apply a dab of glue and press 5s.



! Apply a dab of glue and press 5s.

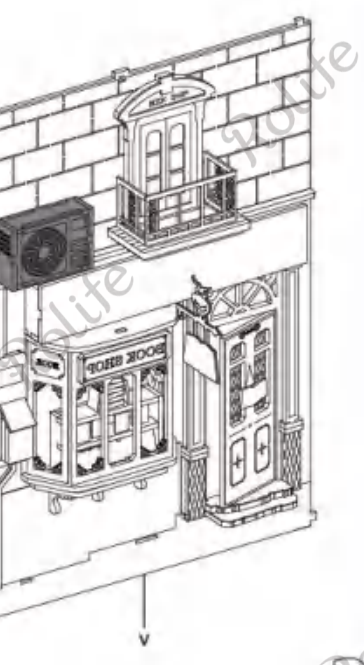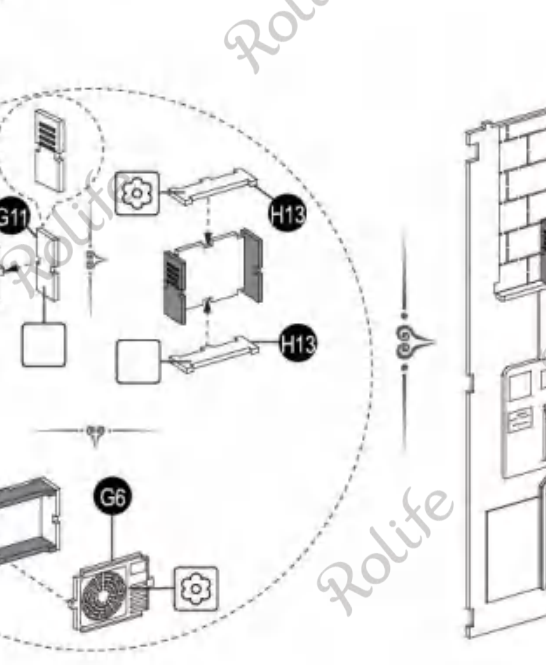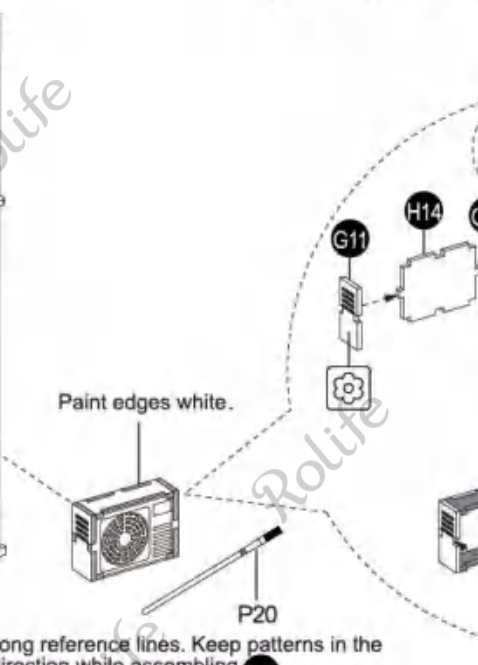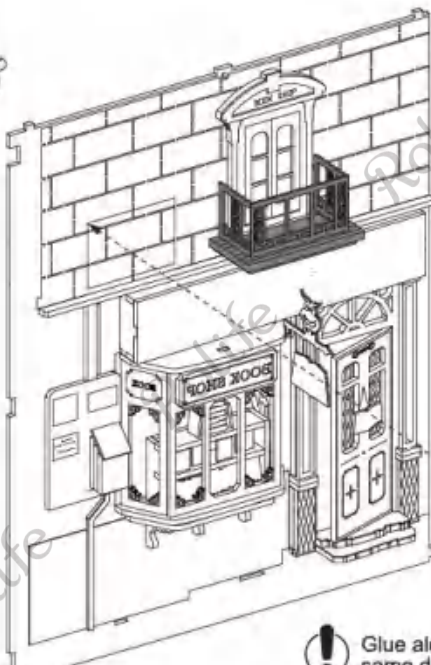


! Glue along reference lines. Keep patterns in the same direction while assembling G11.

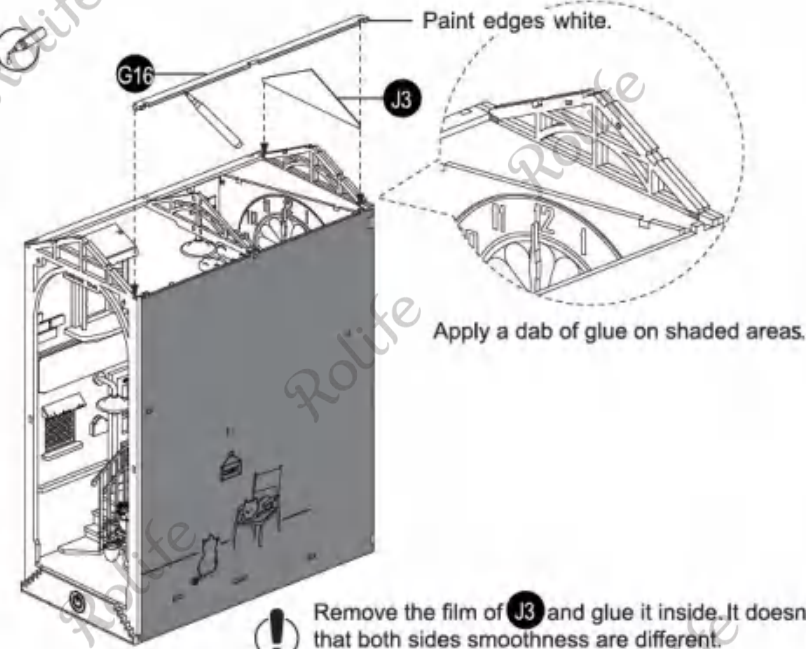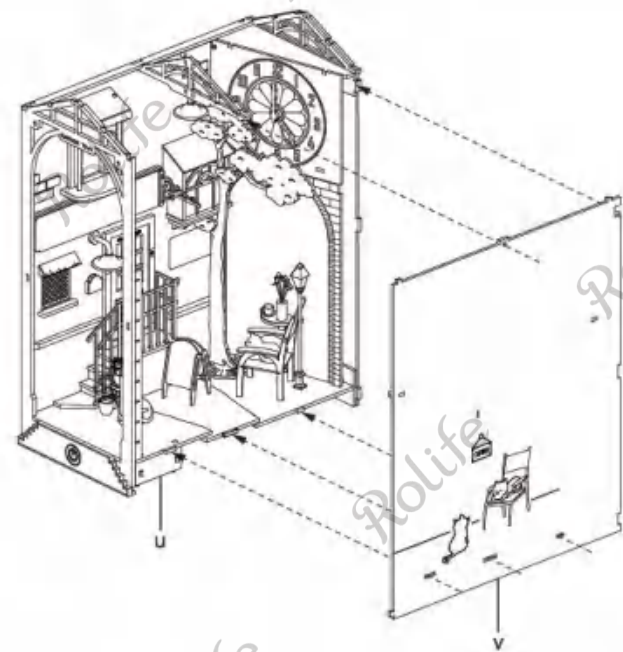

Remove the film of J3 and glue it inside. It doesn't matter that both sides smoothness are different. Apply a dab of glue on one side and press 5s.

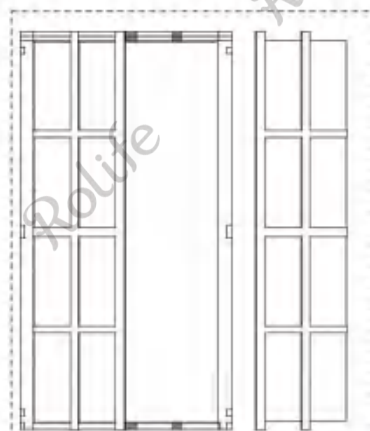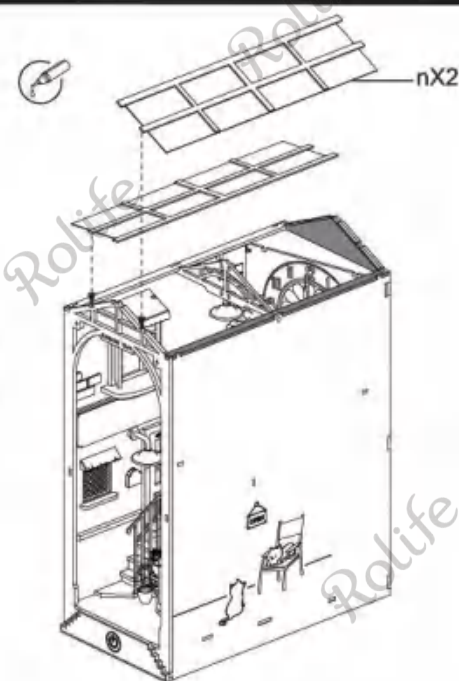

Apply a dab of glue on shaded areas. Align both ends and glue. Cut off excess parts while gluing.

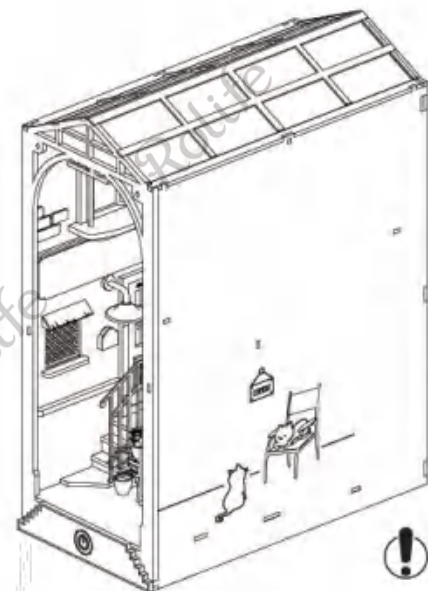

Complete.



**BOOK NOOK
& WONDERLAND**


**SUNSHINE
TOWN
TGB02**



ROLIFE Facebook



rolife.robotime.com/

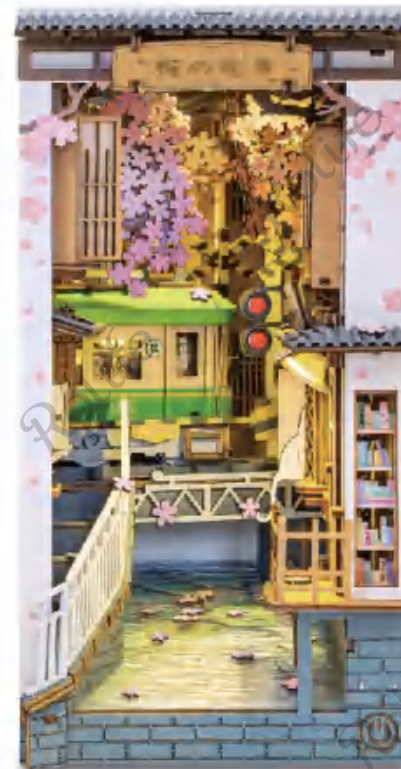

**TGB01
Sakura Densya**




**TGB02
Sunshine Town**



**TGB03
Magic House**



**TGB04
Time Travel**

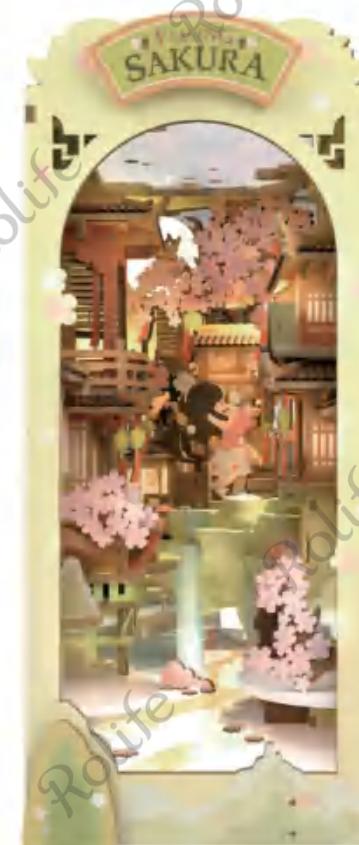

**TGB05
Falling Sakura**