INSTRUCTION

Rolife

Oxygen Oasis

• DH102

Scan the QR code or go to Community.robotime.com to discover DIY ideas, quick tips & WIN free kits

Pictures for reference only. Please subject to our existing products.

Brief Introduction

WARNING:

01. The product requires 2 "AAA/LR03/AM4 1.5V" batteries (Batteries for self-preparation).
02. Before loading or removing batteries, please loosen screws on the cover of the battery box with the screwdriver first.
03. Non-rechargeable batteries are not to be recharged.
04. Rechargeable batteries are only to be charged under adult supervision.
05. Rechargeable batteries are to be removed from the toy before being charged.
06. Different types of batteries or new and used batteries are not to be mixed.
07. Batteries are to be inserted with the correct polarity (+ and -).
08. Remove the exhausted battery in time.
09. The power supply terminal cannot be short circuited.
10. Do not connect the wire to a mains outlet.
11. The product is not to be connected to more than the recommended number of power supplies.
12. Check each part before assembly. If the part is damaged, fix it well before assembly.
13. The instruction must be retained since it contains important information.

NOTICE:

01. Children should be accompanied by adults while assembling.
02. Please keep the product away from flammable substances and humid environments to prevent damage.
03. The product contains small parts and electronic components. Adults should guide and supervise children in the correct use of the product to prevent ingestion or choking.
04. Please read the instructions carefully before assembly to confirm that the parts are not damaged or missing.
05. Take off the pieces from the board according to each step before assembling and place them properly in case of missing.
06. Please install the electronic components correctly and test whether the circuit is normal after completion.
07. Please don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
08. Please clean the product with clean soft cloth, and sand the board burr lightly with sandpaper.

Tools required

Notice:
Please take precautions when using strong glue/tools.

Icon Illustration

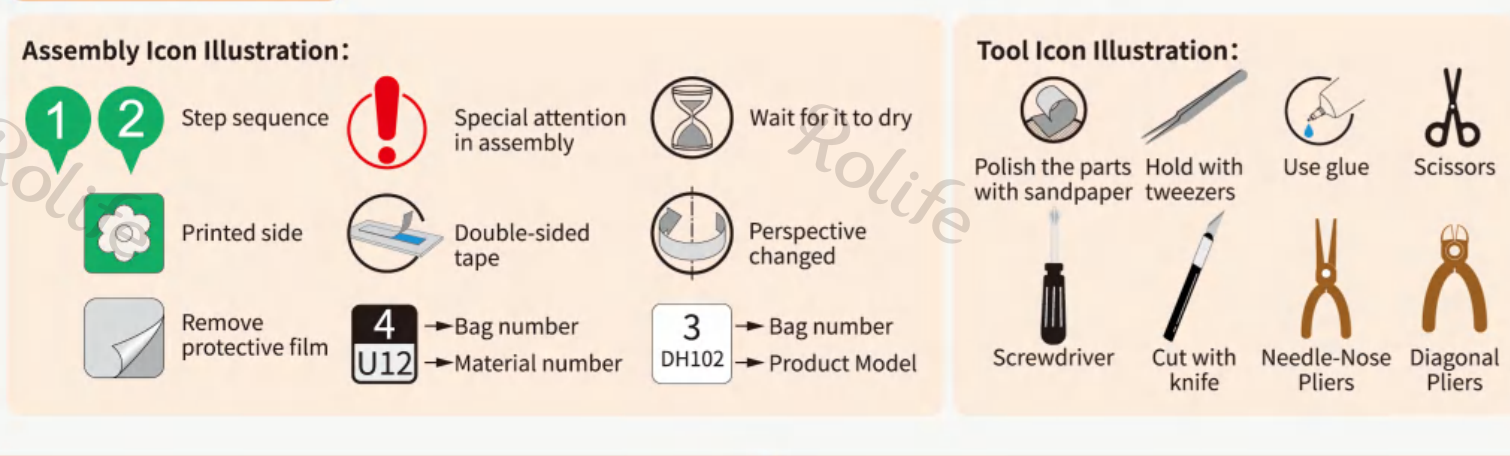

Assembly tips

Remove the part by pressing its back to reduce burrs.

1. Press the connection point to avoid breaking the part.
2. "+" means the part has spare ones

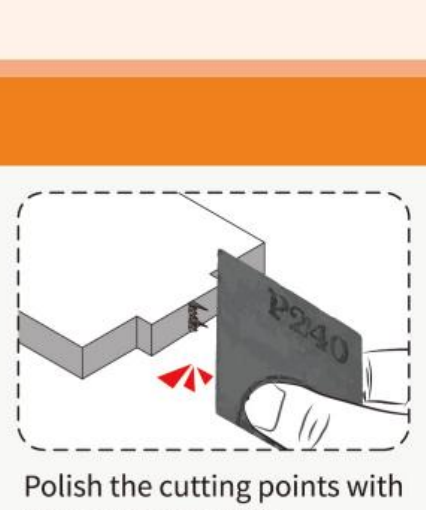
Polish the cutting points with the sandpaper stick

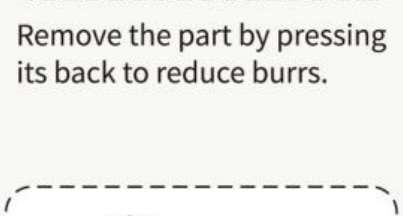
Put small parts into the bag to prevent loss.

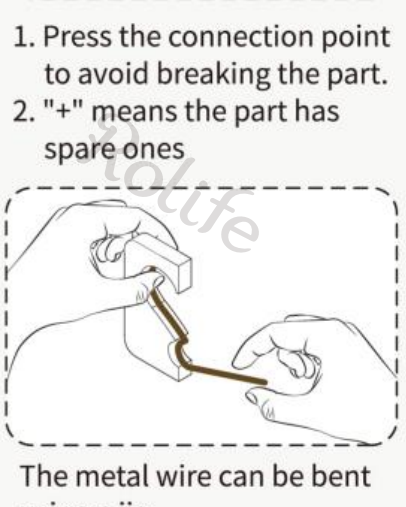
The metal wire can be bent using a jig.

For large areas of adhesive, a scraper can be used to spread it evenly.

Adhesive Instructions

Slow-drying adhesive
Binds on: Wood, paper, fabric, etc.

Tips of assembling

1. All the dimension in the instruction is shown in millimeter.
2. Only the tool icon appears in the assembly step.
3. Check if the light parts are securely welded.
4. Slow-drying adhesive takes time to dry completely, please self-prepare quick-drying adhesive if needed.

Part number illustration

Refer to the part number paper, find the piece, and compare it with the 1:1 figure. Then assemble it after confirmation. (Only forwooden pieces marked with Ⓣ)

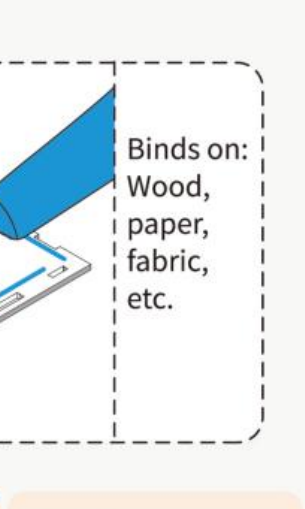

Part list illustration

1. Compare part bags with the part list before assembling to ensure all parts are included.
2. Find the part referring to the part number in the part list, and compare the part with the illustration to ensure it is right before assembling.

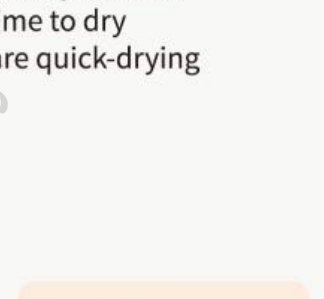

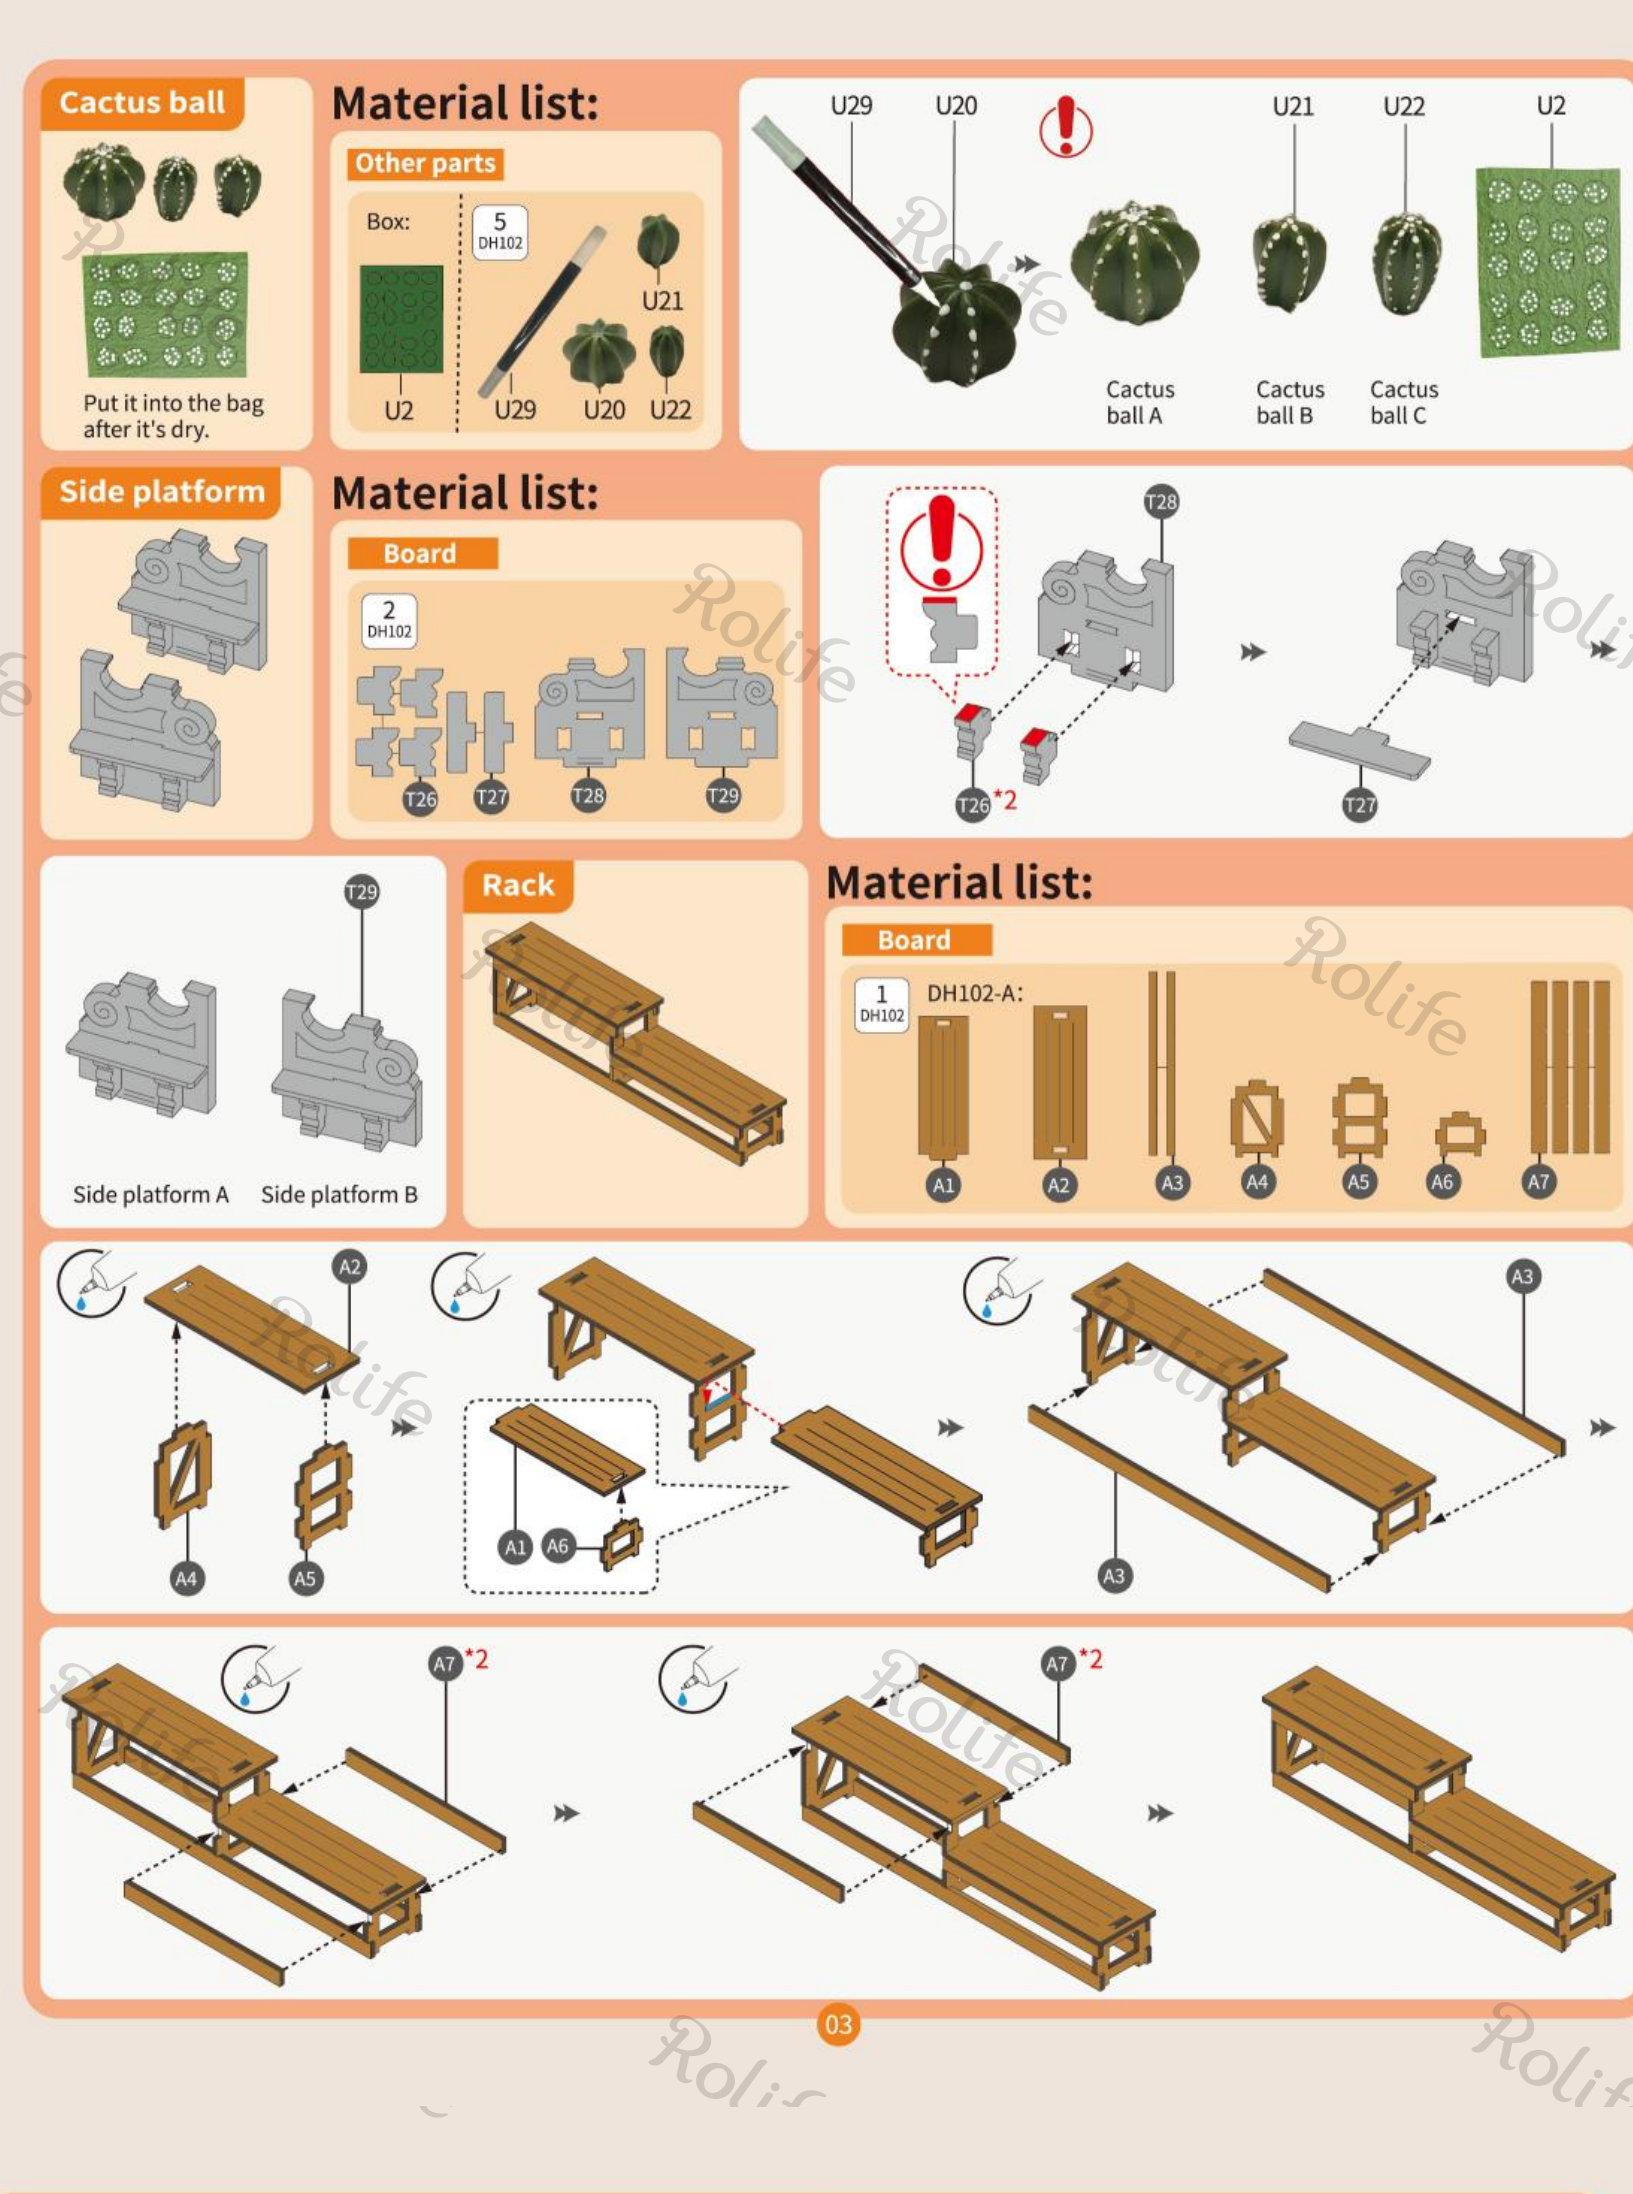

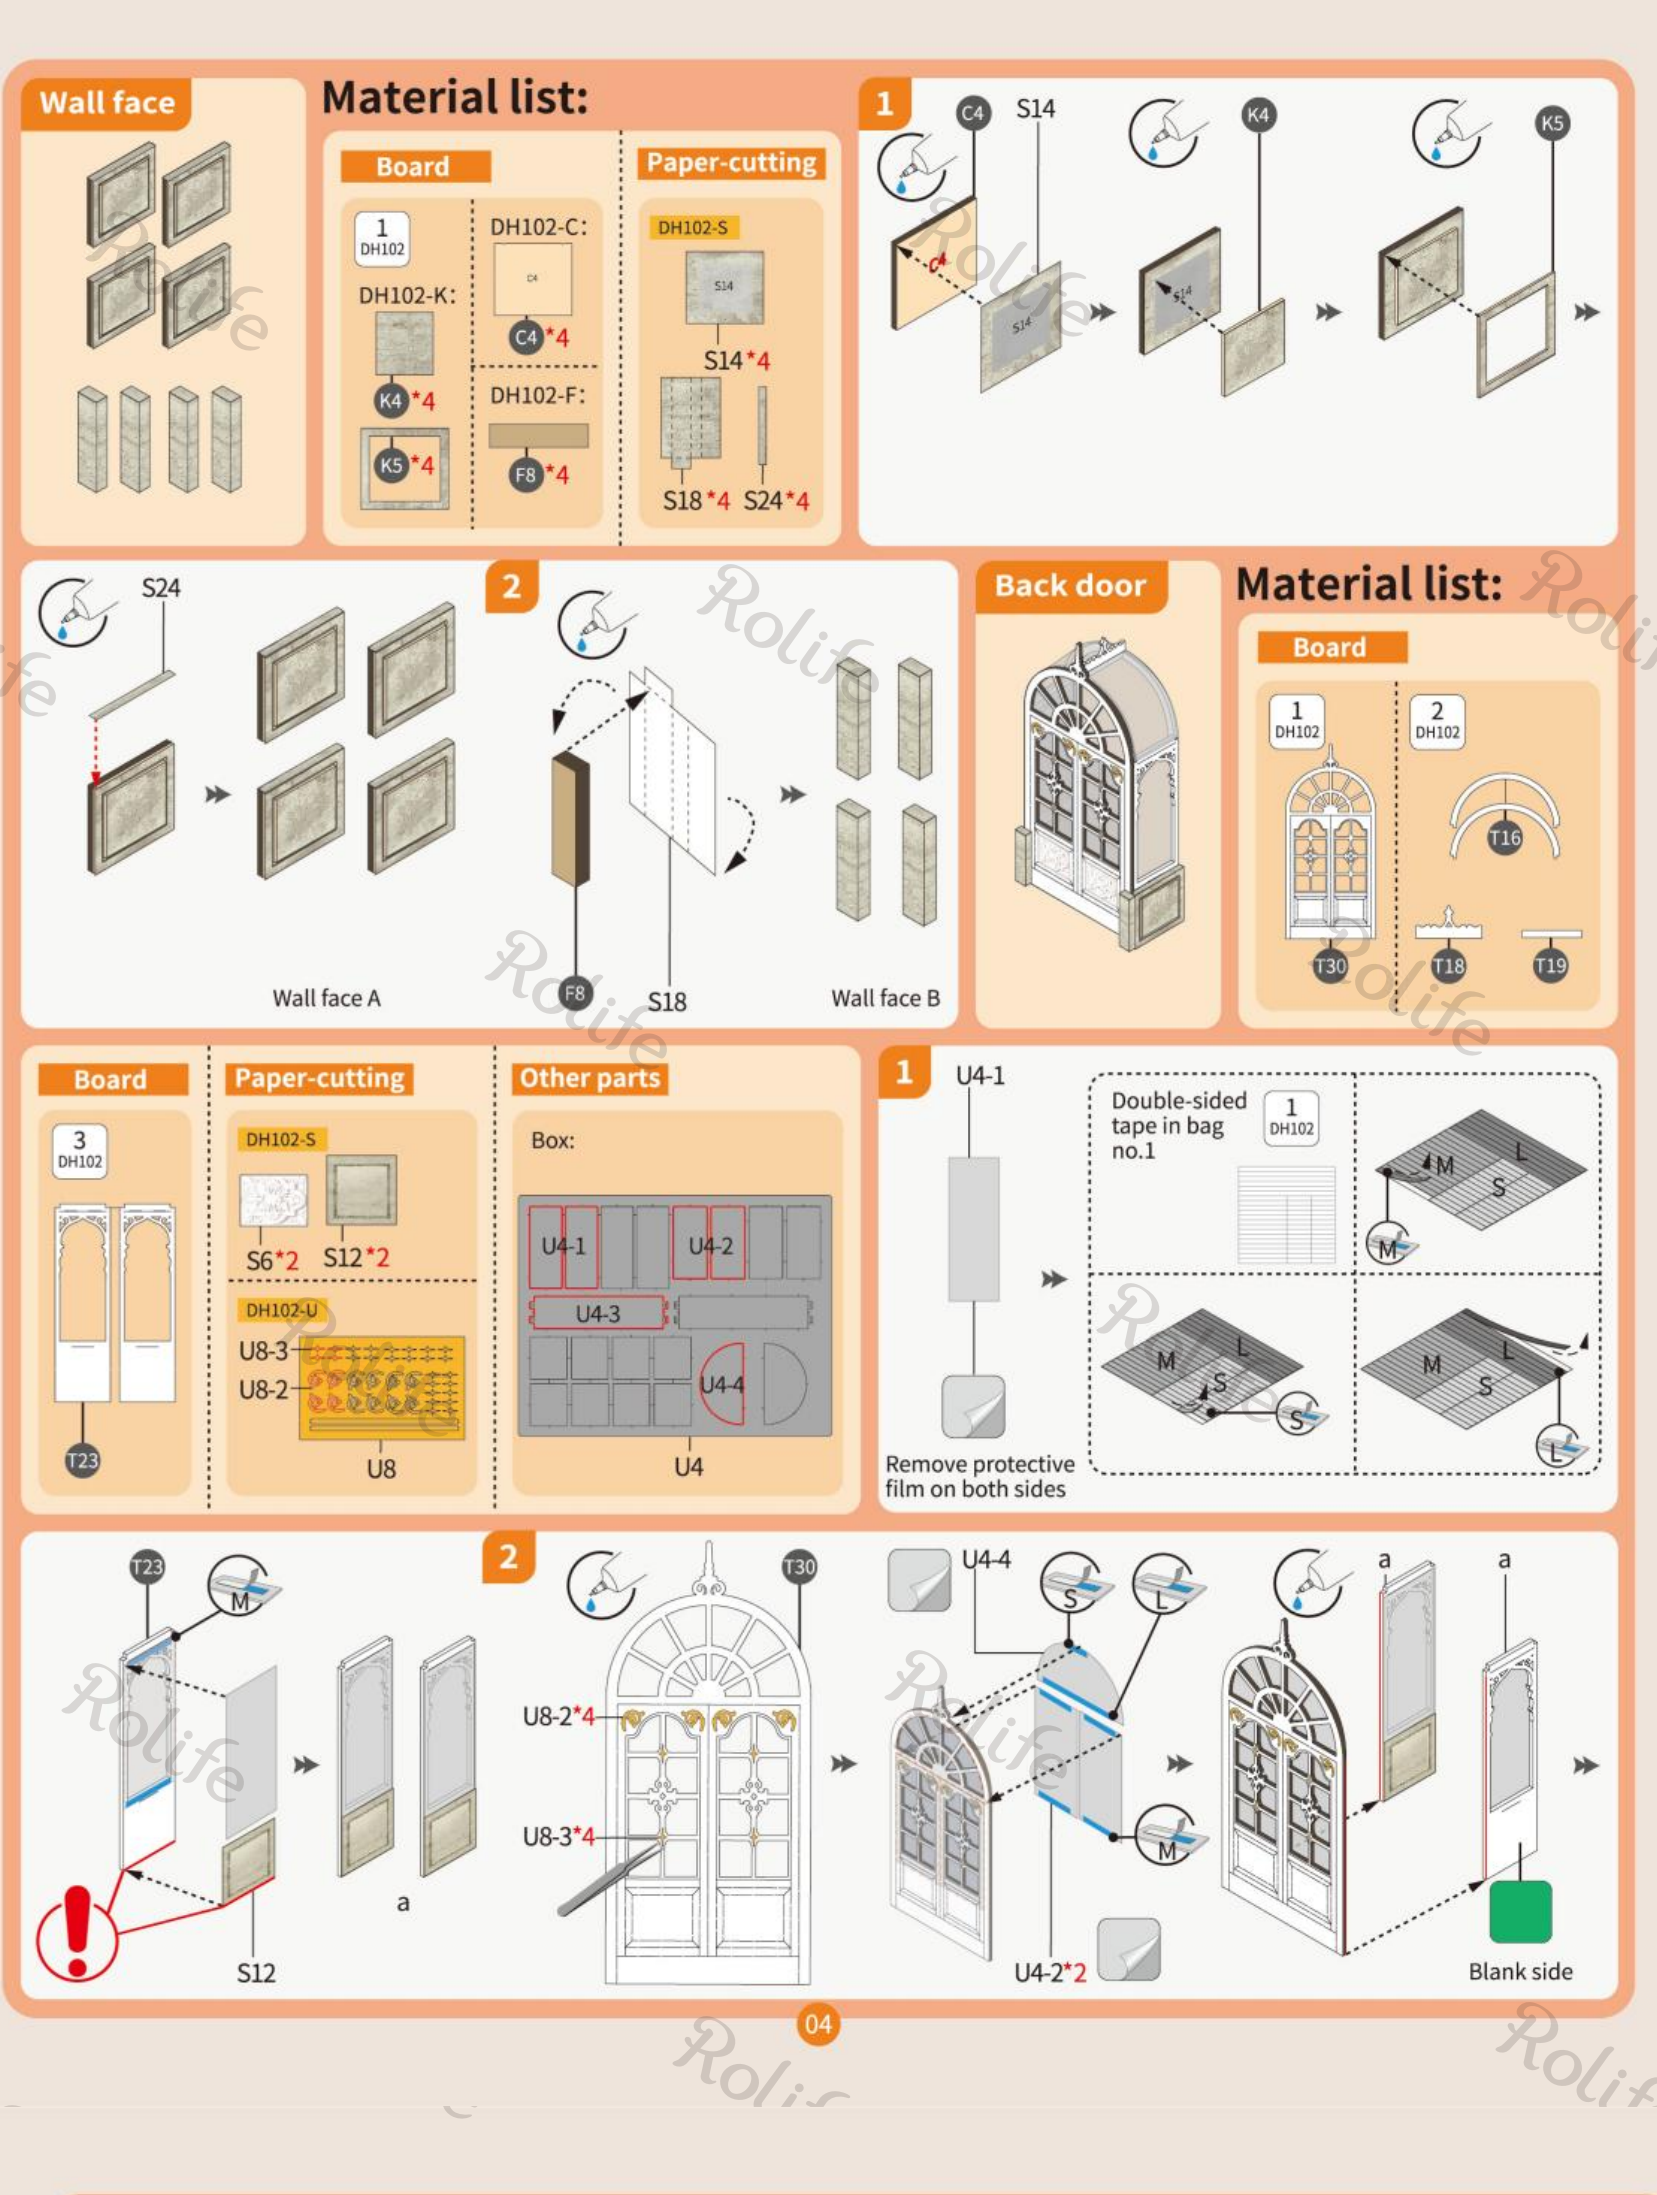

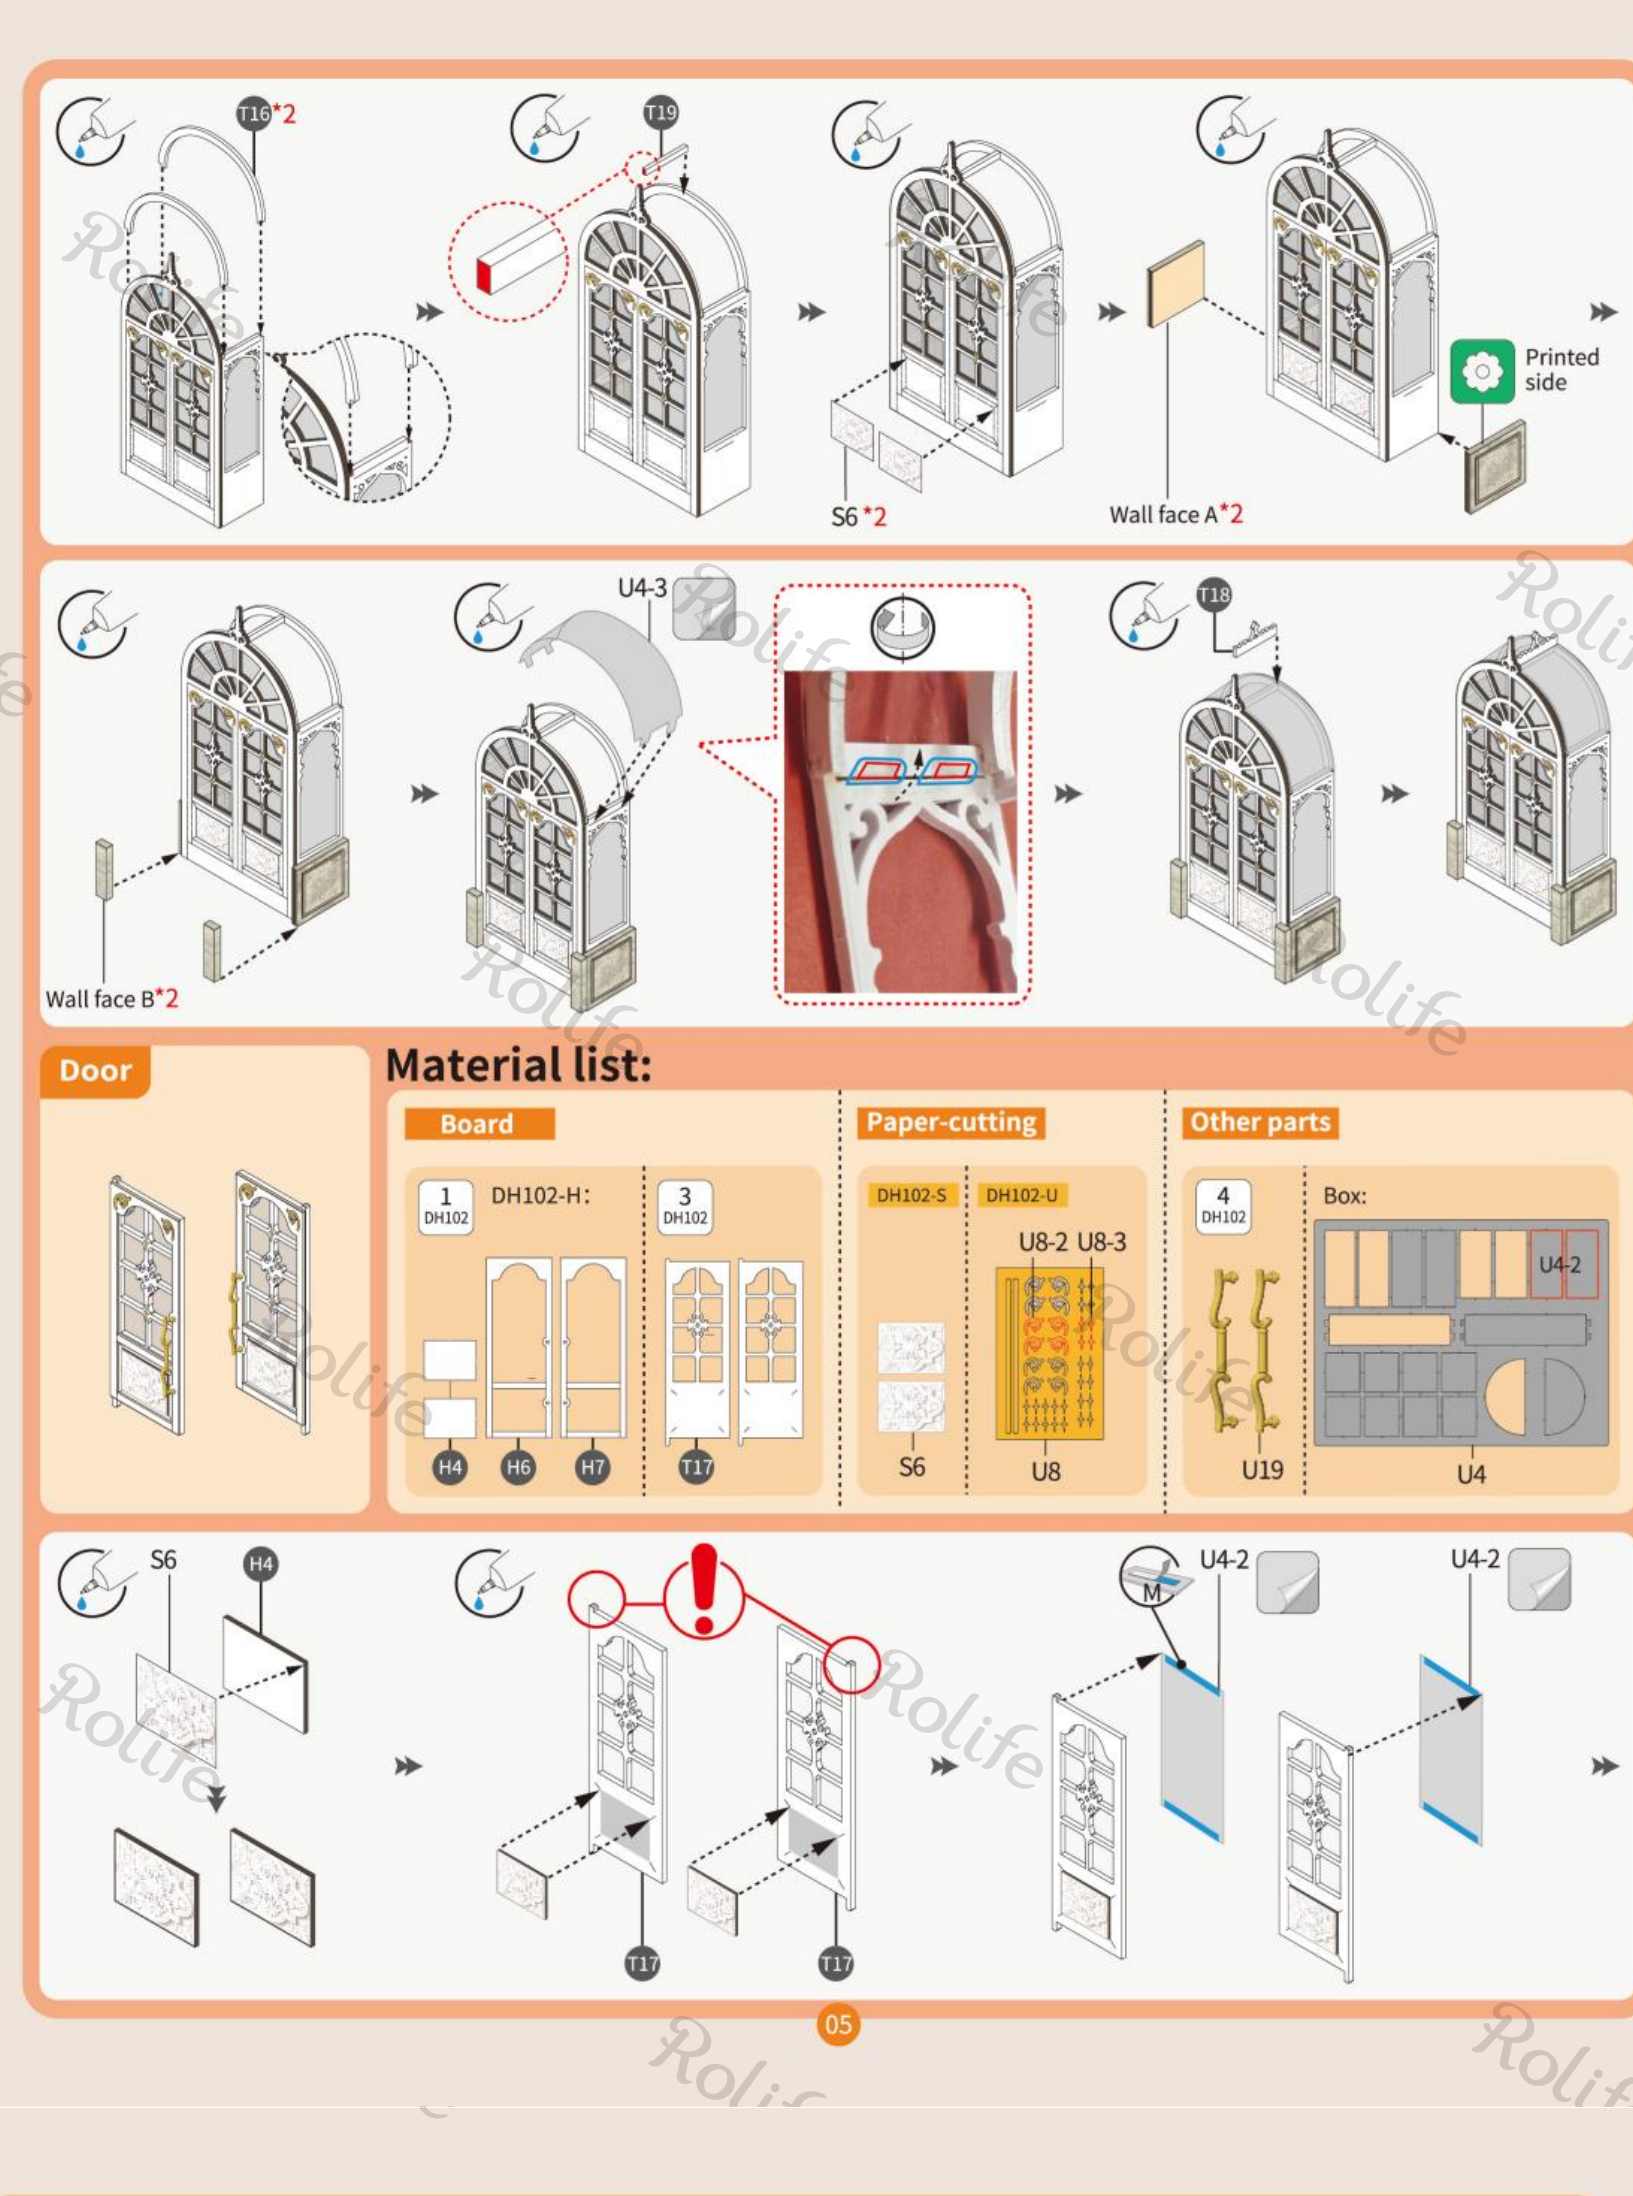

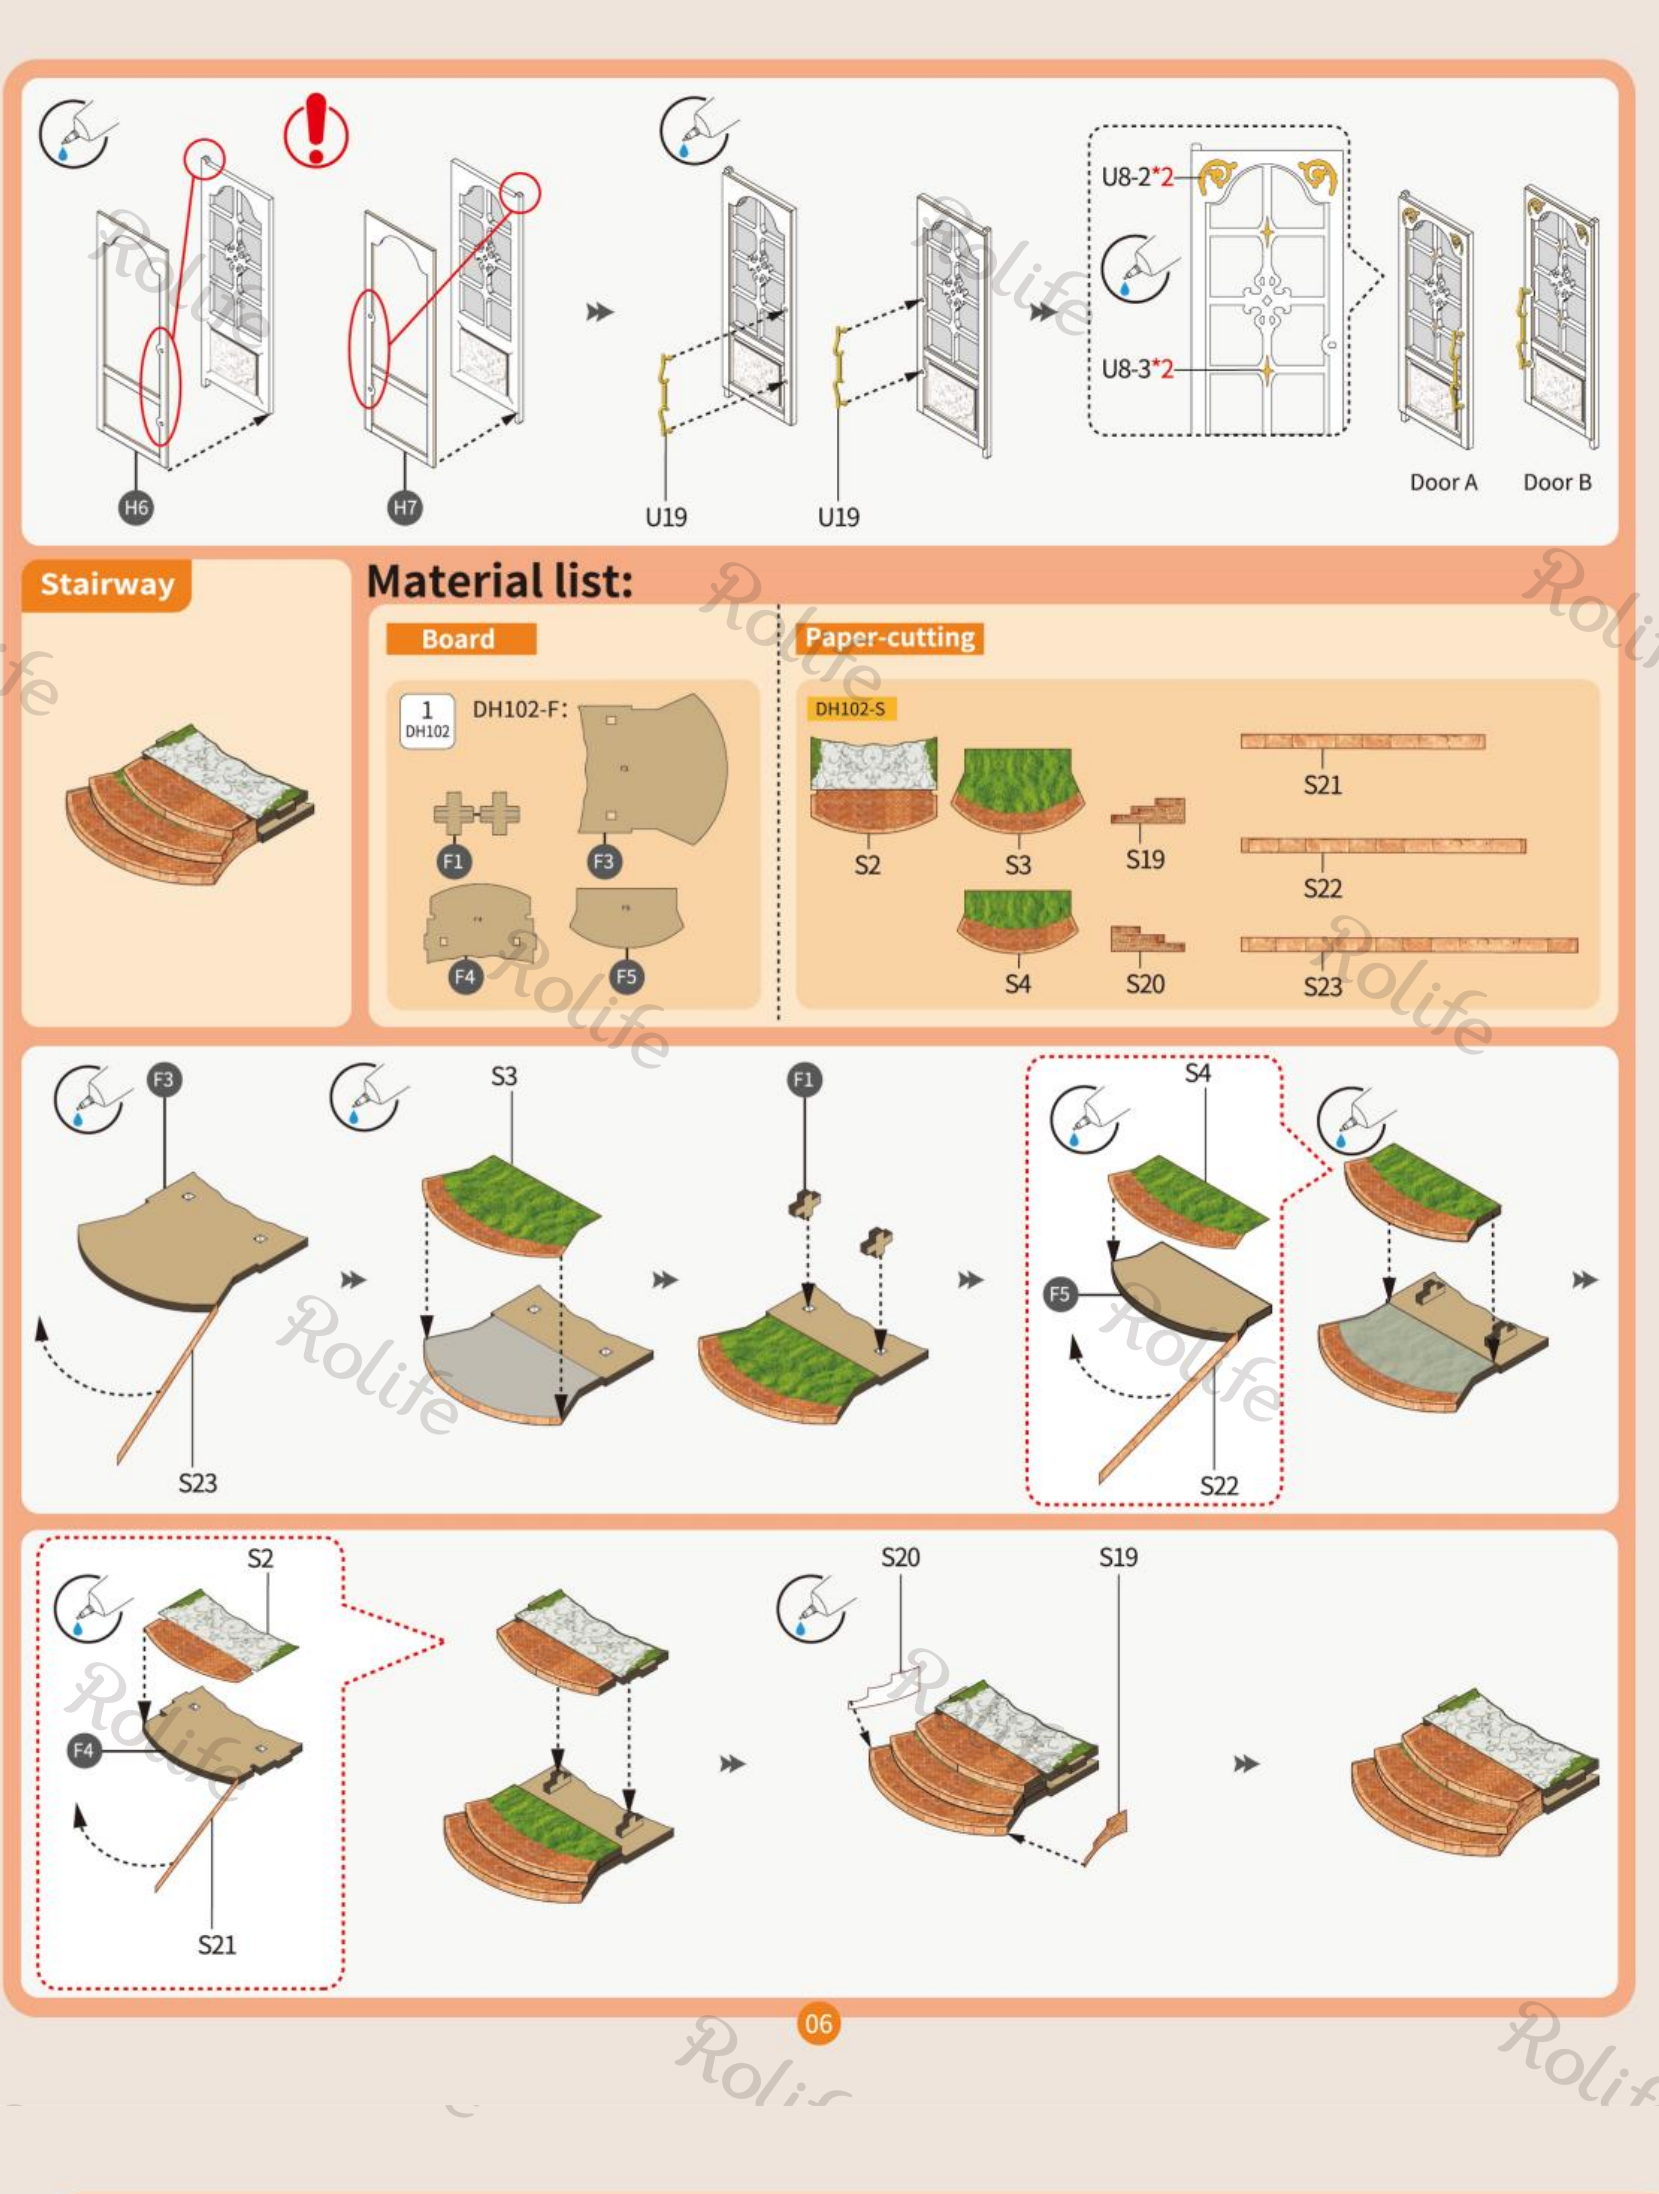

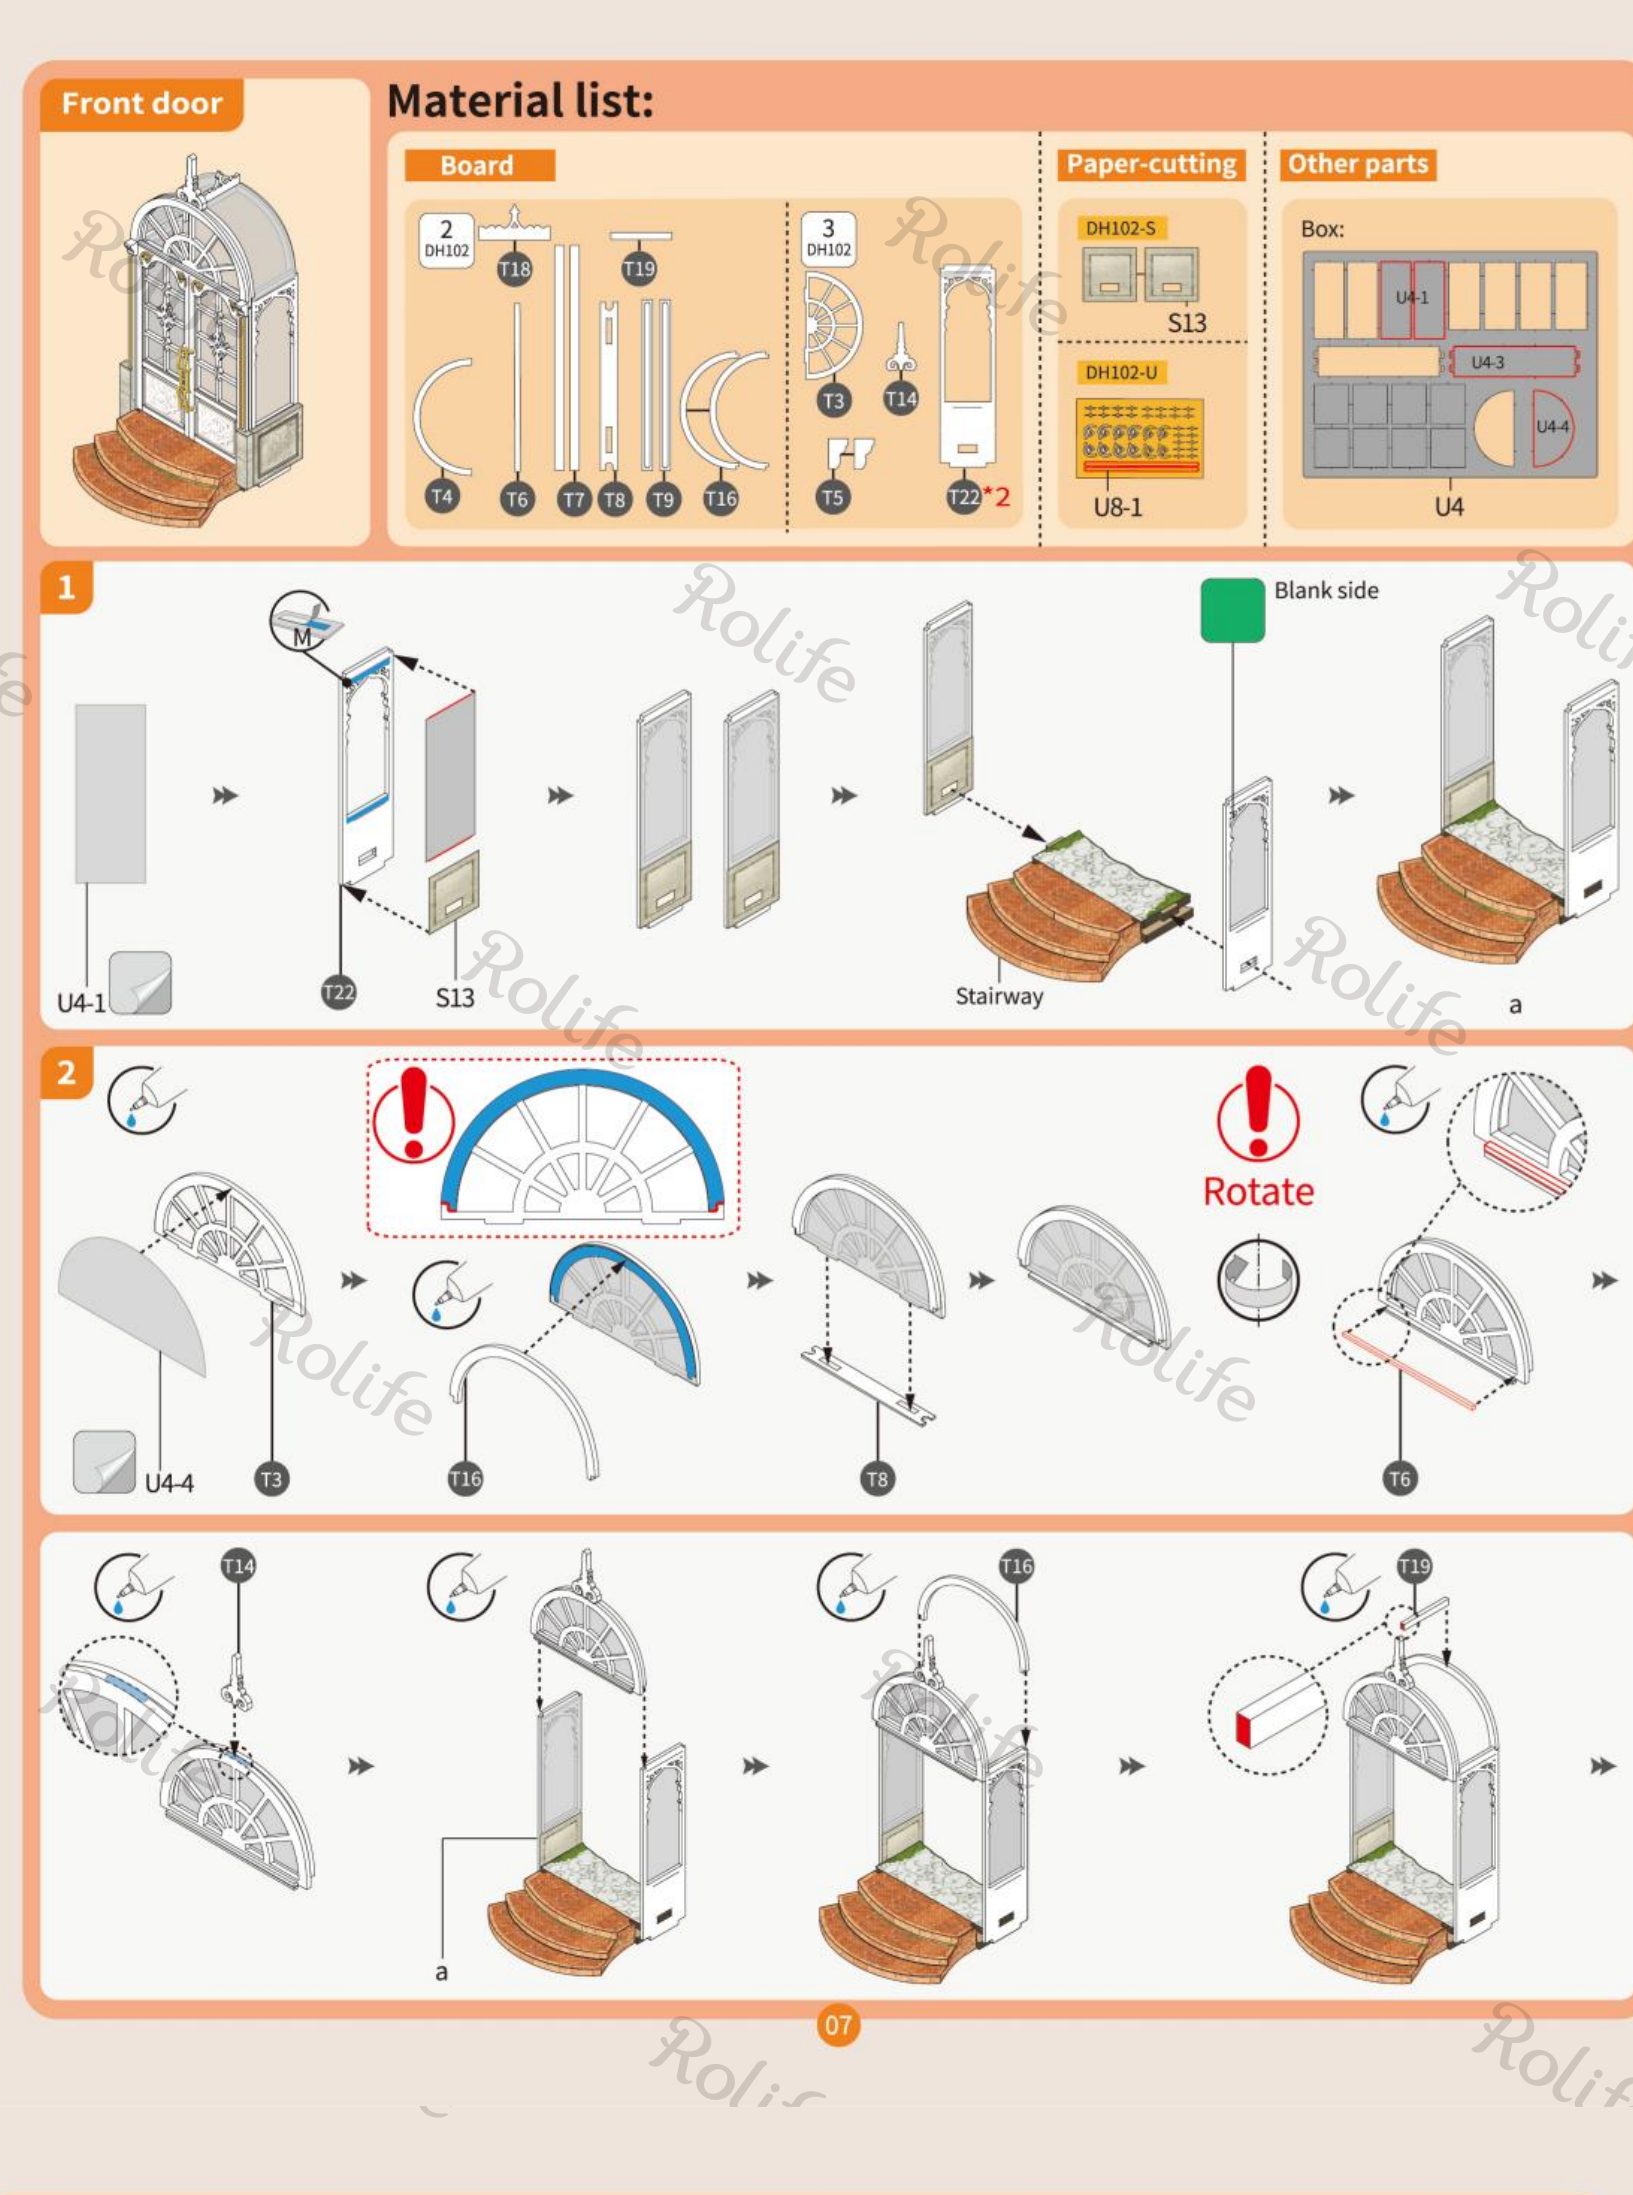

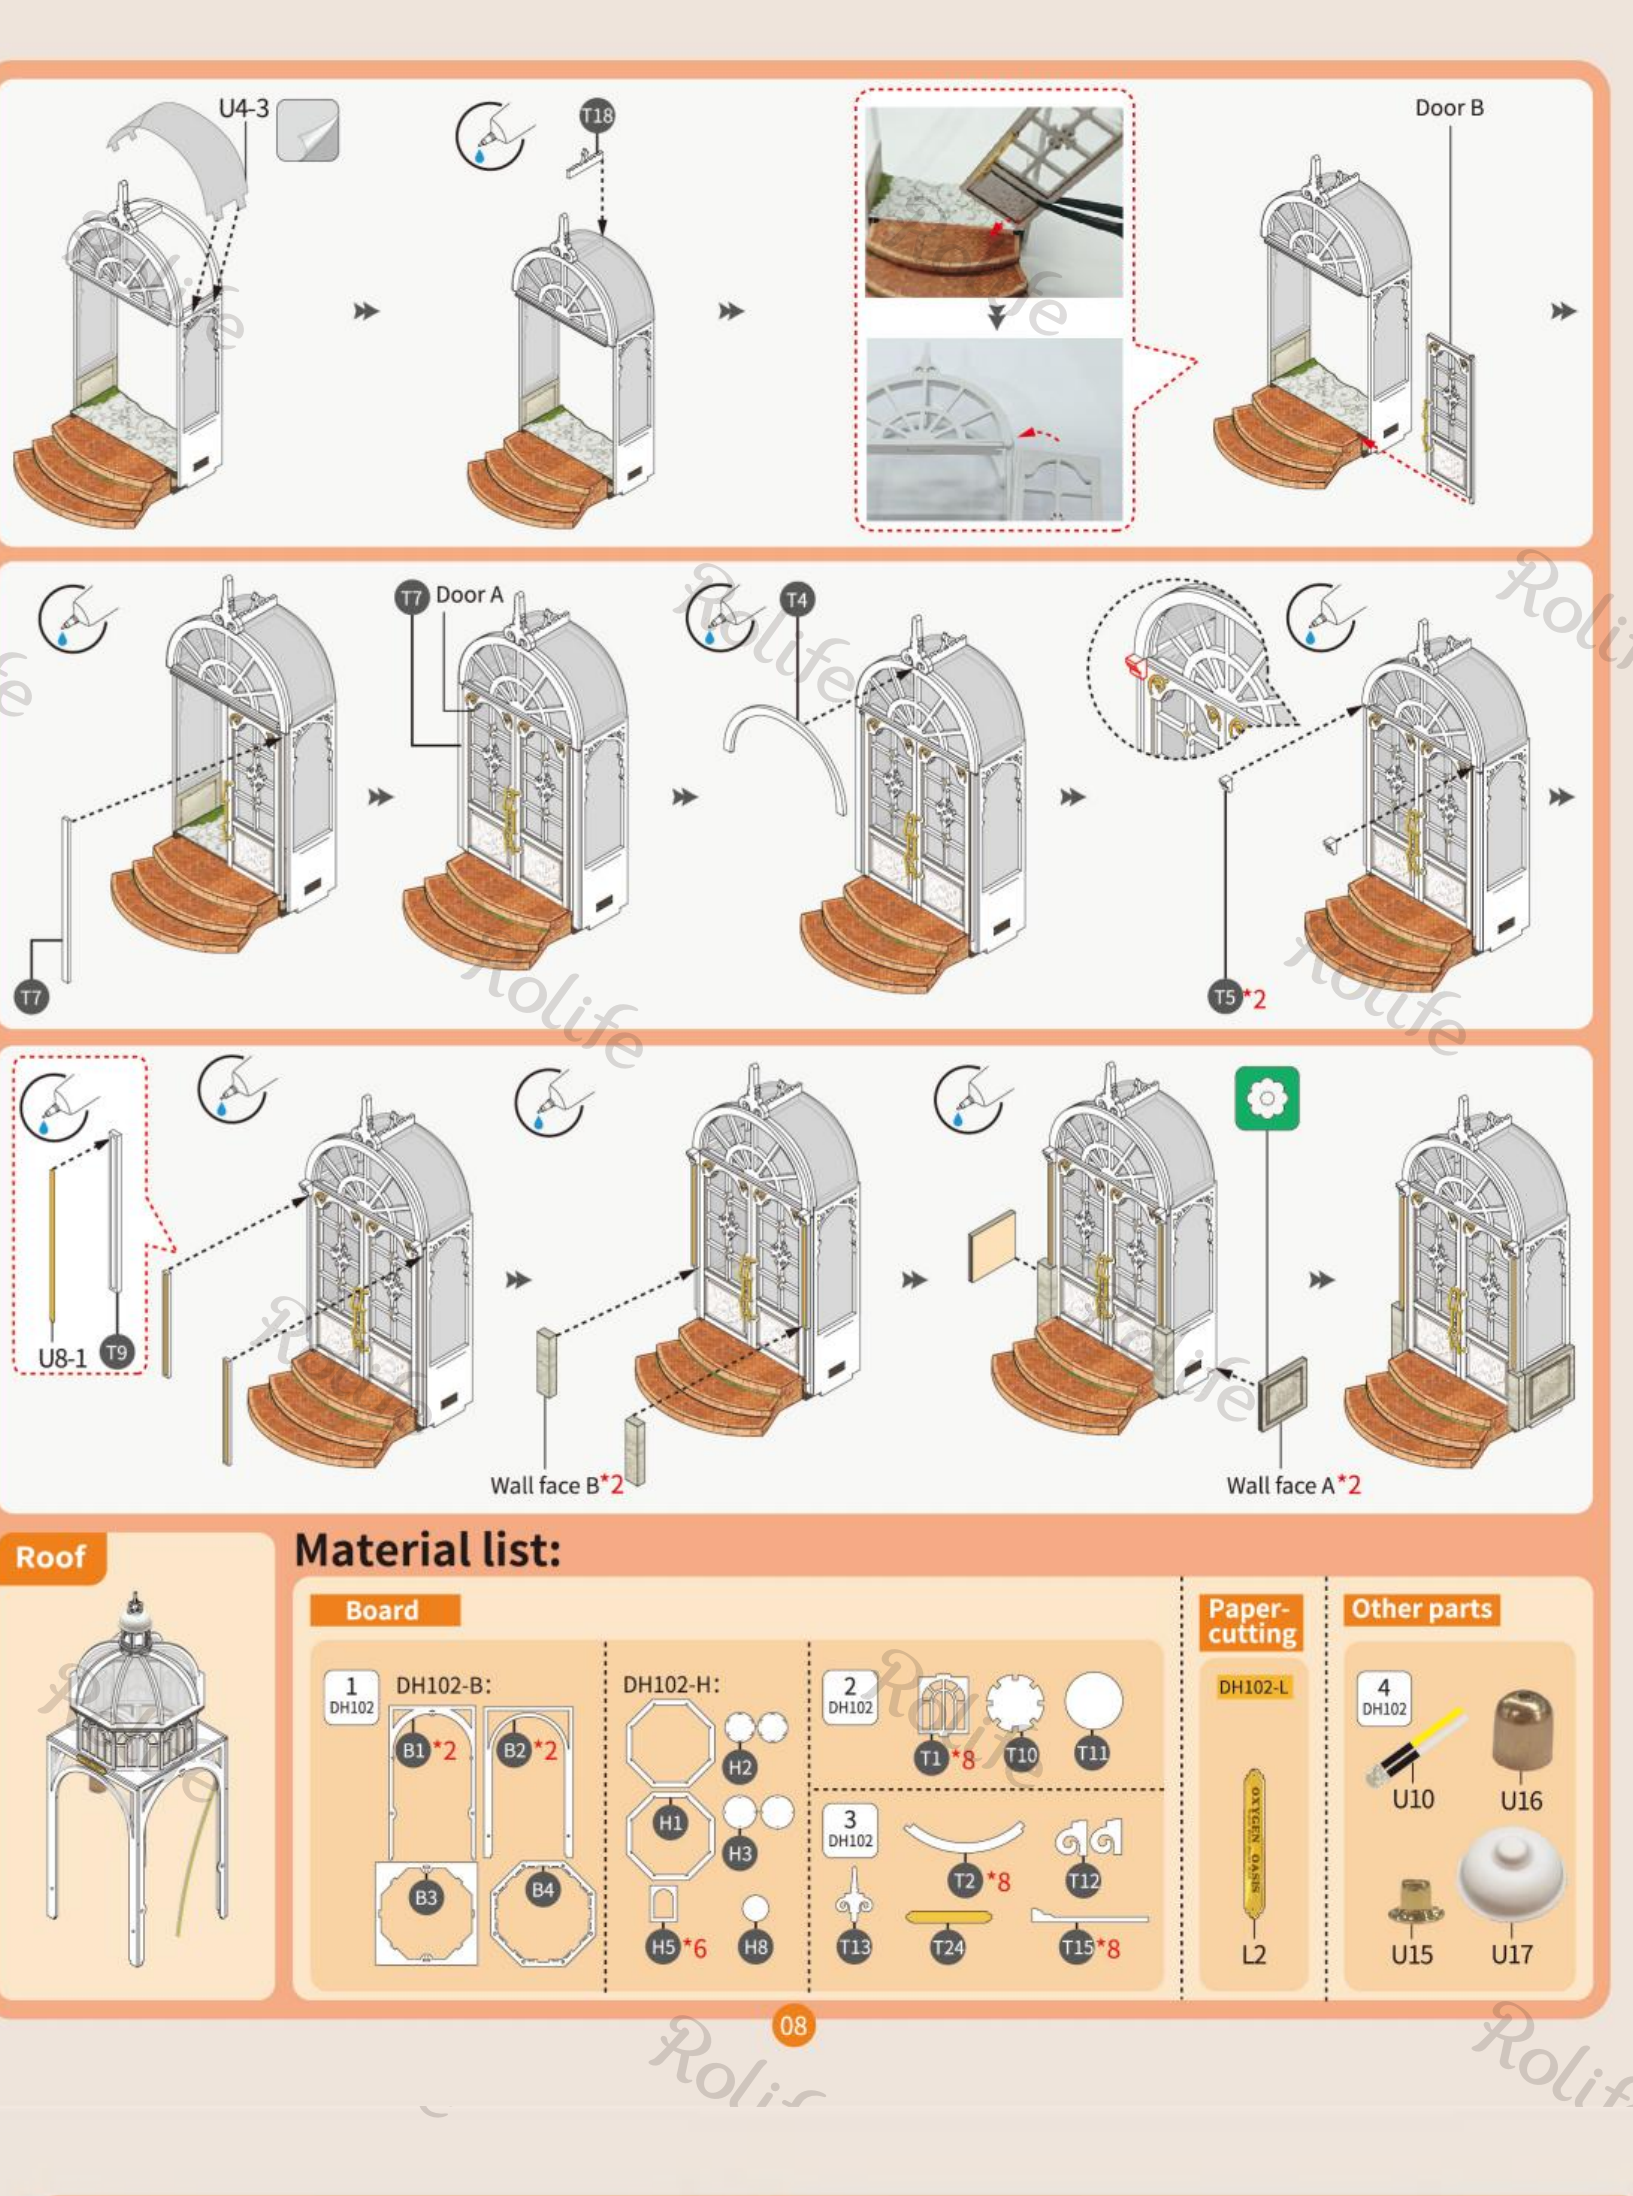

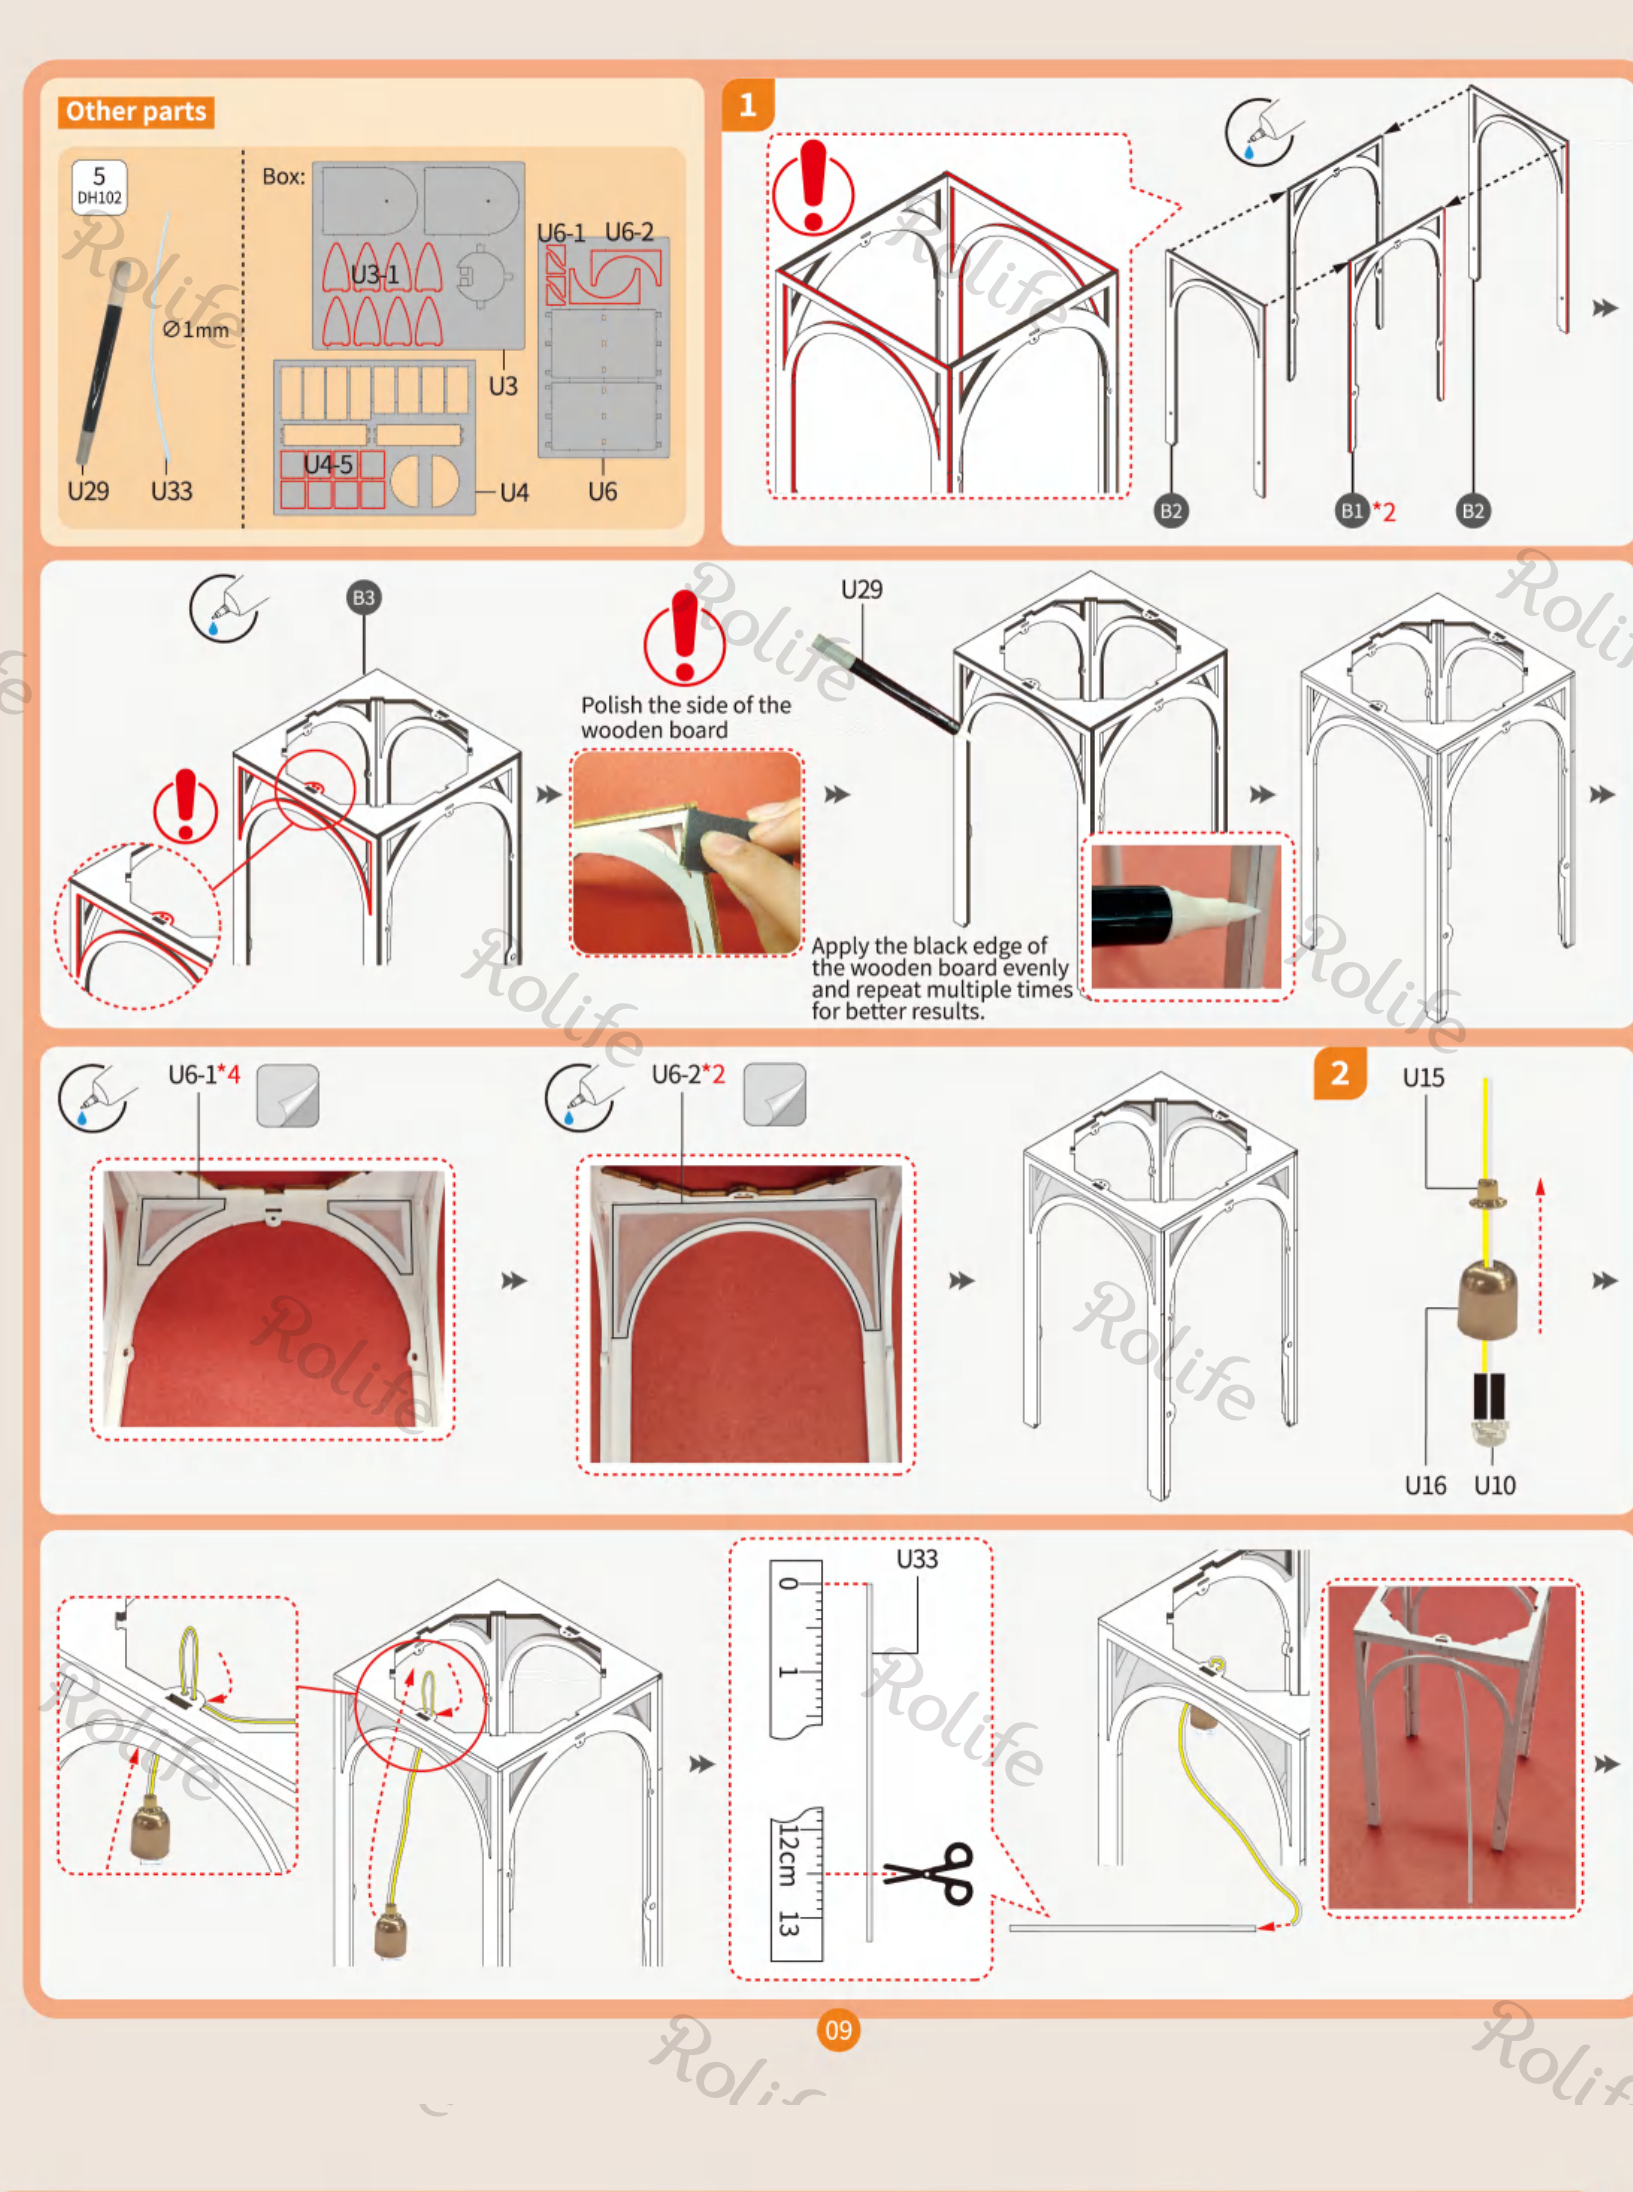
Other parts
5 DH102
Ø1mm
U29
U33
Box:
U3-1
U6-1
U6-2
U3
U4-5
U4
U6
1
B2
B1*2
B2
B3
Polish the side of the wooden board
U29
Apply the black edge of the wooden board evenly and repeat multiple times for better results.
U6-1*4
U6-2*2
2
U15
U16
U10
U33
12cm
13

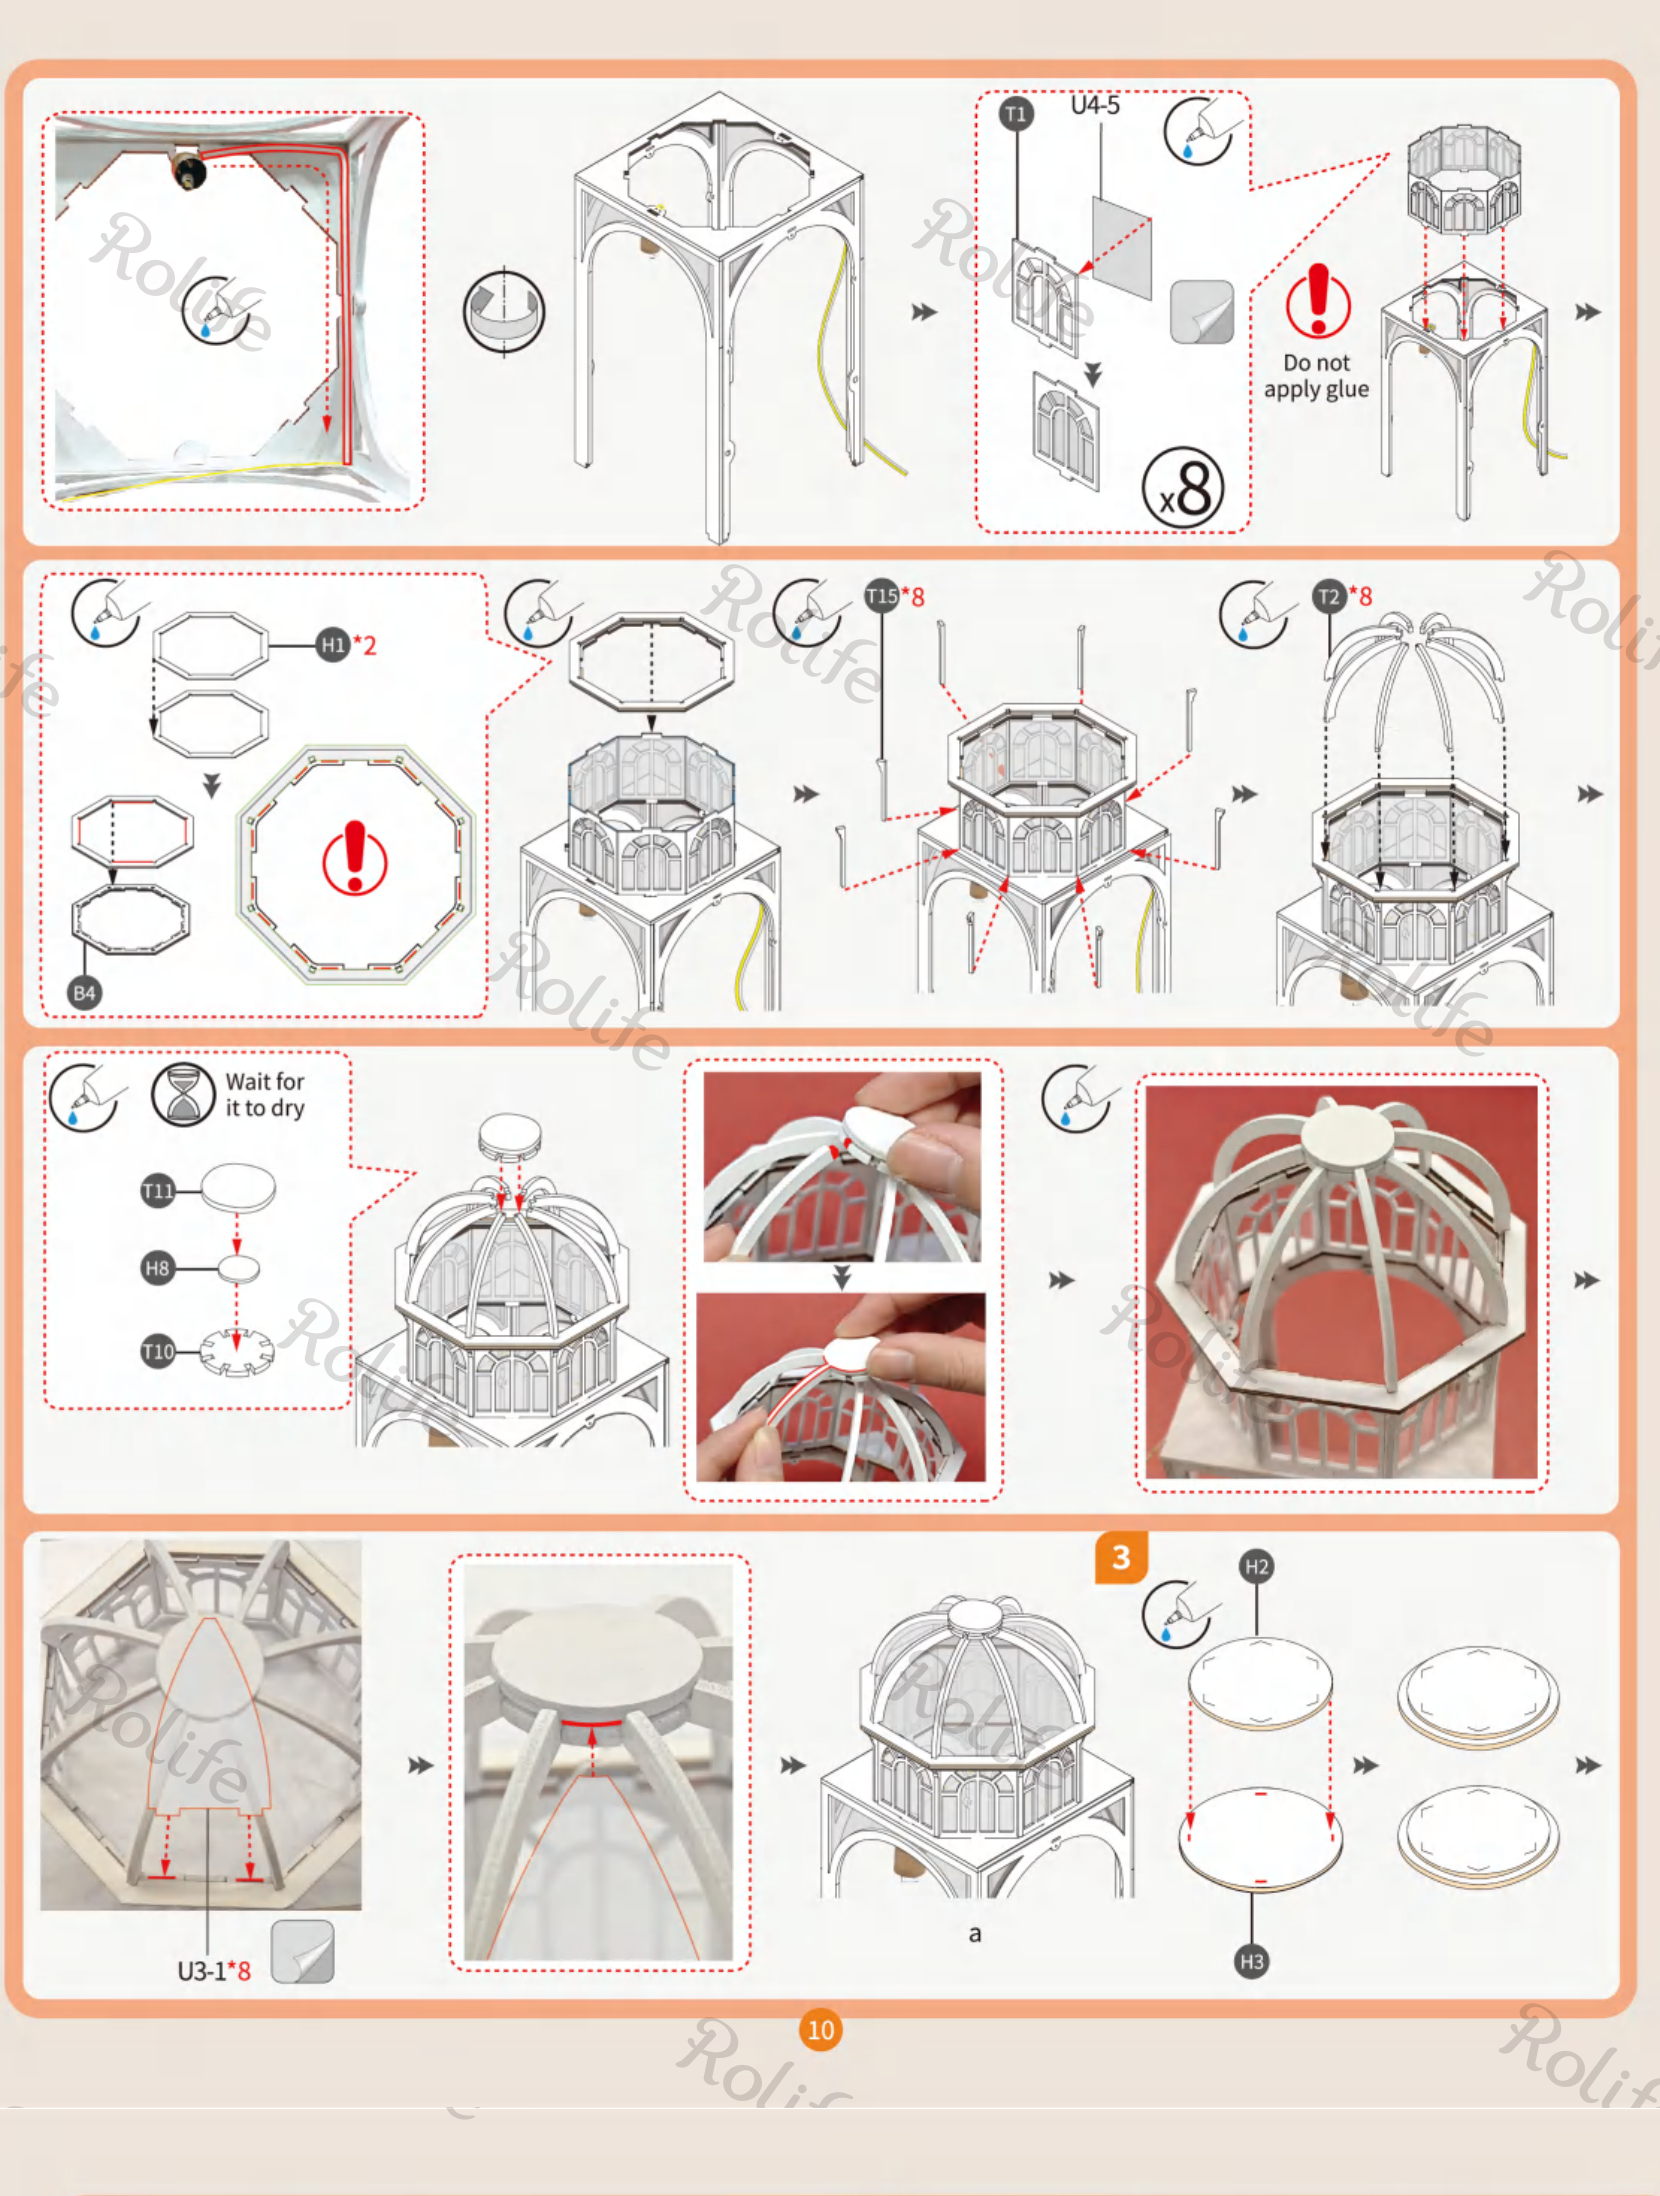

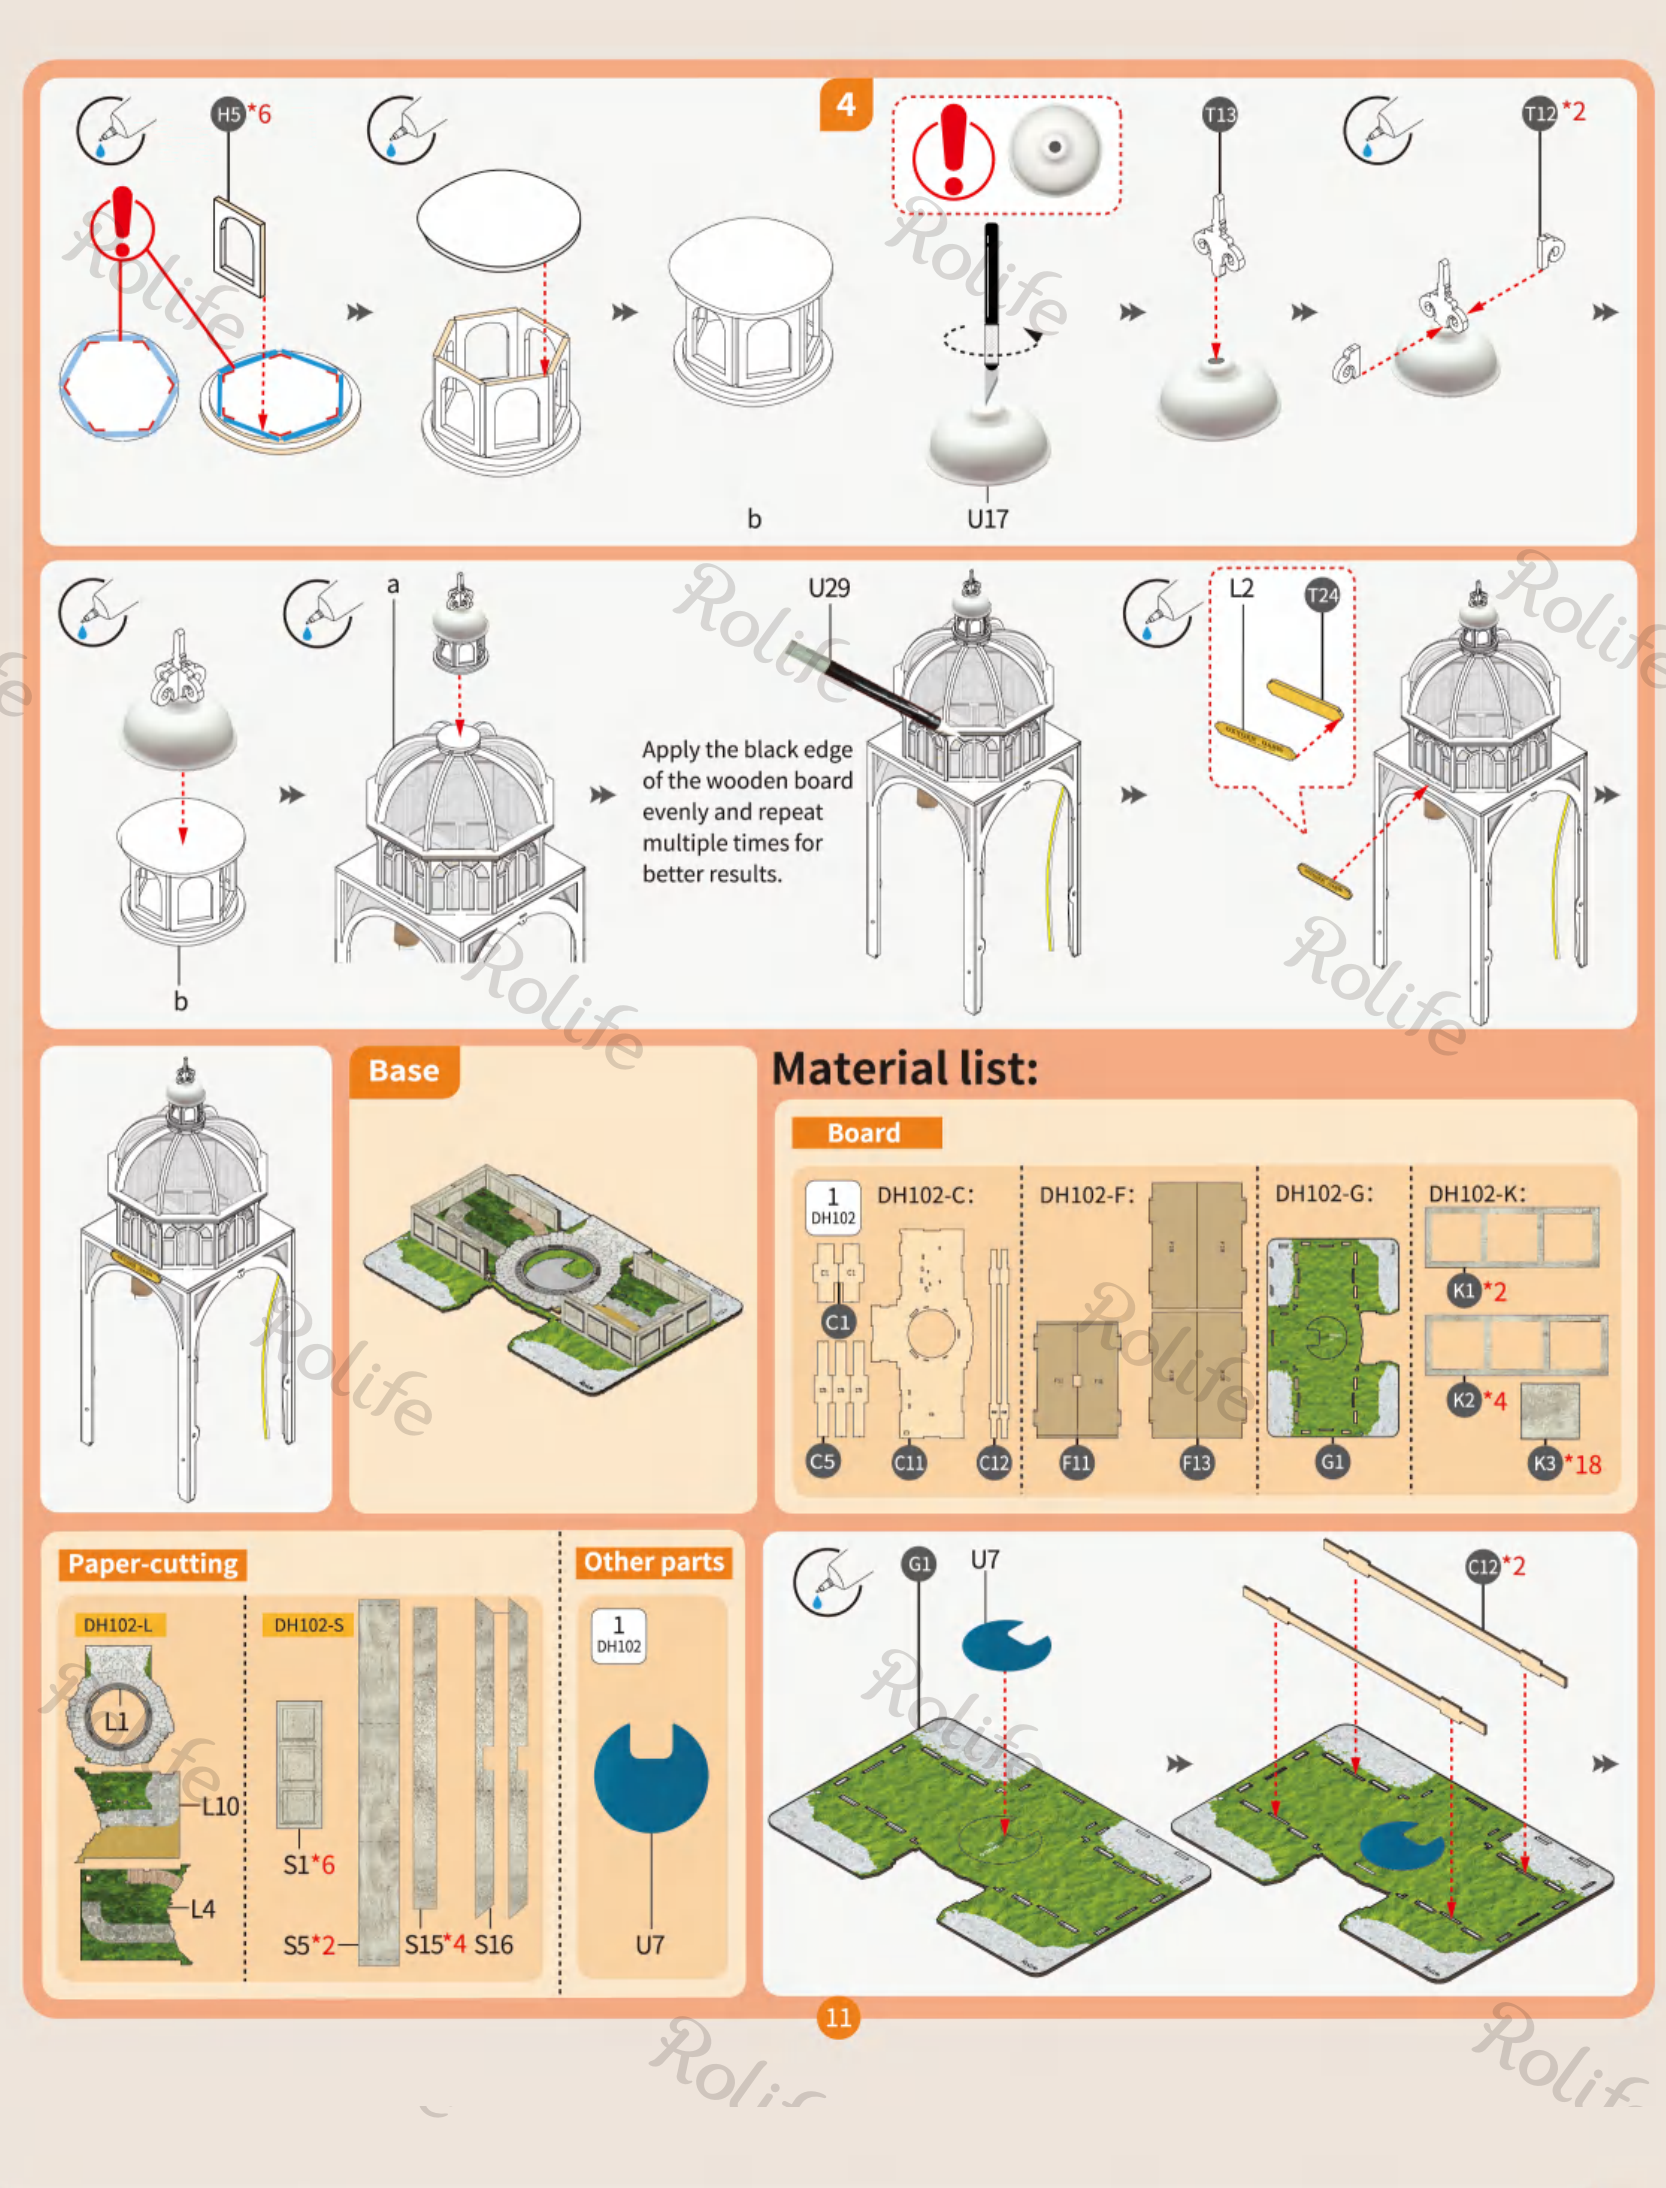

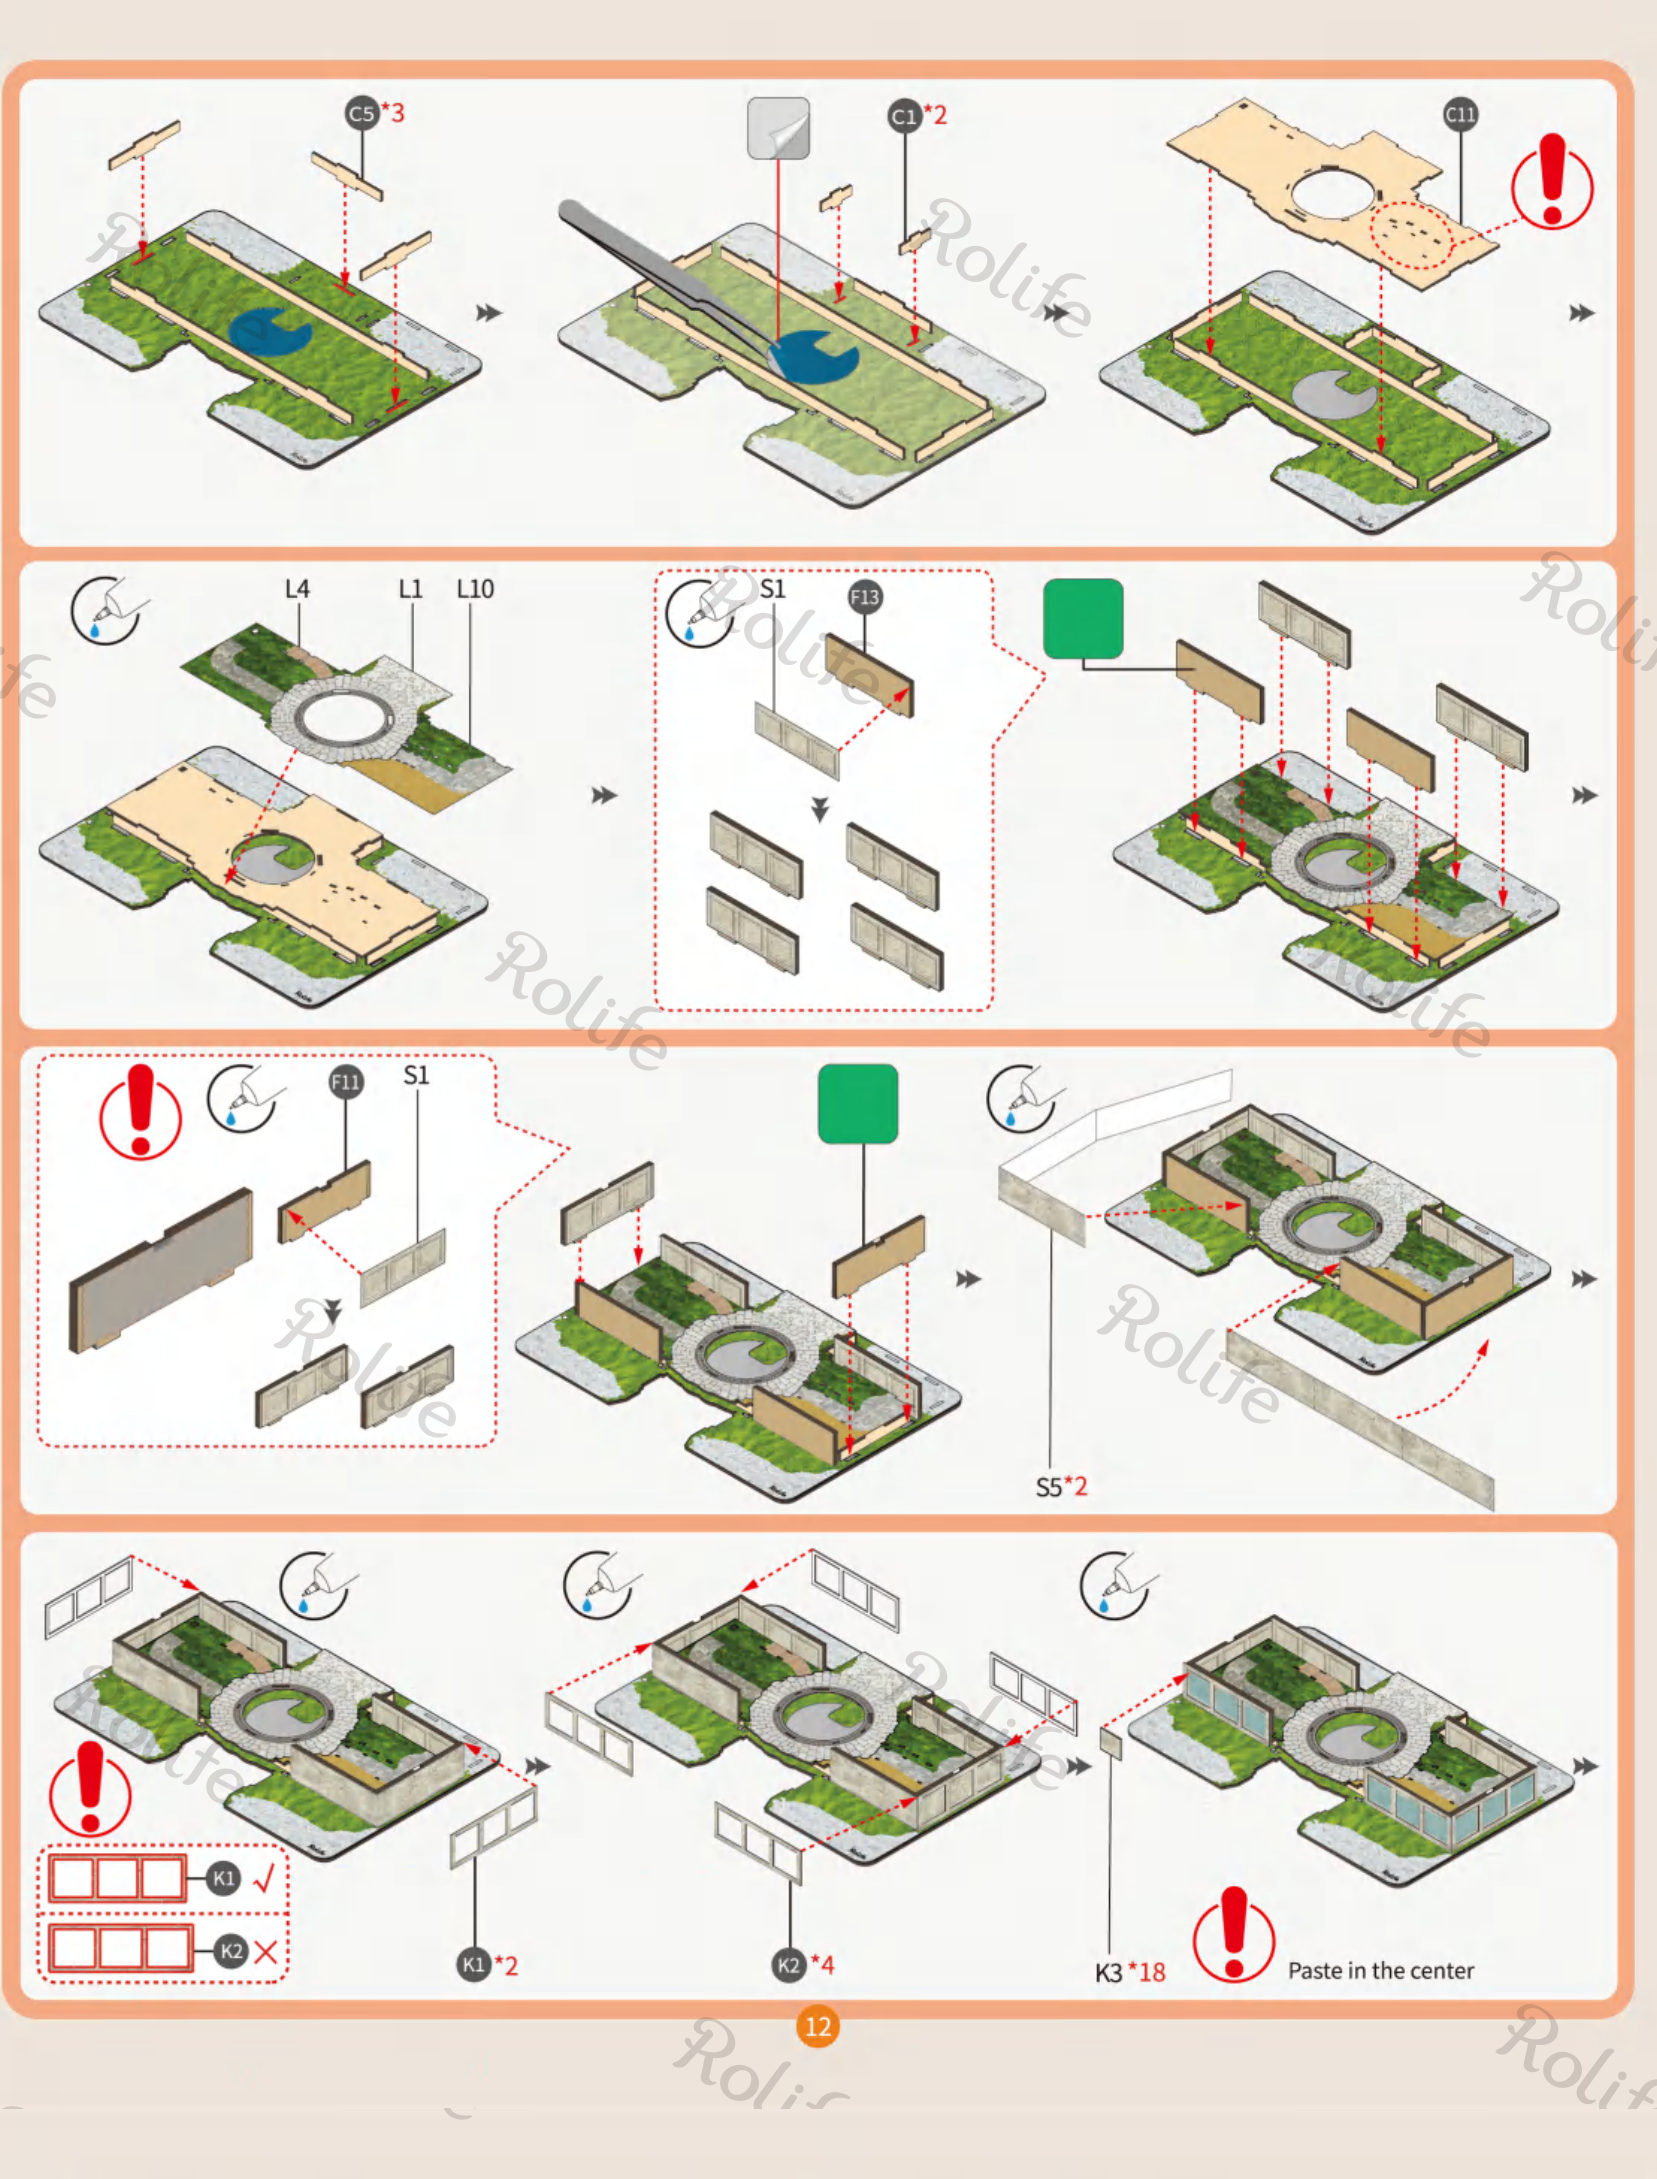

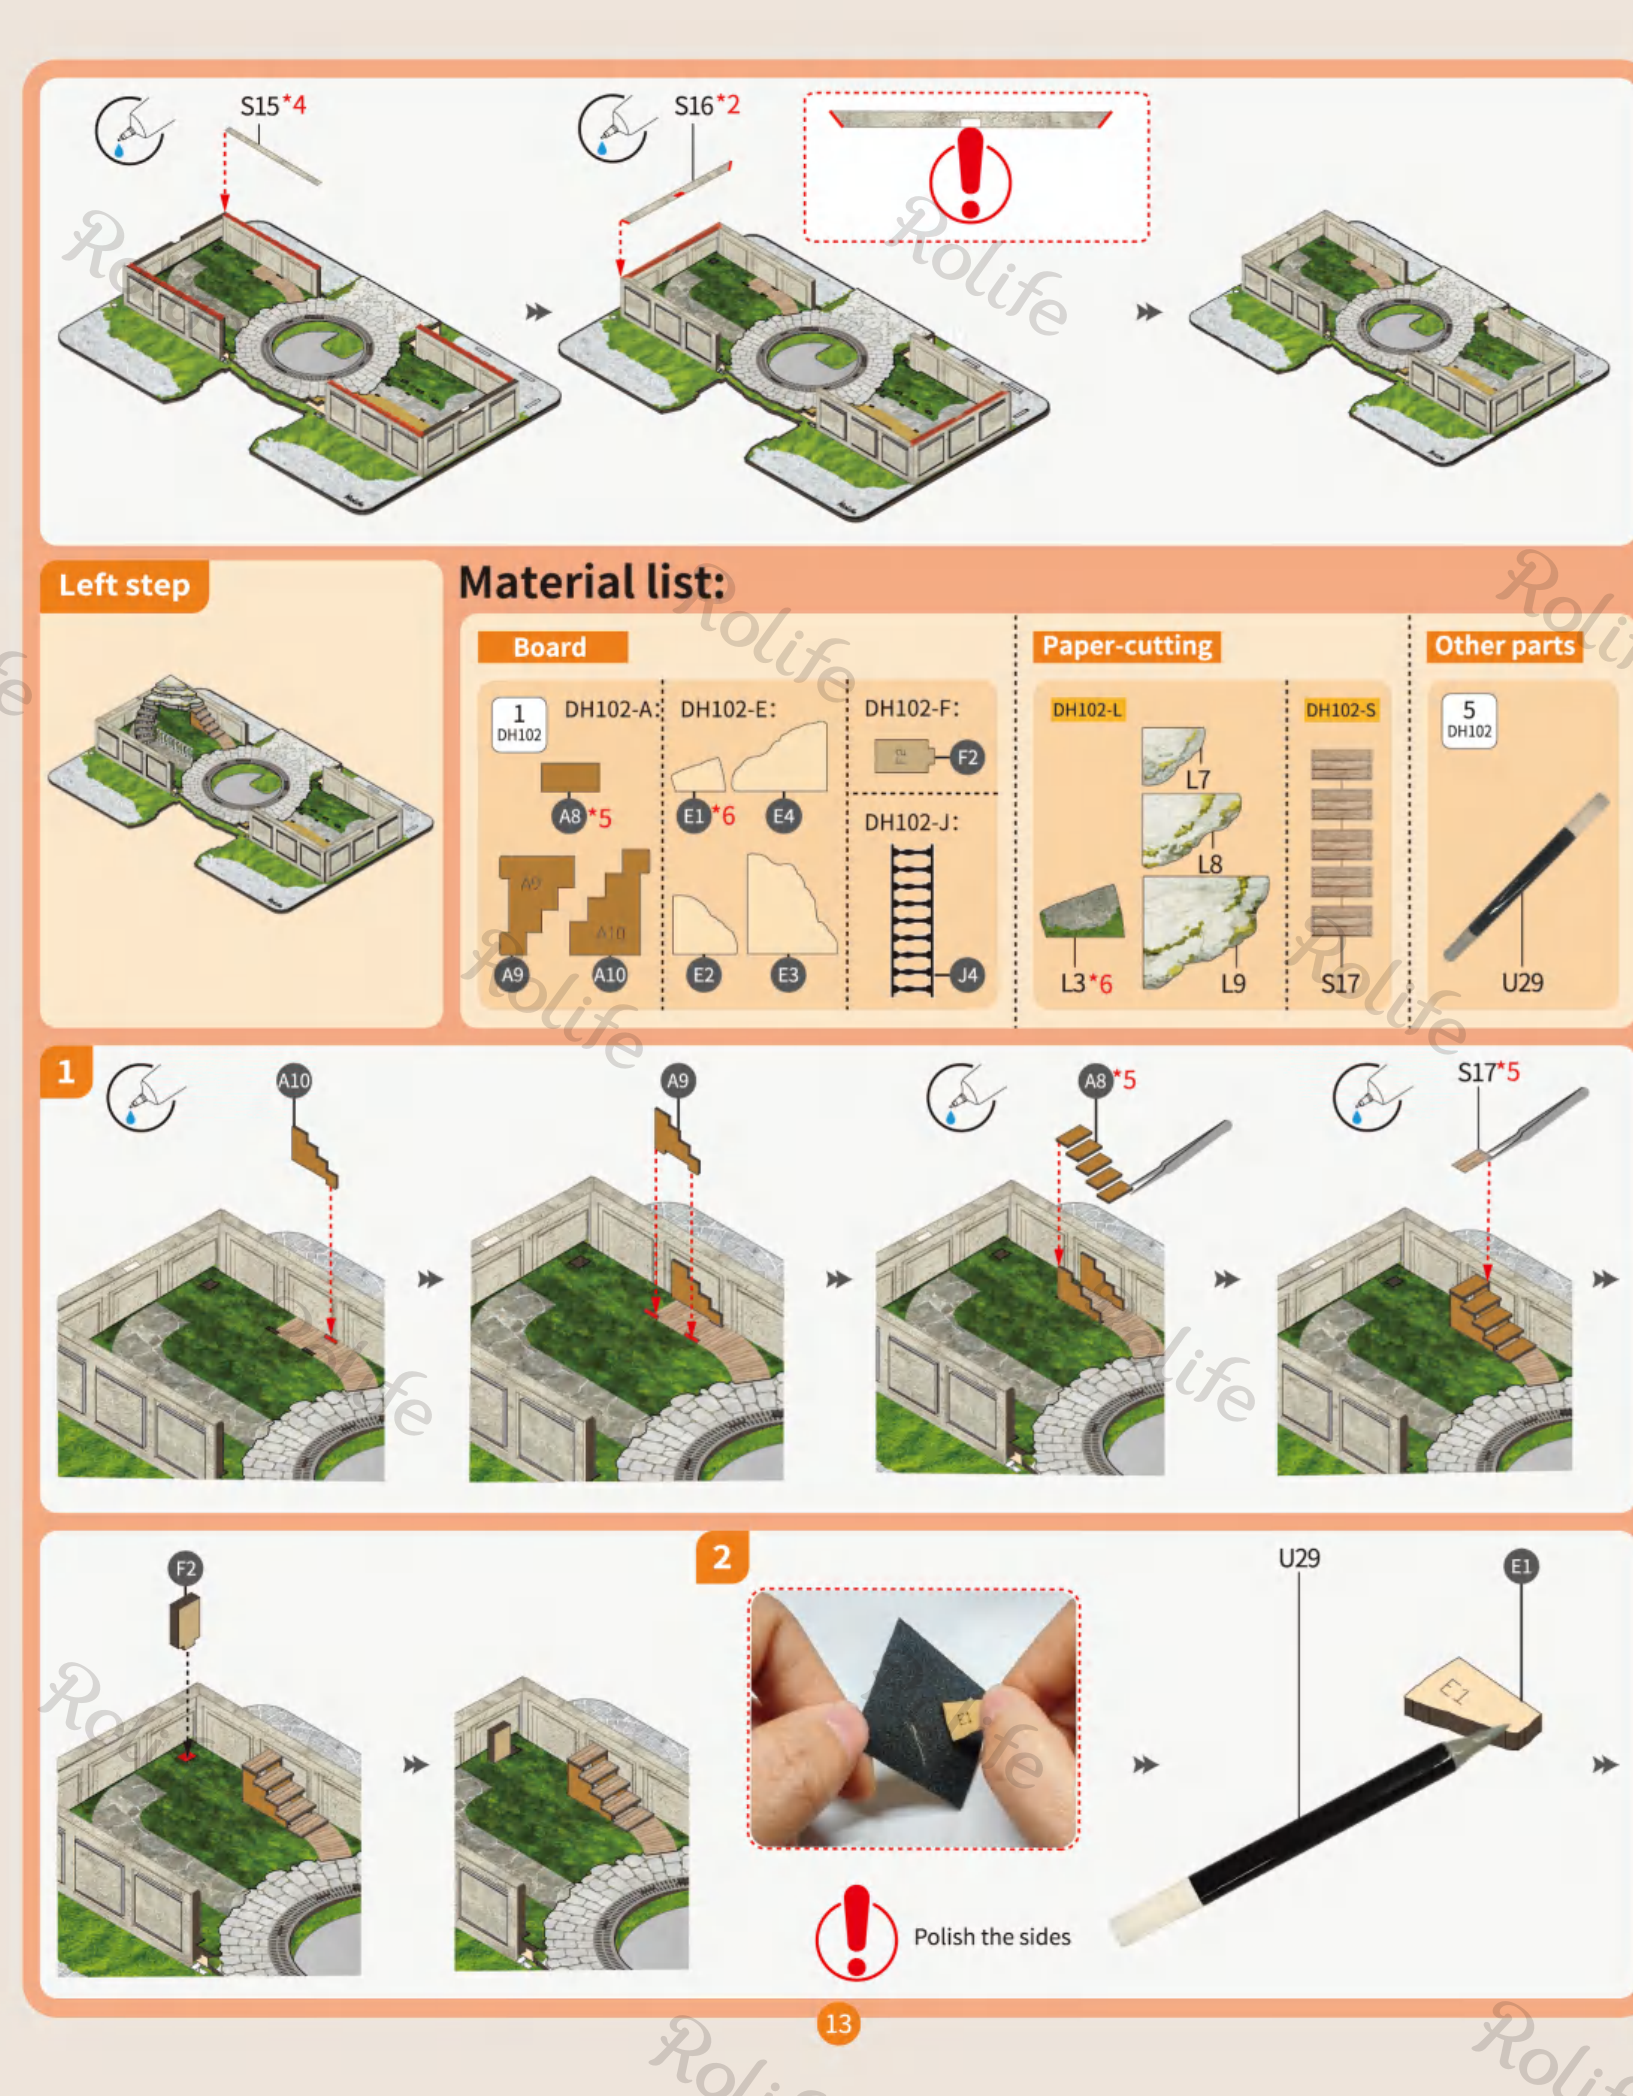

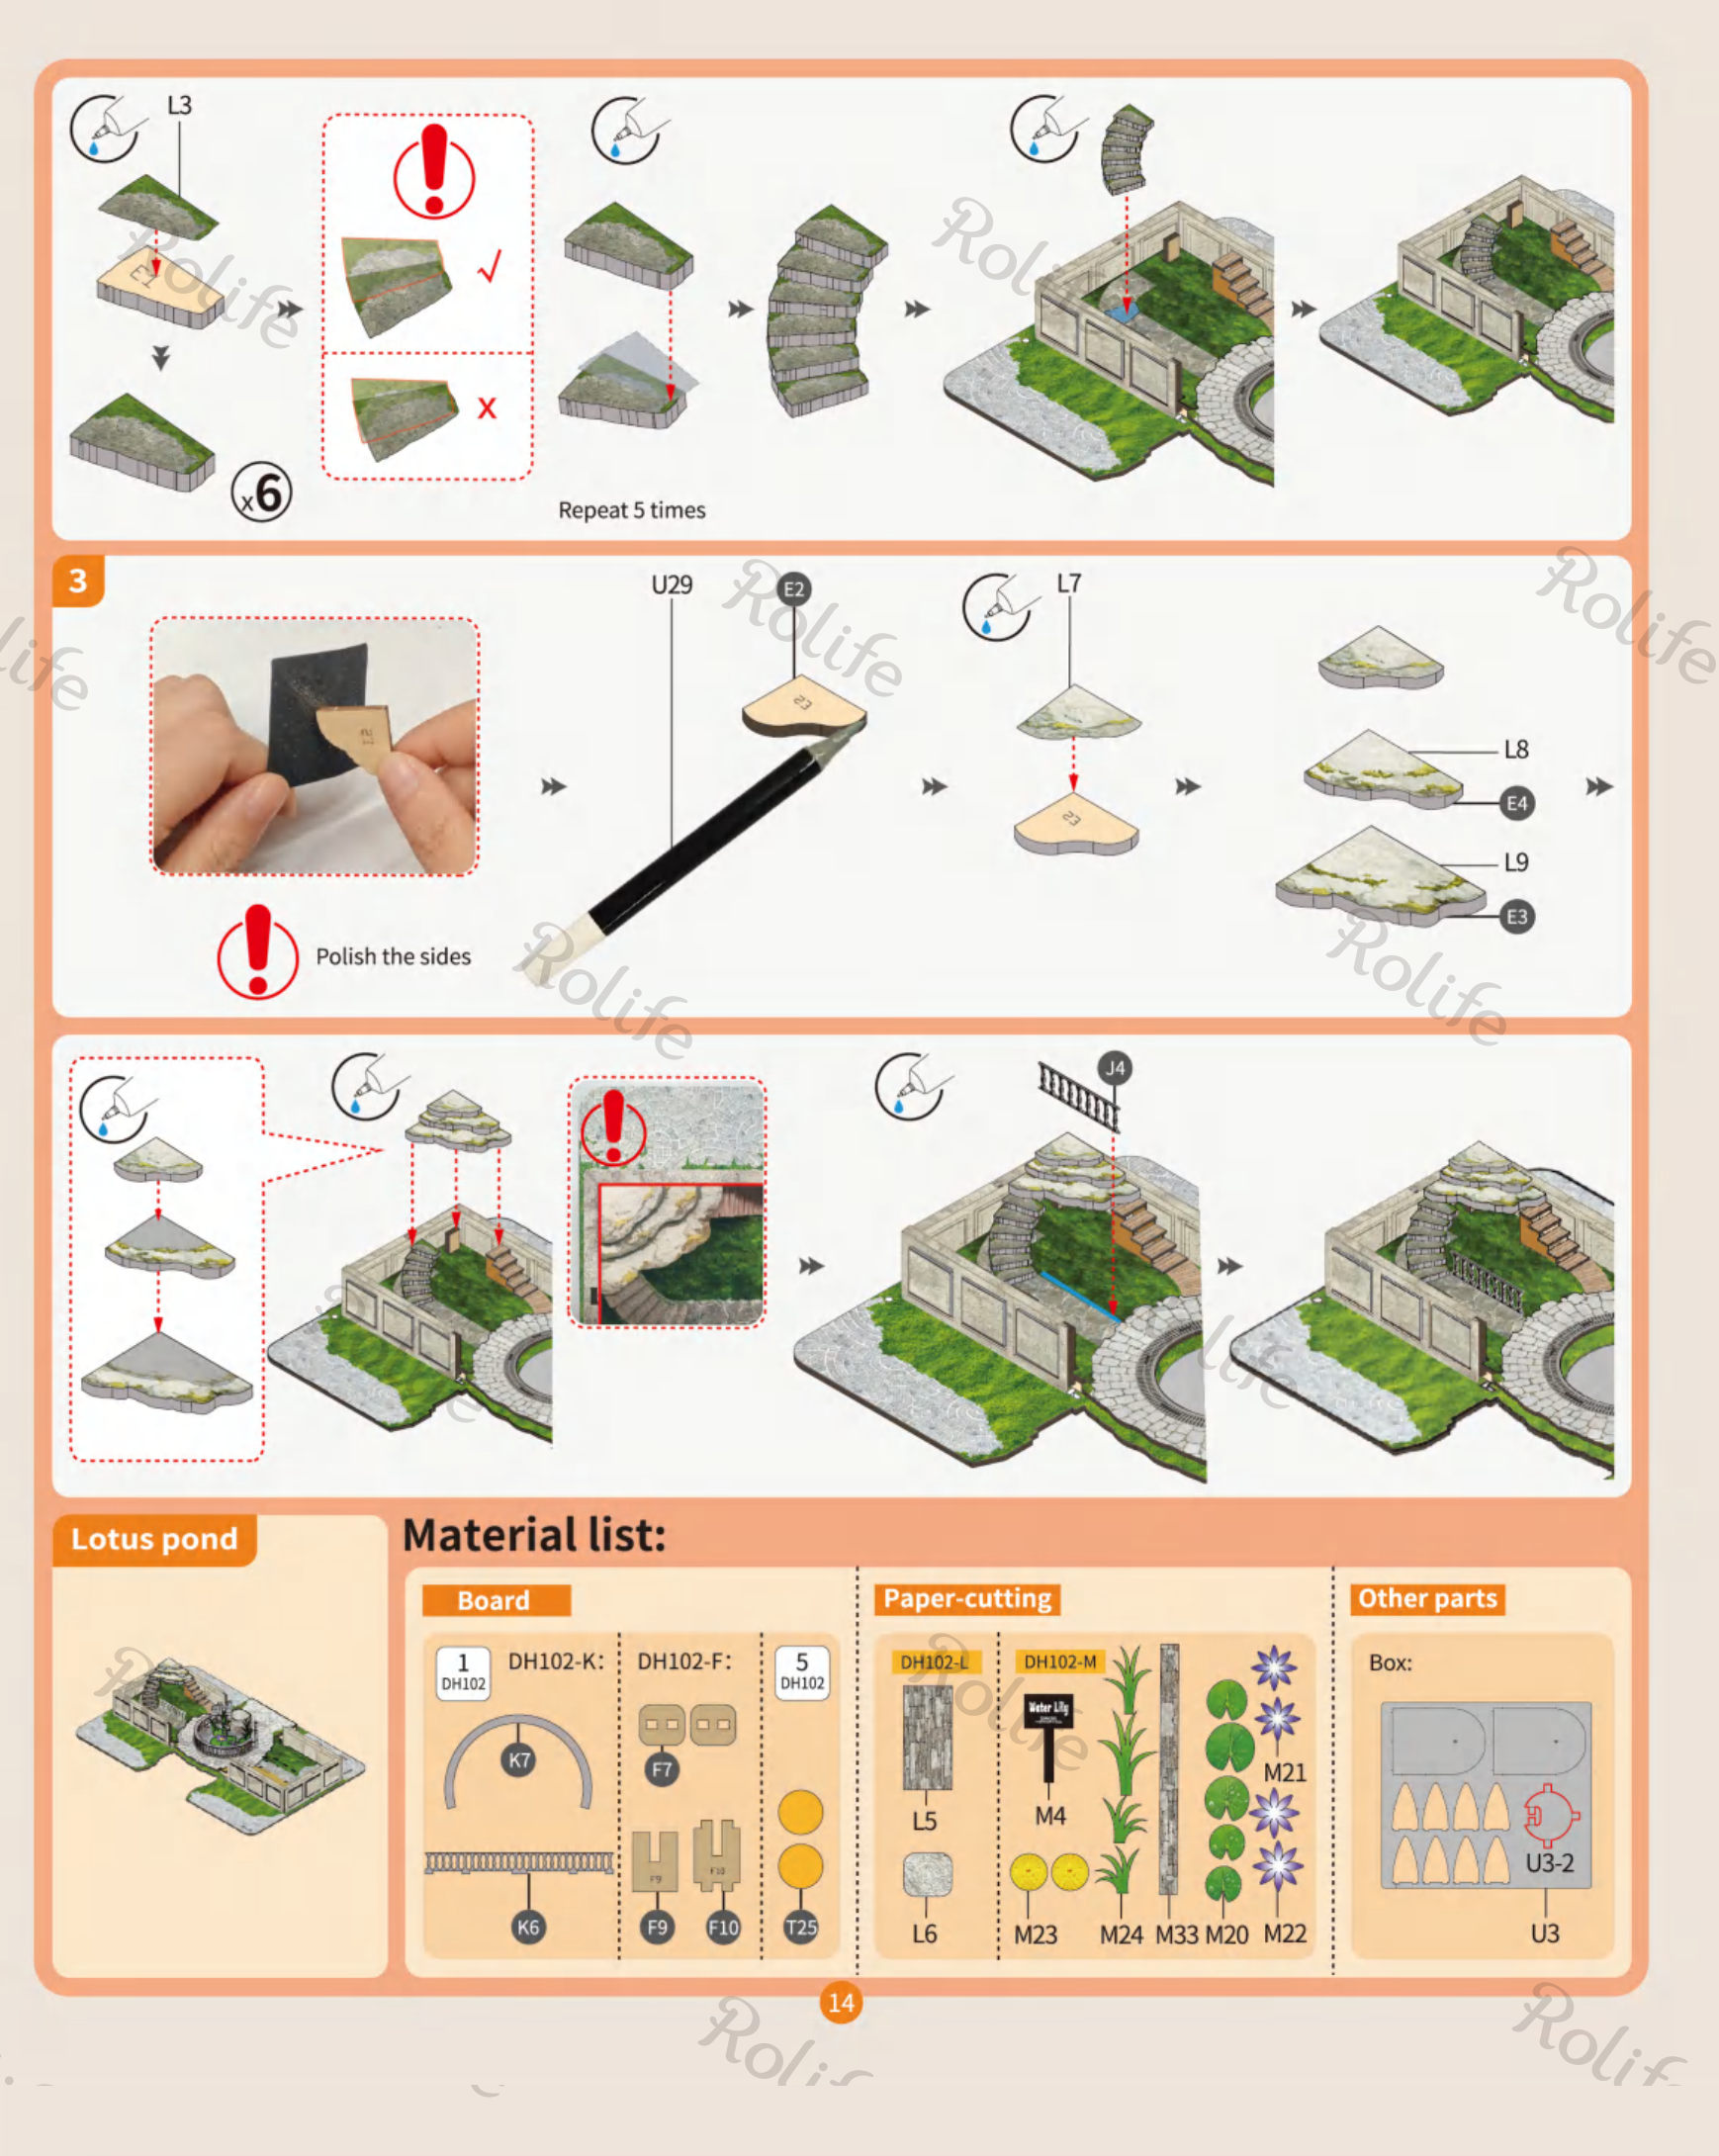

Repeat 5 times

Polish the sides

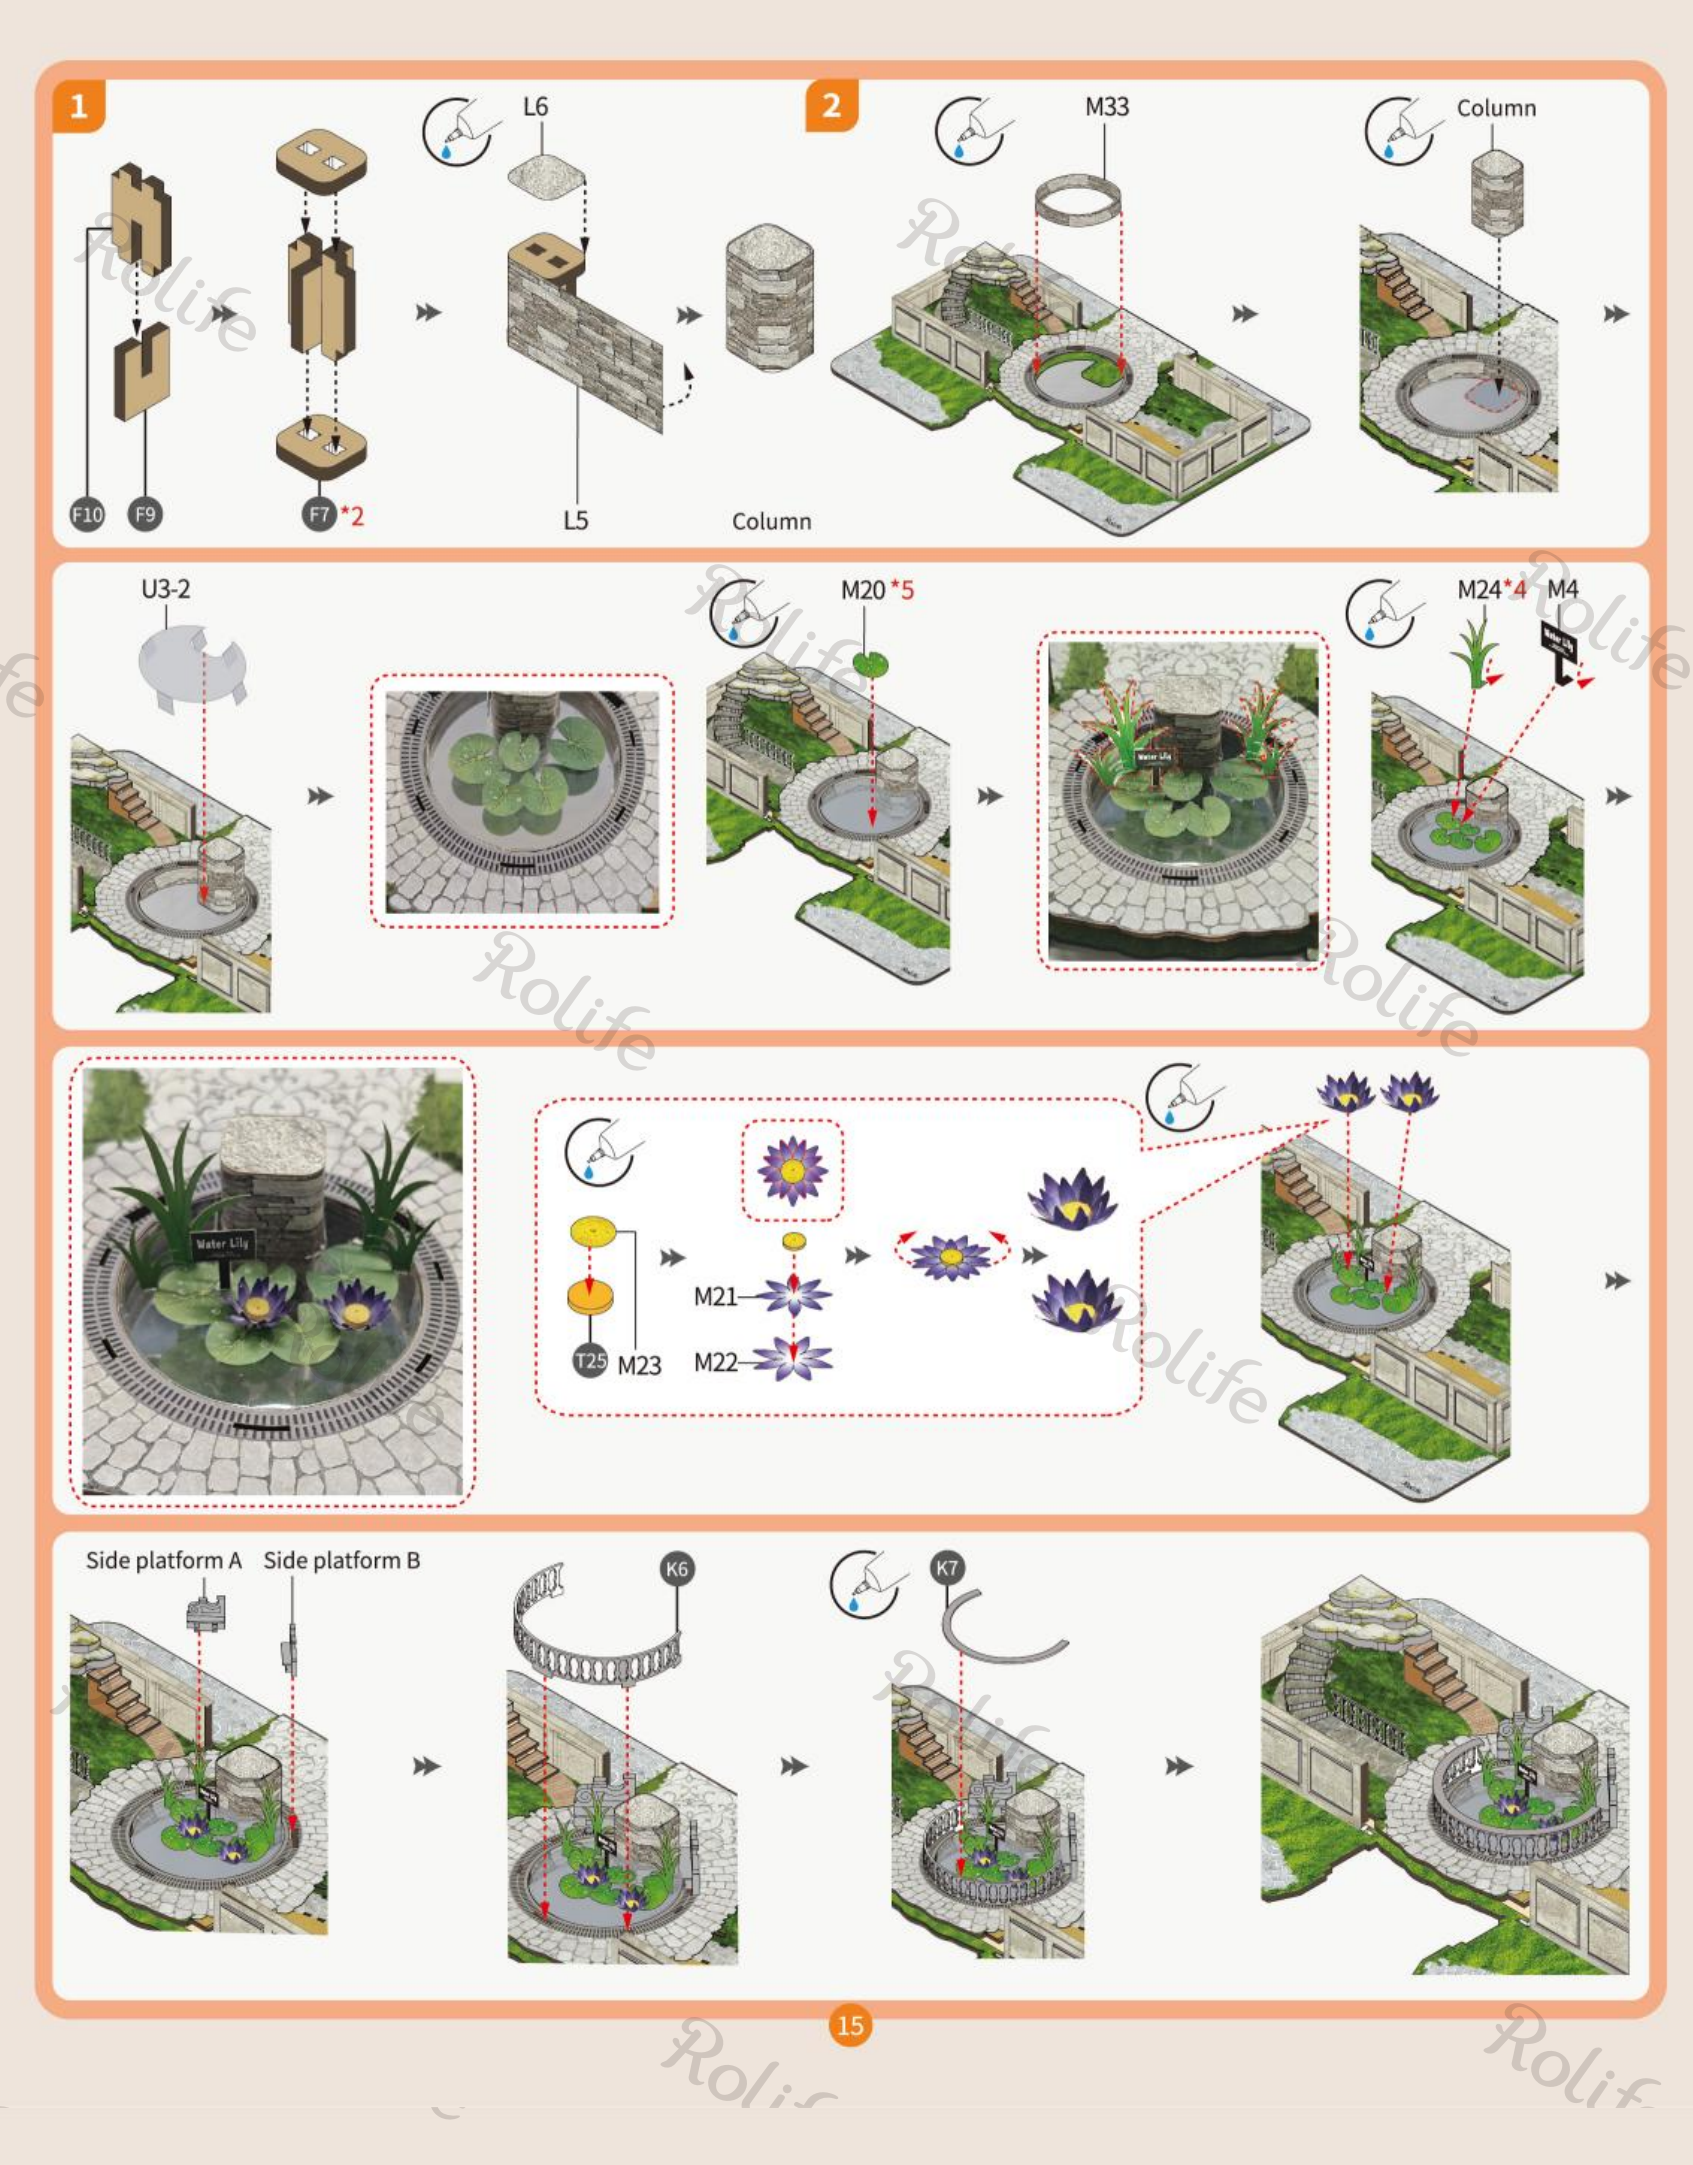

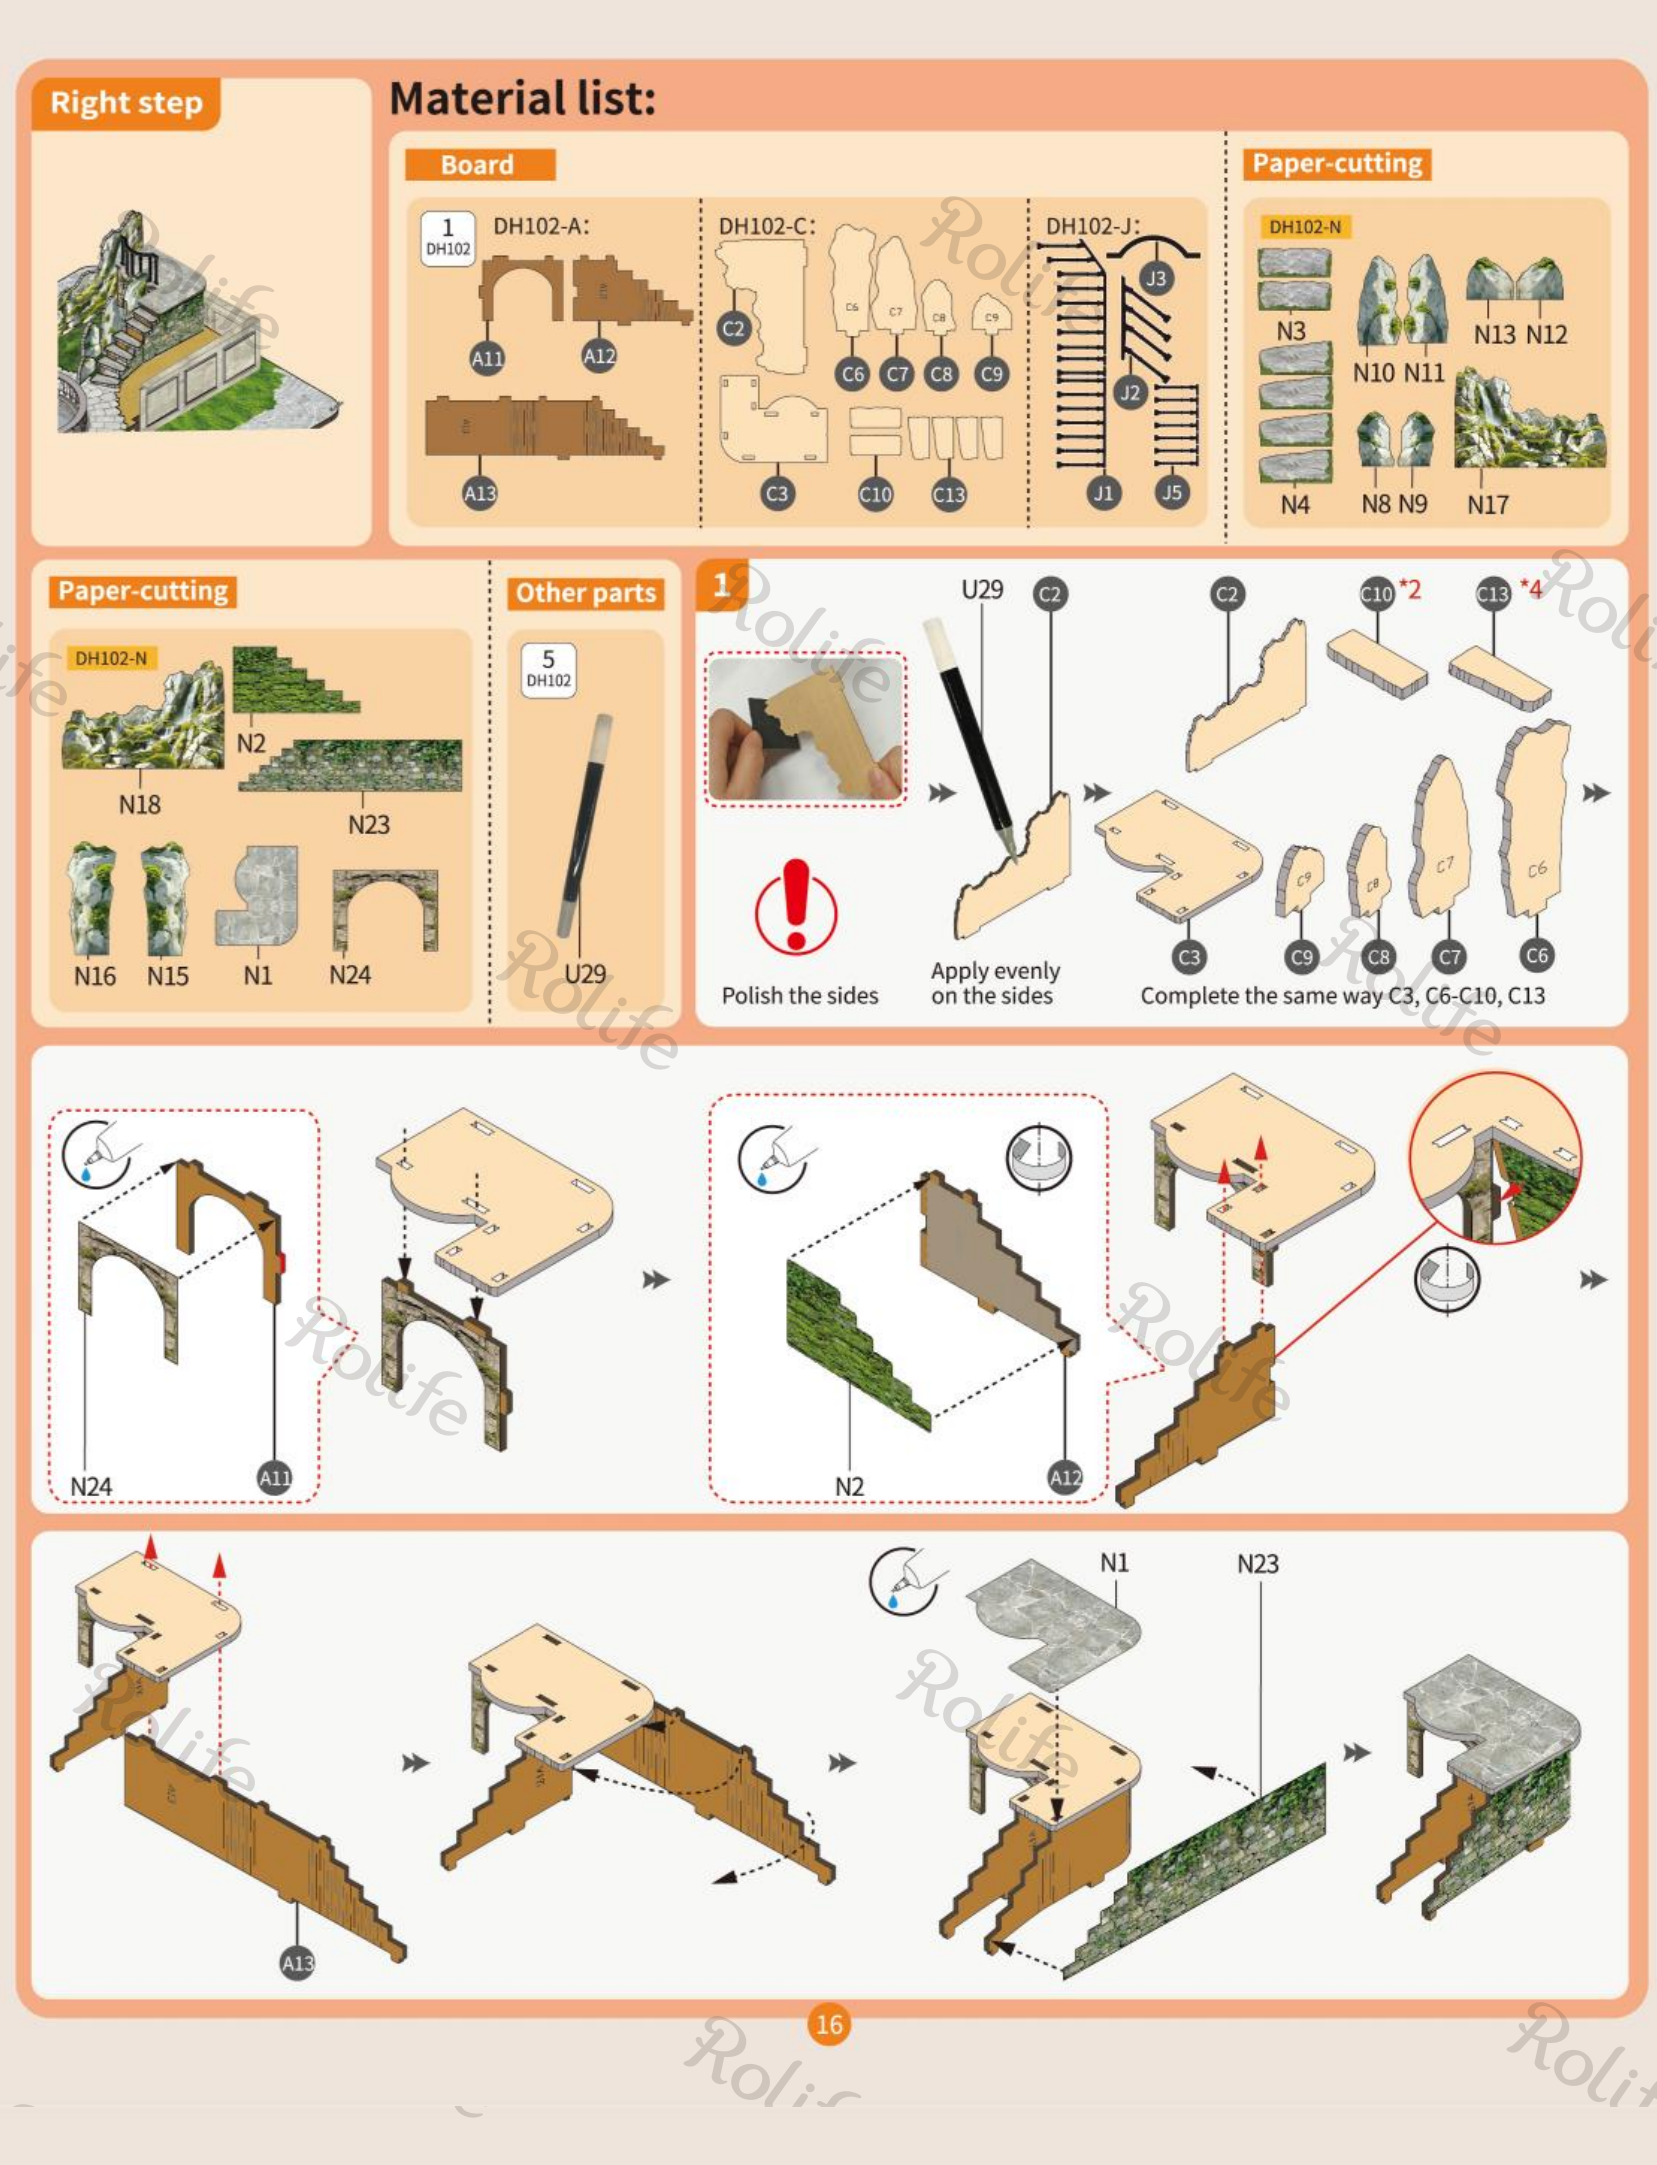

Polish the sides

Apply evenly on the sides

Complete the same way C3, C6-C10, C13

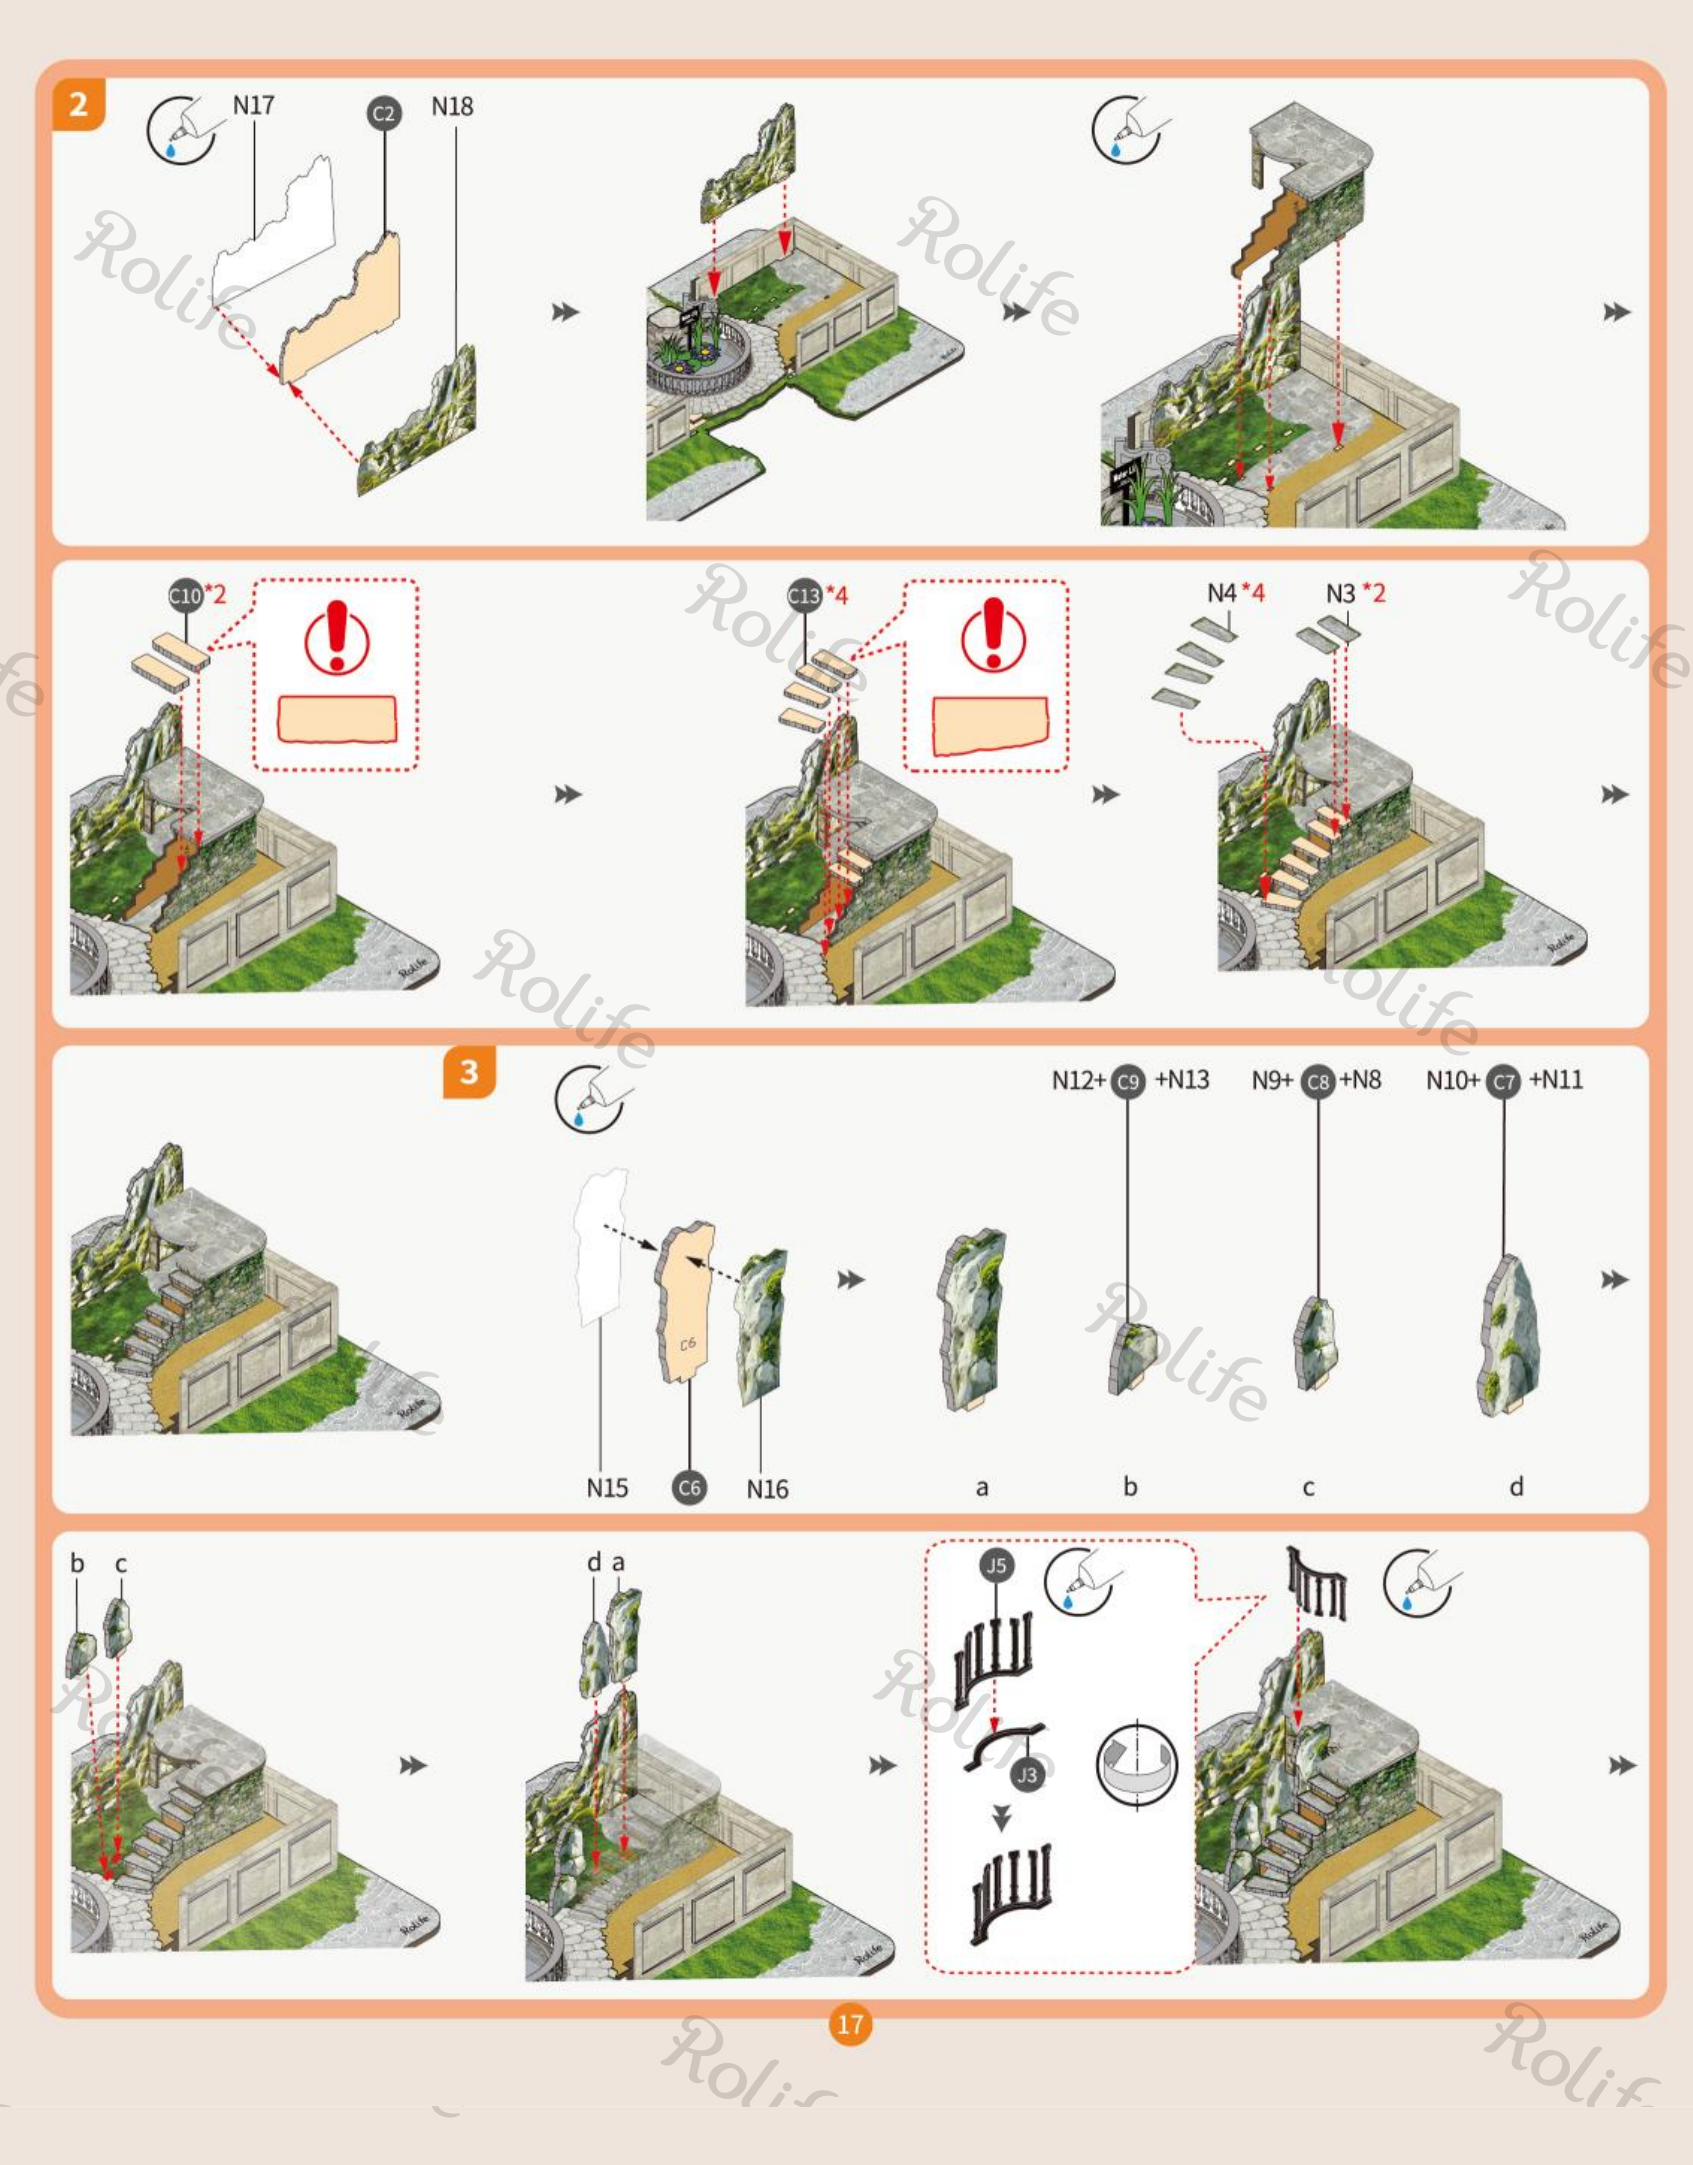

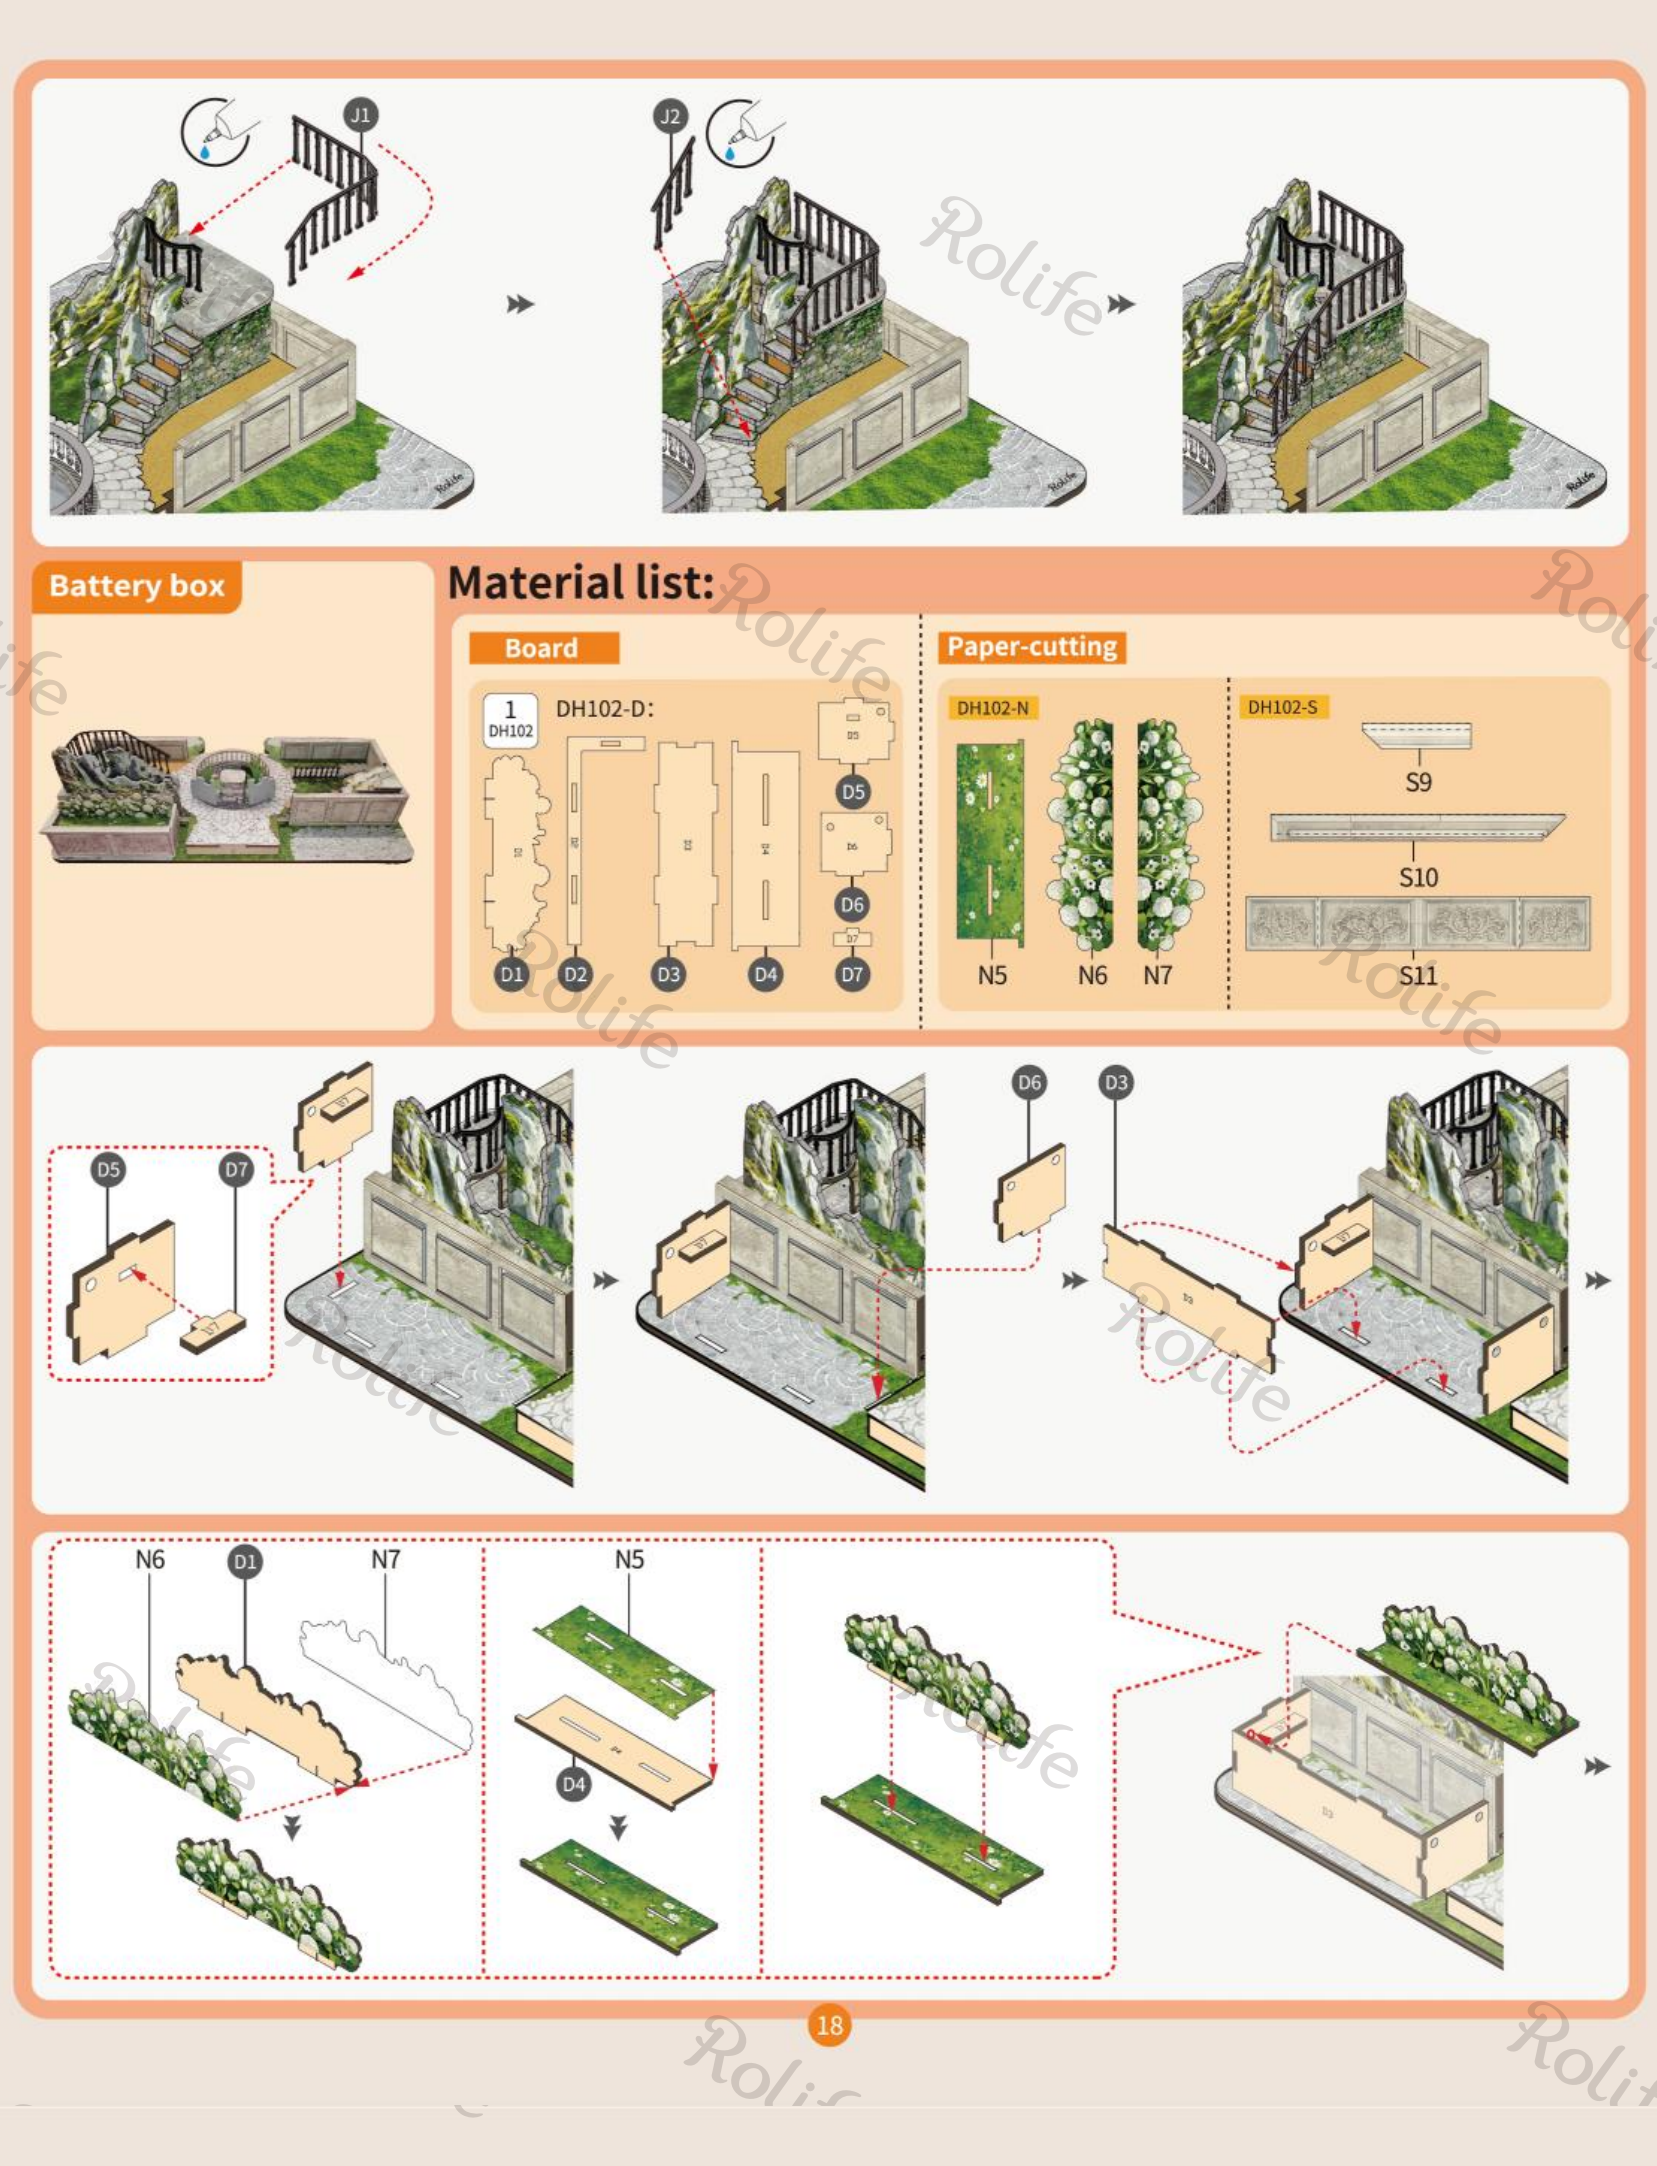

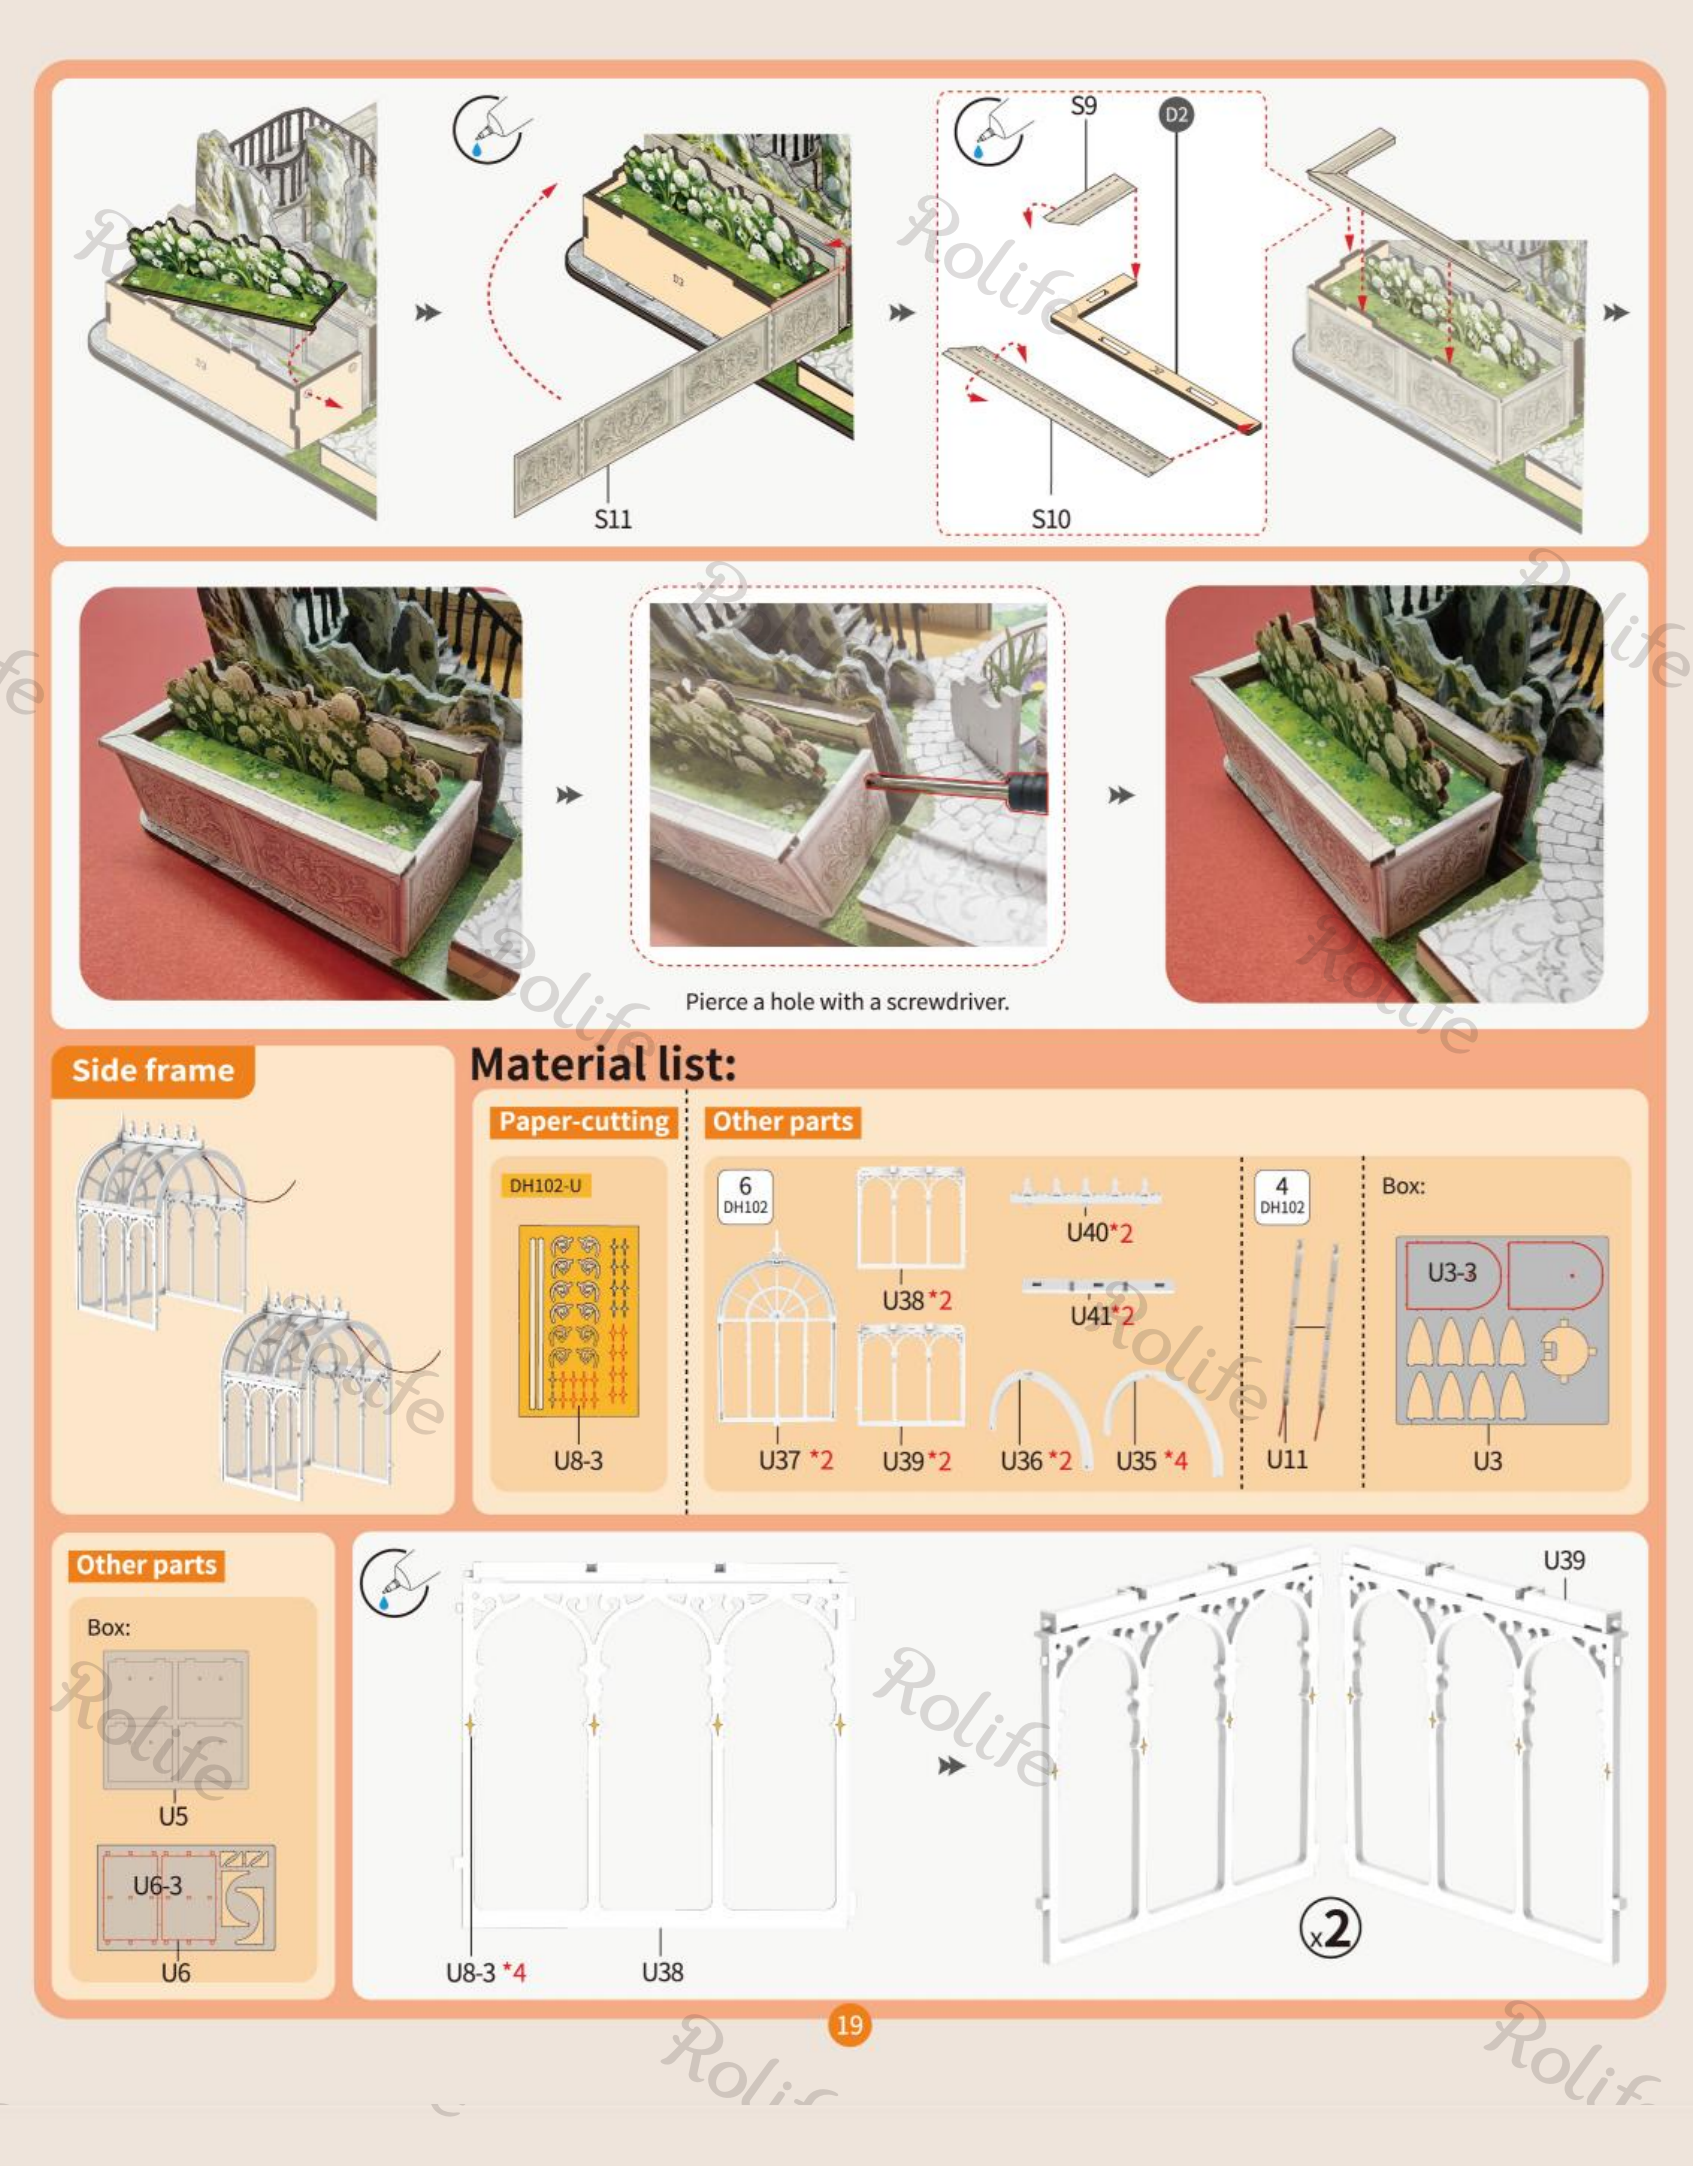

Pierce a hole with a screwdriver.

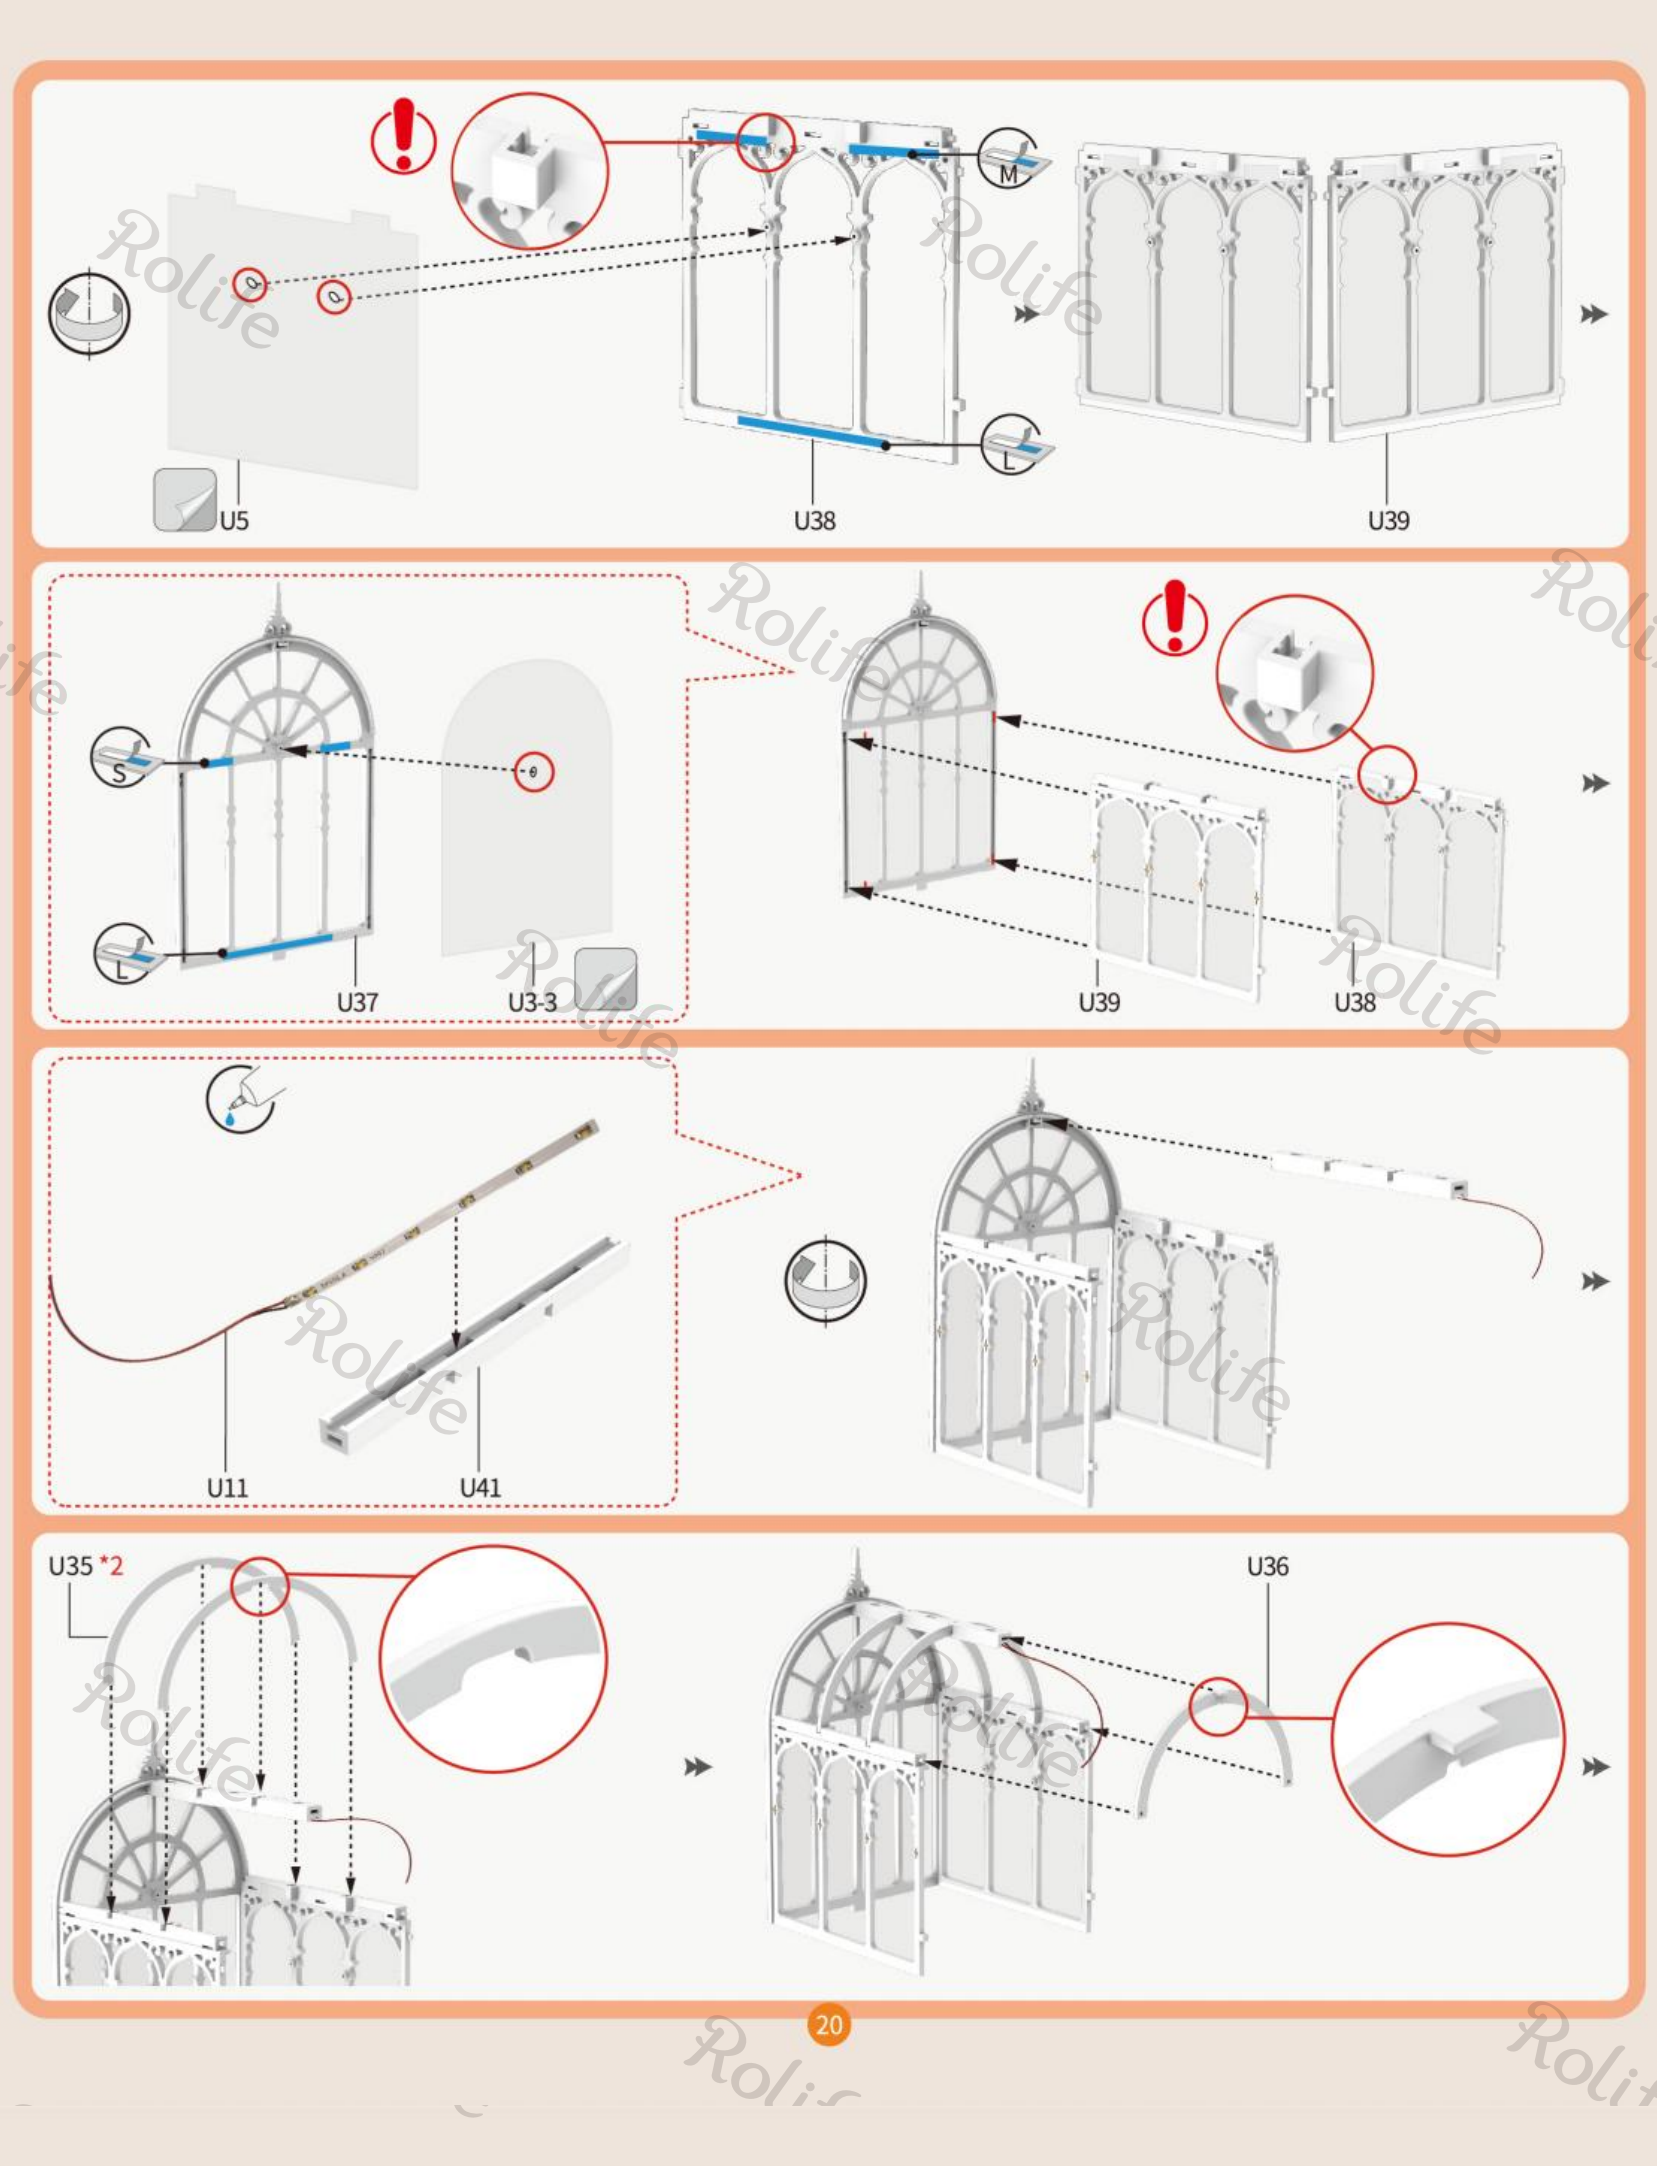

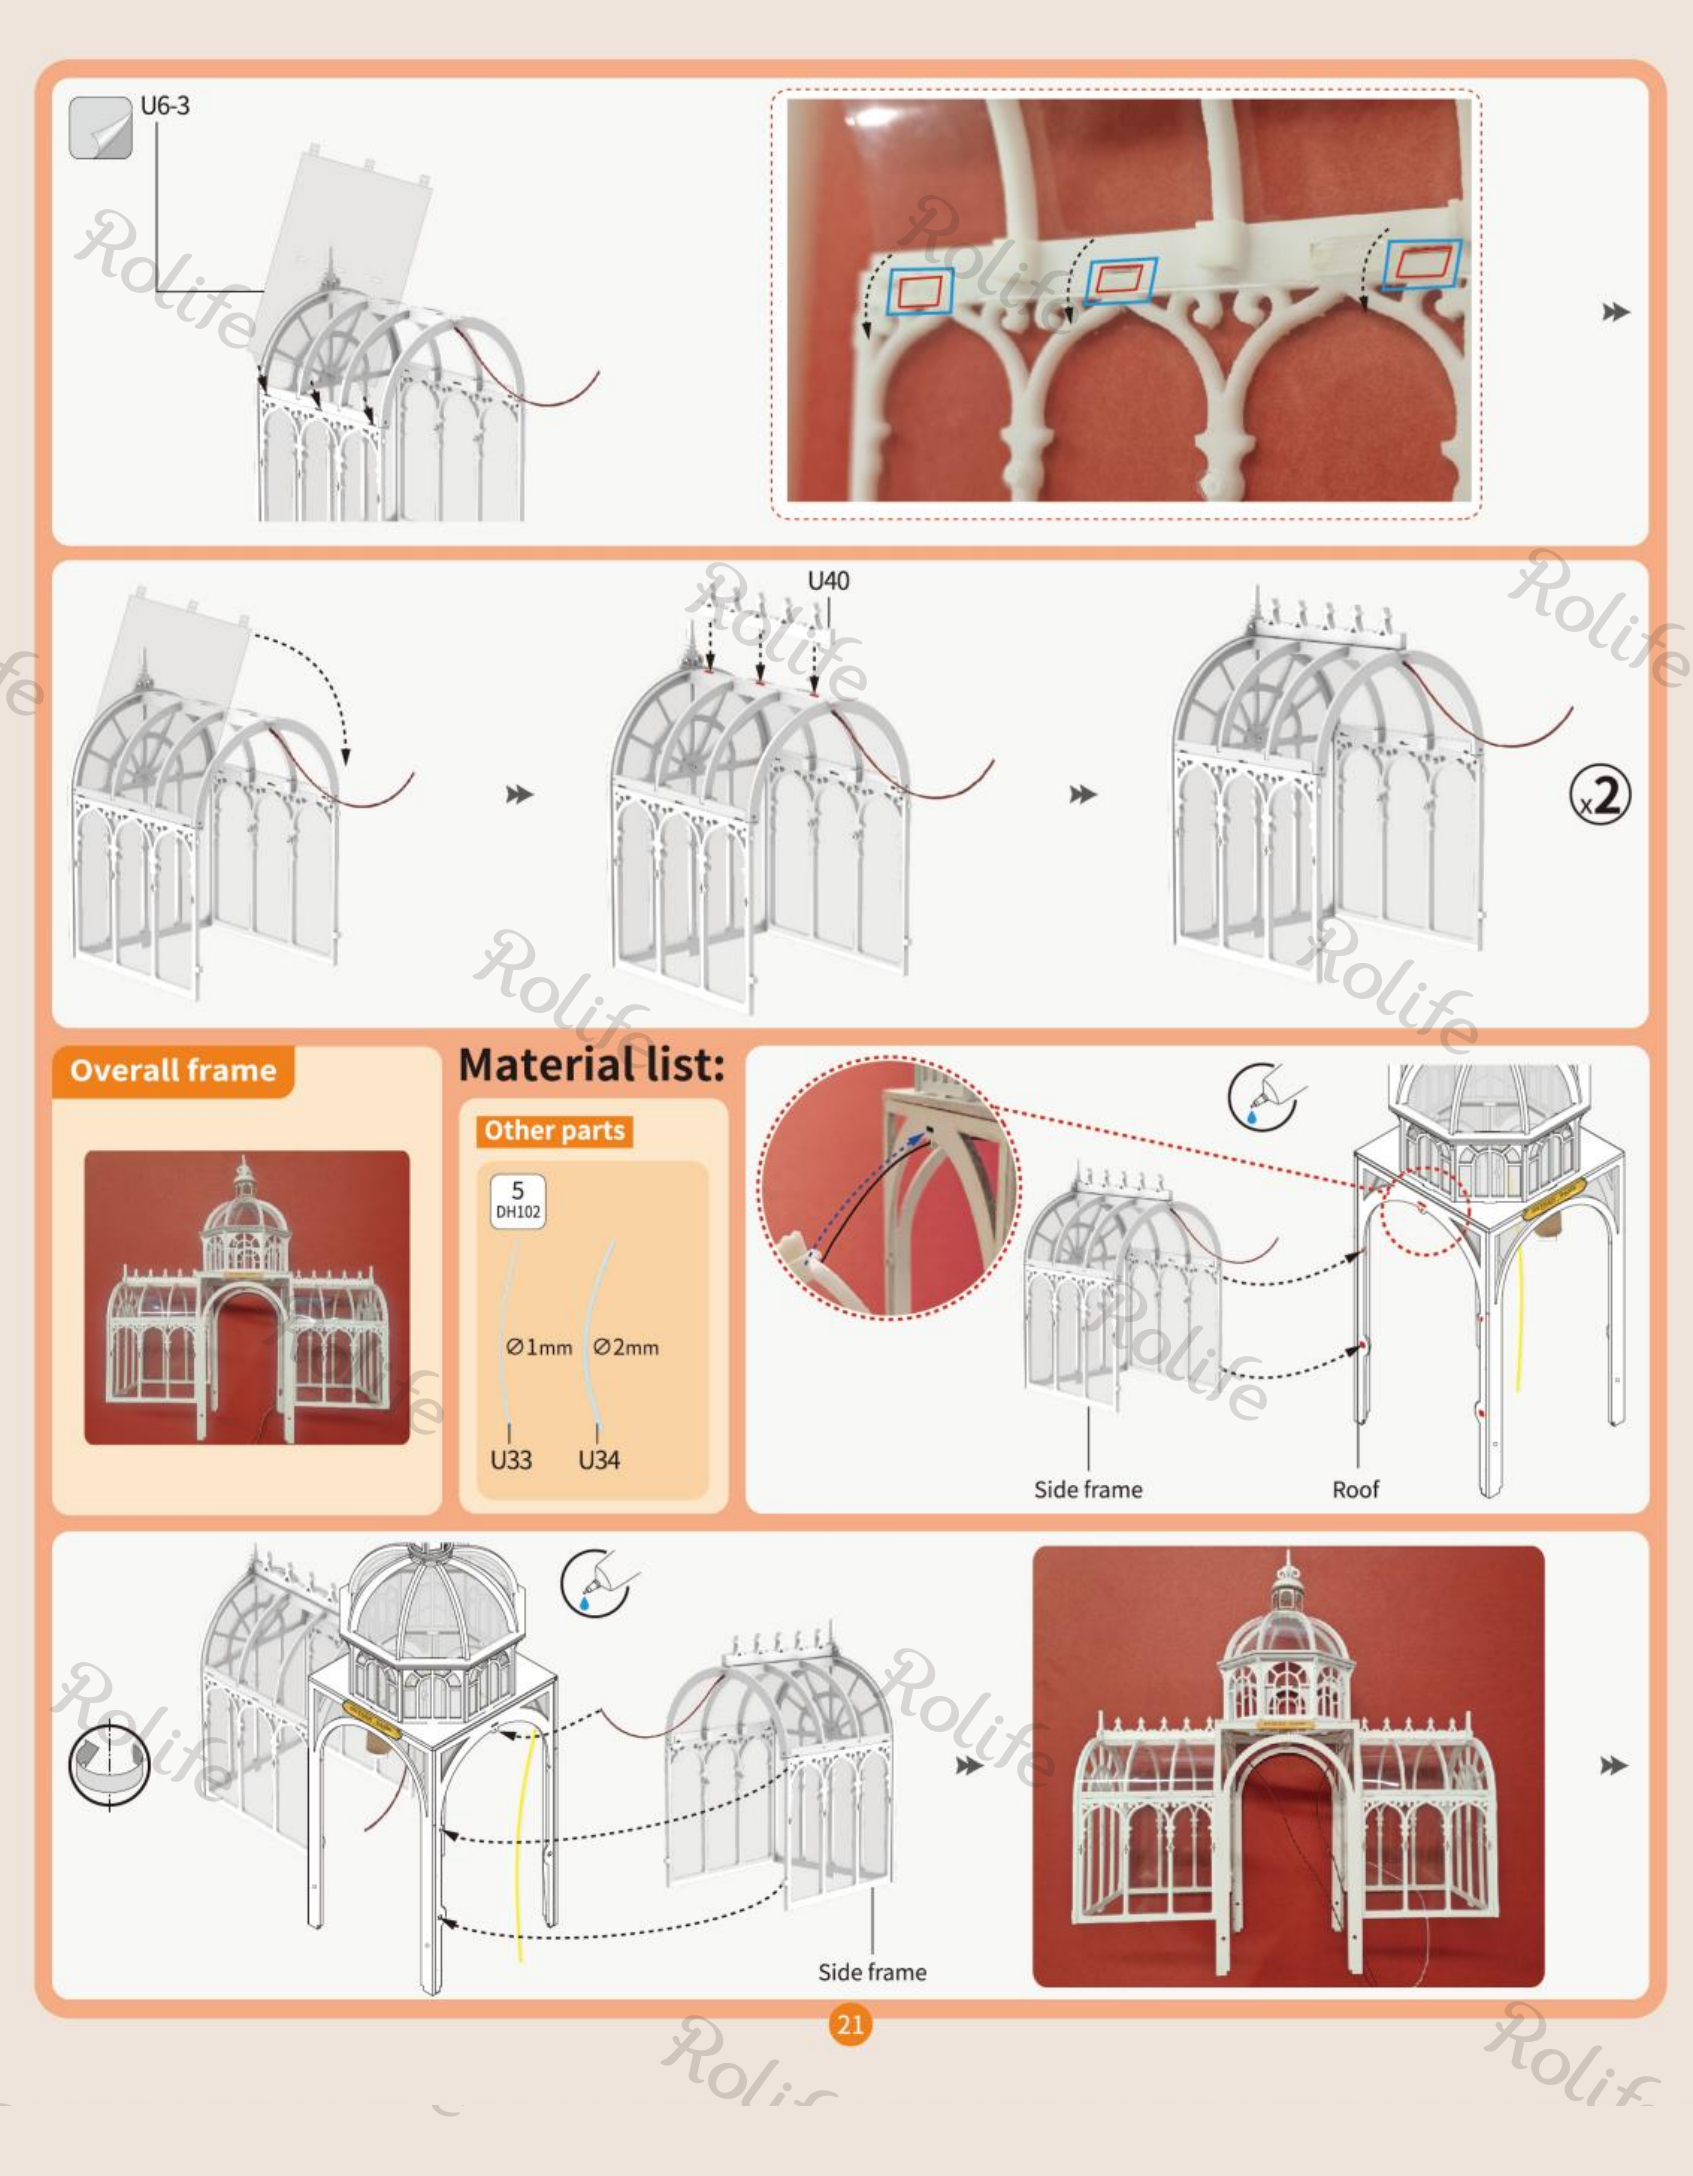

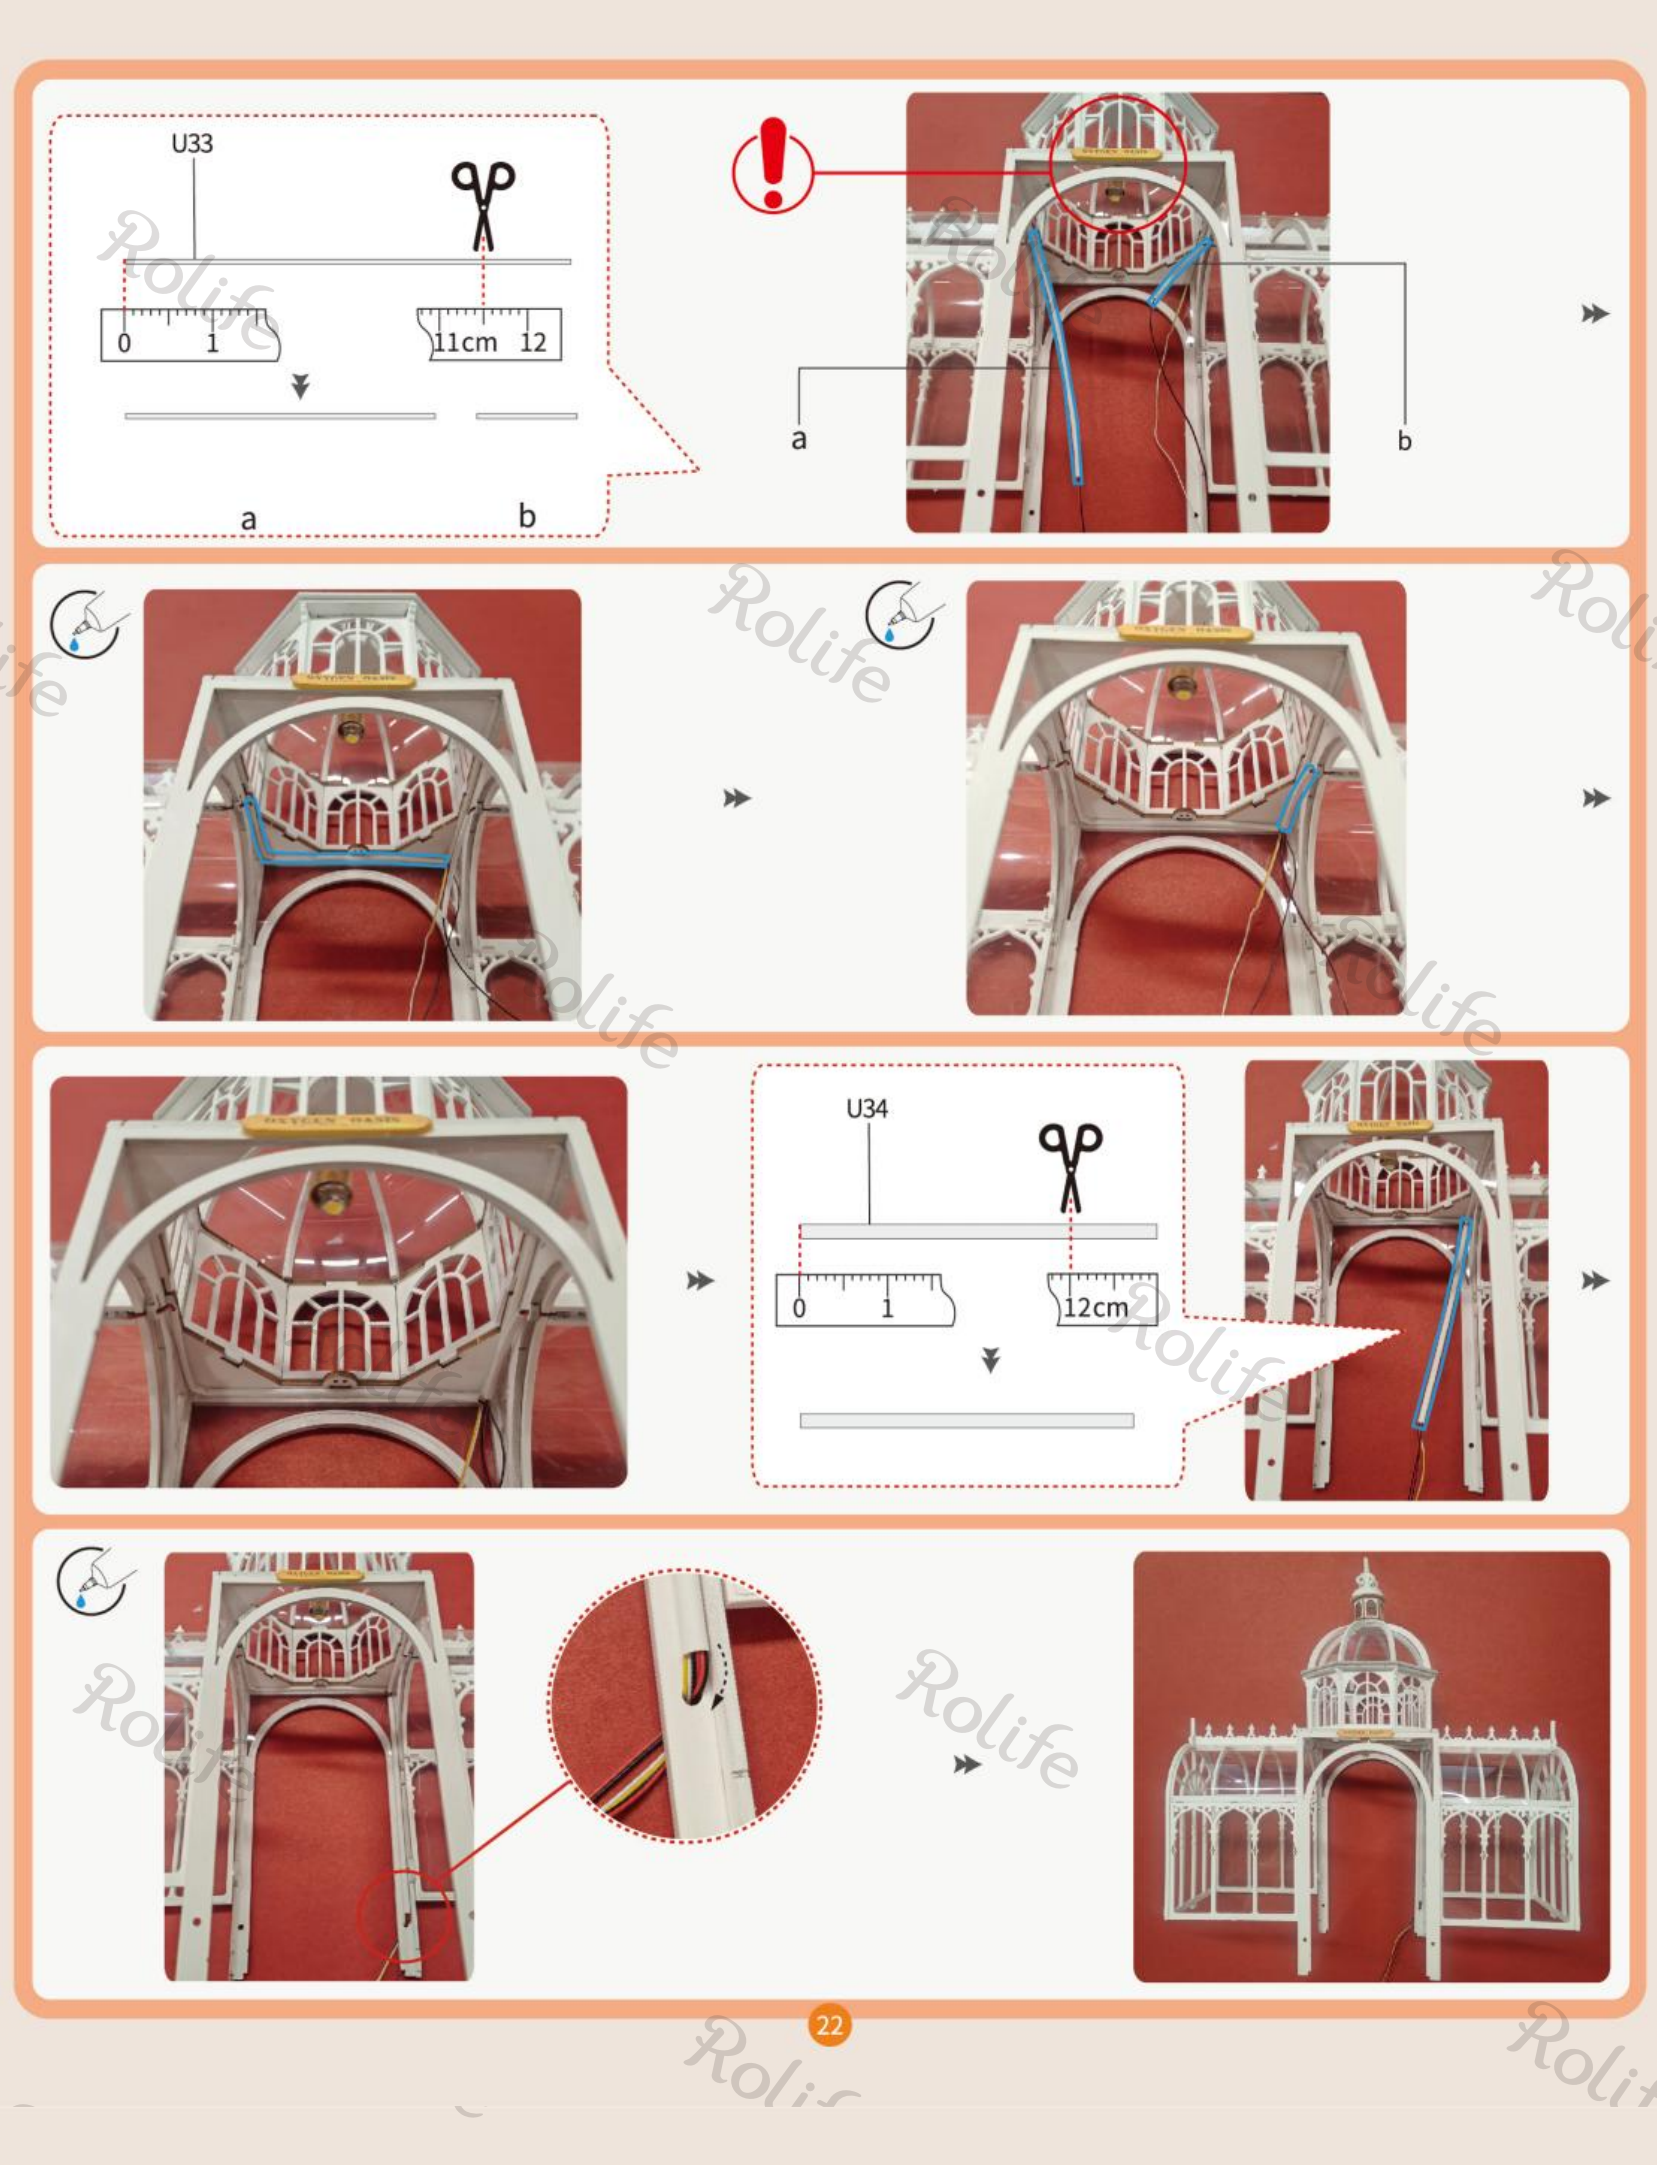

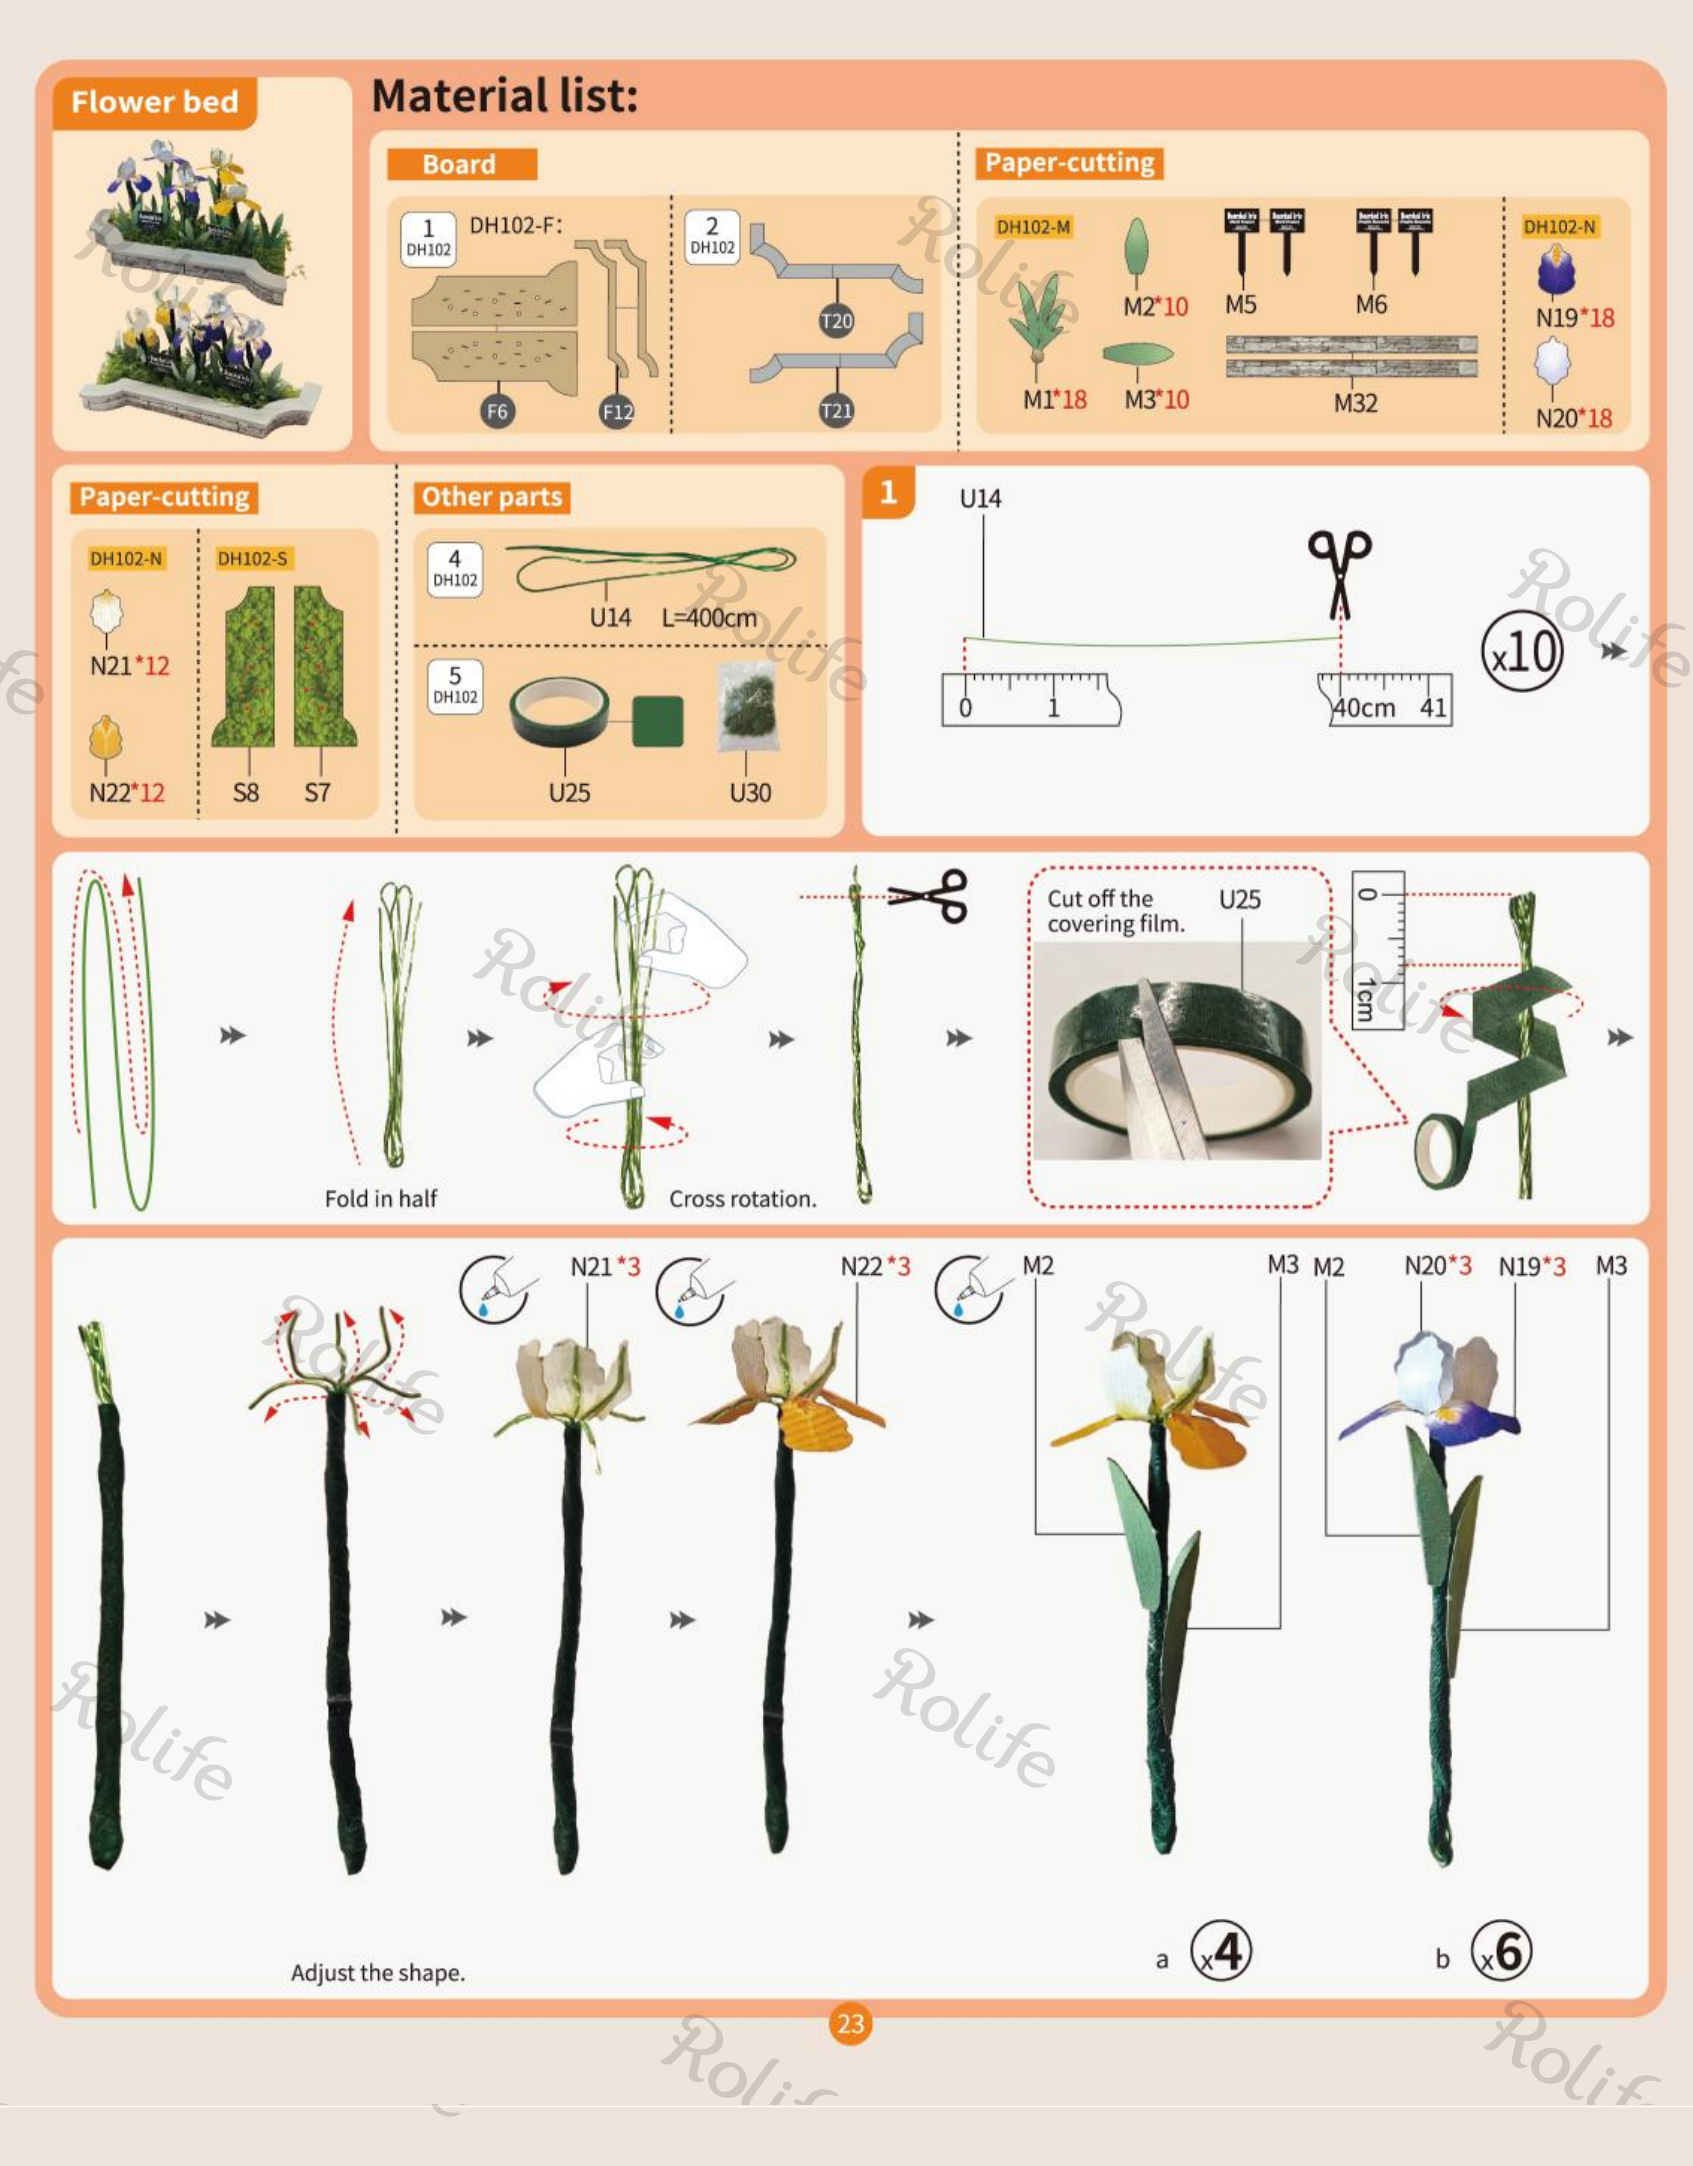

Fold in half

Cross rotation.

Cut off the covering film.

Adjust the shape.

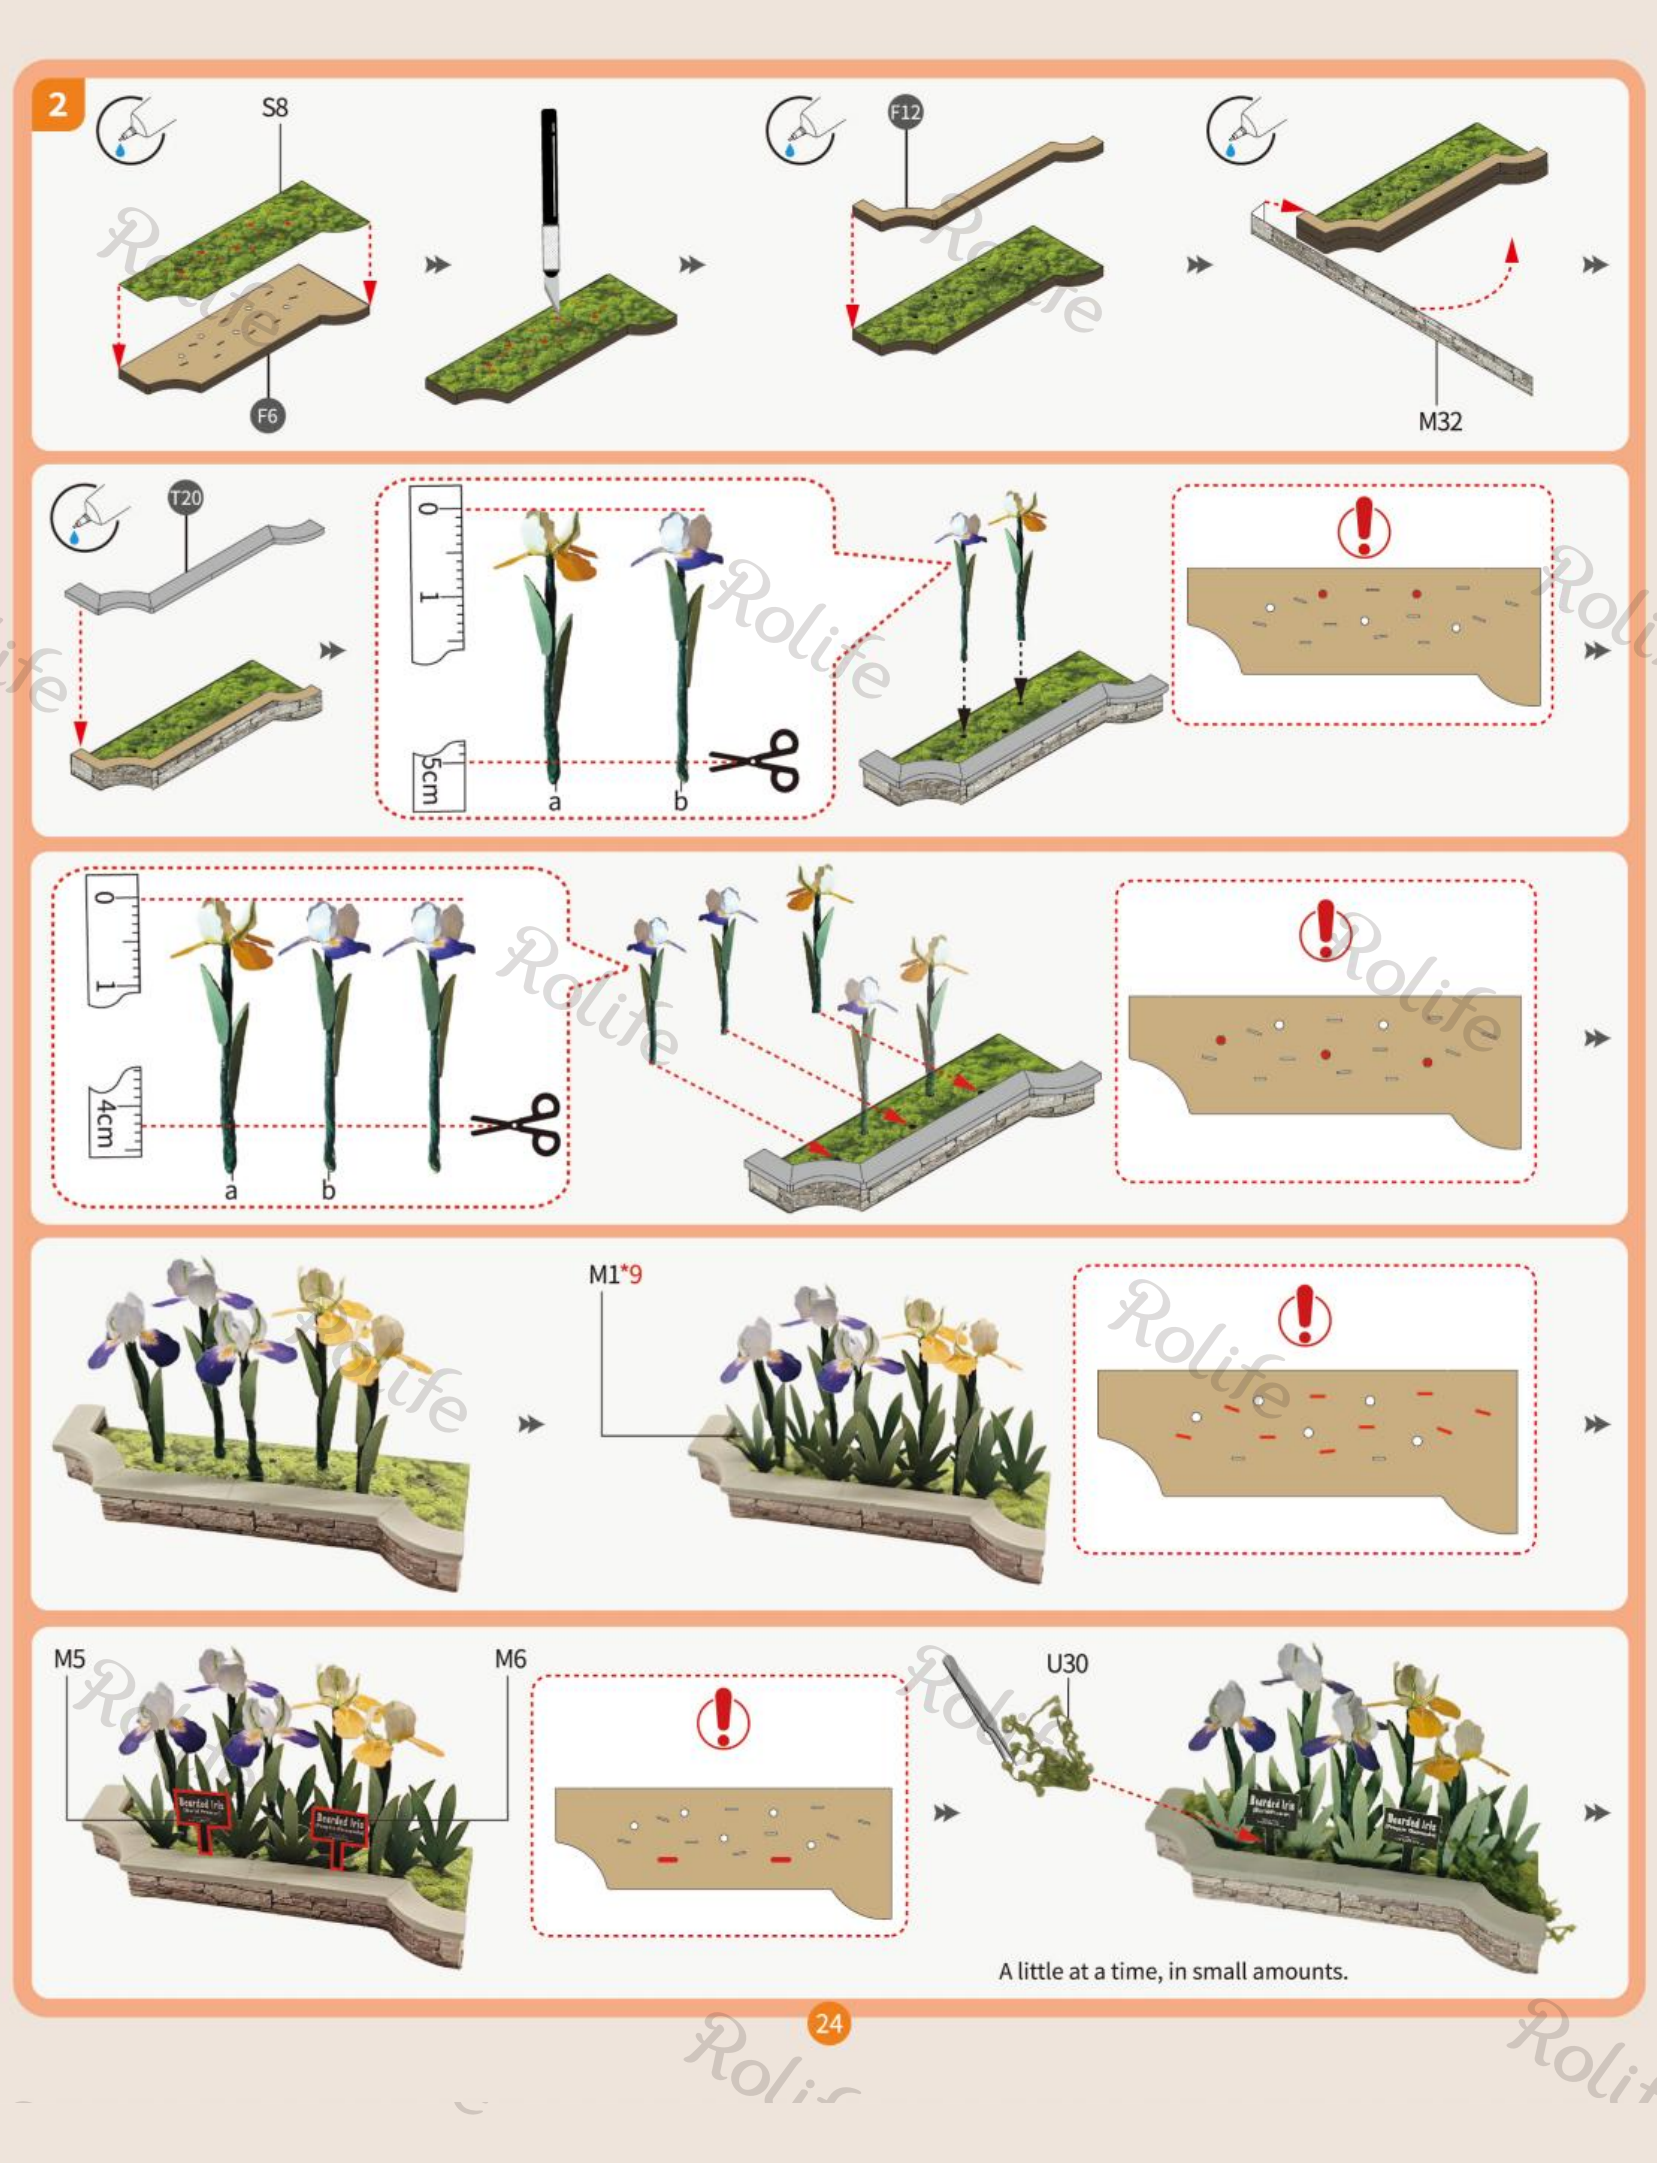

A little at a time, in small amounts.

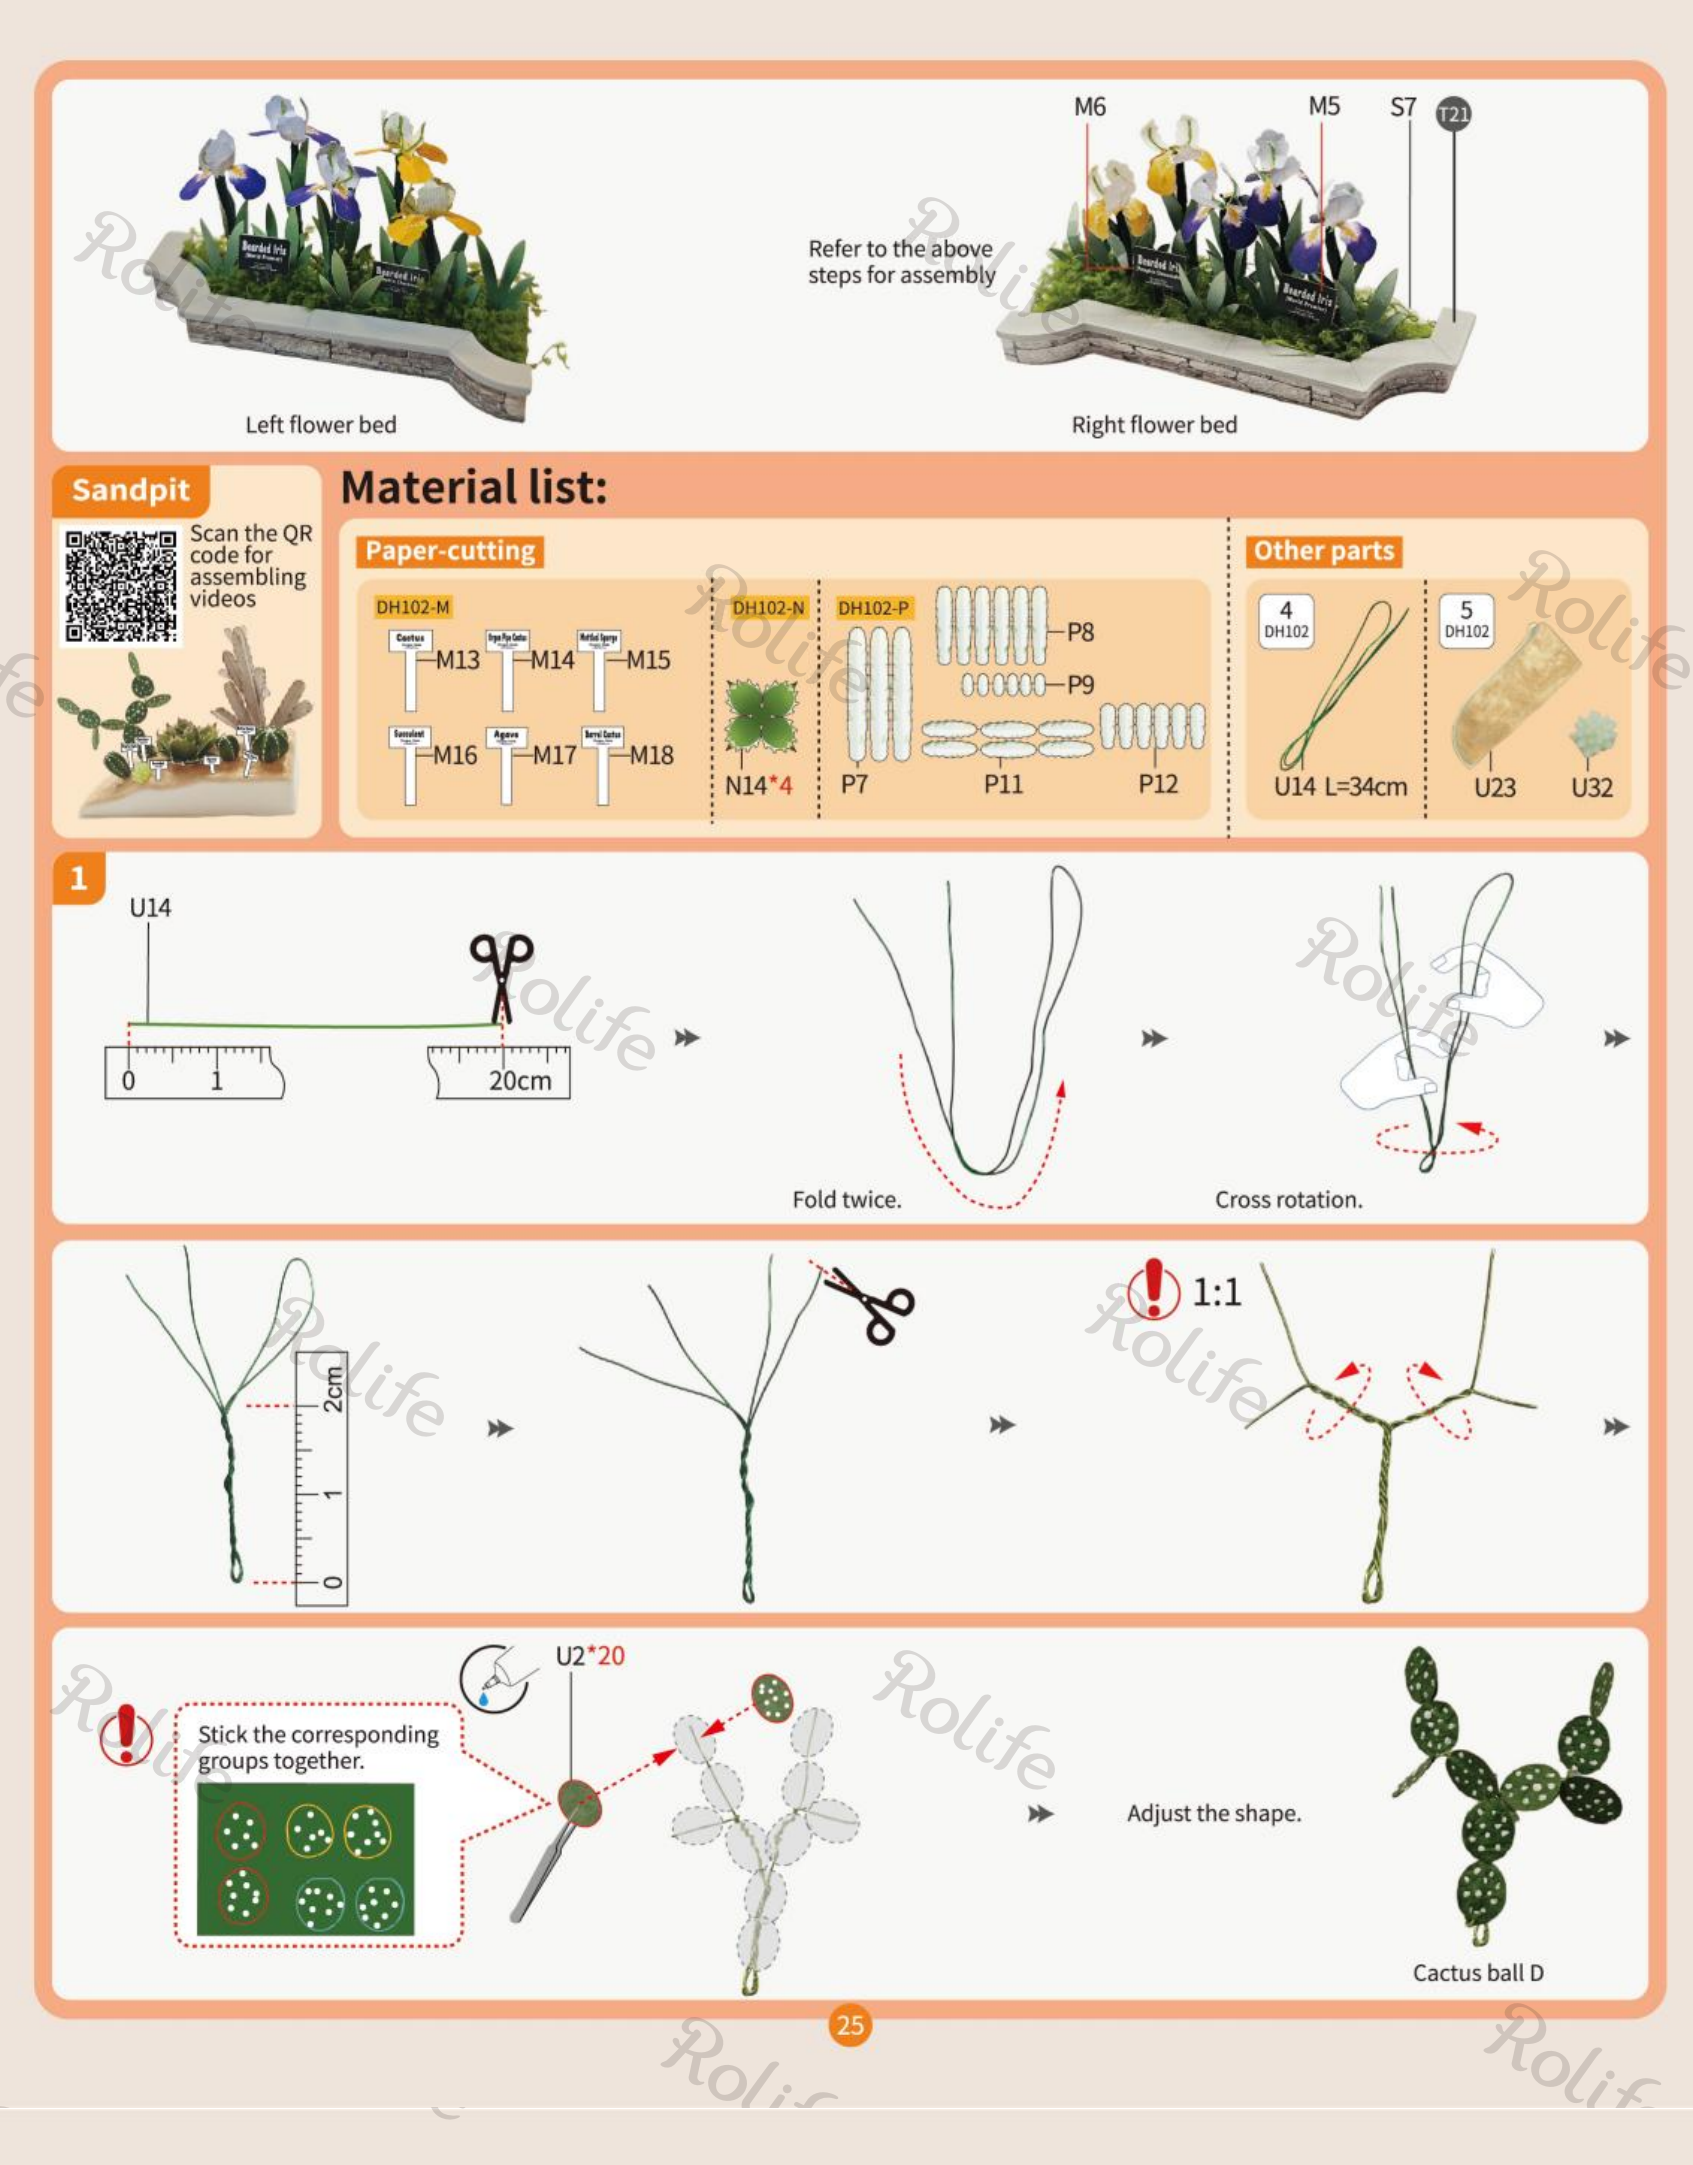

Left flower bed

Refer to the above steps for assembly

Right flower bed

Scan the QR code for assembling videos

Fold twice.

Cross rotation.

Stick the corresponding groups together.

Adjust the shape.

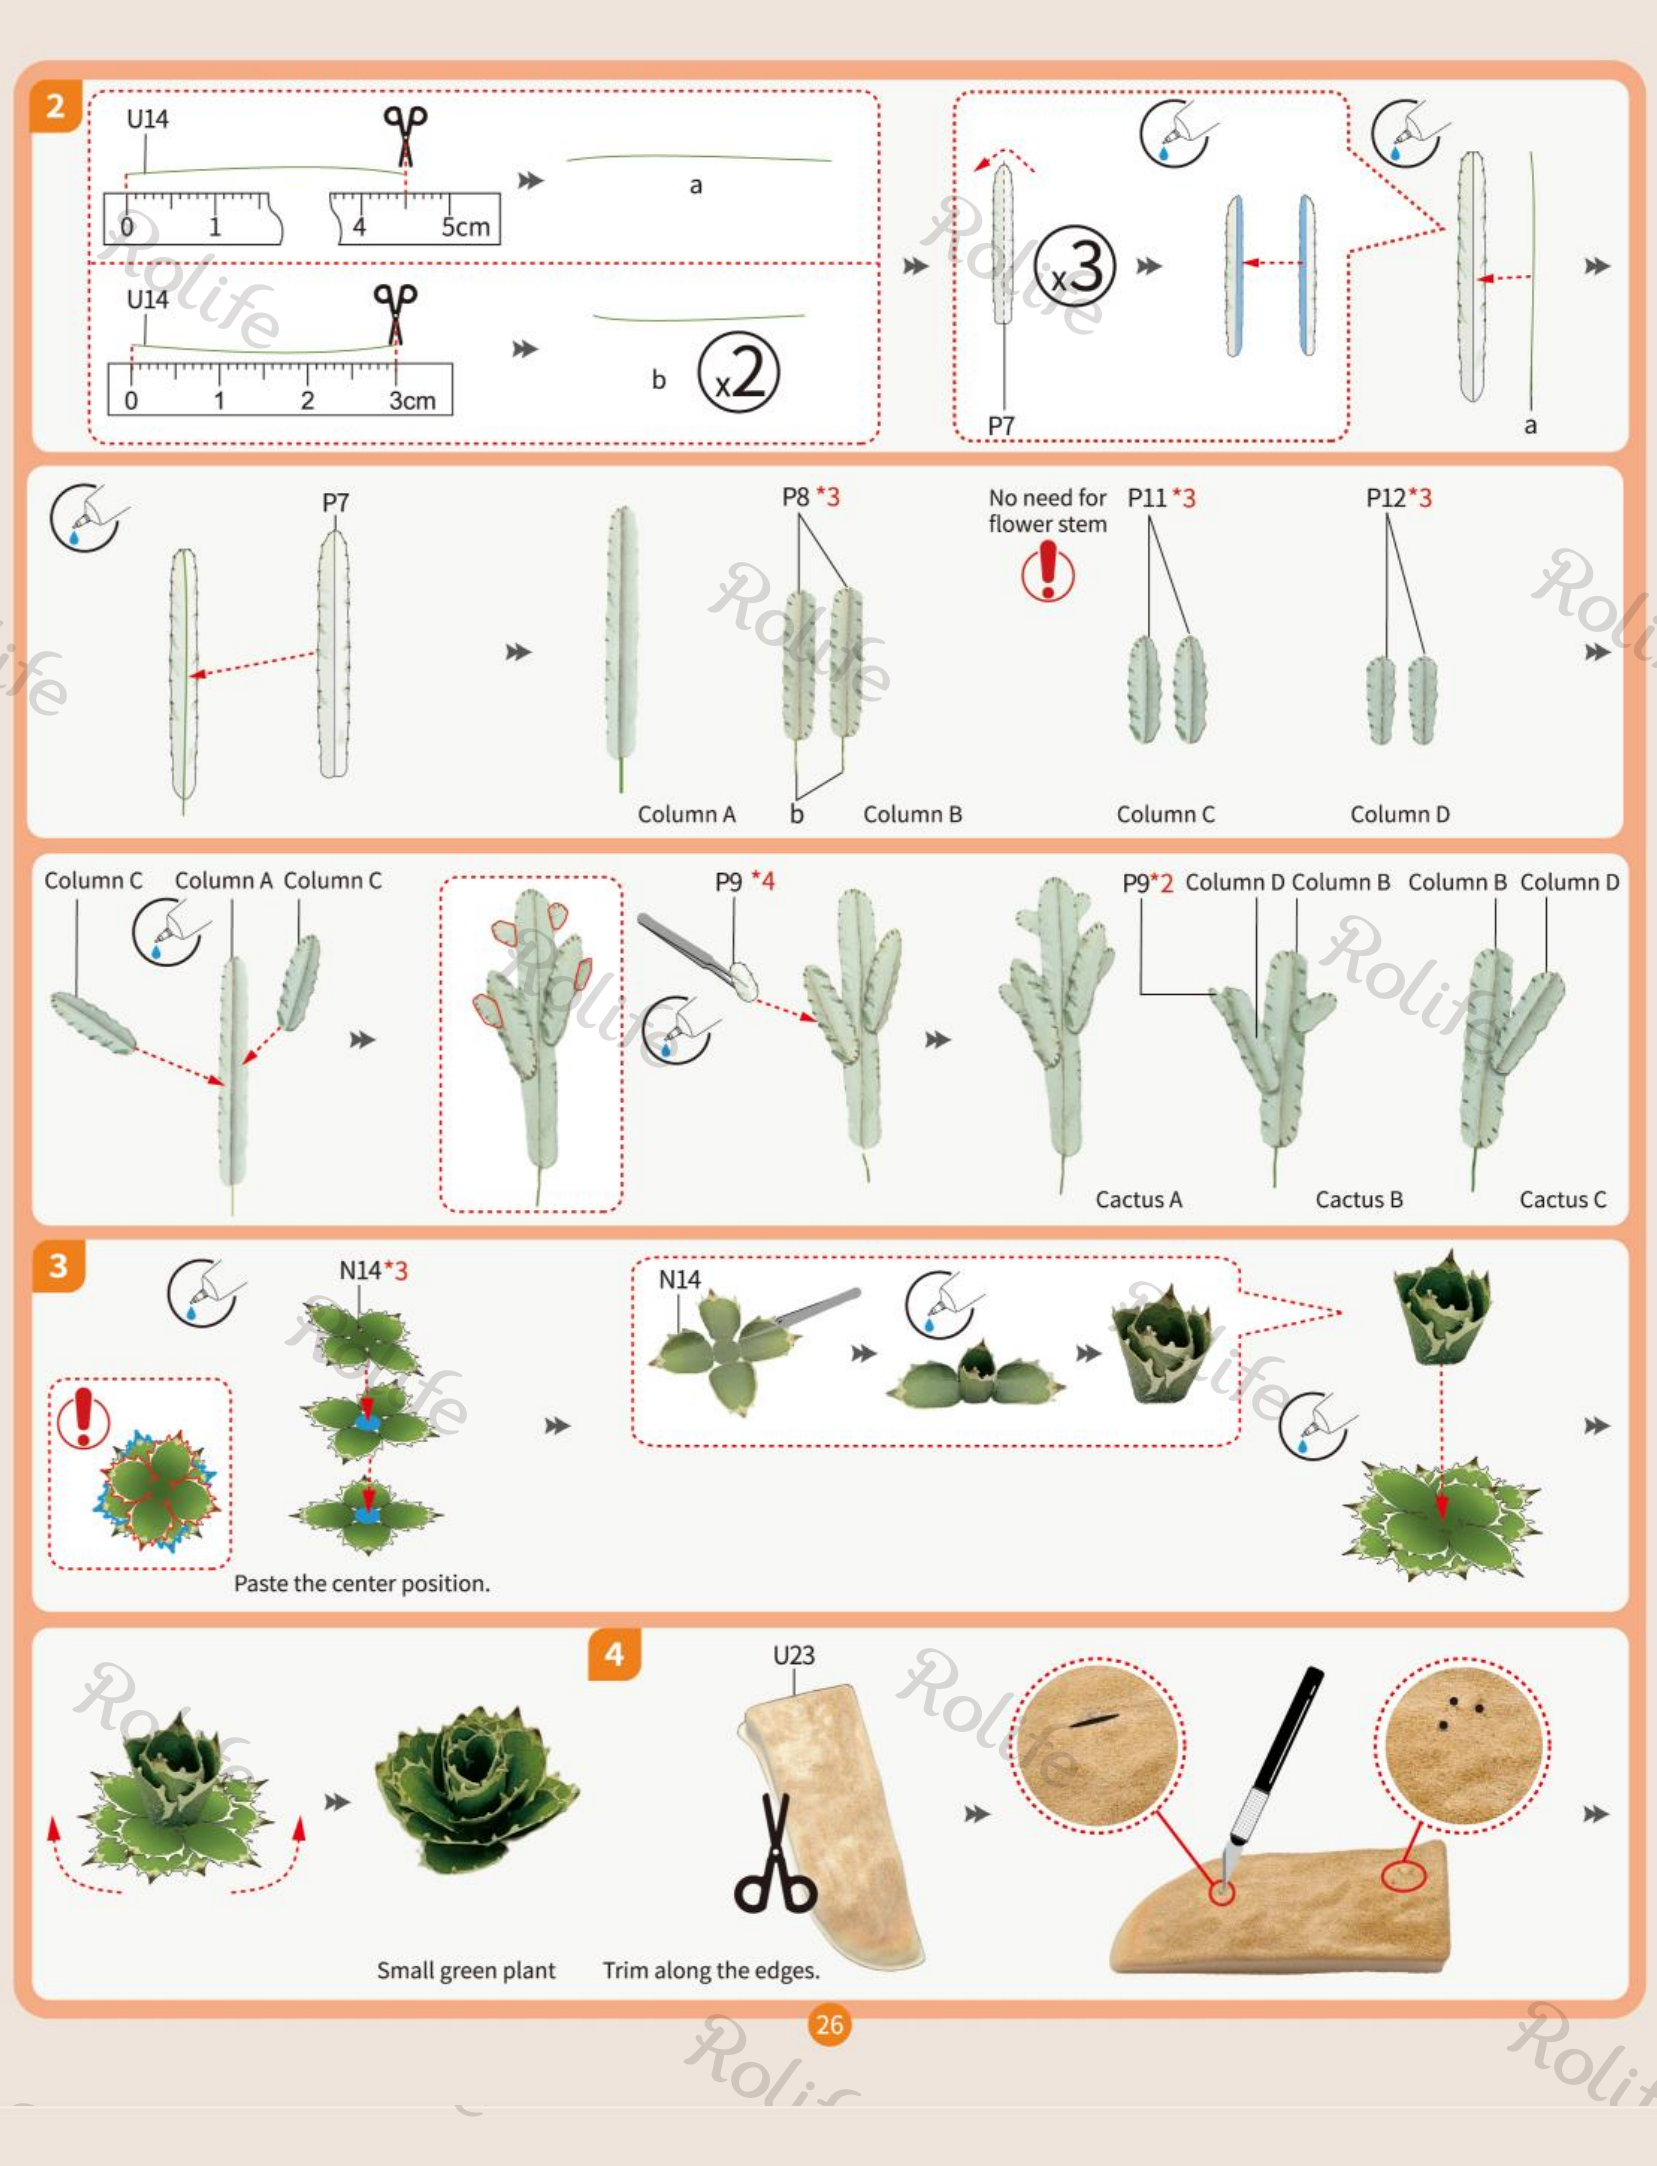

No need for flower stem

Paste the center position.

Small green plant

Trim along the edges.

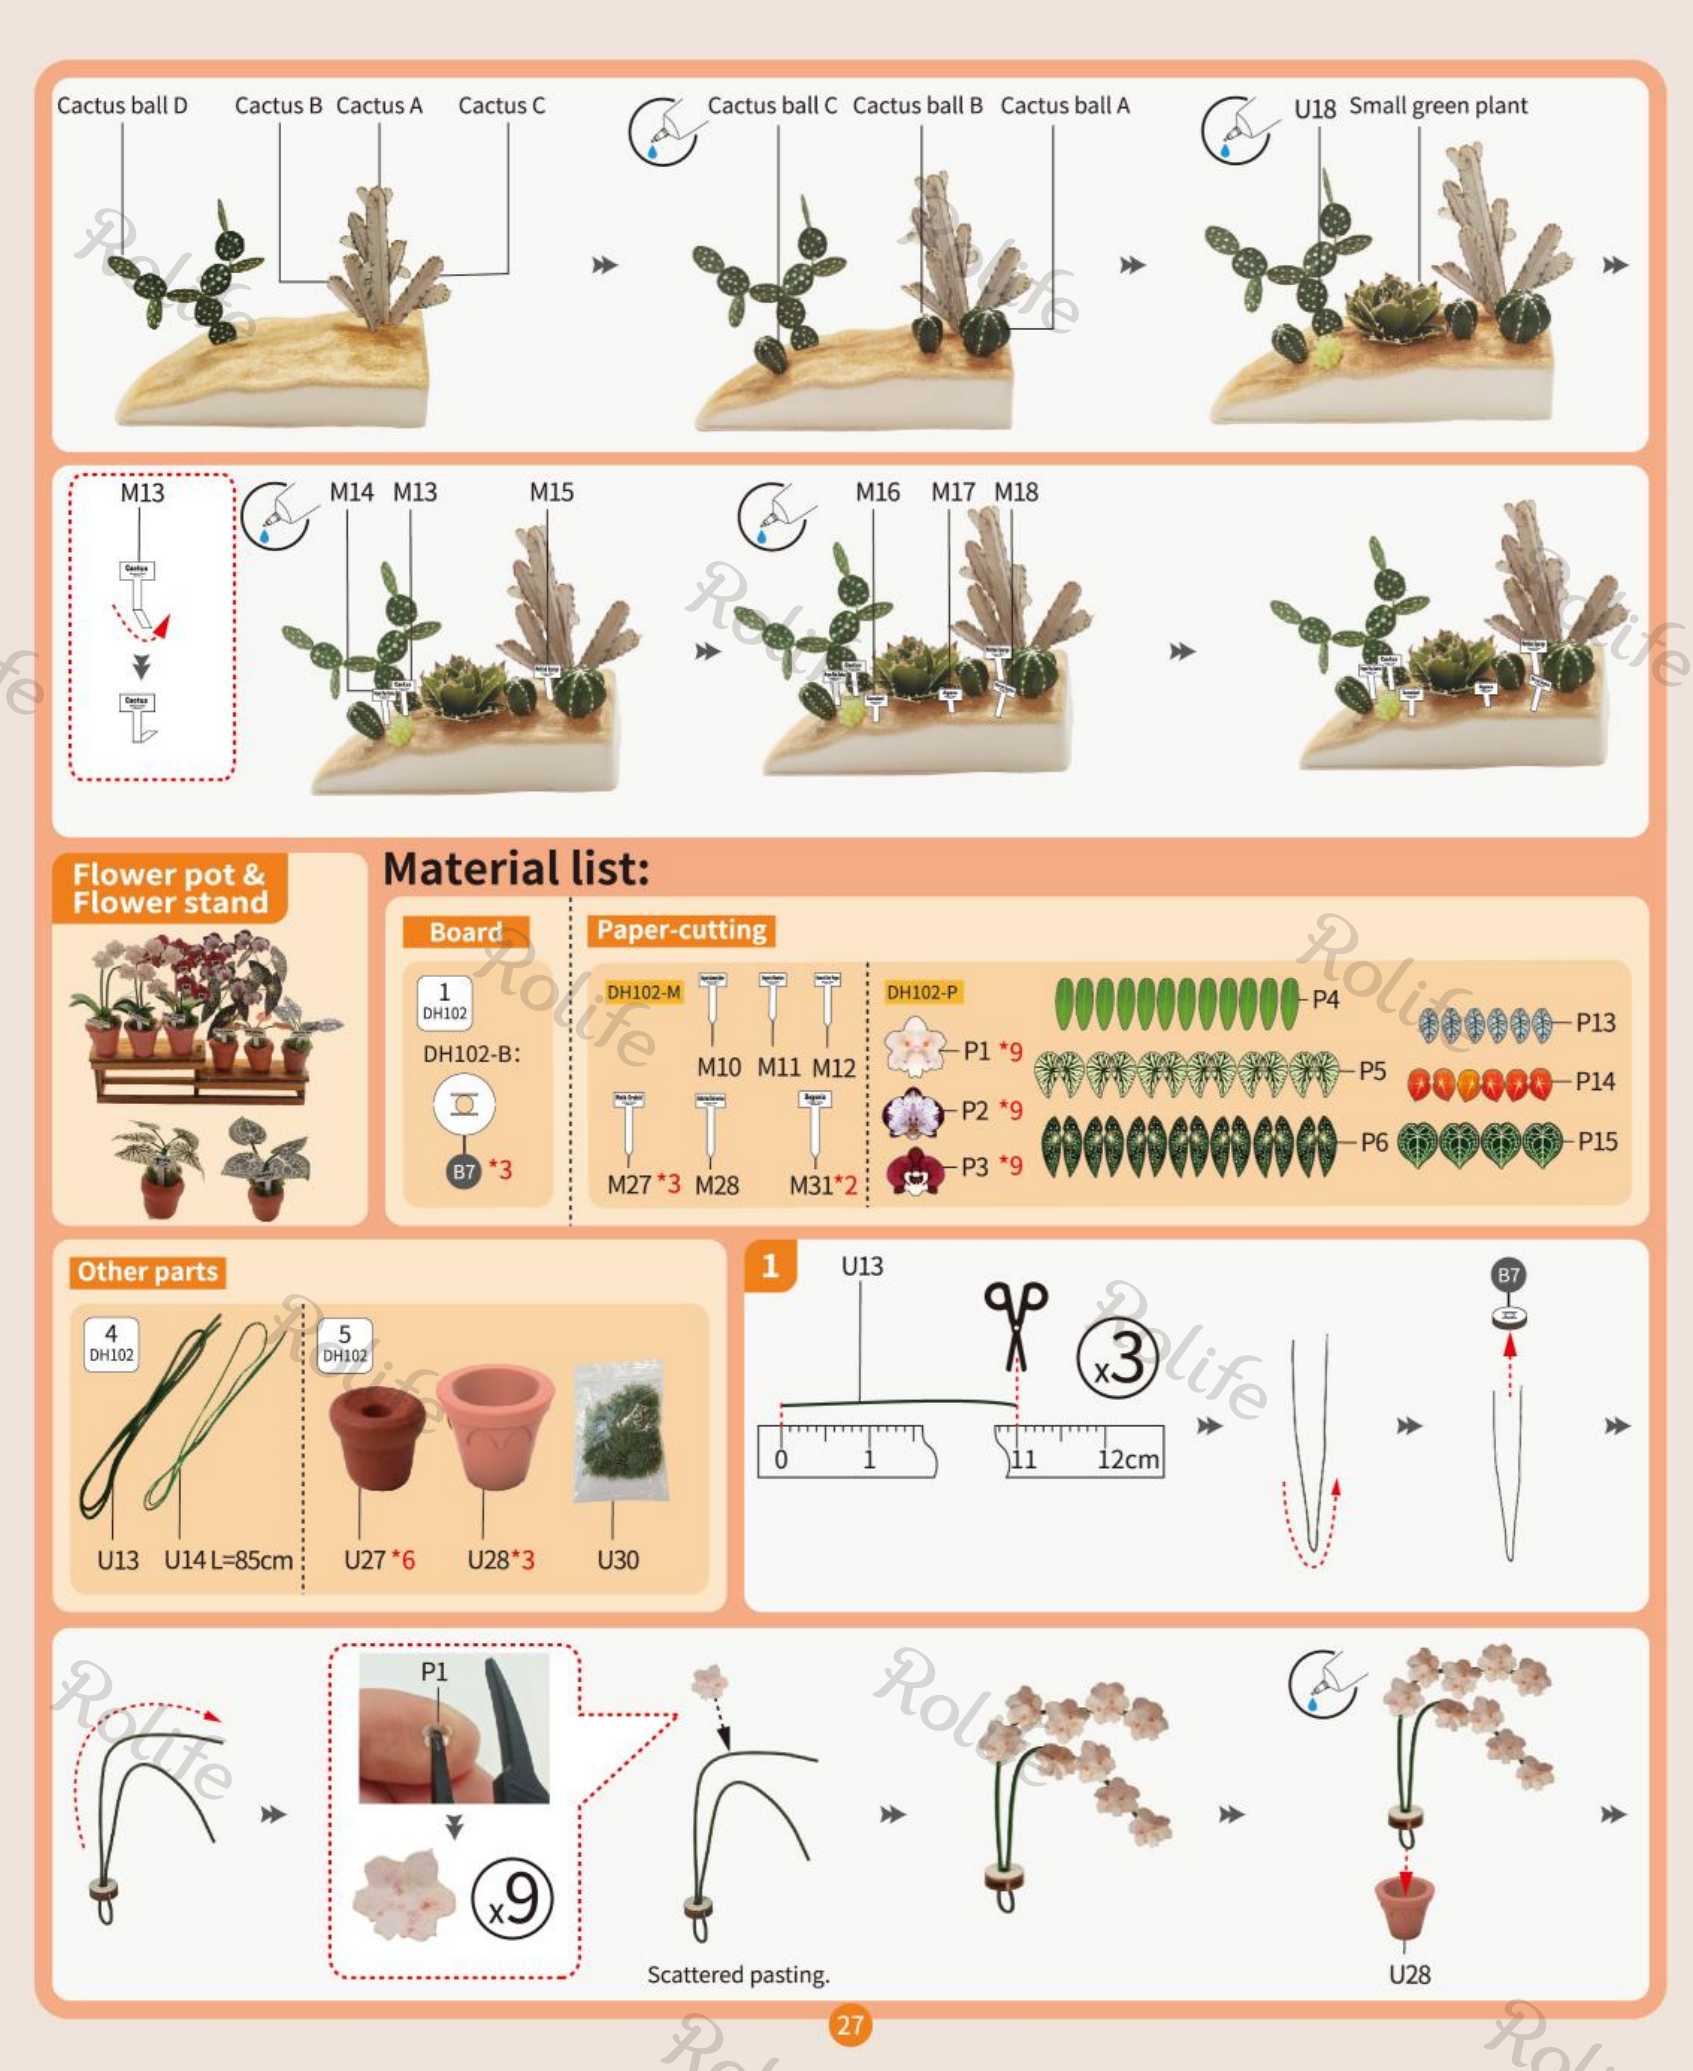

Scattered pasting.

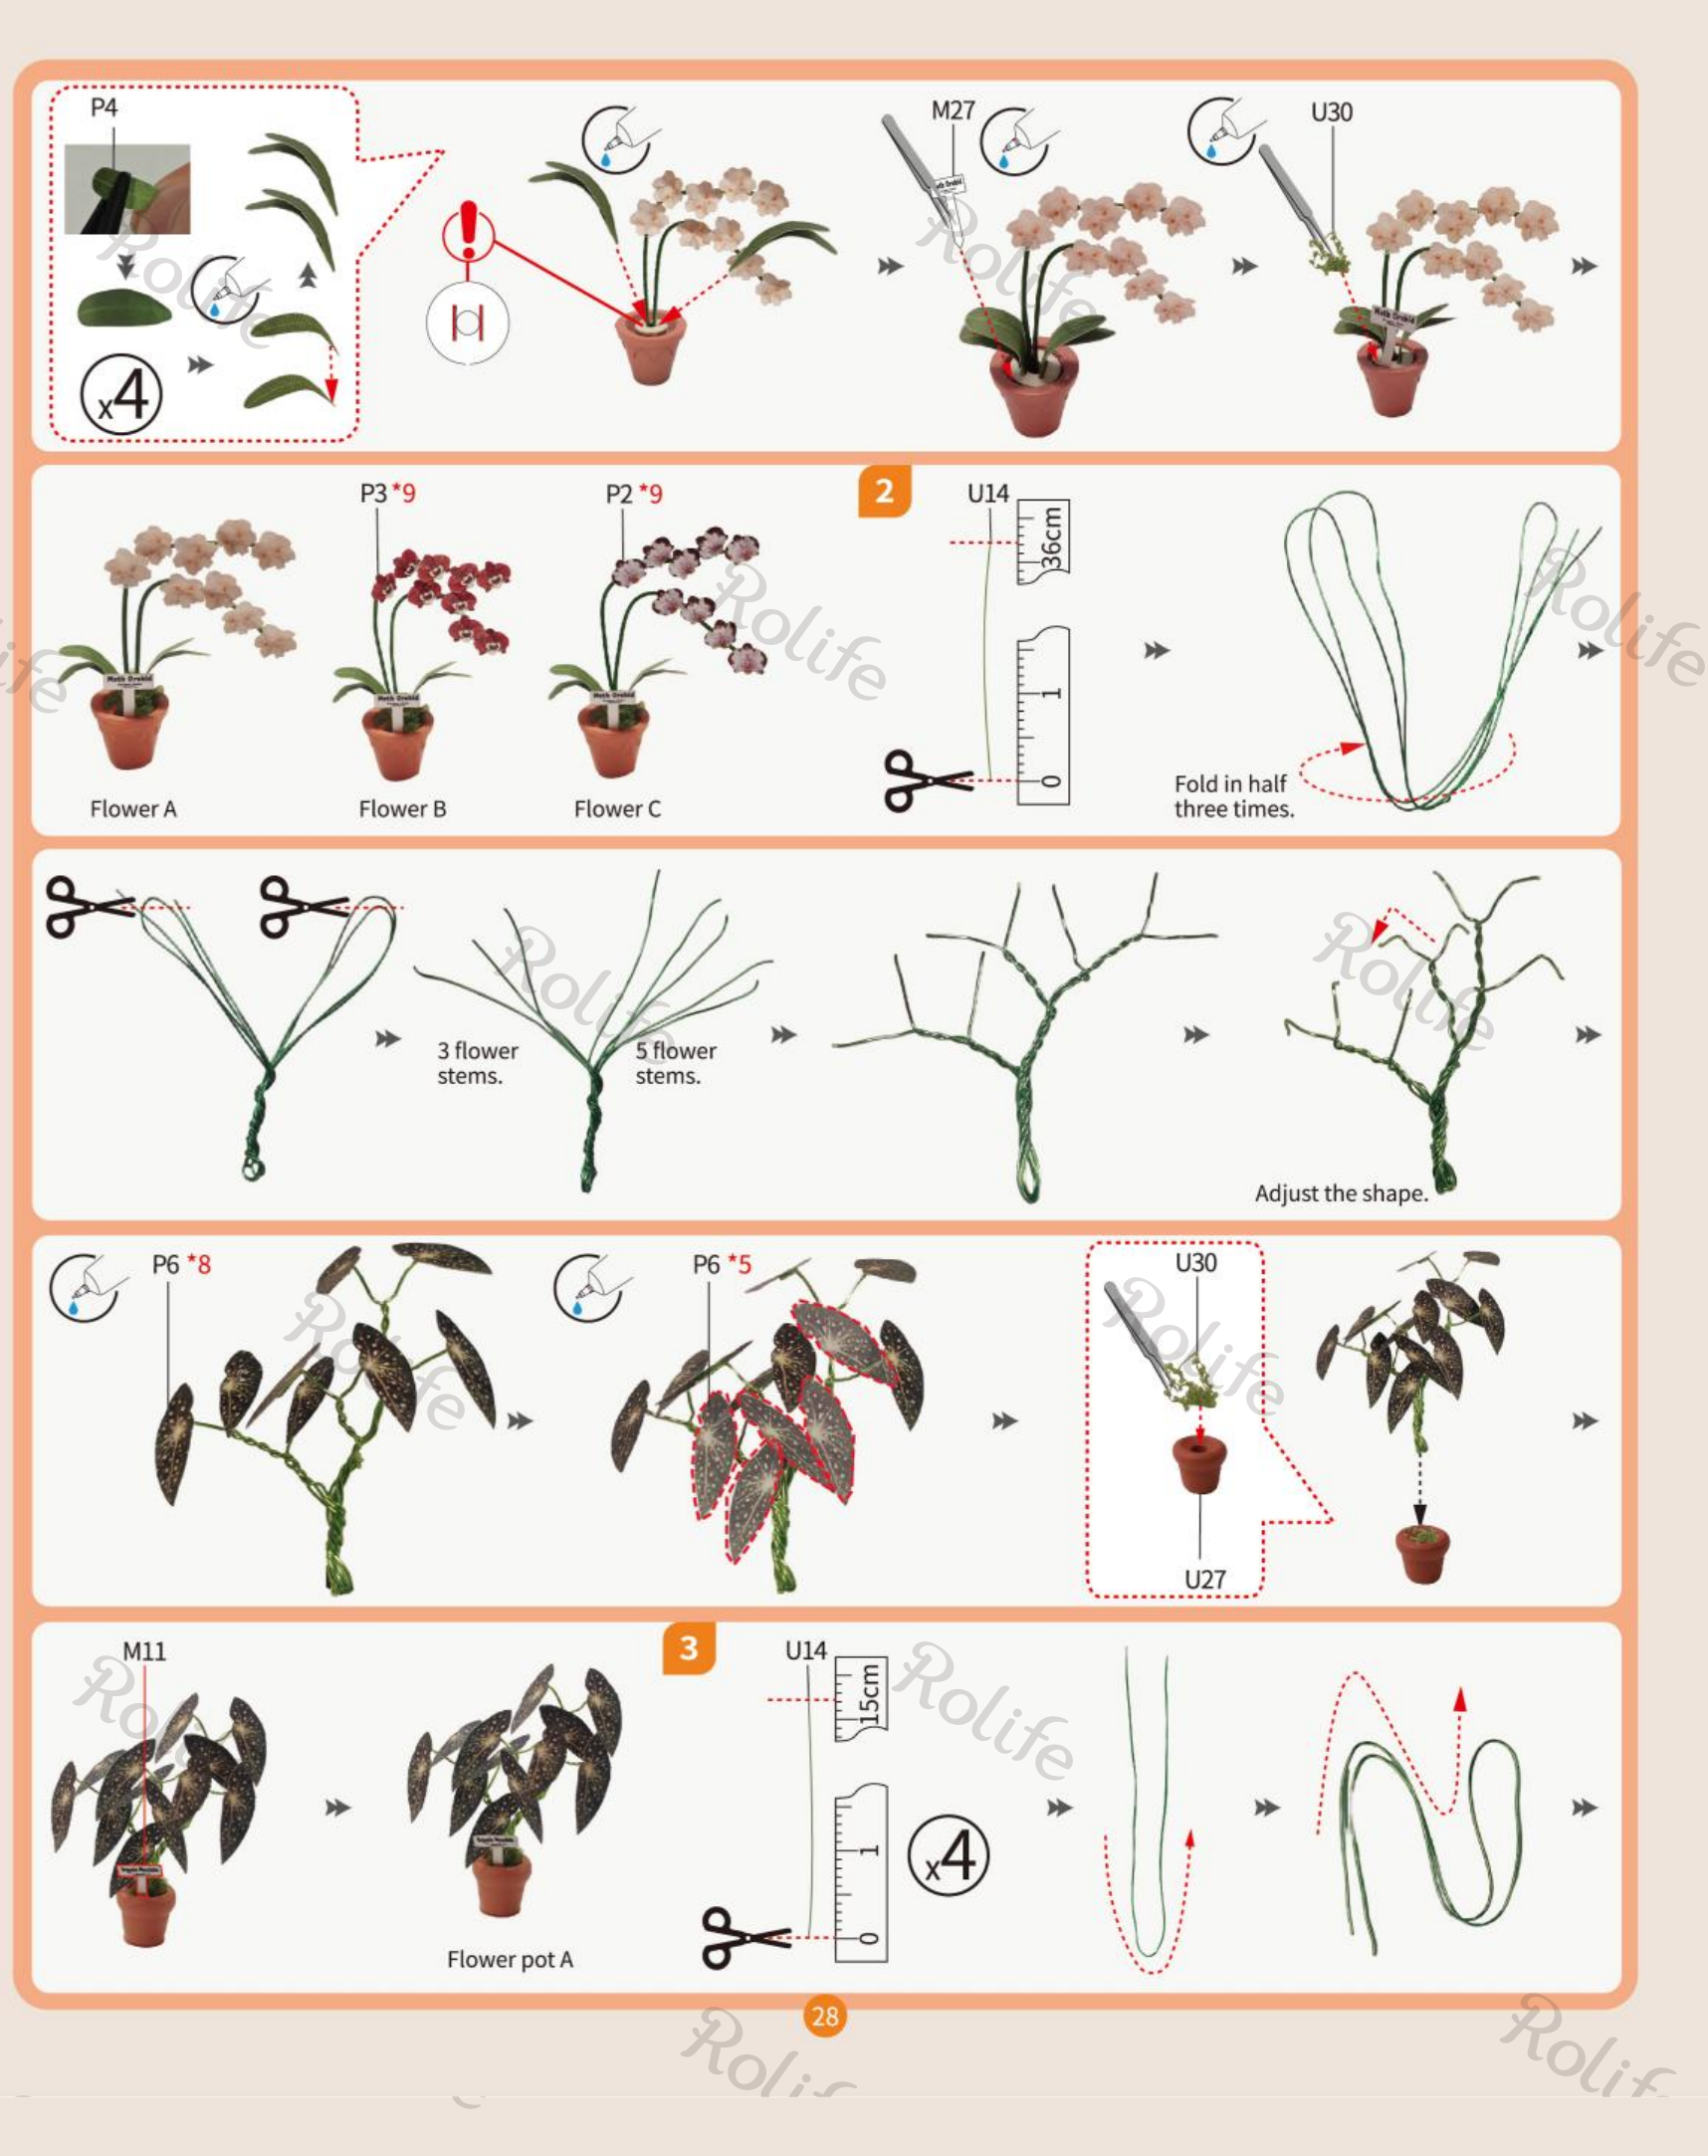
P4
x4
M27
U30
Flower A
P3 *9
Flower B
P2 *9
Flower C
2
U14
36cm
Fold in half three times.
3 flower stems.
5 flower stems.
Adjust the shape.
P6 *8
P6 *5
U30
U27
M11
Flower pot A
3
U14
15cm
x4

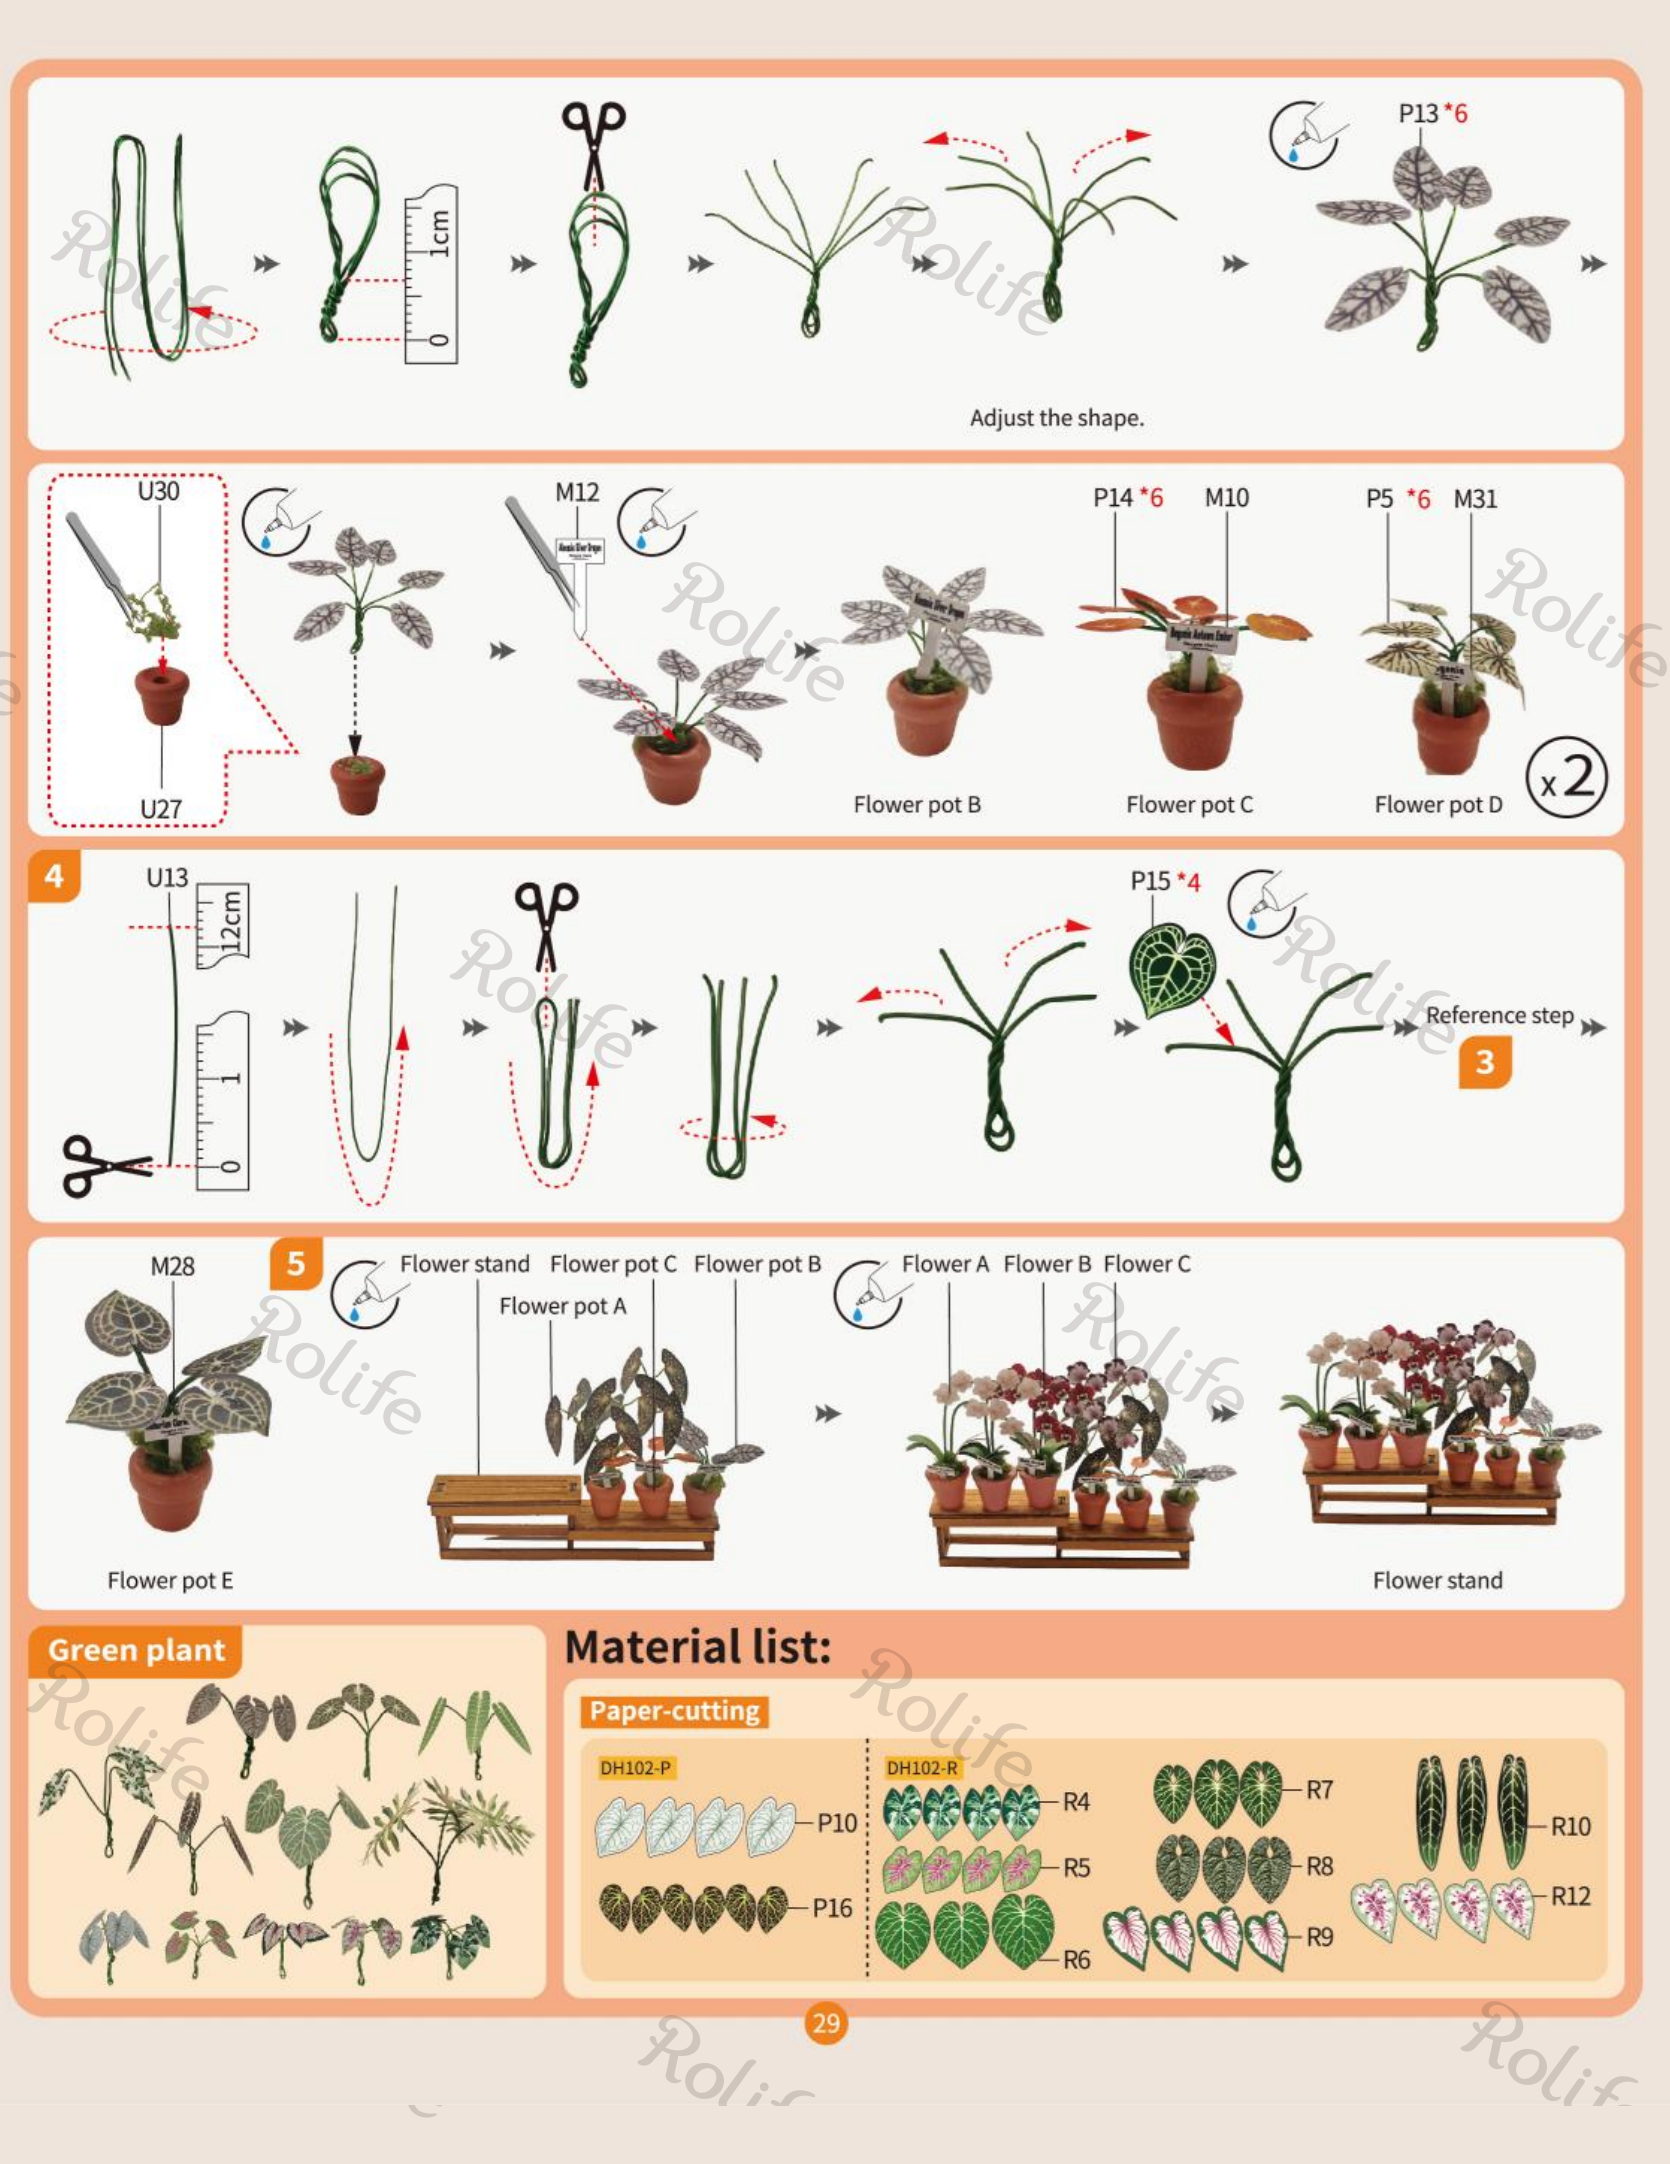
1cm
Adjust the shape.
P13 *6
U30
U27
M12
P14 *6
M10
P5 *6
M31
Flower pot B
Flower pot C
Flower pot D
x2
4
U13
12cm
P15 *4
Reference step
3
M28
5
Flower stand
Flower pot C
Flower pot B
Flower pot A
Flower A
Flower B
Flower C
Flower pot E
Flower stand
Green plant
Material list:
Paper-cutting
DH102-P
P10
P16
DH102-R
R4
R5
R6
R7
R8
R9
R10
R12

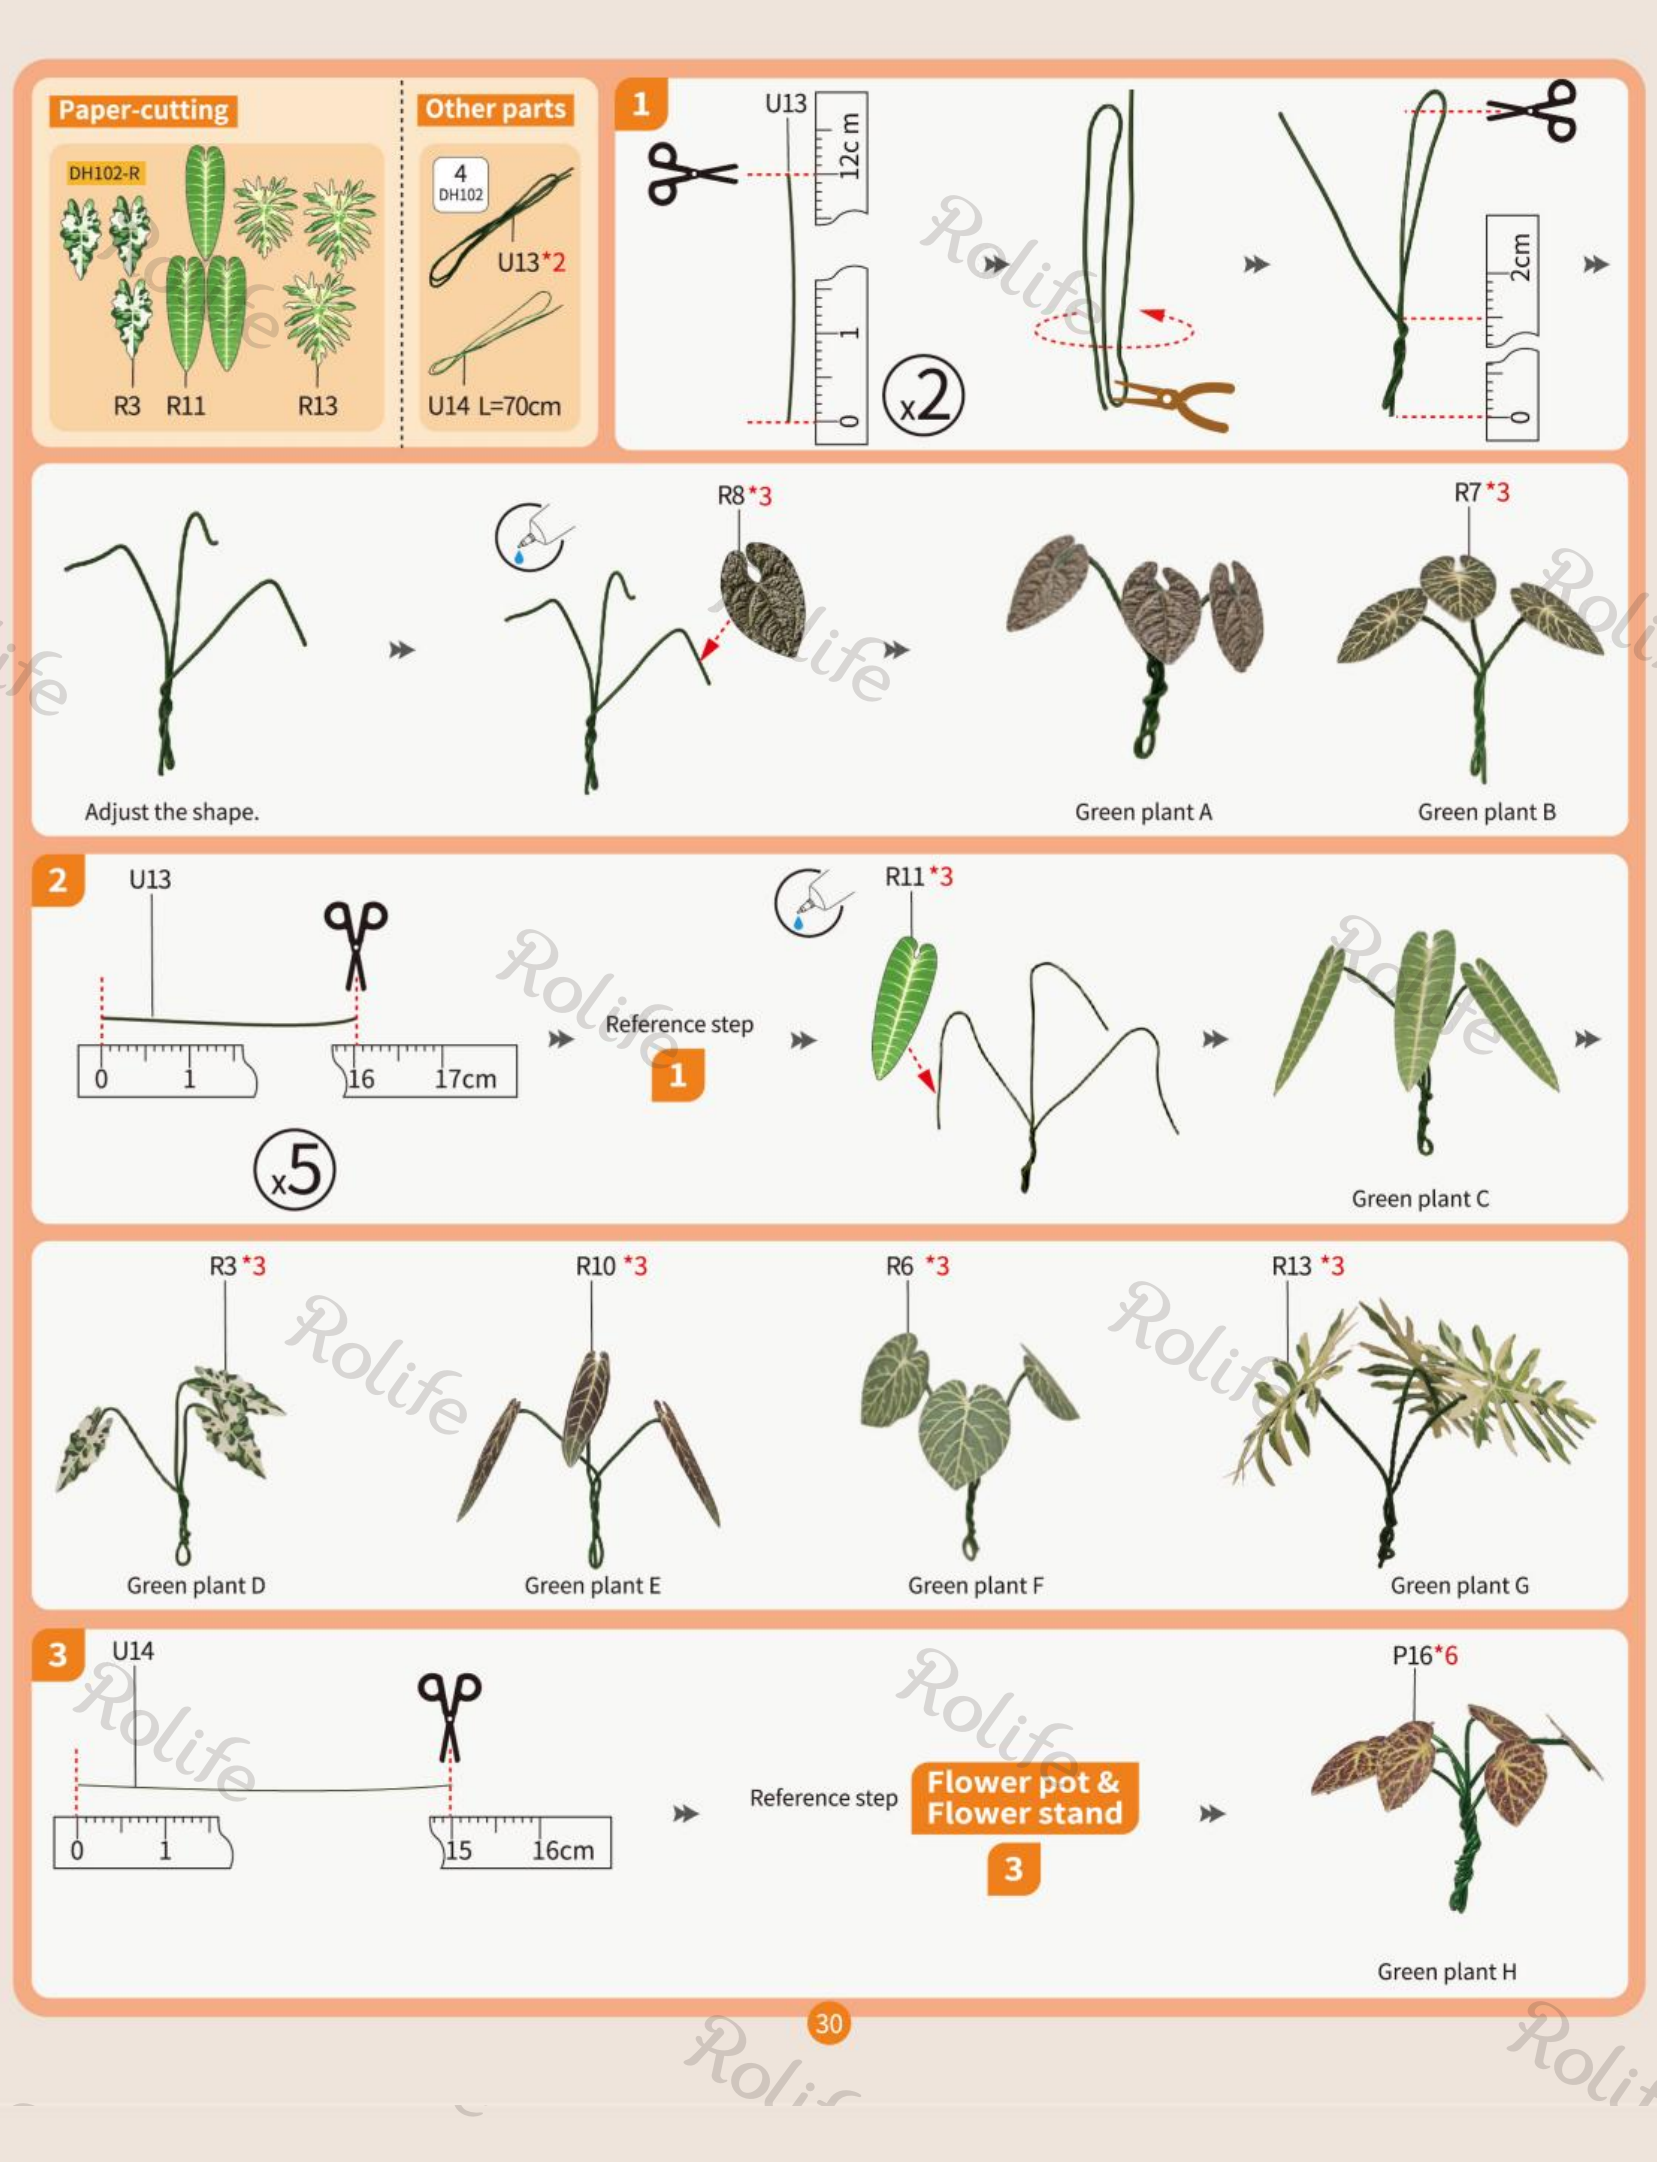
Paper-cutting
DH102-R
R3
R11
R13
Other parts
4
DH102
U13*2
U14 L=70cm
1
U13
12cm
x2
2cm
Adjust the shape.
R8 *3
R7 *3
Green plant A
Green plant B
2
U13
16
17cm
x5
Reference step
1
R11 *3
Green plant C
R3 *3
R10 *3
R6 *3
R13 *3
Green plant D
Green plant E
Green plant F
Green plant G
3
U14
15
16cm
Reference step
Flower pot & Flower stand
3
P16 *6
Green plant H

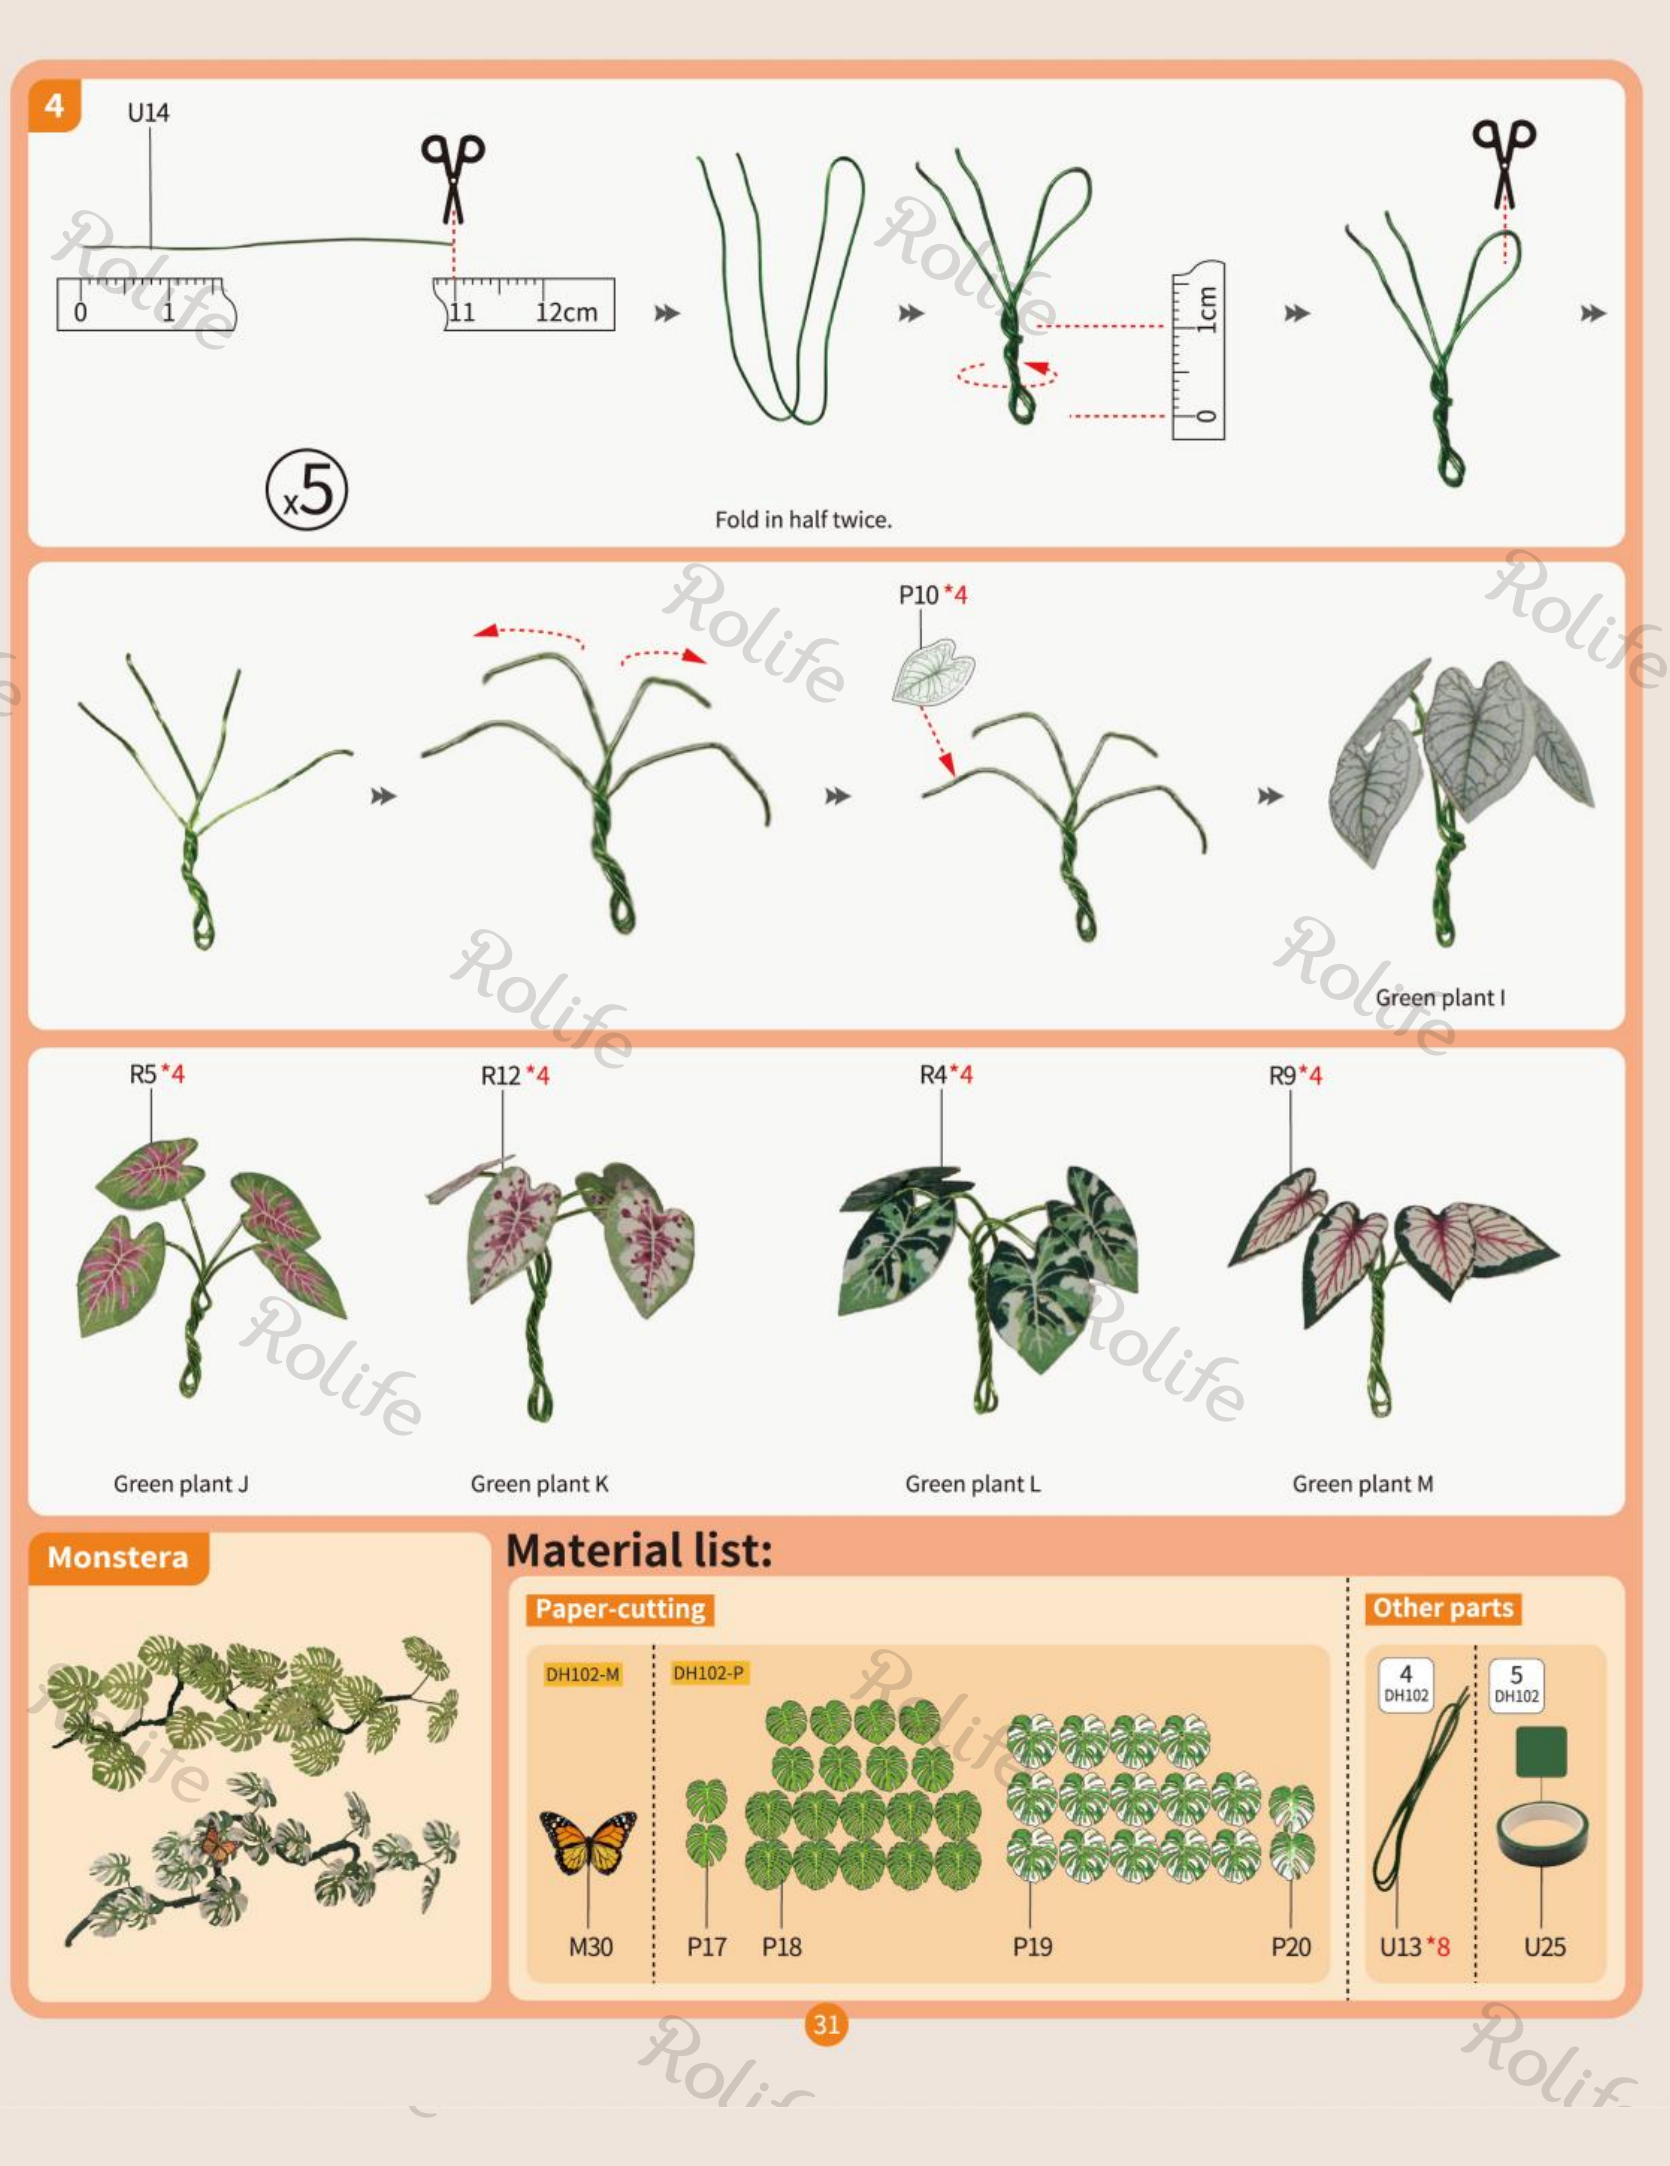
4
U14
11
12cm
x5
Fold in half twice.
1cm
P10 *4
Green plant I
R5 *4
R12 *4
R4 *4
R9 *4
Green plant J
Green plant K
Green plant L
Green plant M
Monstera
Material list:
Paper-cutting
DH102-M
DH102-P
M30
P17
P18
P19
P20
Other parts
4
DH102
5
DH102
U13 *8
U25

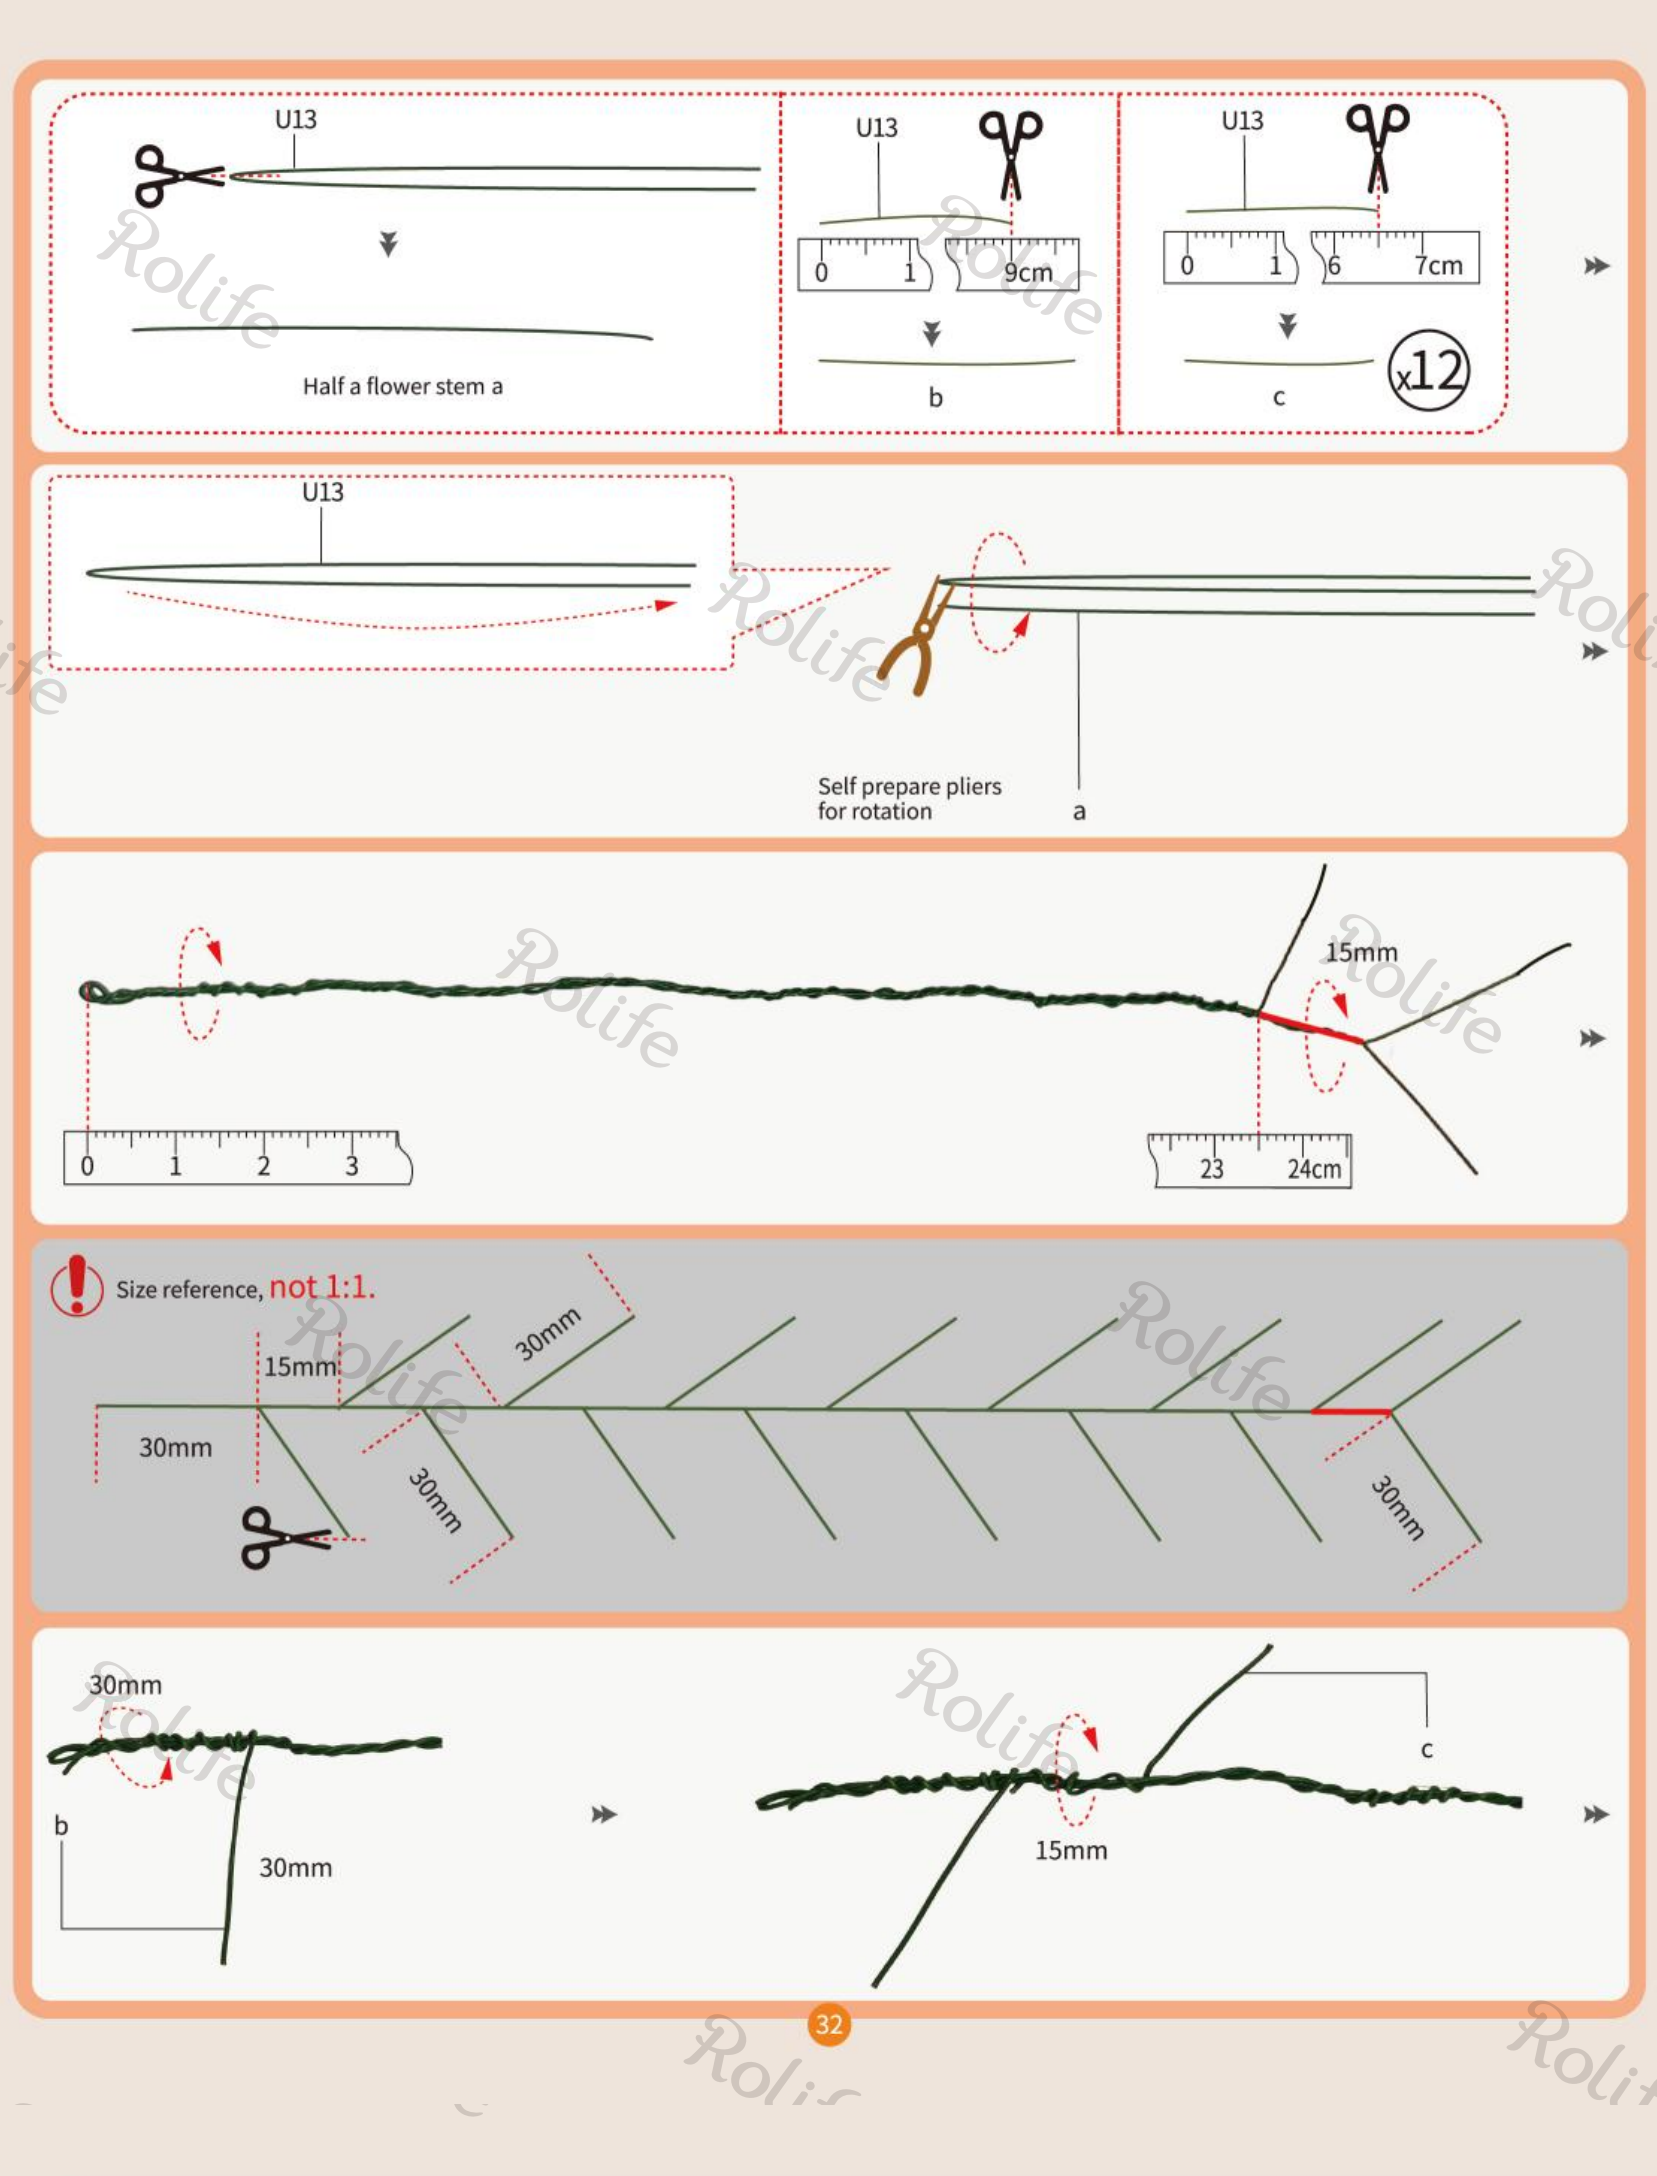
U13
Half a flower stem a
U13
9cm
b
U13
6
7cm
c
x12
U13
Self prepare pliers for rotation
a
15mm
23
24cm
Size reference, not 1:1.
15mm
30mm
30mm
30mm
30mm
30mm
b
30mm
c
15mm

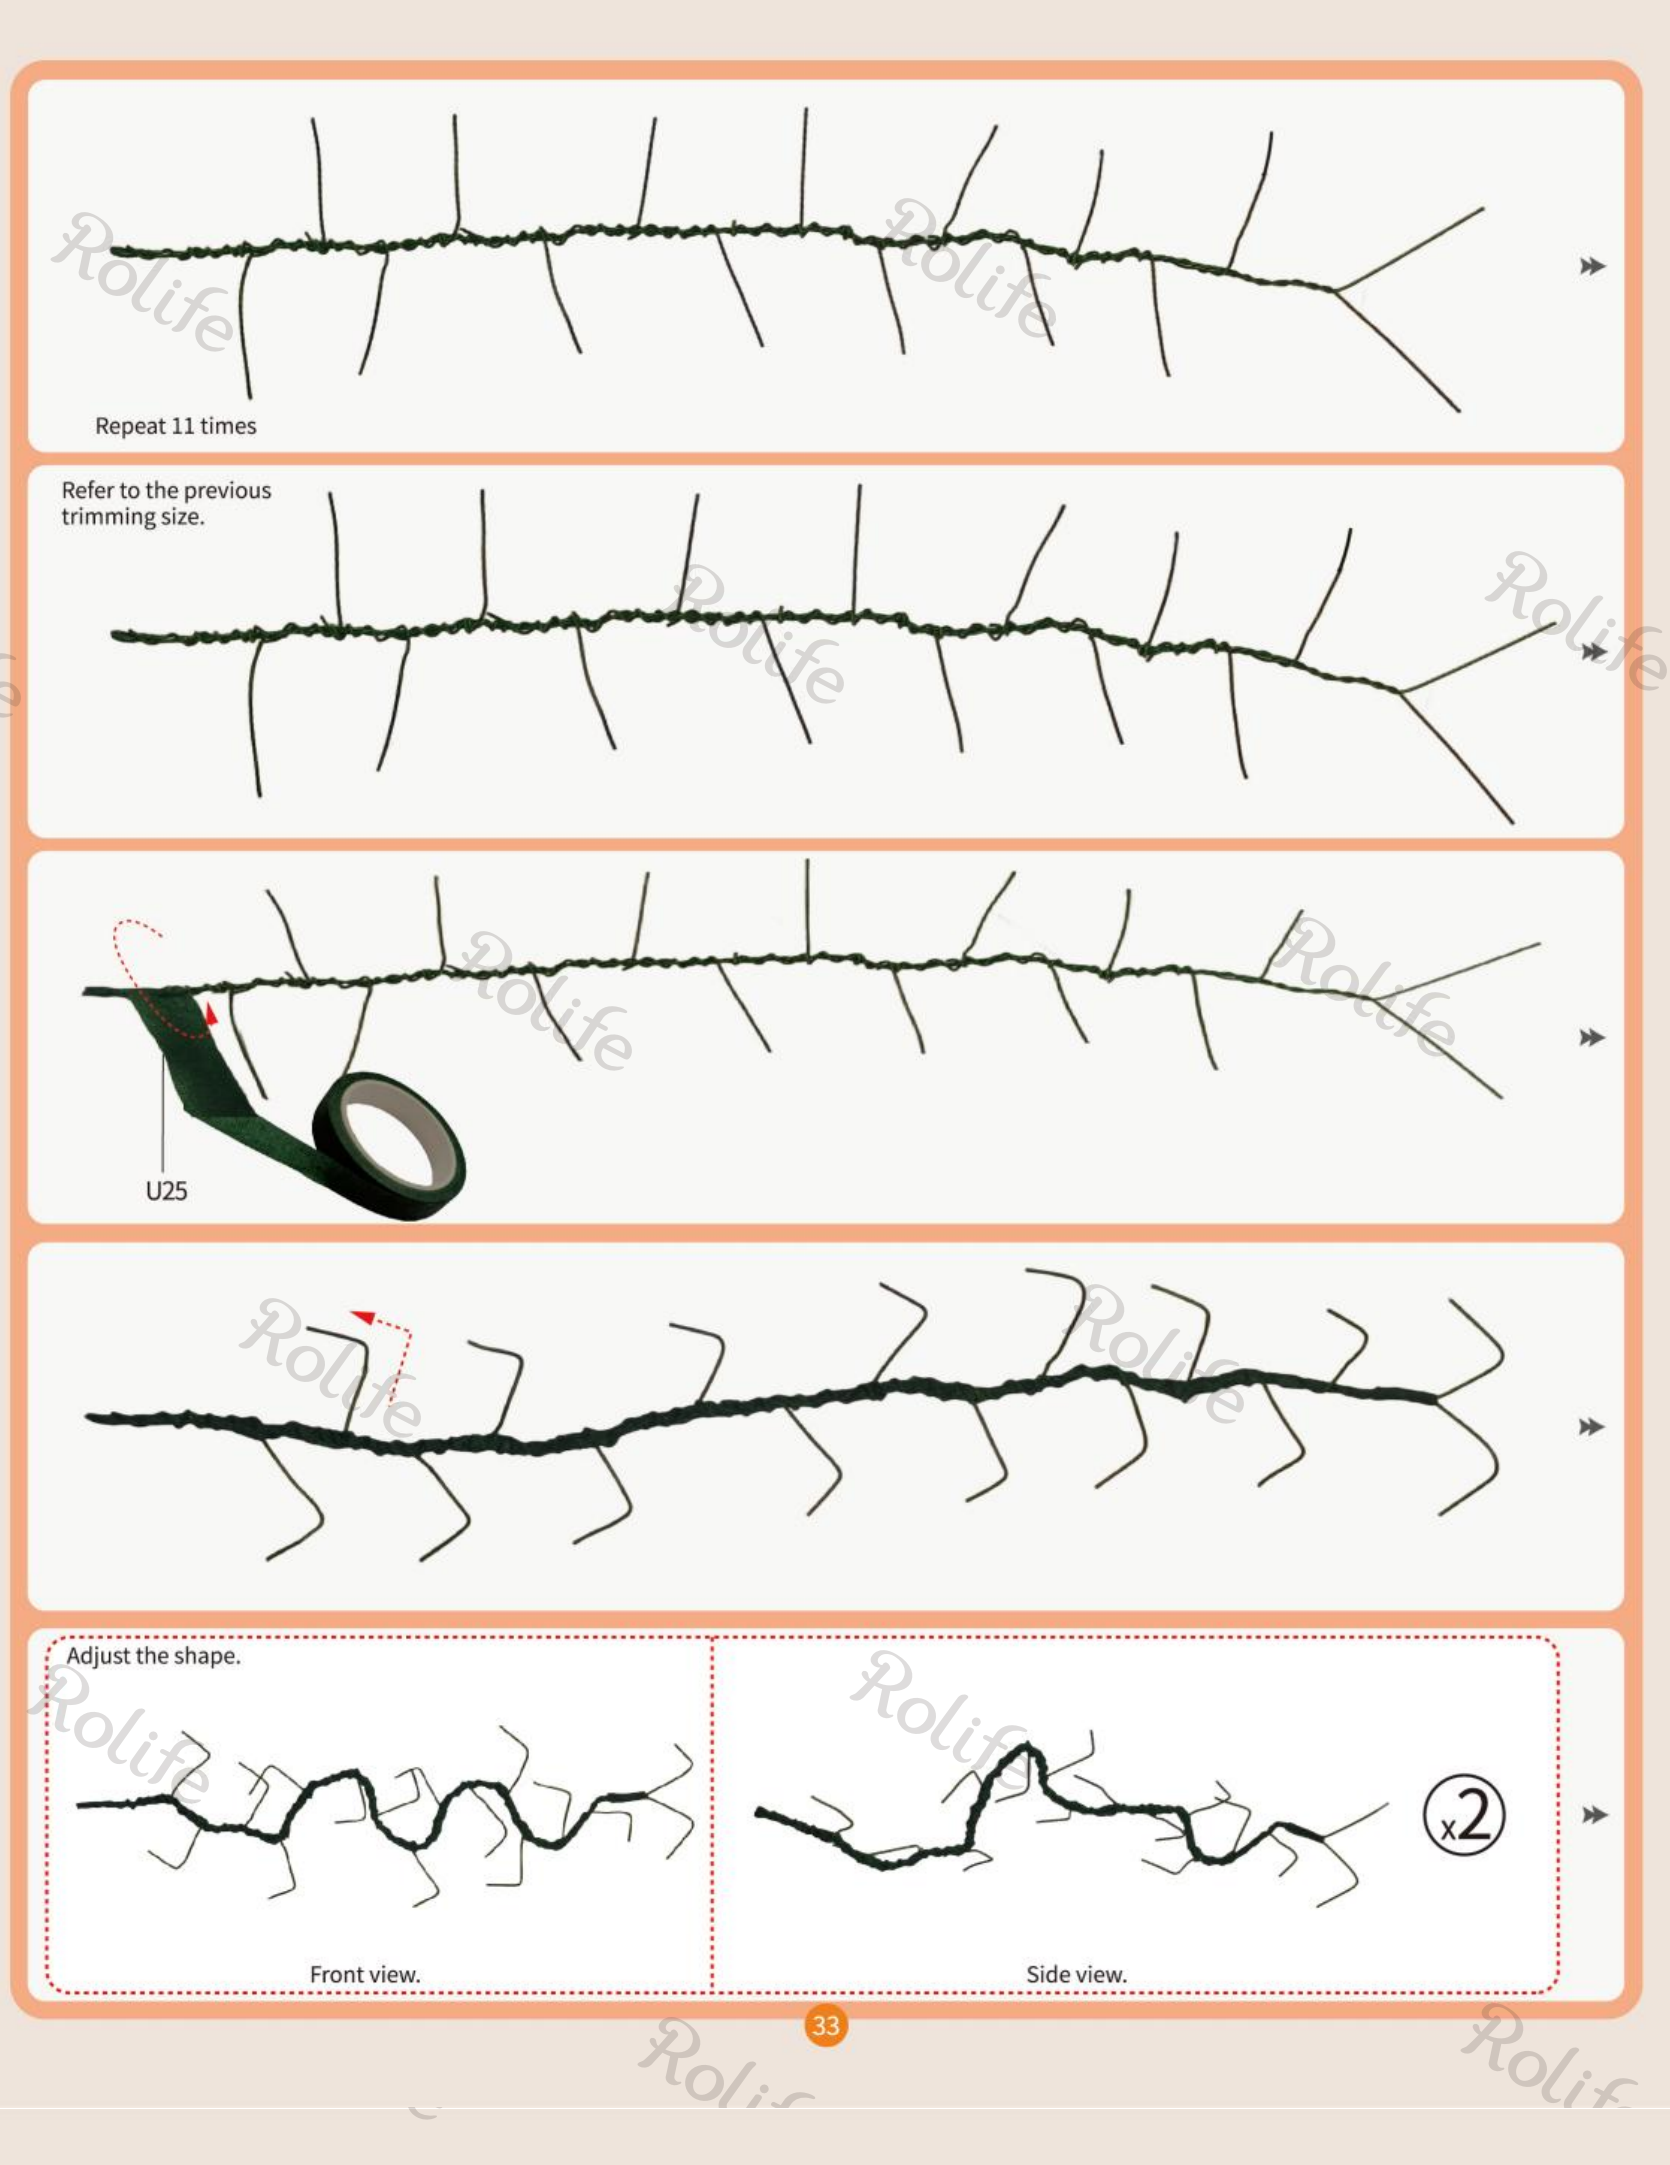
Repeat 11 times
Refer to the previous trimming size.
U25
Adjust the shape.
Front view.
Side view.
x2

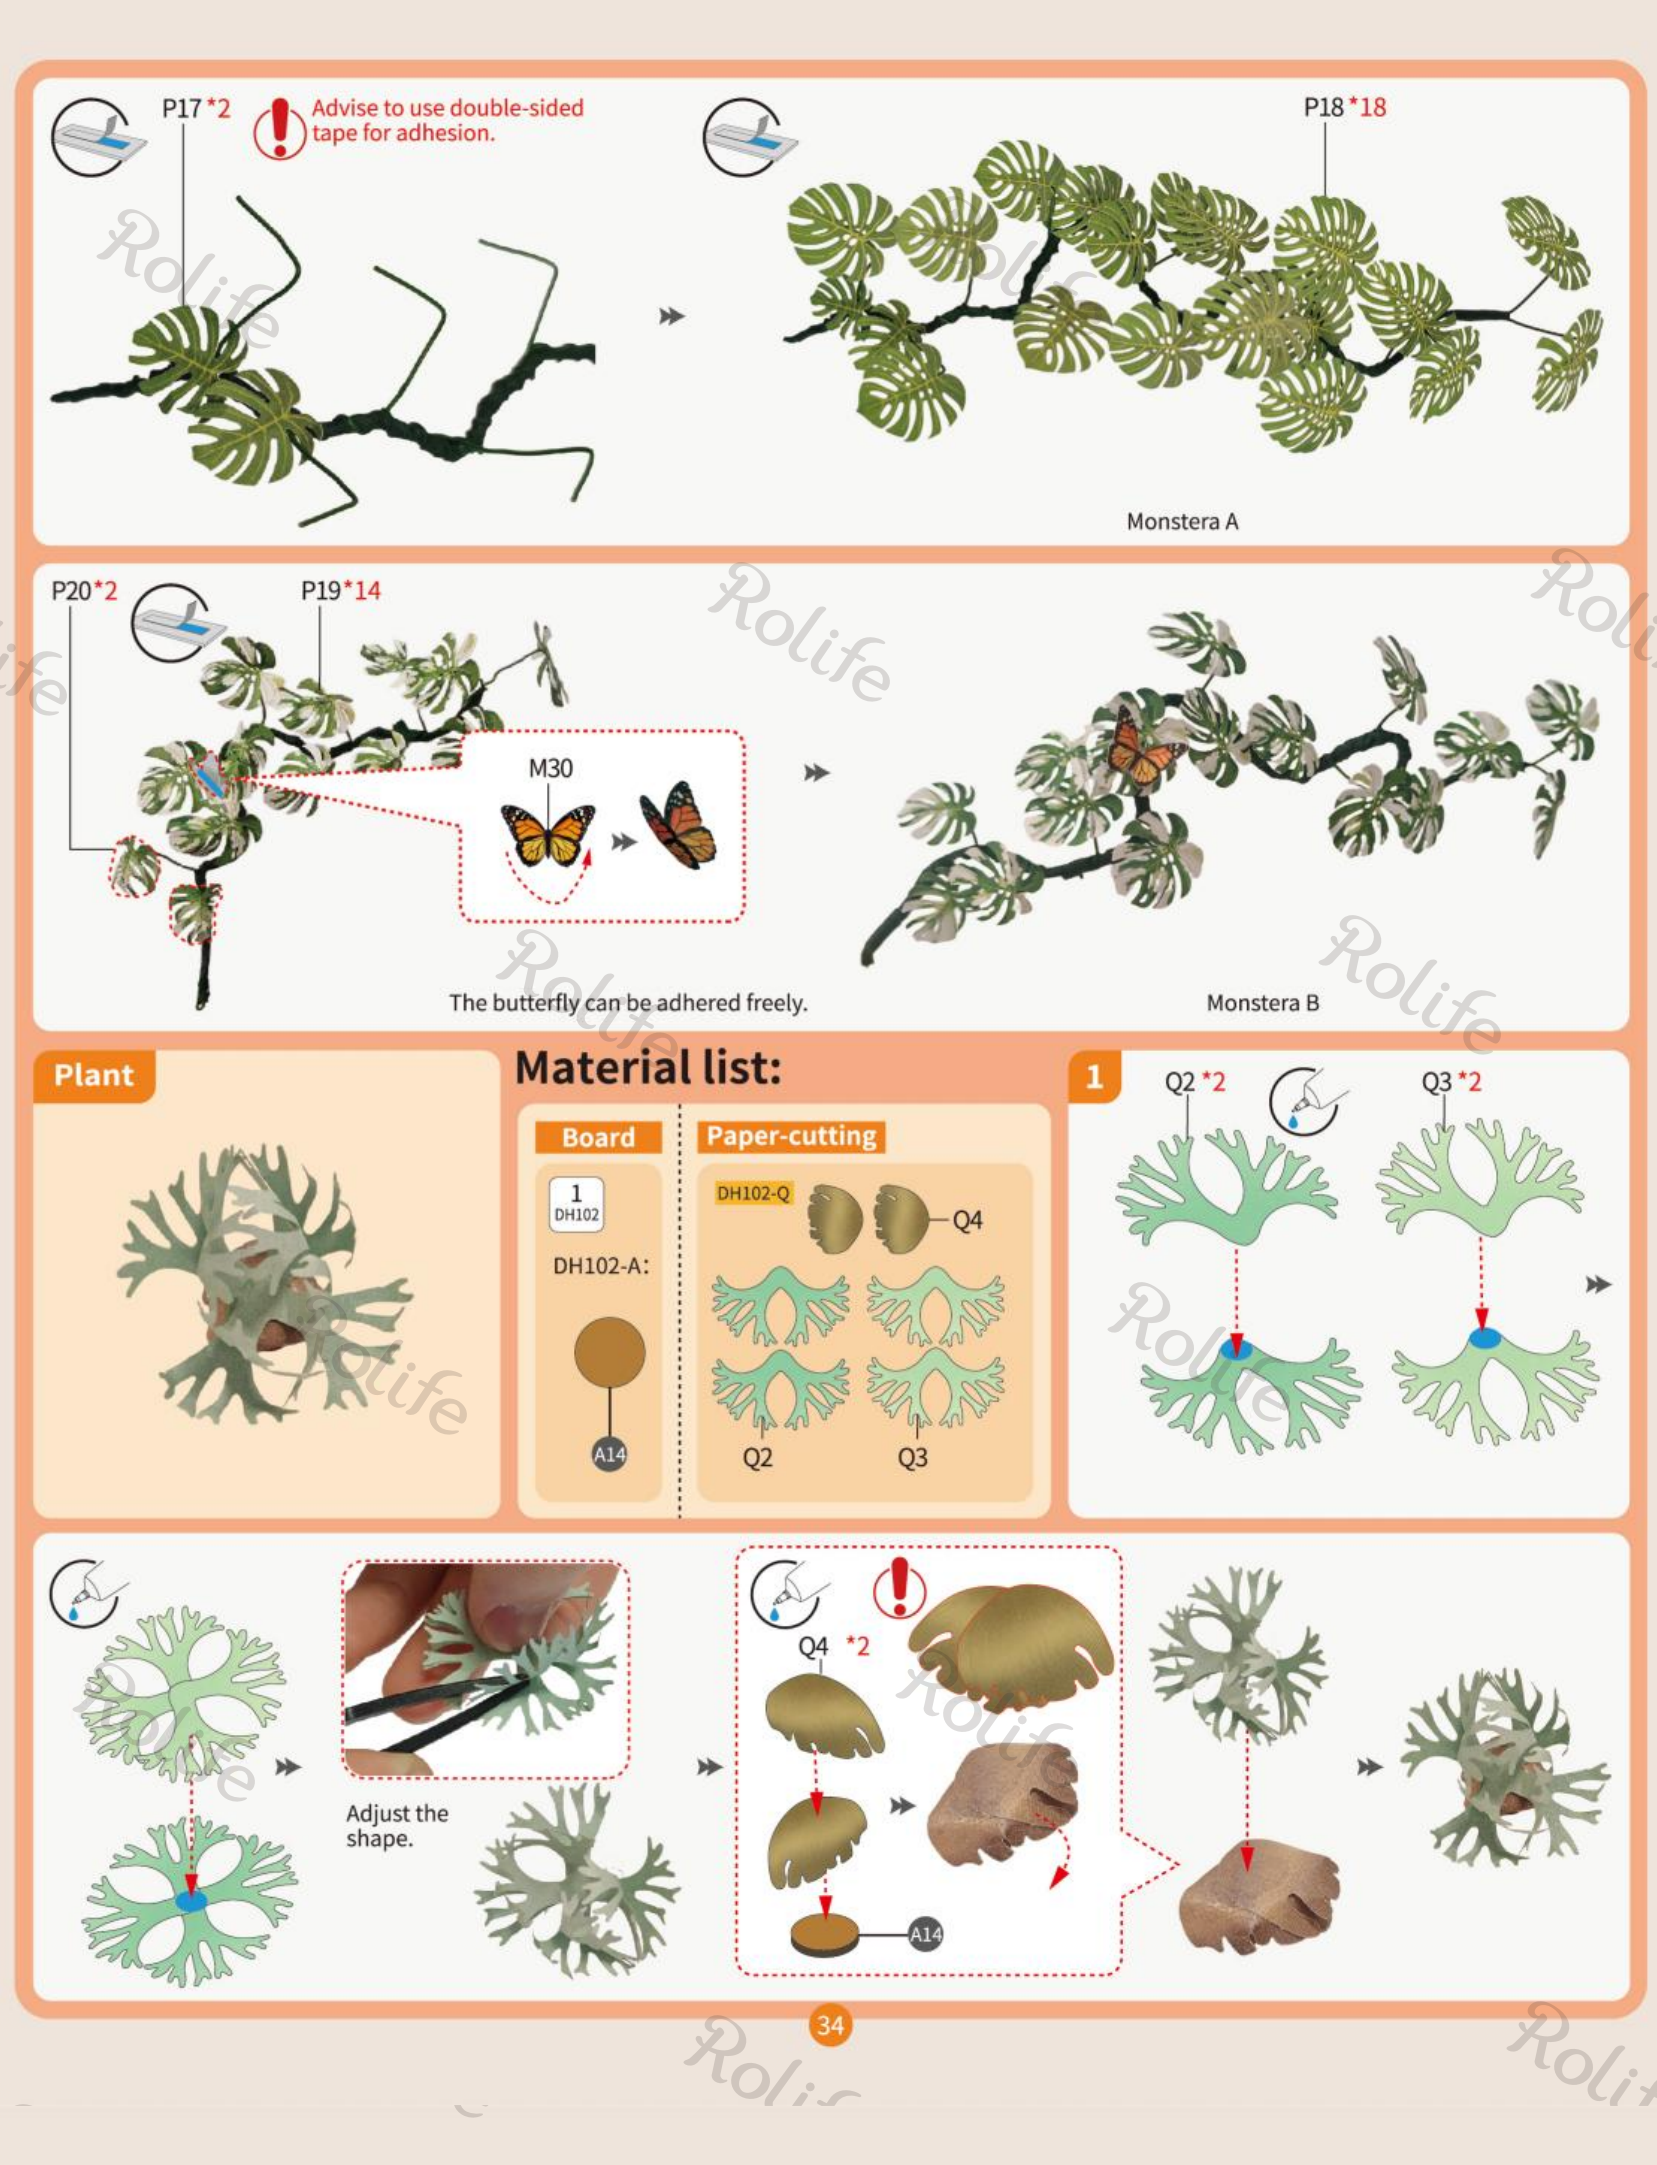
P17 *2
Advise to use double-sided tape for adhesion.
P18 *18
Monstera A
P20 *2
P19 *14
M30
The butterfly can be adhered freely.
Monstera B
Plant
Material list:
Board
1
DH102
DH102-A:
A14
Paper-cutting
DH102-Q
Q4
Q2
Q3
1
Q2 *2
Q3 *2
Adjust the shape.
Q4 *2
A14

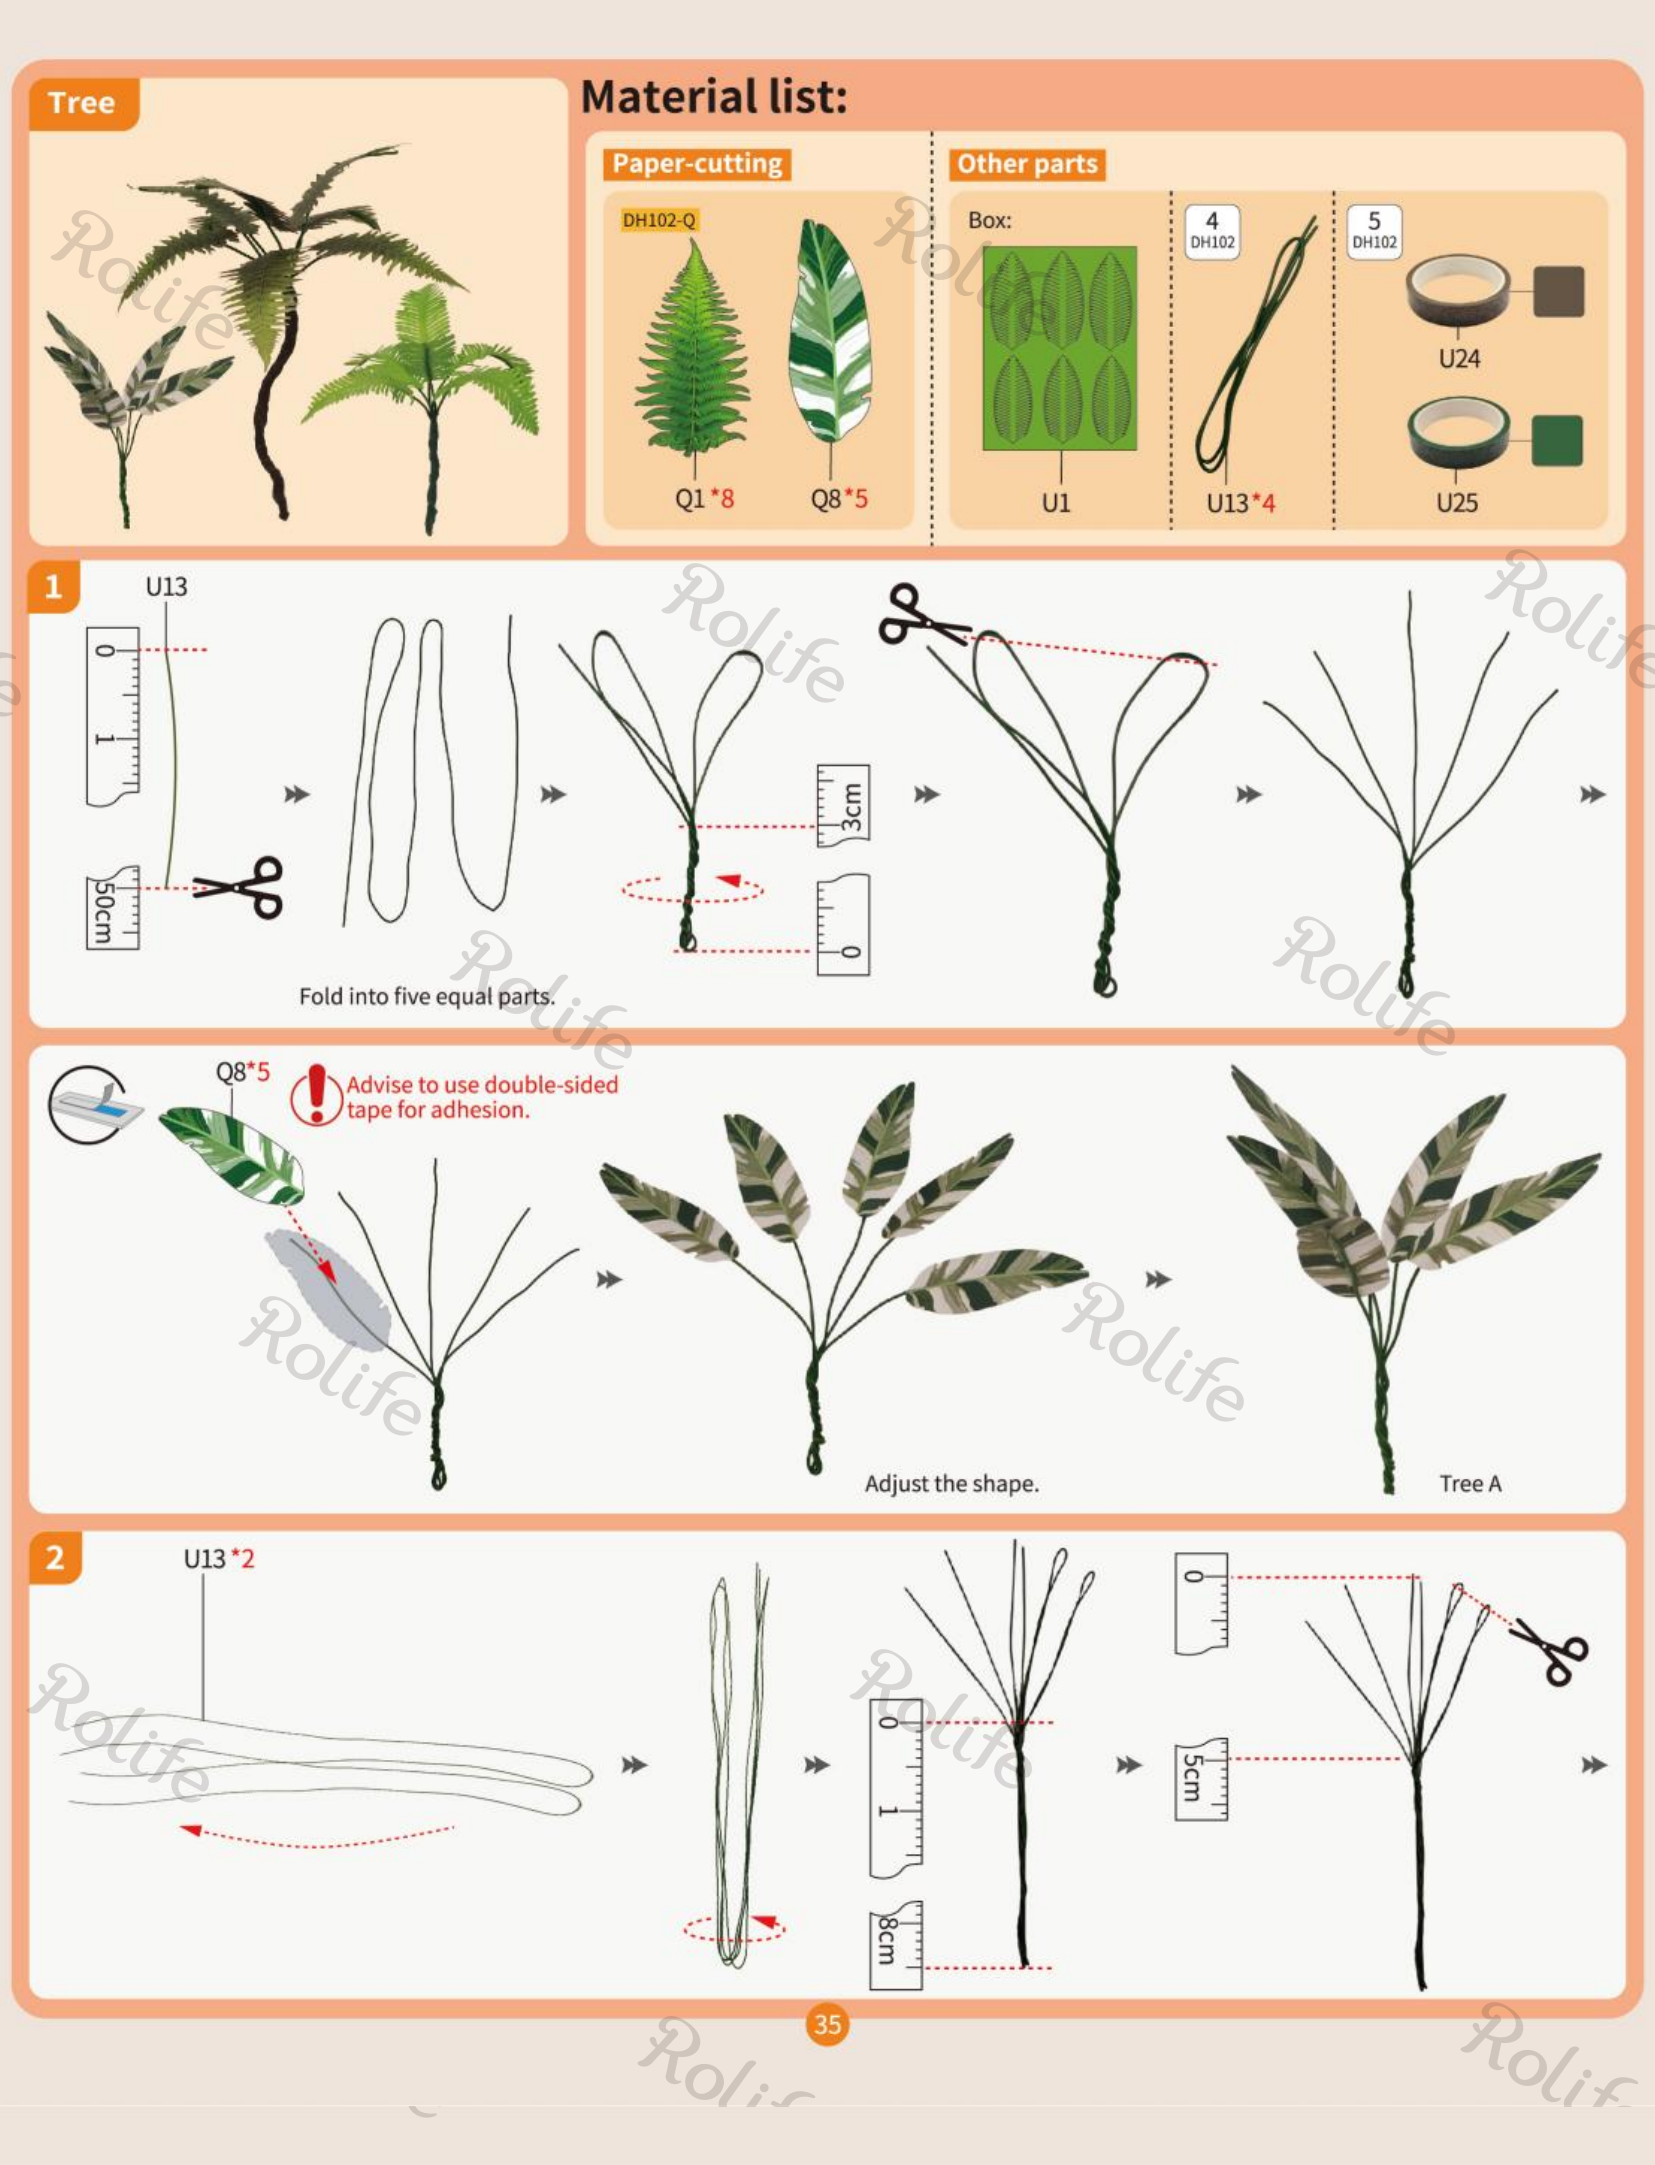
Tree
Material list:
Paper-cutting
DH102-Q
Q1 *8
Q8 *5
Other parts
Box:
U1
4
DH102
U13 *4
5
DH102
U24
U25
1
U13
50cm
3cm
Fold into five equal parts.
Q8 *5
Advise to use double-sided tape for adhesion.
Adjust the shape.
Tree A
2
U13 *2
8cm
5cm

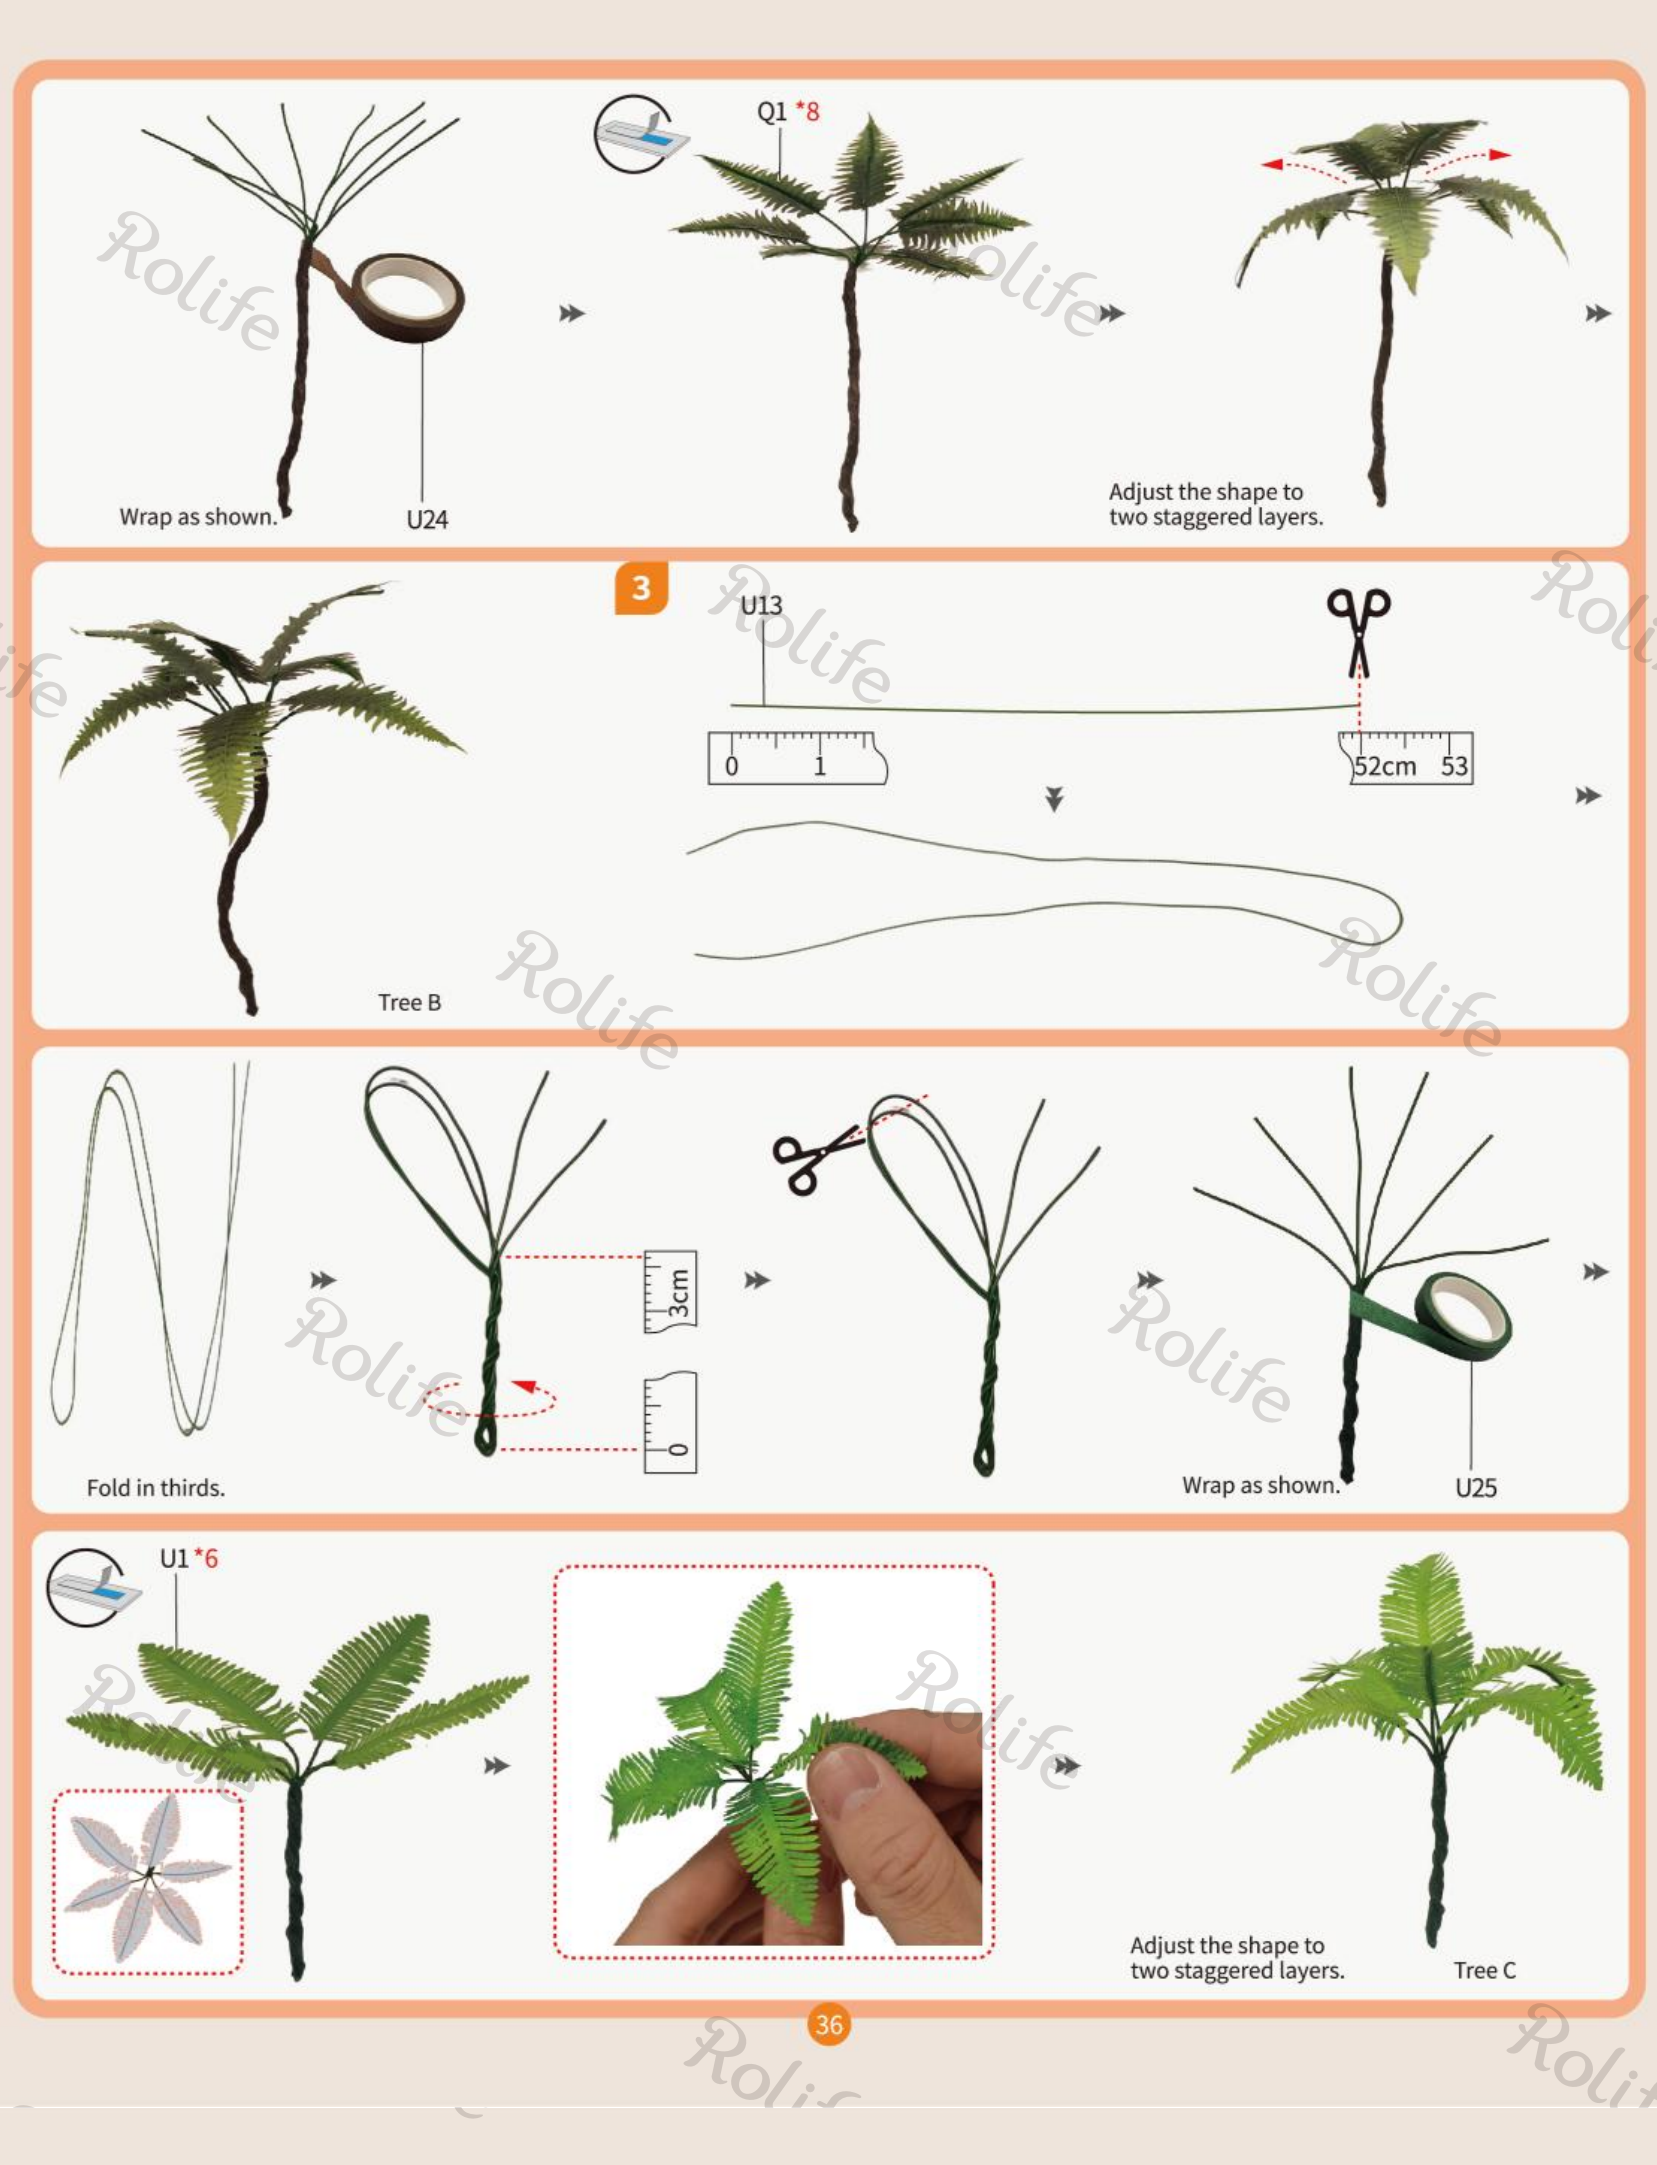
Wrap as shown.
U24
Q1 *8
Adjust the shape to two staggered layers.
Tree B
3
U13
52cm
53
Fold in thirds.
3cm
Wrap as shown.
U25
U1 *6
Adjust the shape to two staggered layers.
Tree C

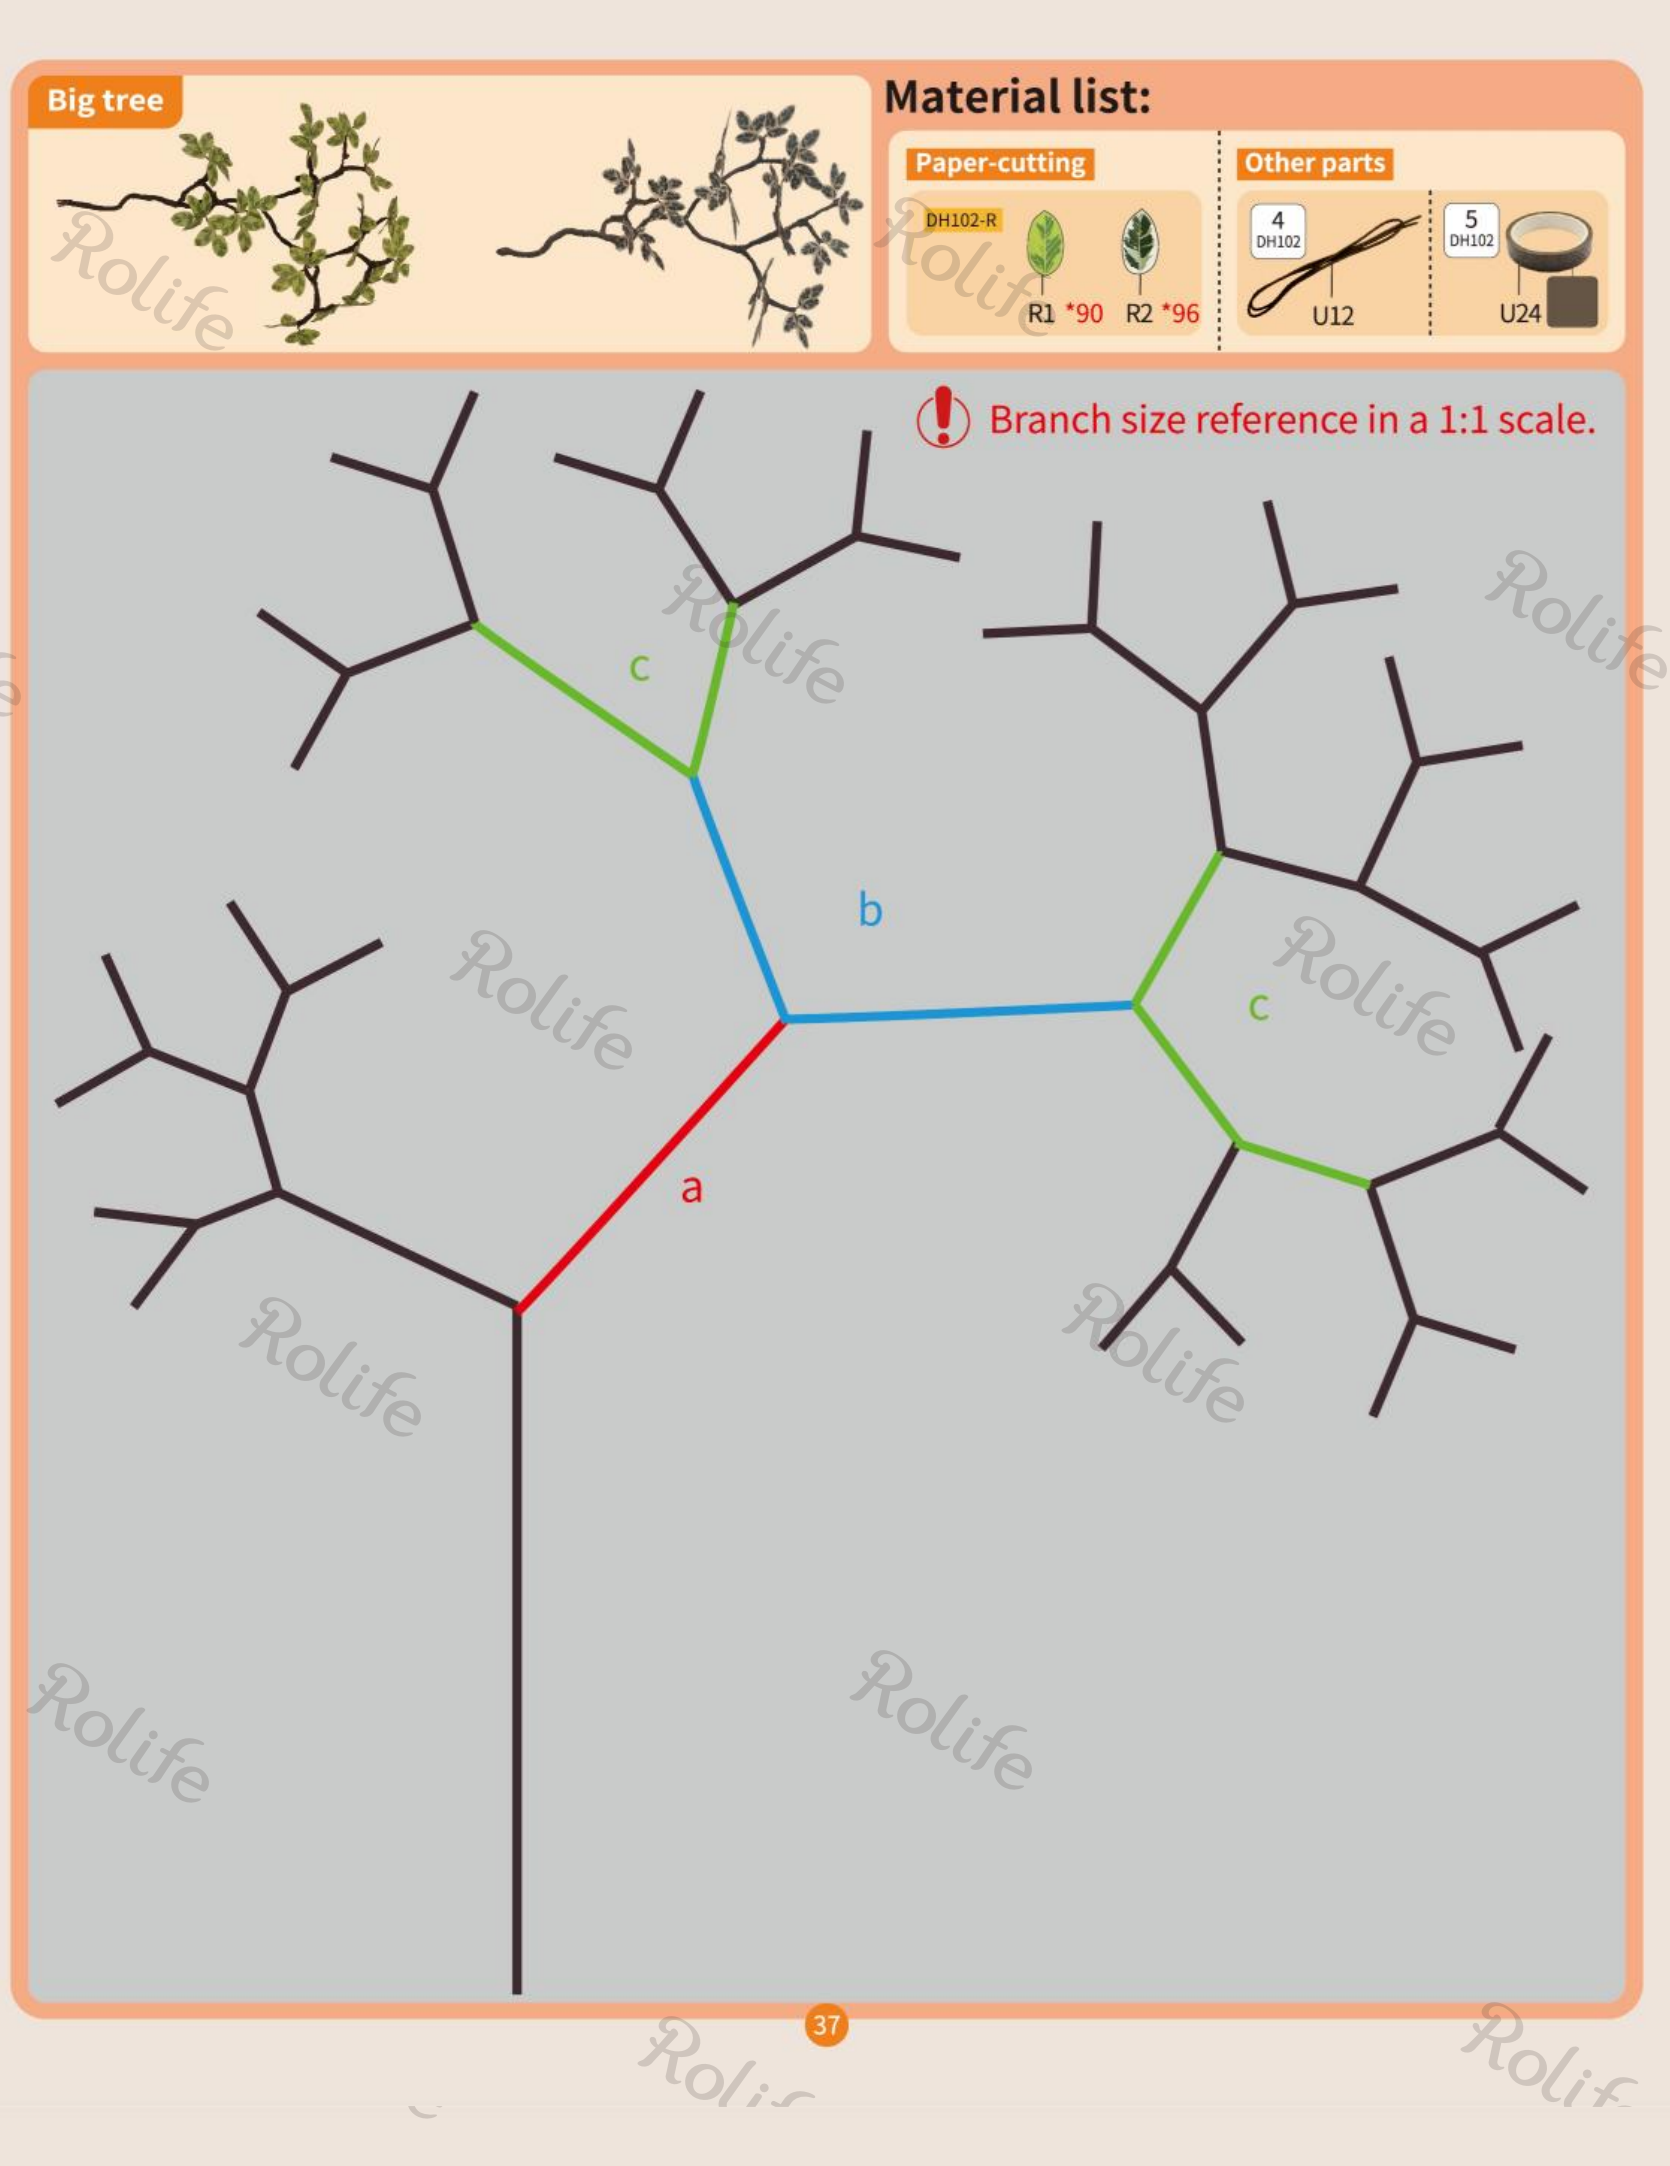
Big tree
Material list:
Paper-cutting
DH102-R
R1 *90
R2 *96
Other parts
4
DH102
U12
5
DH102
U24
Branch size reference in a 1:1 scale.
c
b
c
a

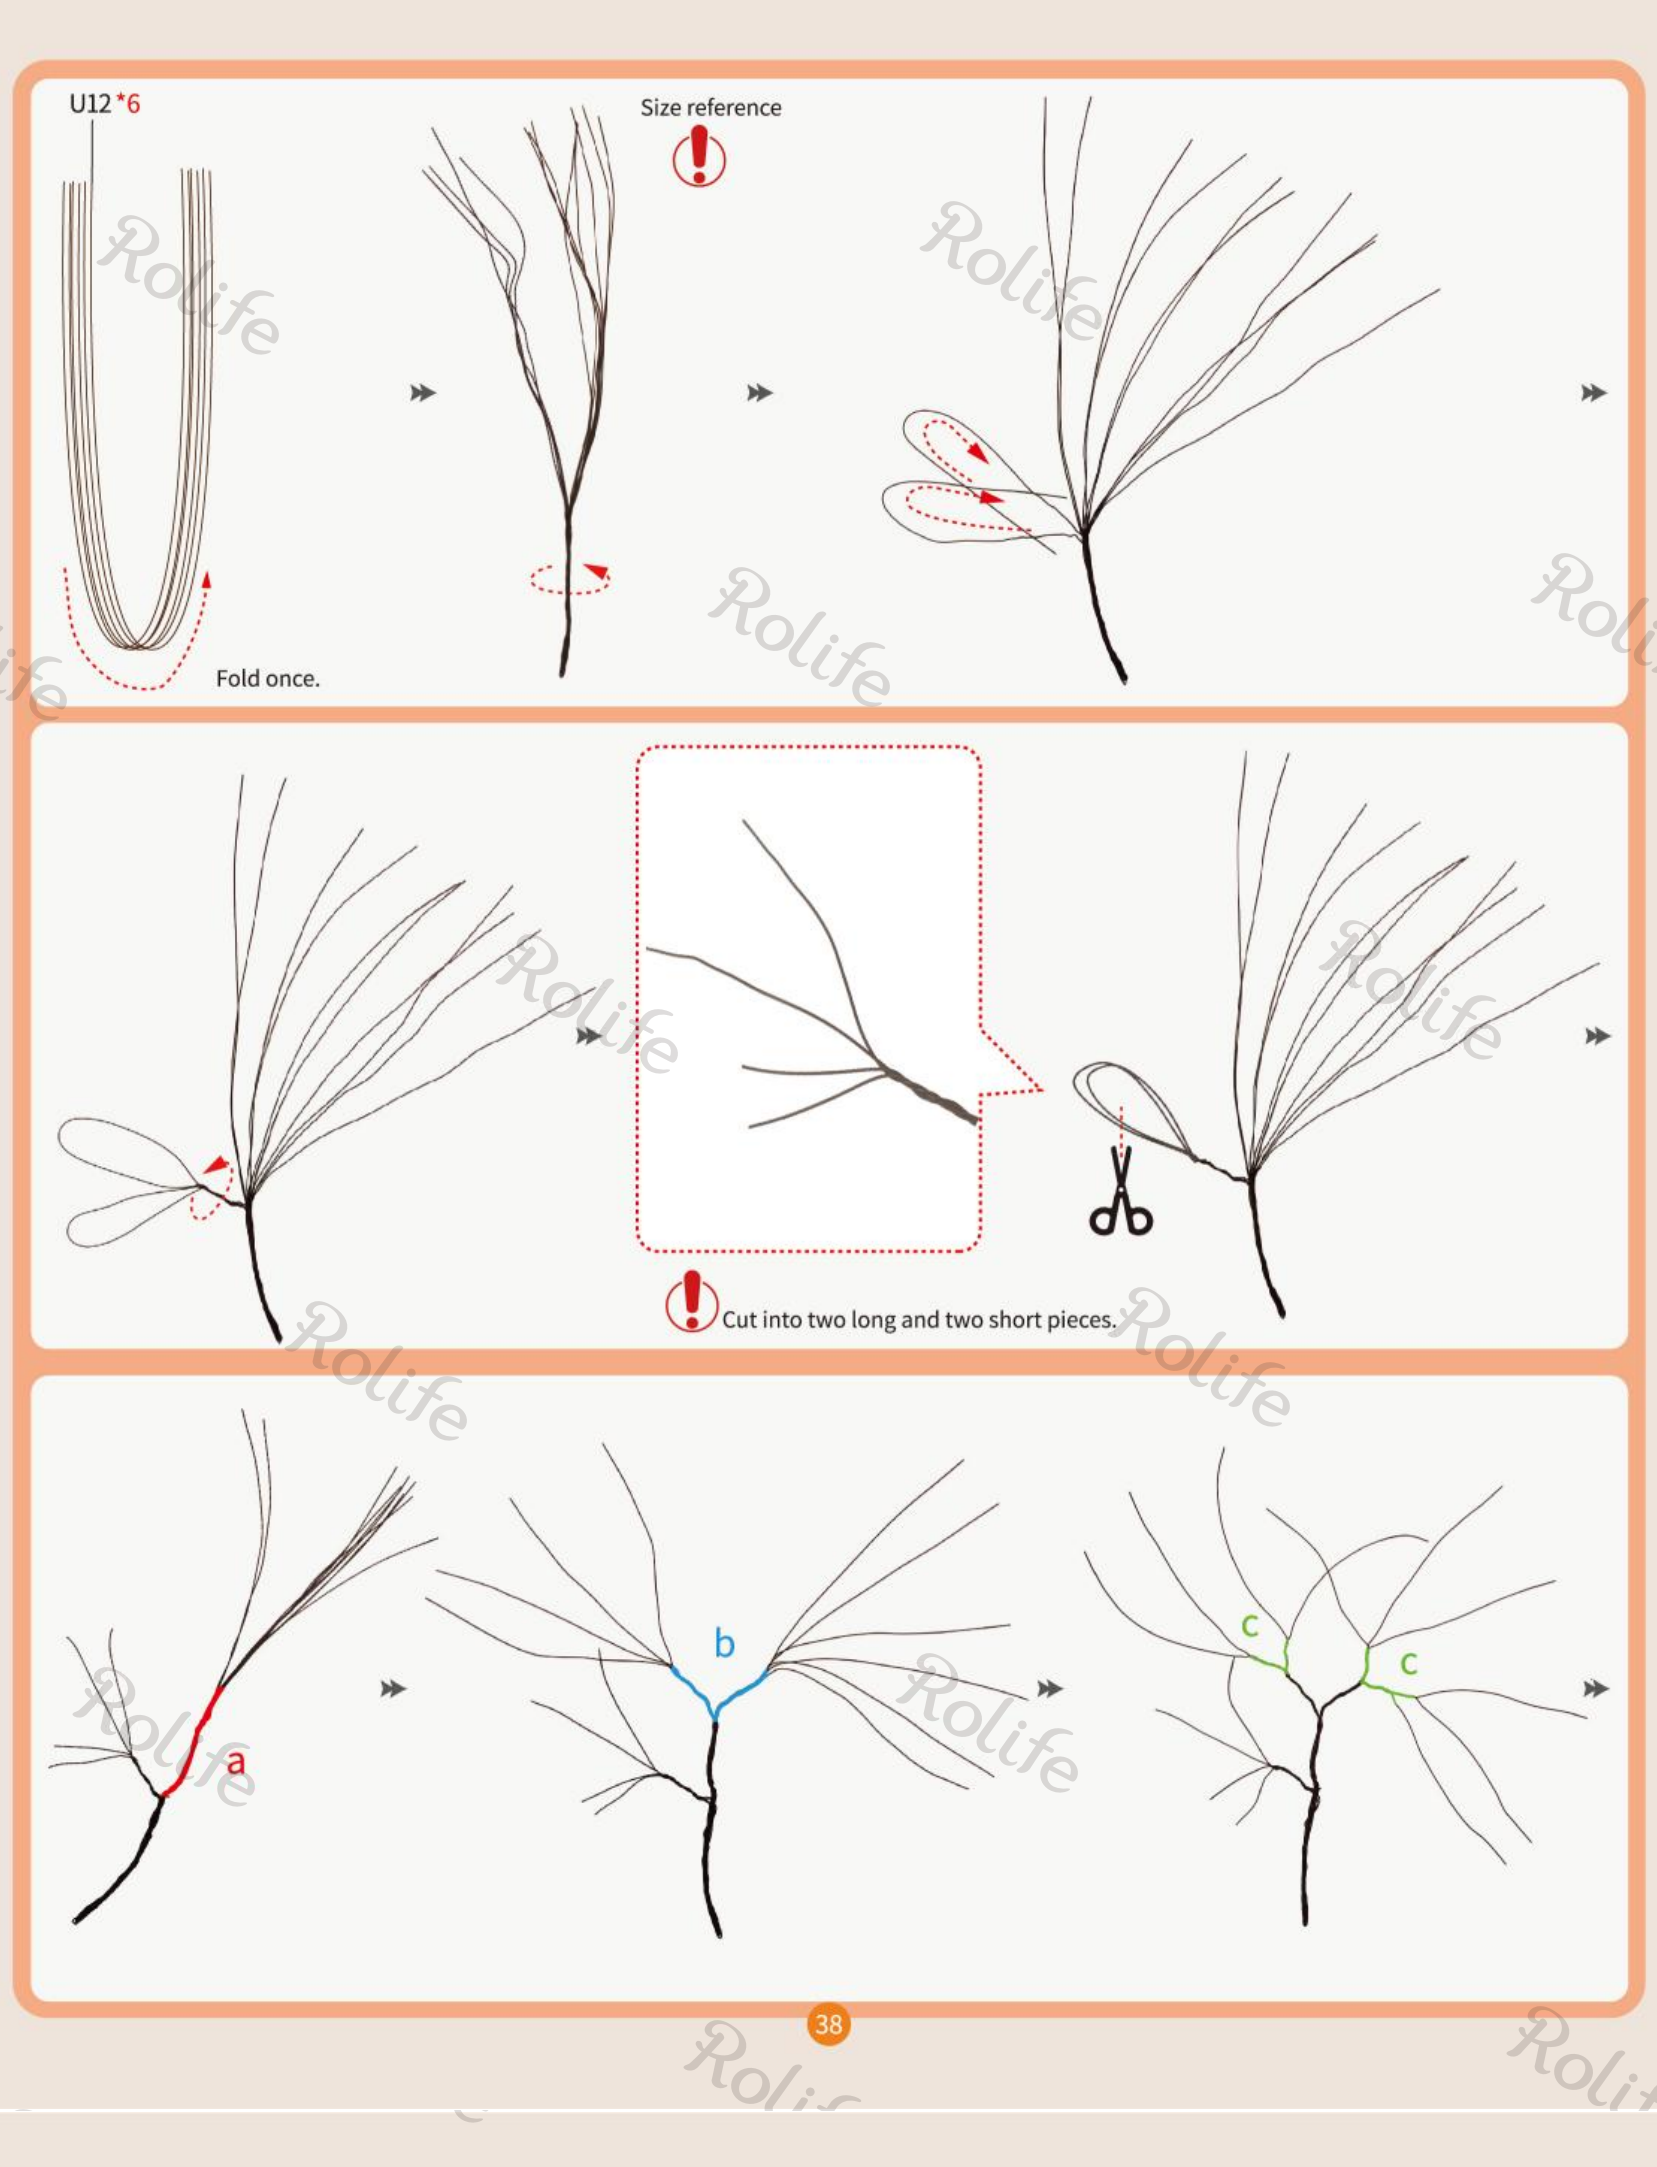
U12 *6
Size reference
Fold once.
Cut into two long and two short pieces.
a
b
c
c

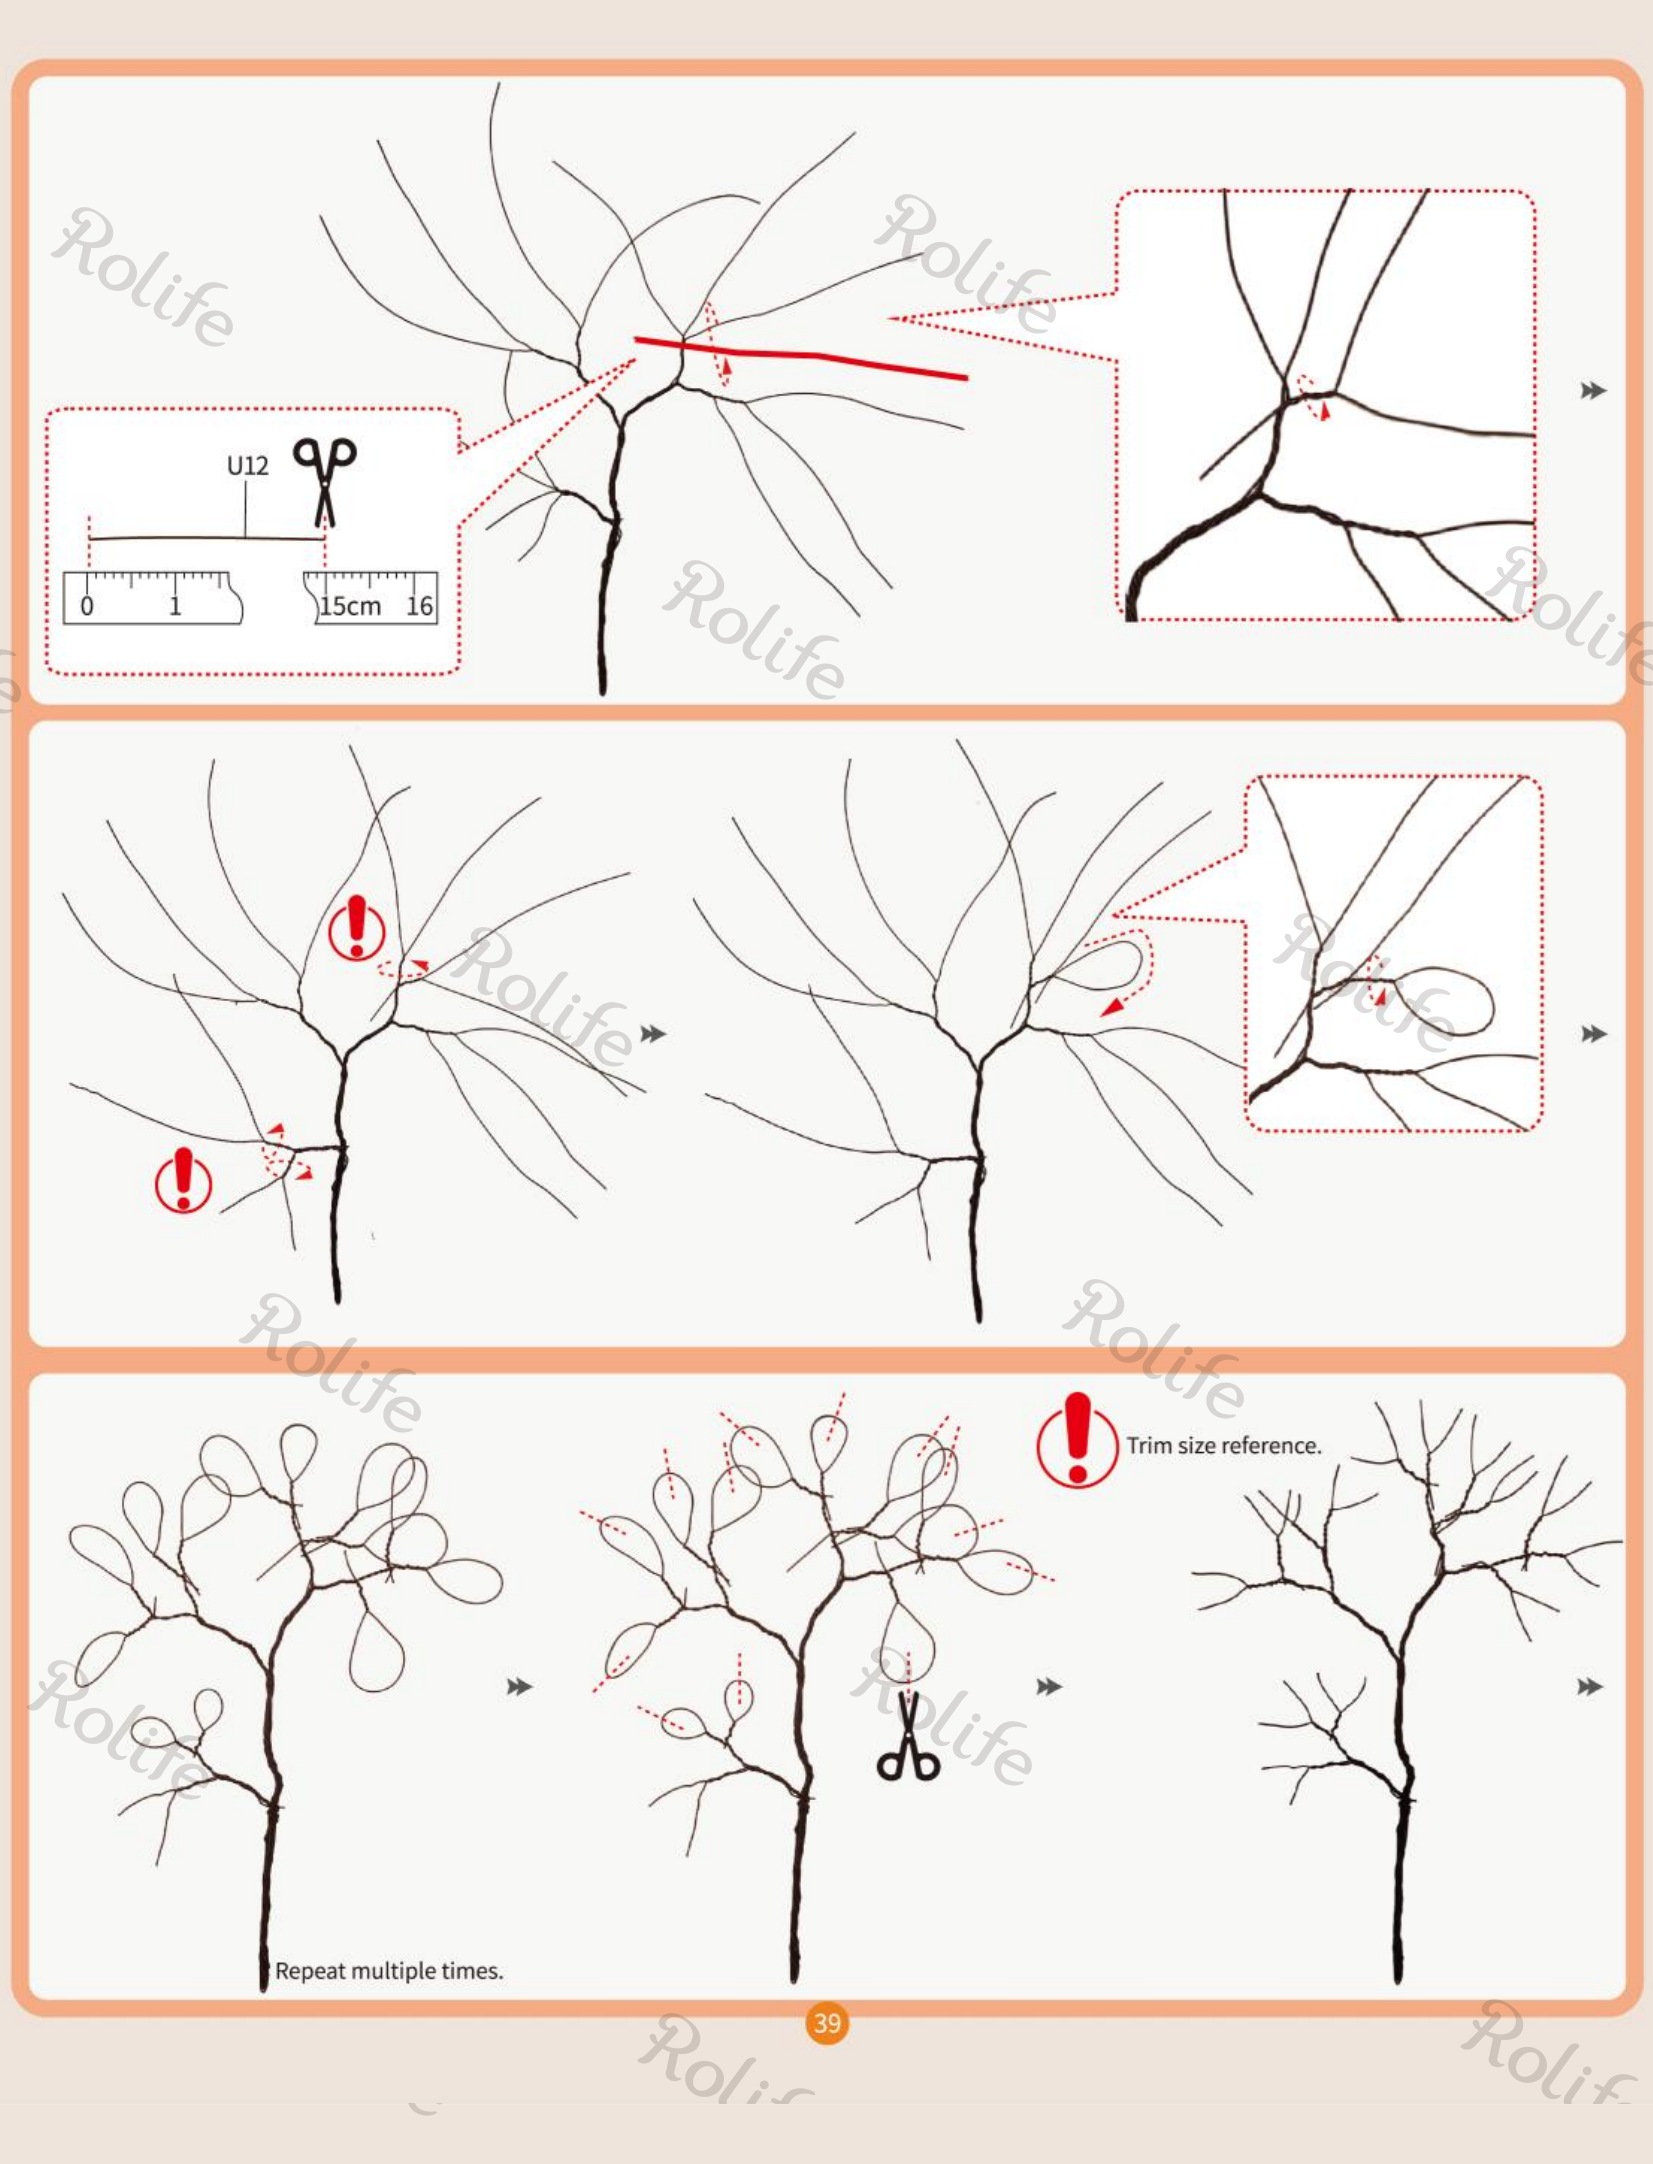
U12
15cm
16
Trim size reference.
Repeat multiple times.

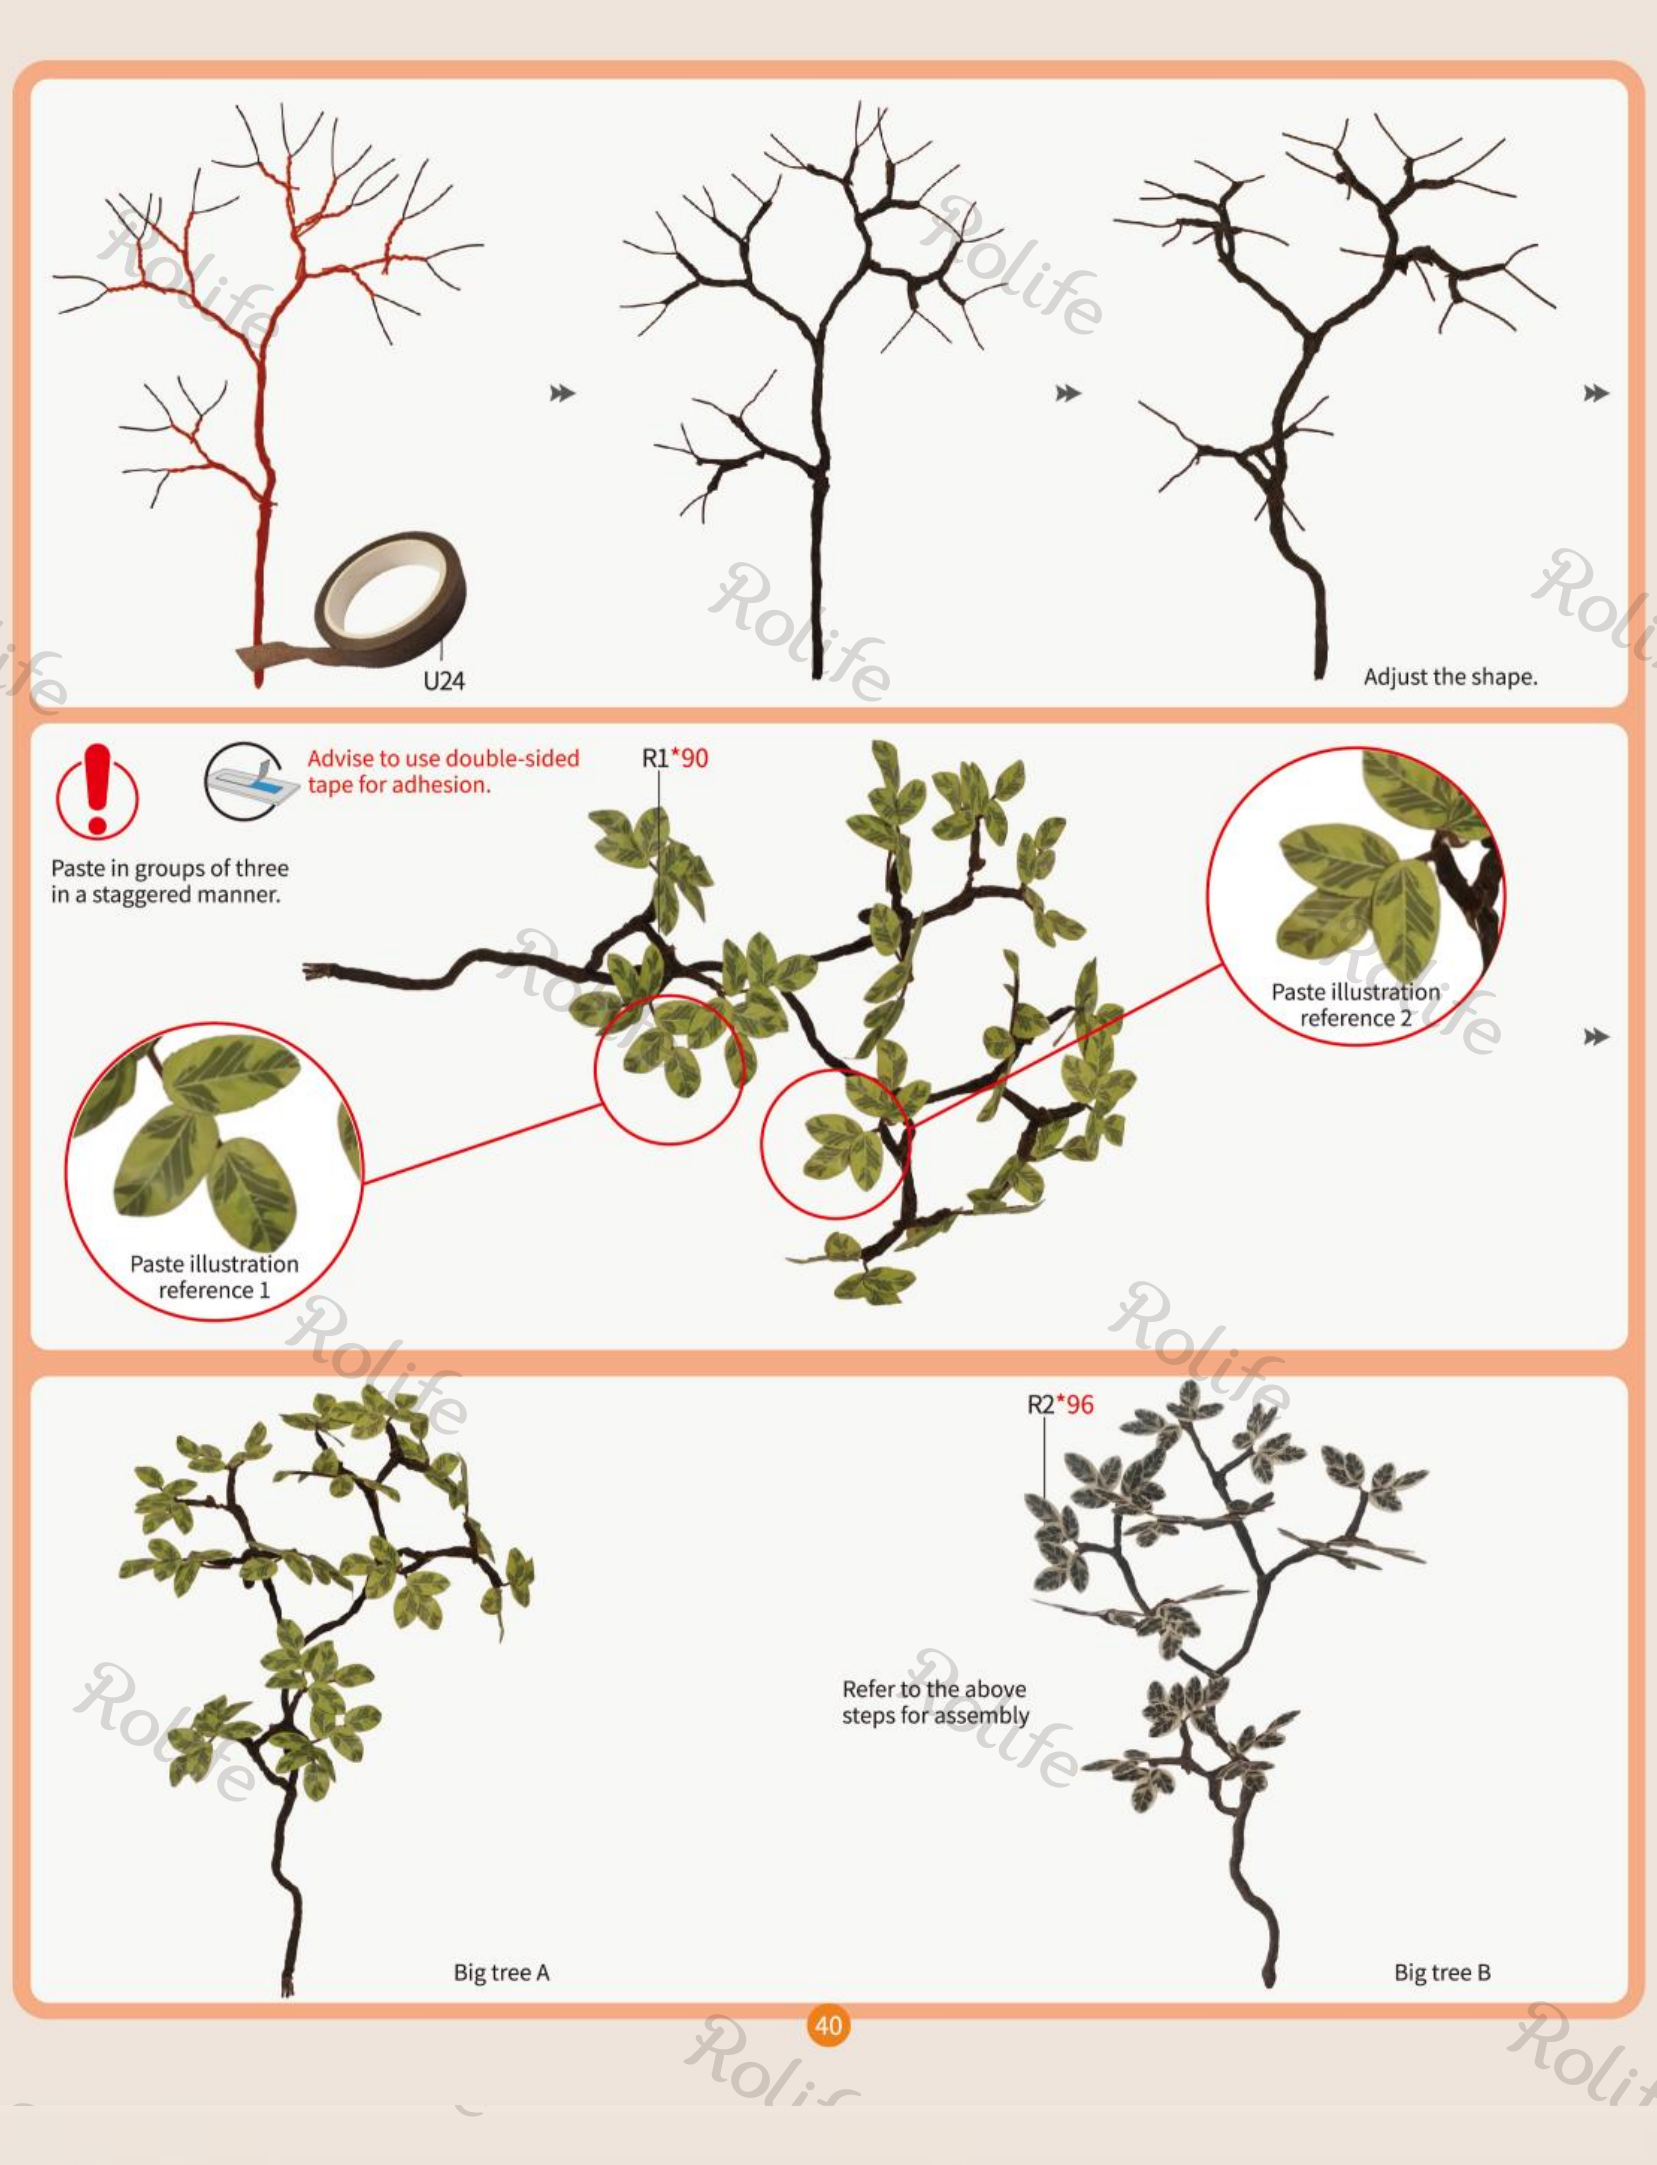
U24
Adjust the shape.
Advise to use double-sided tape for adhesion.
R1 *90
Paste in groups of three in a staggered manner.
Paste illustration reference 1
Paste illustration reference 2
R2 *96
Refer to the above steps for assembly
Big tree A
Big tree B

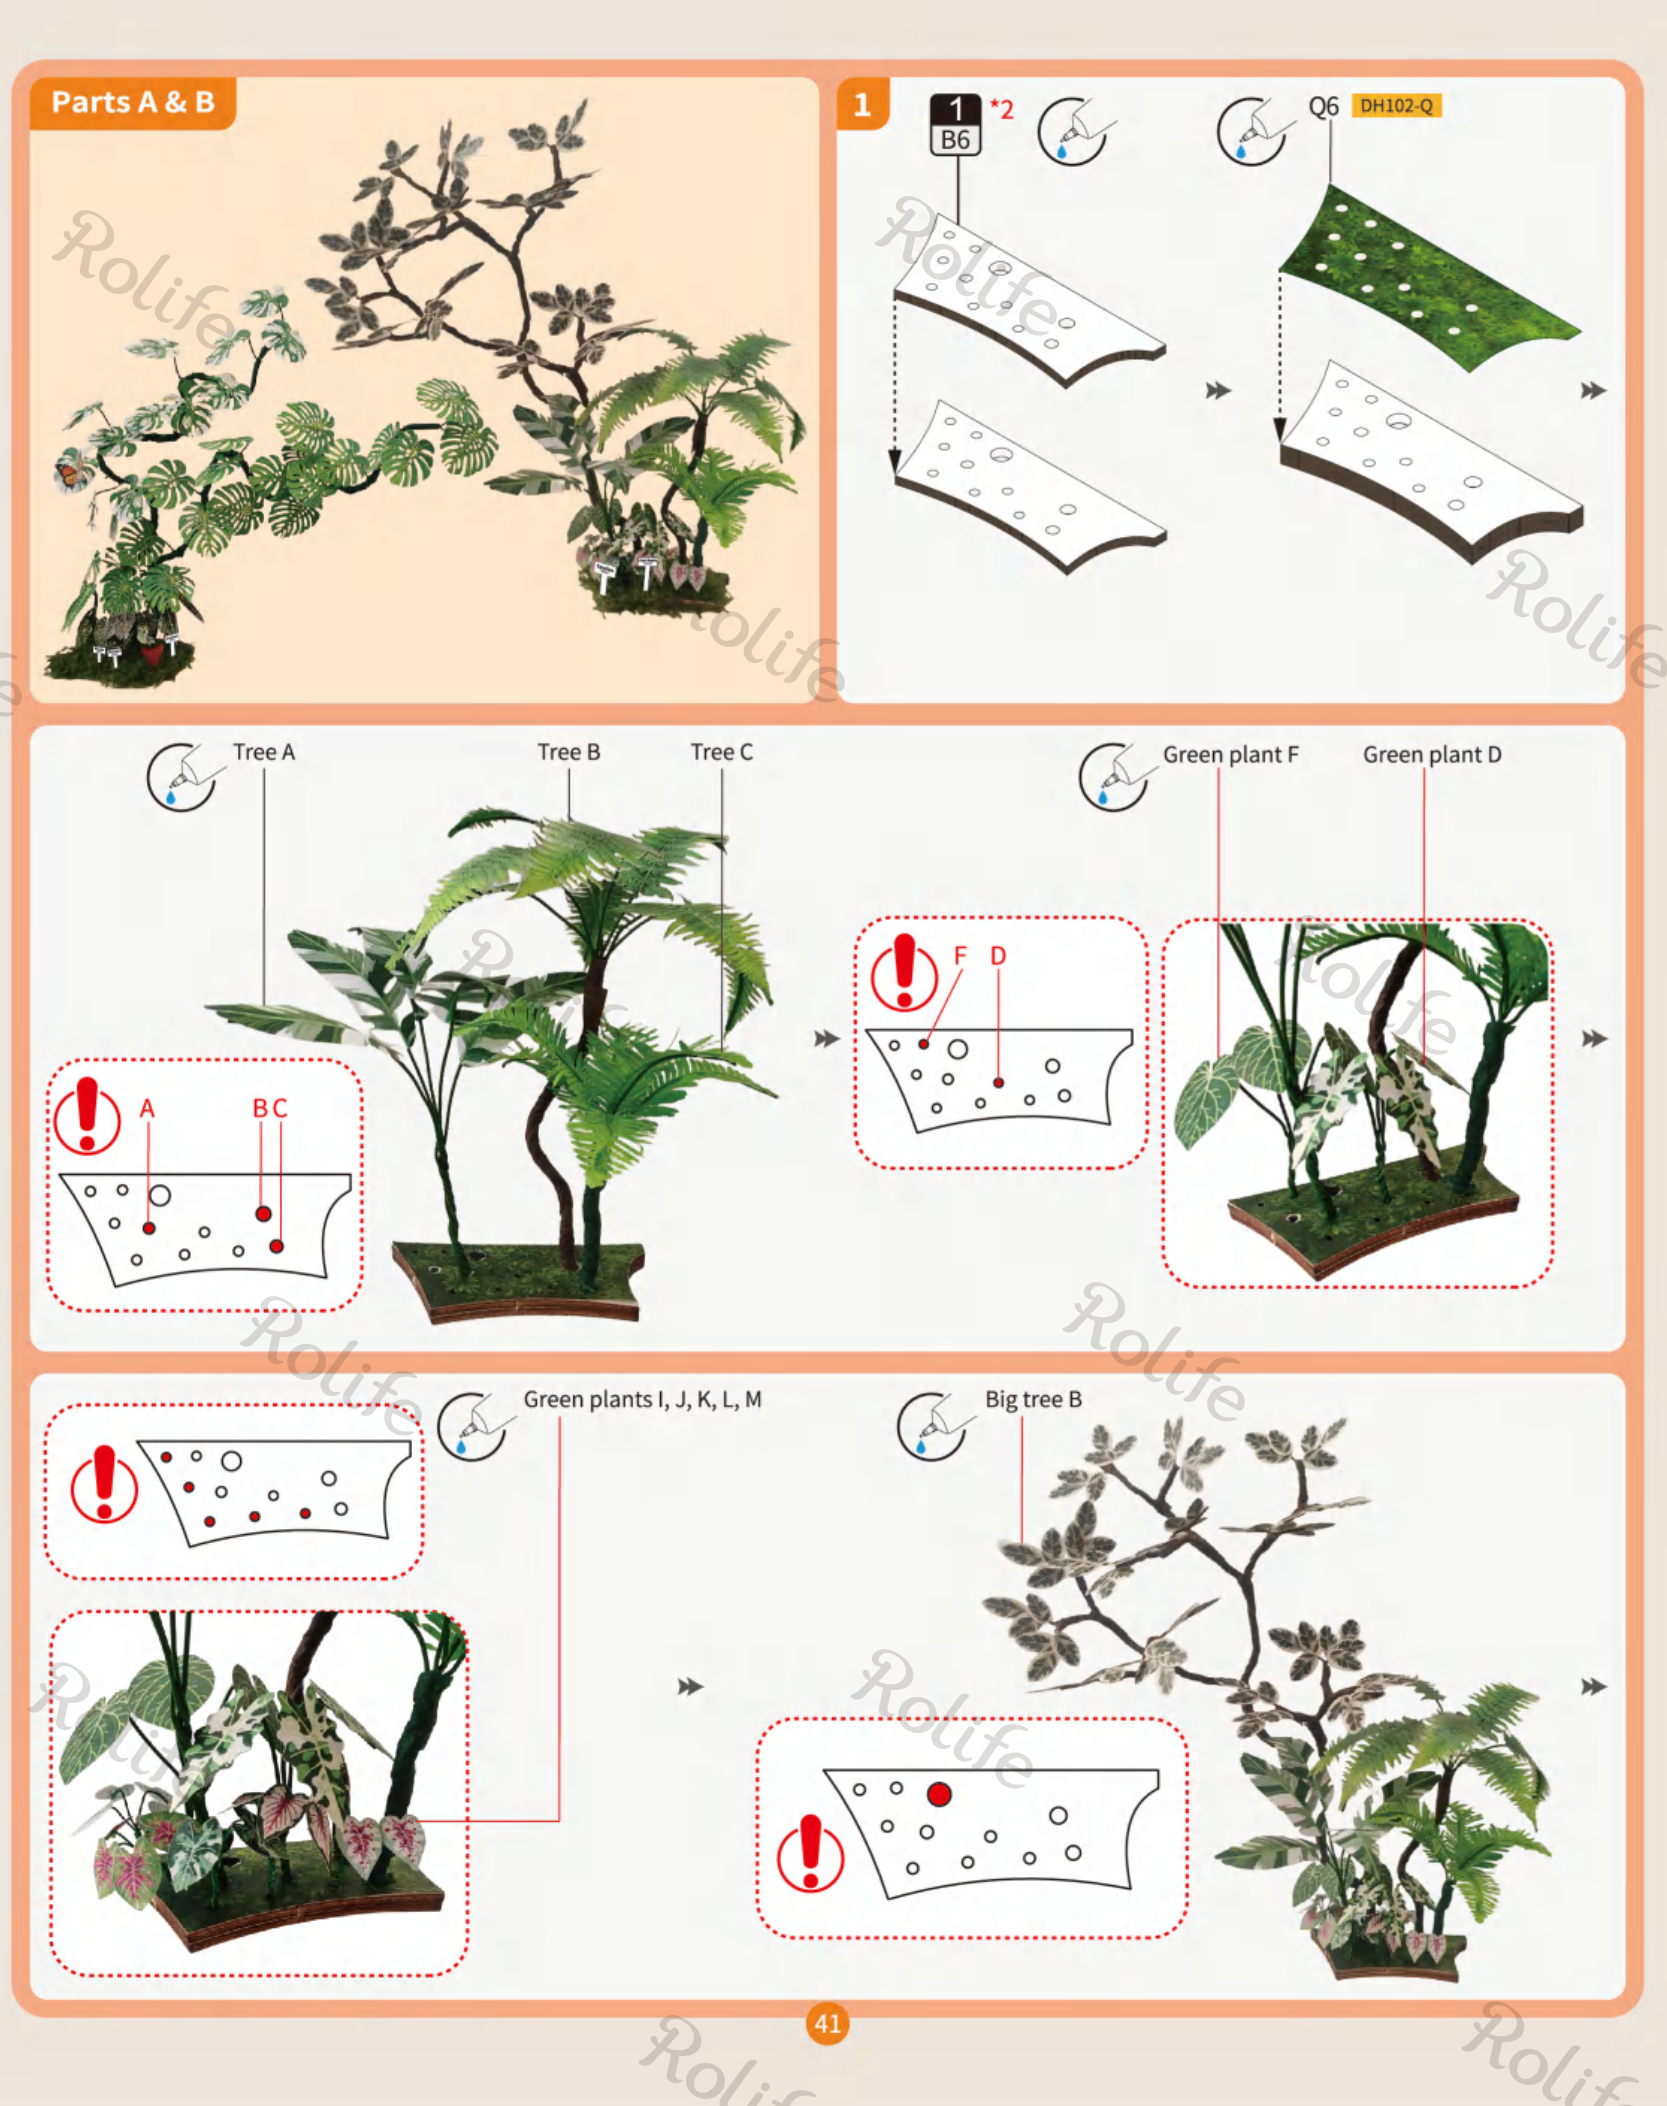
Parts A & B
1
1
B6
*2
Q6
DH102-Q
Tree A
Tree B
Tree C
A
B C
Green plant F
Green plant D
F
D
Green plants I, J, K, L, M
Big tree B

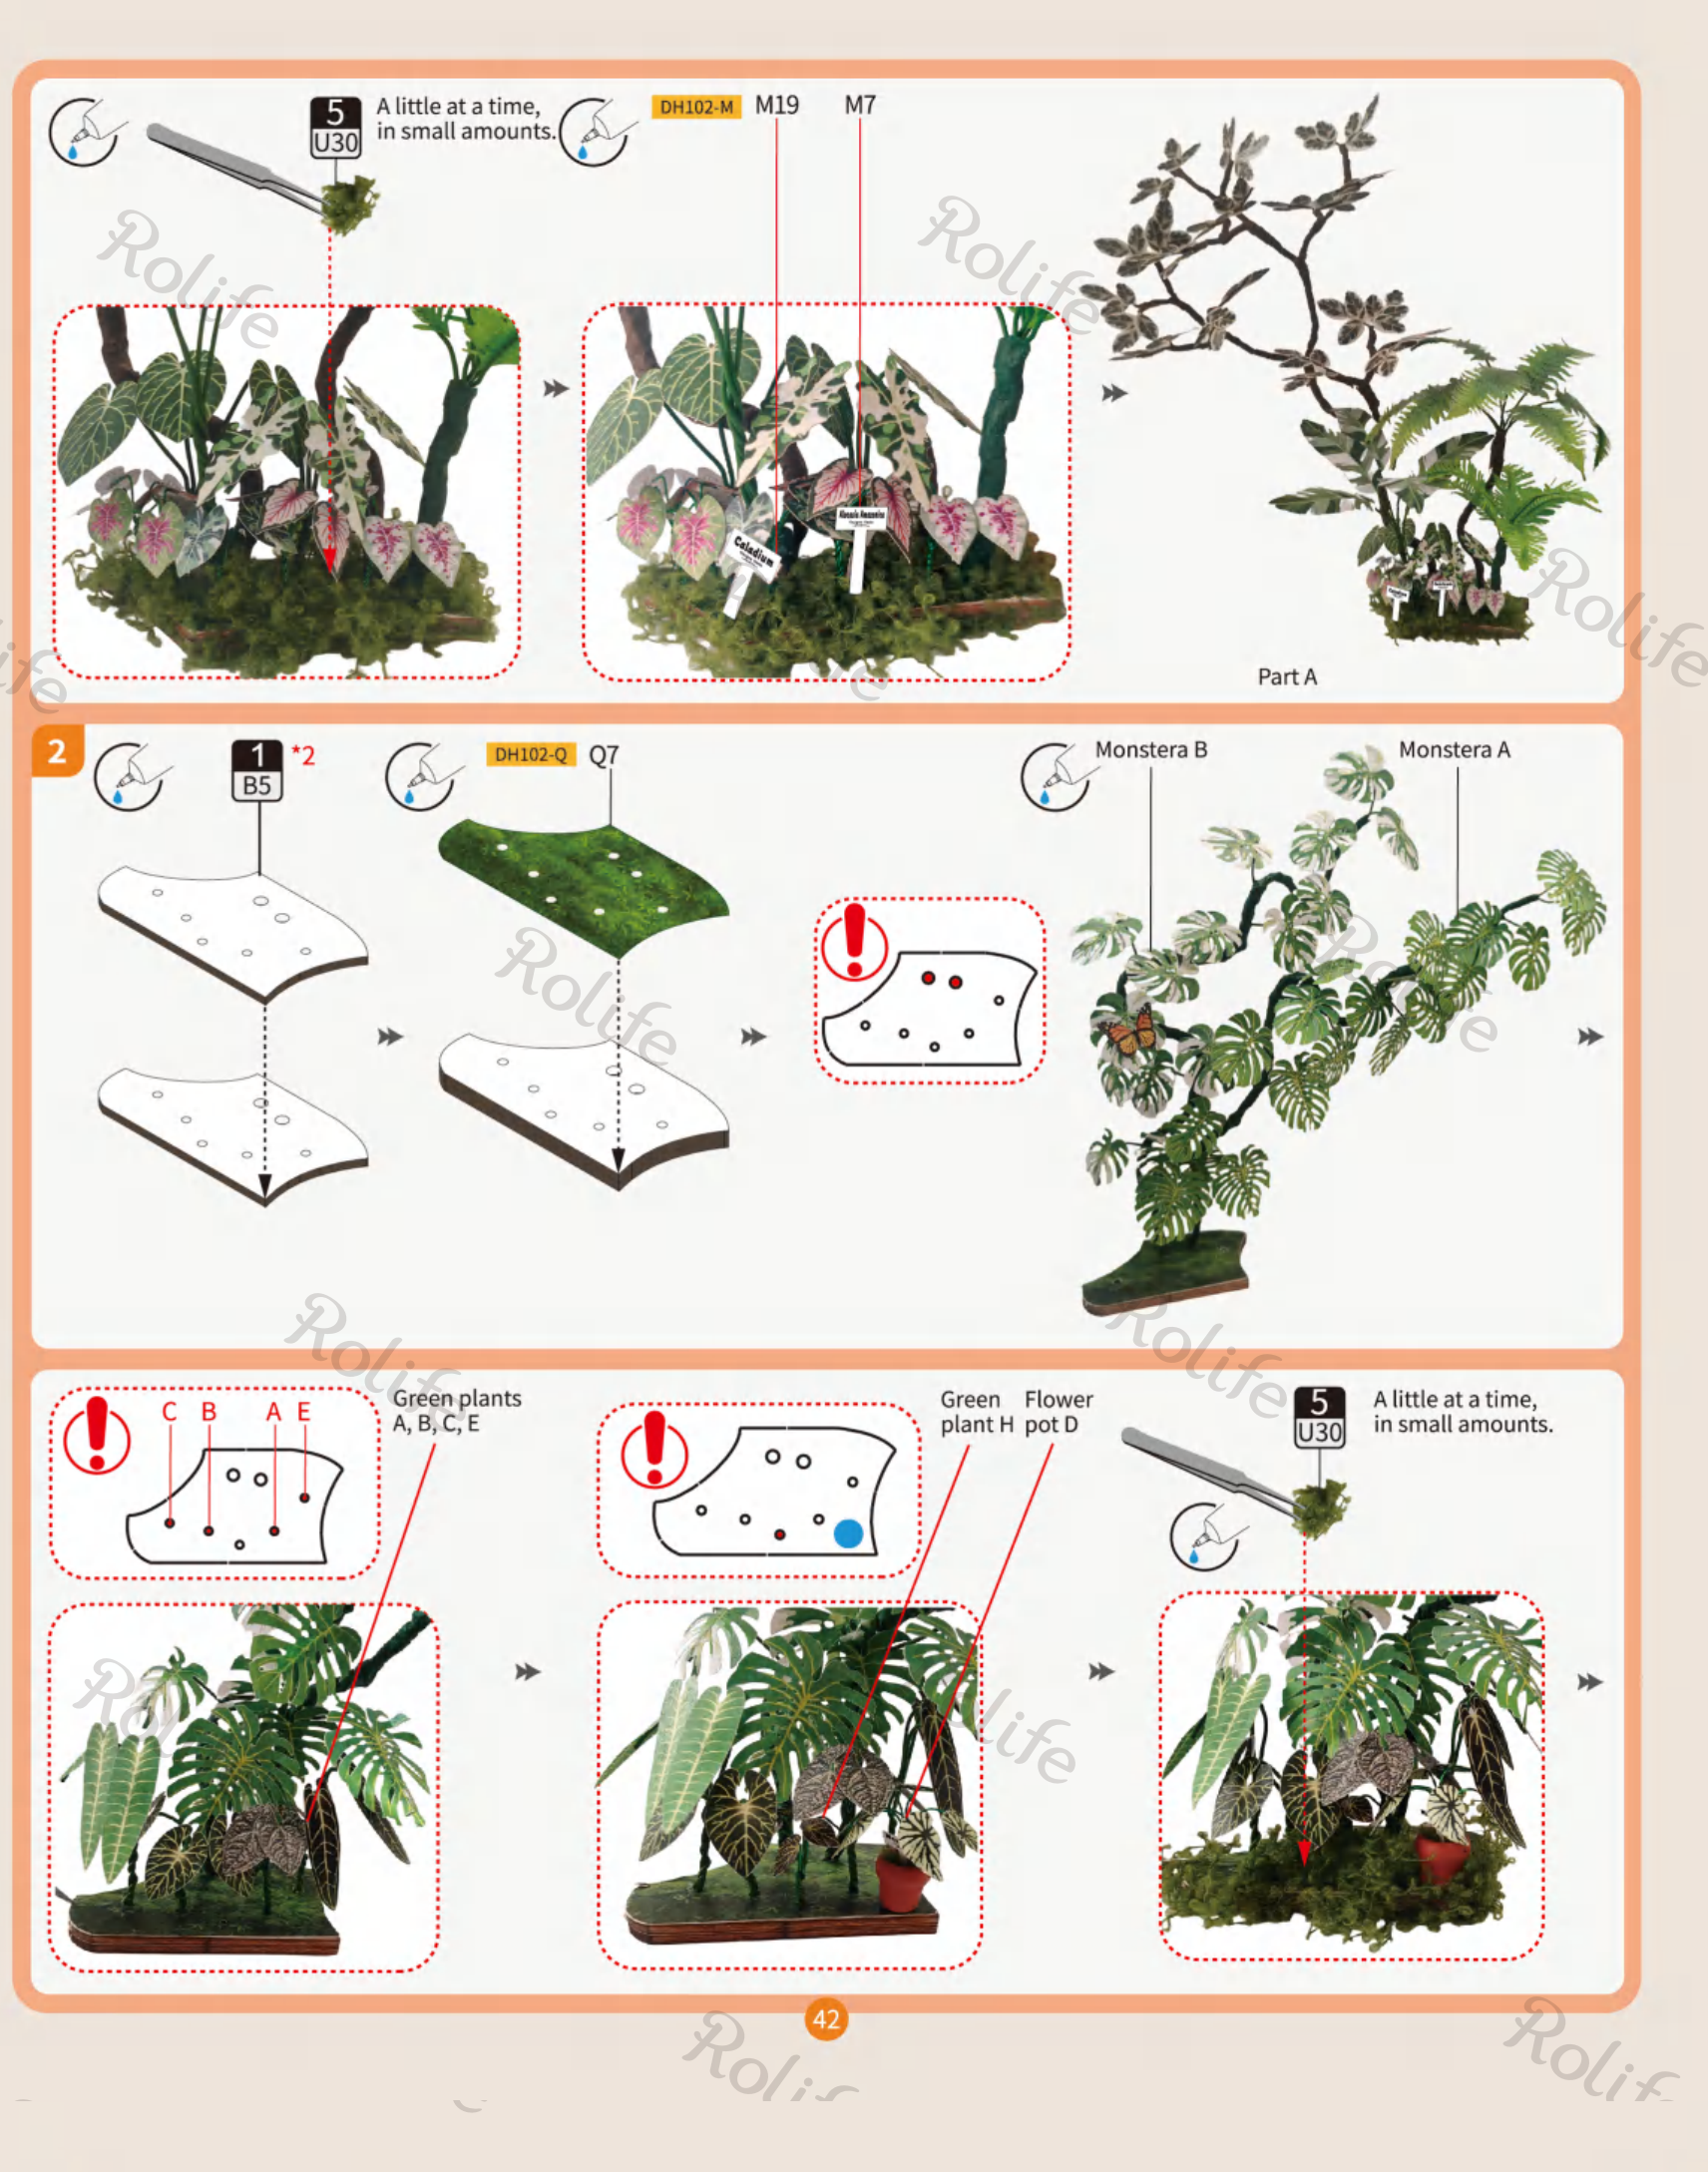

A little at a time, in small amounts.

A little at a time, in small amounts.

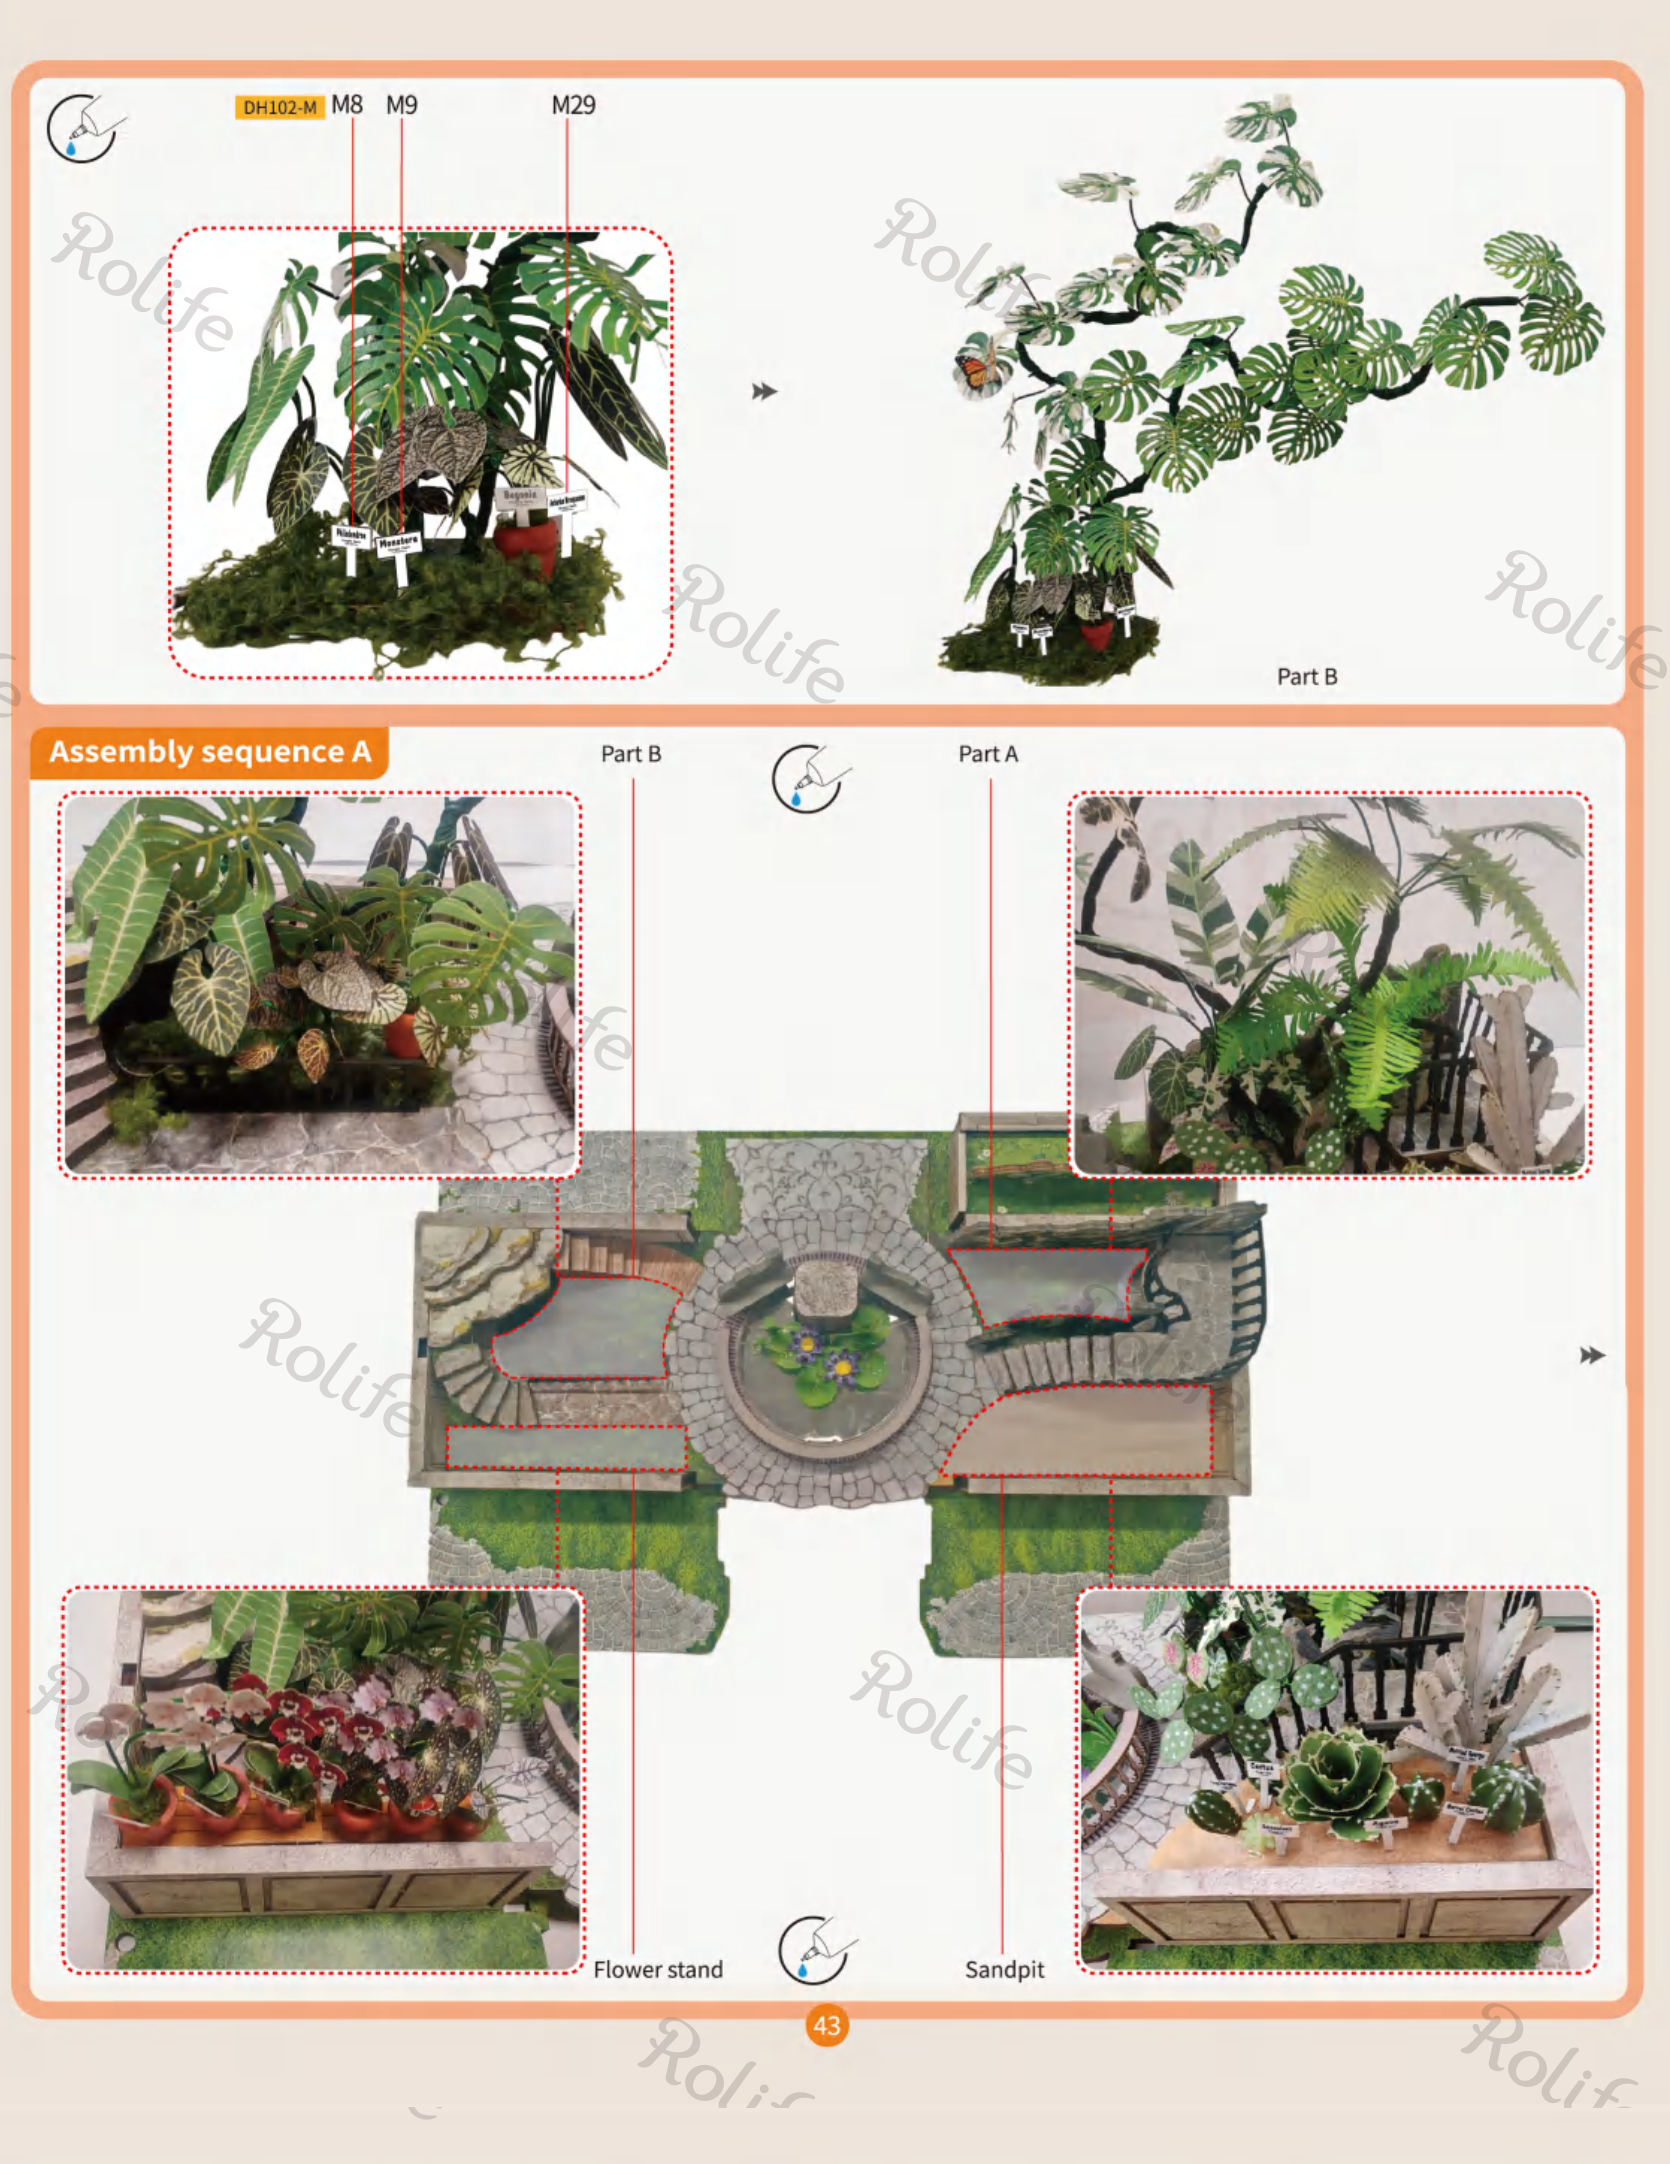

Assembly sequence A

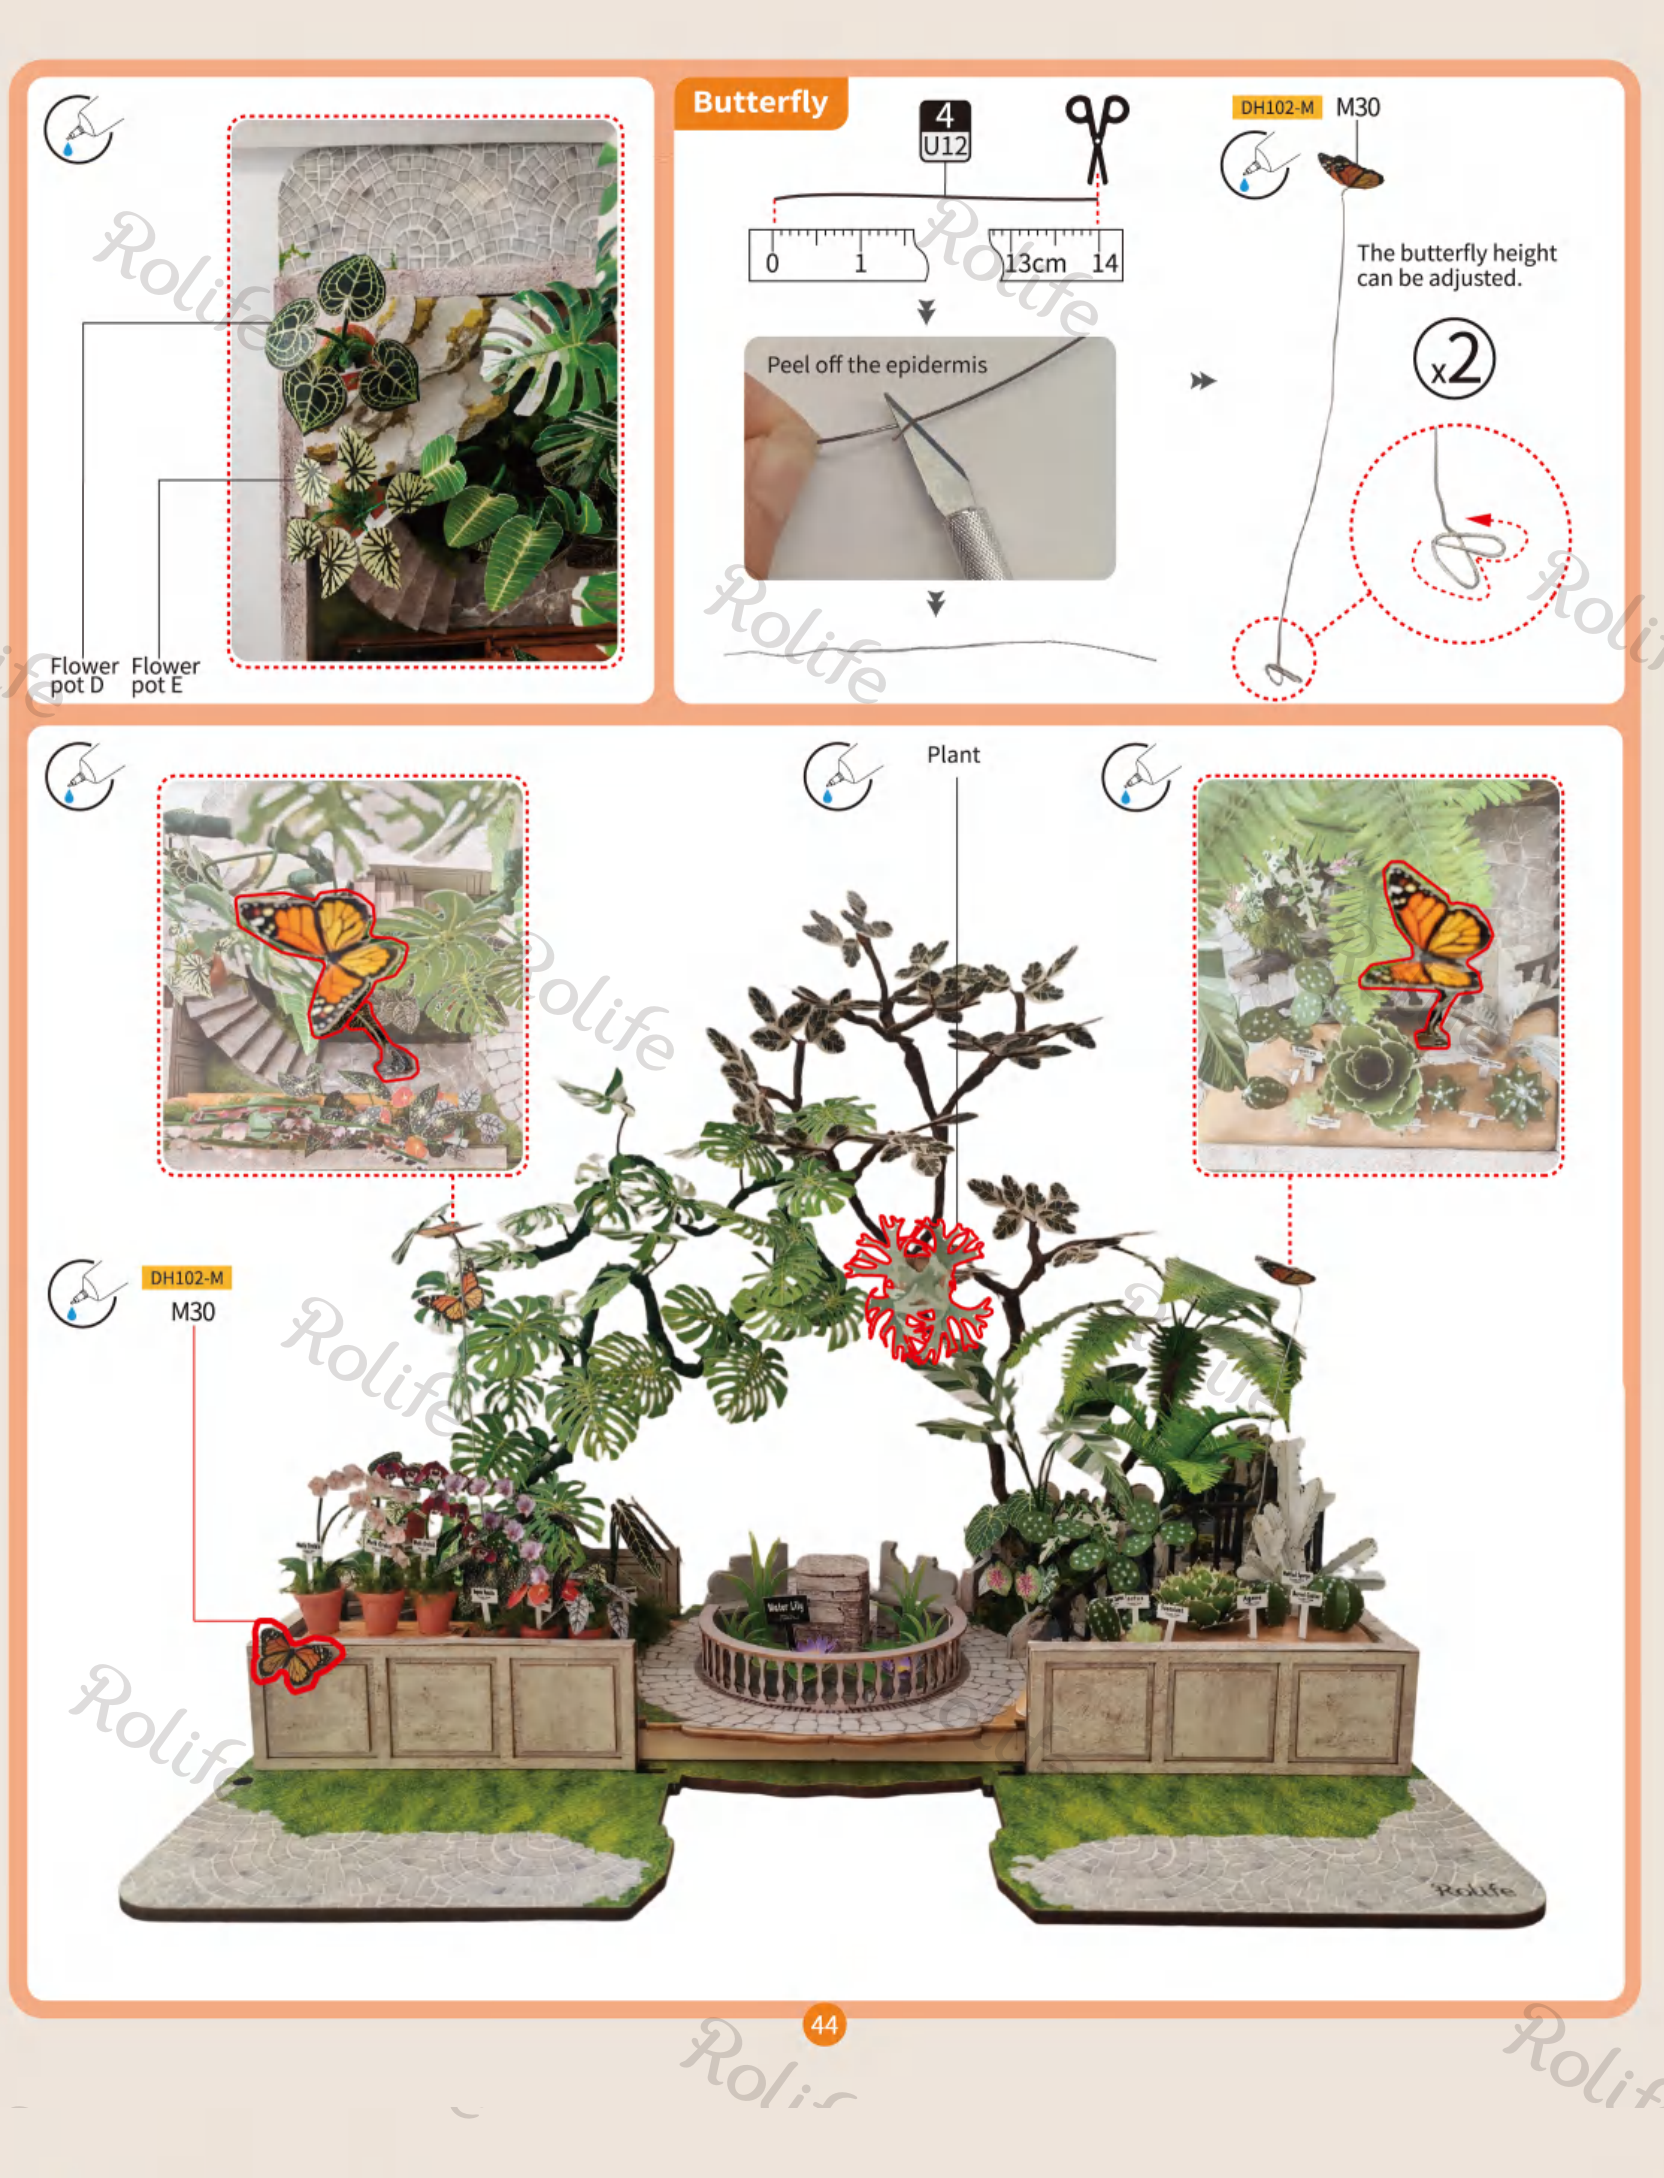

Butterfly

Peel off the epidermis

The butterfly height can be adjusted.

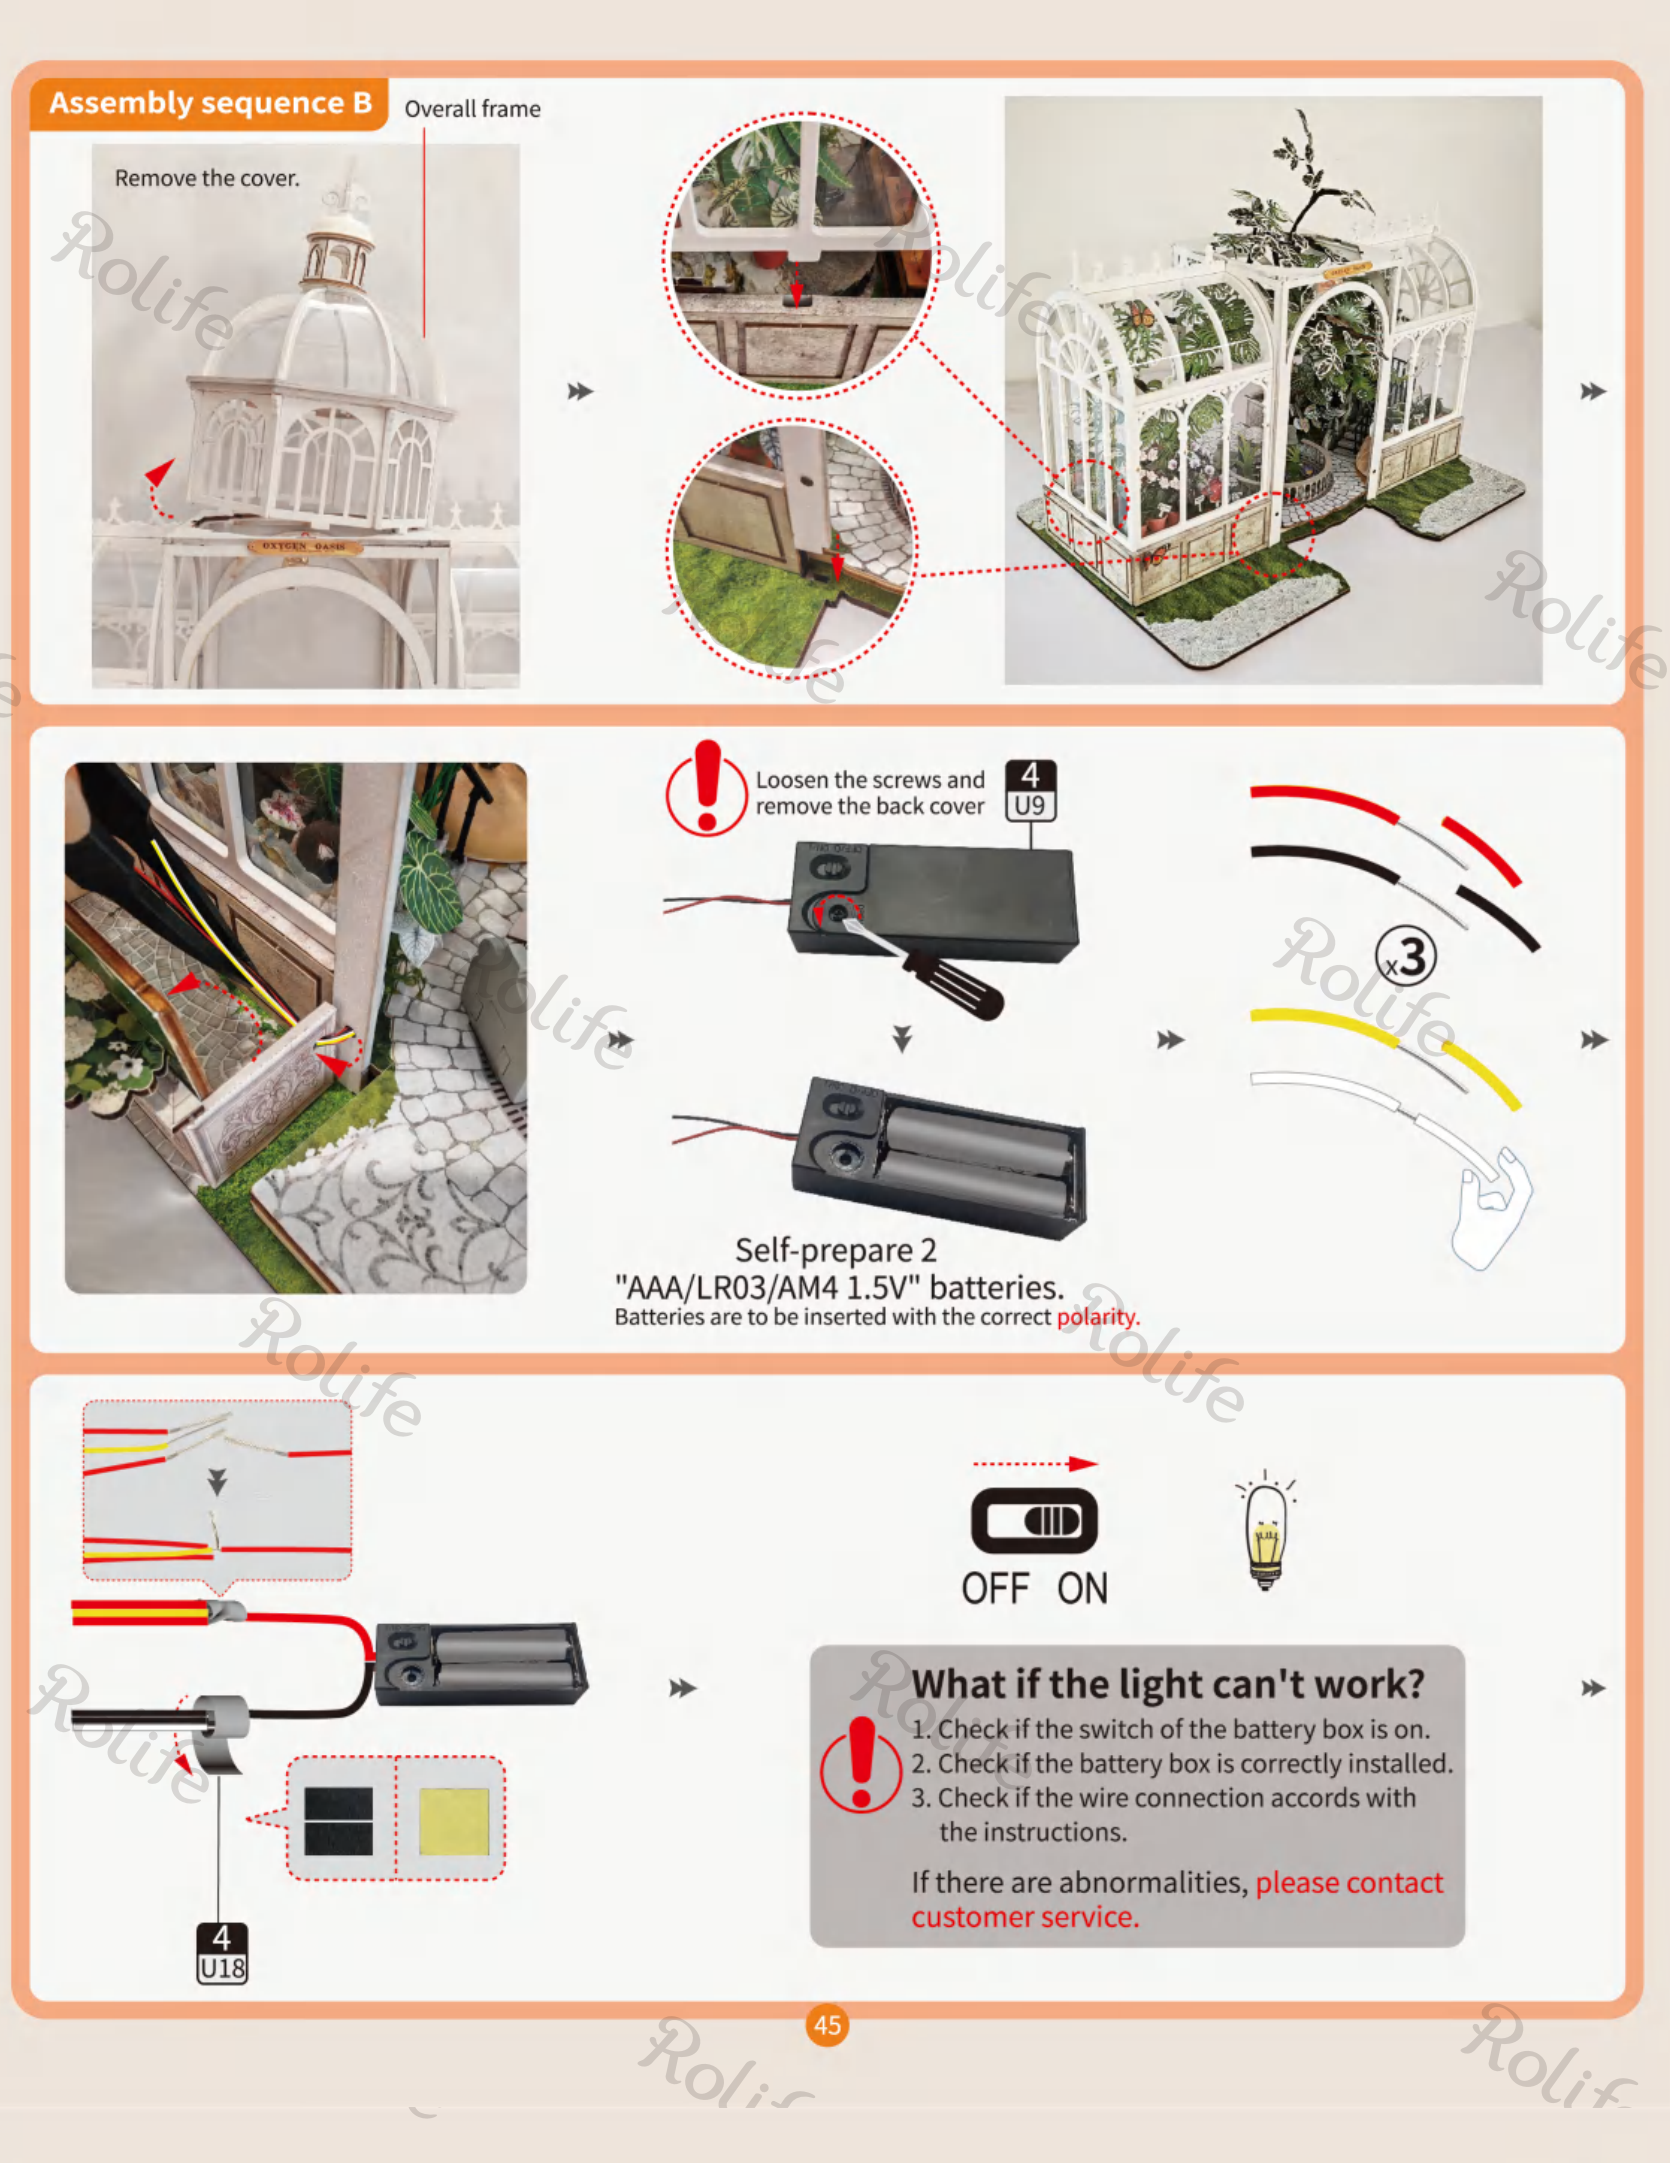

Assembly sequence B

Remove the cover.

Loosen the screws and remove the back cover

Self-prepare 2 "AAA/LR03/AM4 1.5V" batteries.
Batteries are to be inserted with the correct polarity.

What if the light can't work?

1. Check if the switch of the battery box is on.
2. Check if the battery box is correctly installed.
3. Check if the wire connection accords with the instructions.

If there are abnormalities, please contact customer service.

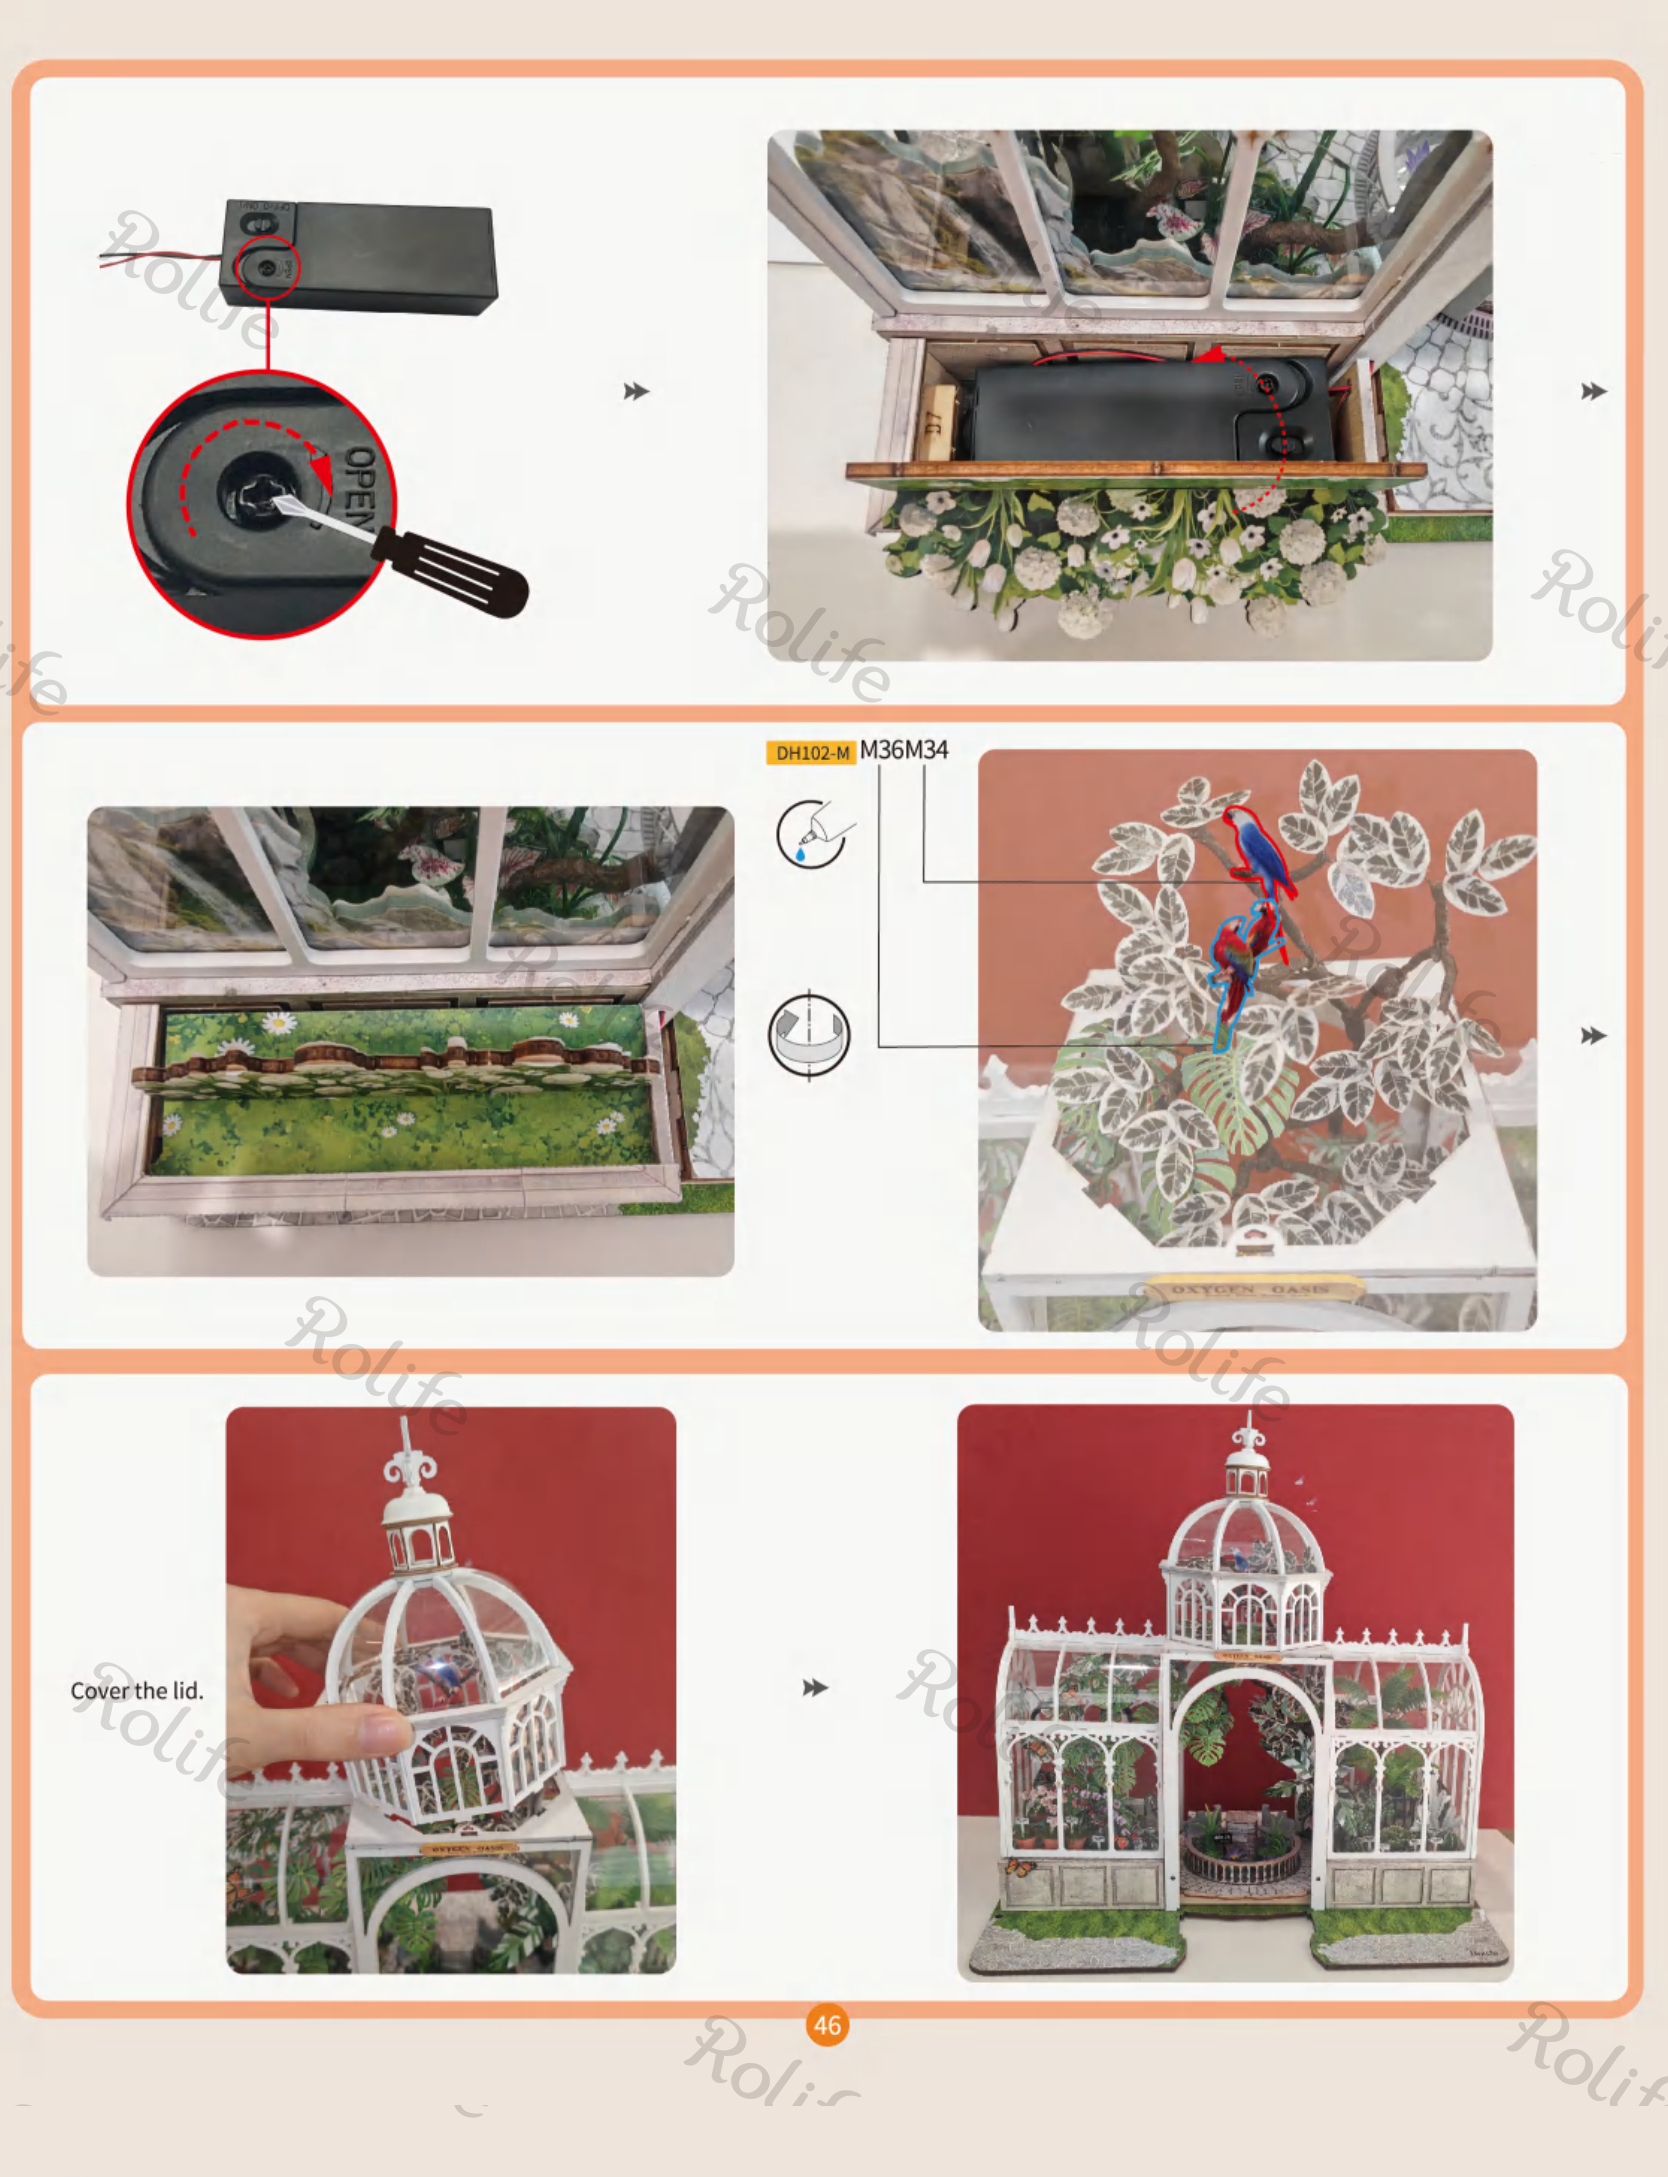

Cover the lid.

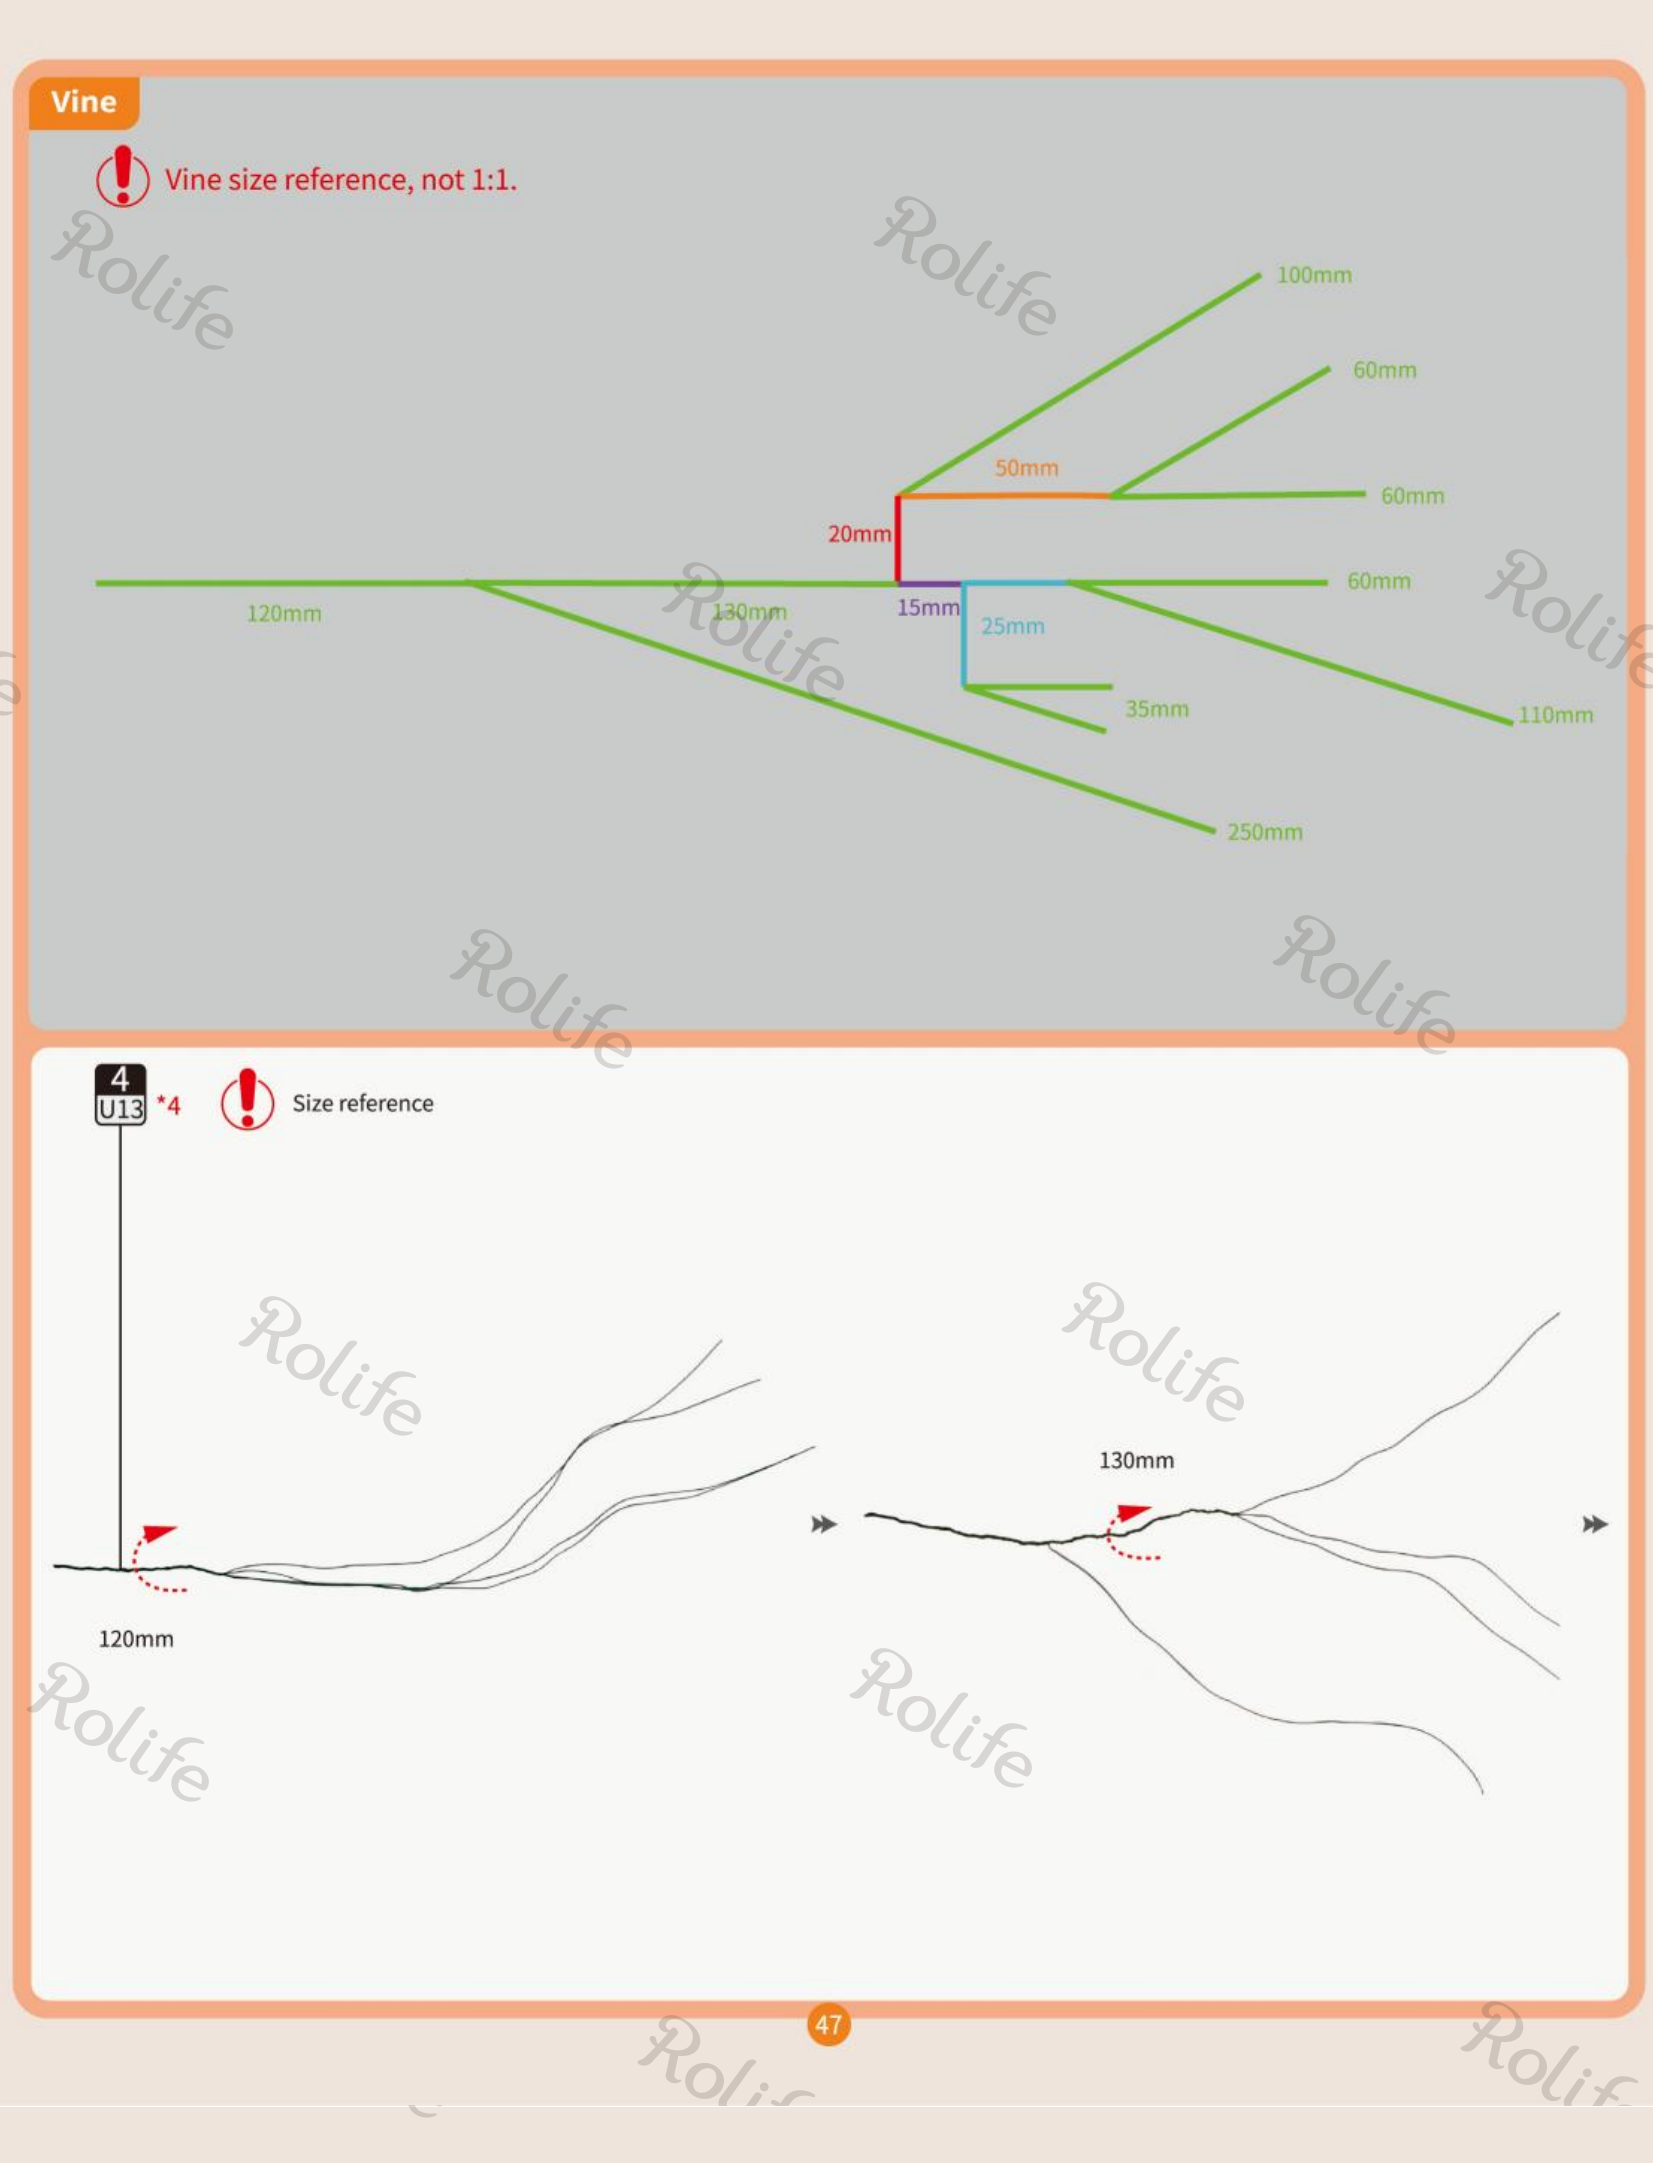

Vine

Vine size reference, not 1:1.

Size reference

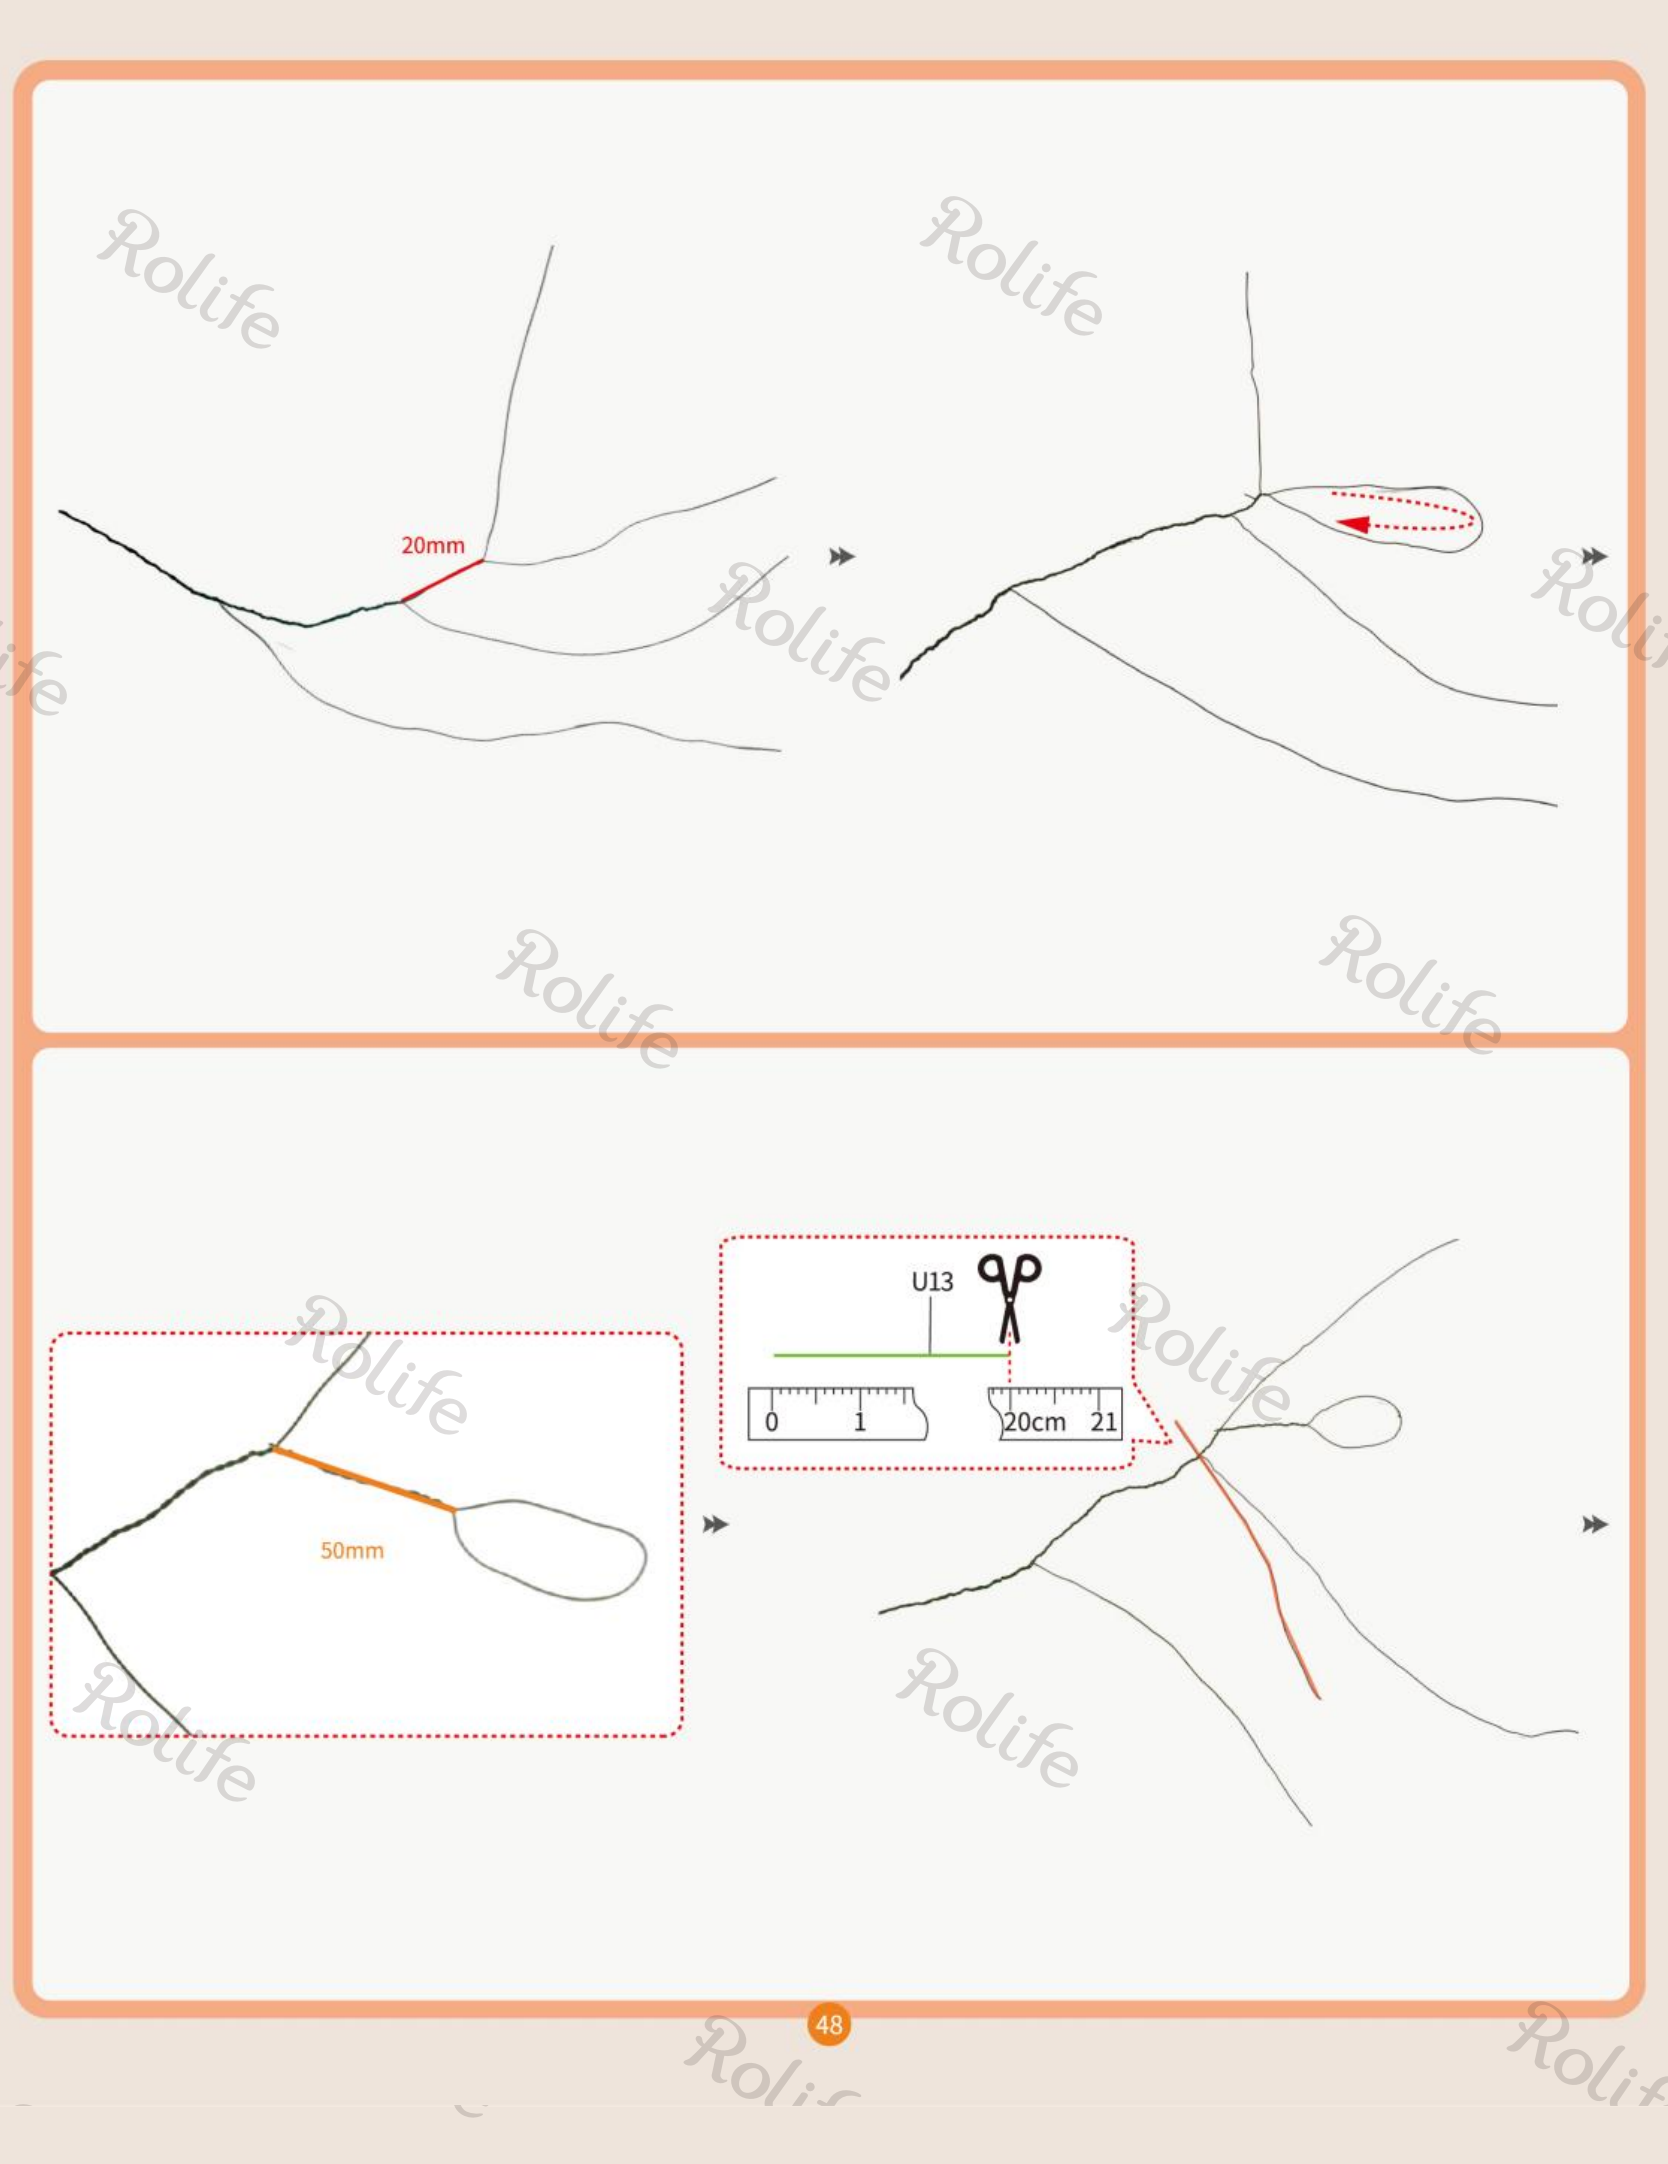

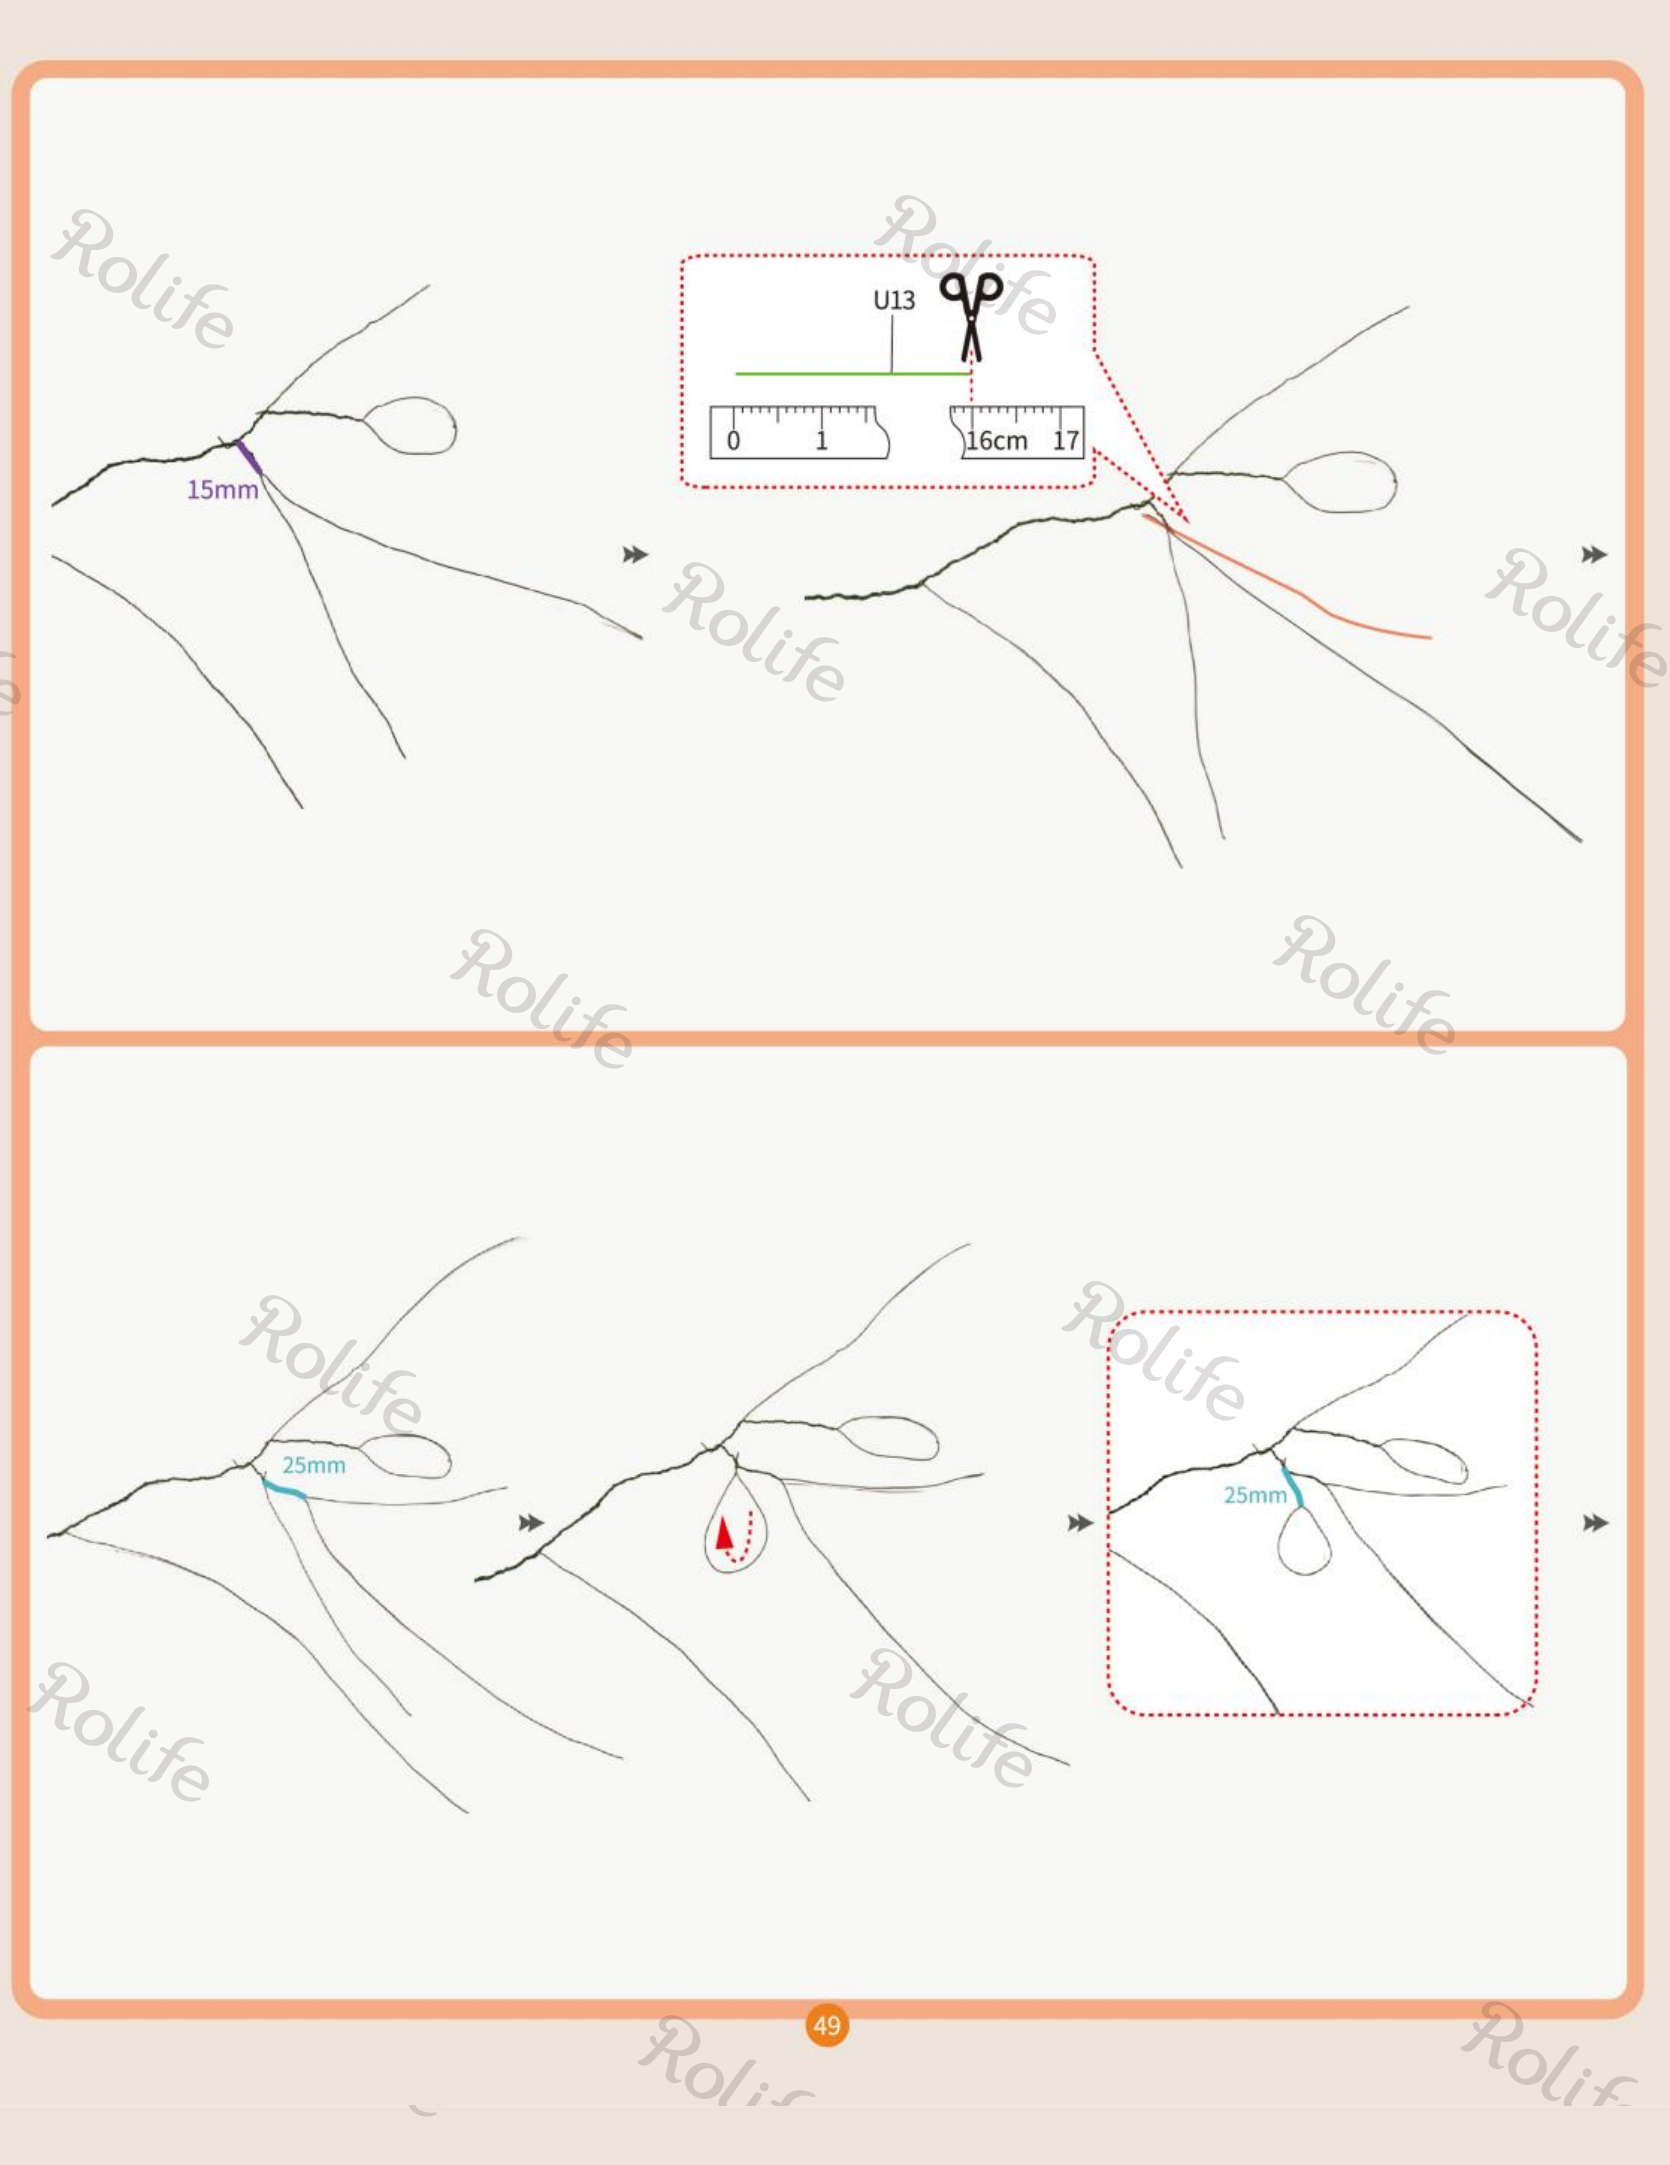

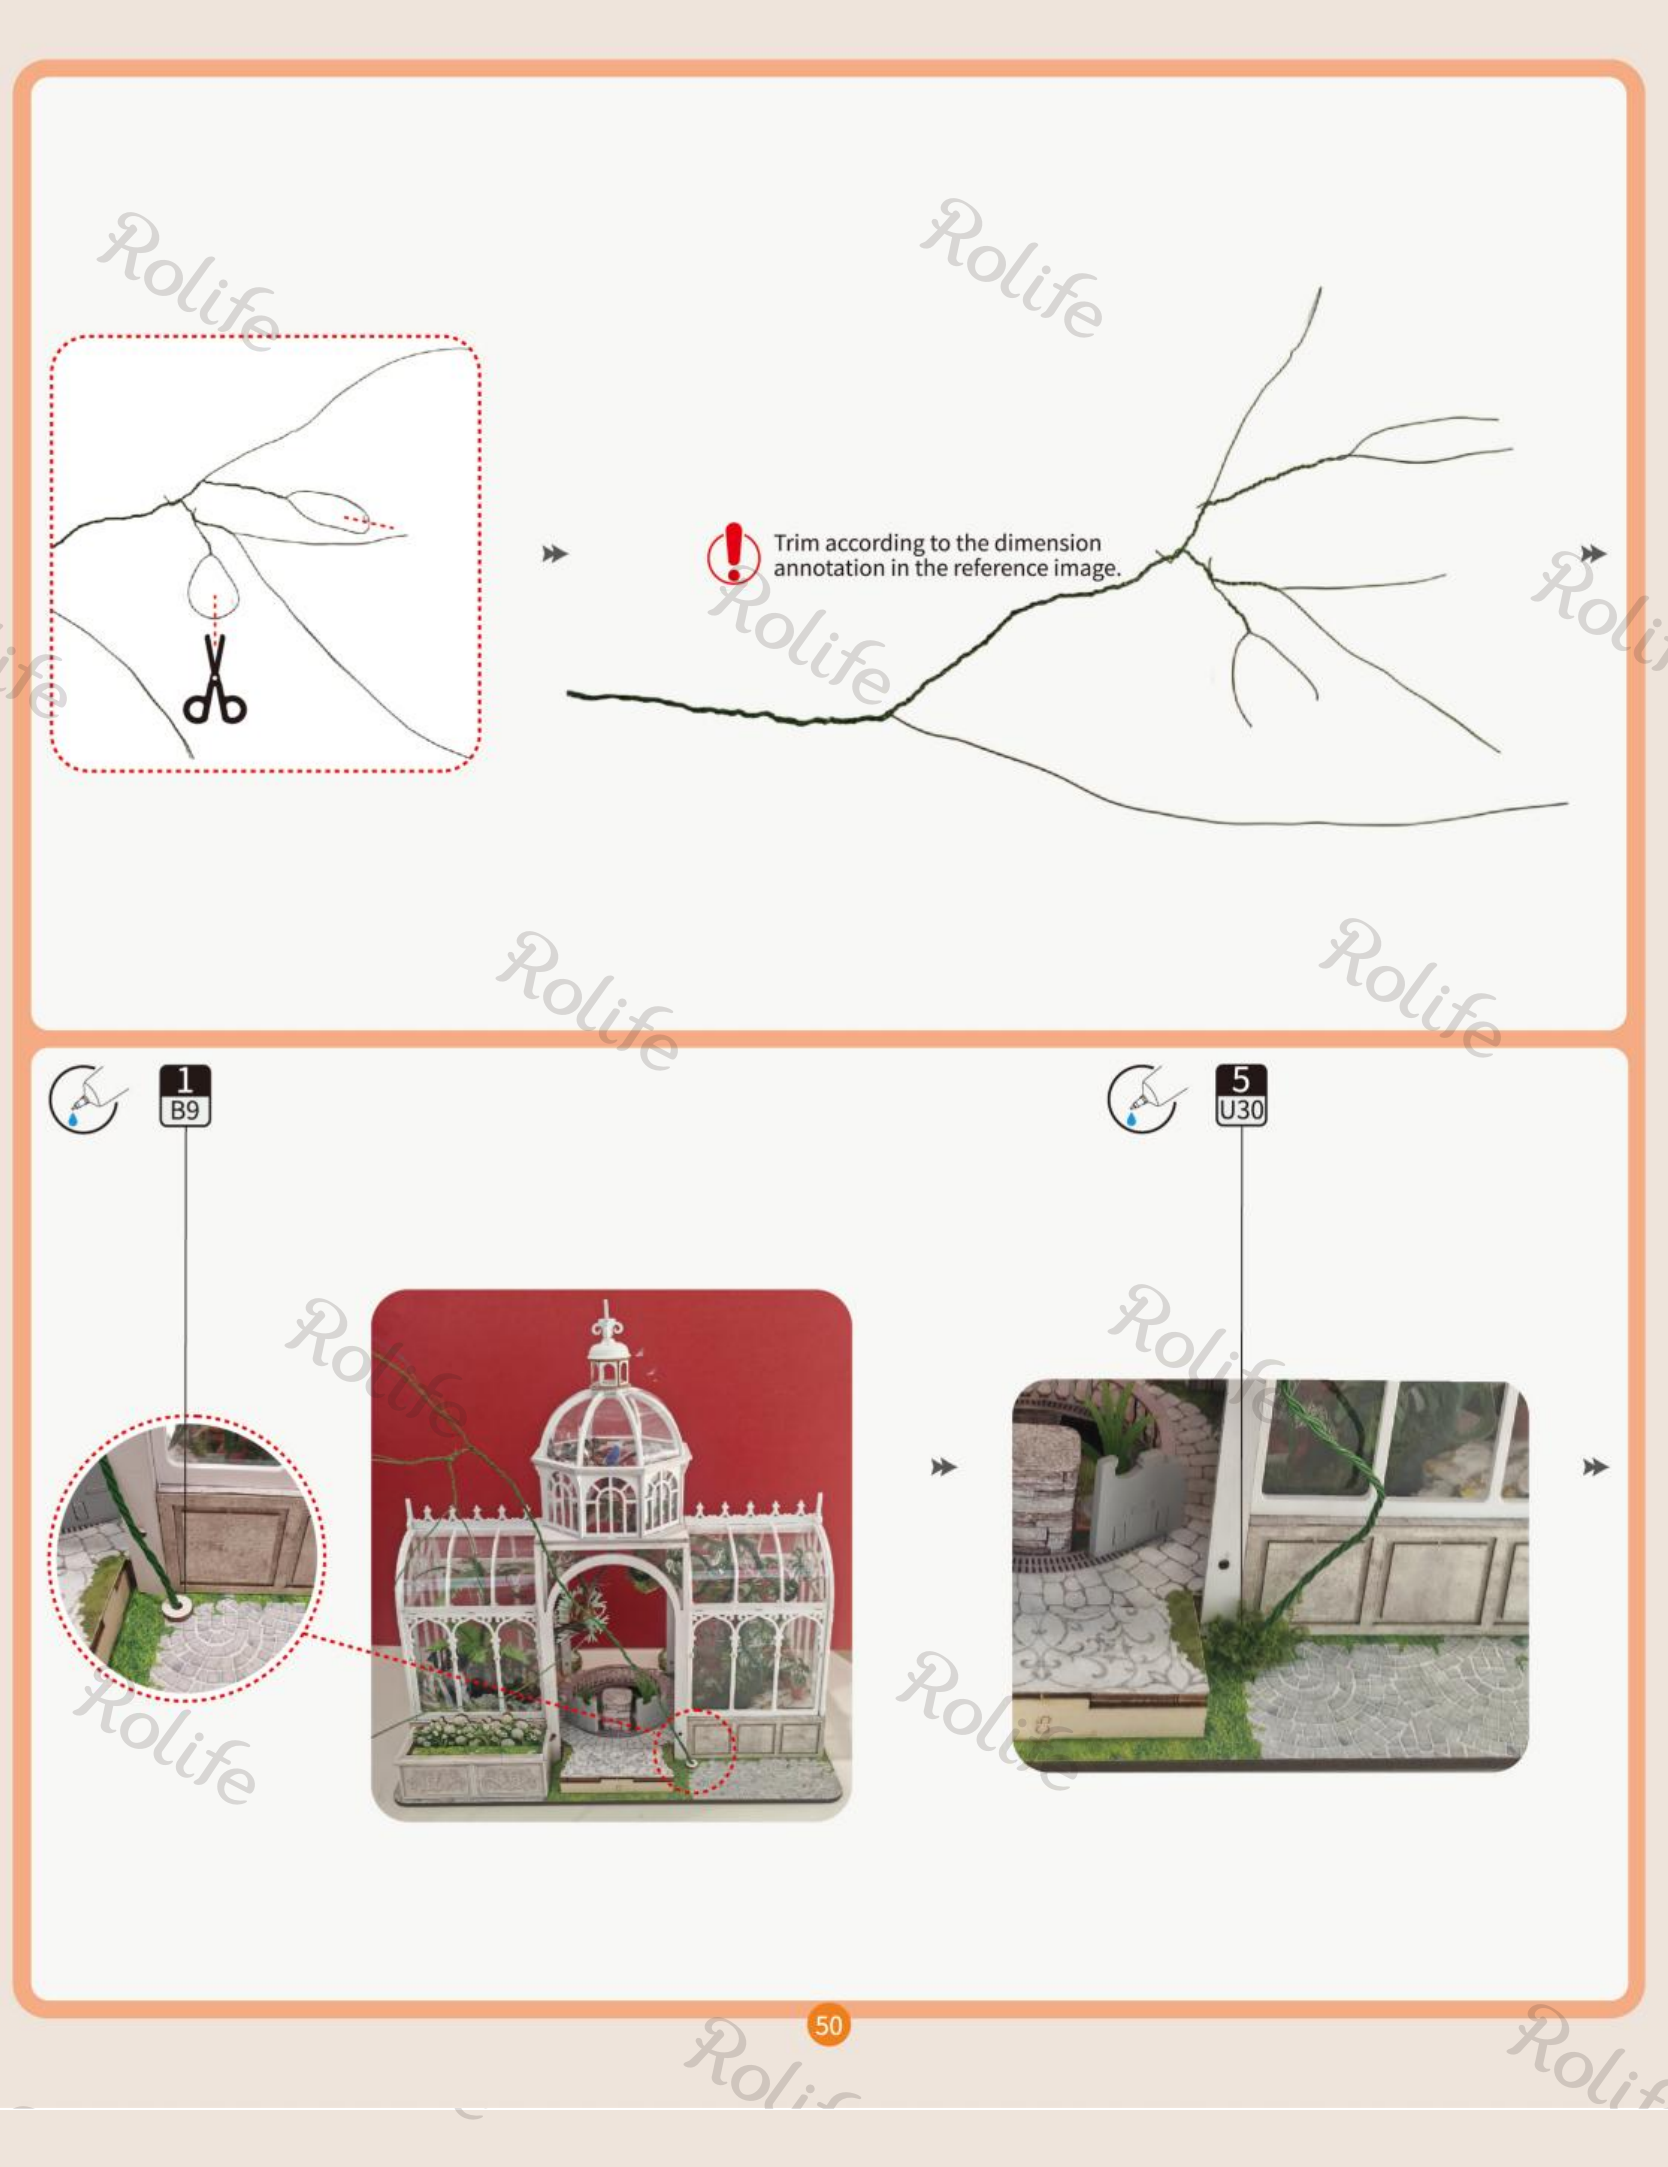

Trim according to the dimension annotation in the reference image.

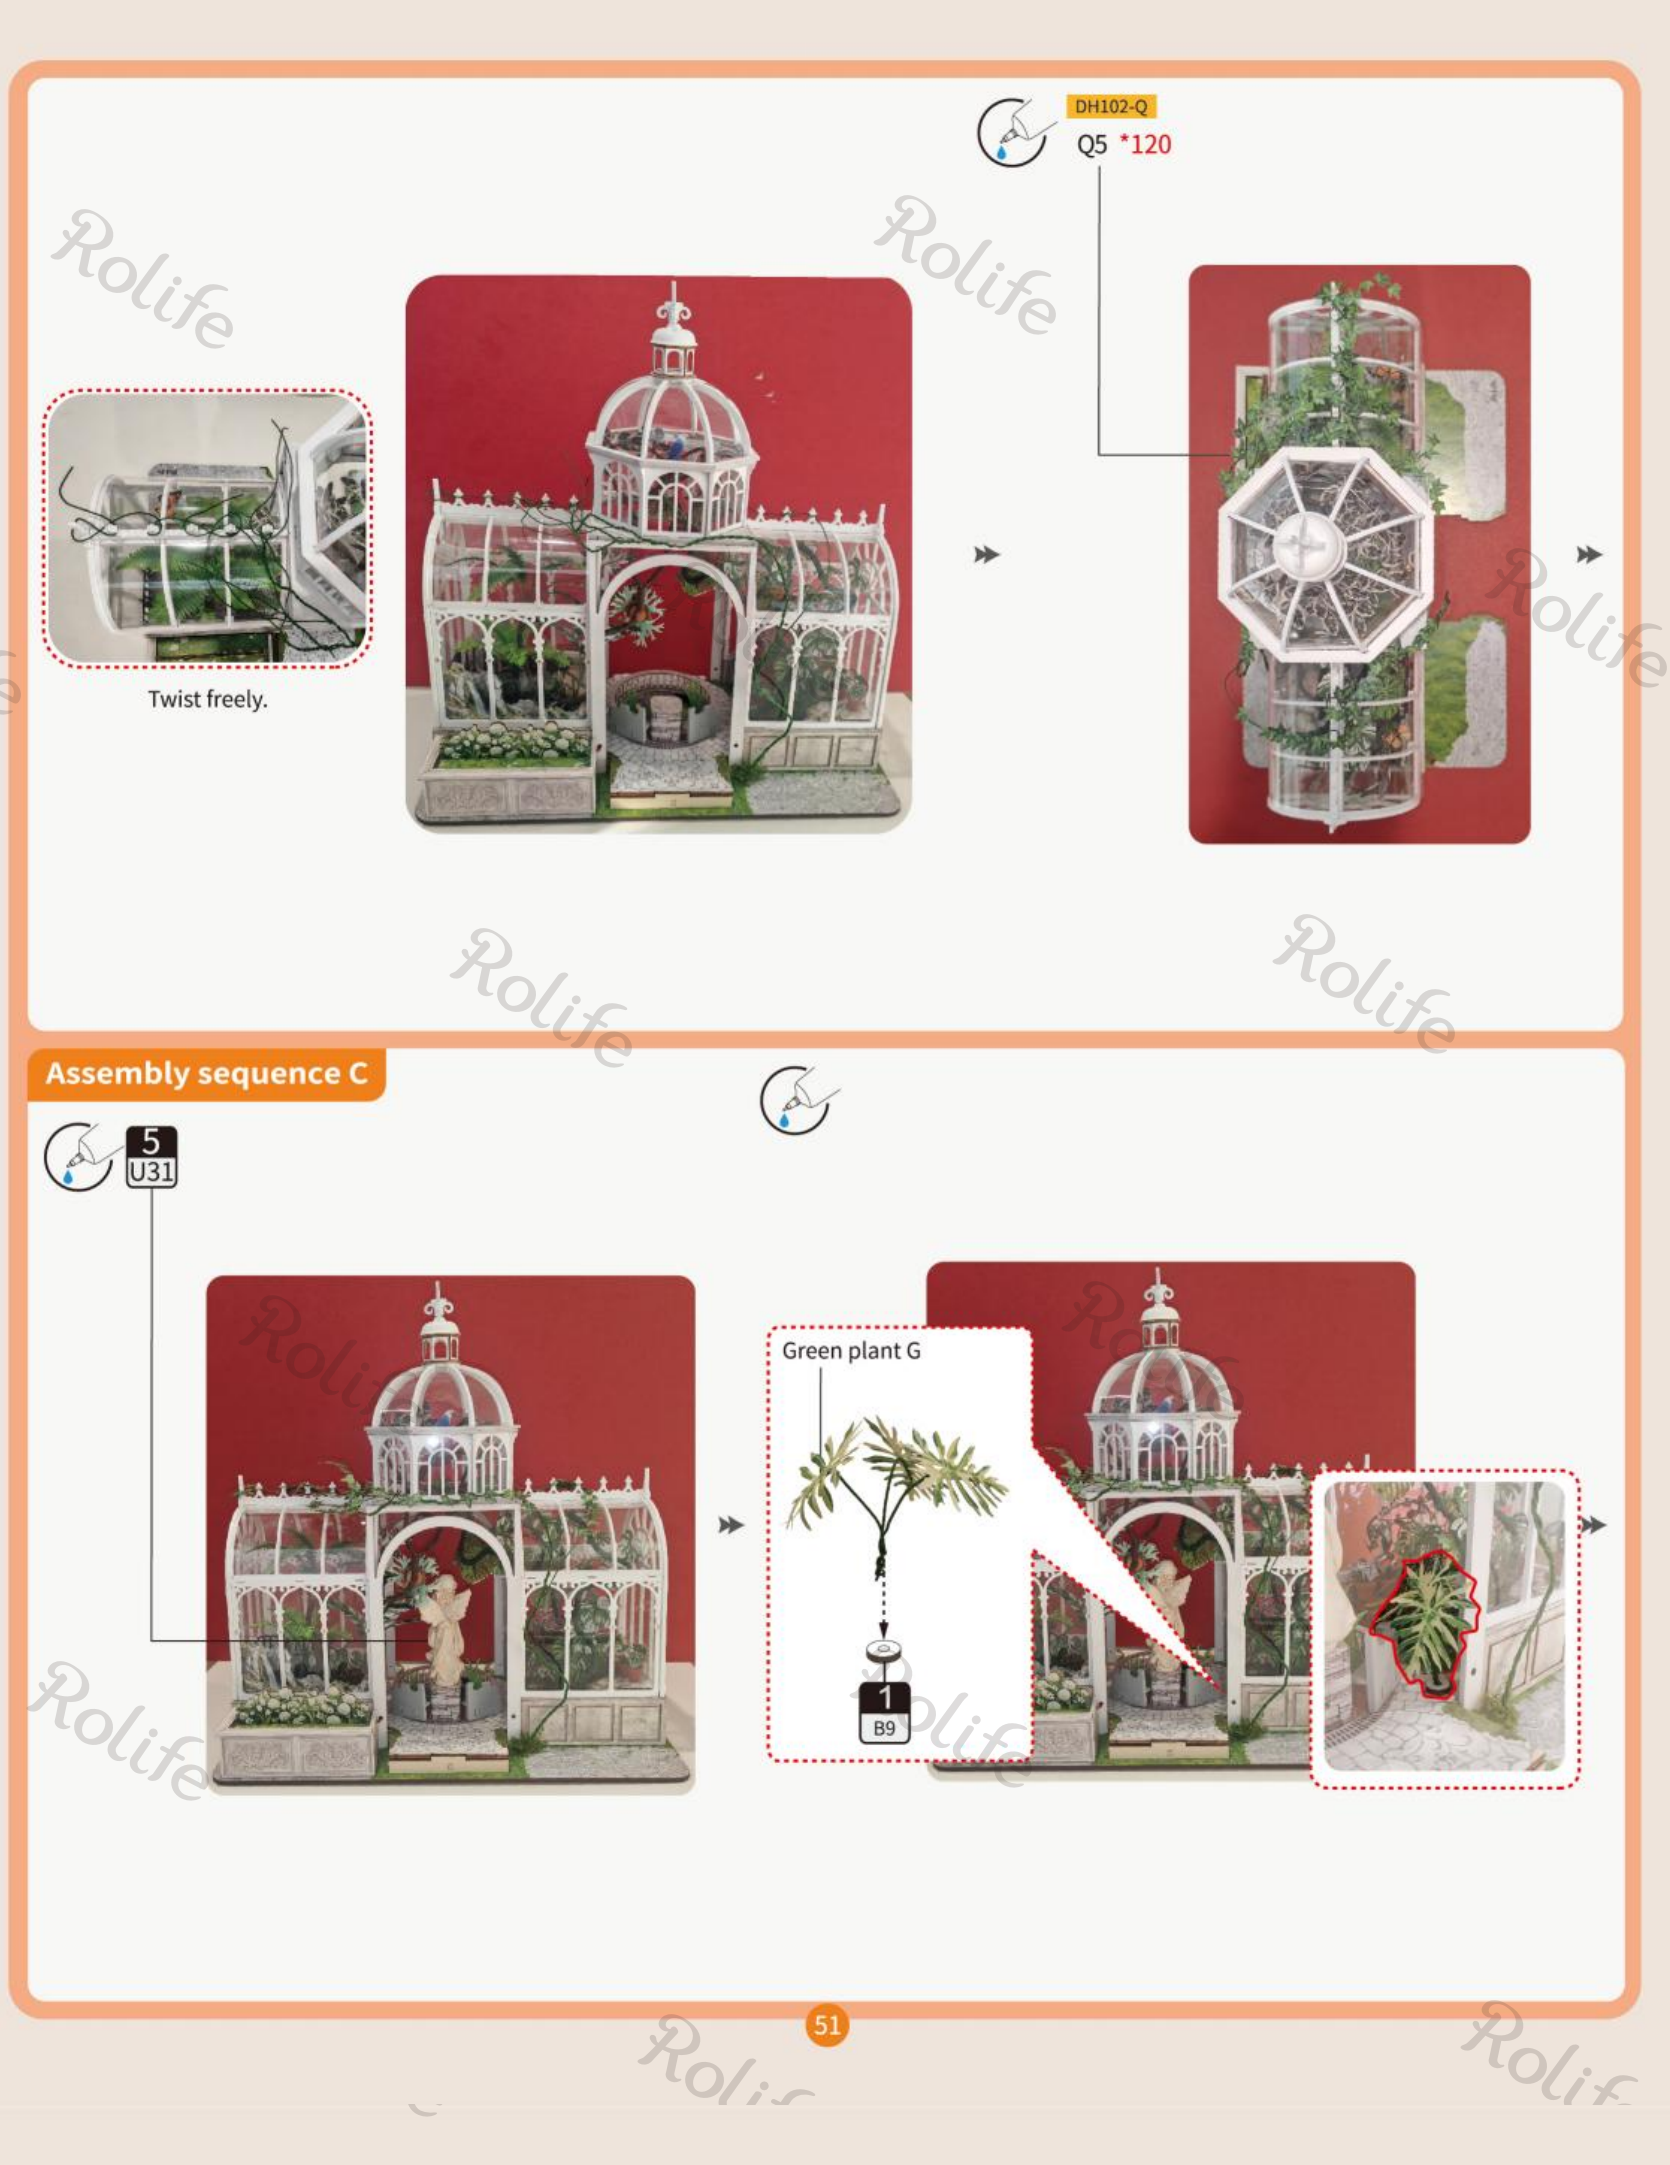

Twist freely.

Assembly sequence C

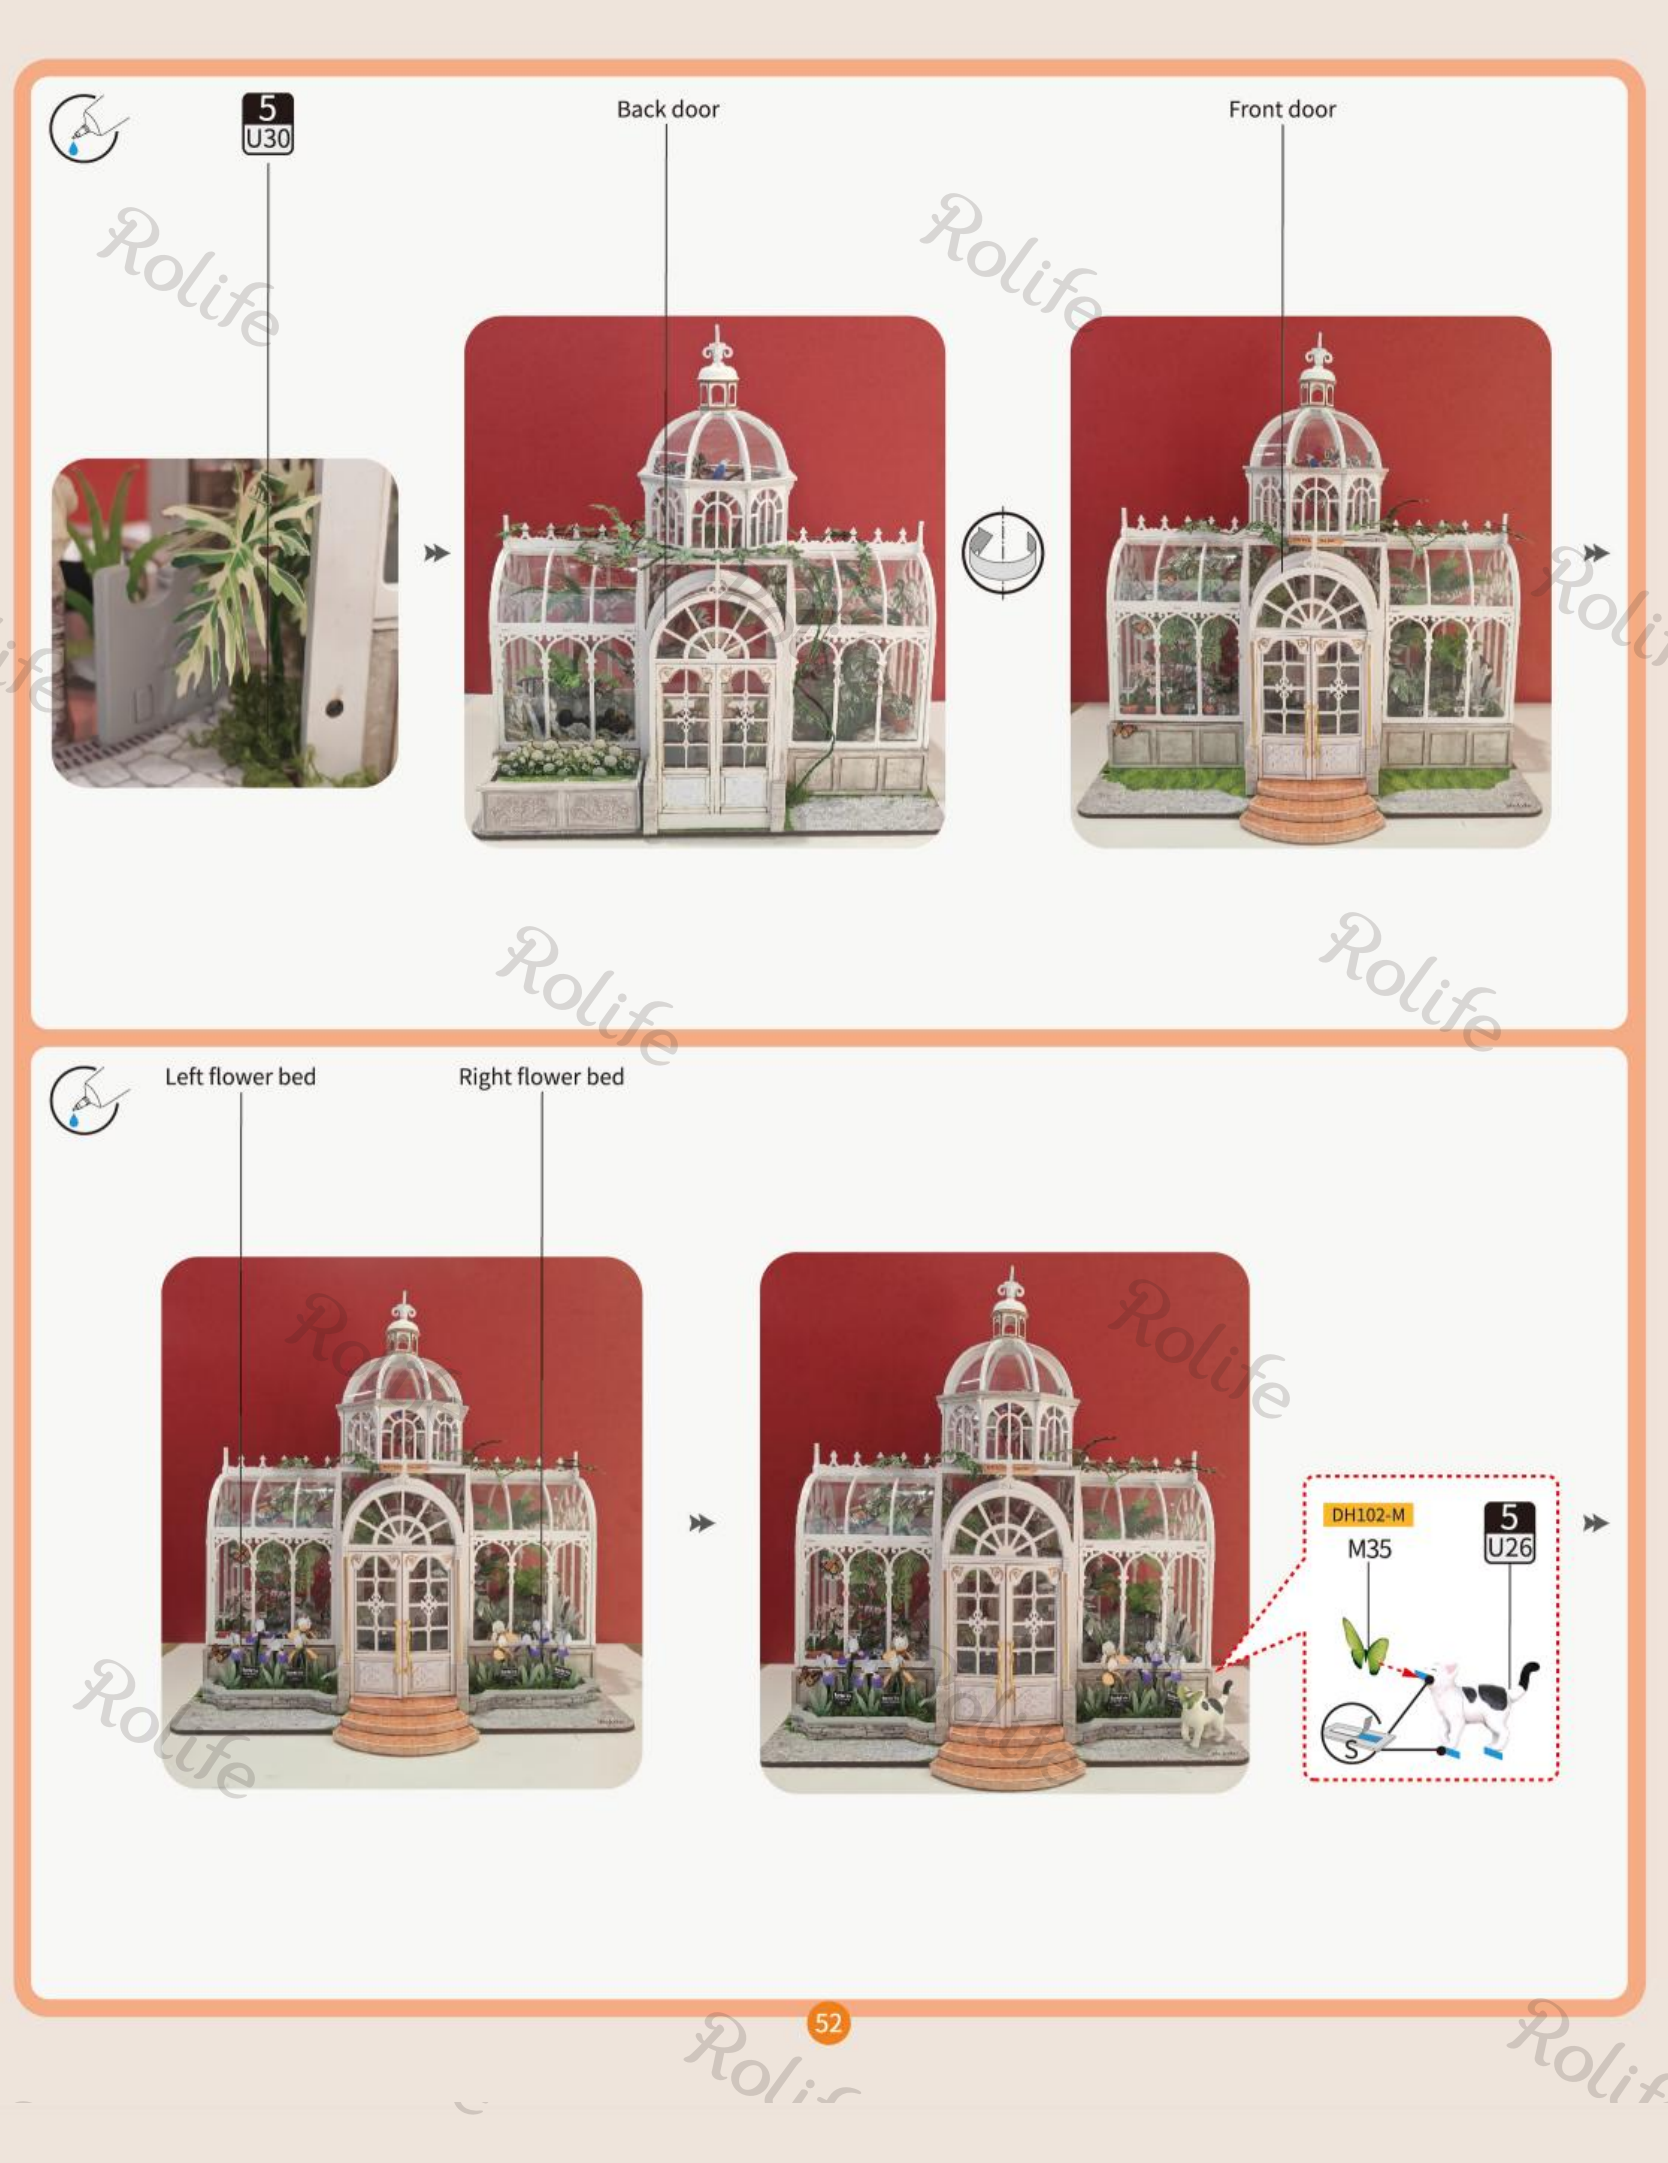

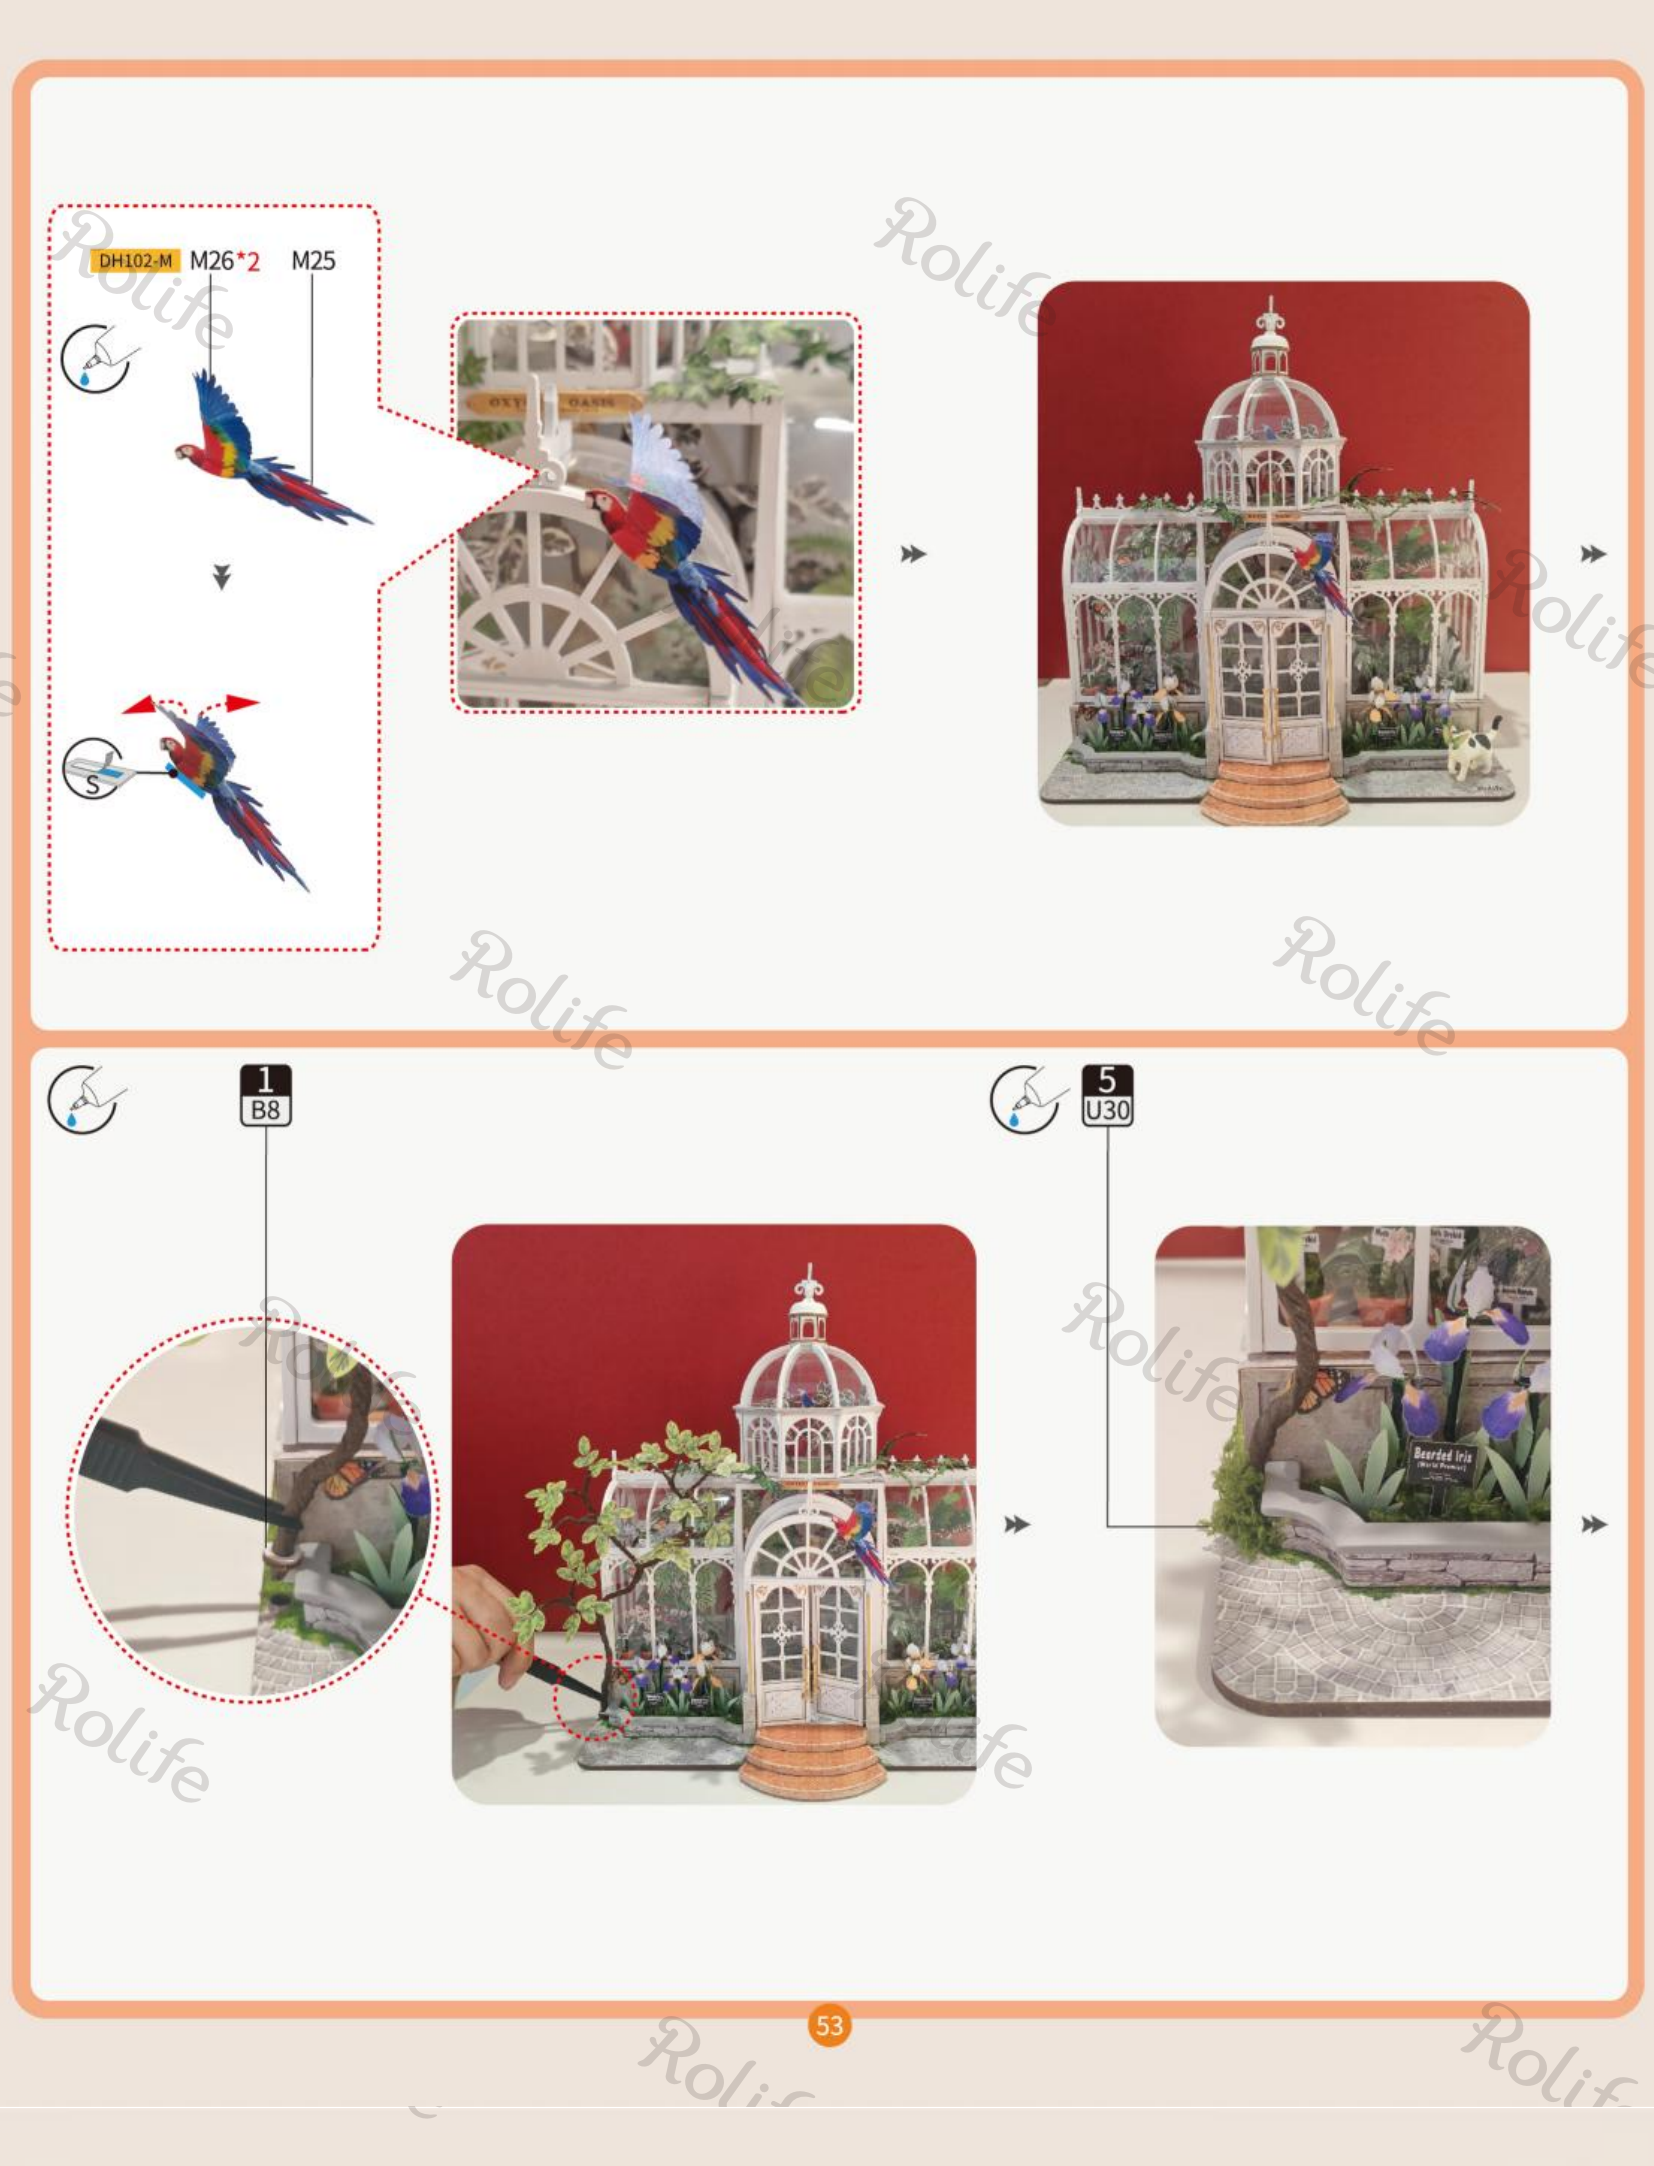

MANUFACTURER:
Robotime C&C (Jiangsu) Co., Ltd.
AFTER-SALES SERVICE CONTACT:
service@robotime.com

Rolife

Designed by ROBOTIME
www.robotime.com
MADE IN CHINA
49.1DH102.100