Rolife

INSTRUCTION

Beverly's Ice Cream Truck

• TGS06

Scan the QR code or go to Community.robotime.com to discover DIY ideas, quick tips & WIN free kits

Pictures for reference only. Please subject to our existing products.

Assembly Tips

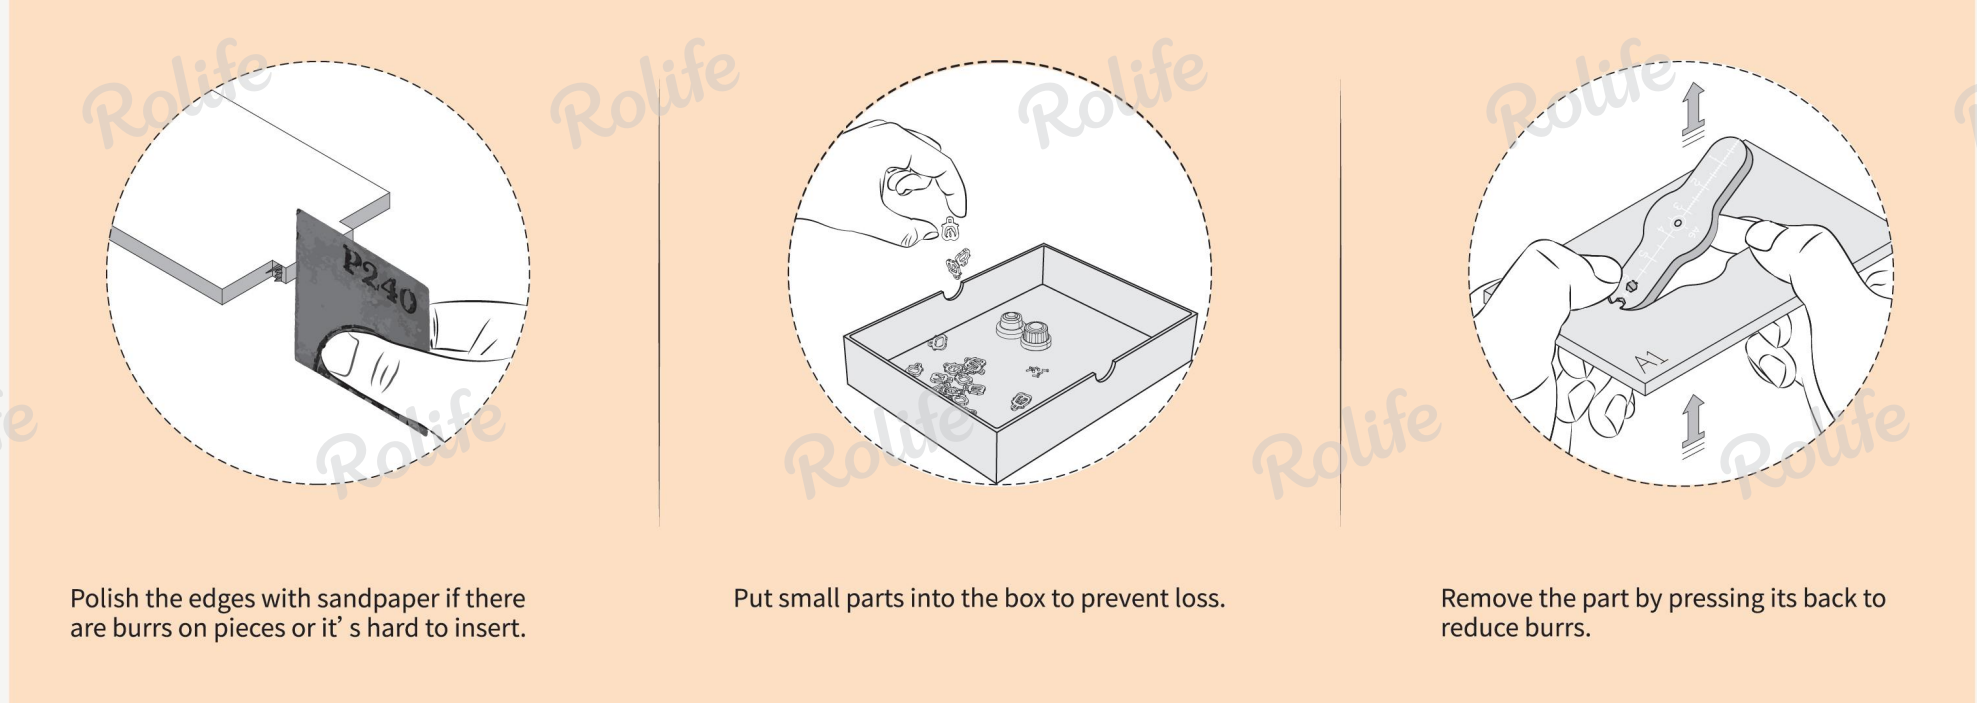

Polish the edges with sandpaper if there are burrs on pieces or it' s hard to insert.

Put small parts into the box to prevent loss.

Remove the part by pressing its back to reduce burrs.

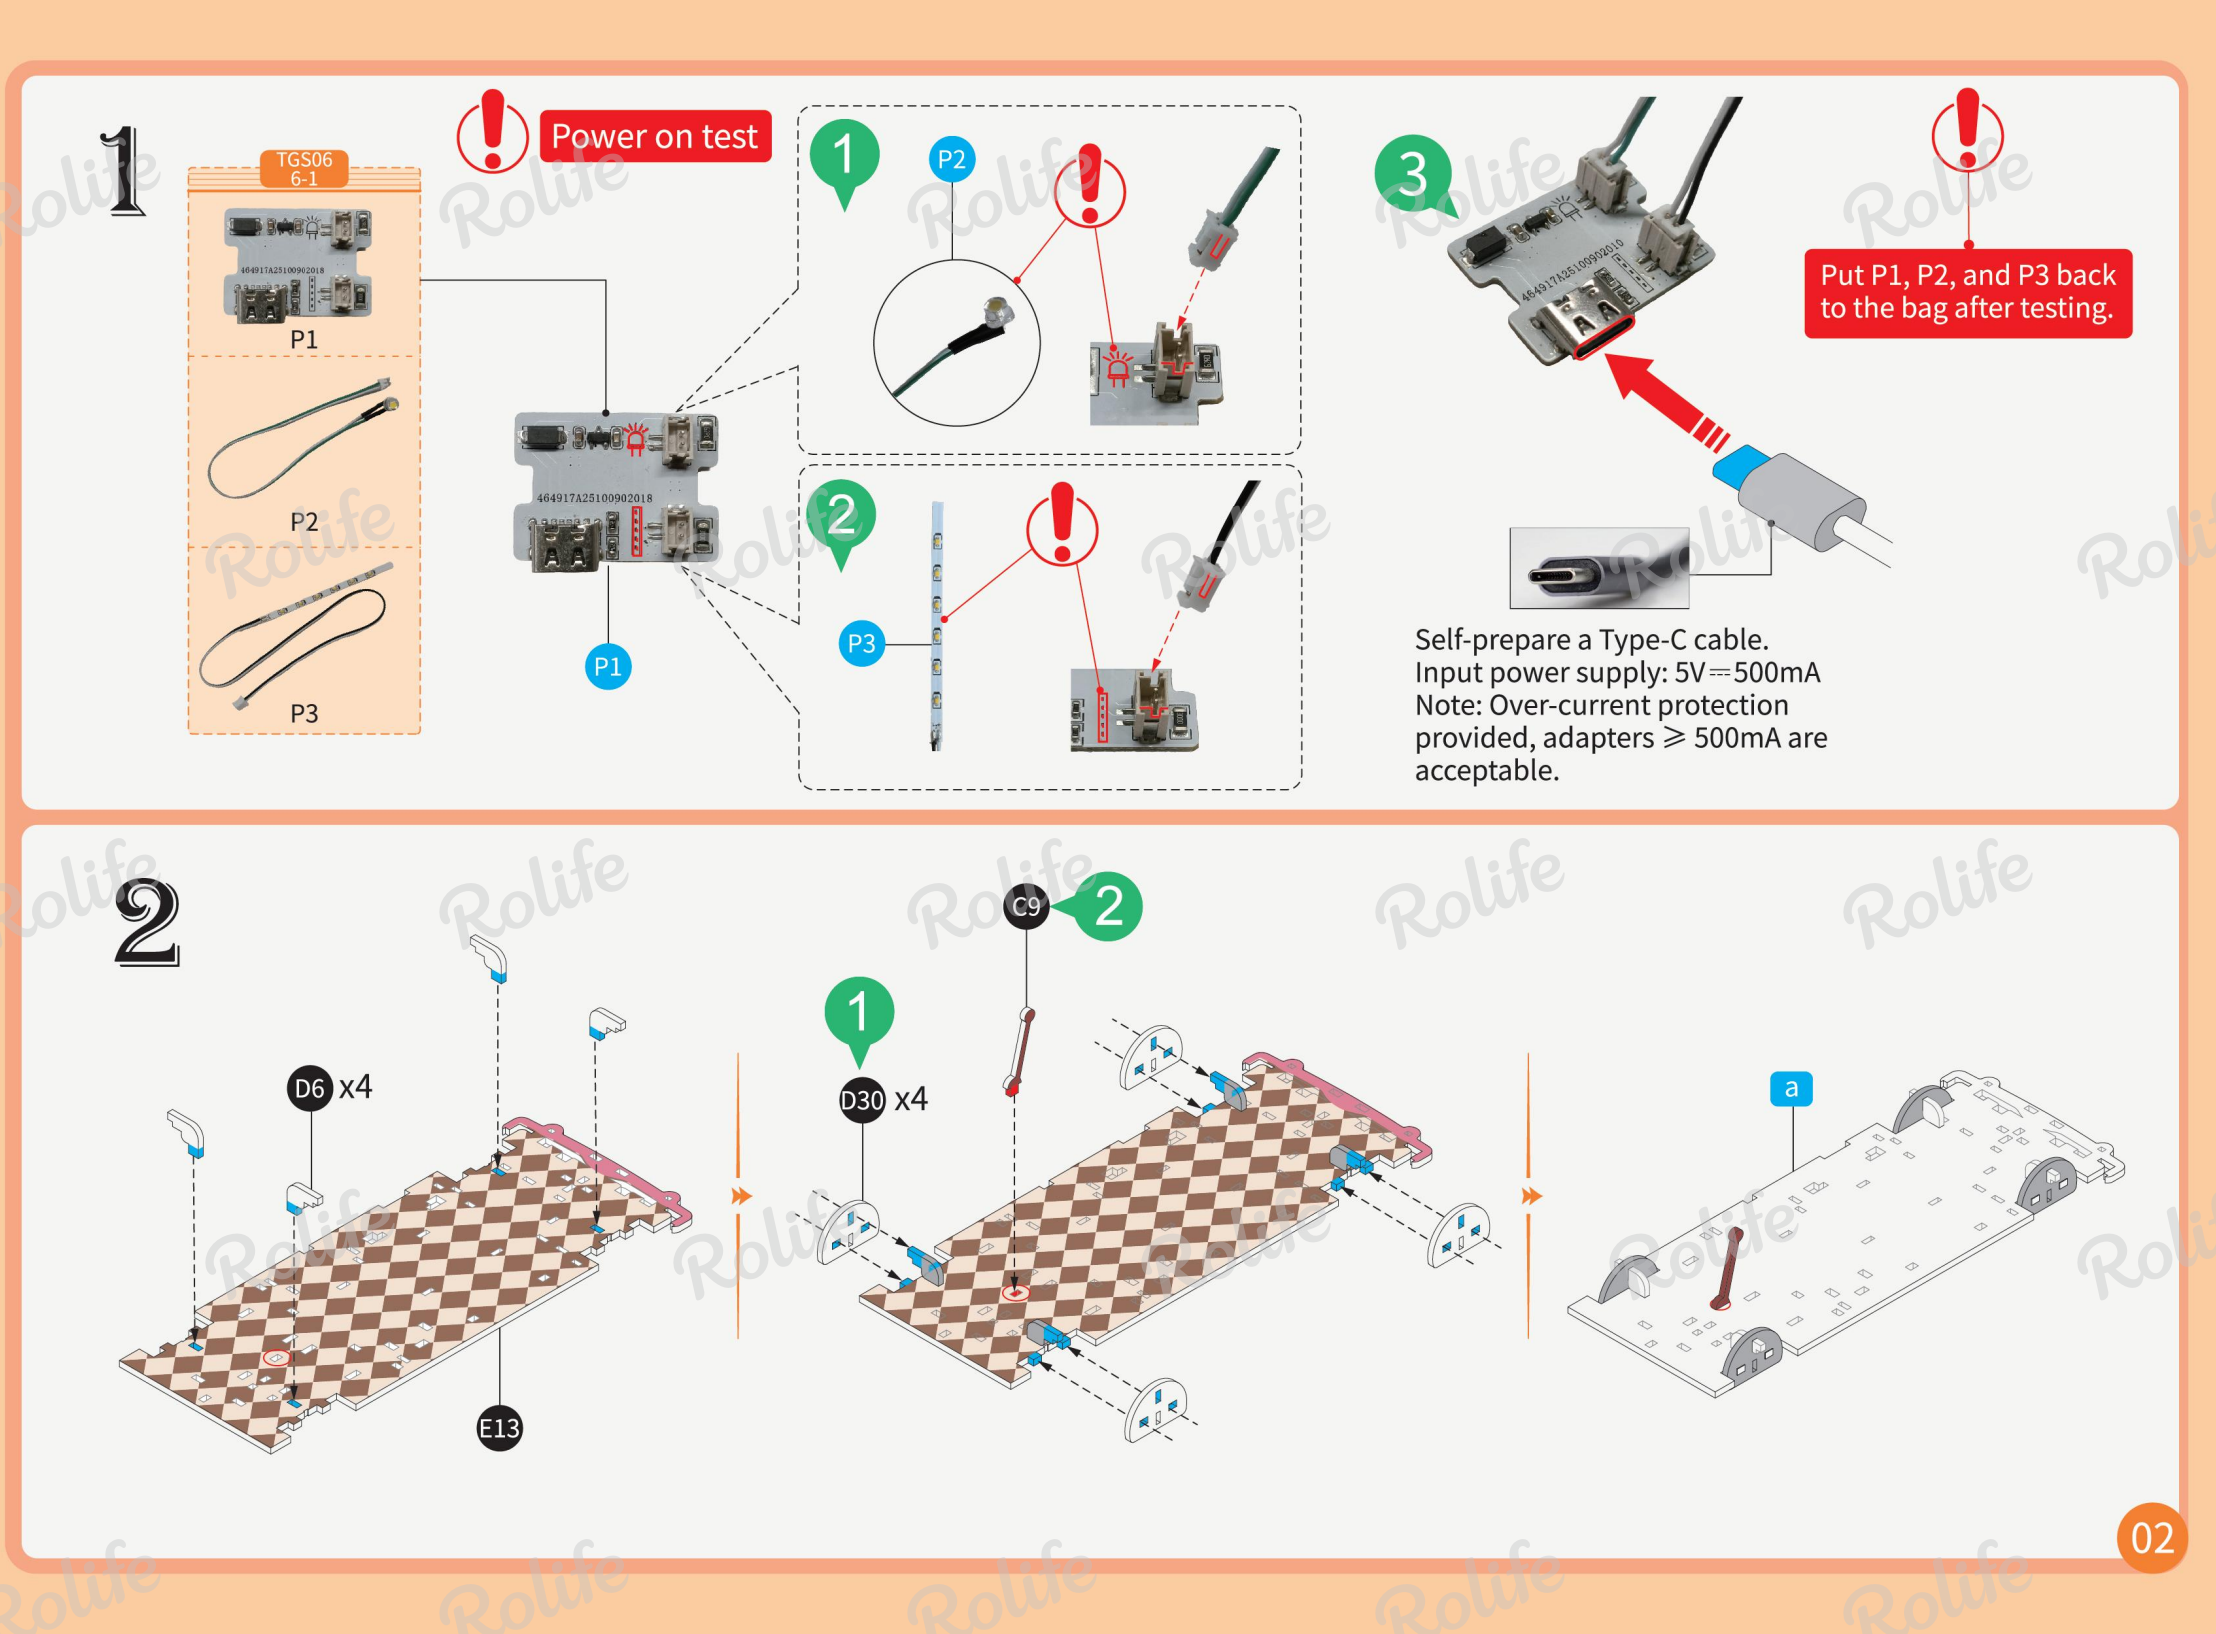

Power on test

Self-prepare a Type-C cable.
Input power supply: 5V⎓500mA
Note: Over-current protection provided, adapters ≥ 500mA are acceptable.

Put P1, P2, and P3 back to the bag after testing.

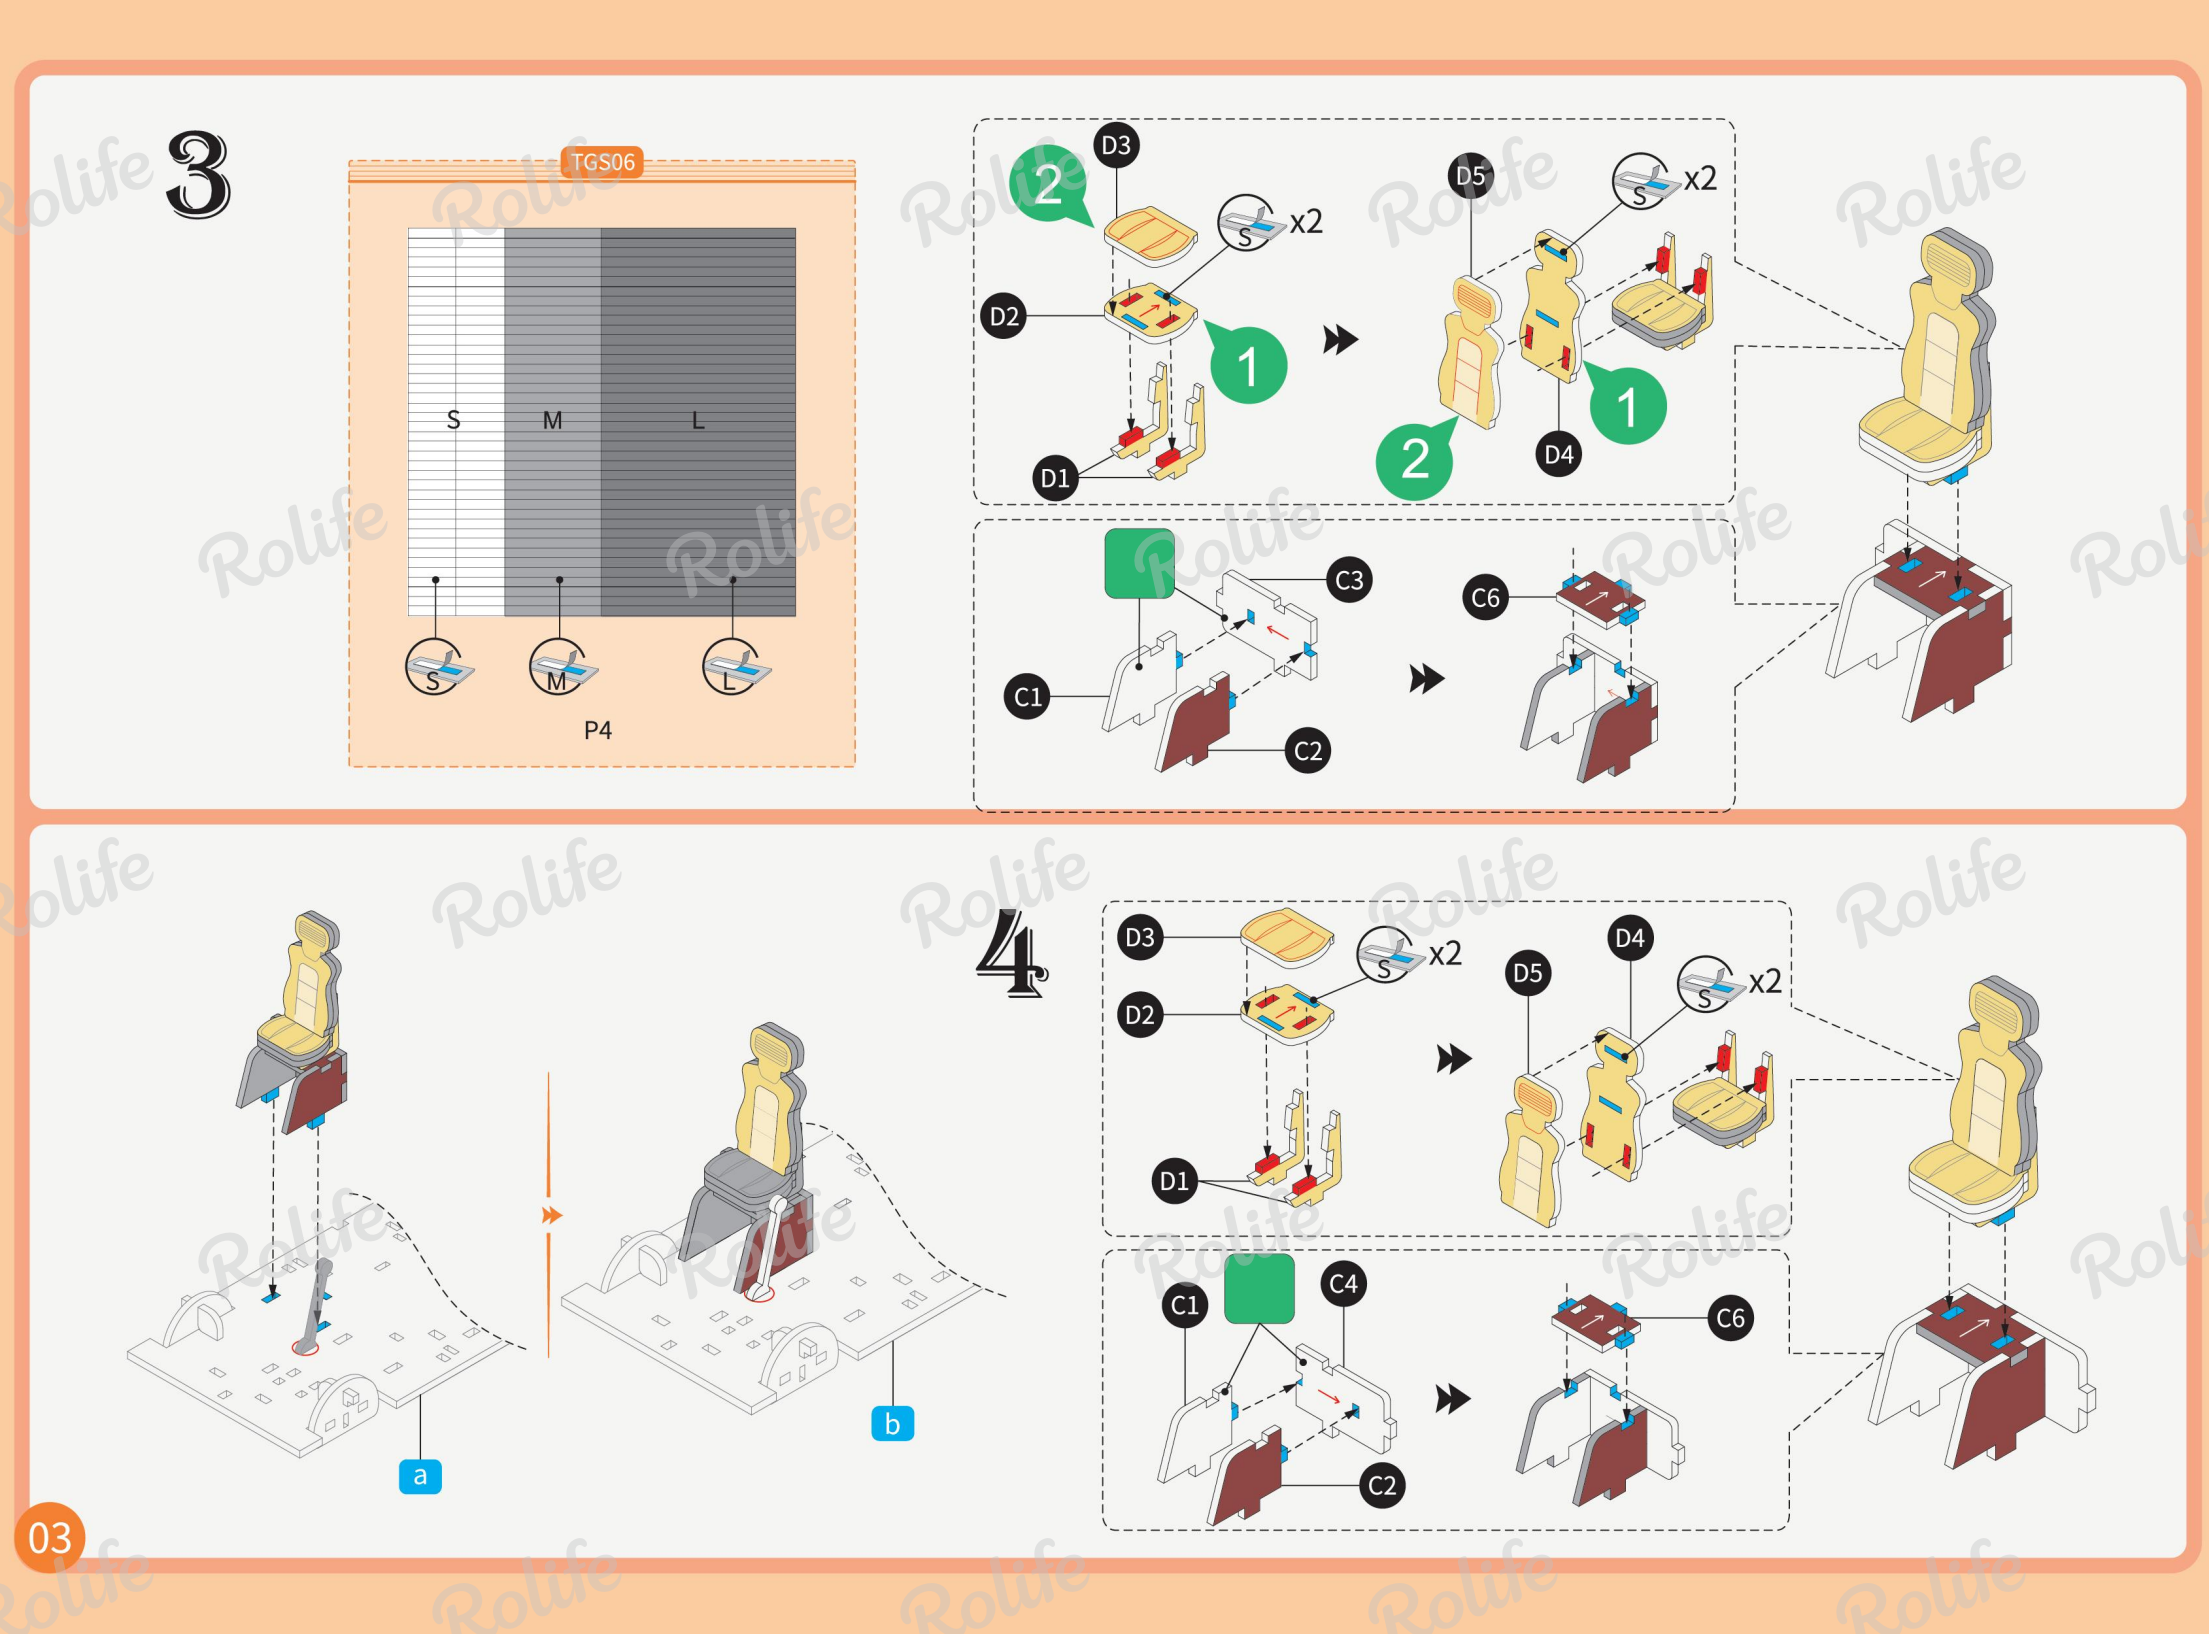

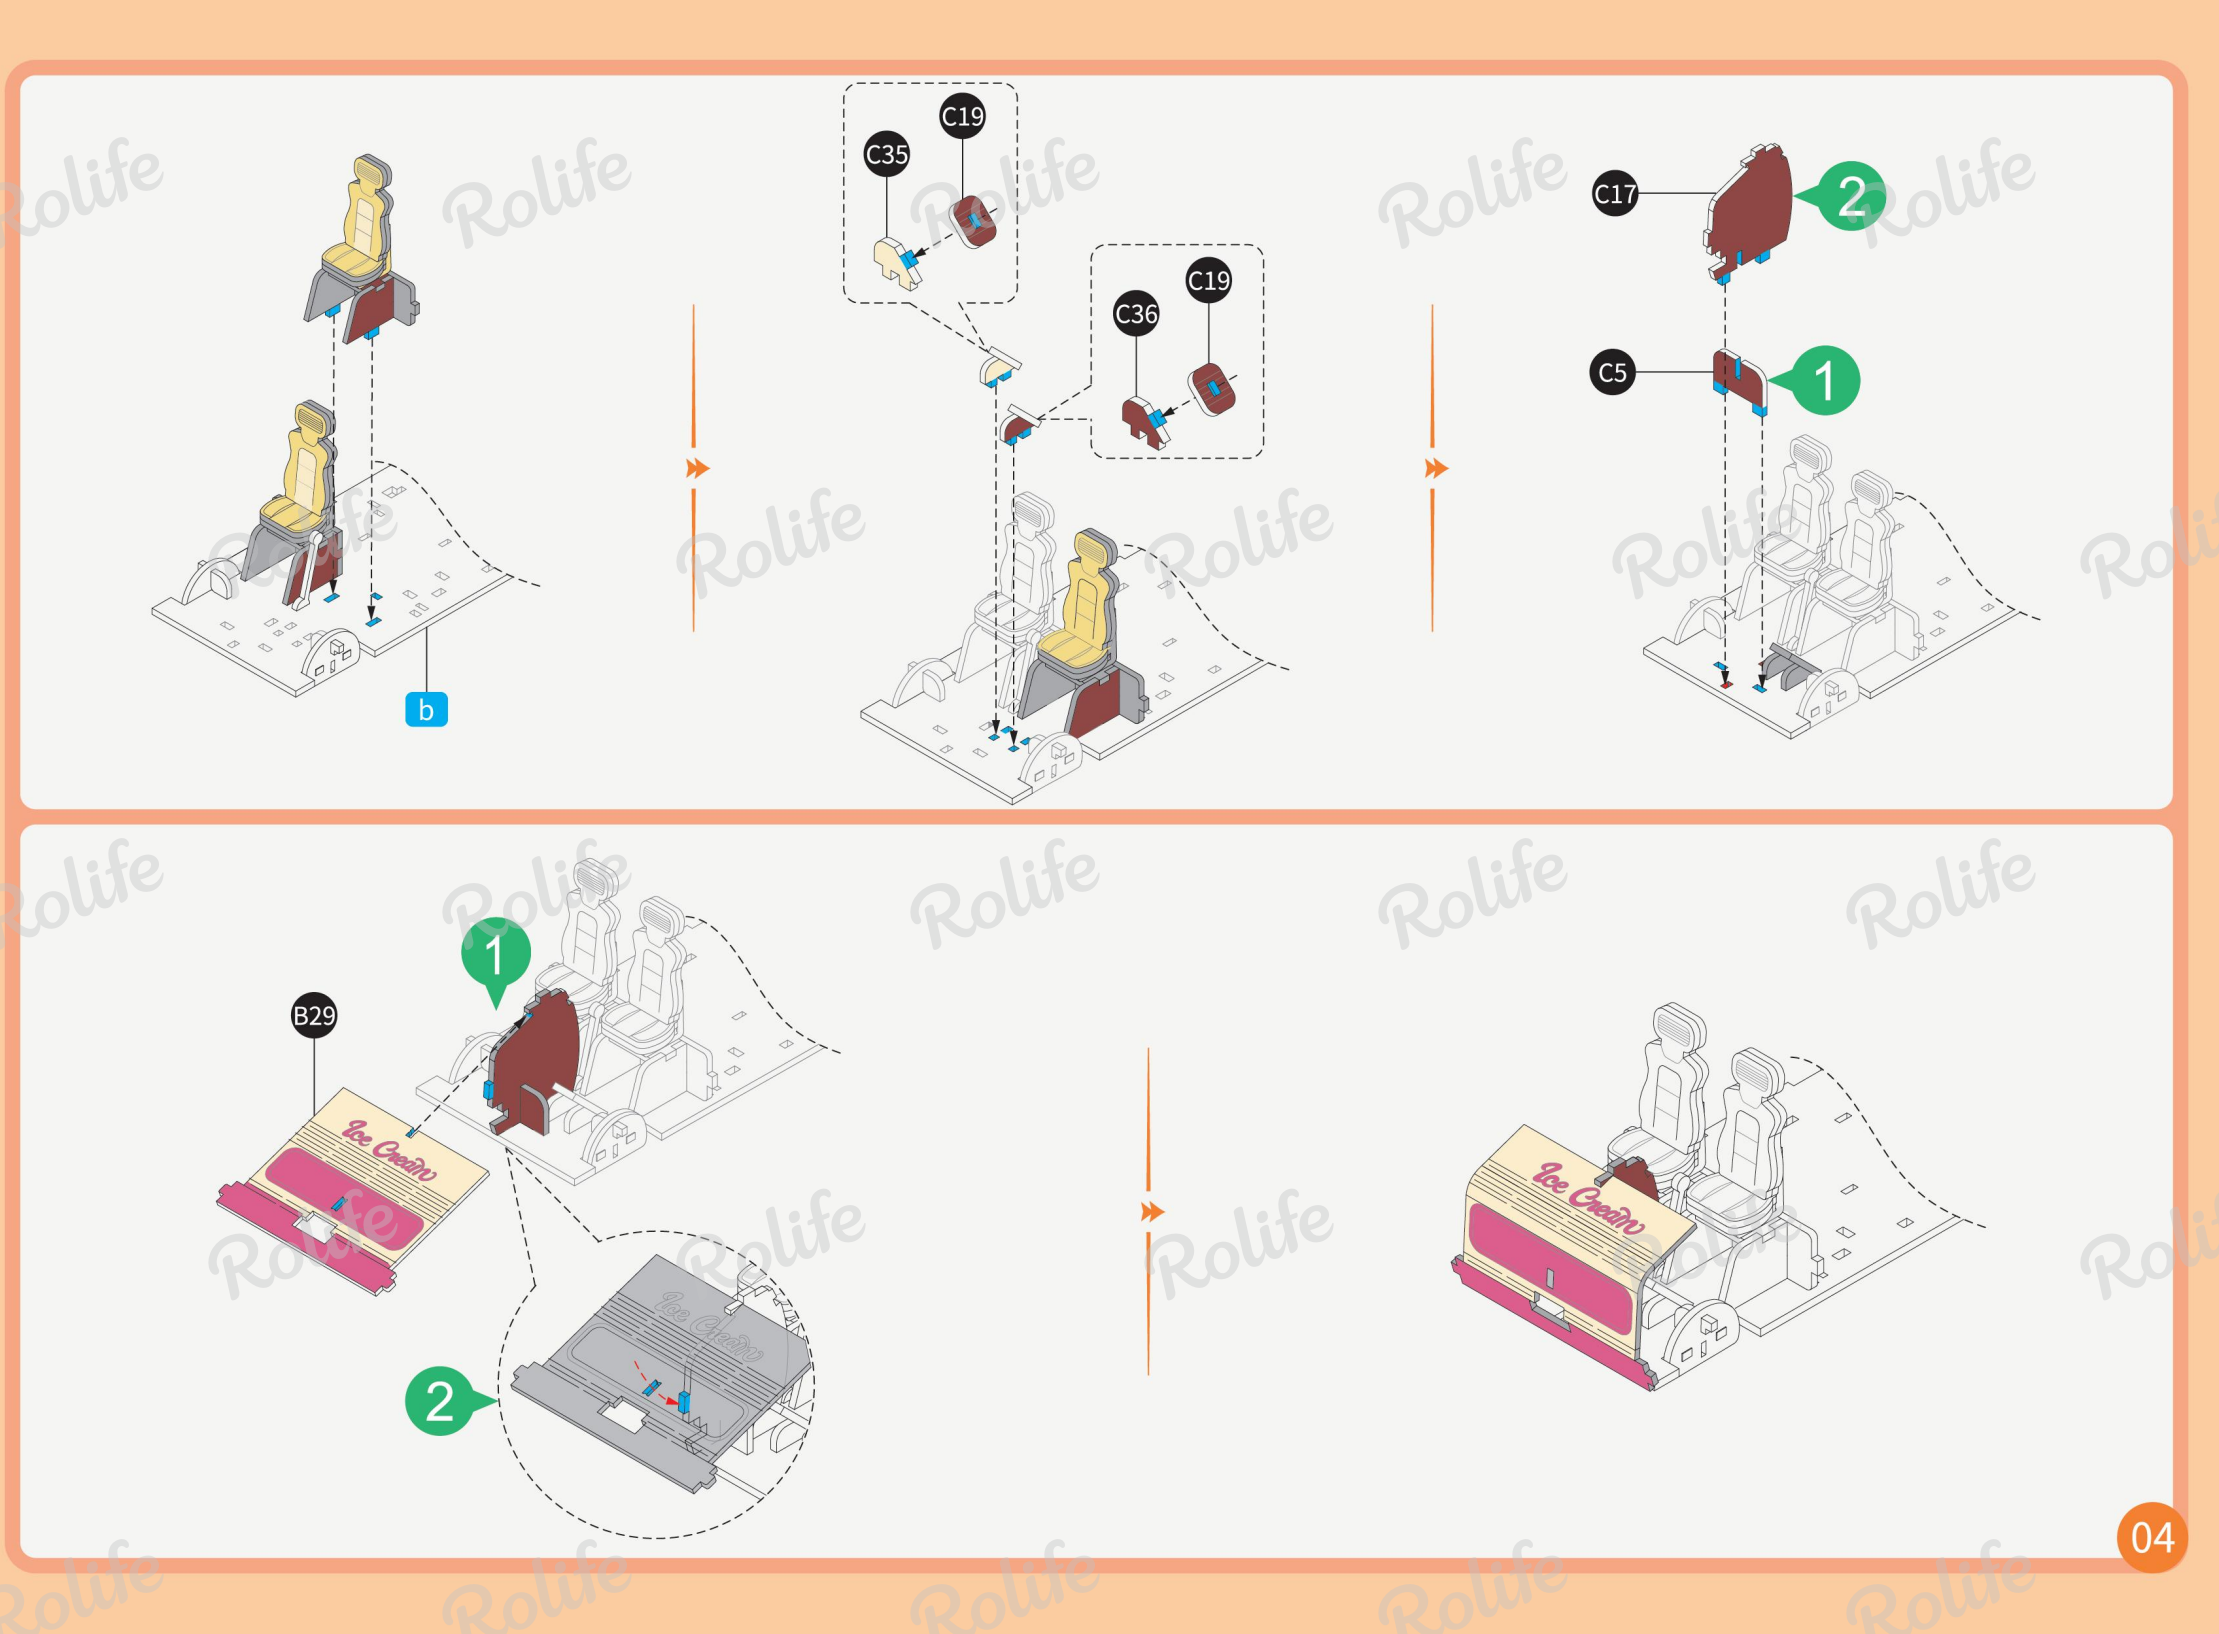

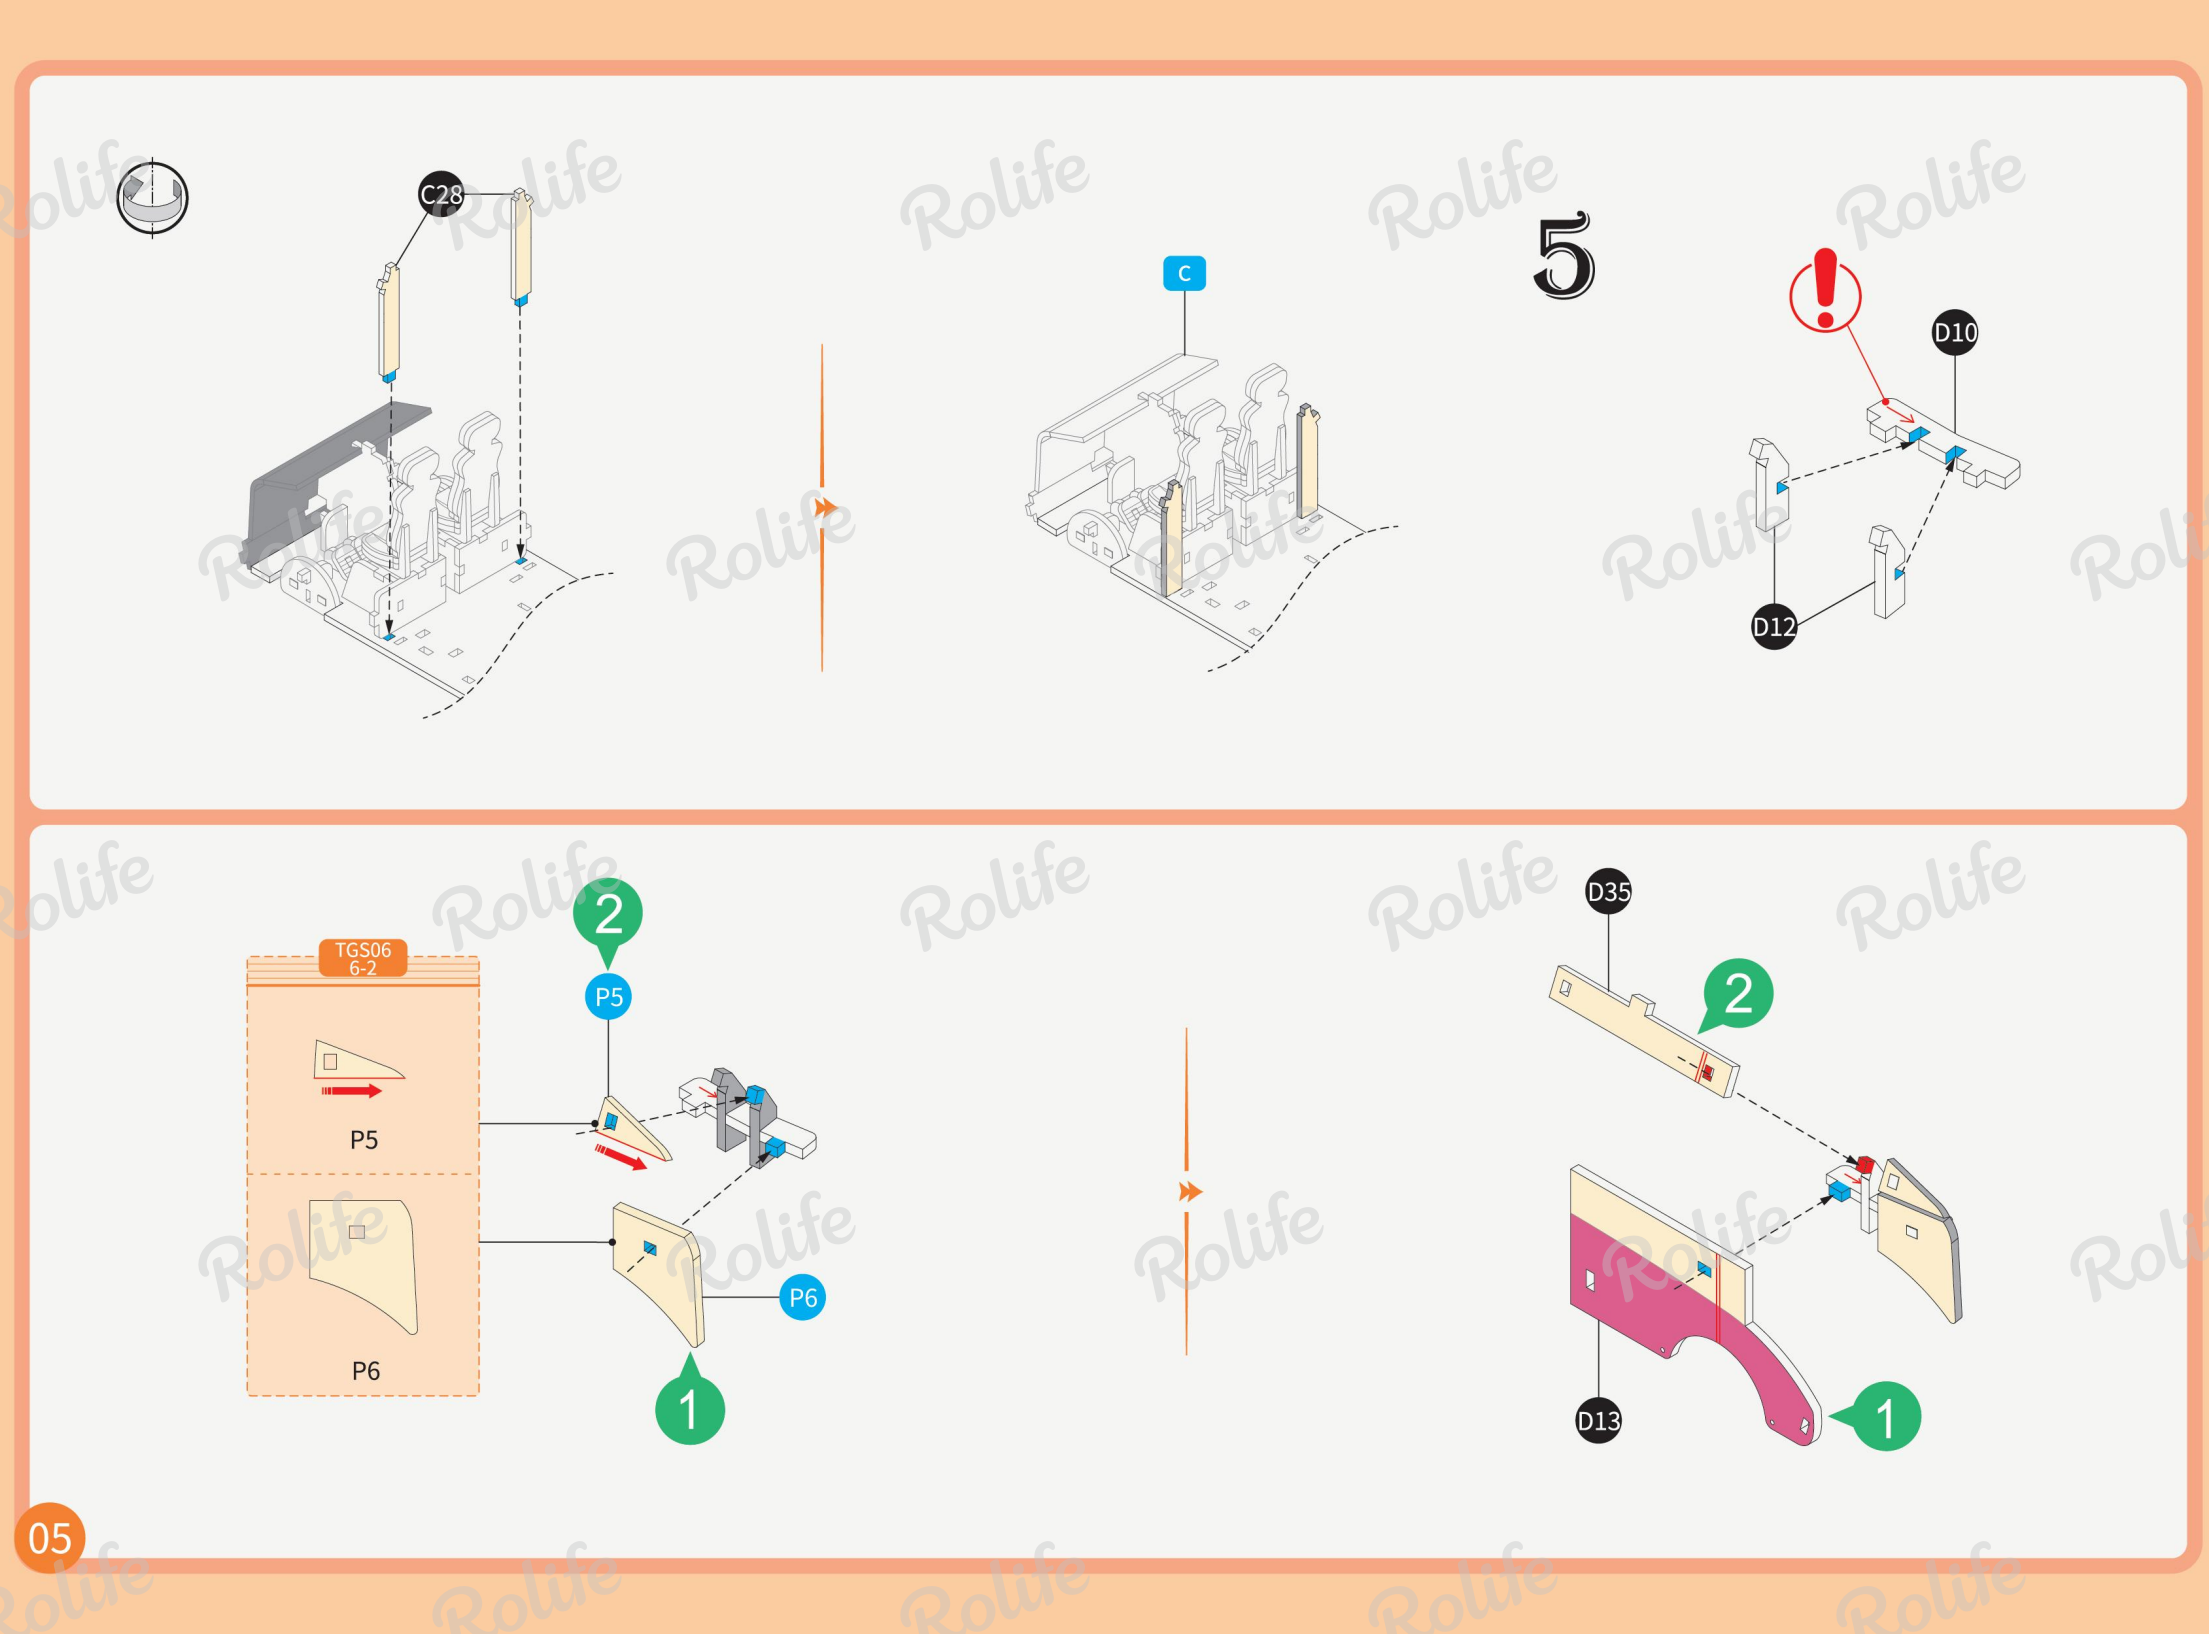

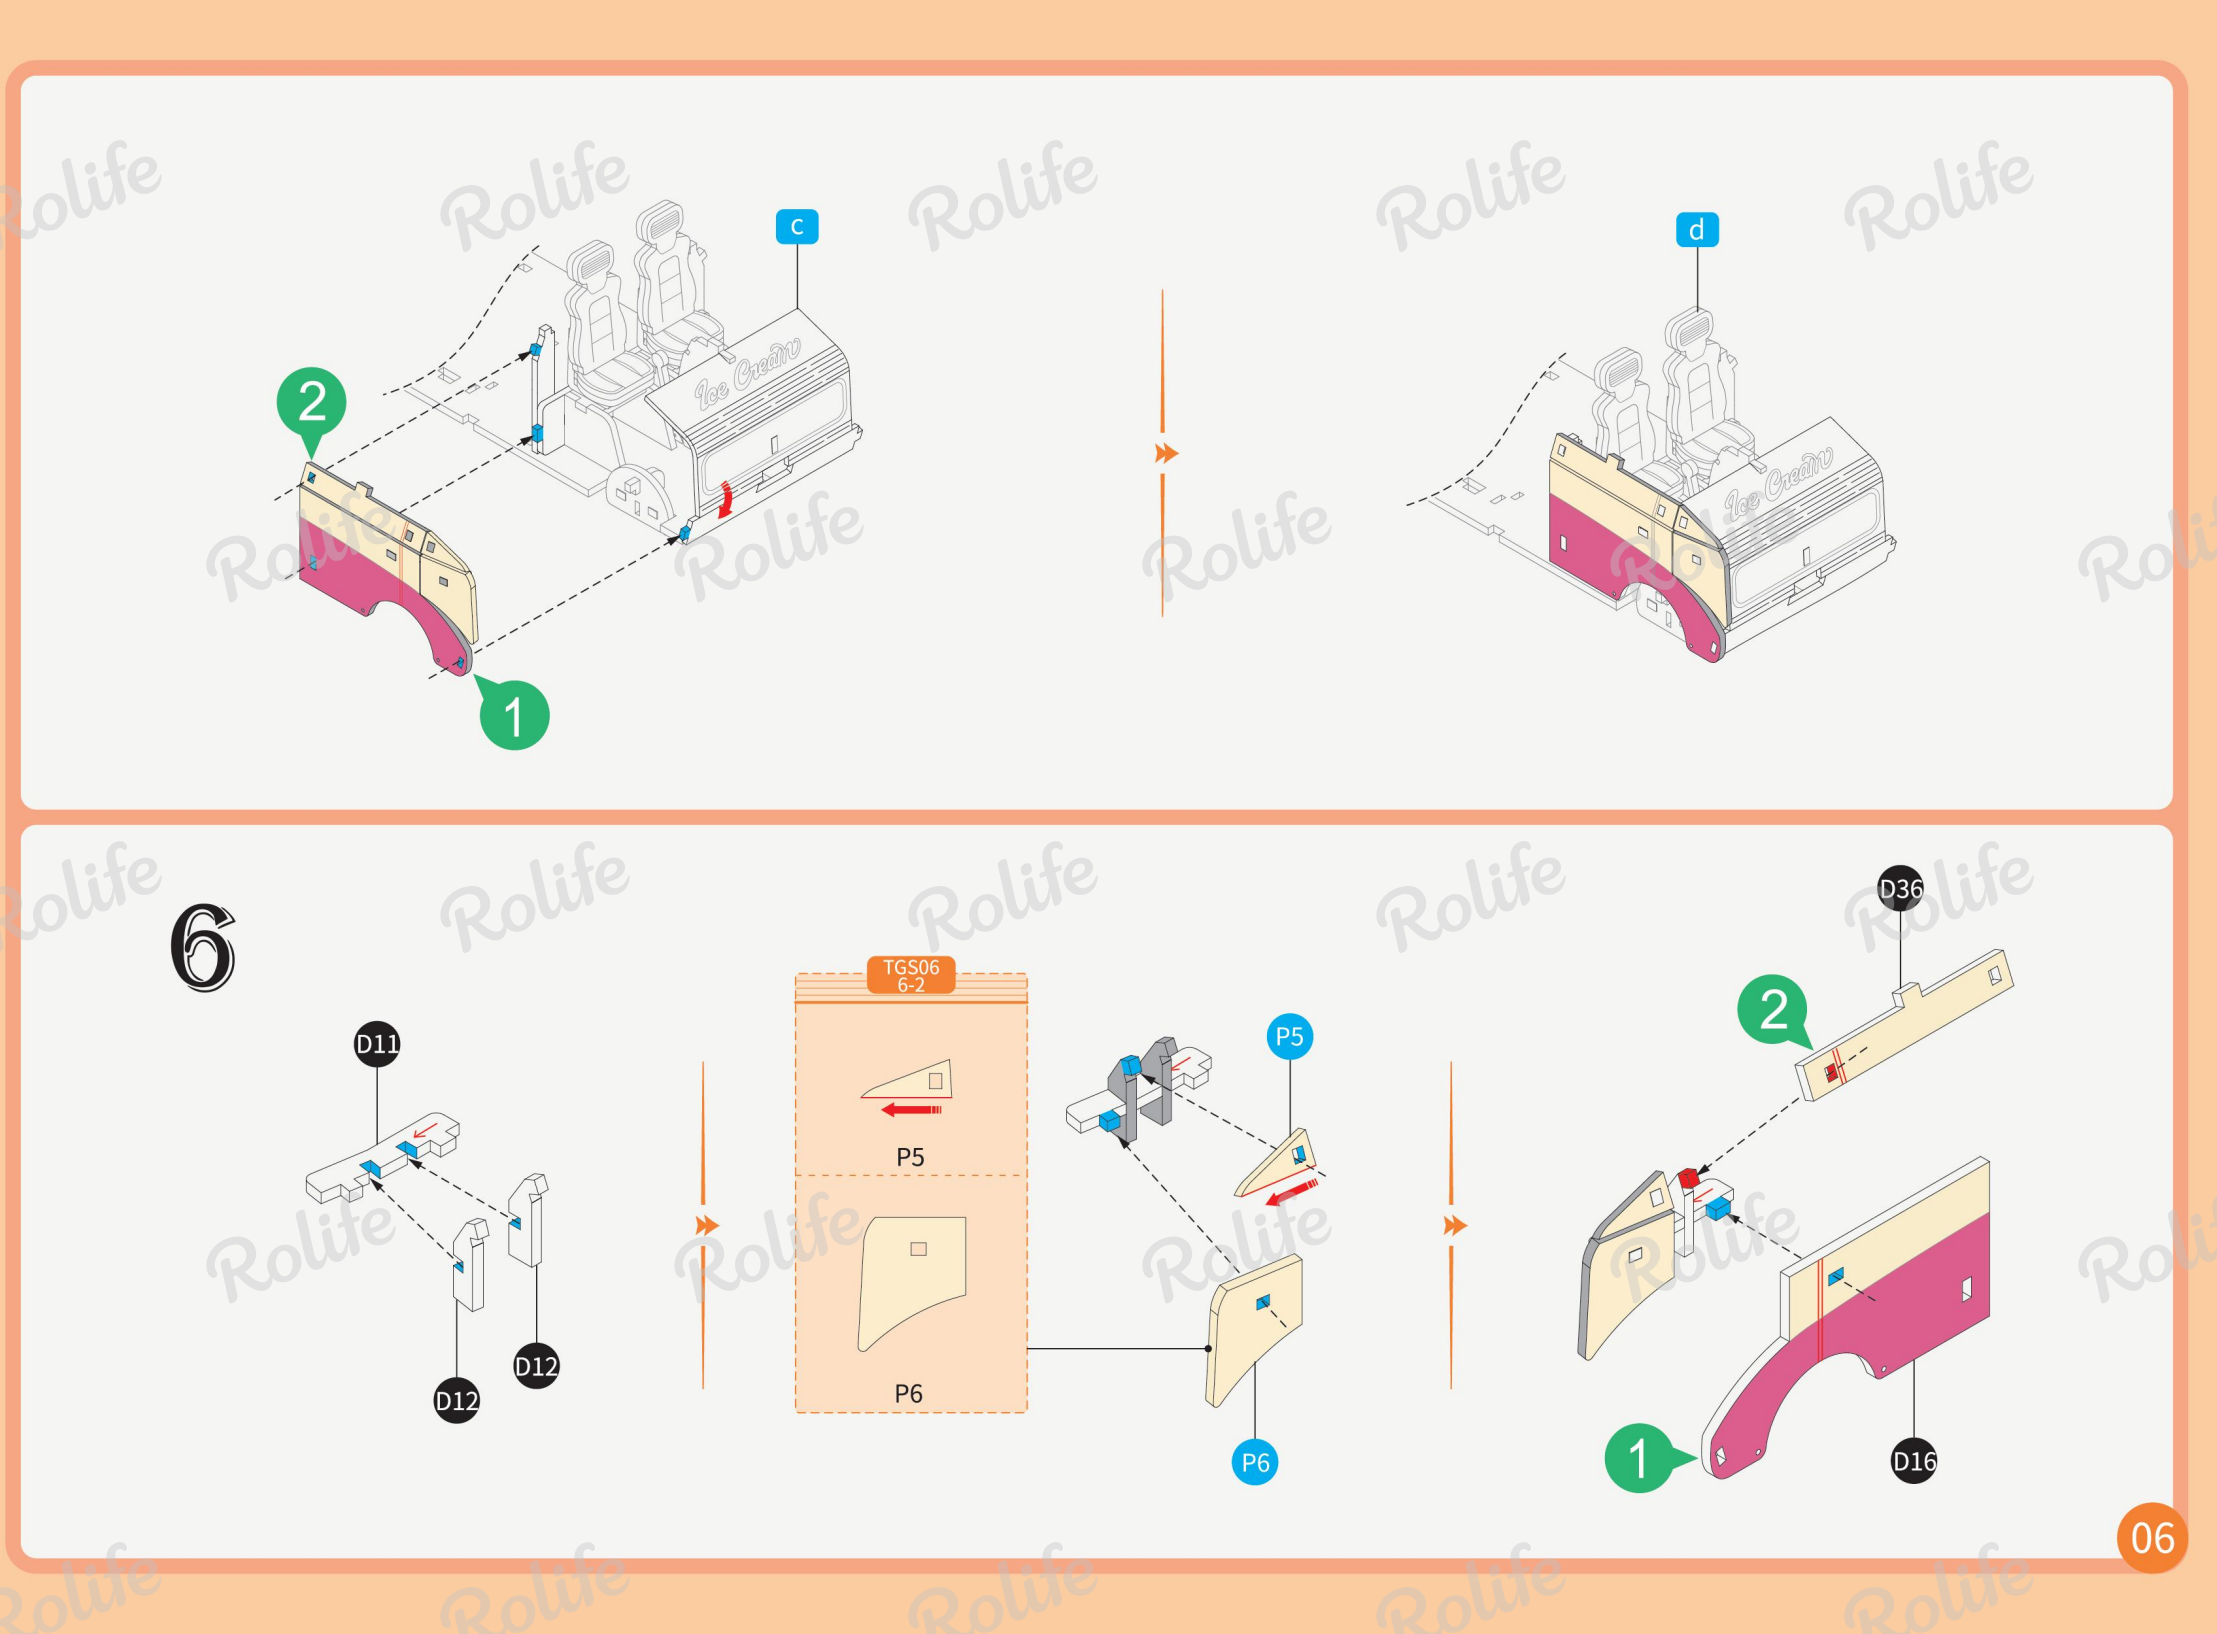

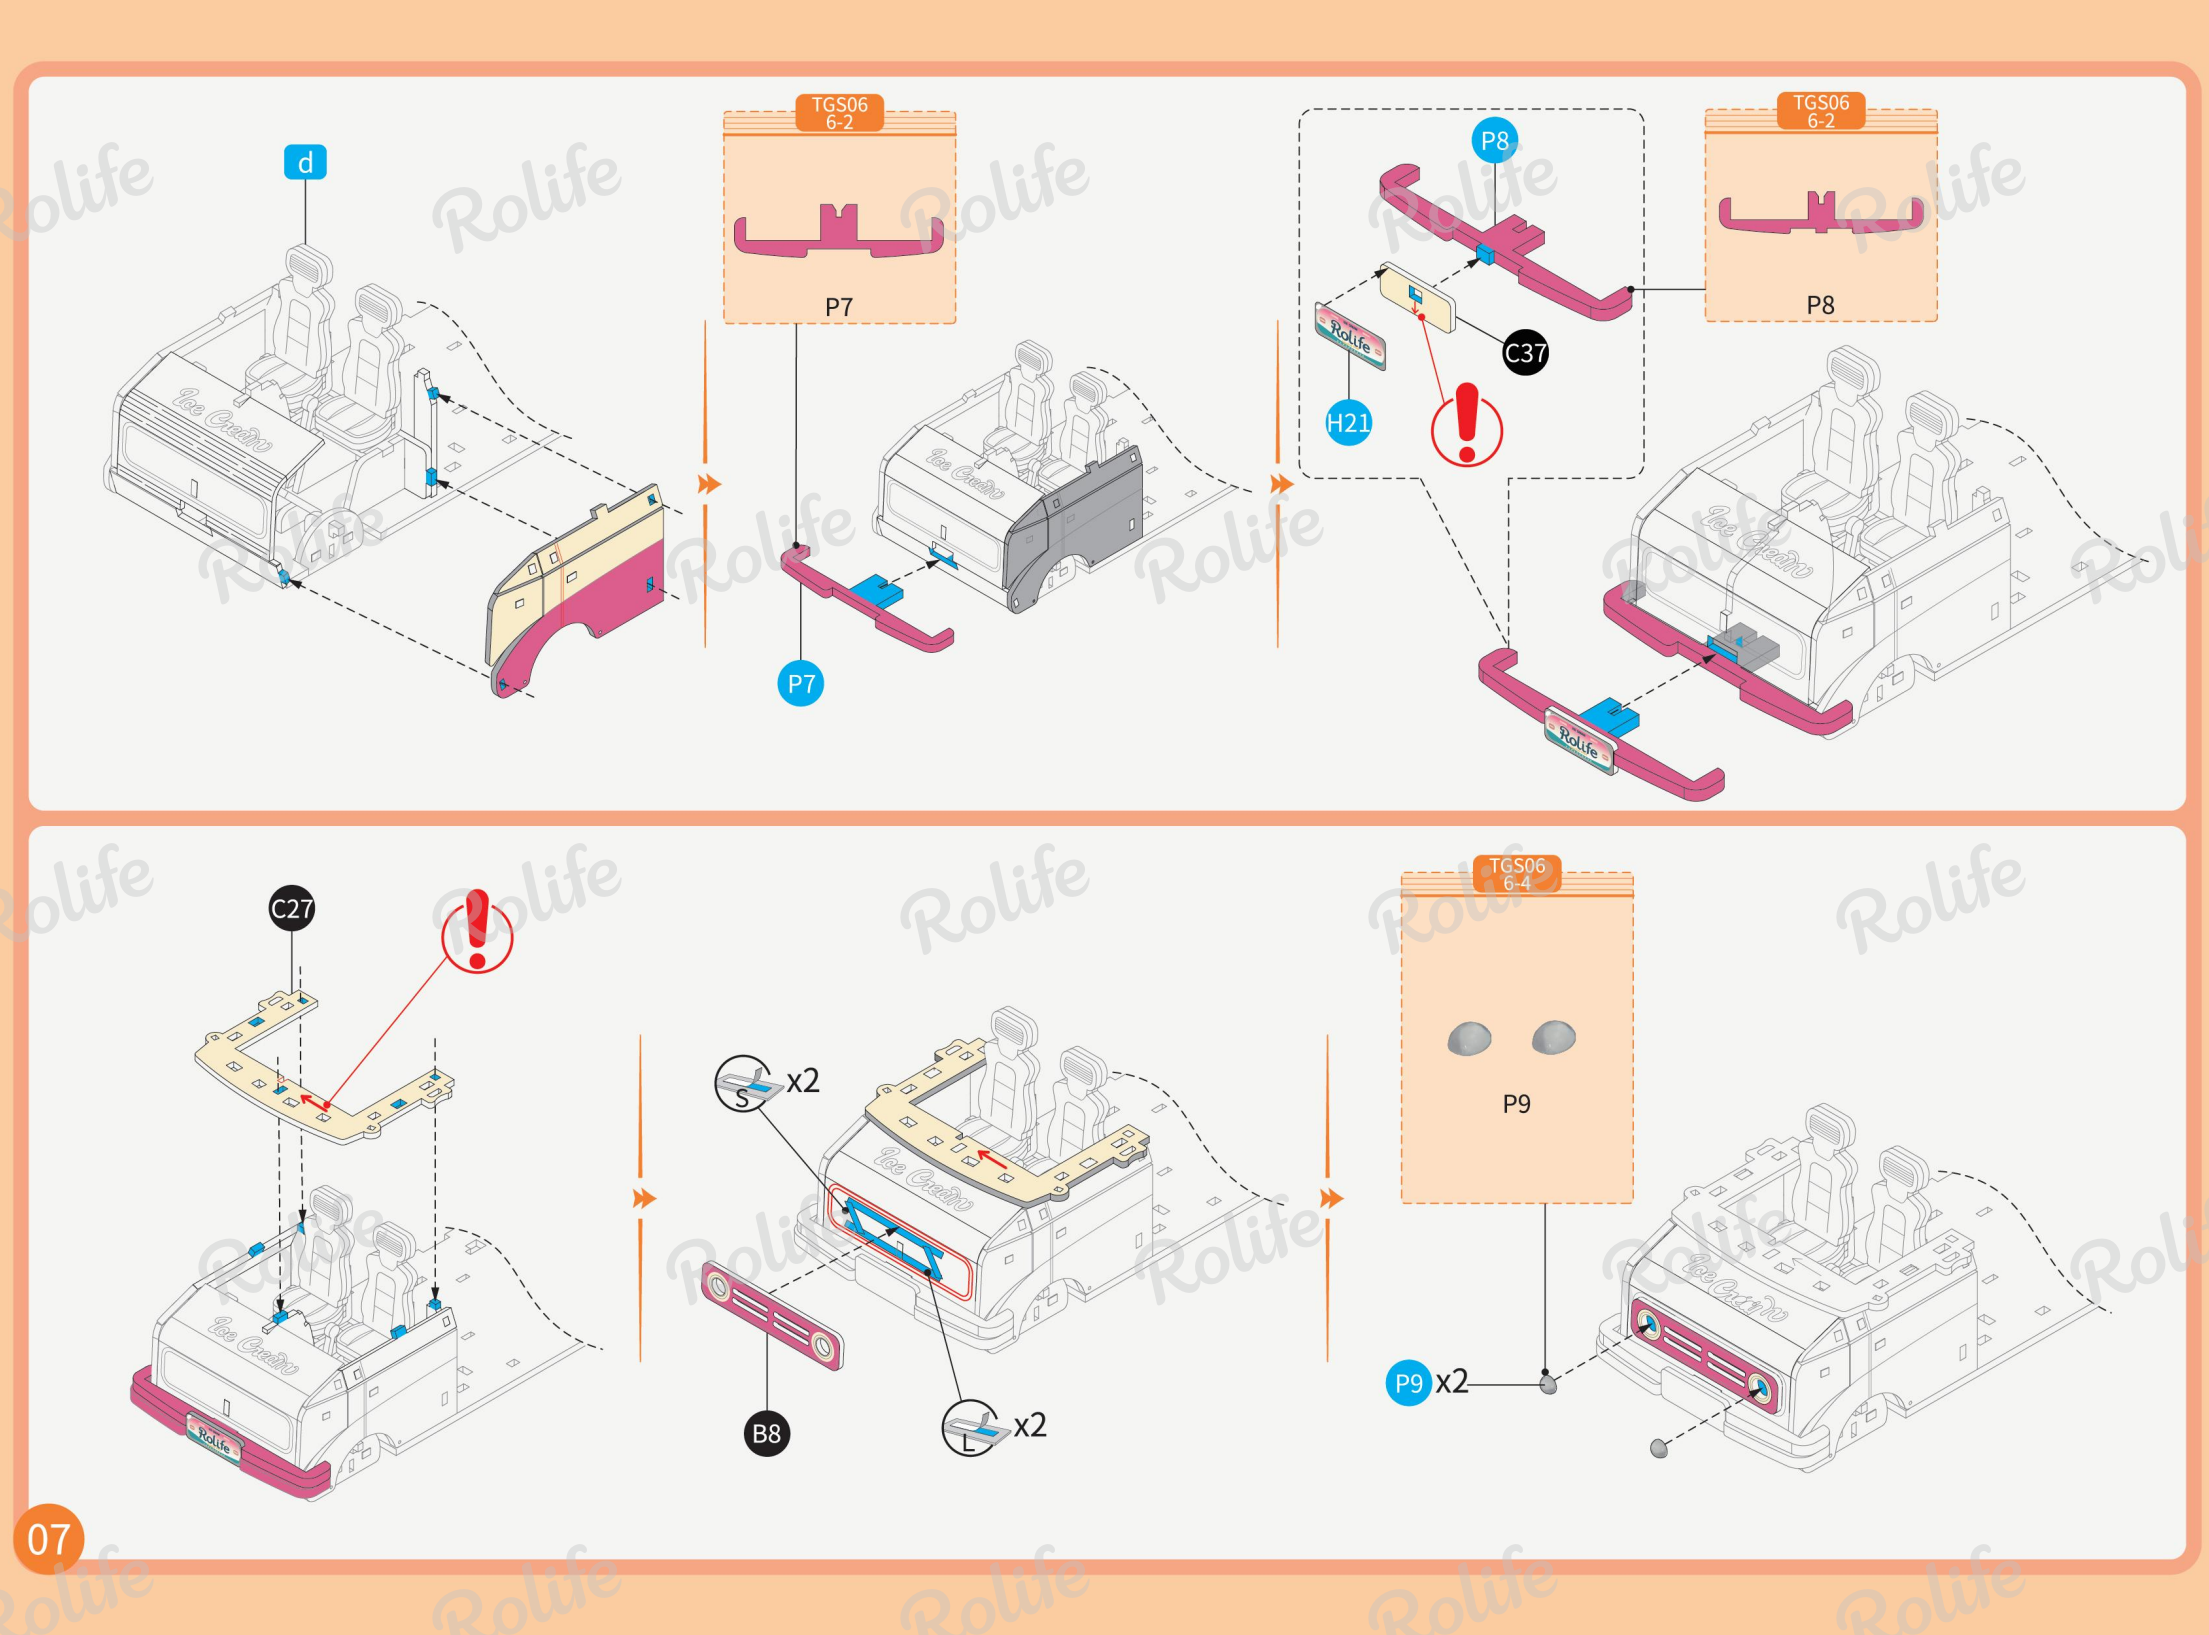

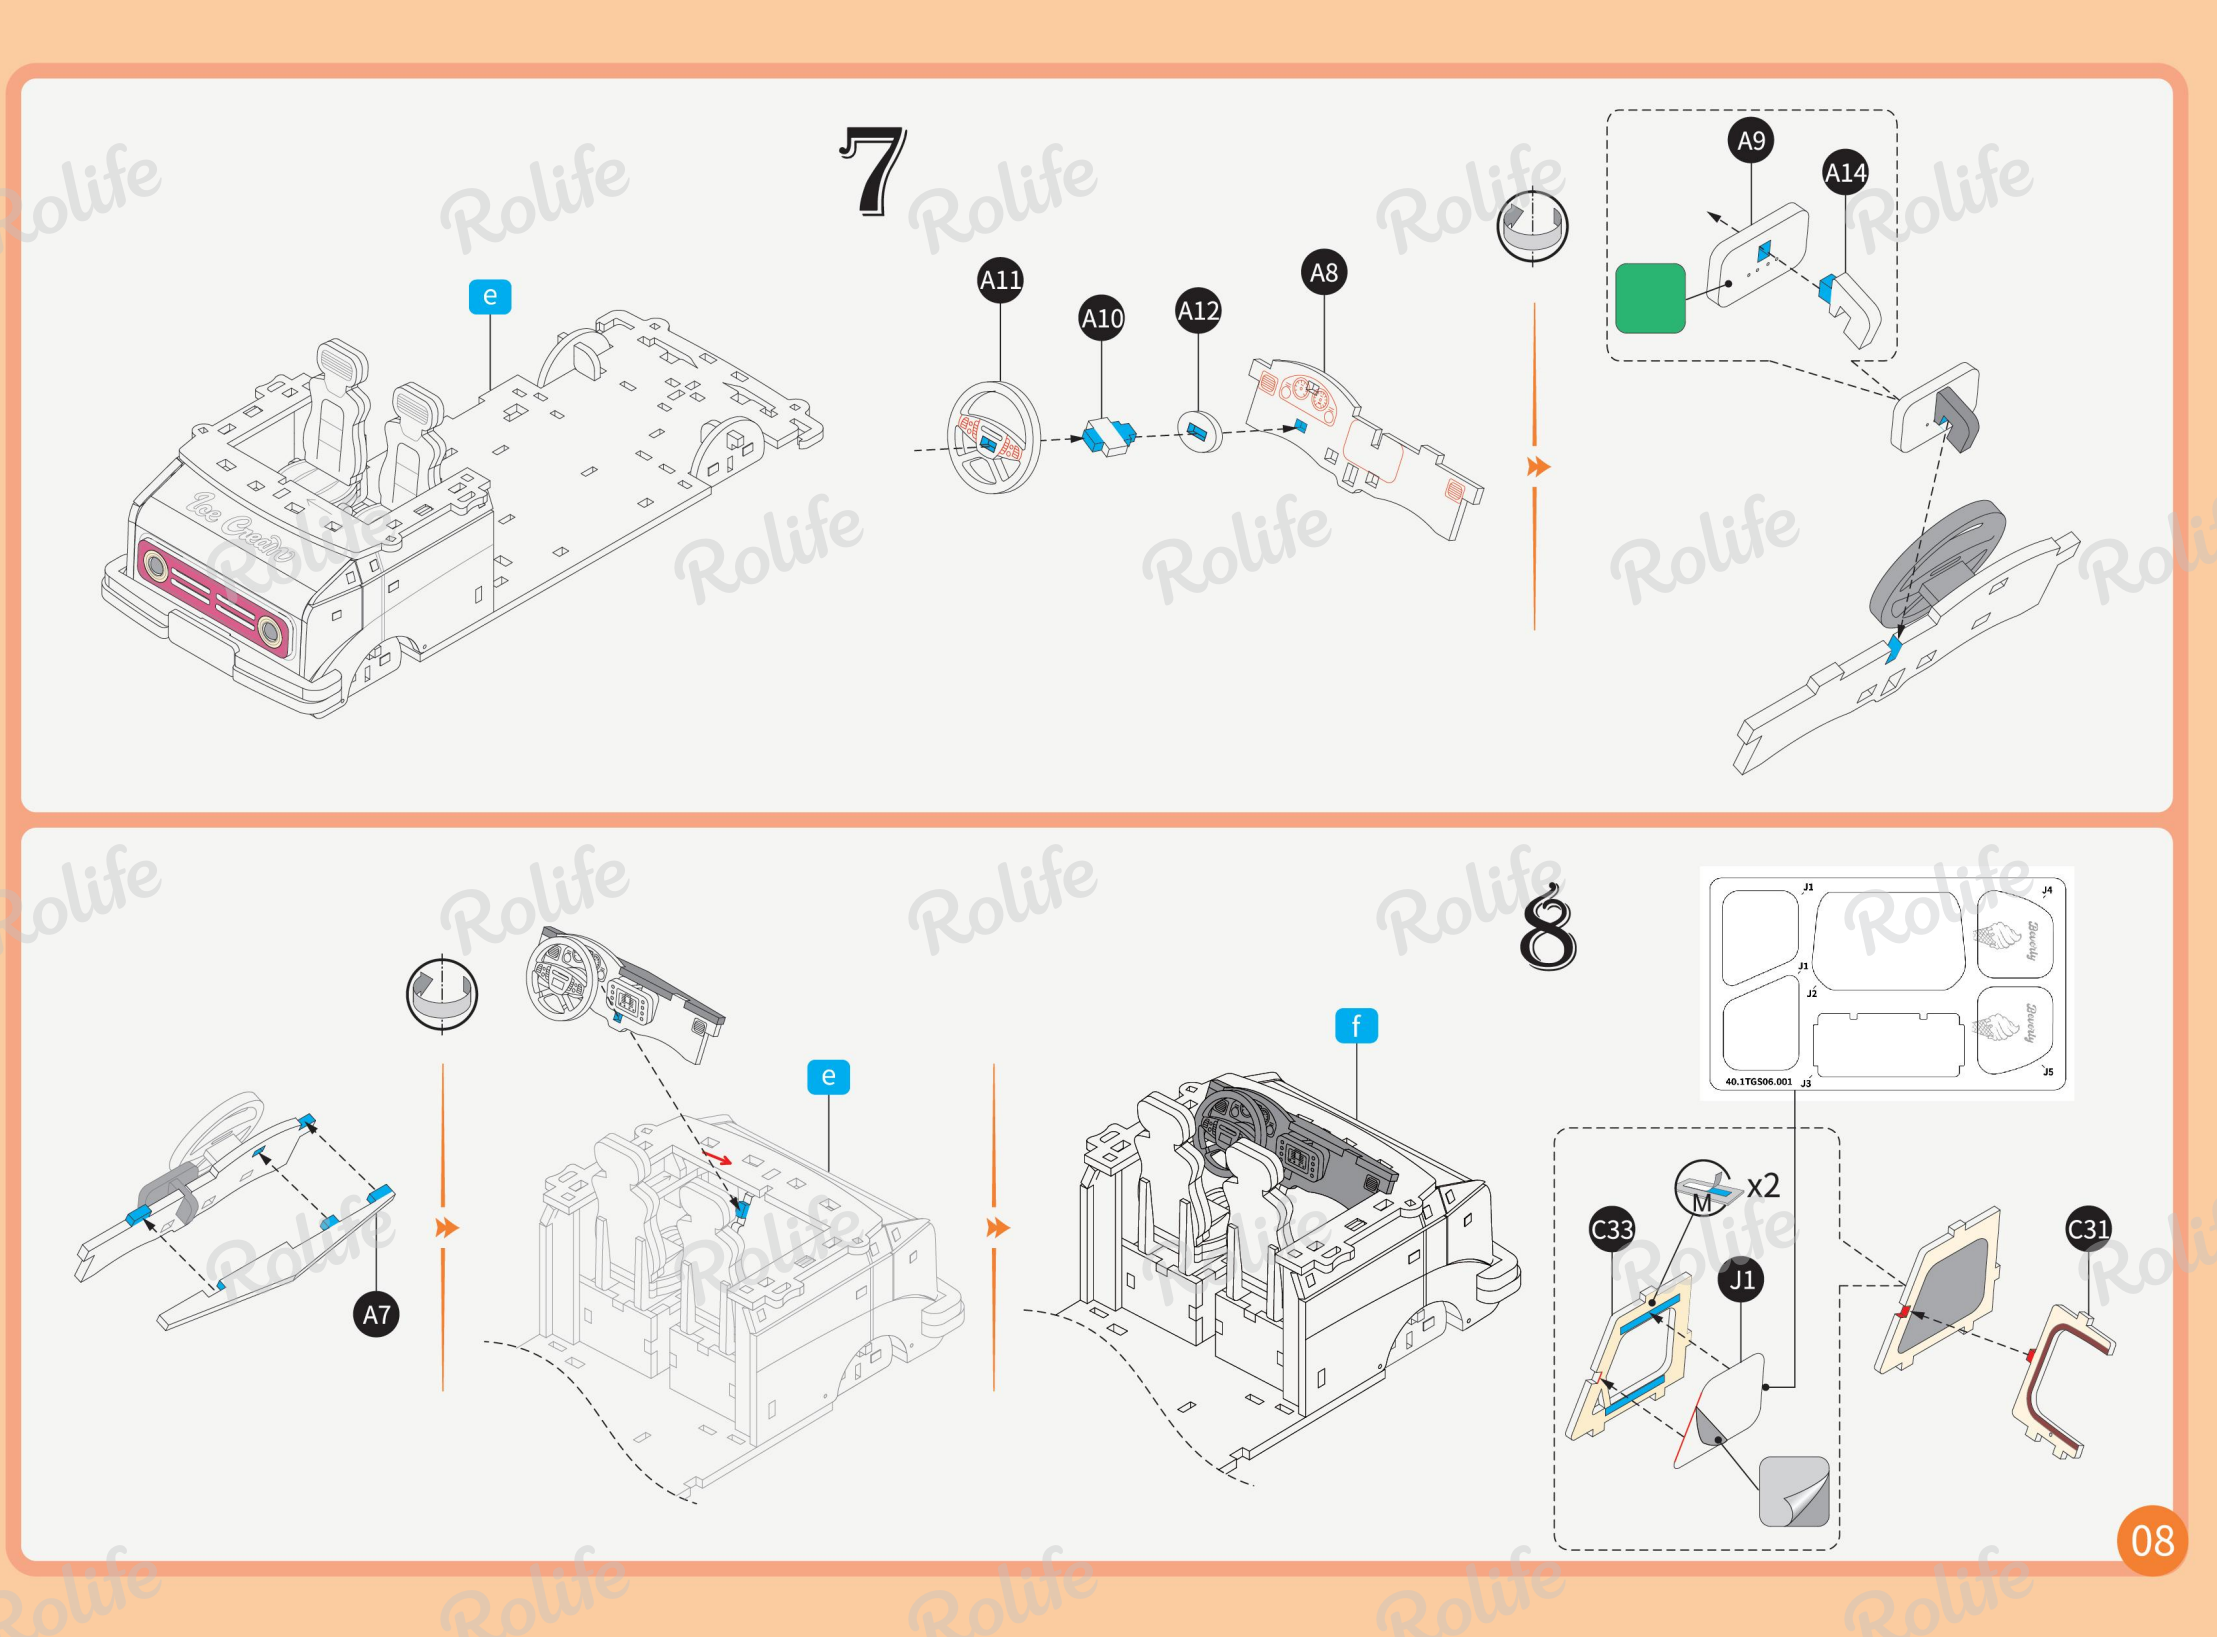

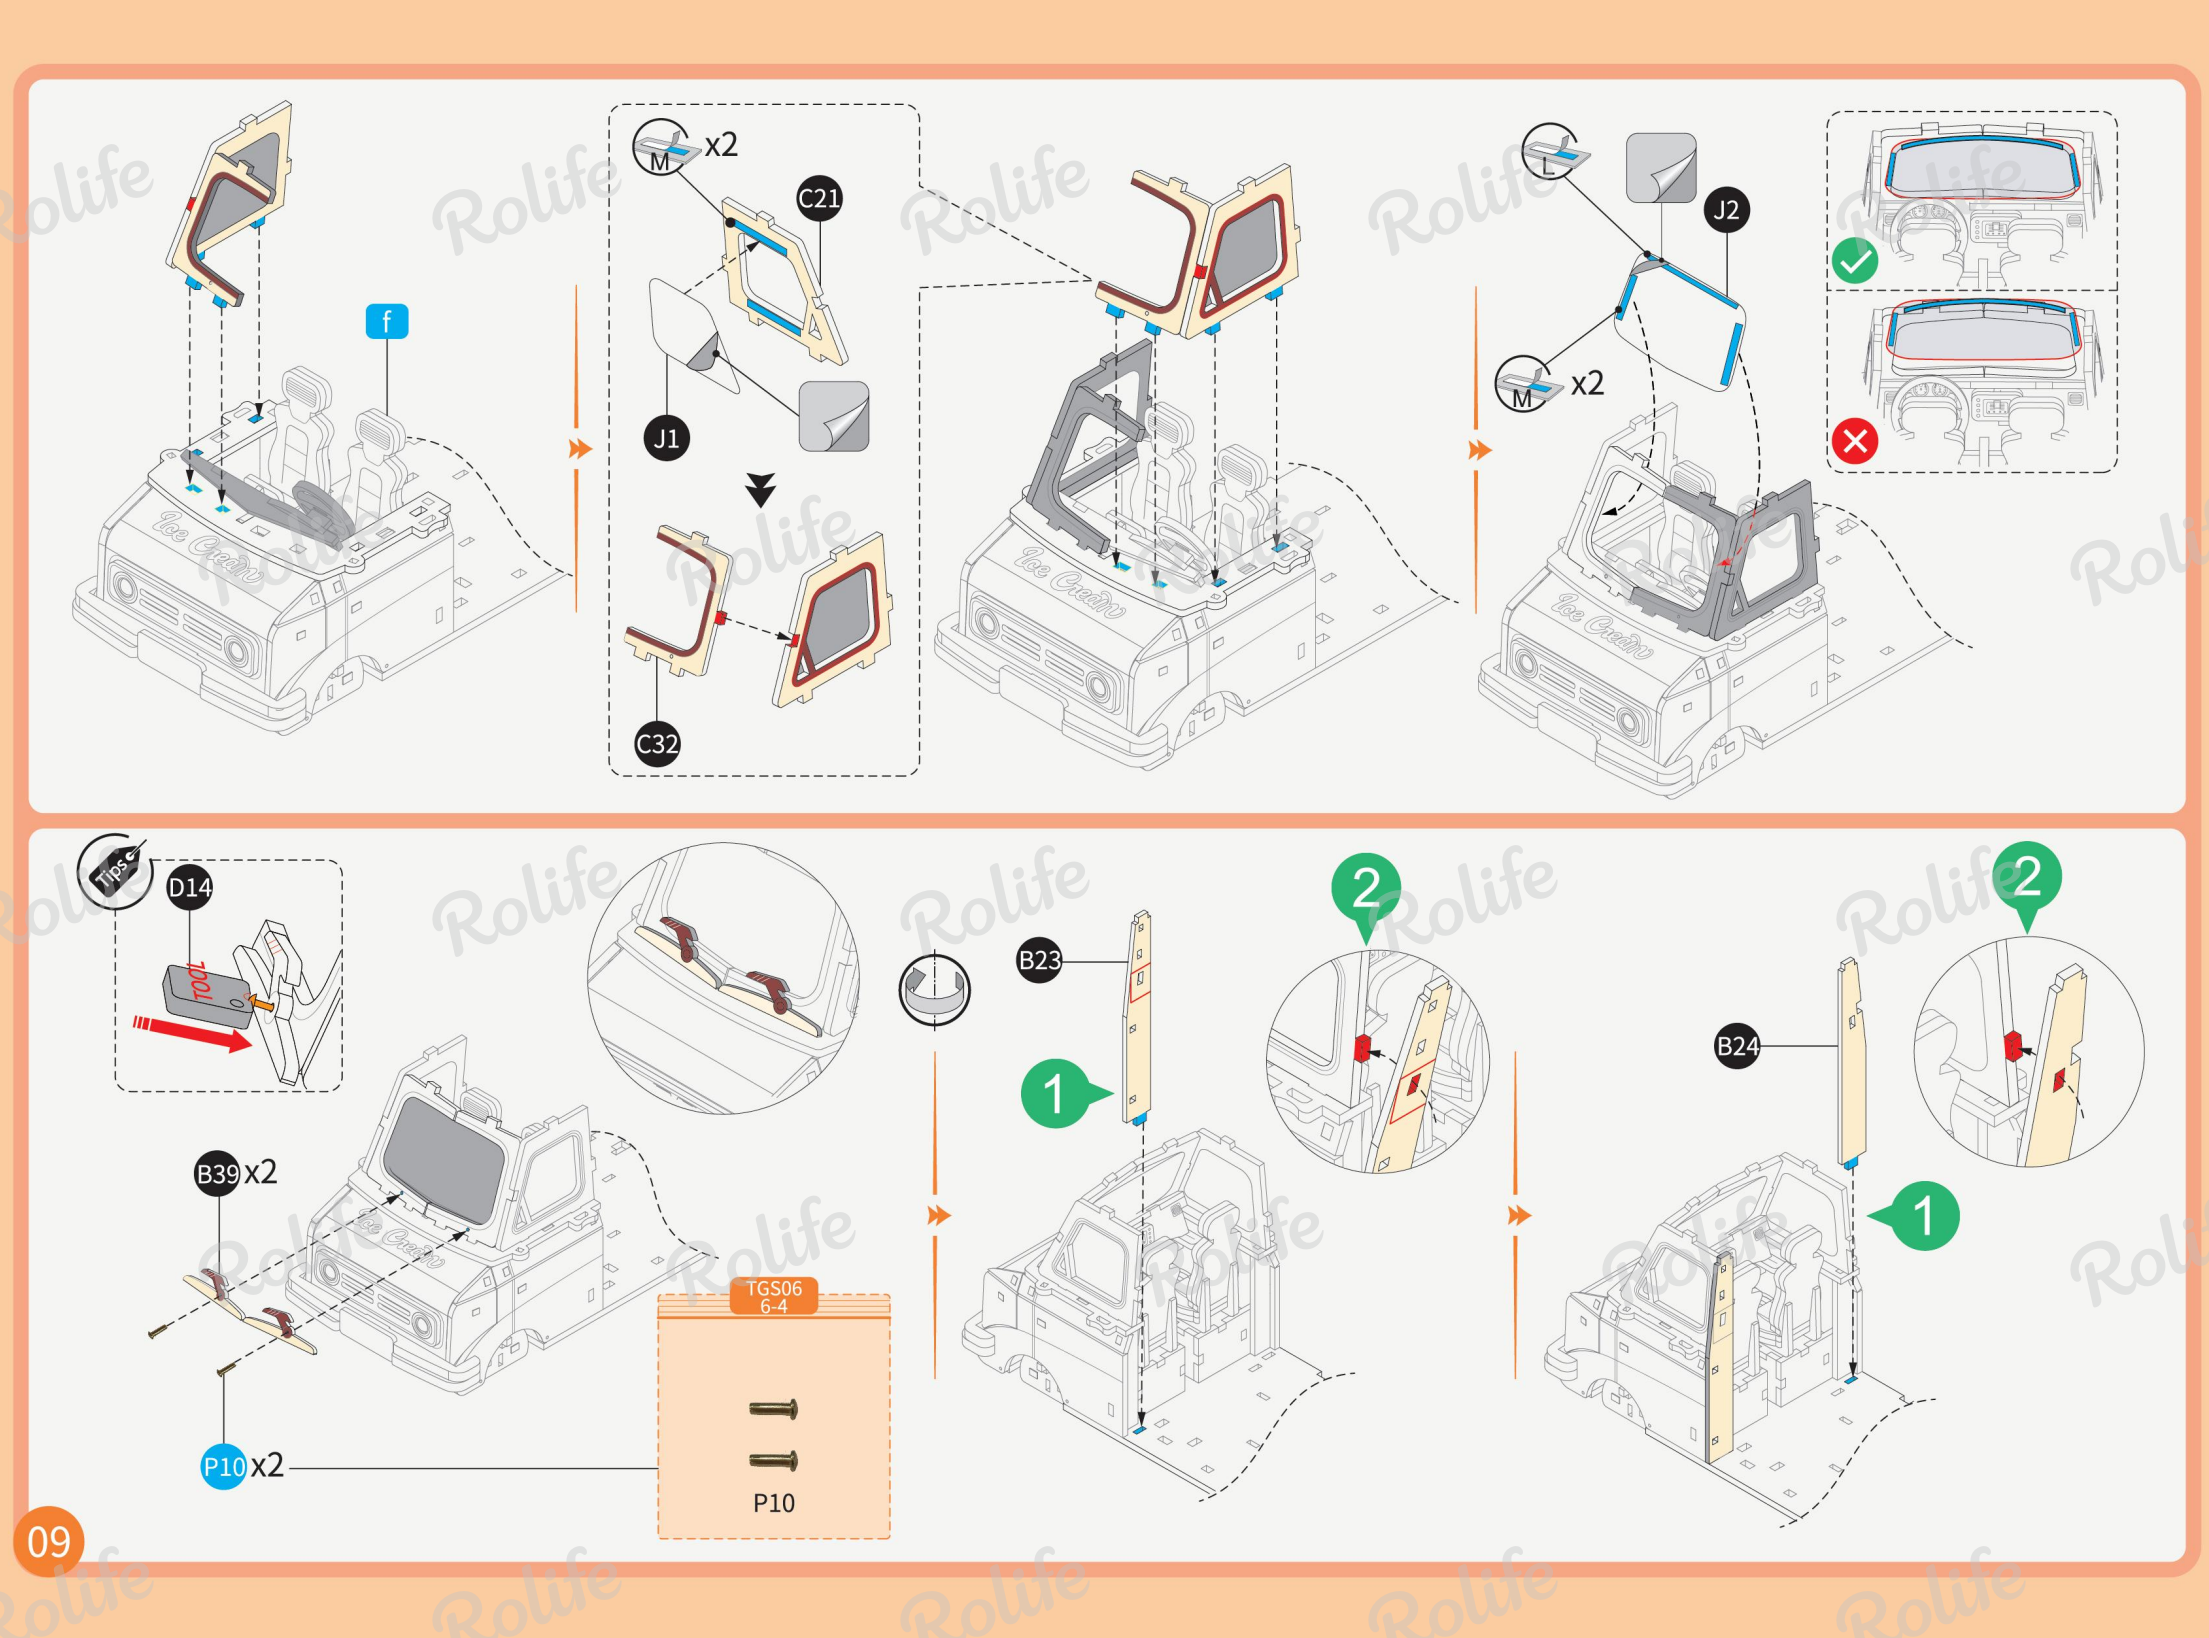

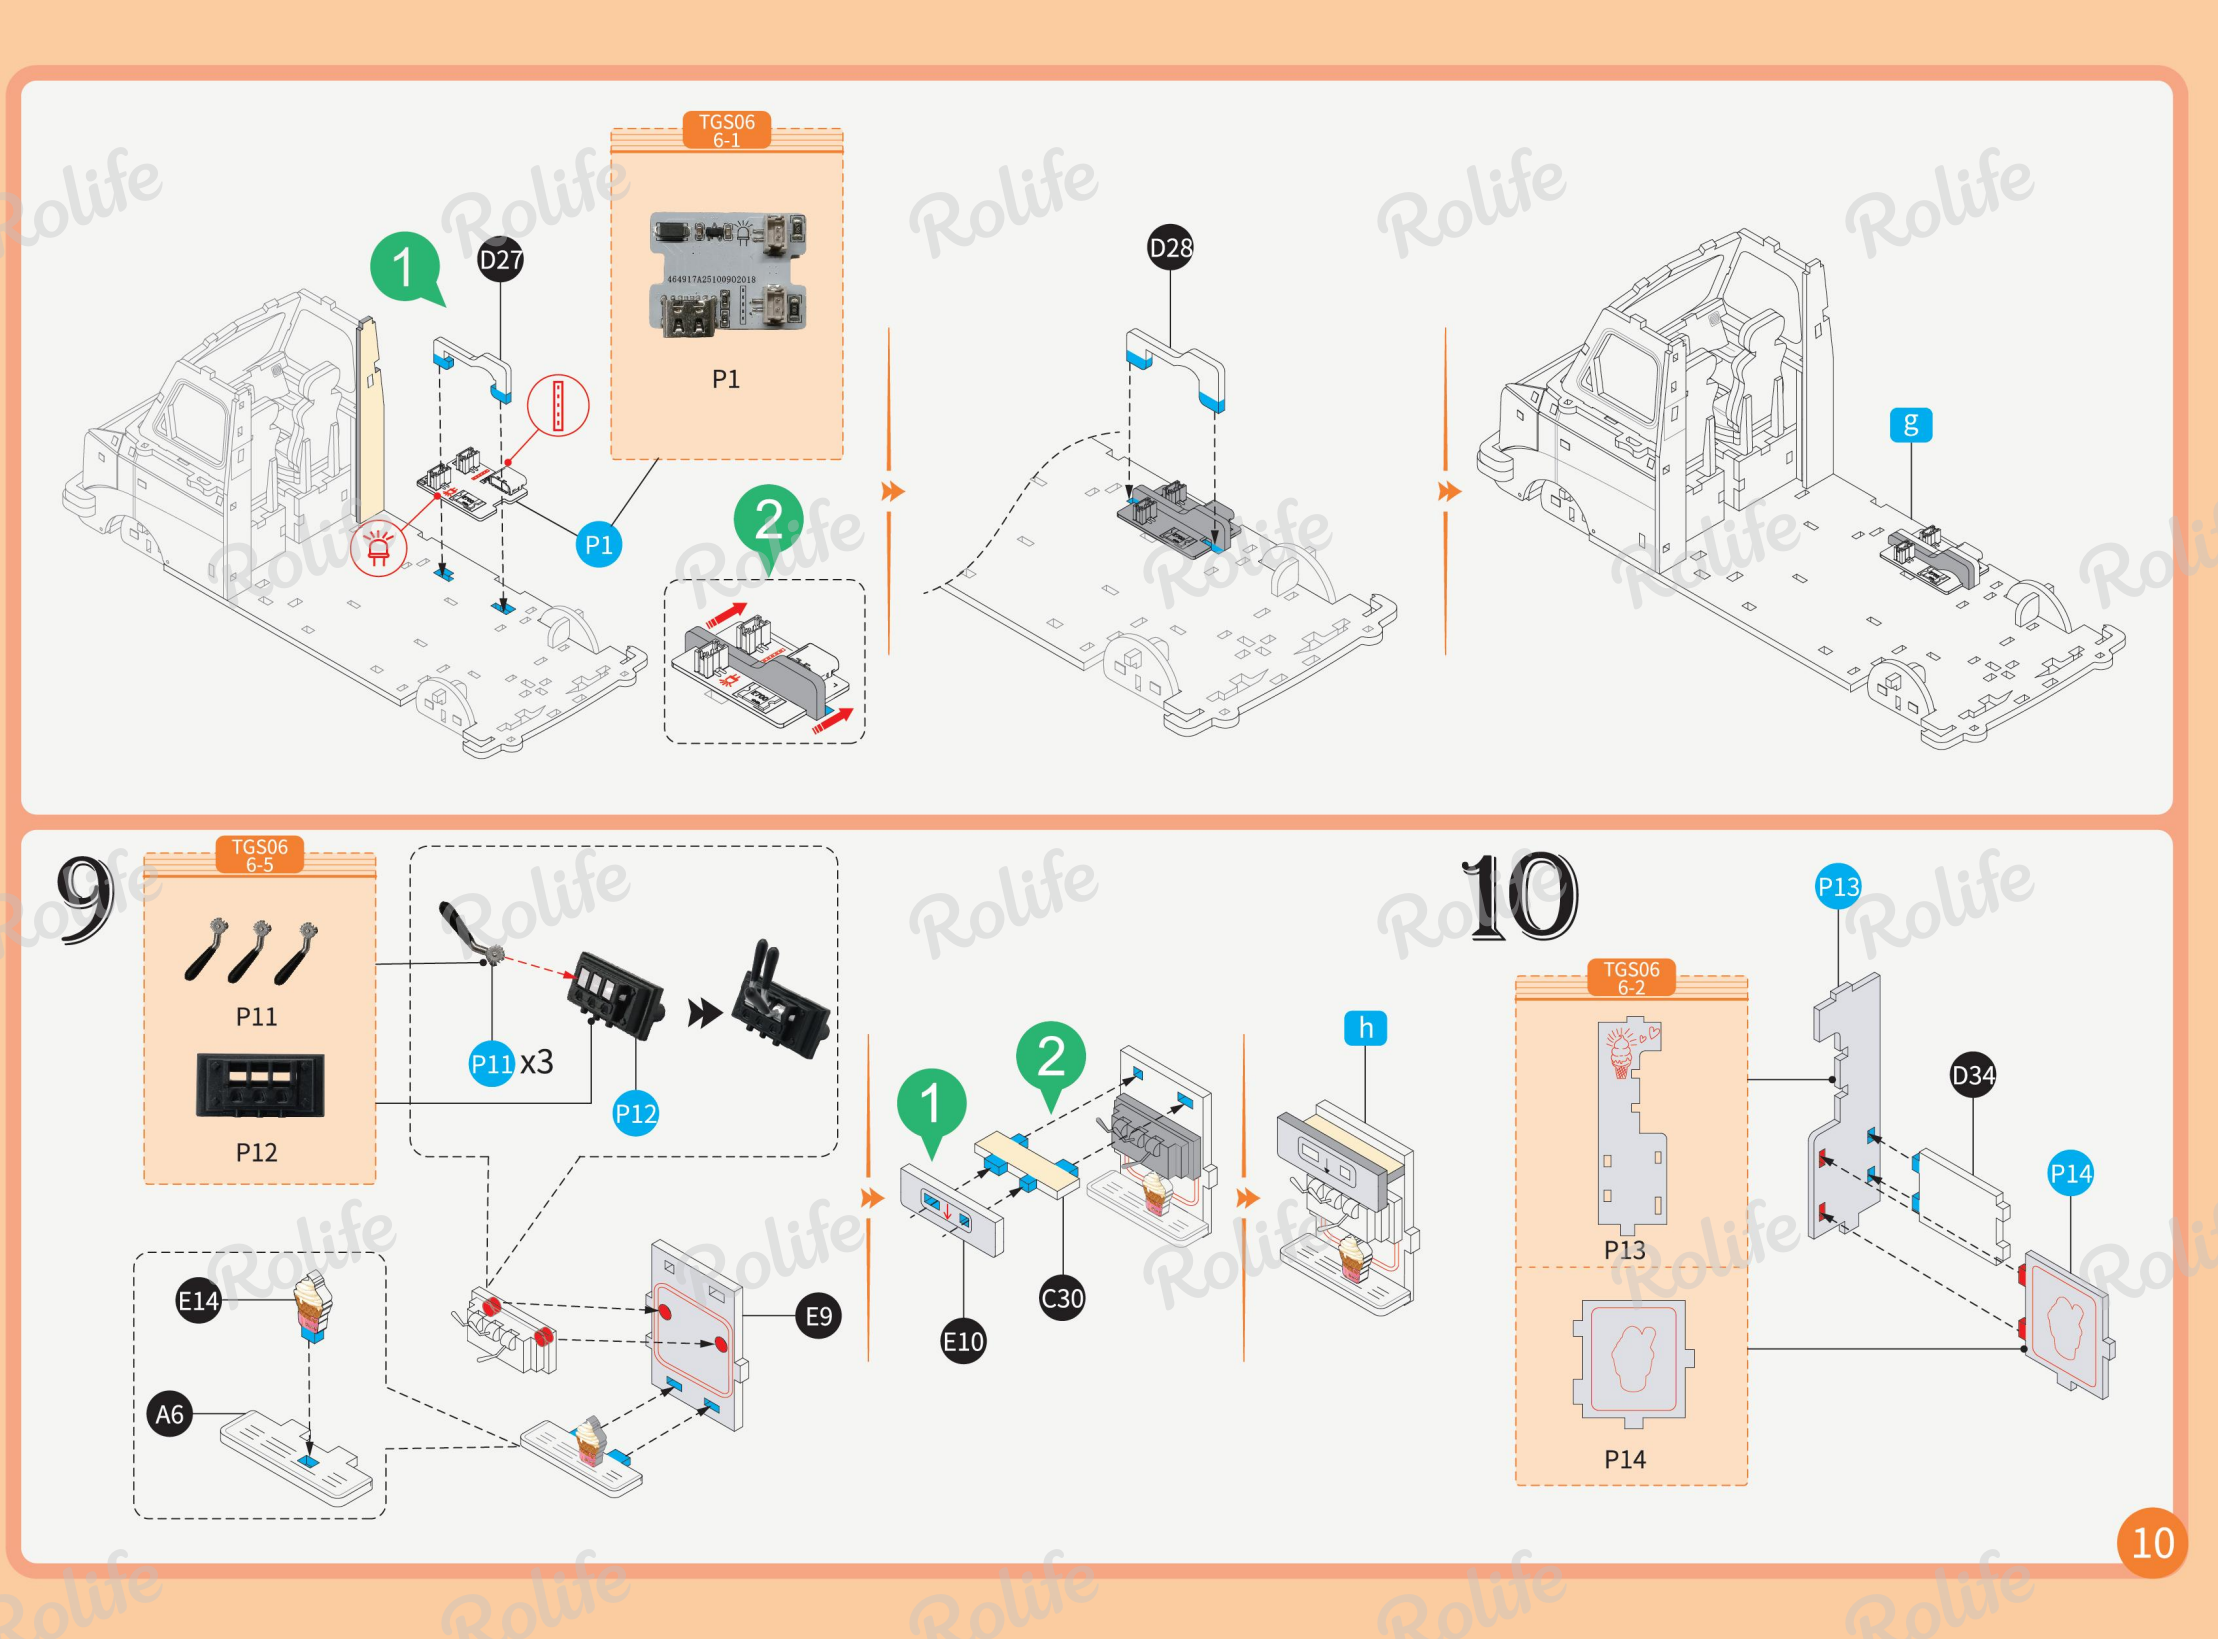

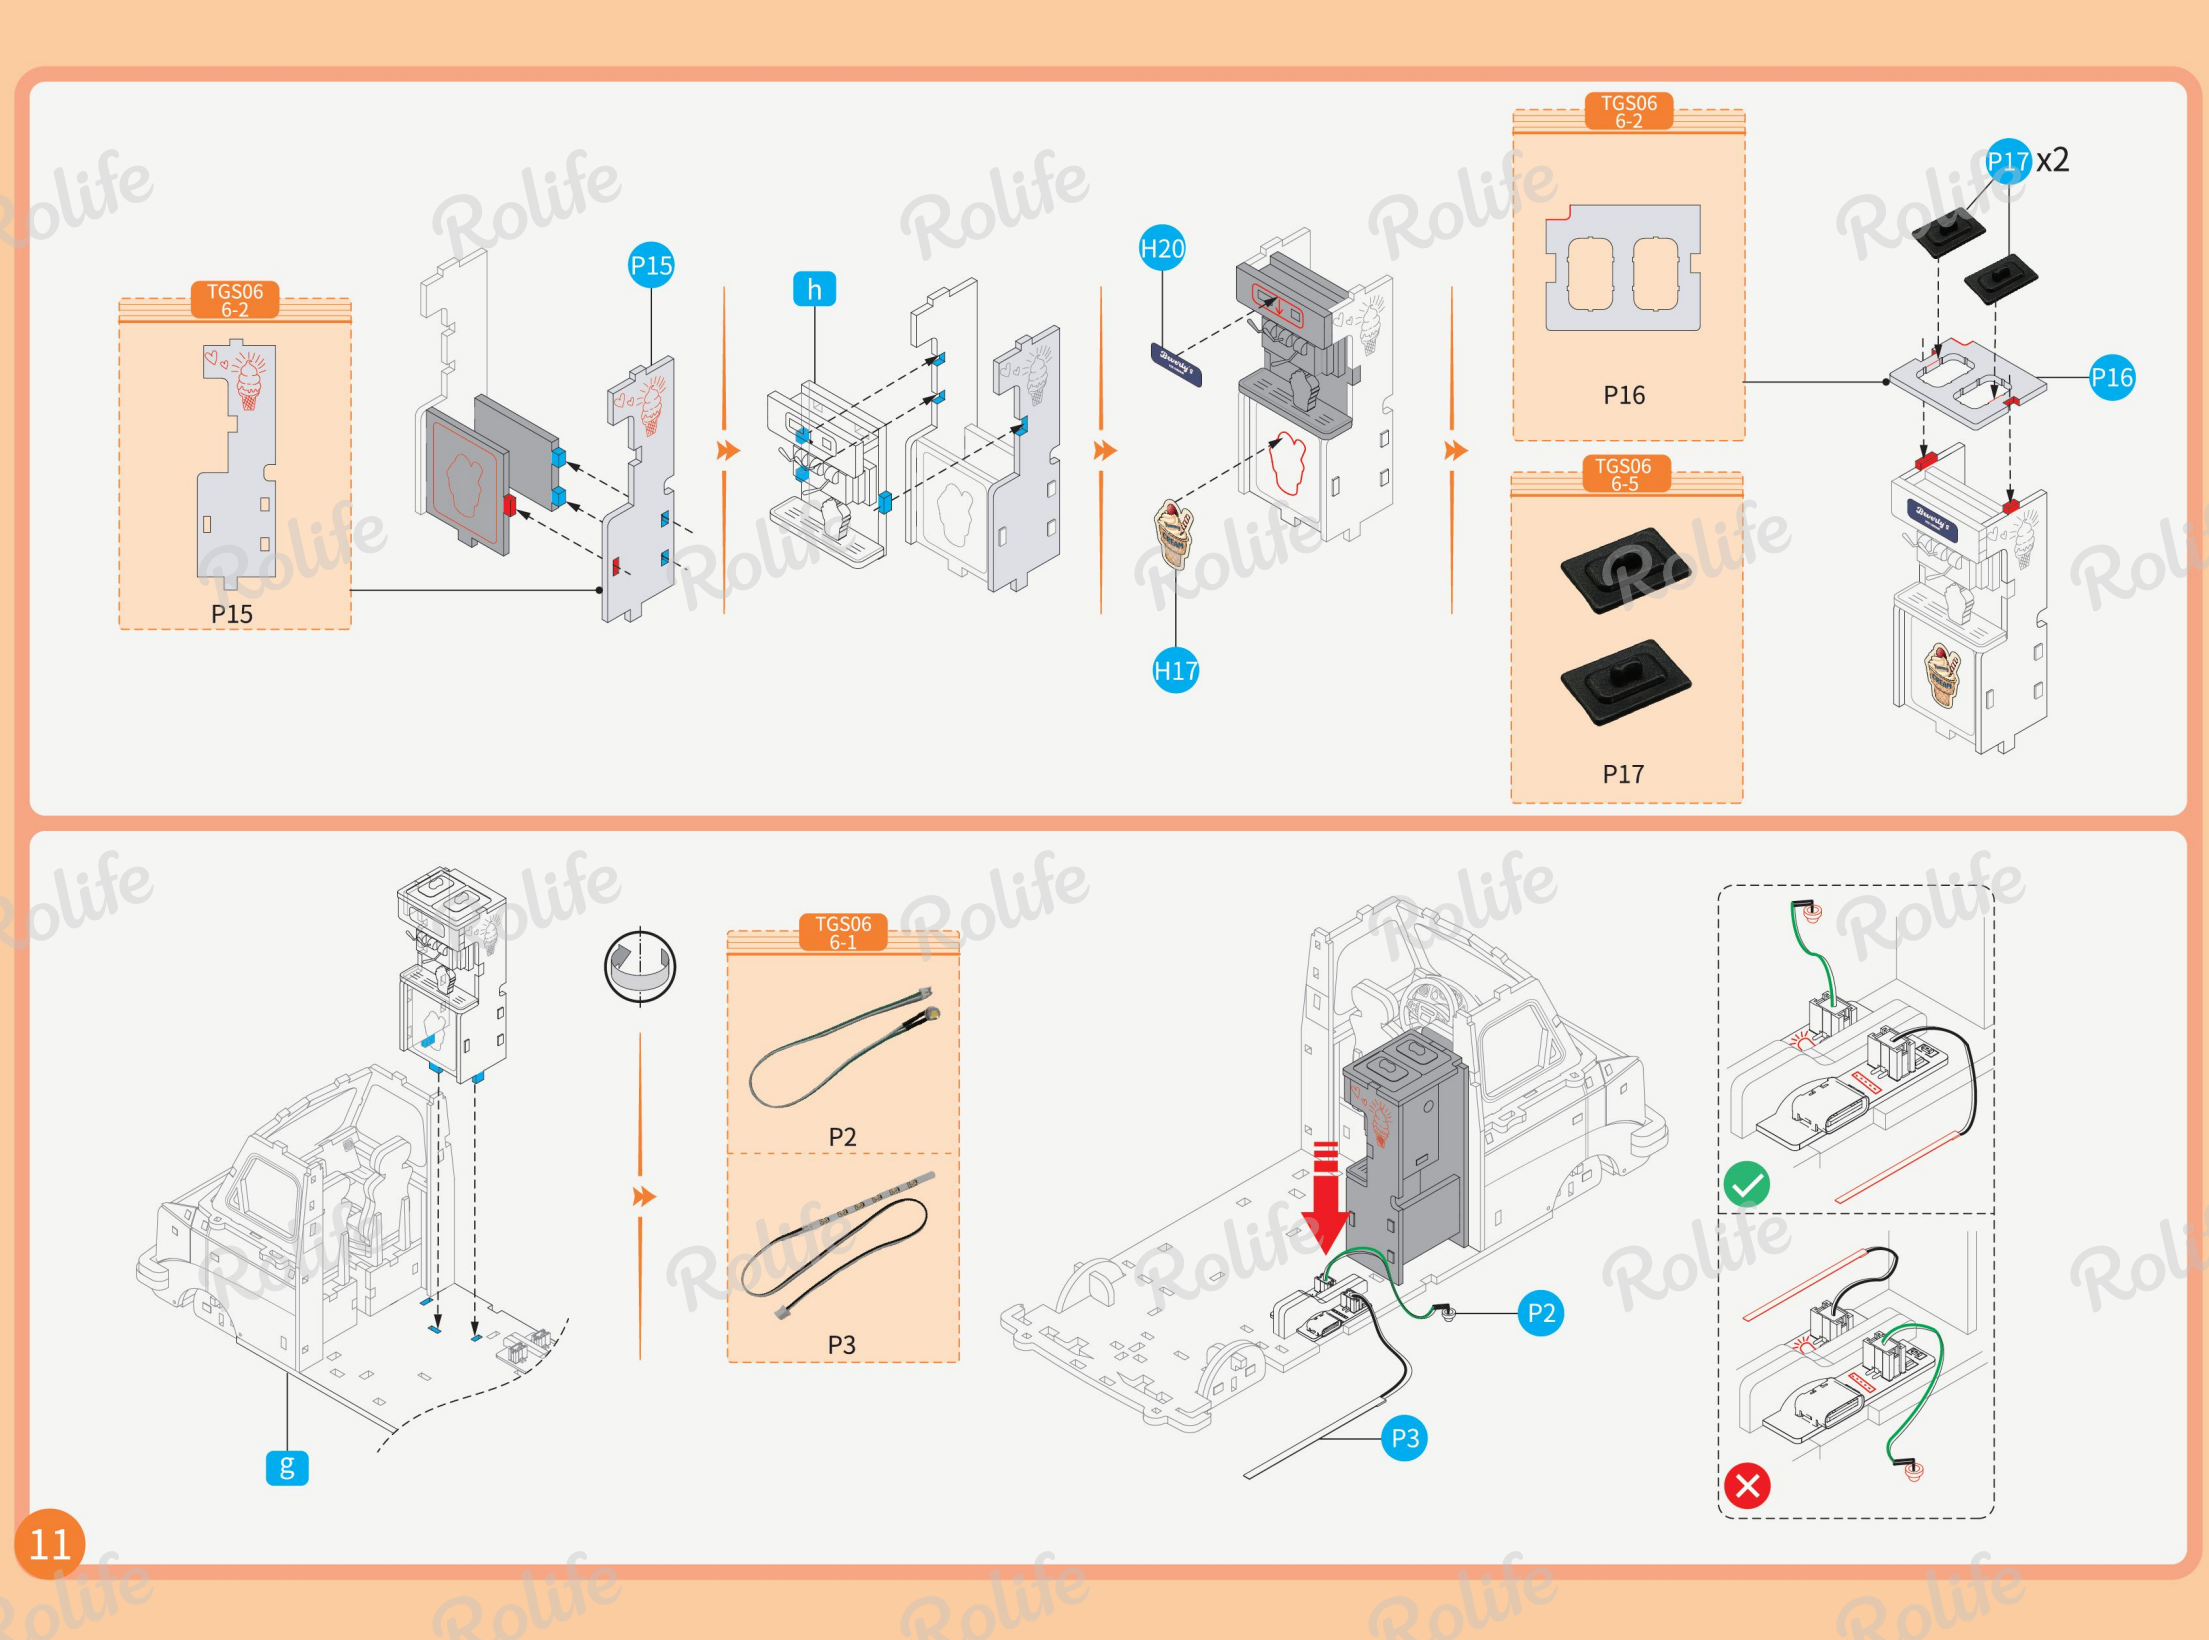

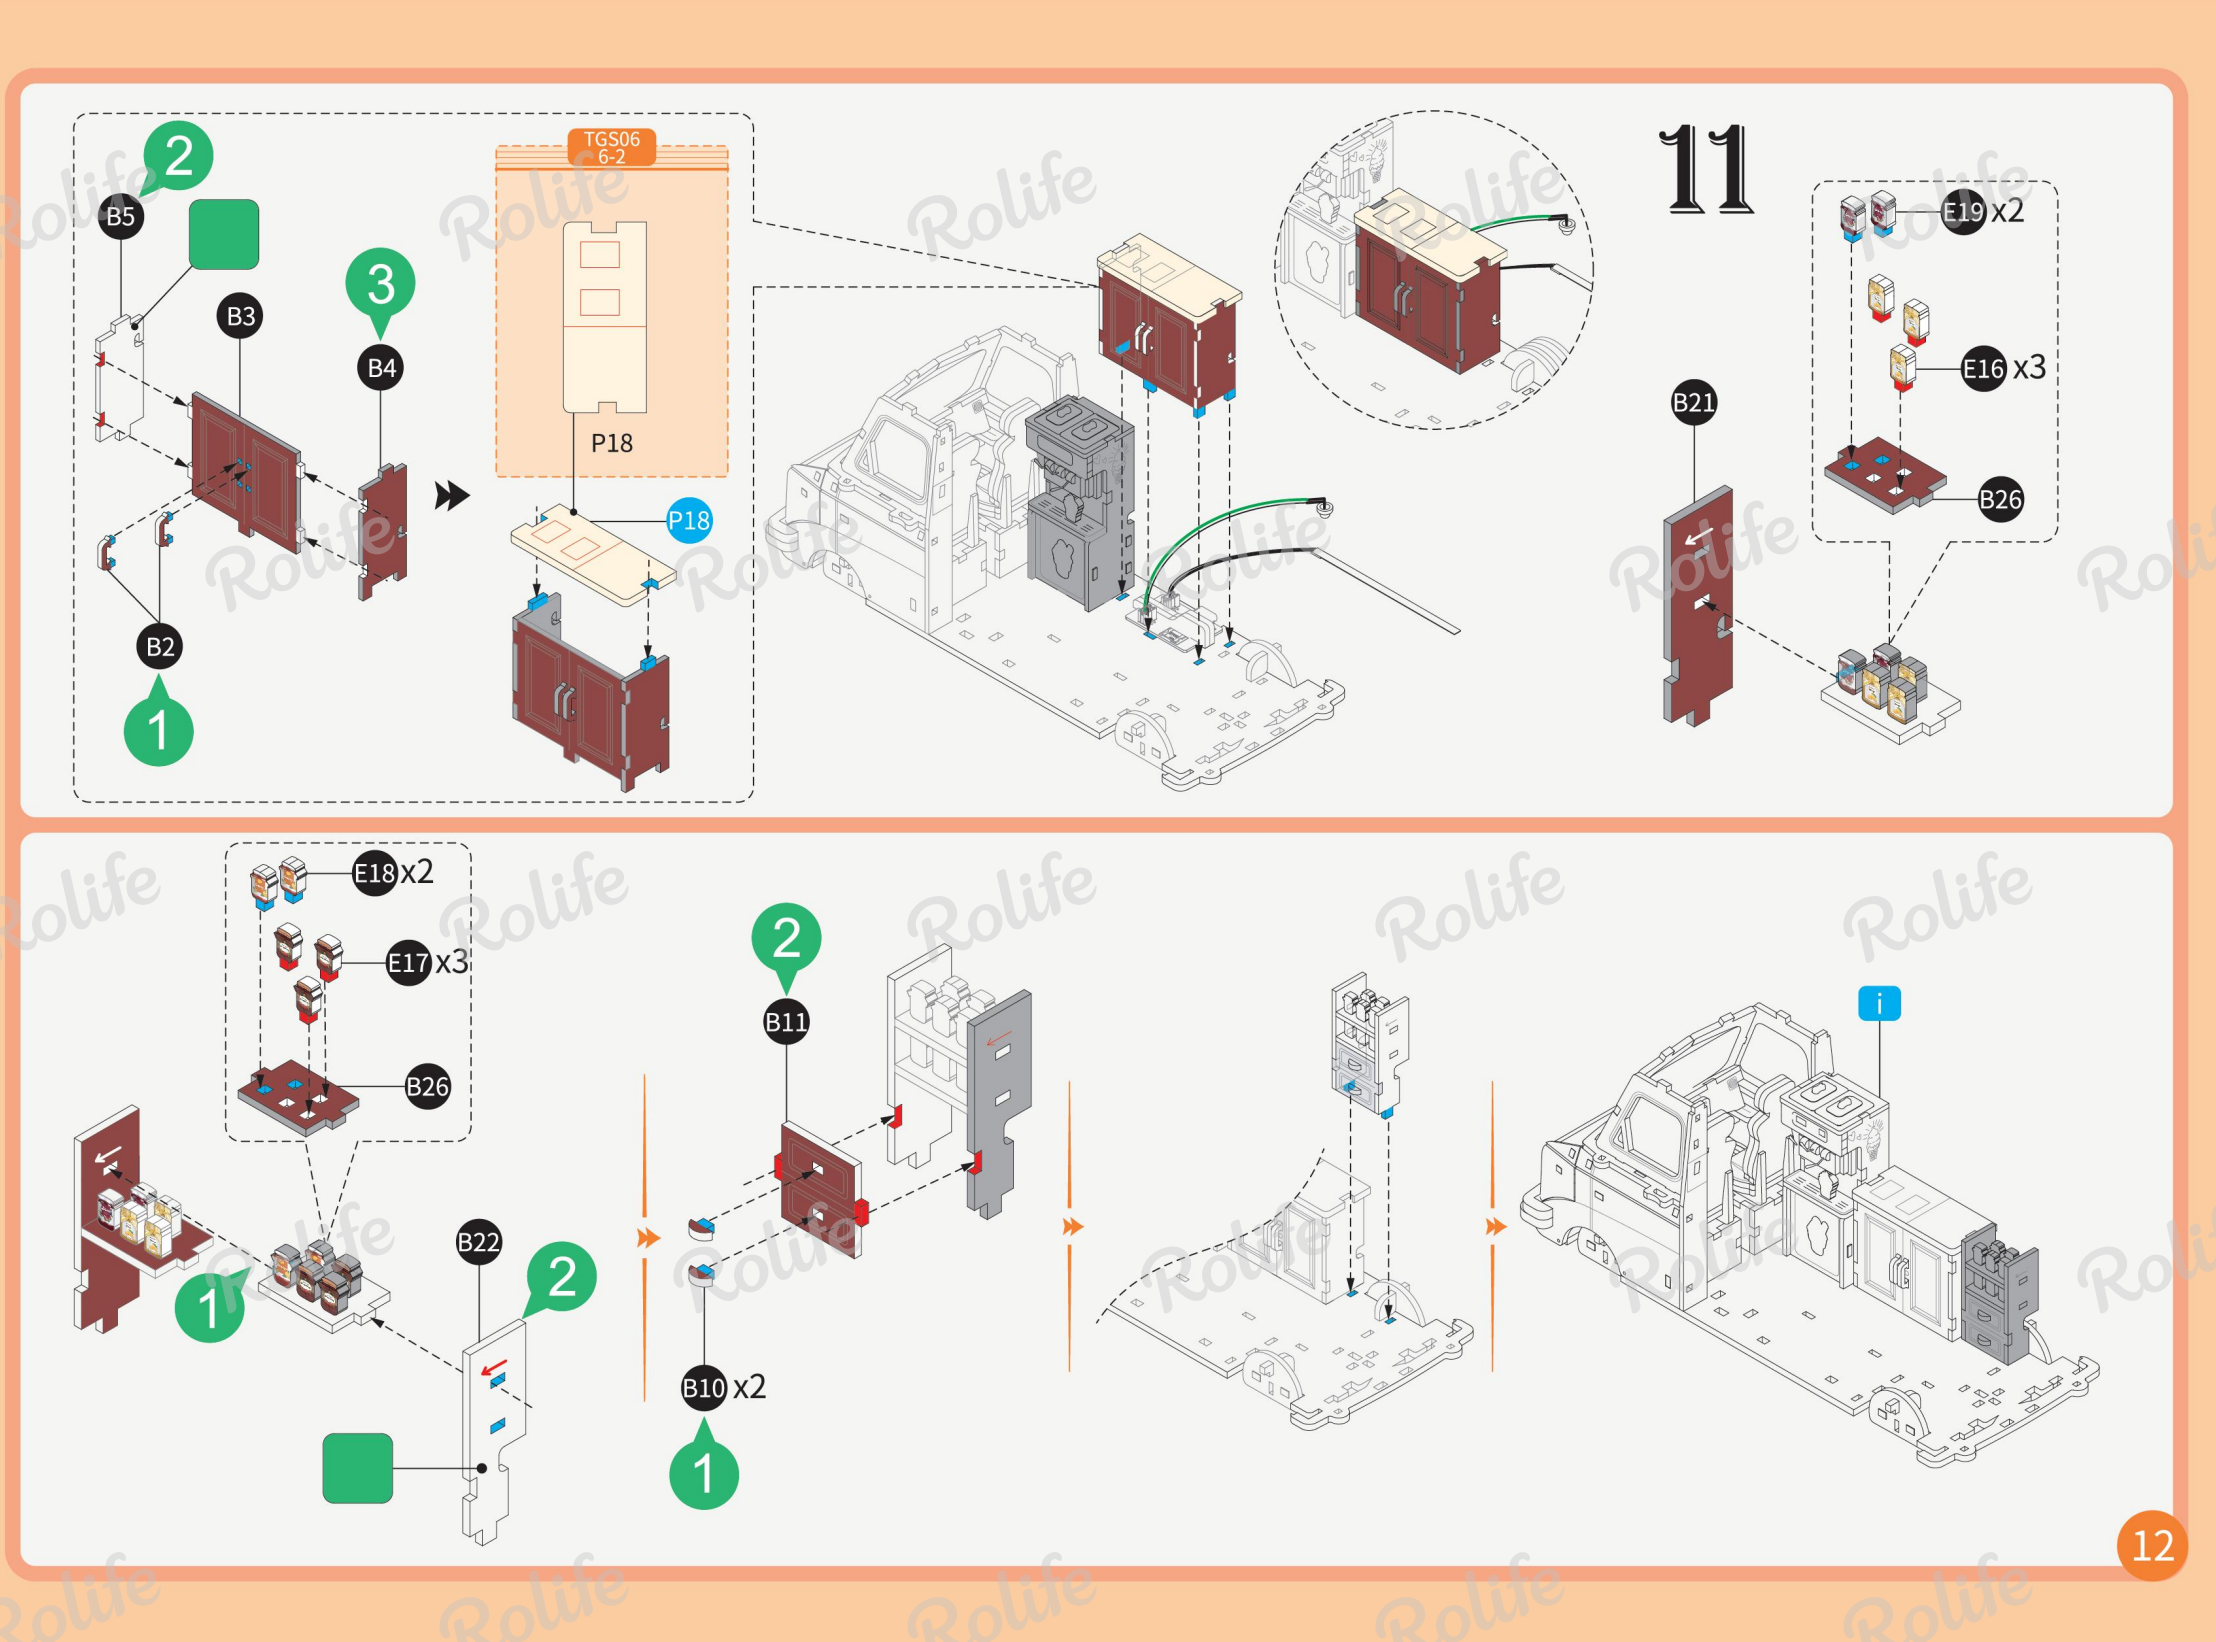

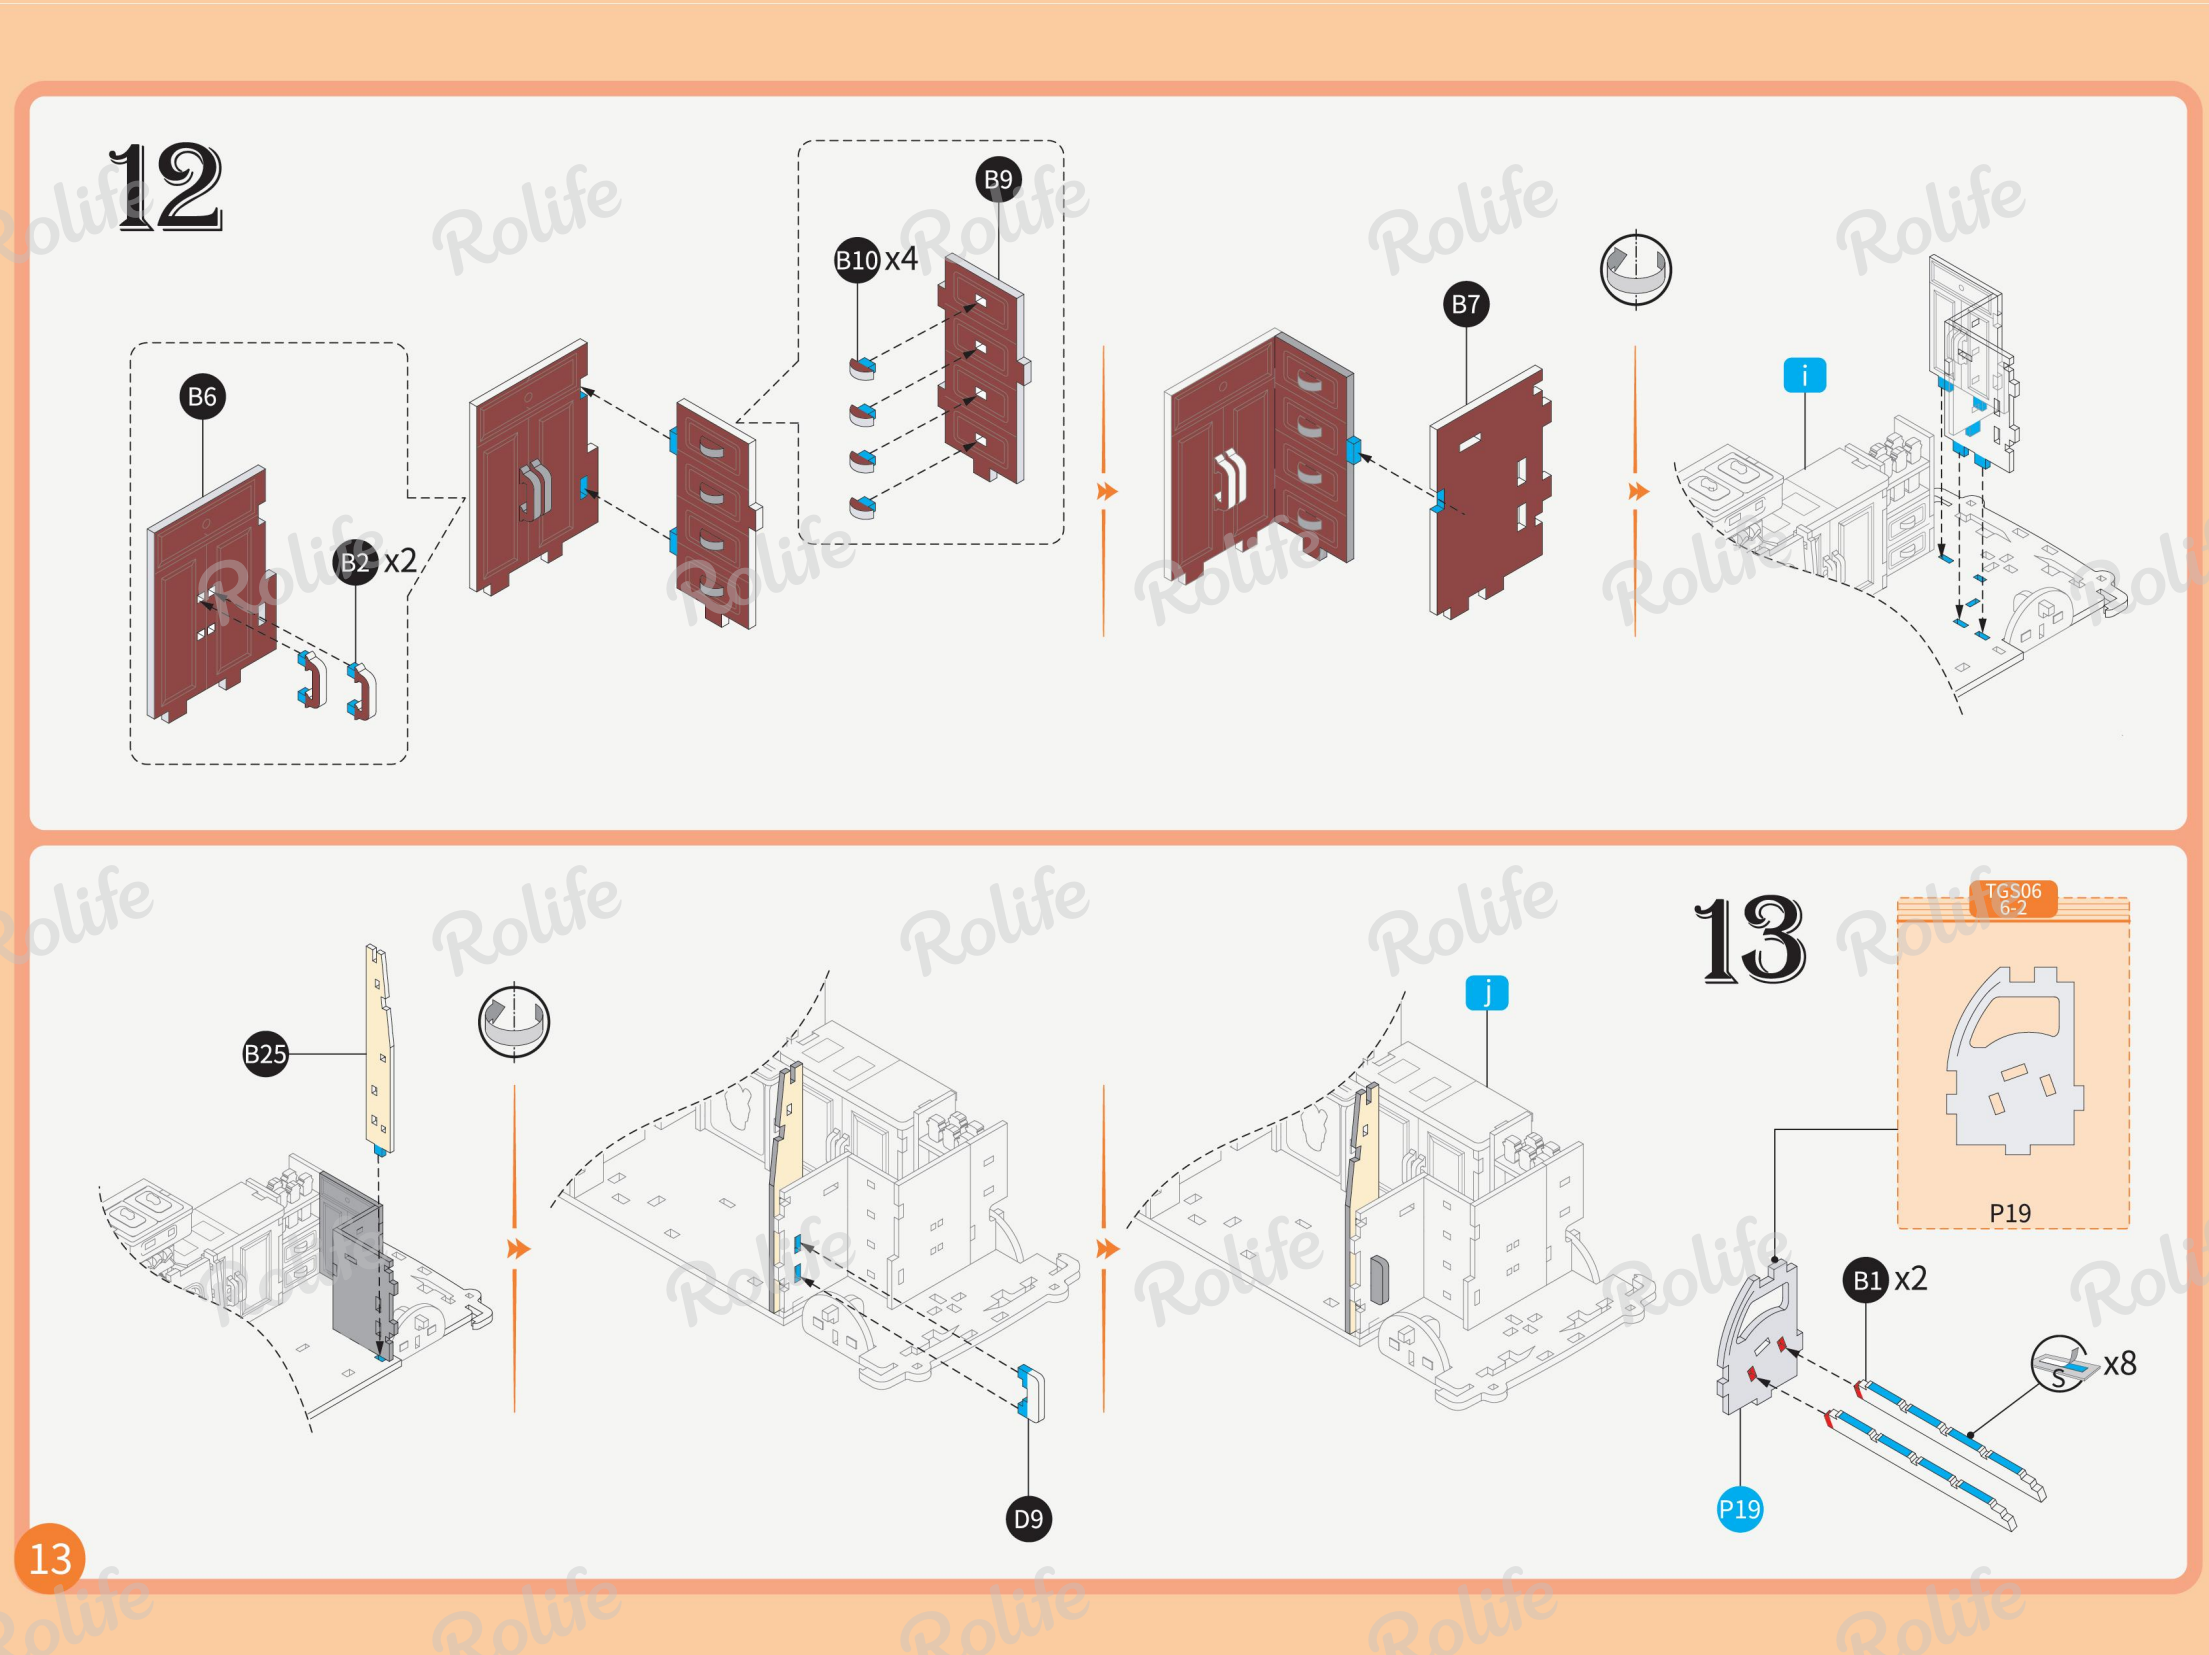

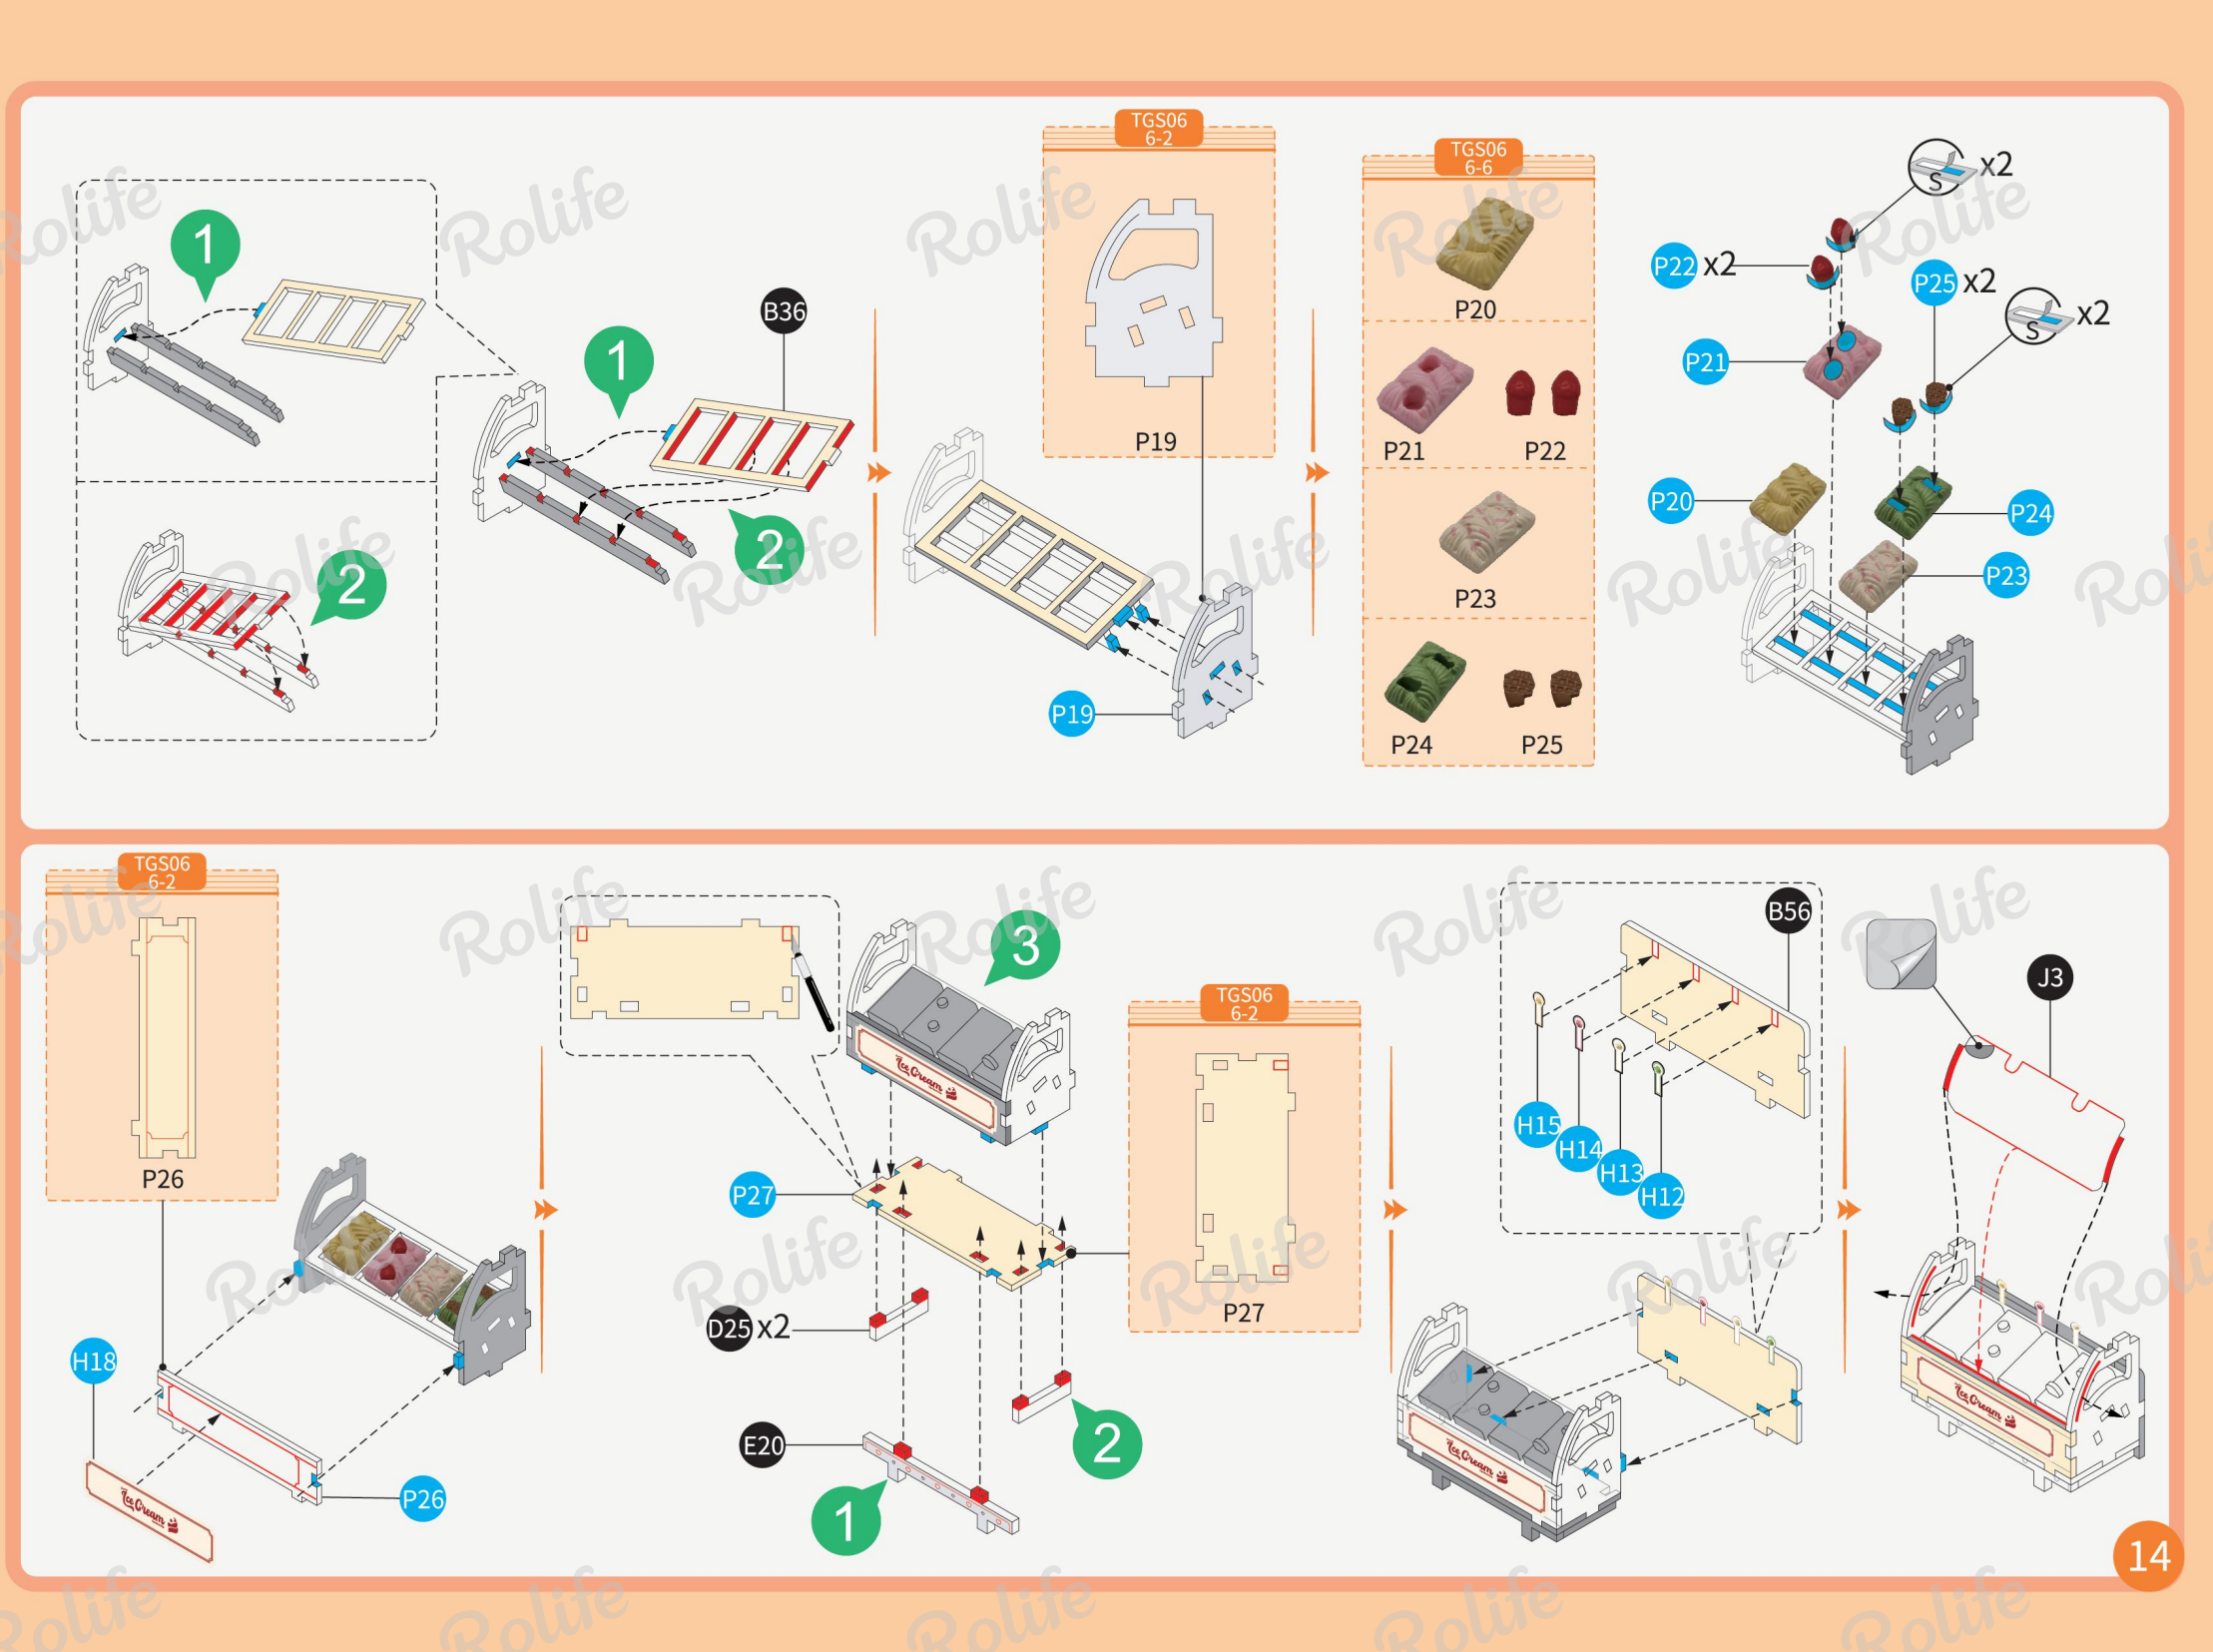

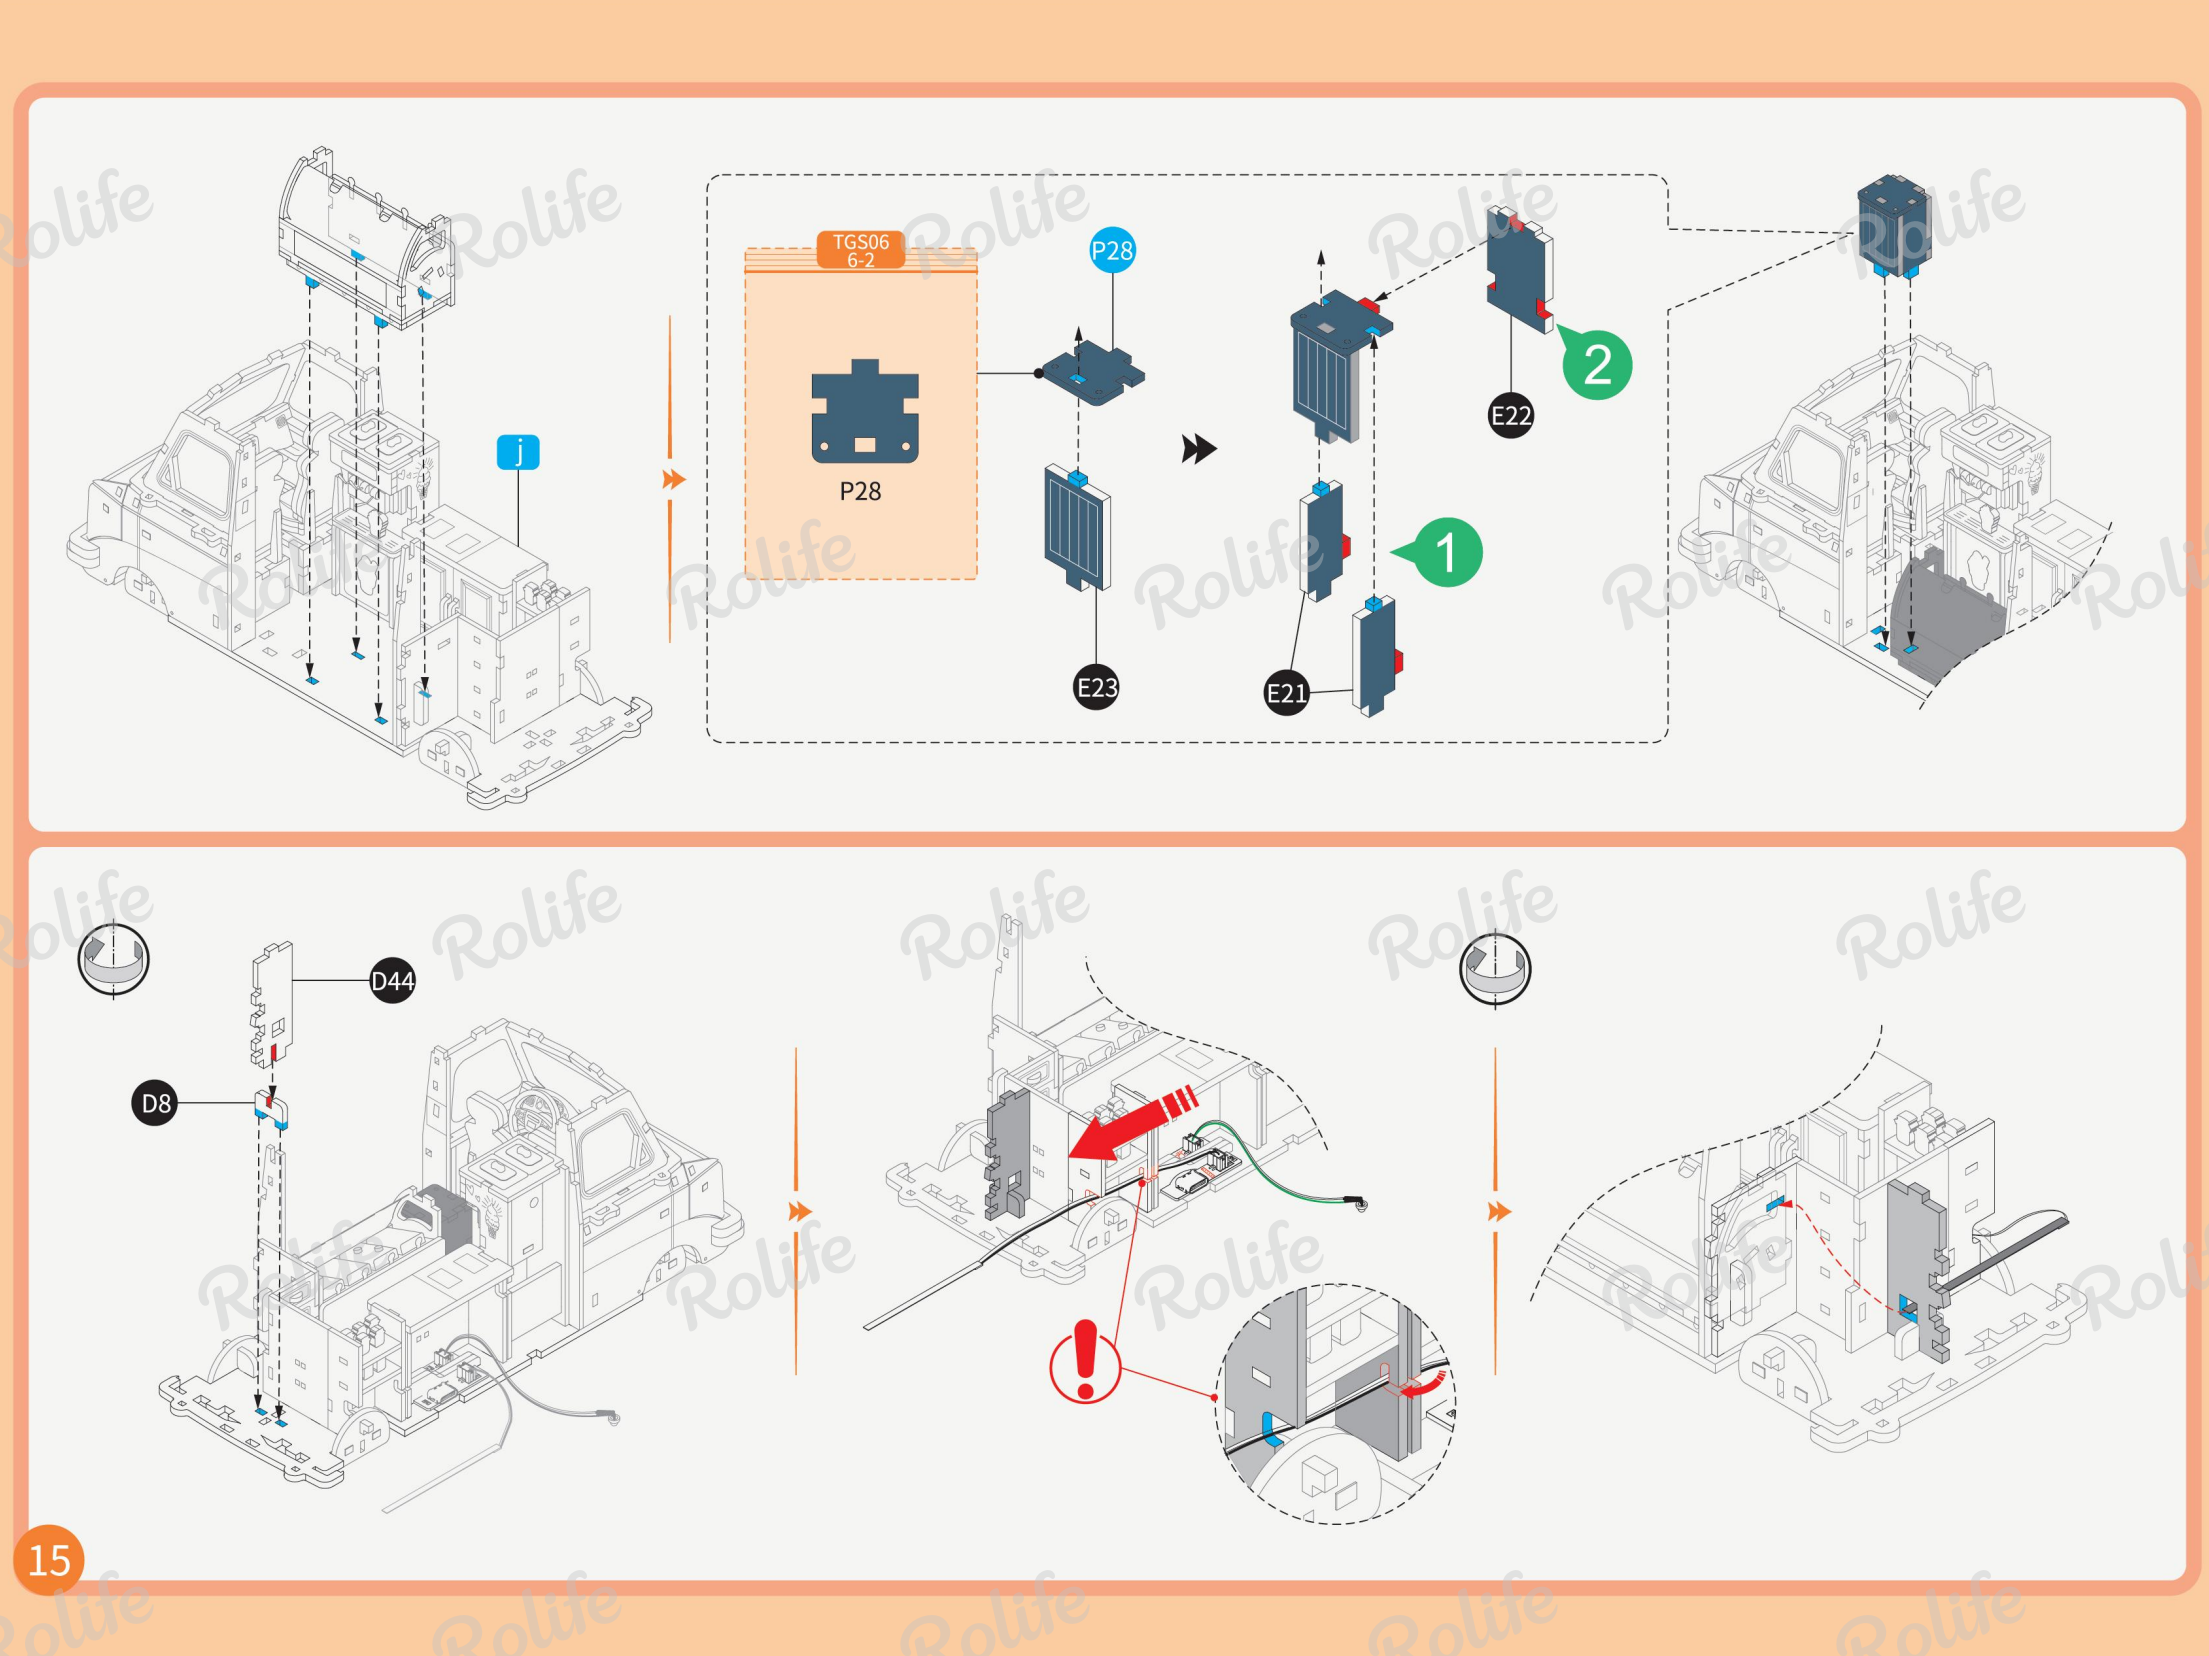

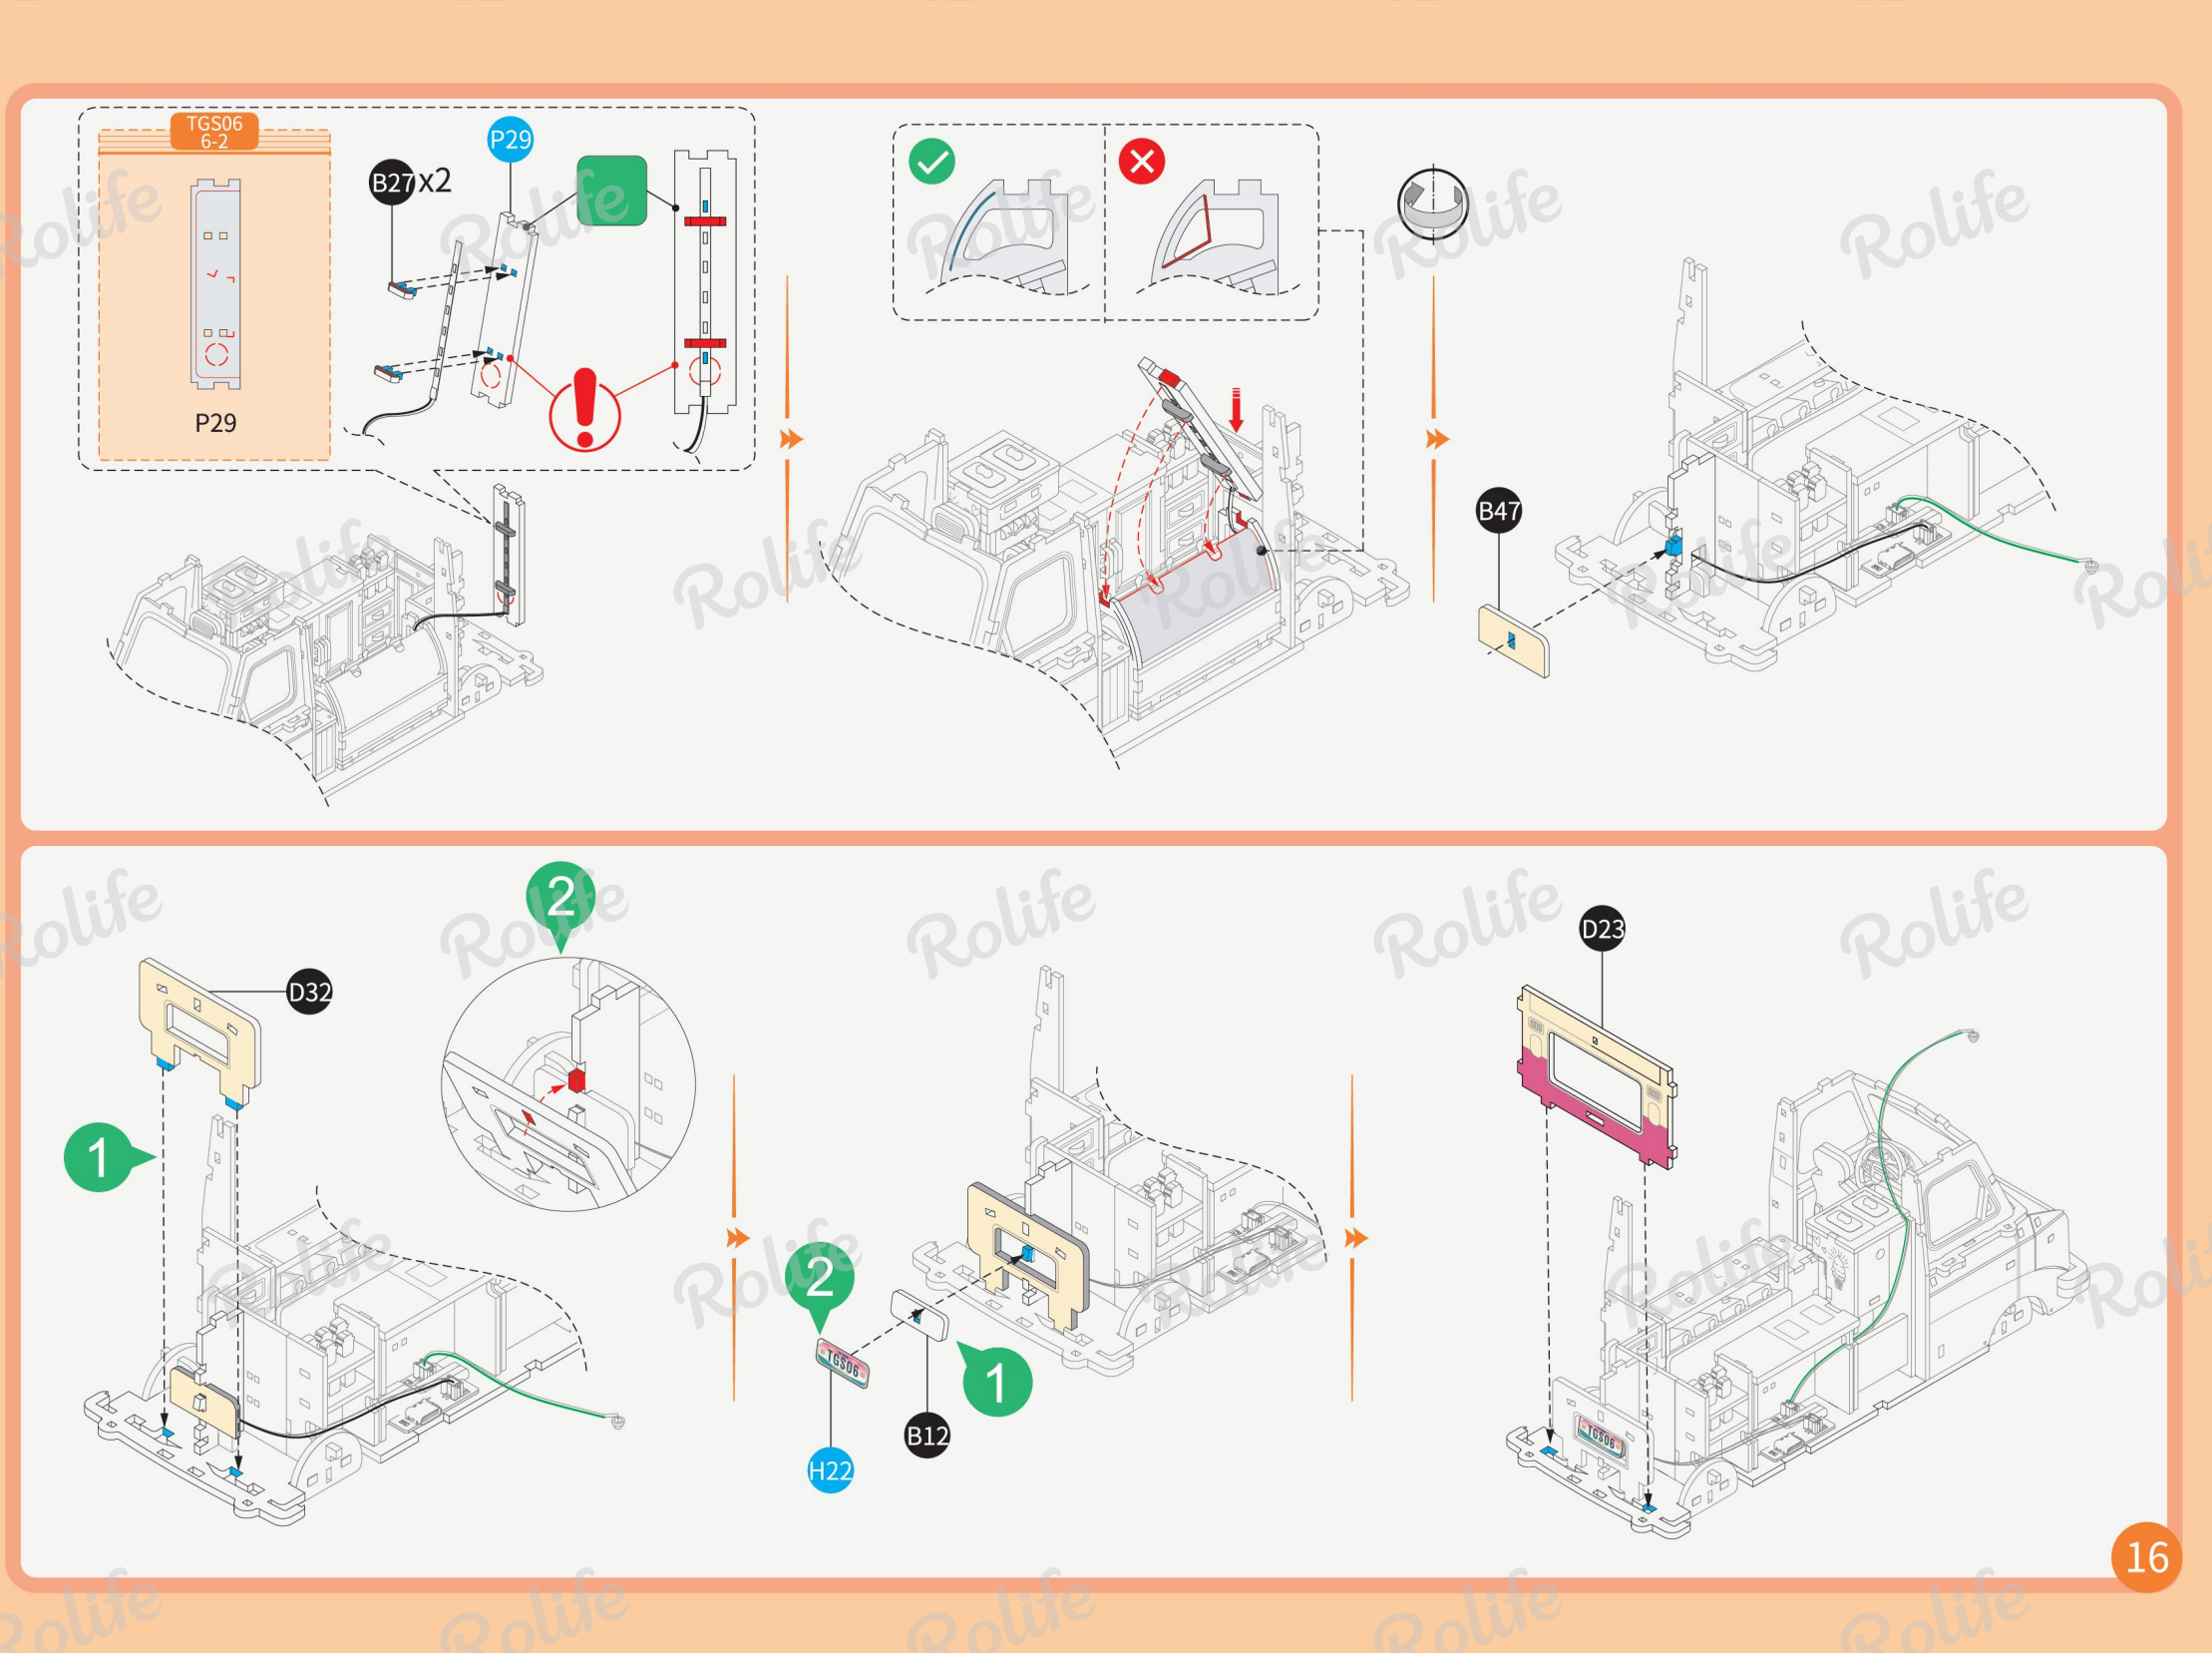

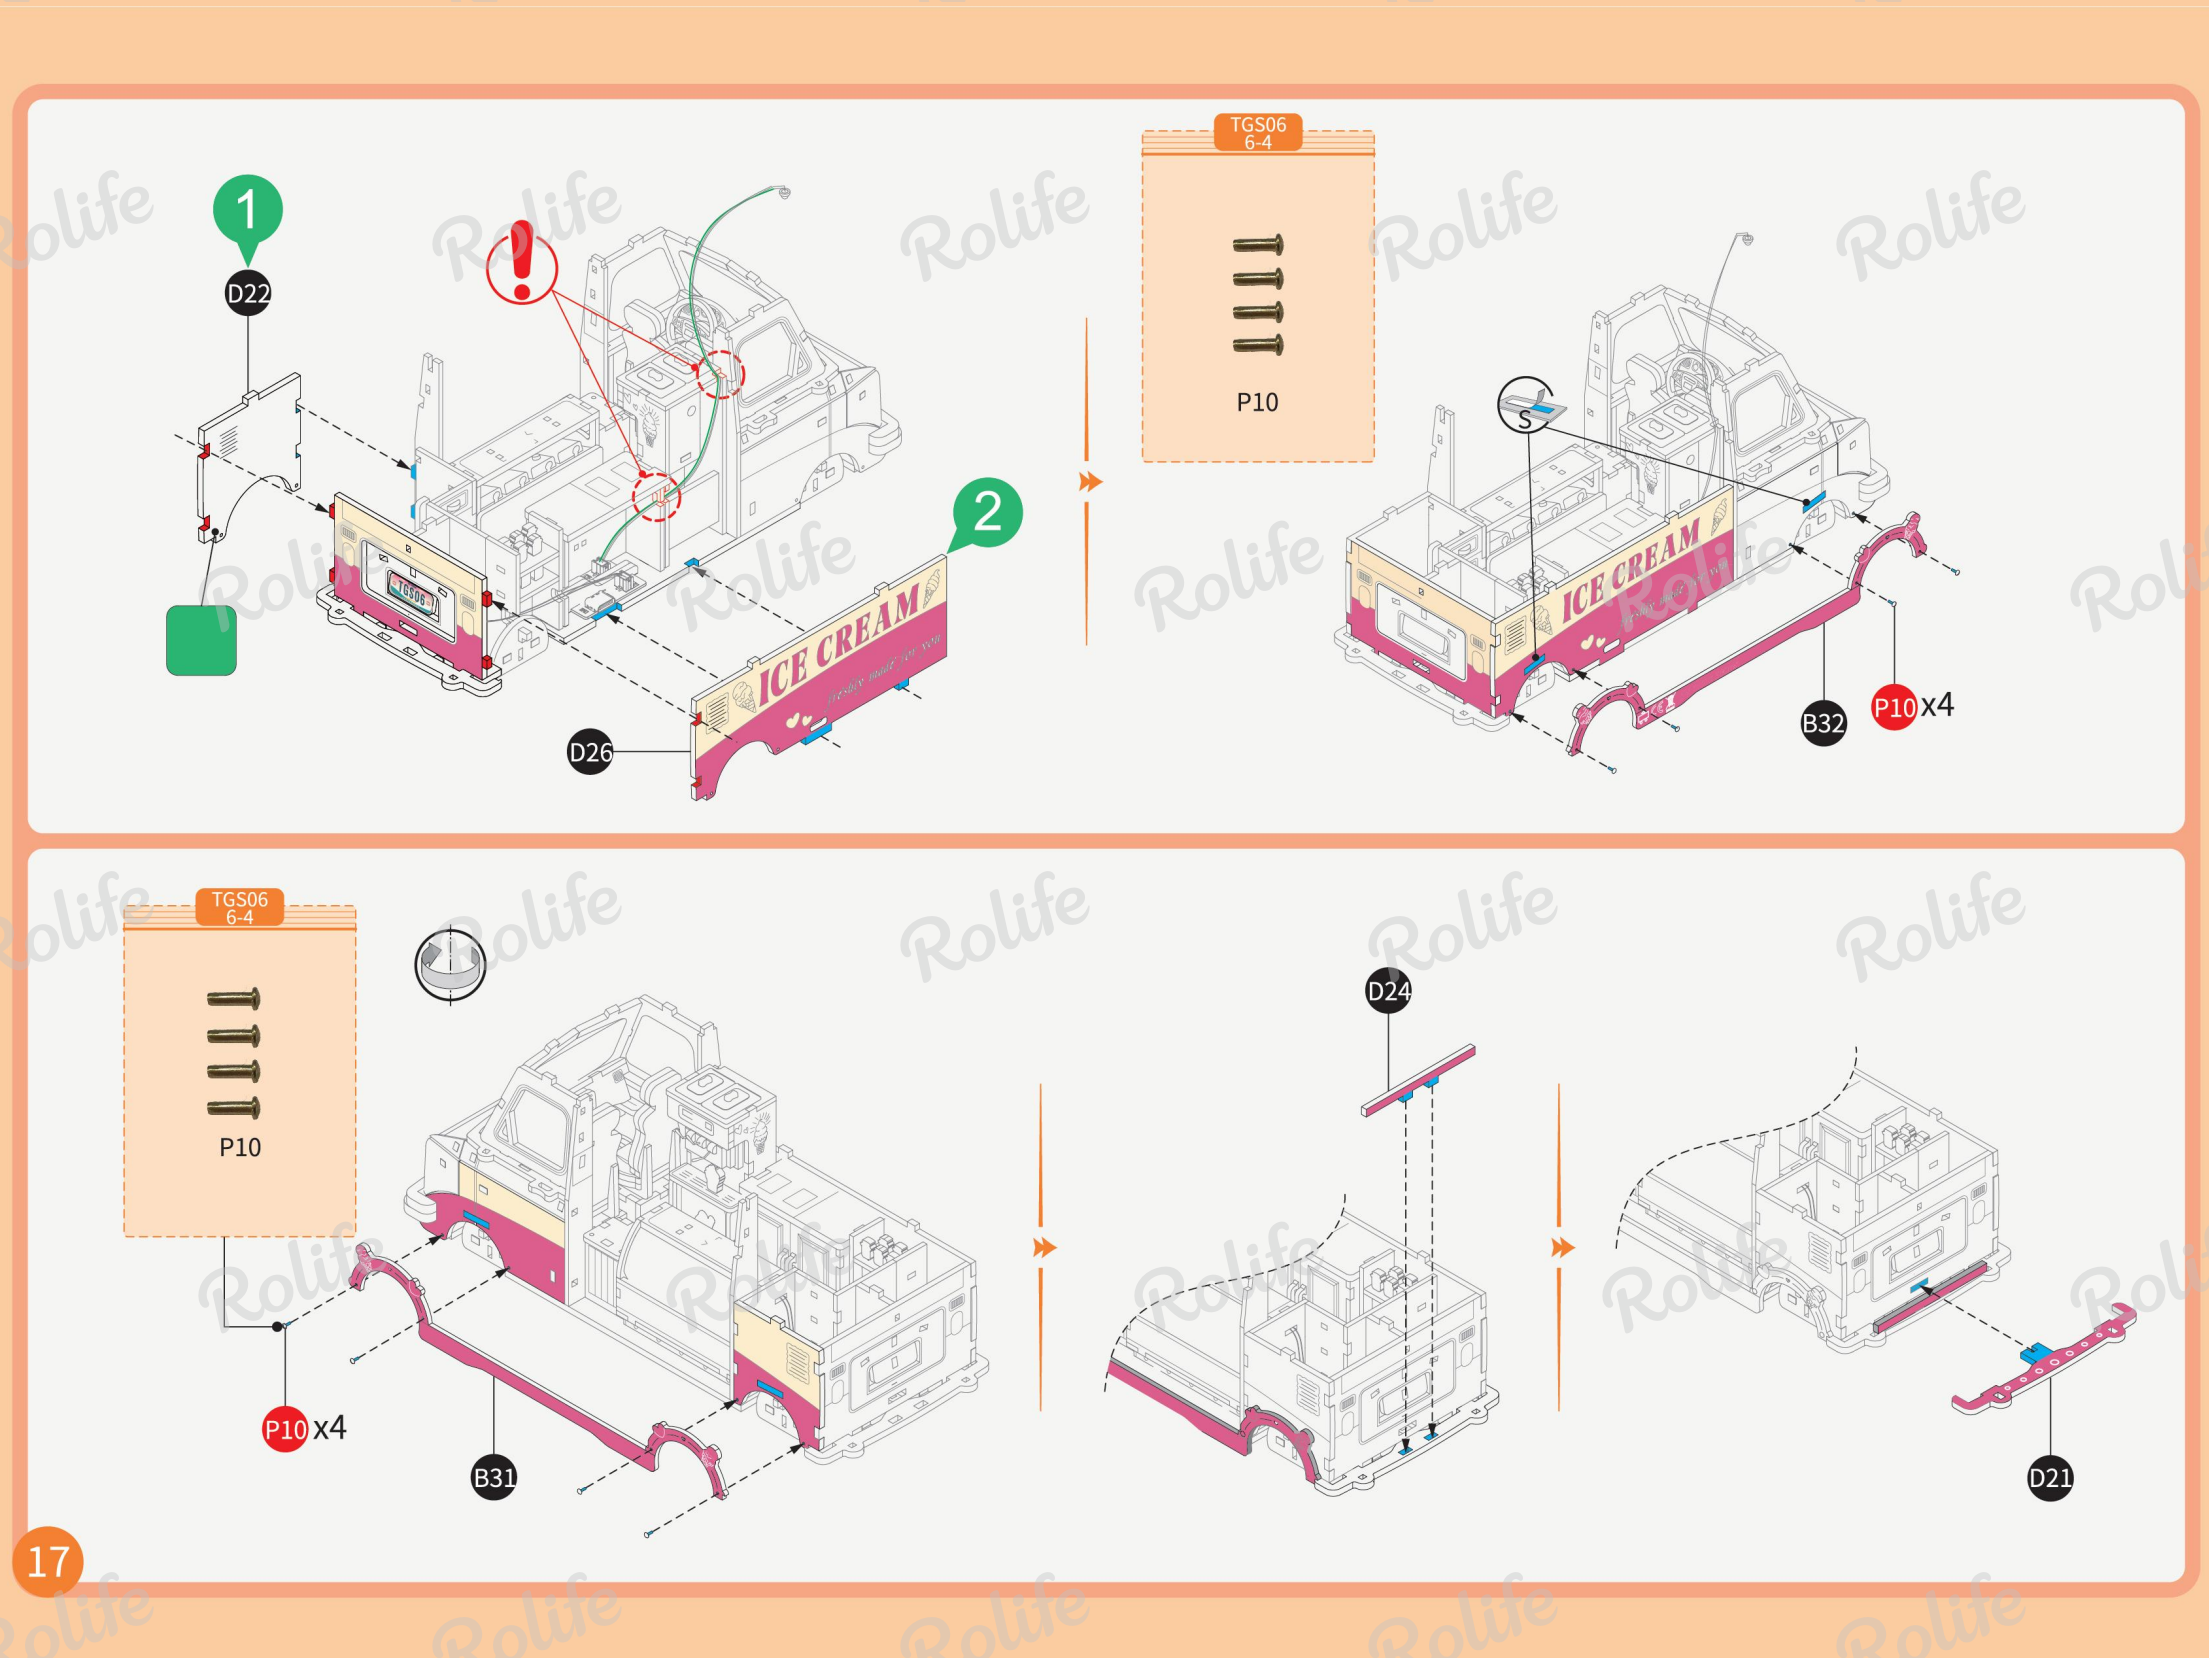

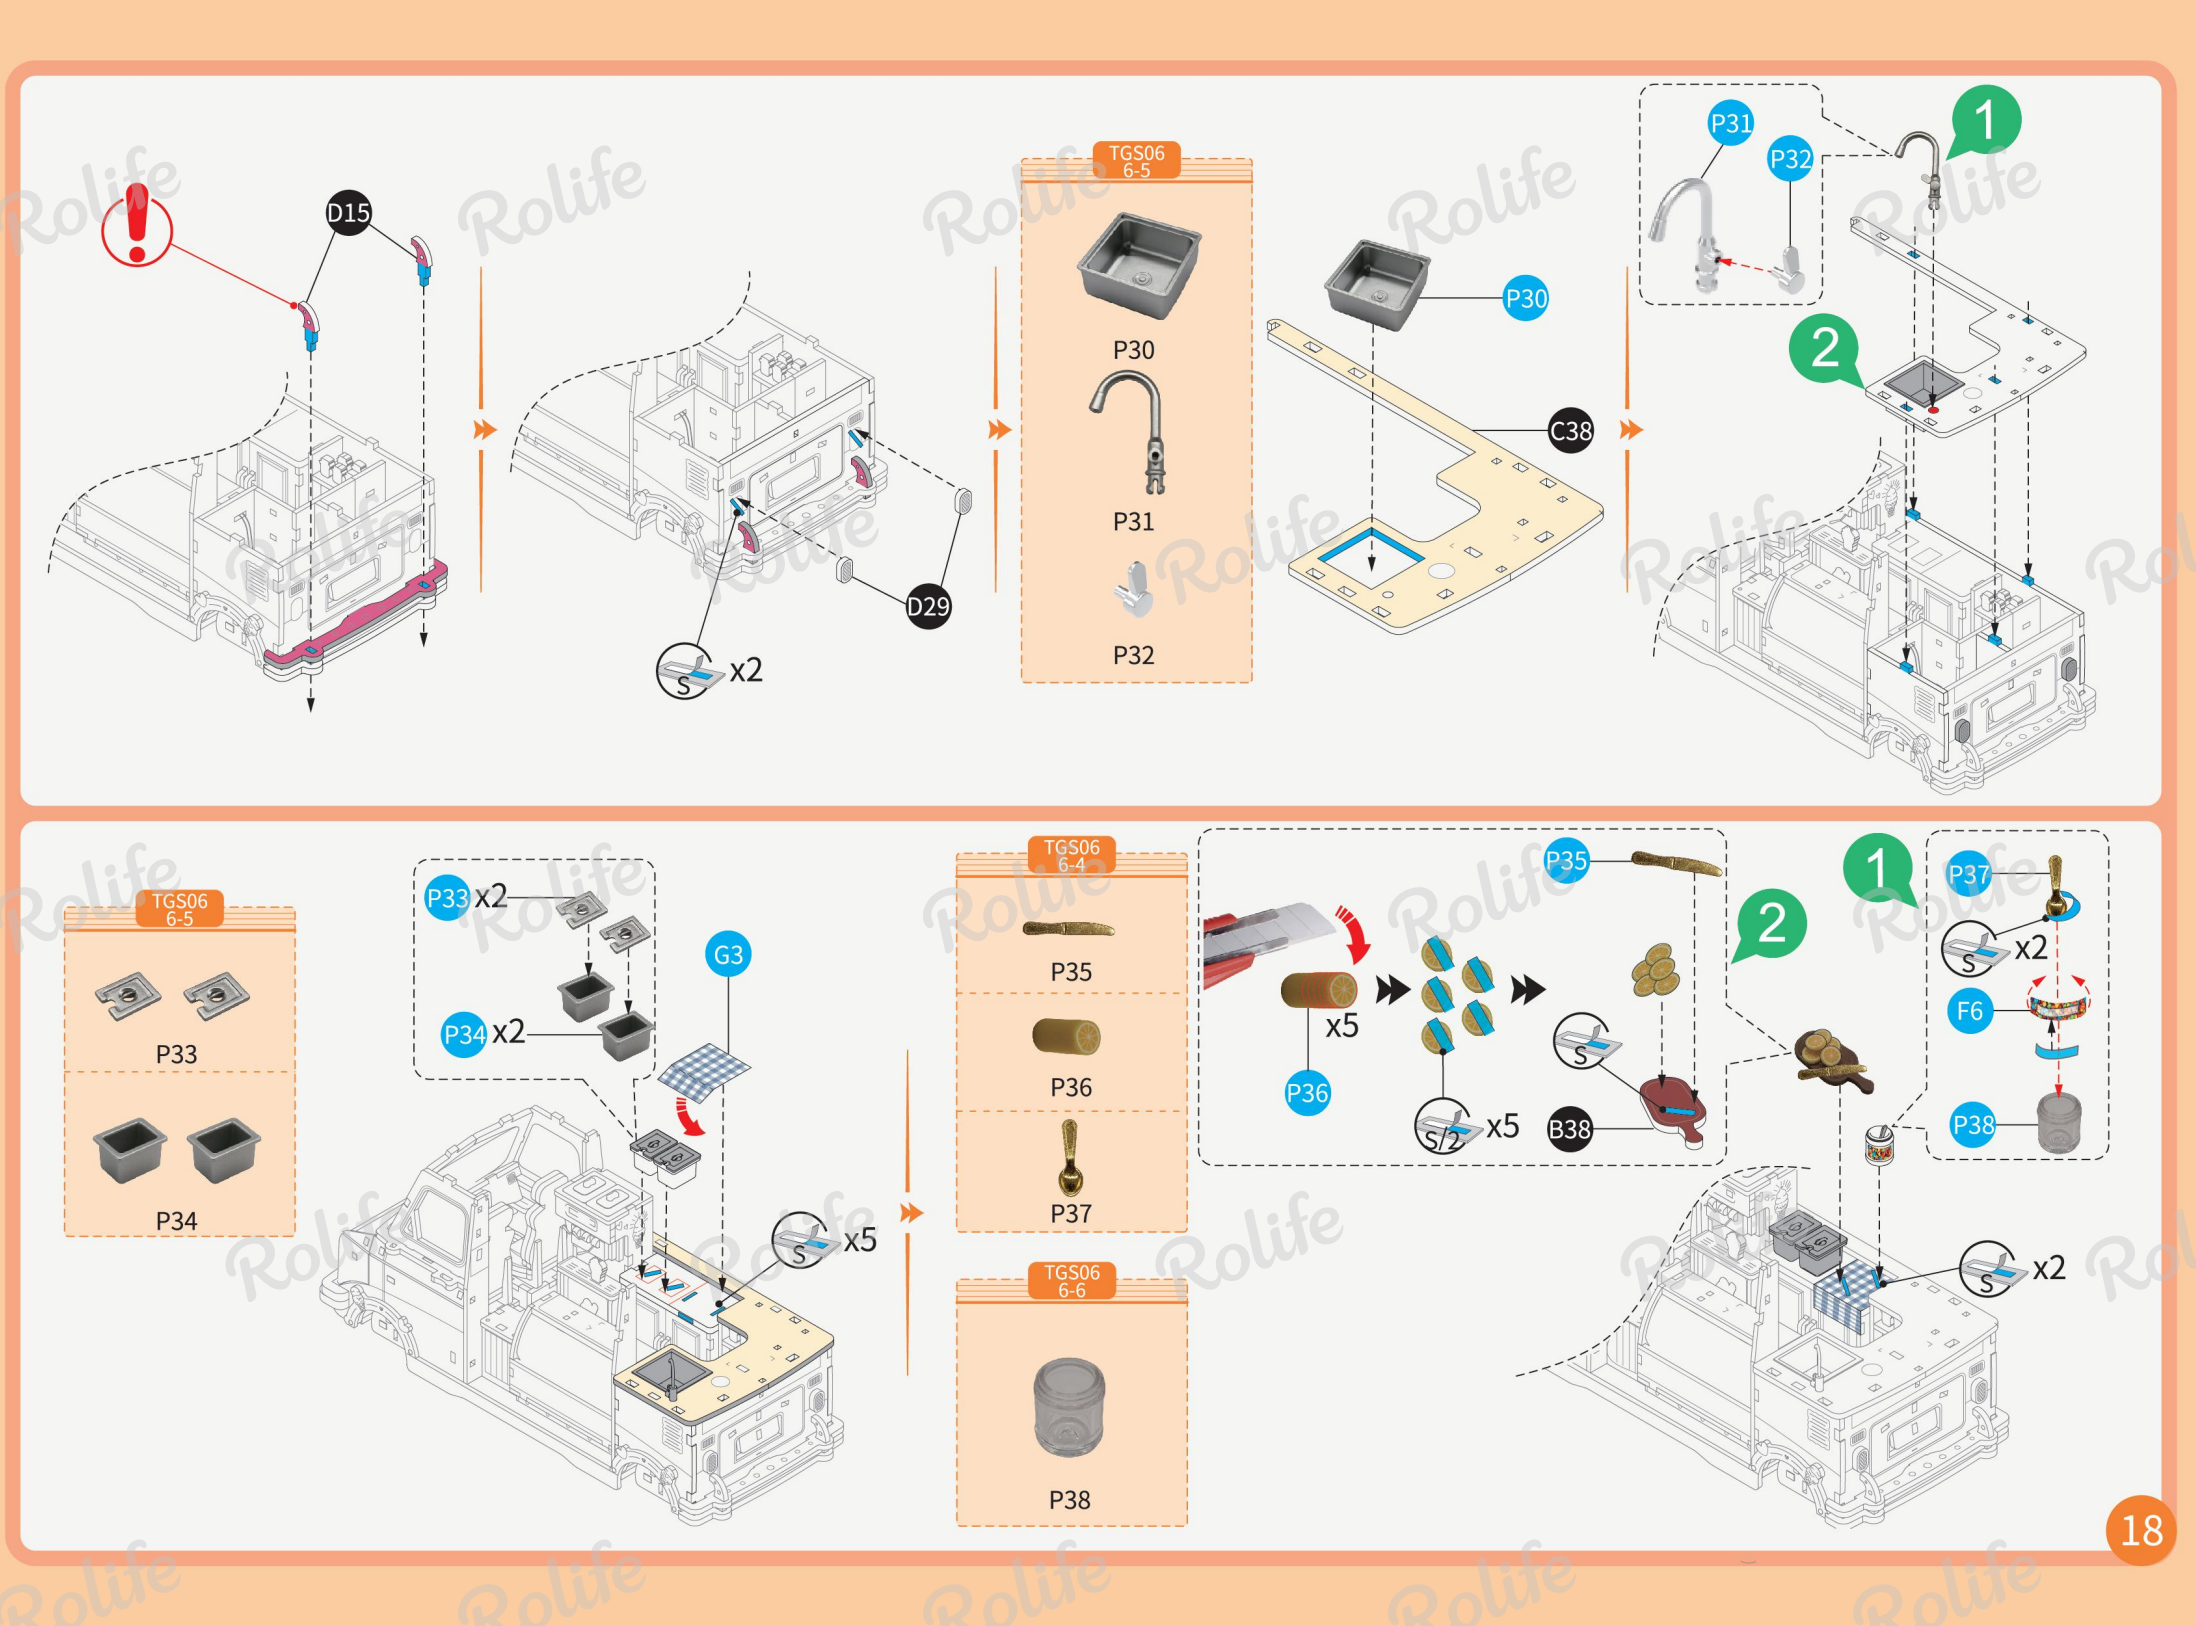

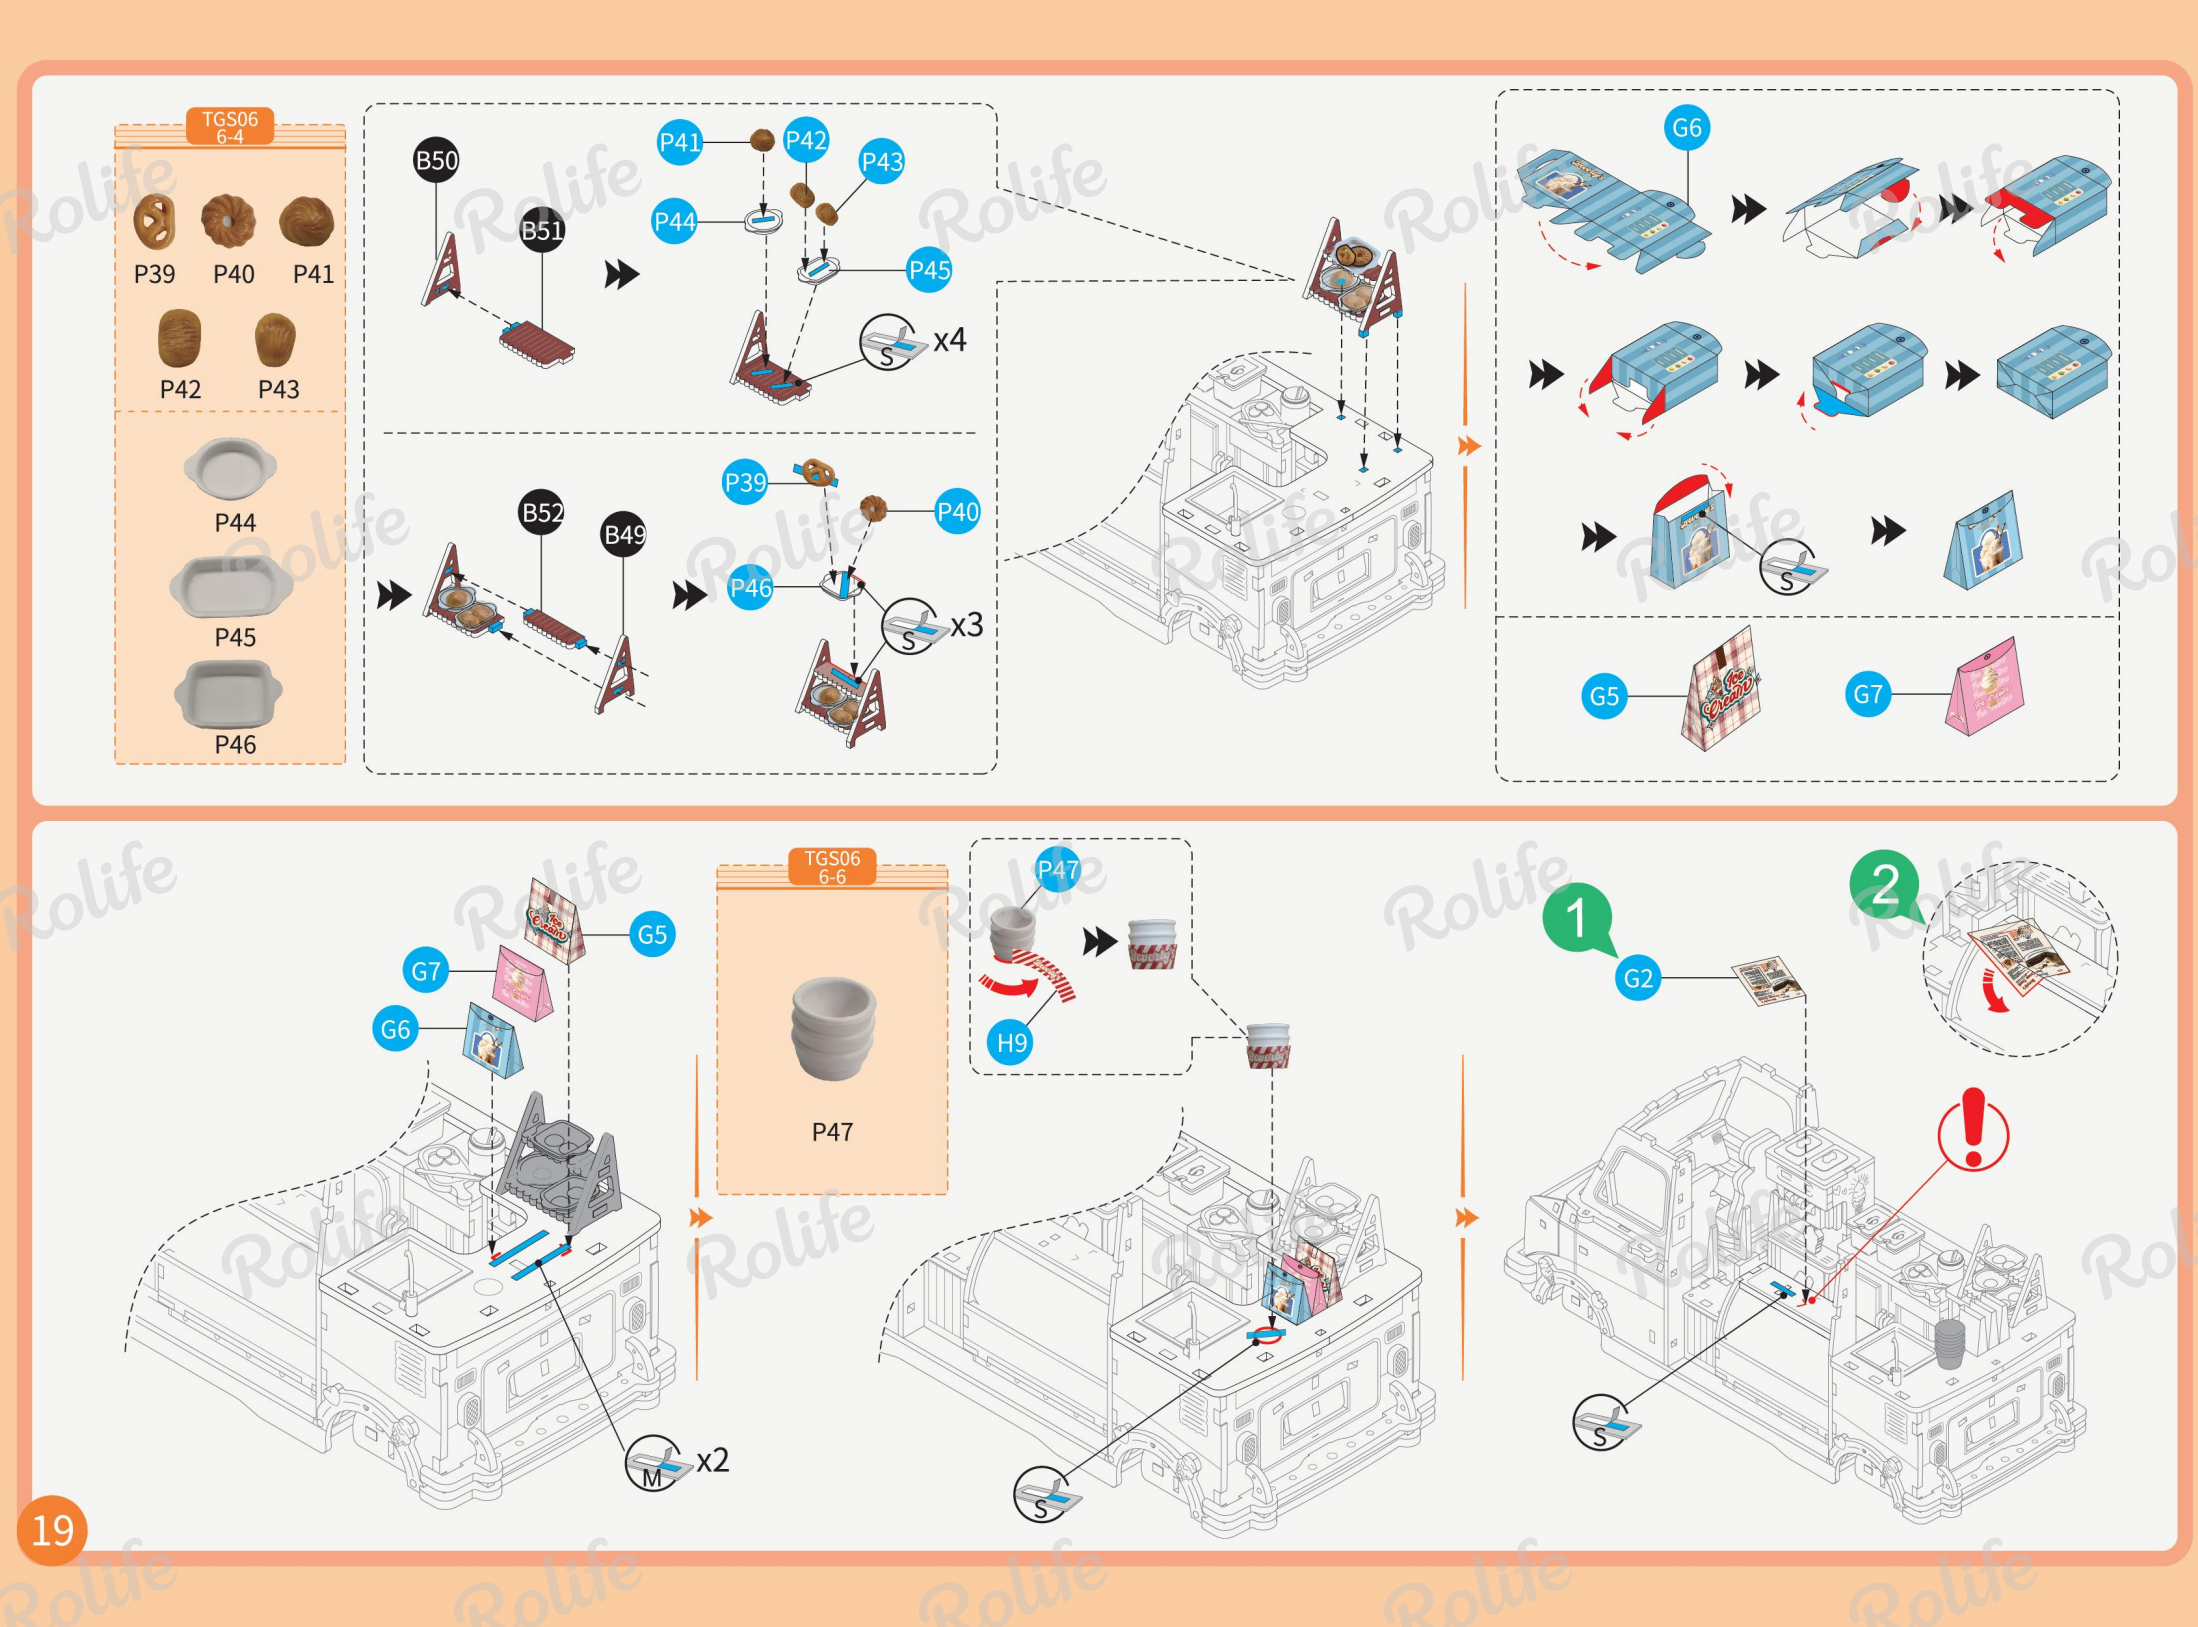

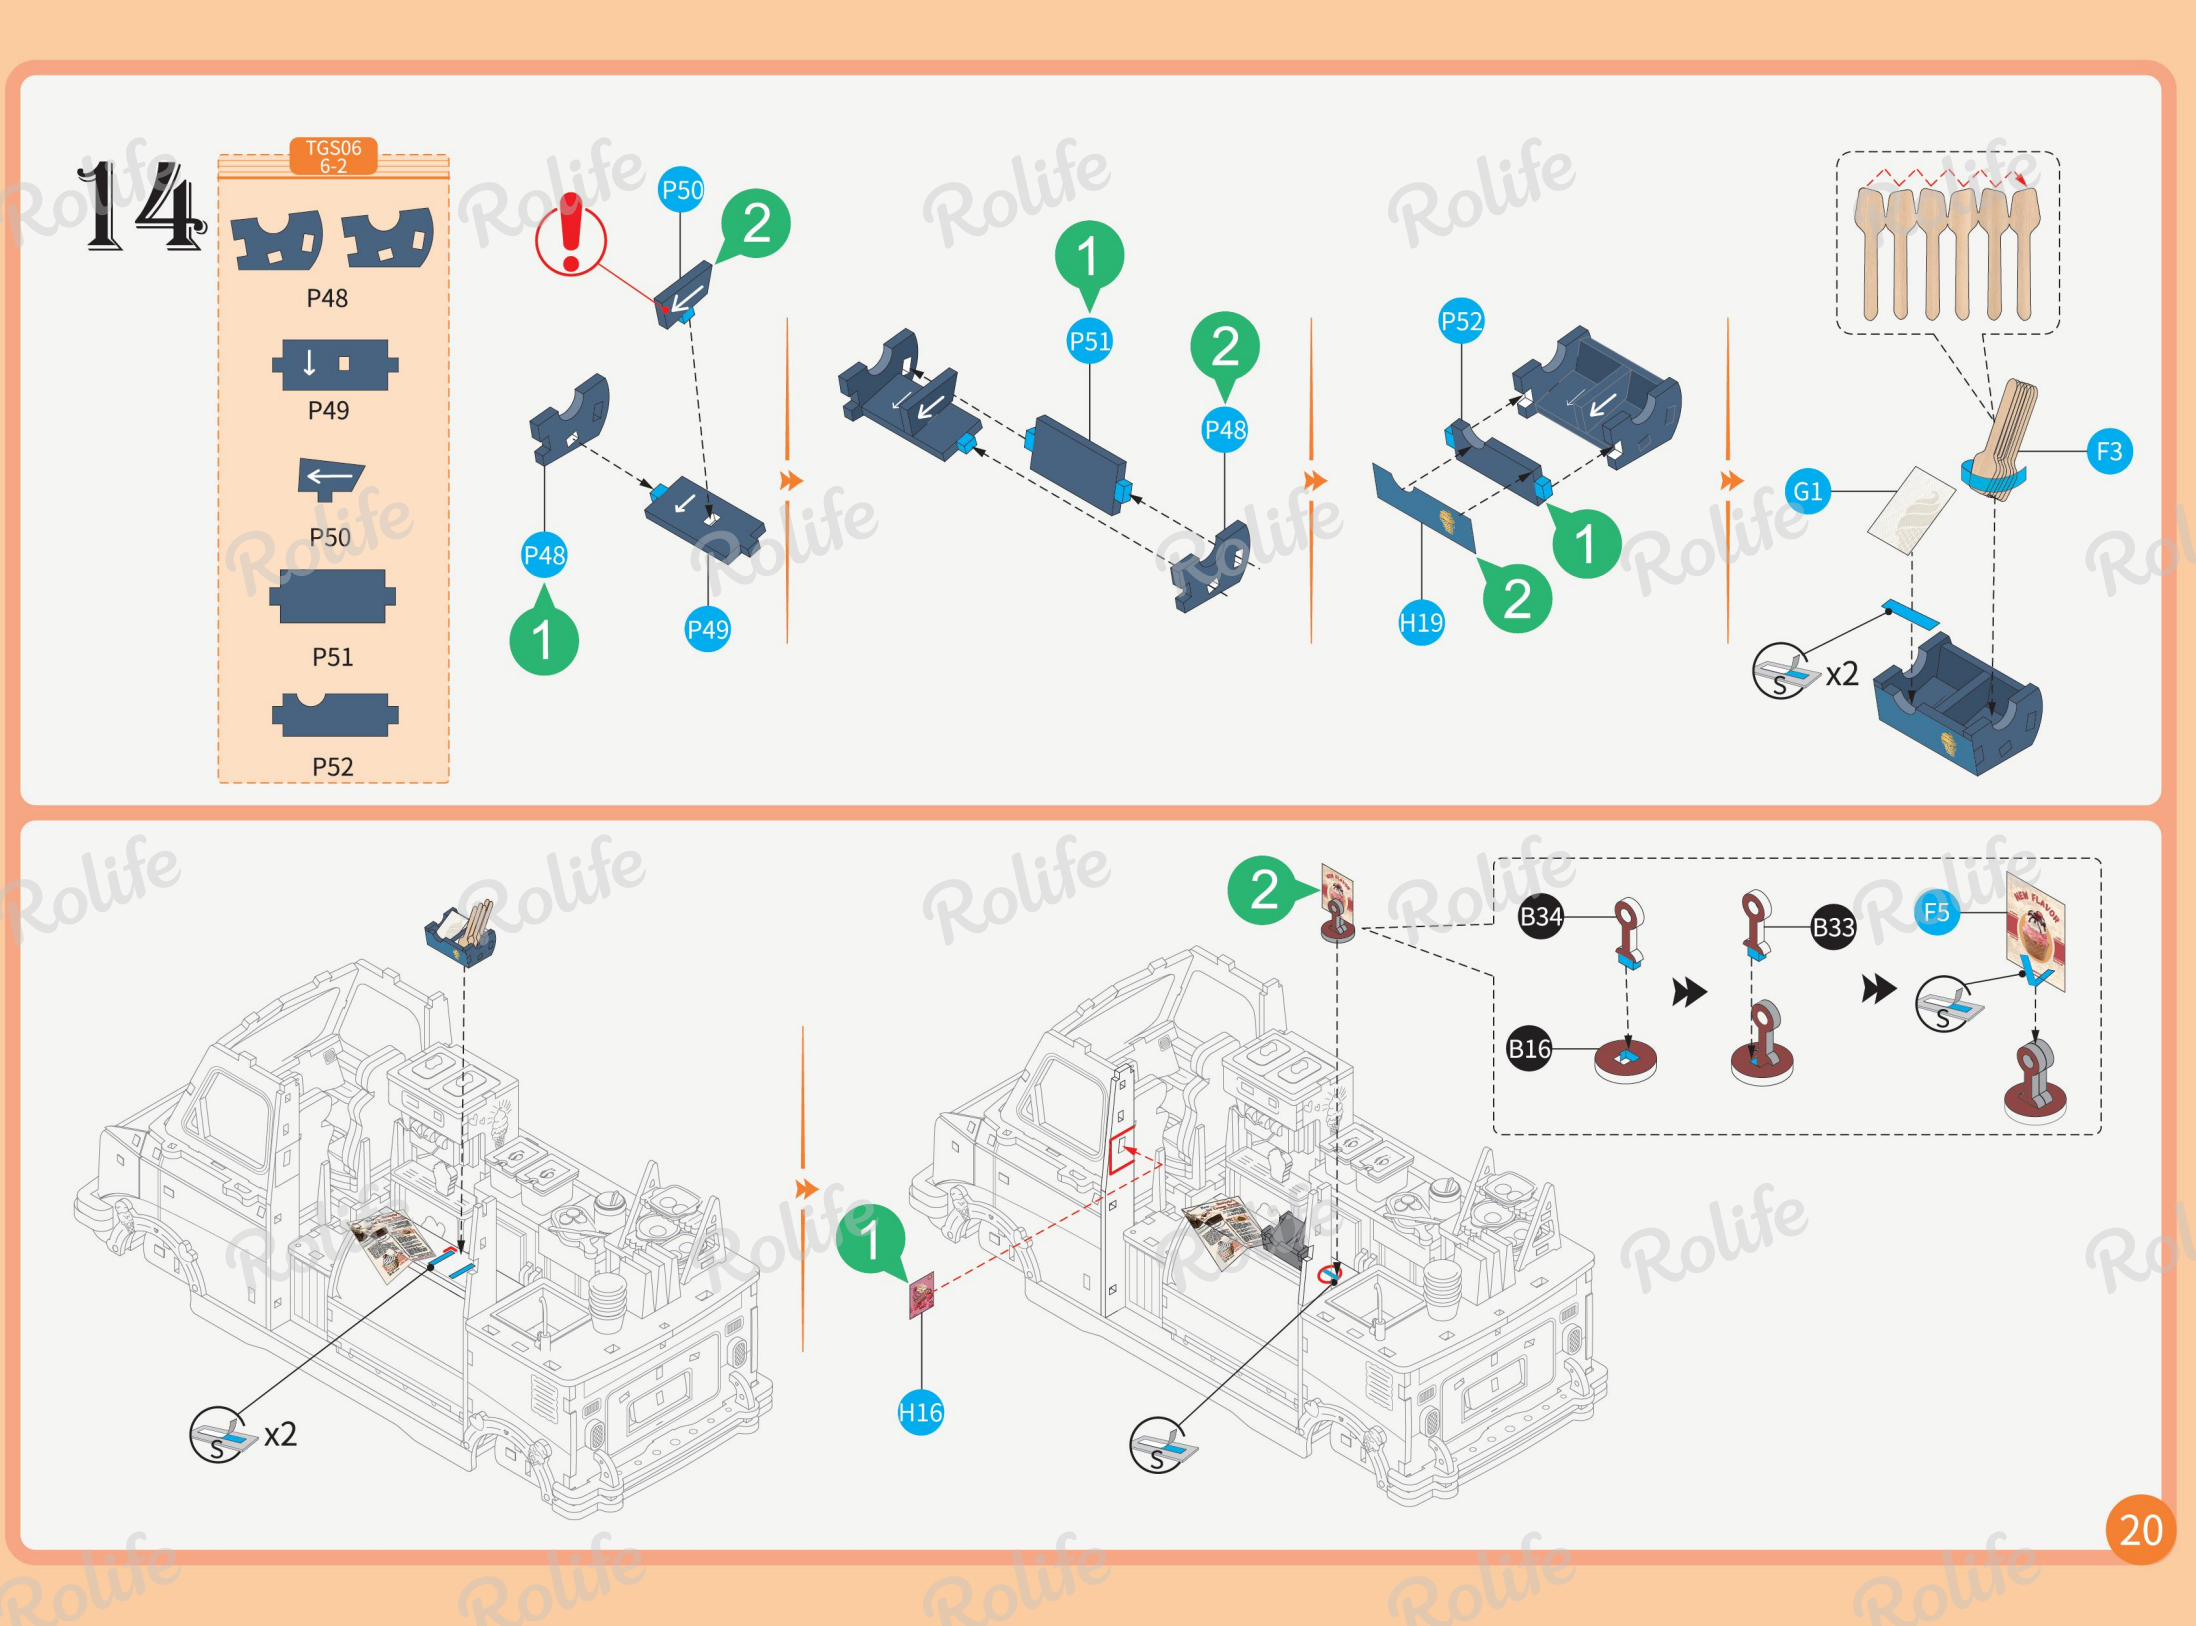

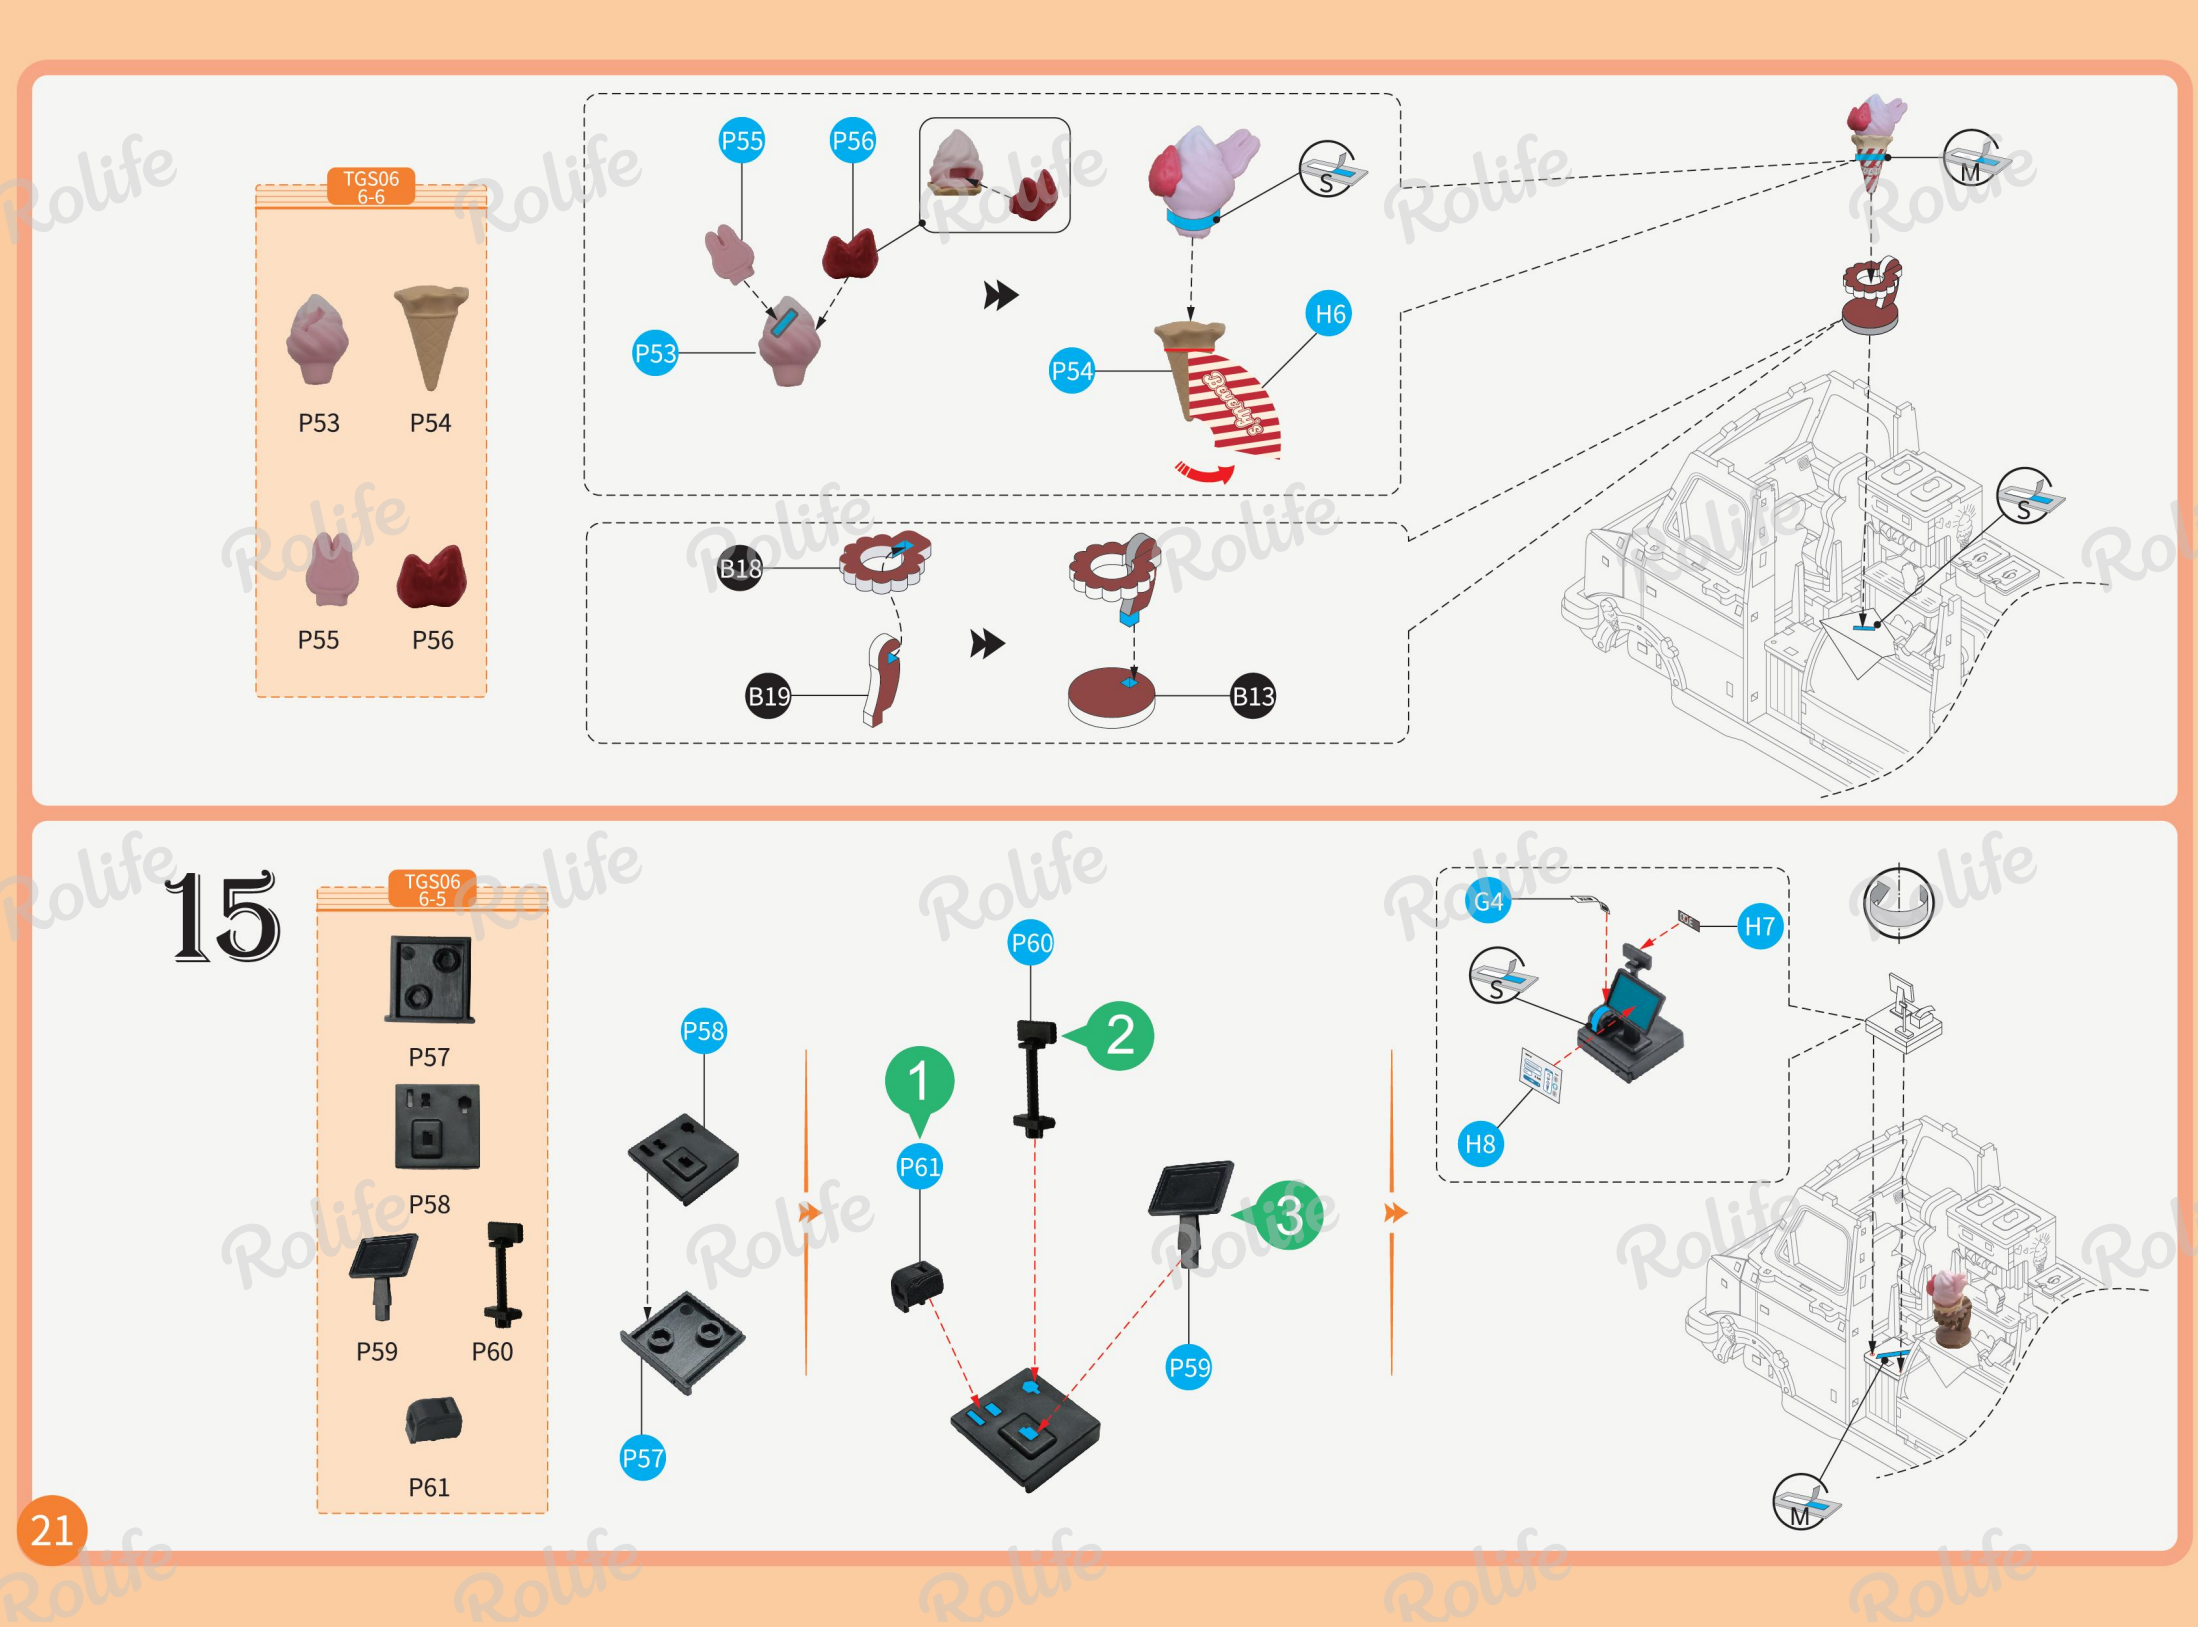

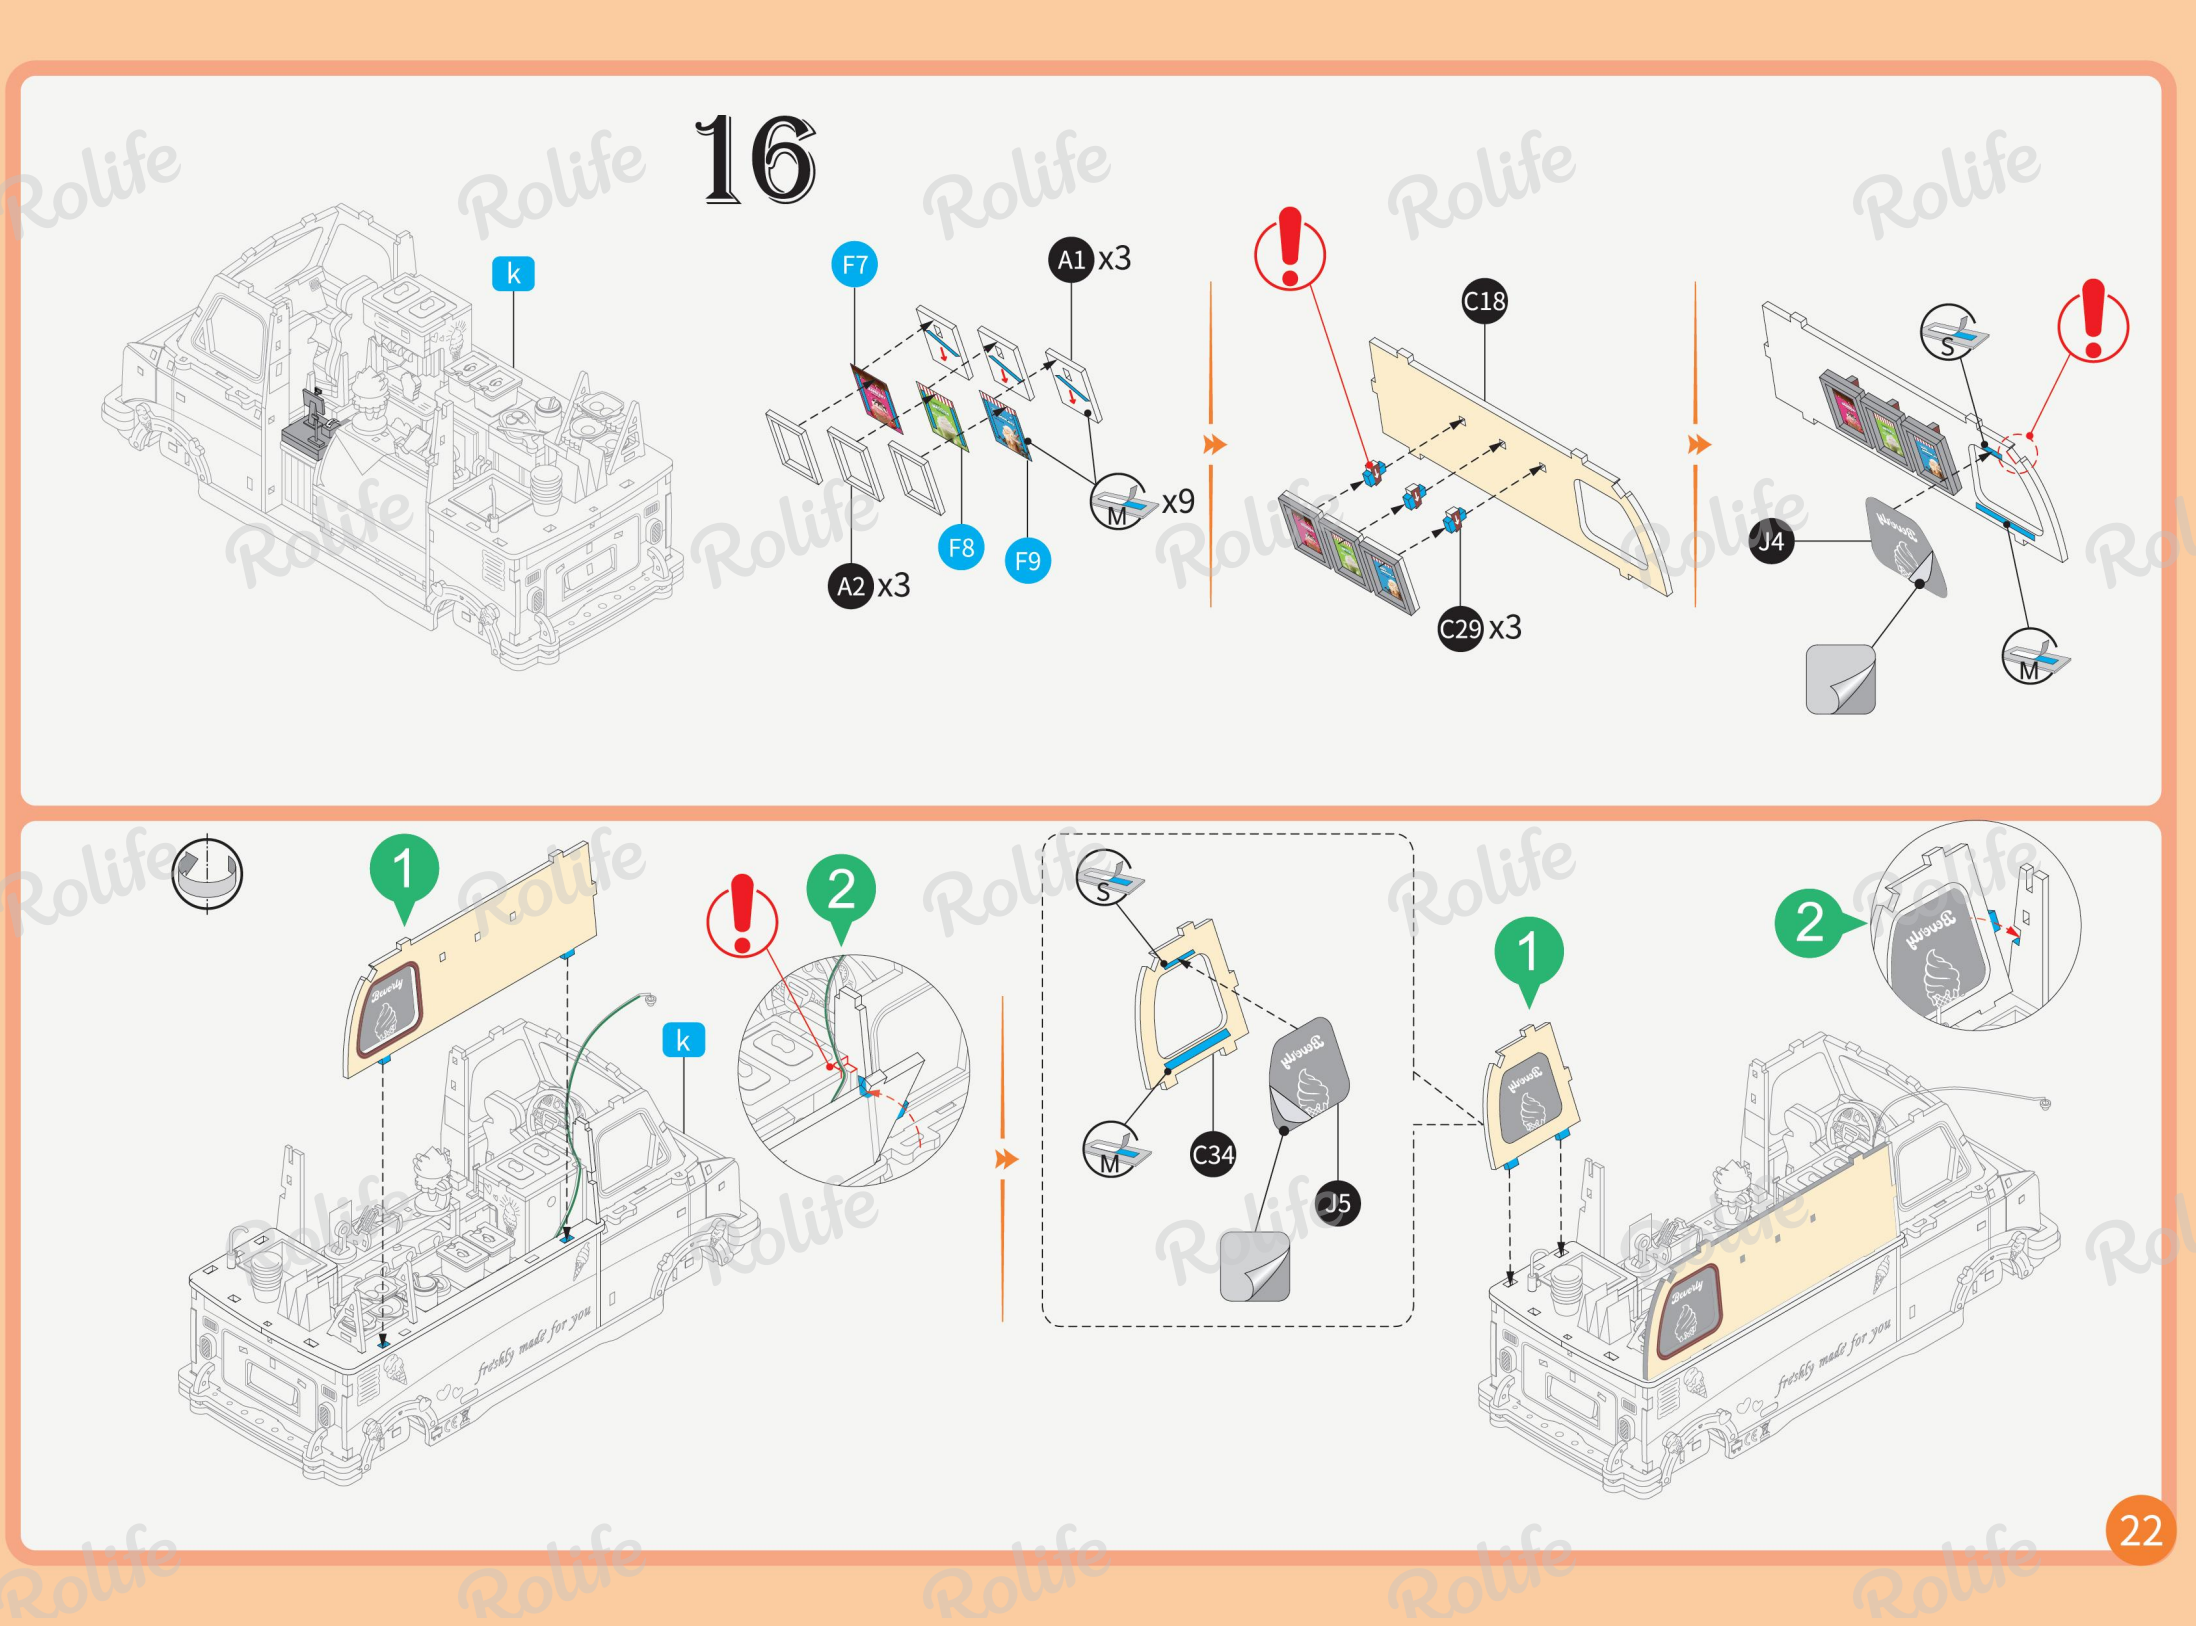

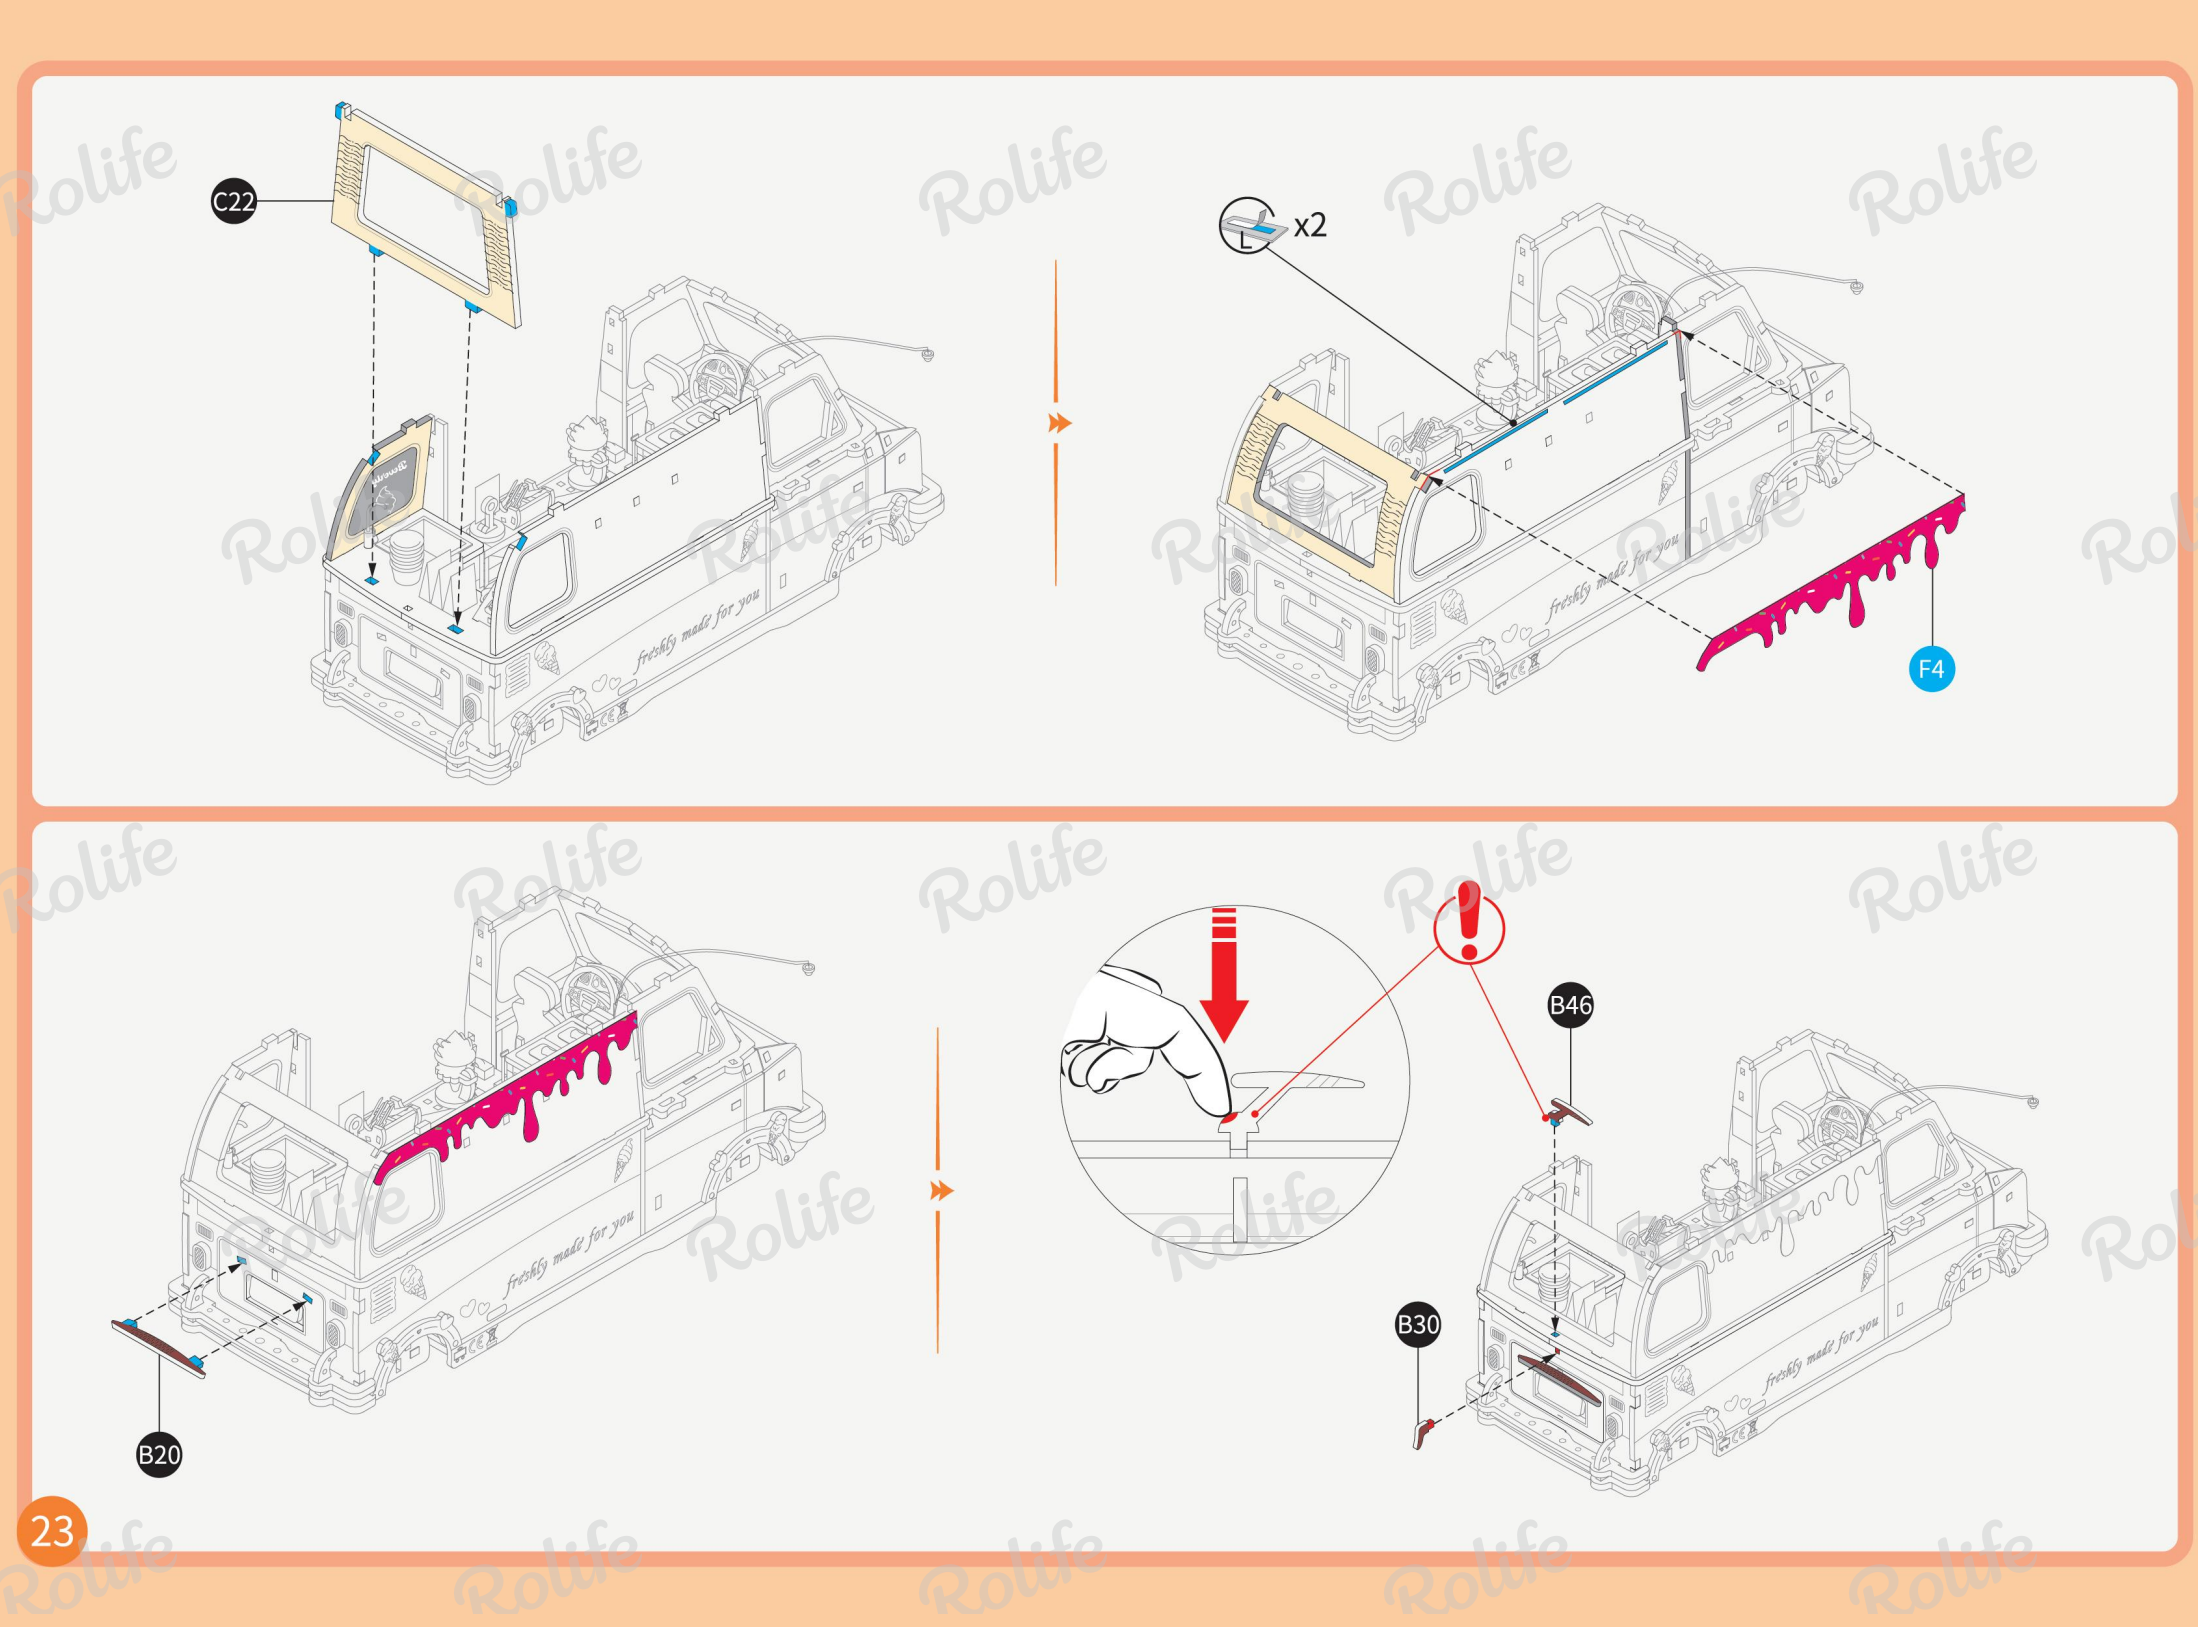

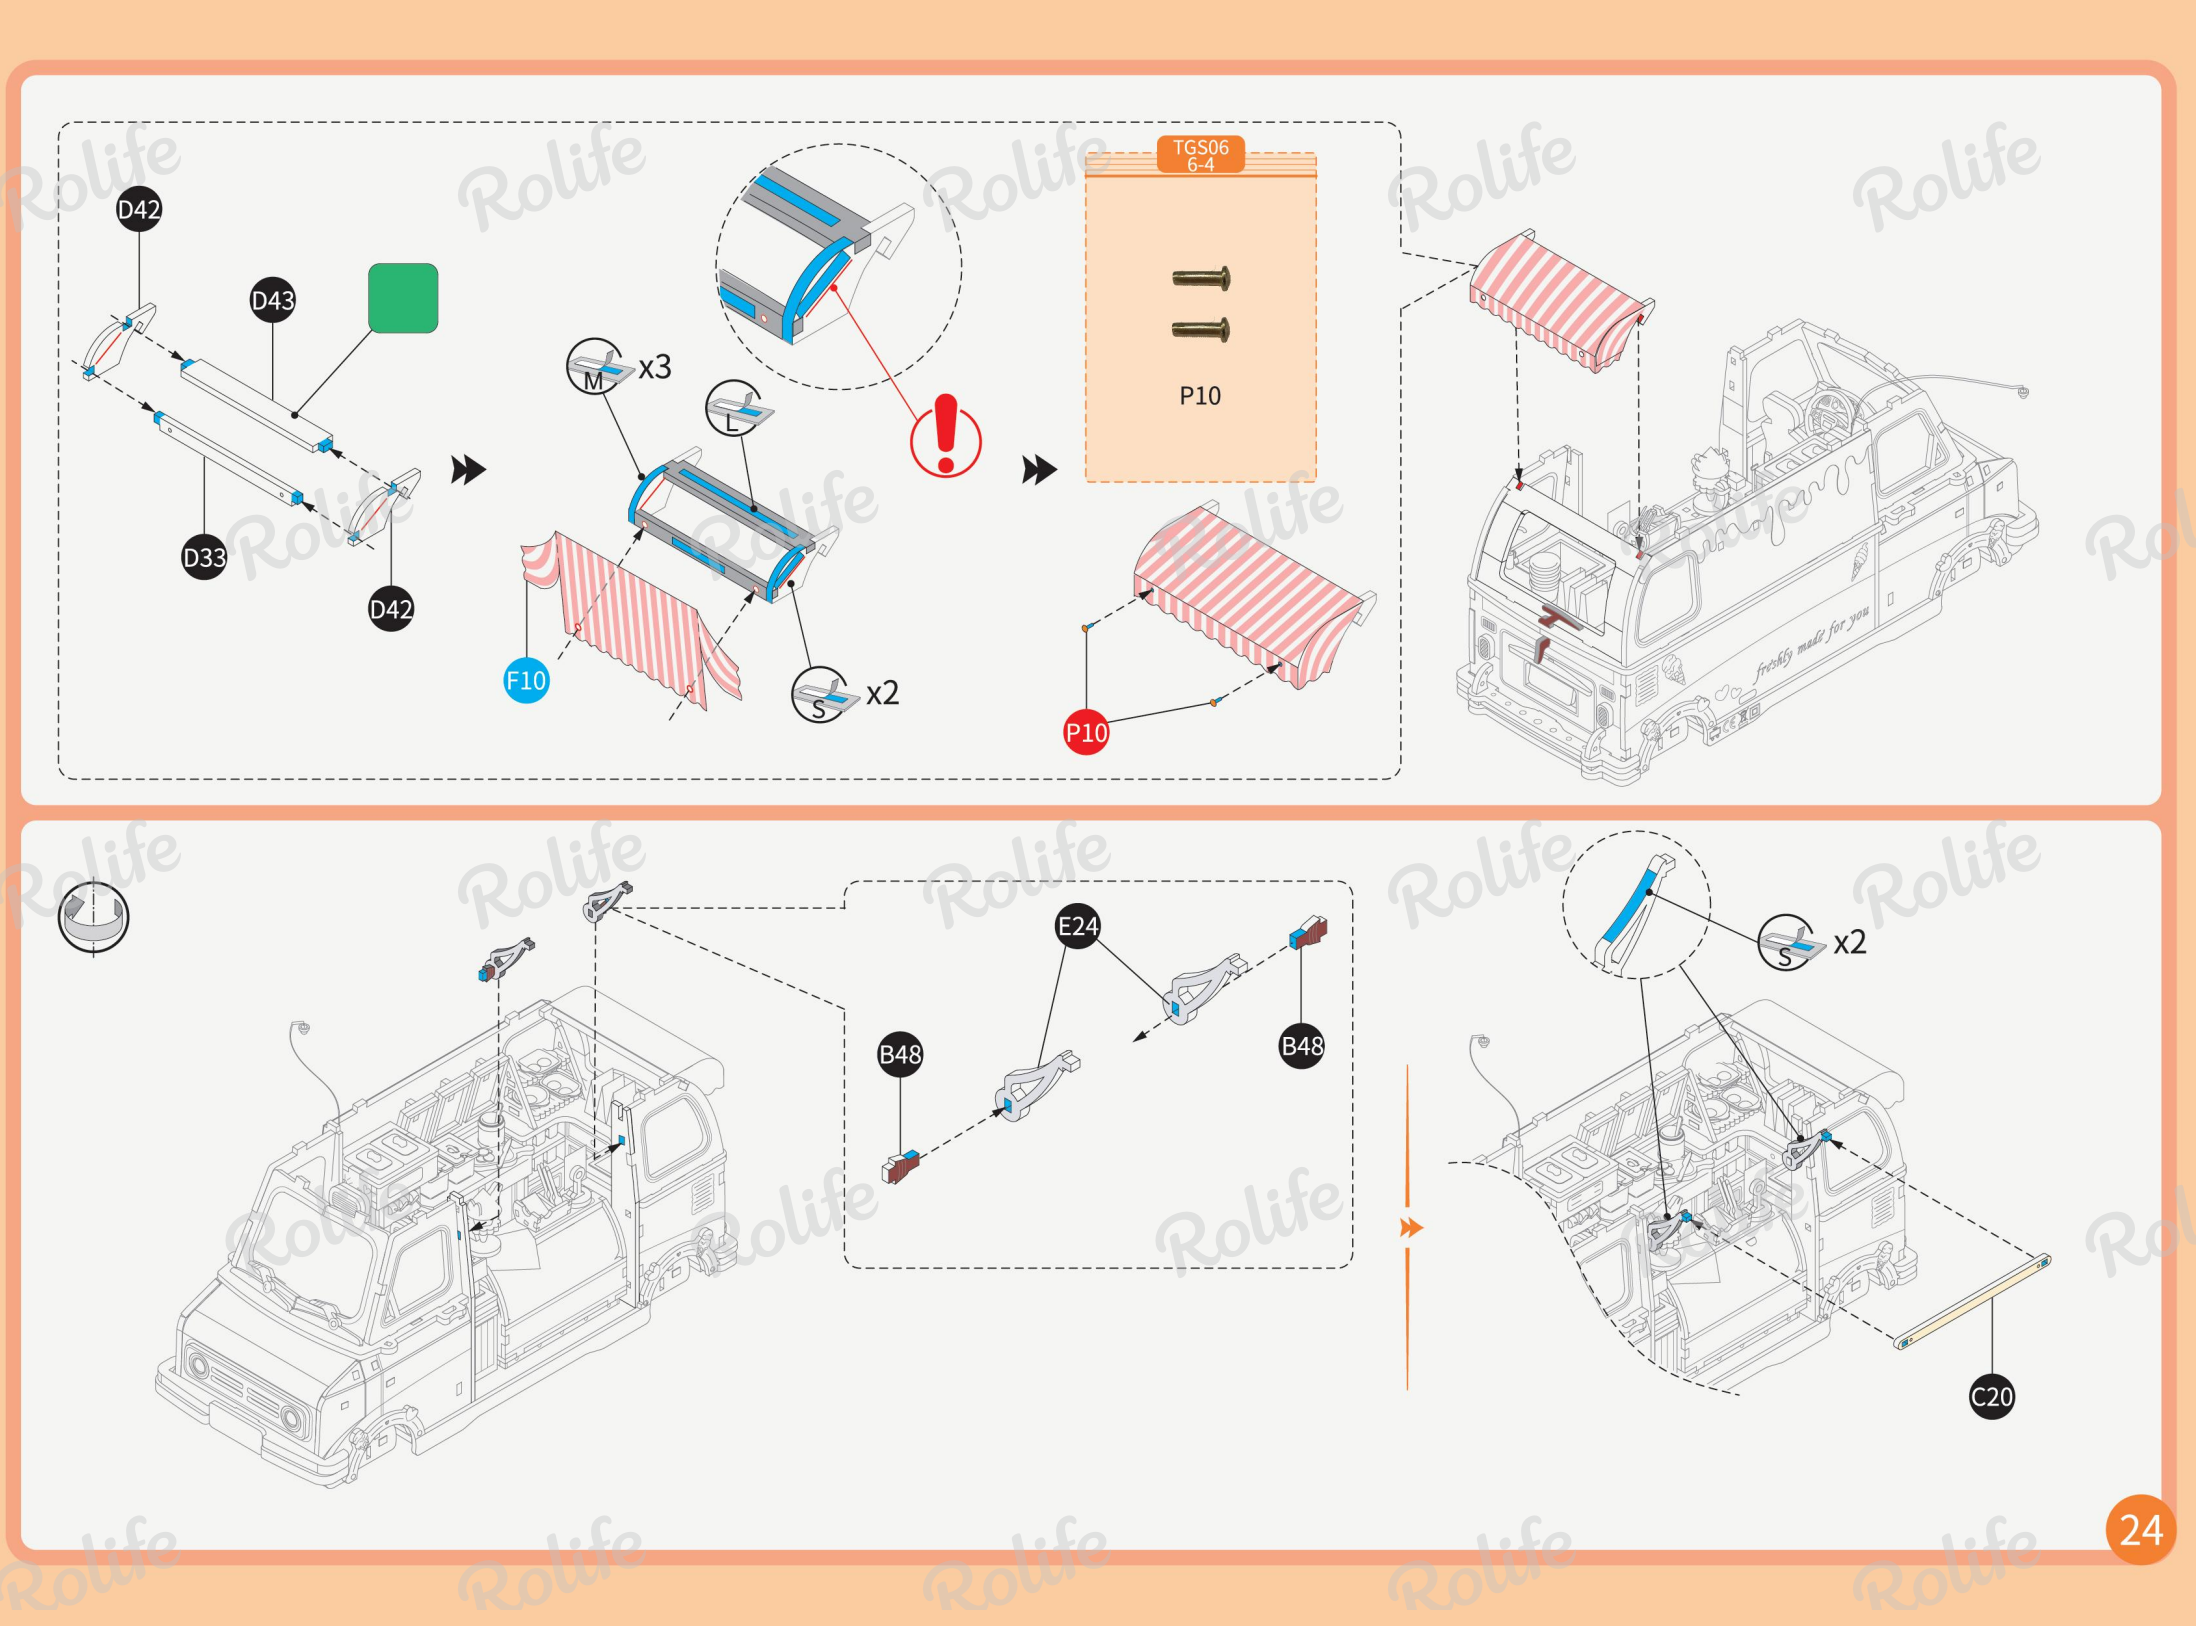

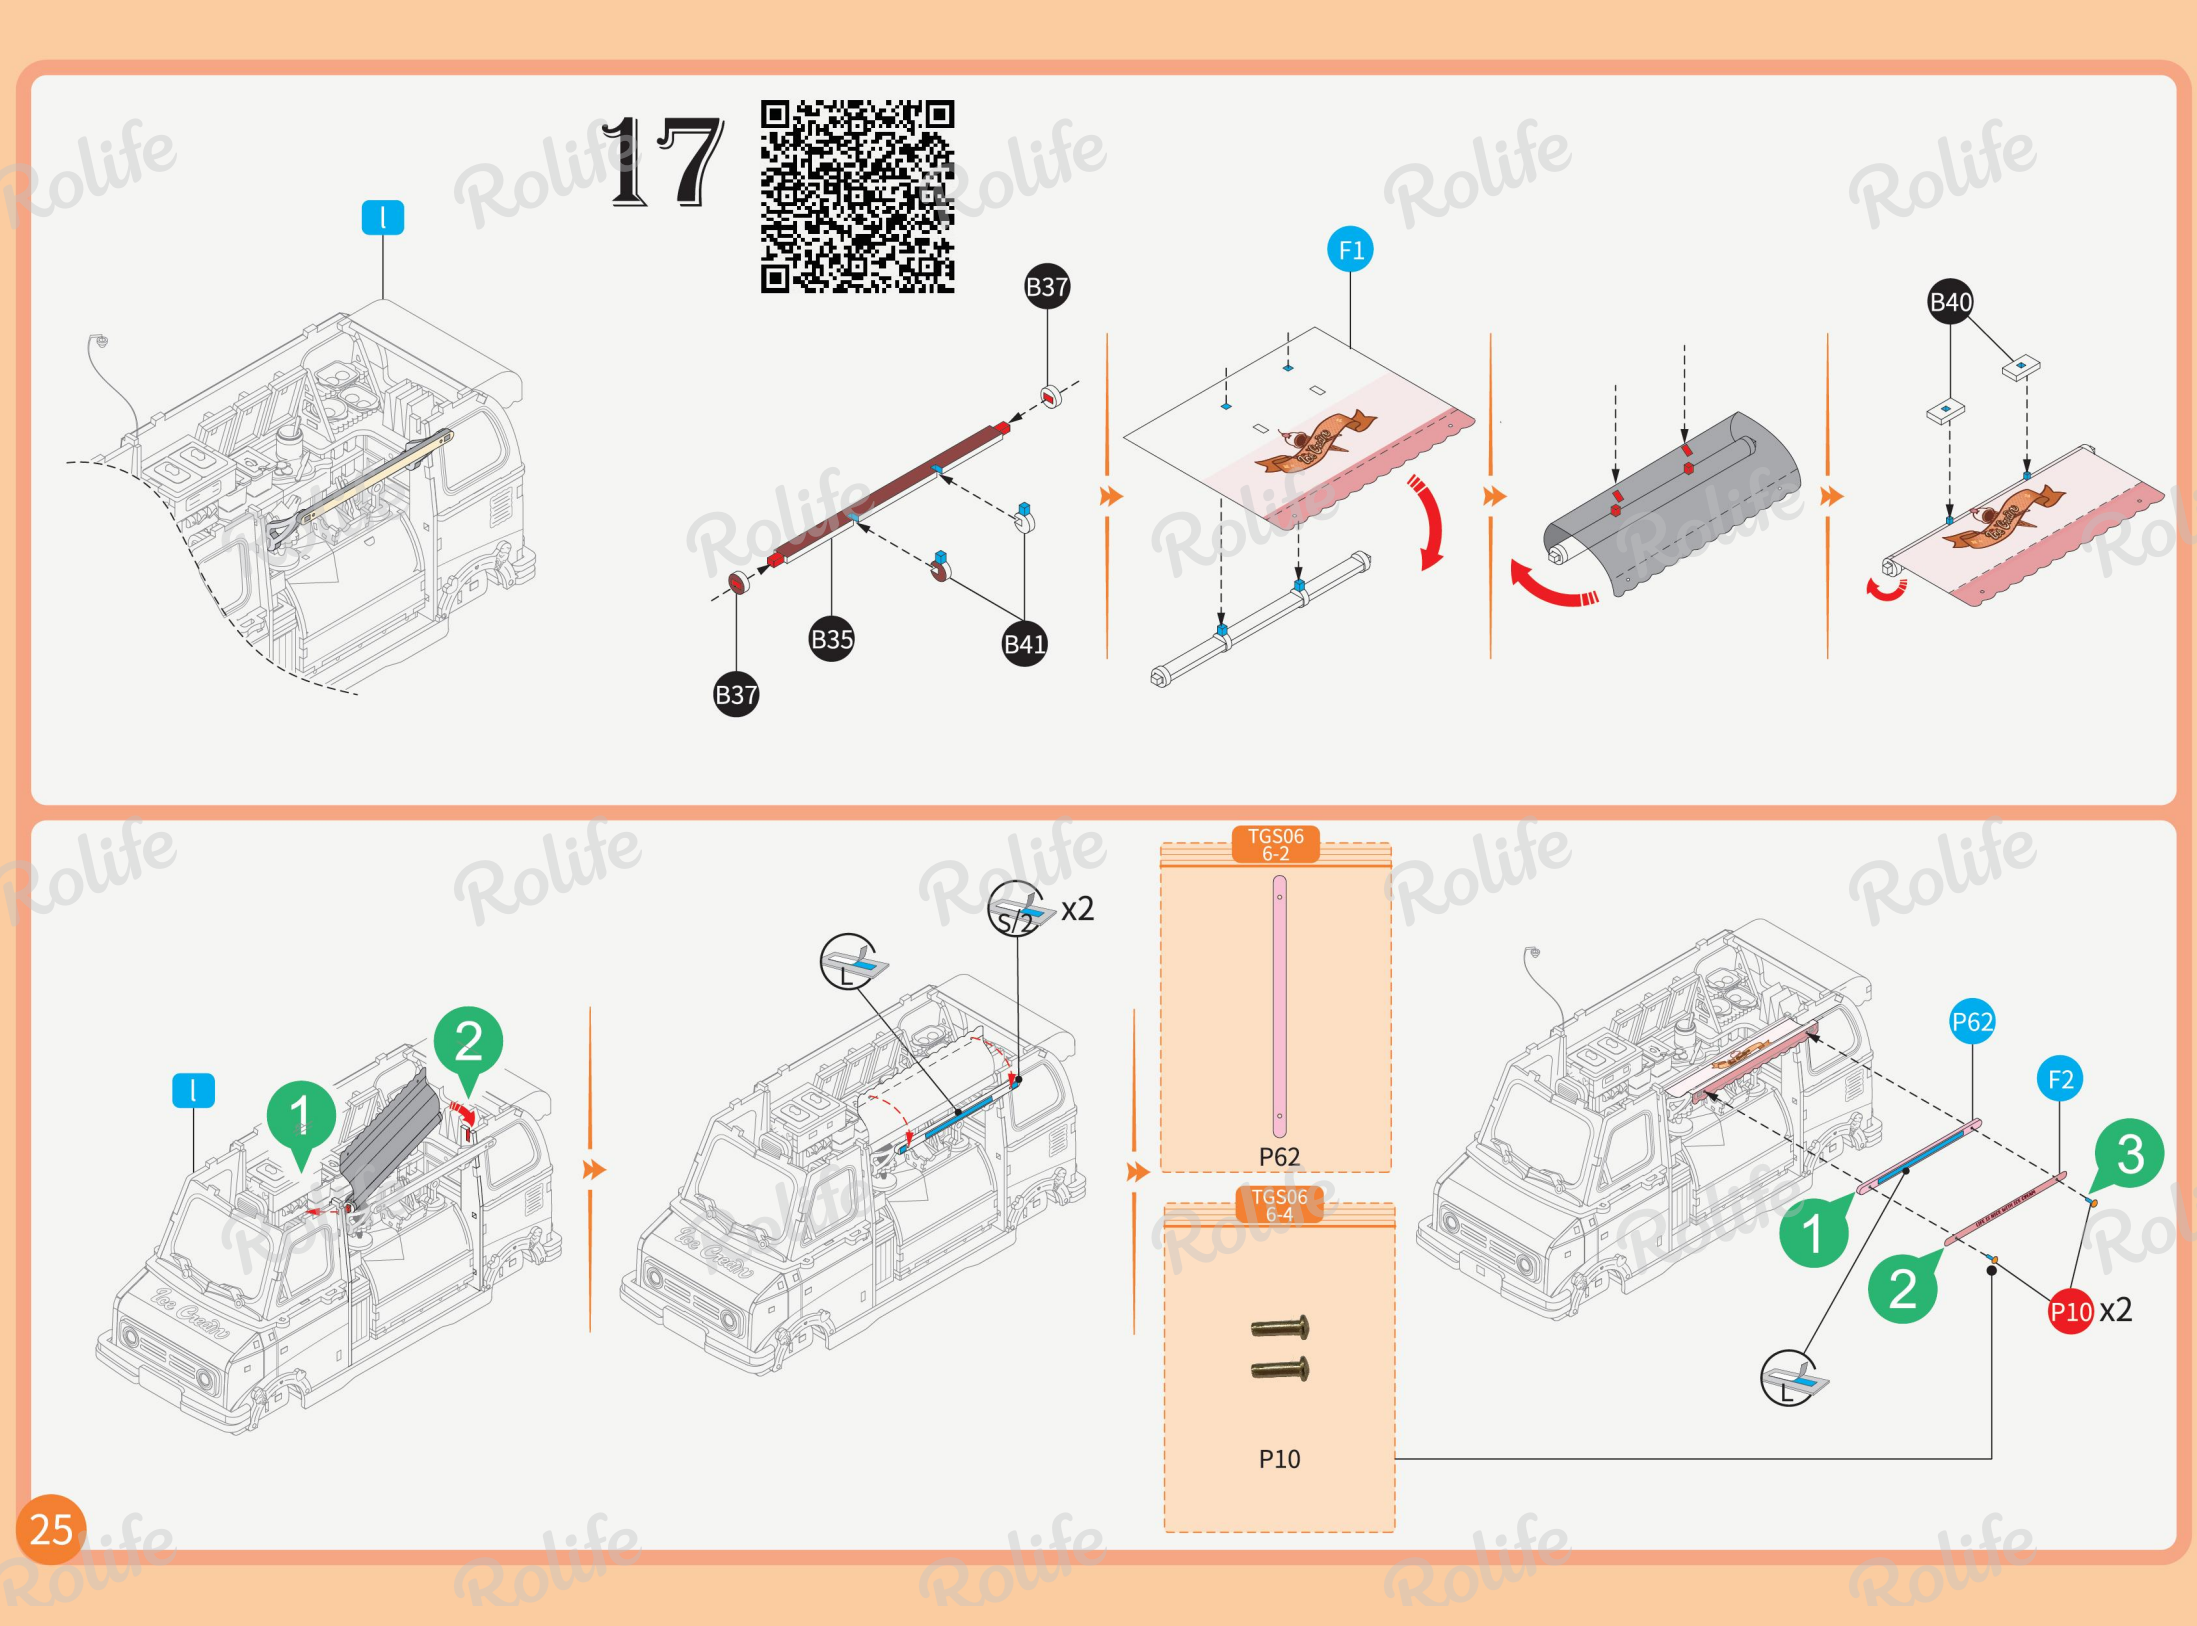

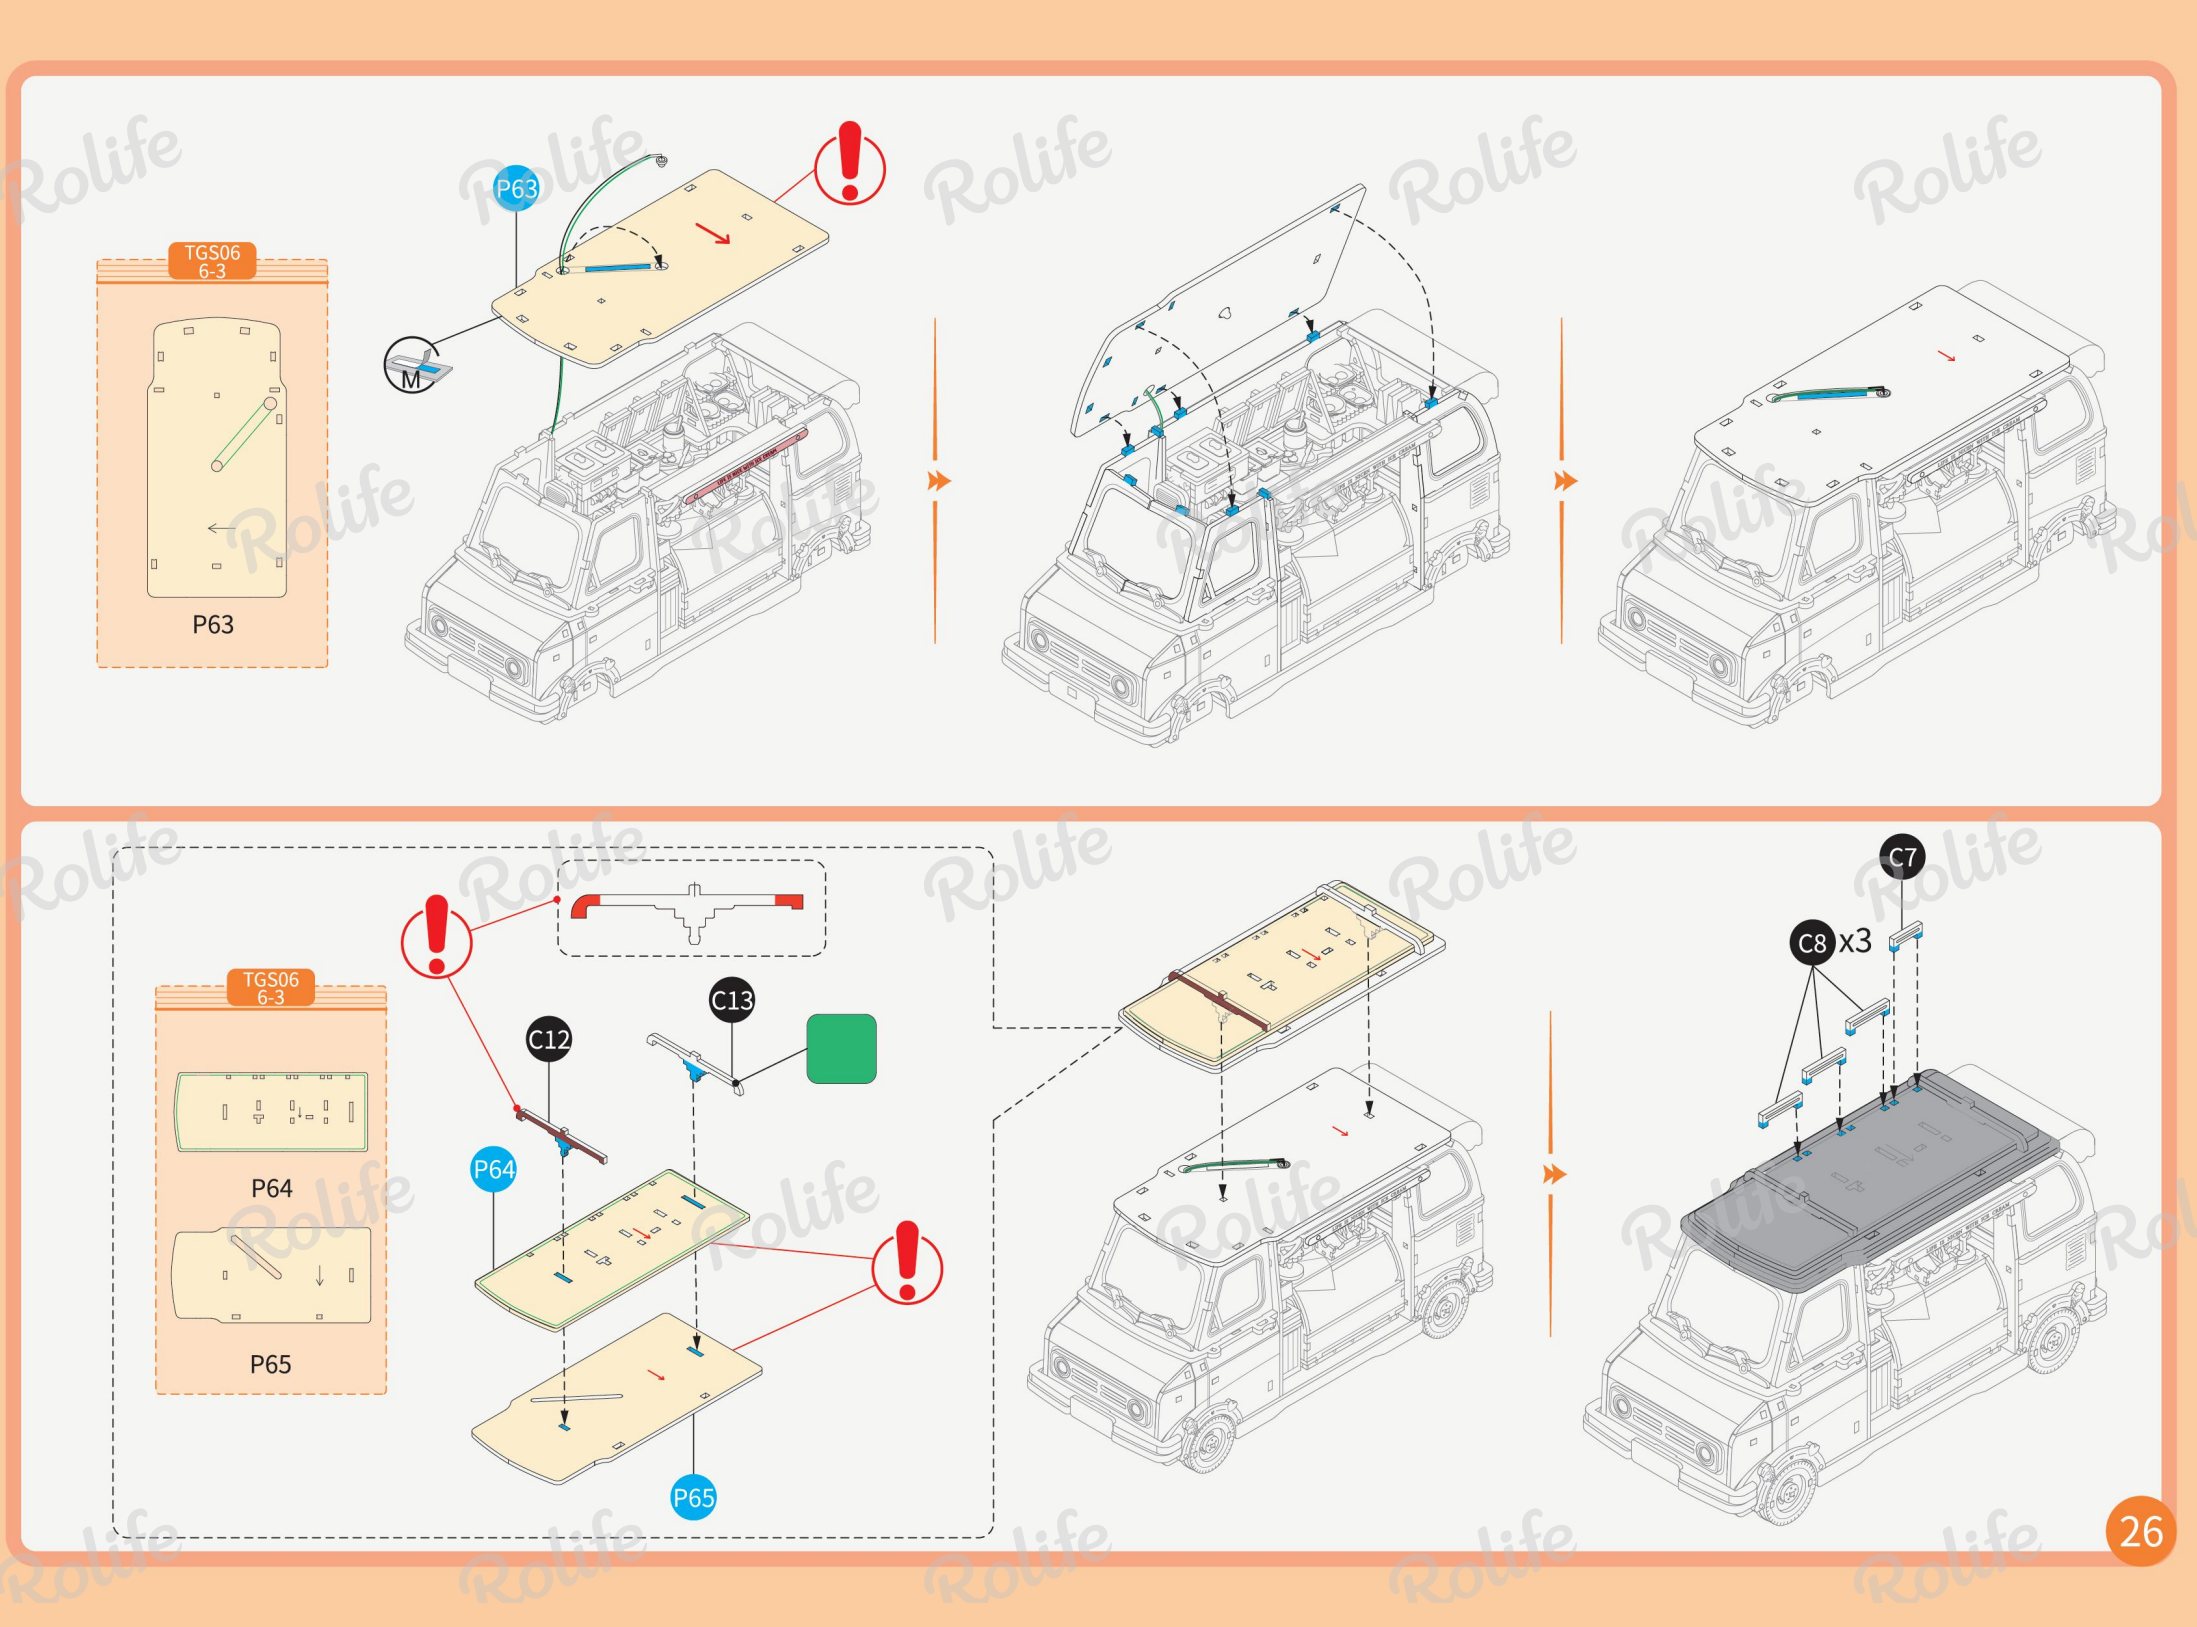

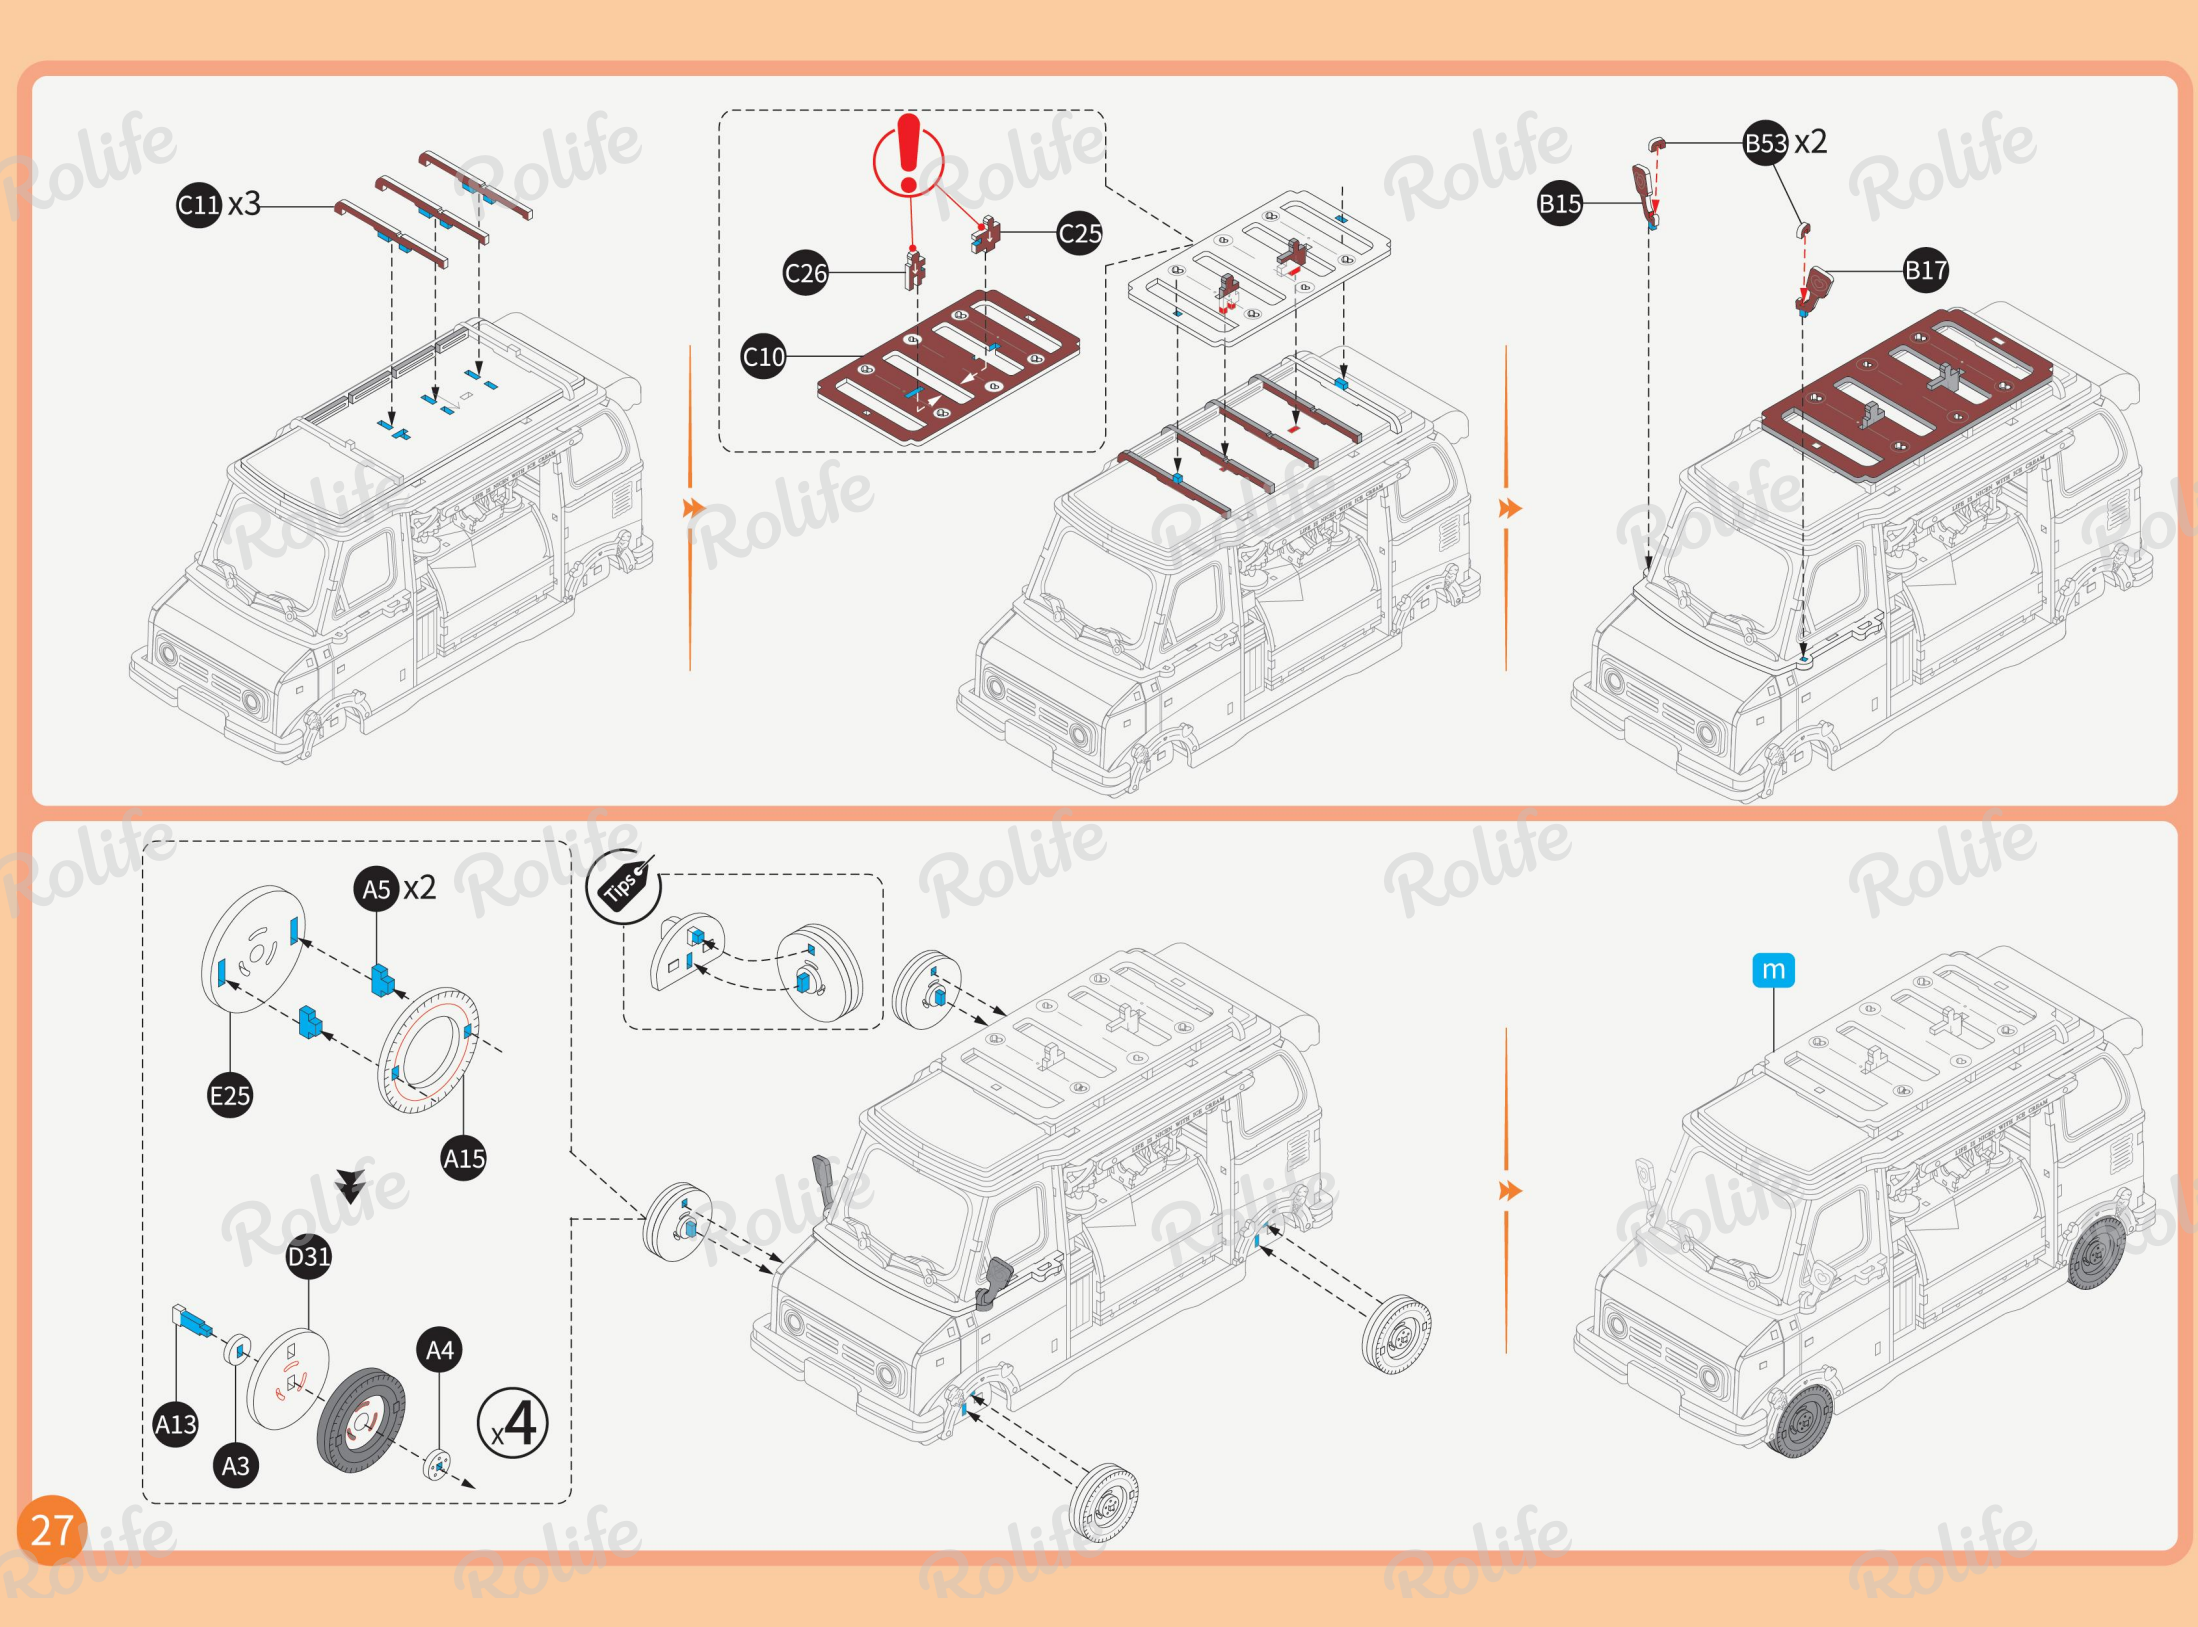

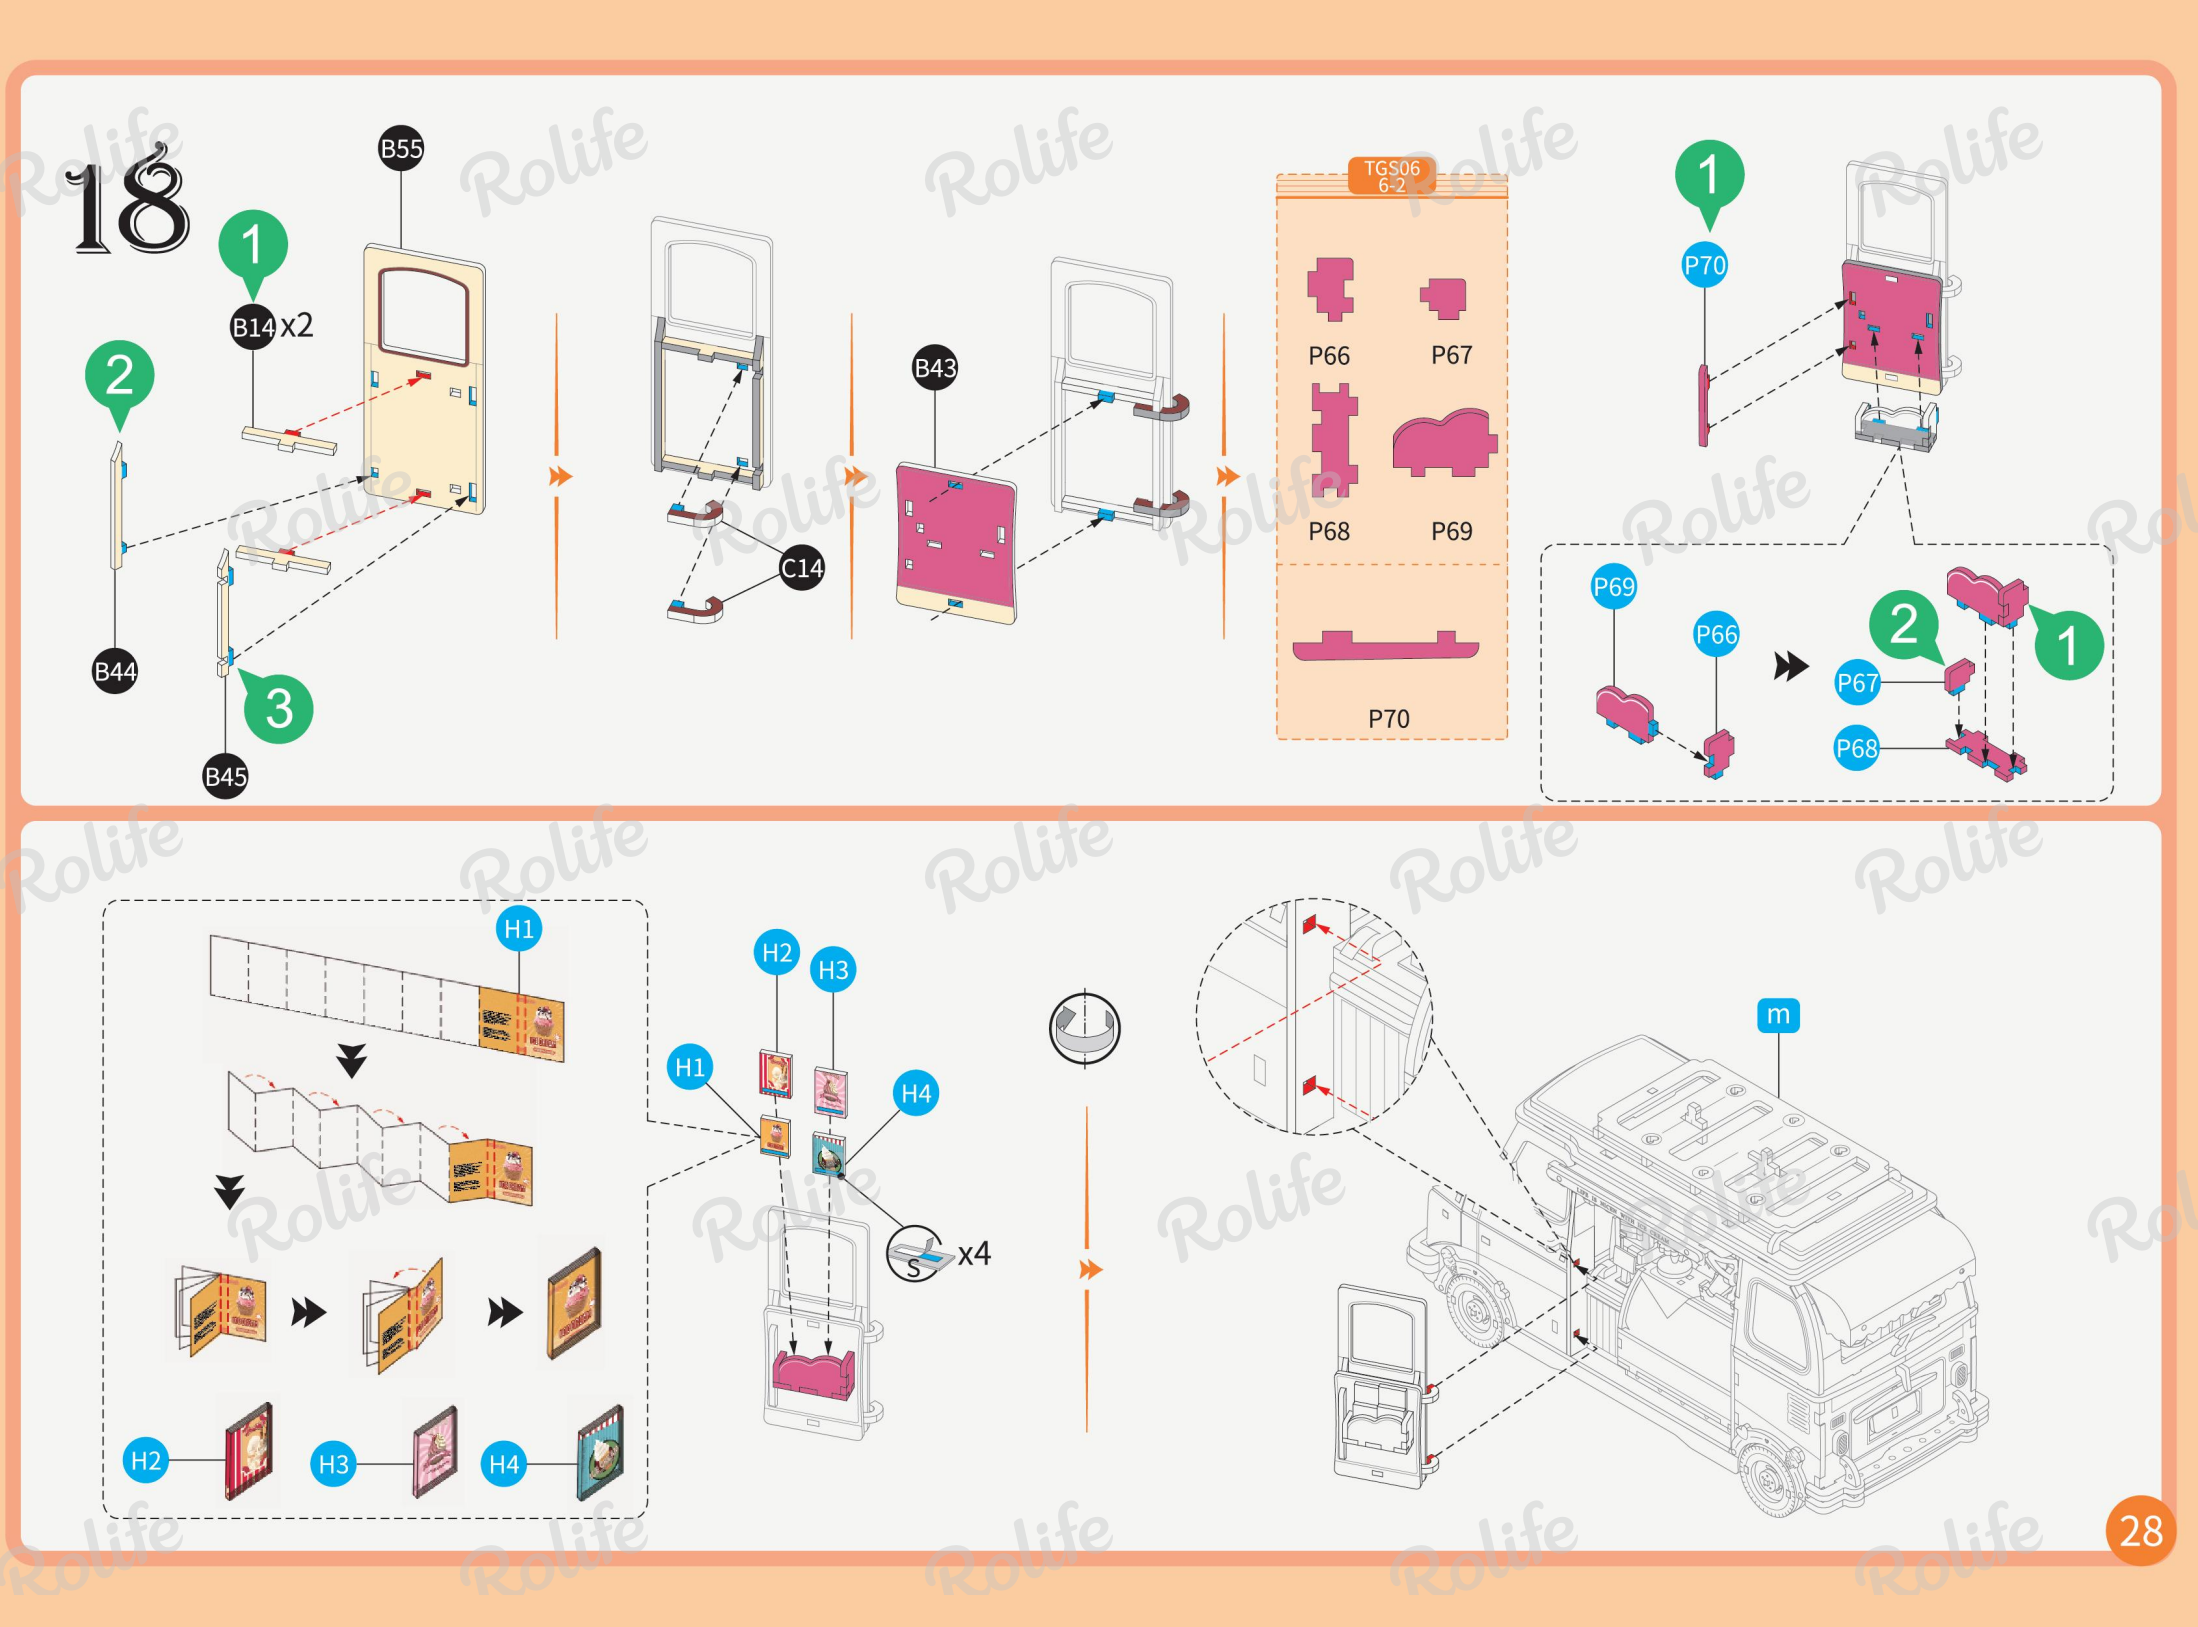

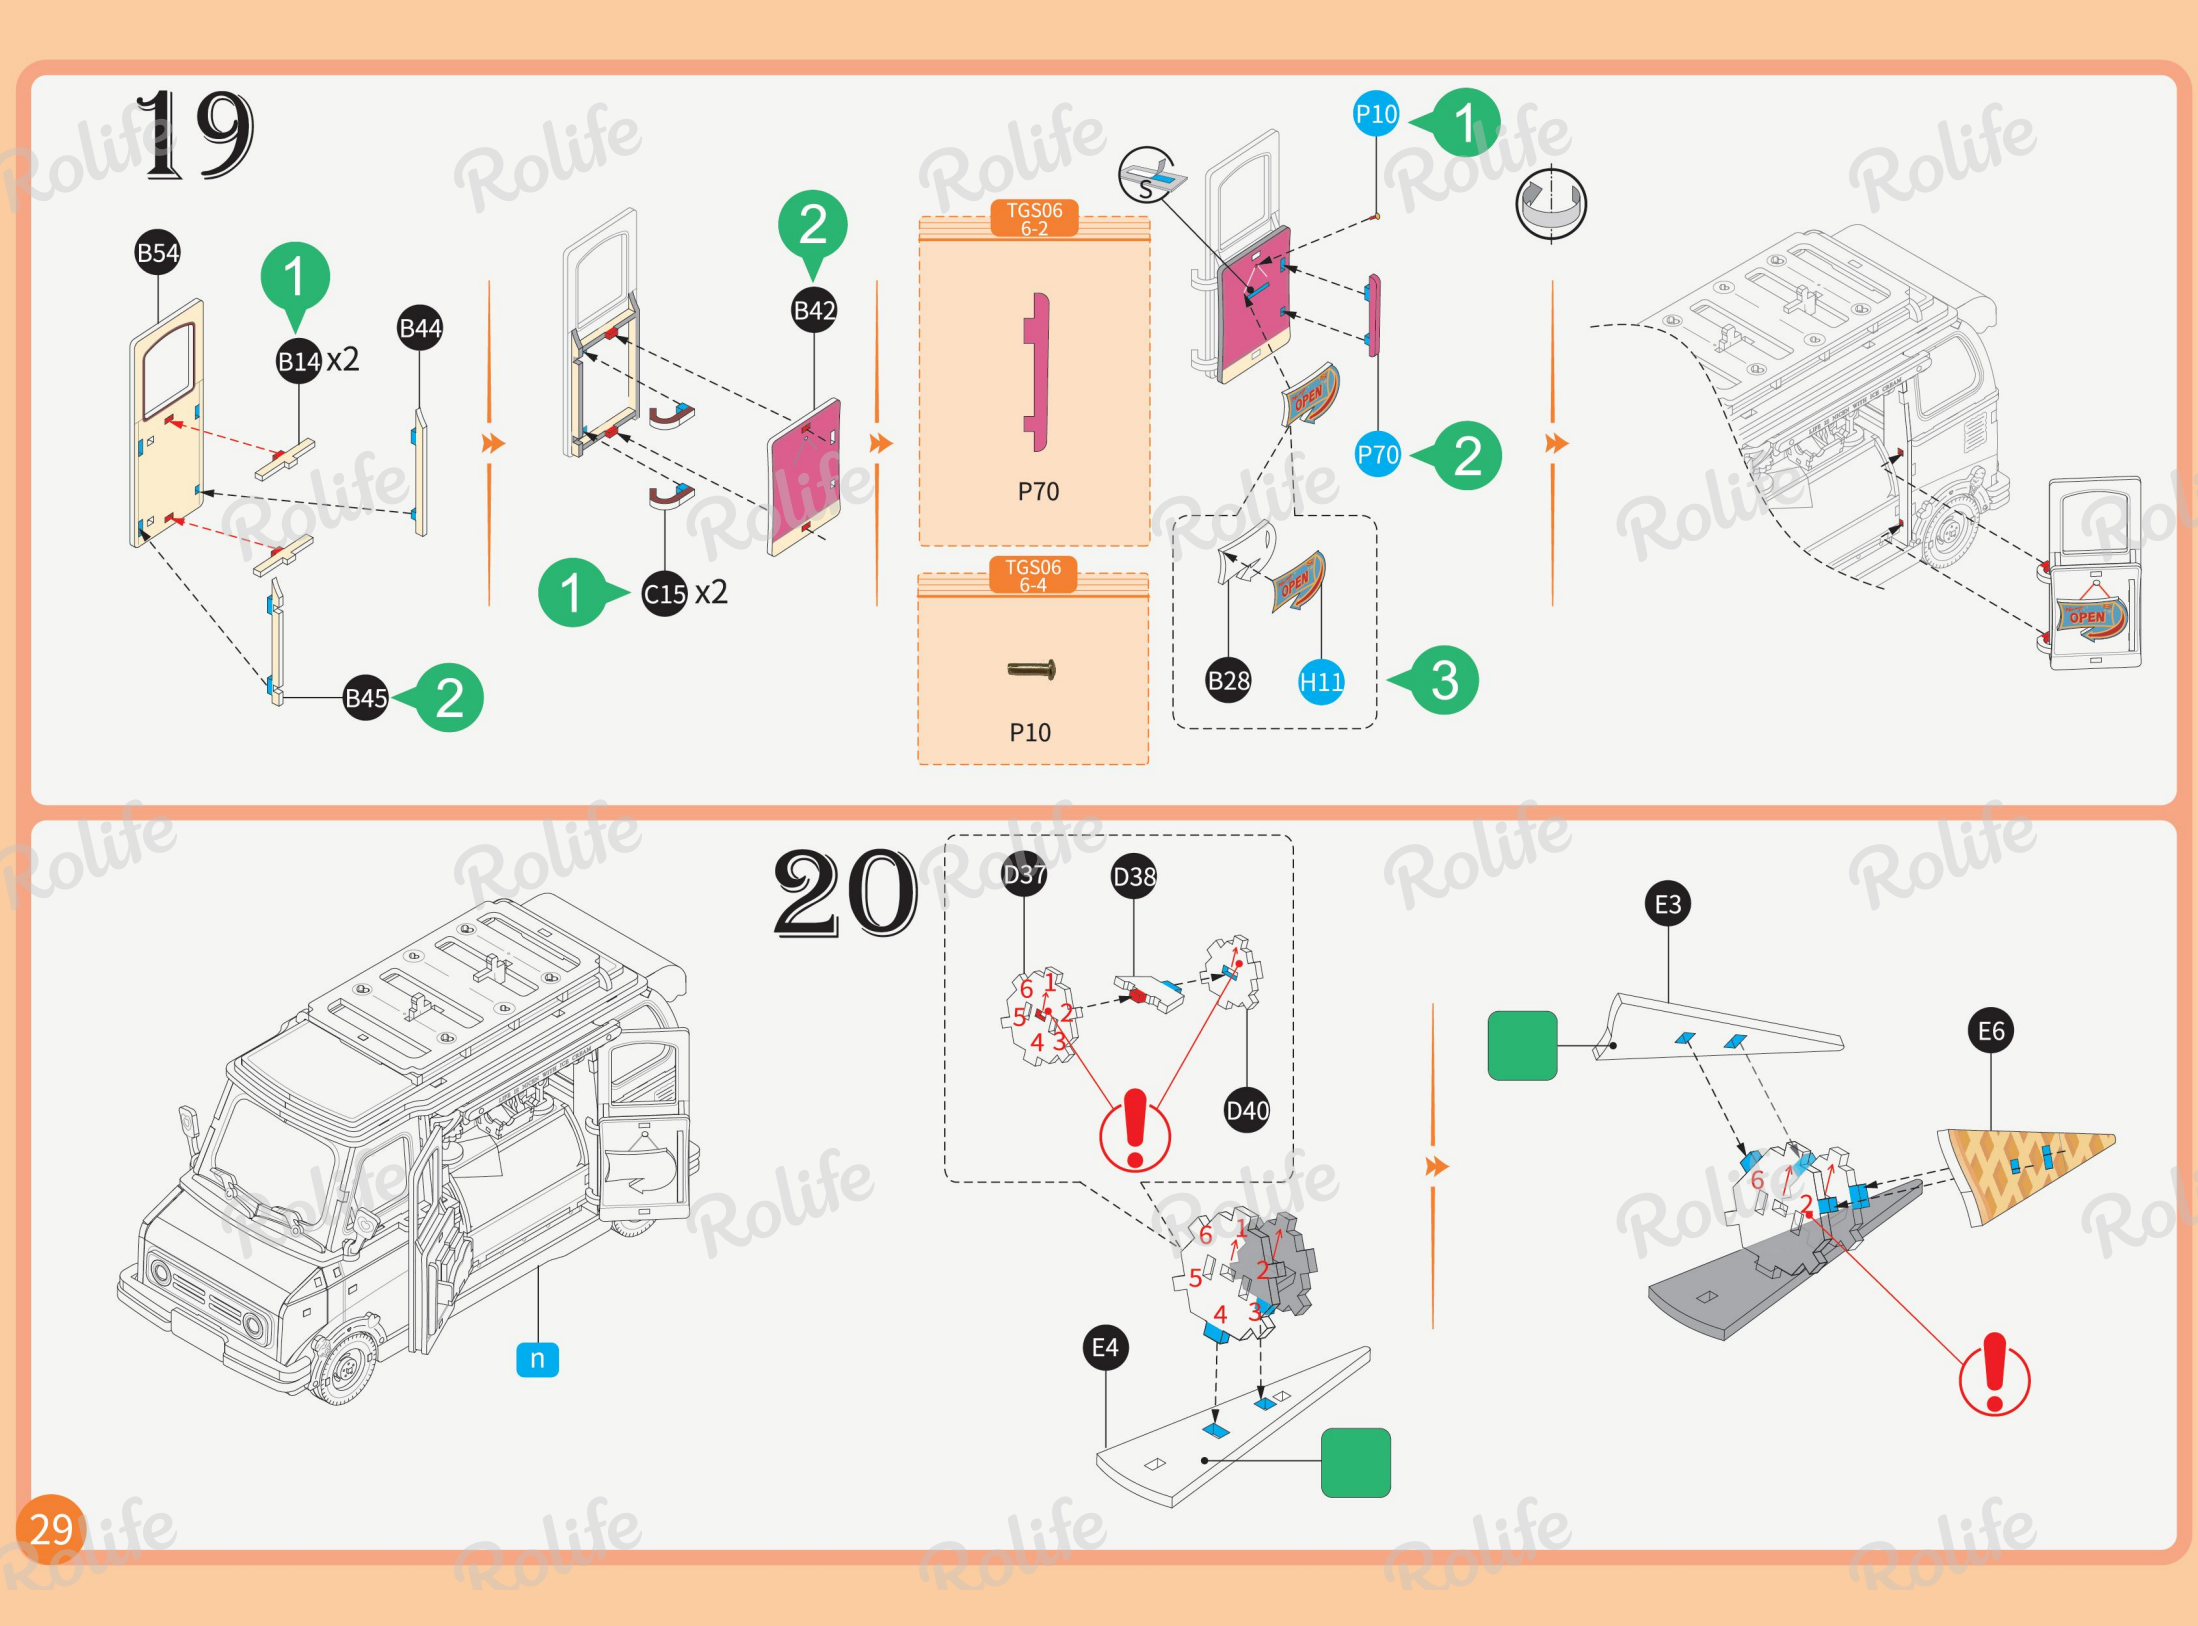

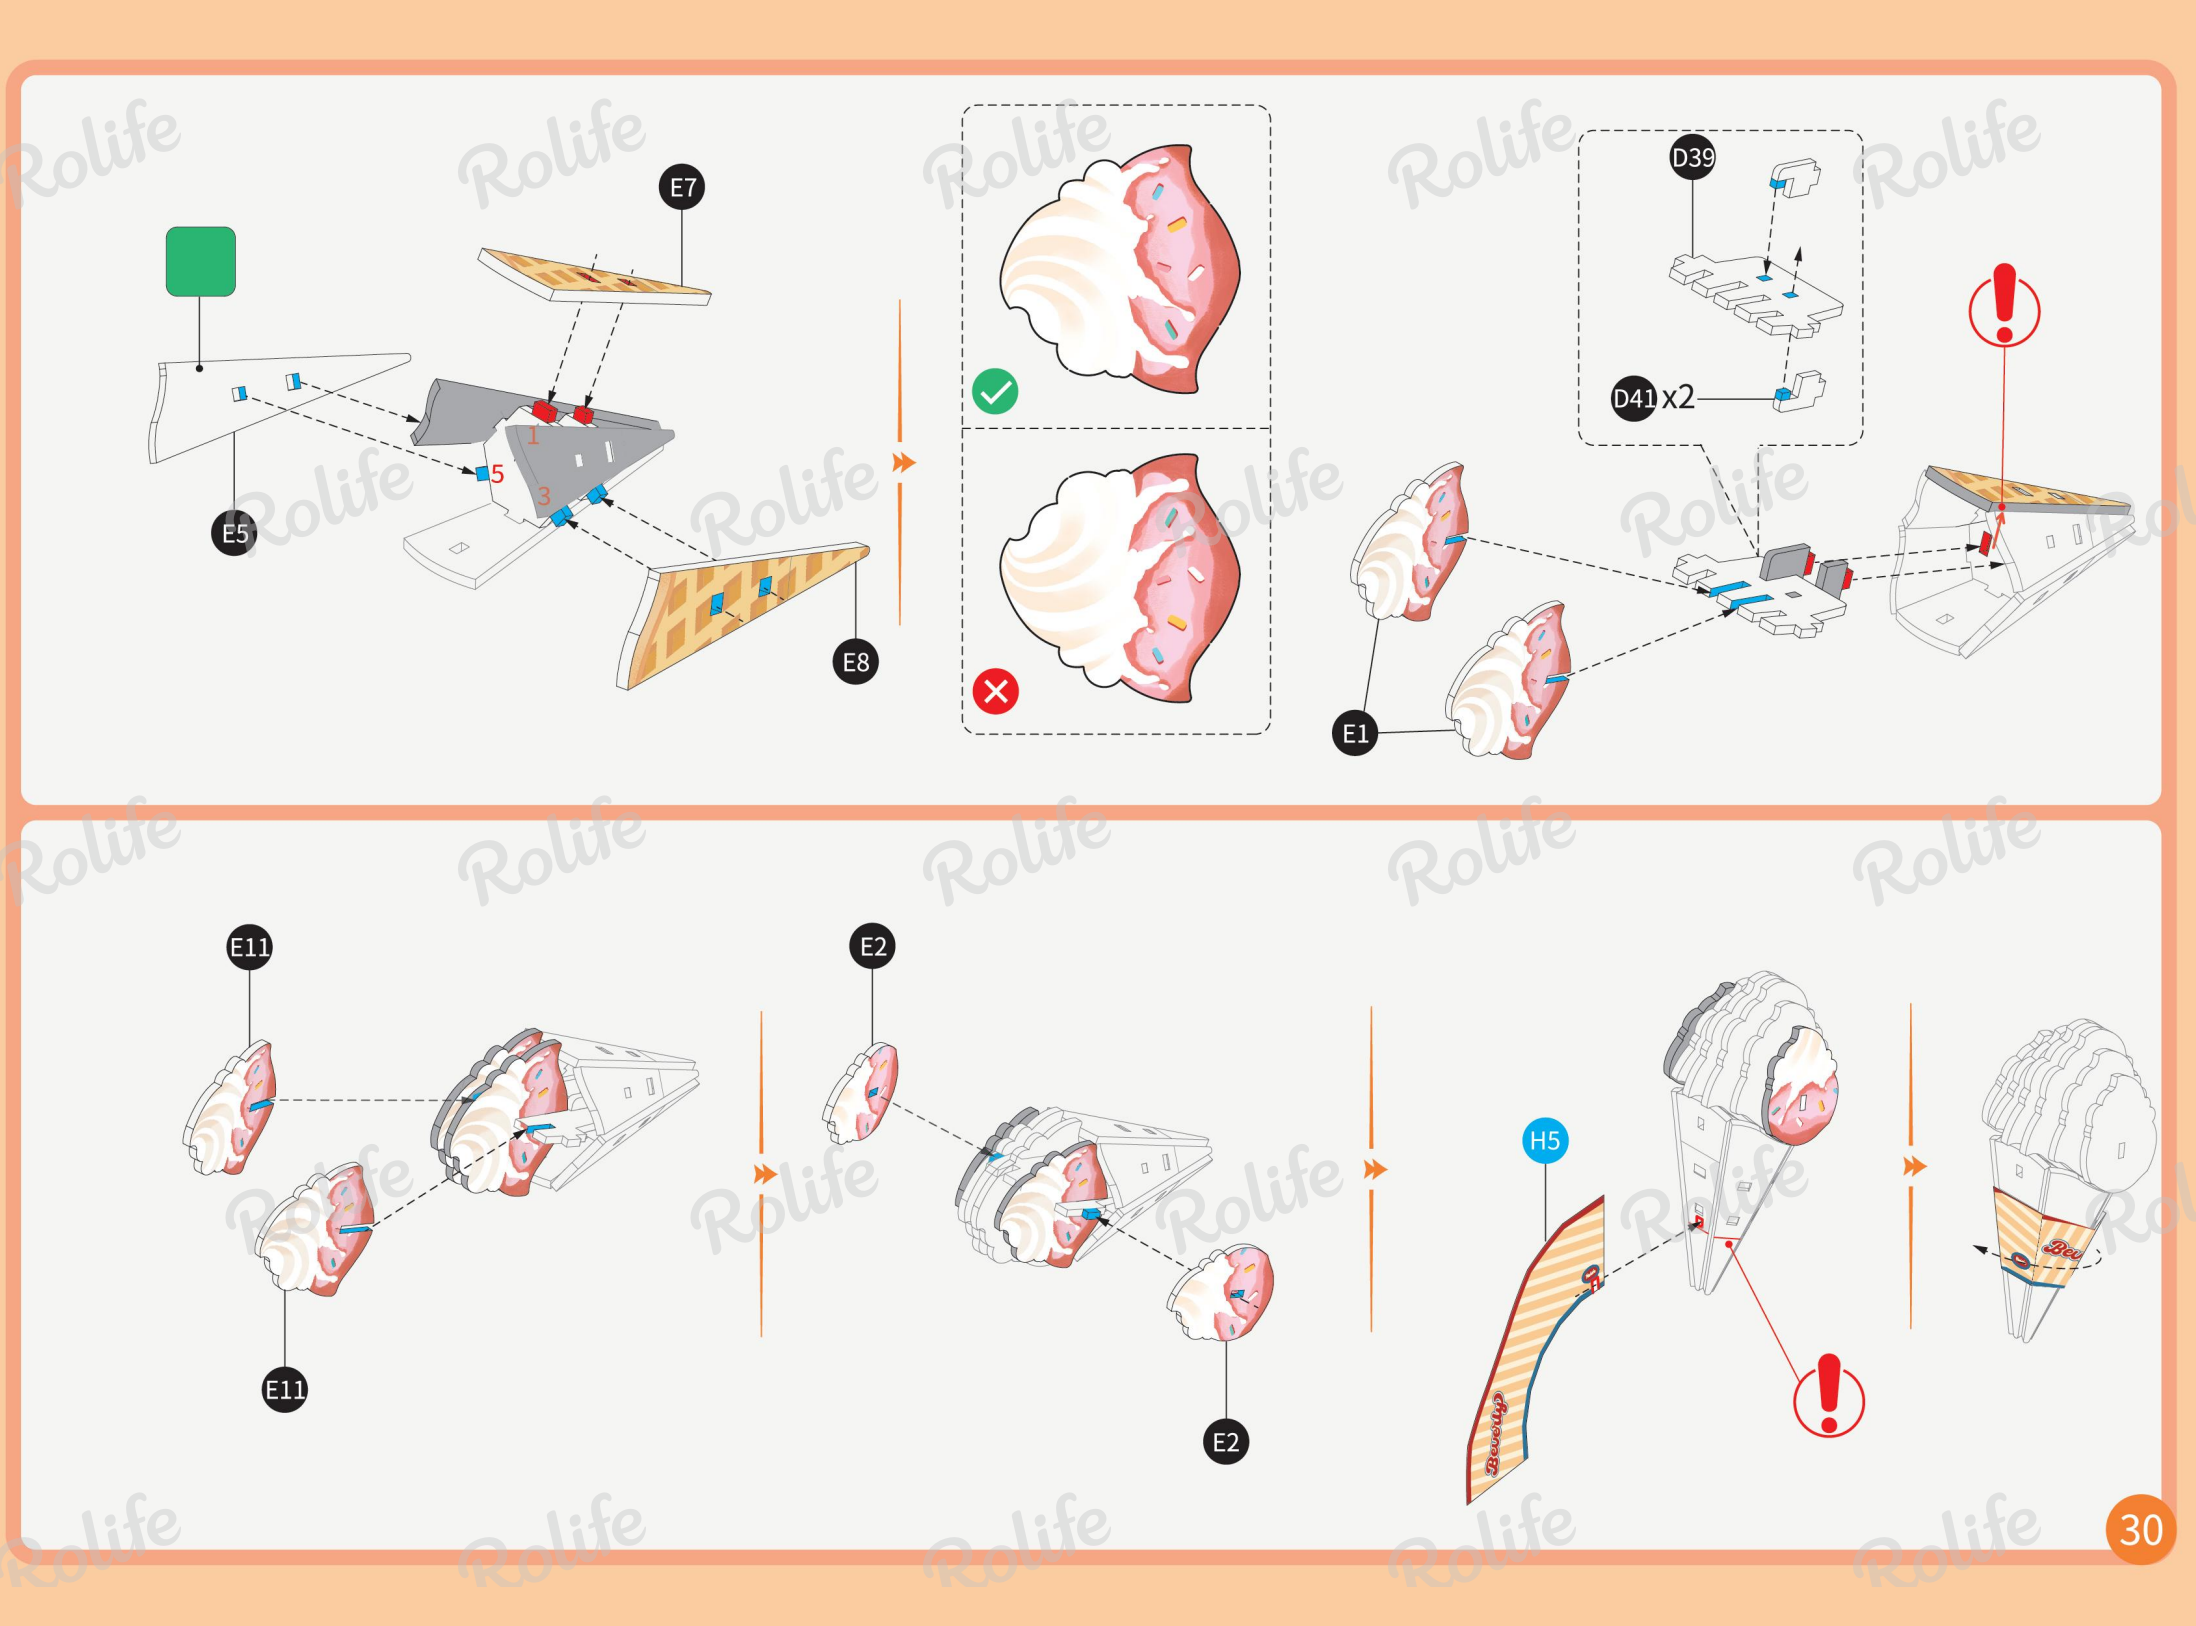

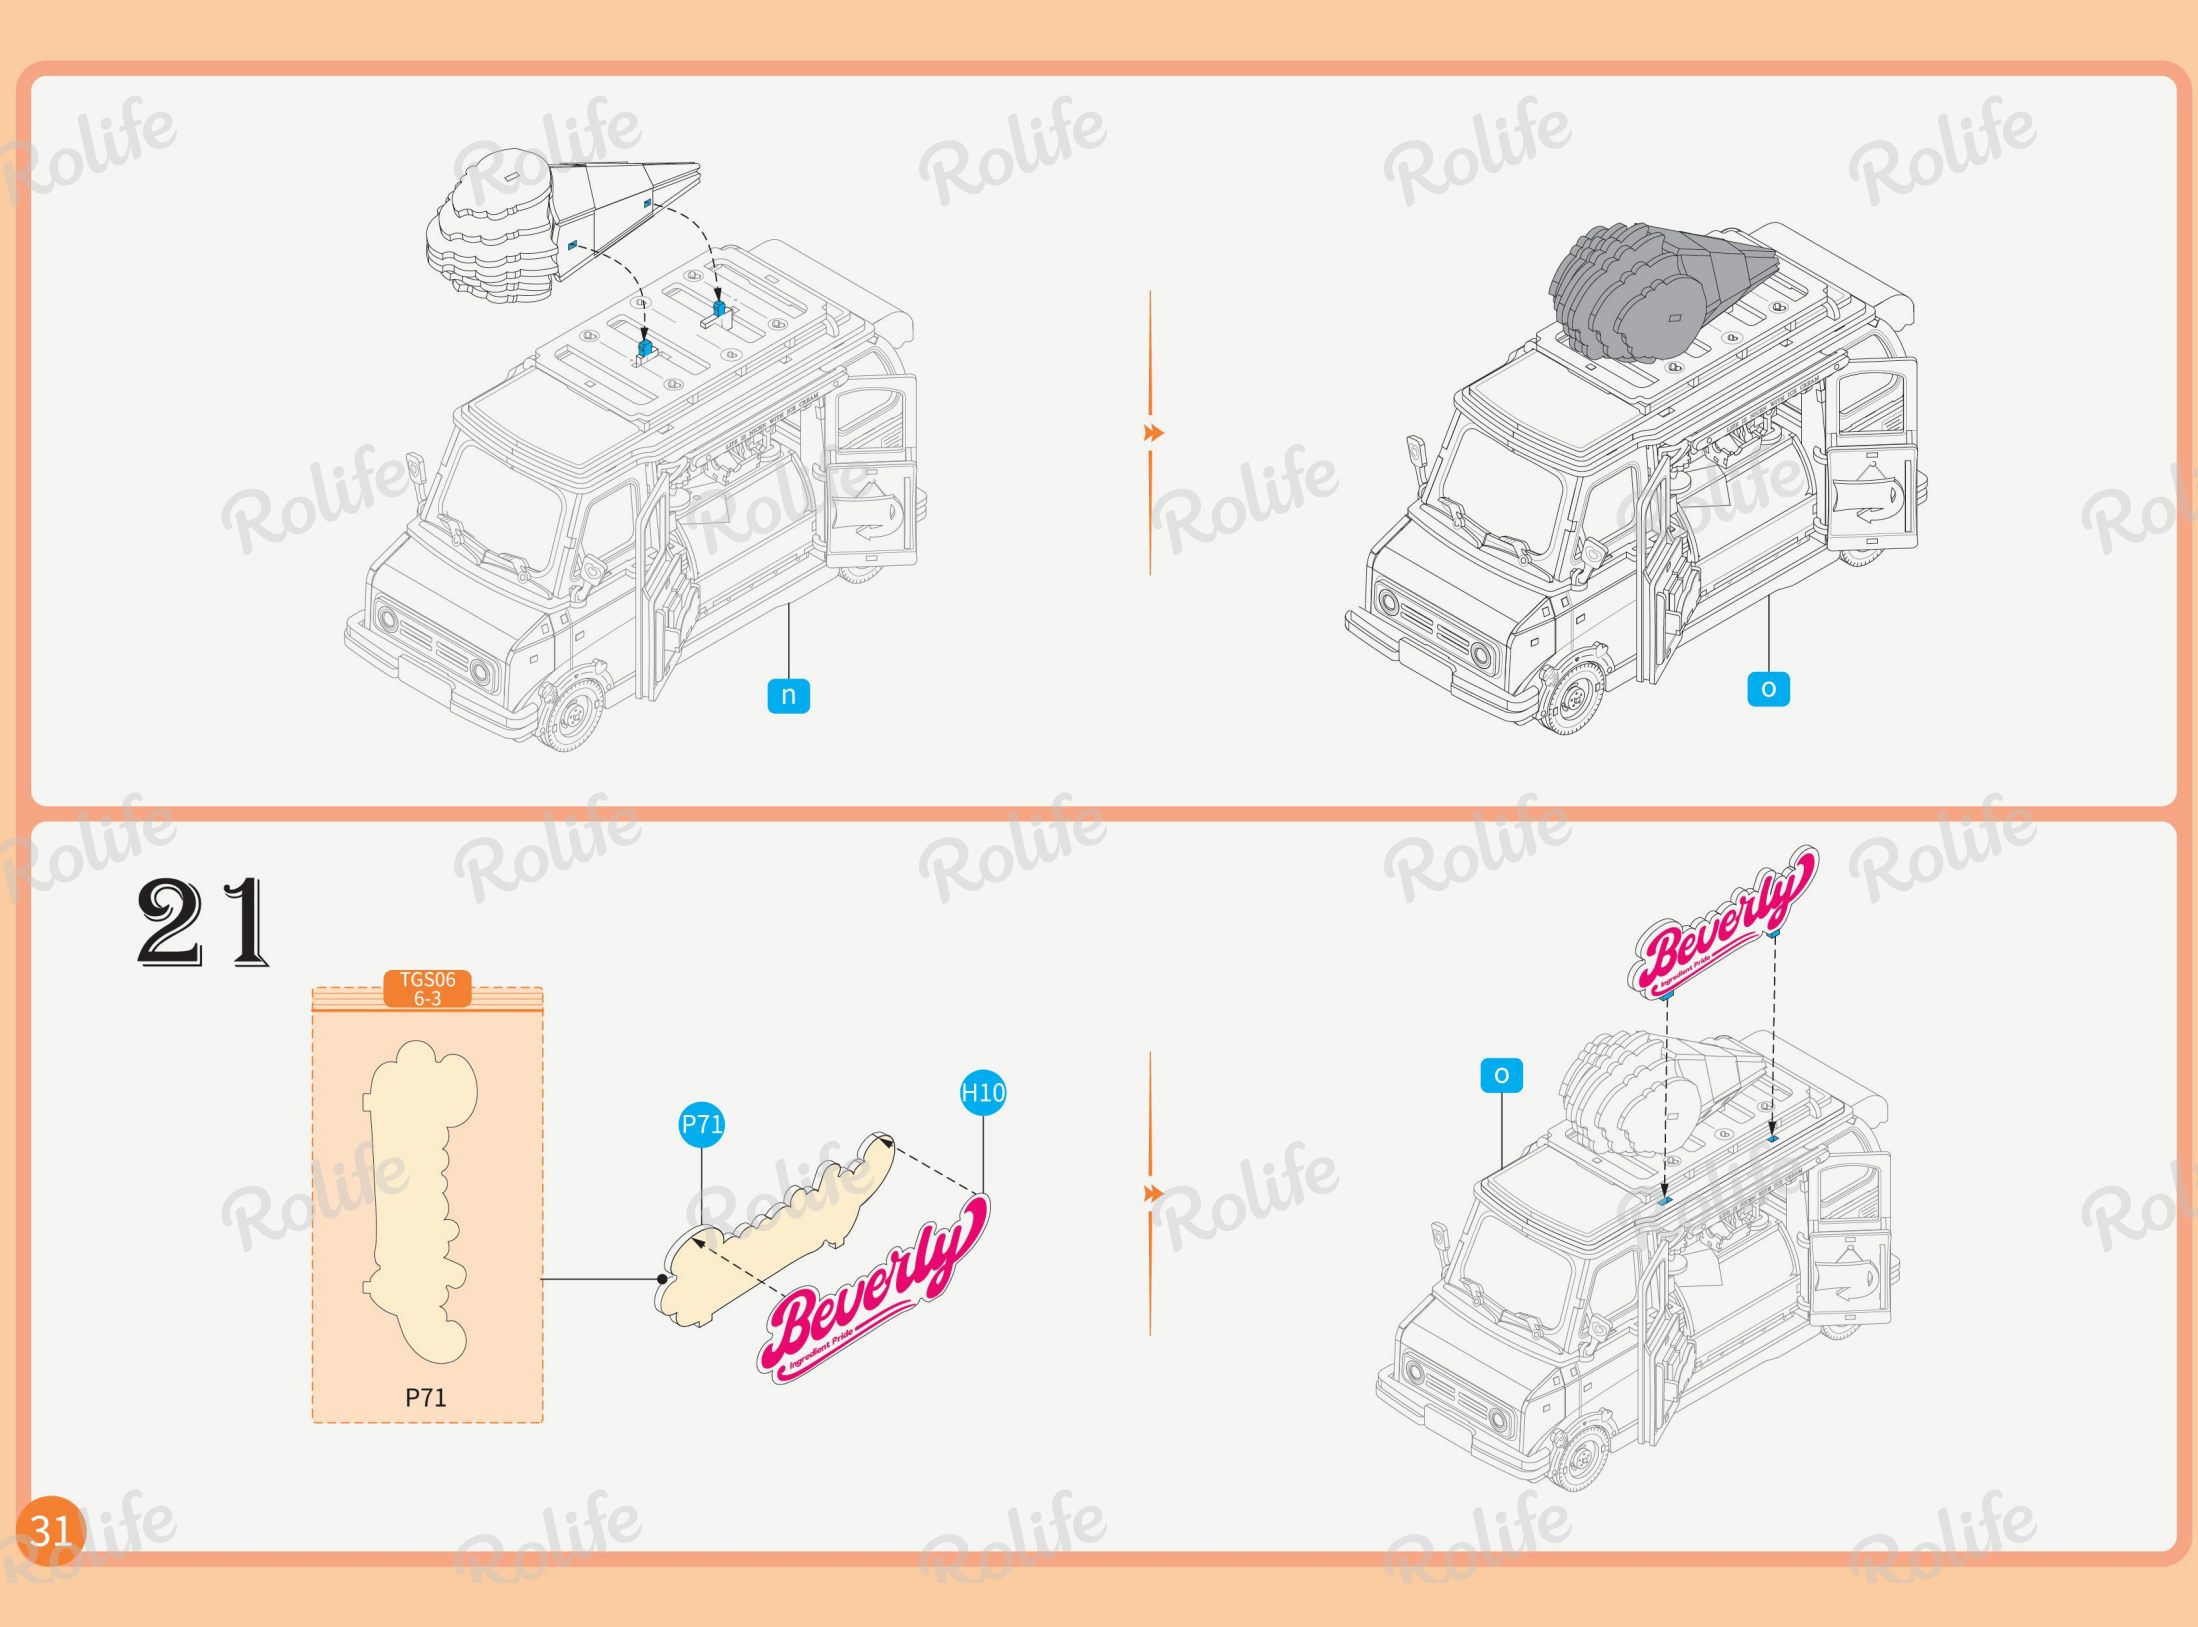

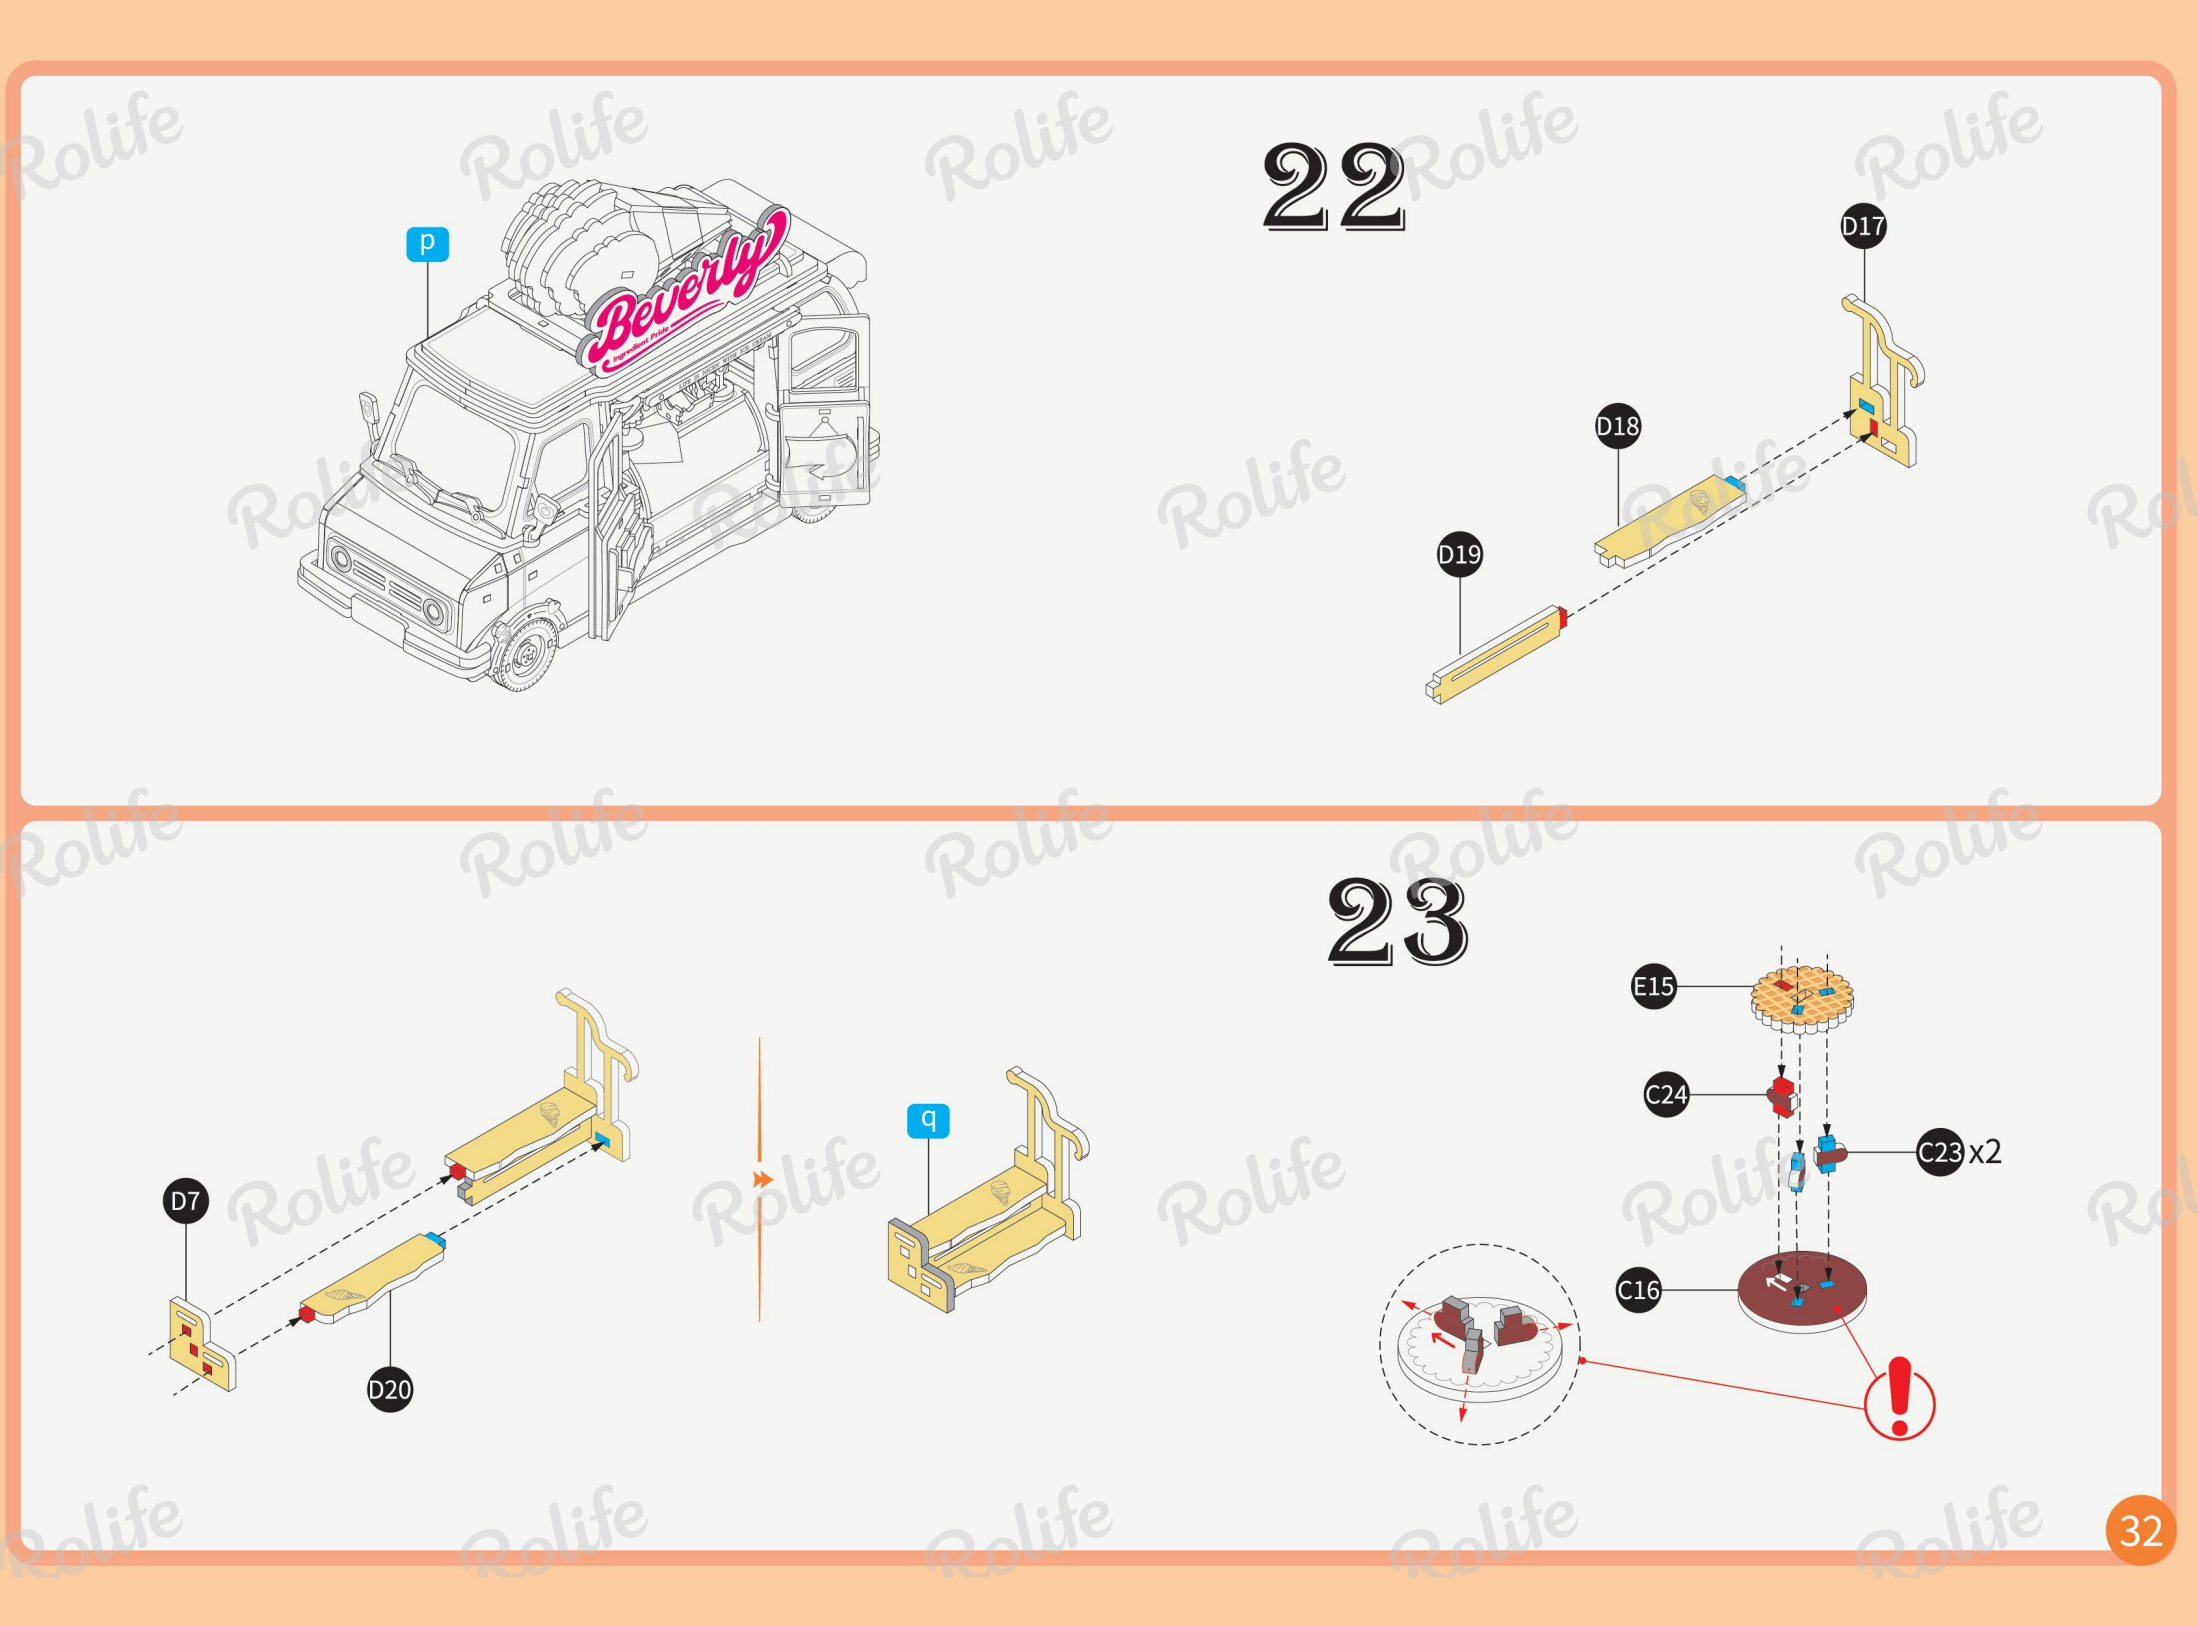

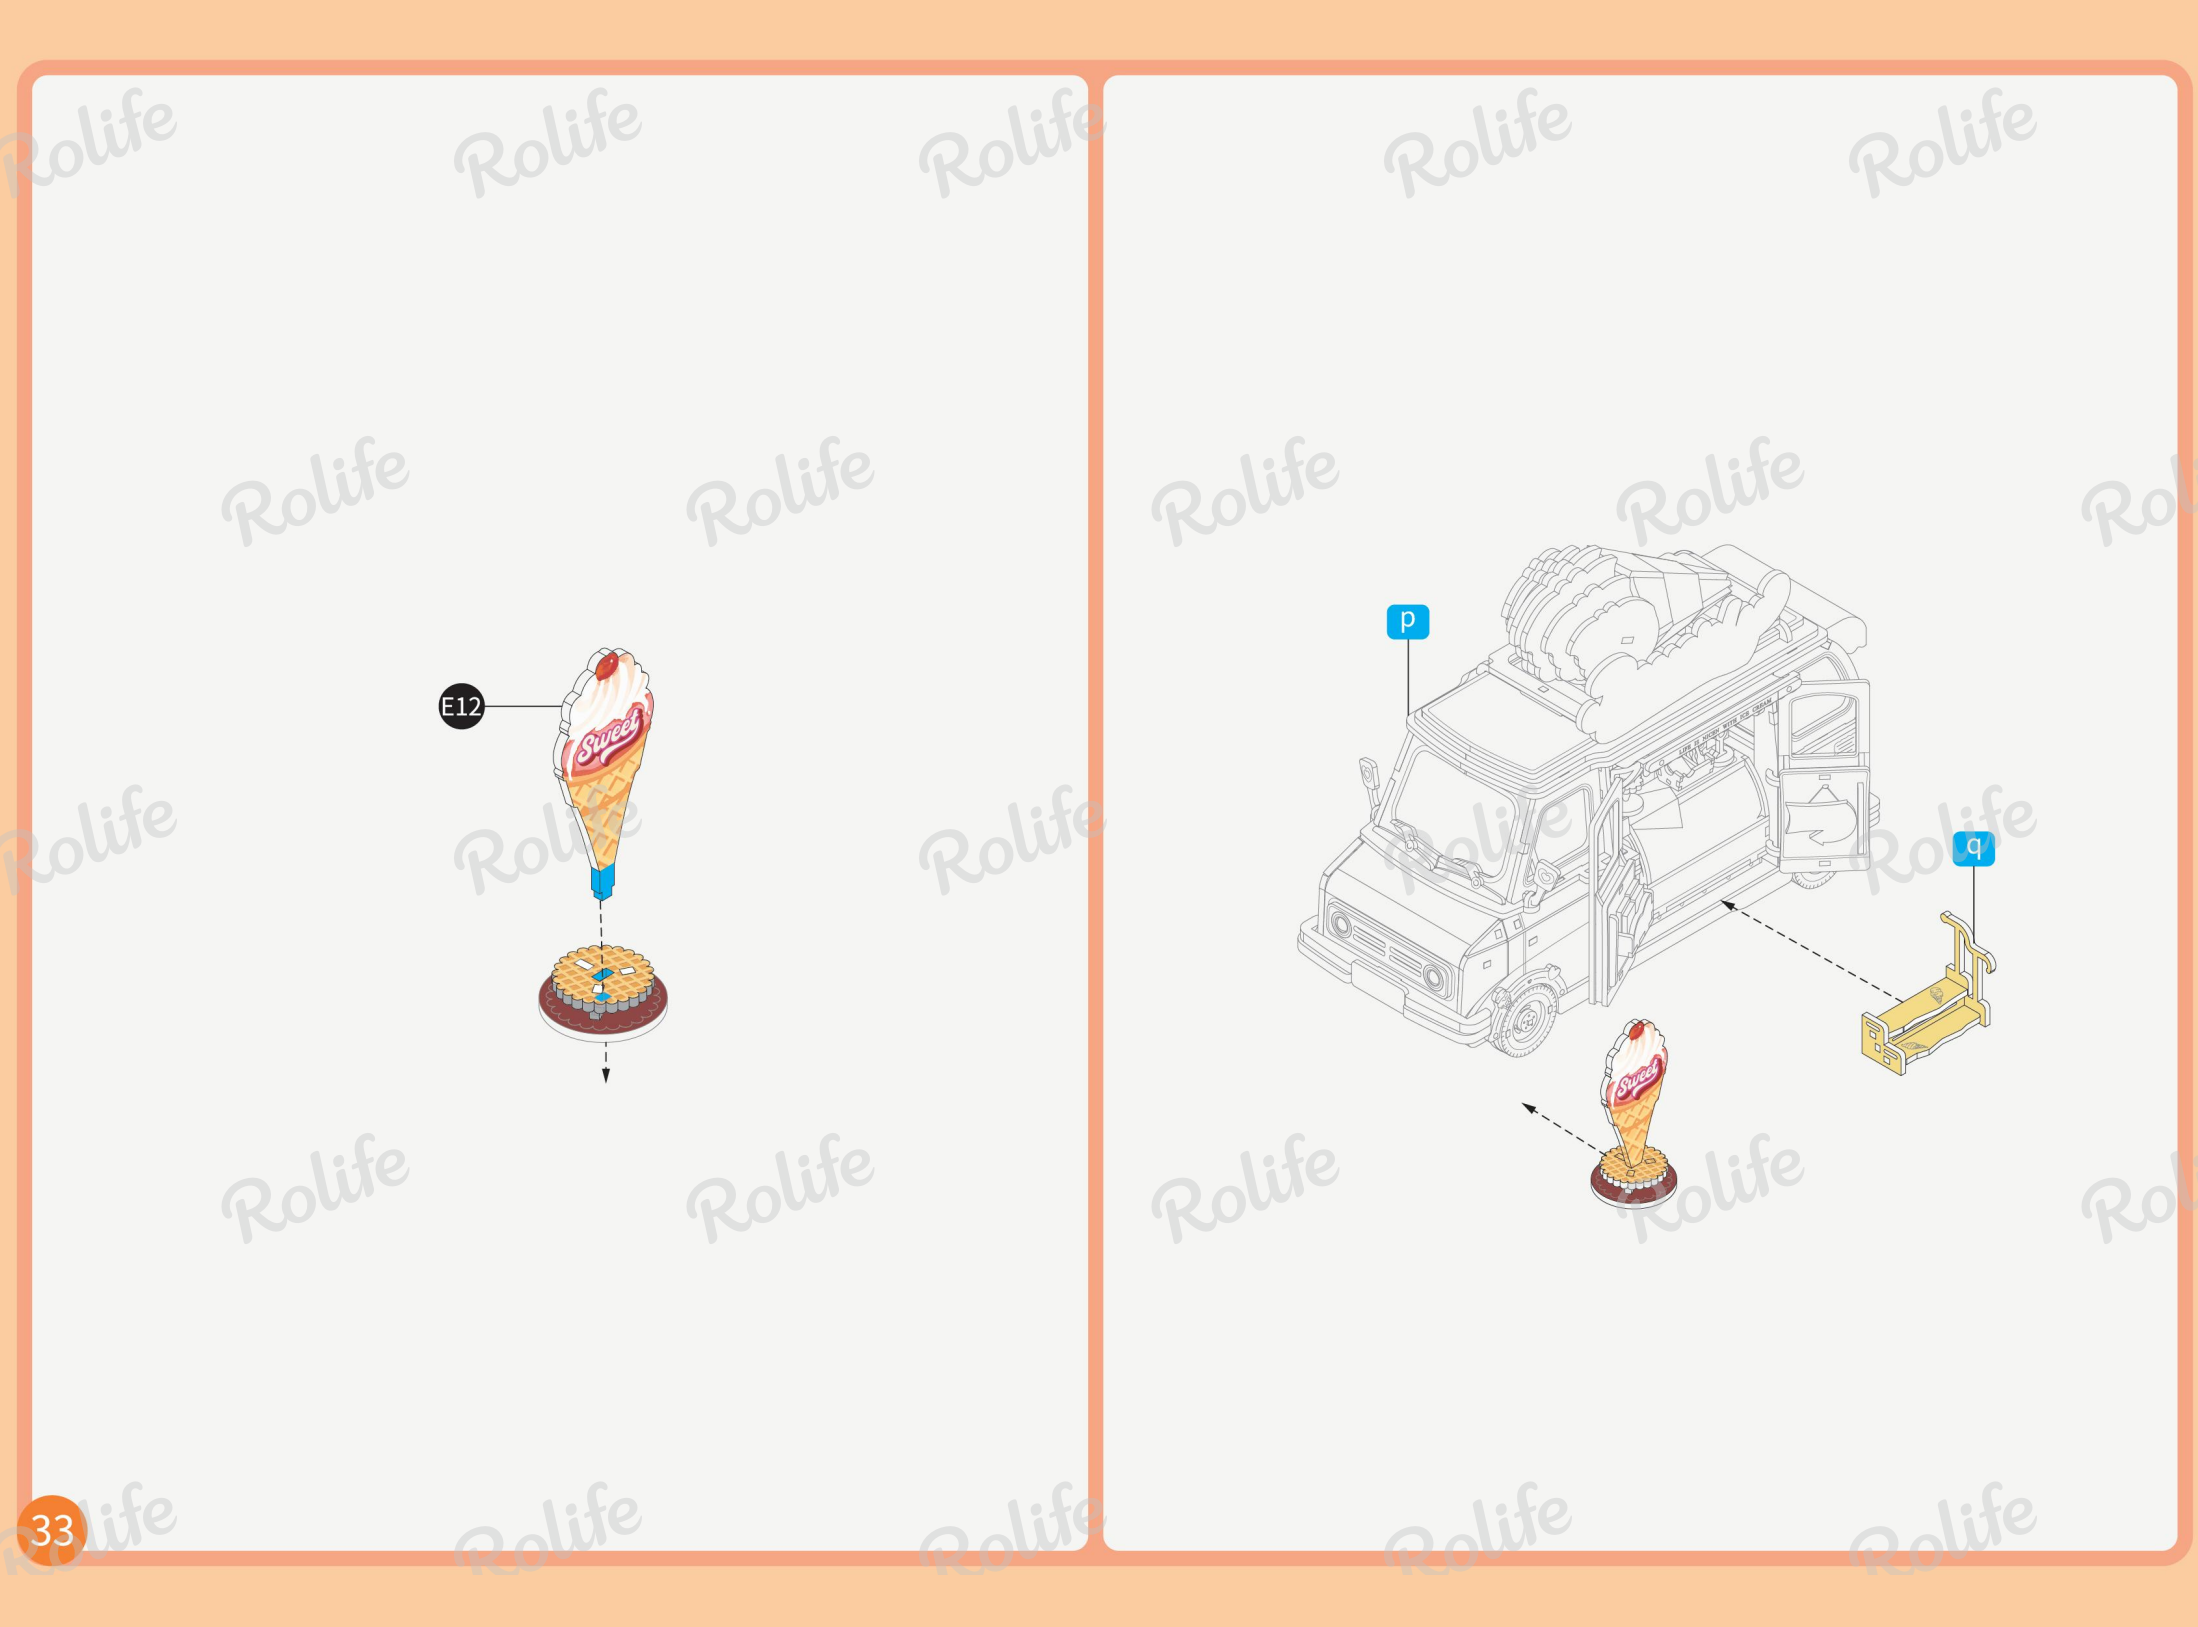

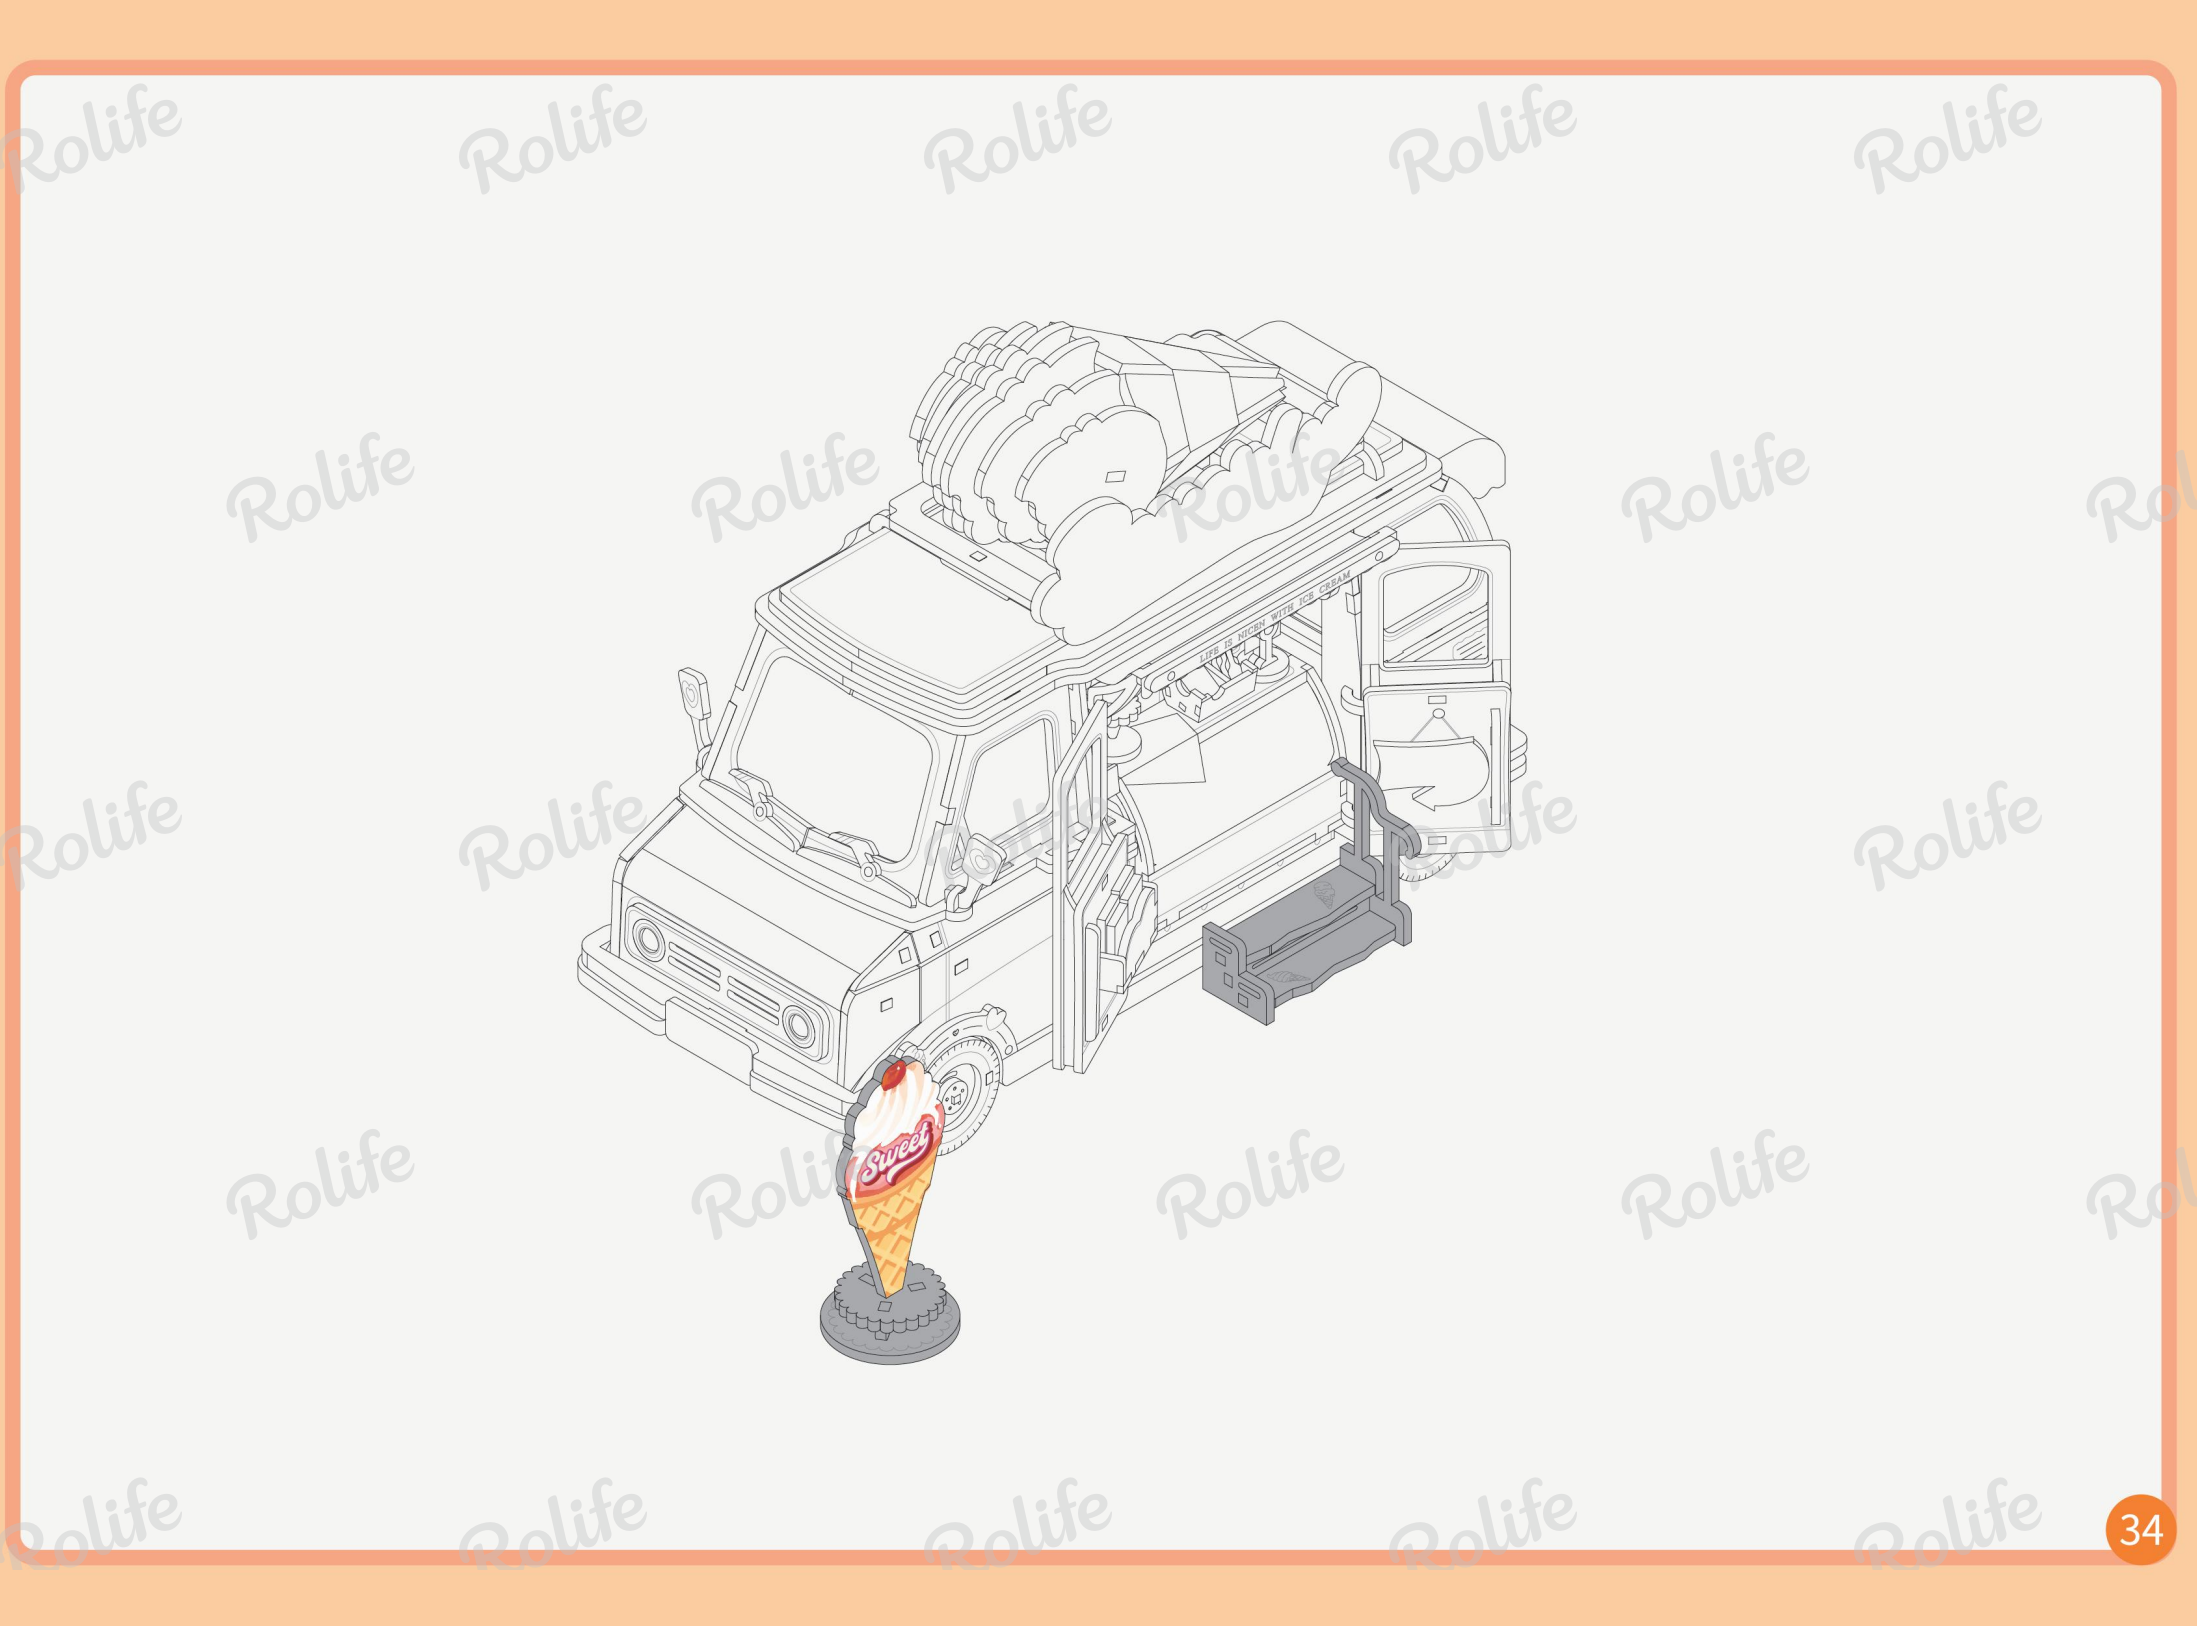

Designed by ROBOTIME
www.robotime.com
MADE IN CHINA
49.1TGS06.100