


Musical Instrument Model

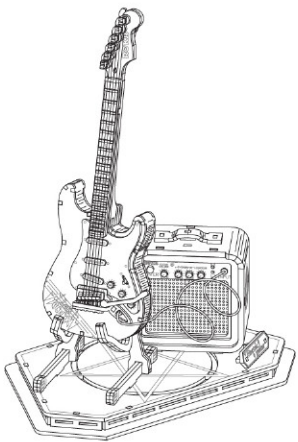

WARNING:

- The product is for people who are 8 and up years old. Children who are under 8 years old must assemble under the guidance of adults.

MAINTENANCE:

- Keep the product away from sources of ignition and keep it in dry place in case of the damage.
- Do not use chemical reagents like alcohol, ammonia water, or window cleanser to clean the product.
- Use the sandpaper to polish the blurs after removing the parts from the board if needed.

Email: service@robotime.com

Parts List

Item	Wire	Copper wire
Number	P1	P2
Illustration		
Quantity	1	6

*Due to customs policy in international shipping, the wax and glue may not be included. Please prepare them yourself.



Printed side

Blank side

Perspective changed


x2 Complete 2 same parts

Special attention in assembly




Step 1

Step 2

1



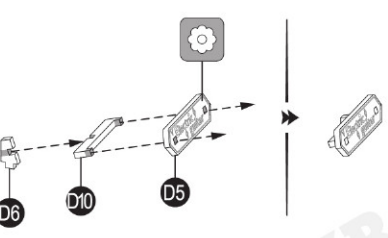


2

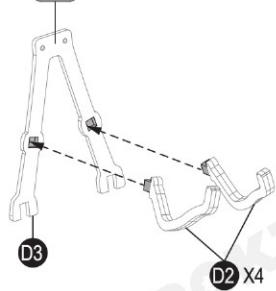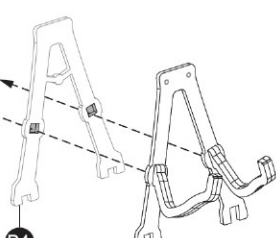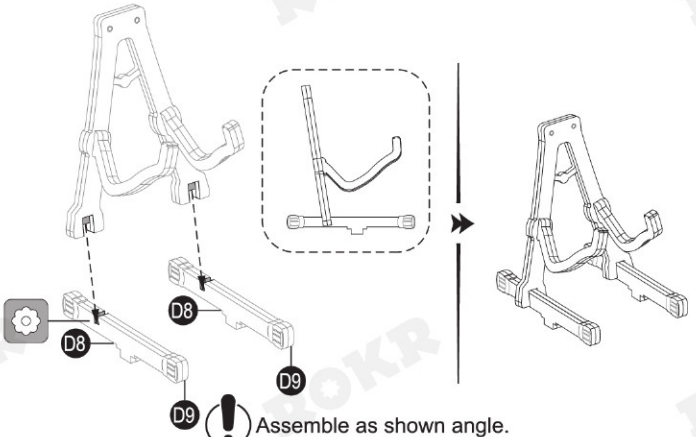


Assemble as shown angle.

3


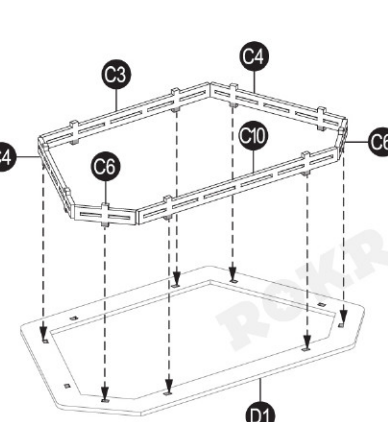
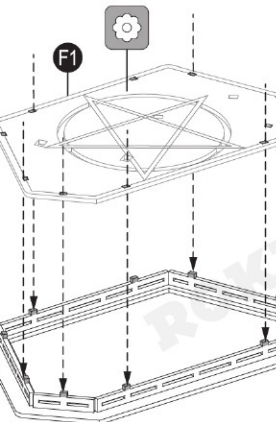
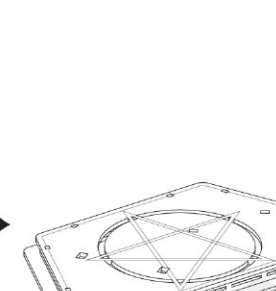


4







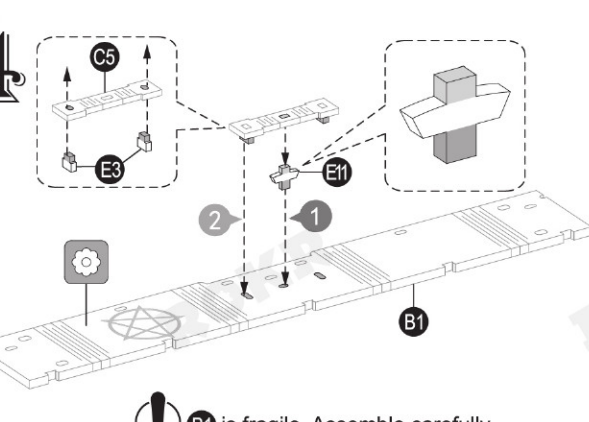


B1 is fragile. Assemble carefully.



5

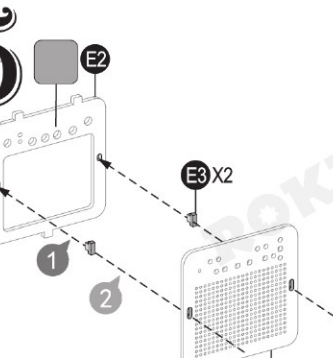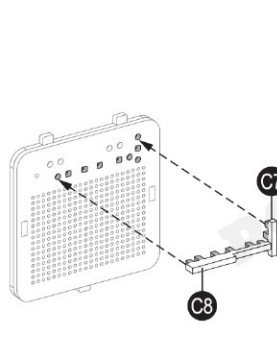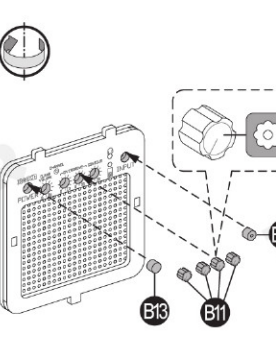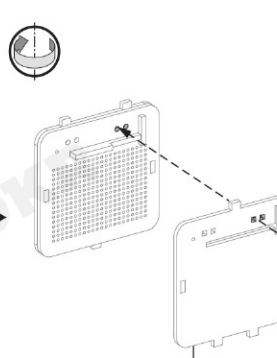




Pay attention to the direction of D7.

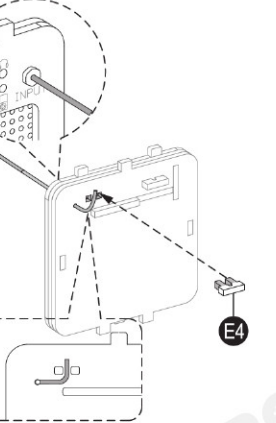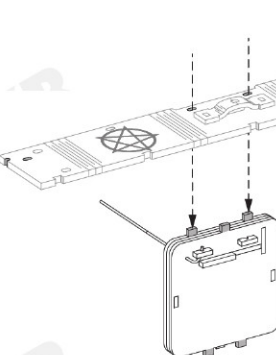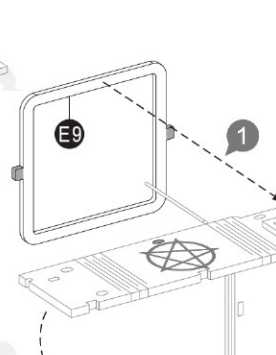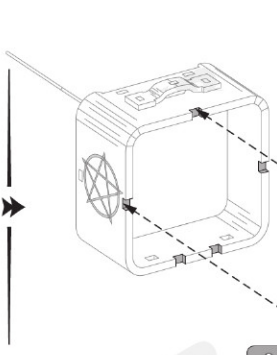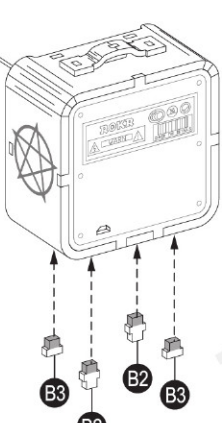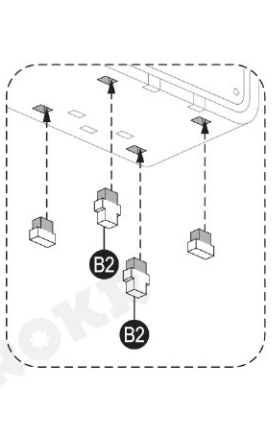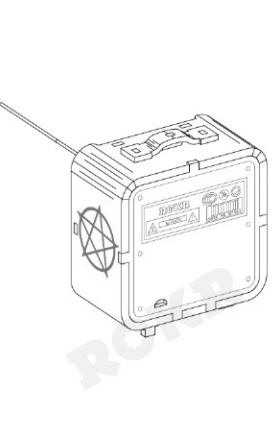










6

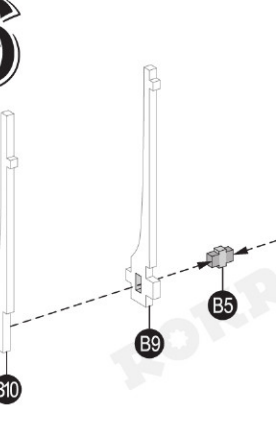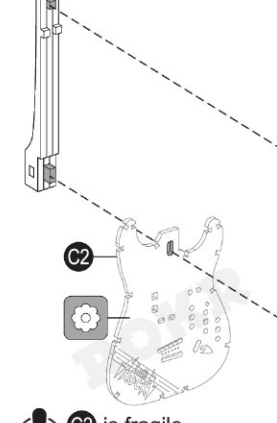






C2 is fragile. Assemble carefully.

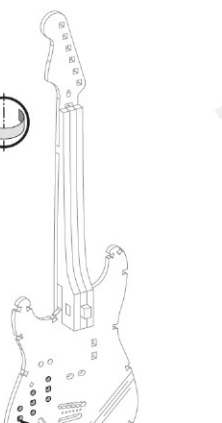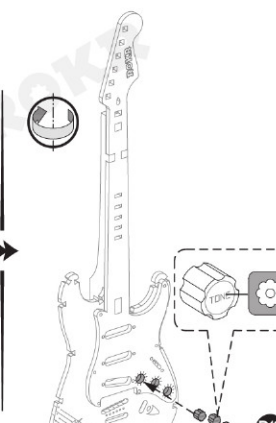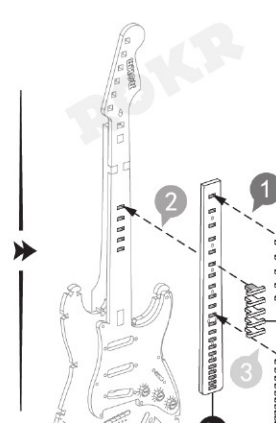

7

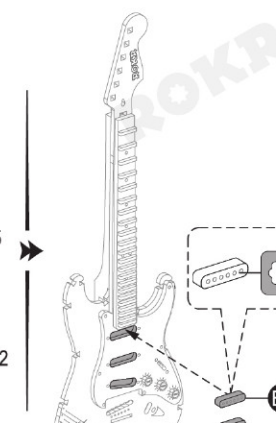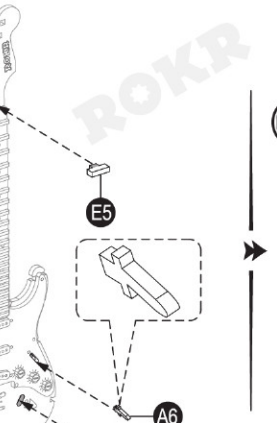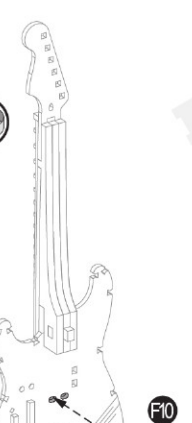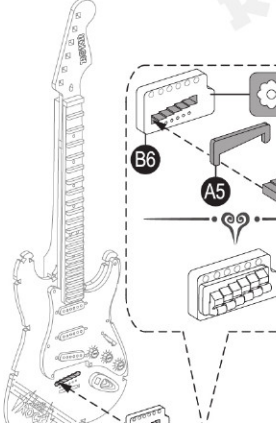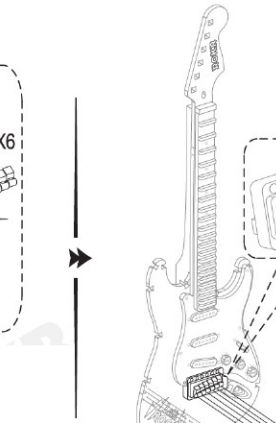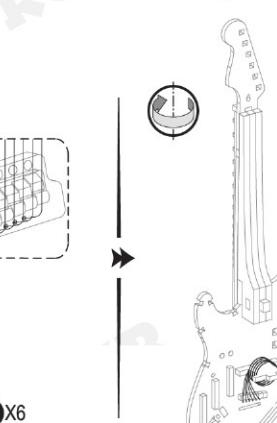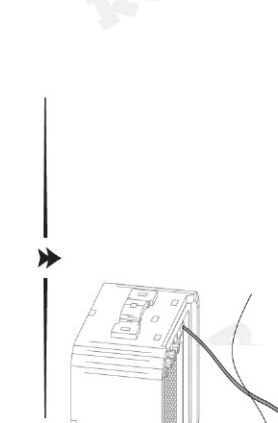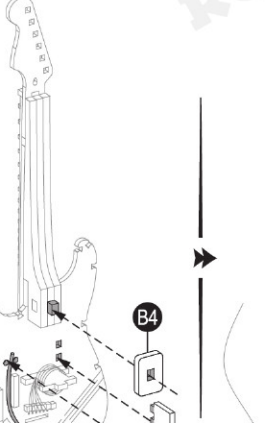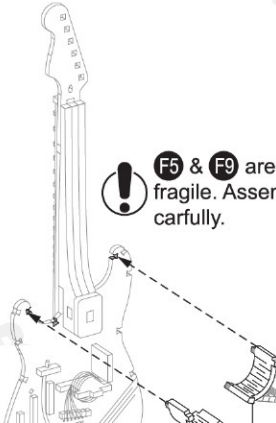

F5 & F9 are fragile. Assemble carefully.

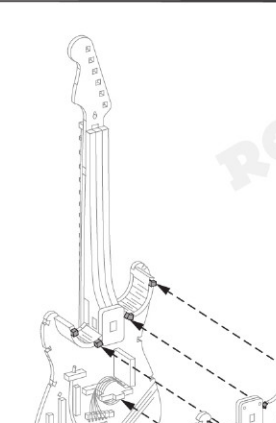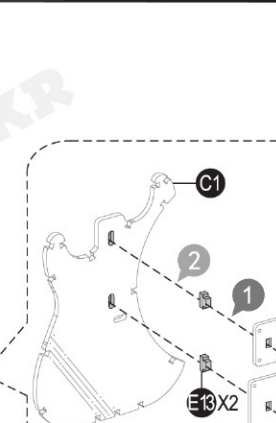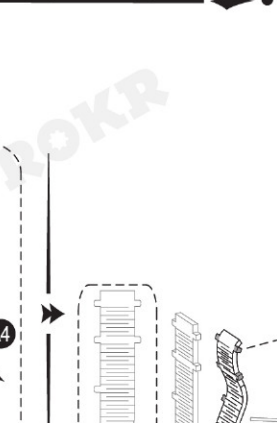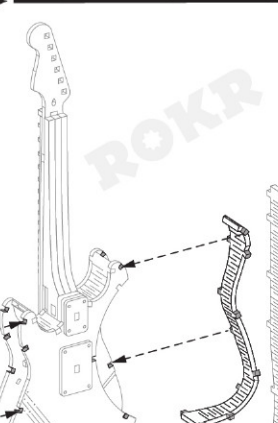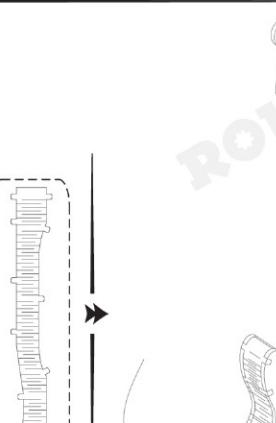

C1 is fragile. Assemble carefully.

E17 & E8 are fragile. Assemble carefully. Final assembly of buckle position as shown in the figure.

E15 is fragile. Assemble carefully. Pay attention to its direction.

Drop the copper wire No.4&5&6 down in the left.






Insert F3 tightly and then straighten the winding wire.

Insert F3 tightly and then straighten the winding wire.

Drop the copper wire No.1&2&3 down in the right.

Straighten the winding wire. Notice that different directions where wires drop down. Cut off extra length. Assemble from the bottom to the top.

7

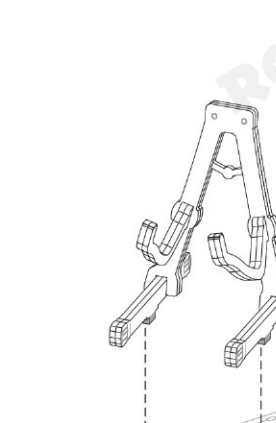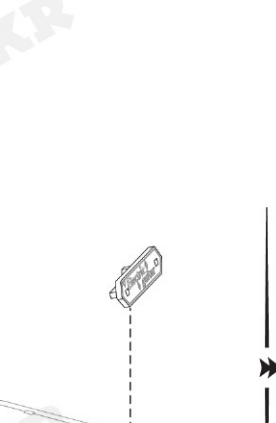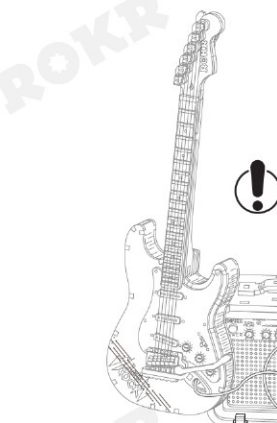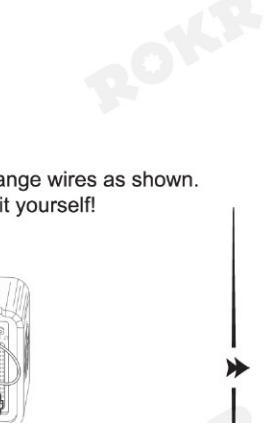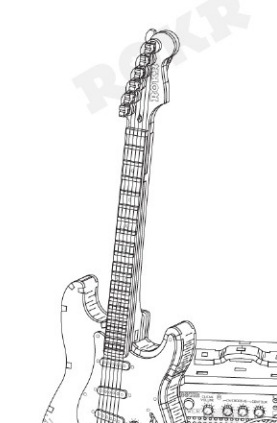

Arrange wires as shown. Do it yourself!

Completed