INSTRUCTION

A-Frame Cabin

• DG181



Scan the QR code or go to Community.robotime.com to discover DIY ideas, quick tips & WIN free kits

Pictures for reference only. Please subject to our existing products.

Assembly tips

Put small parts into the bag to prevent loss.

Remove the part by pressing its back to reduce burrs.

Polish the edges with sand-paper if there are burrs on pieces or it' s hard to insert.

Tips of assembling

1. All the dimension in the instruction is shown in millimeter.
2. The included double-sided tape is an auxiliary tool for sticking. Glue needs self-preparation.
3. Do not stick and peel the double-sided tape repeatedly, considering its initial tack.
4. Only the tool icon appears in the assembly step.
5. Check if the light parts are securely welded.

Part number illustration

Refer to the part number paper, find the piece, and compare it with the 1:1 figure. Then assemble it after confirmation. (Only for wooden pieces marked with (Y))


Part list illustration


1. Compare part bags with the part list before assembling to ensure all parts are included.
2. Find the part referring to the part number in the part list, and compare the part with the illustration to ensure it is right before assembling.

Tools required


(The right of the arrow " ➤➤ " corresponds with the tool icon.)

1 Sandpaper
2 Double-sided tape
3 Tweezers
4 Screwdriver
5 (Self-preparation) Scissors
6 (Self-preparation) Knife



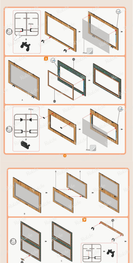




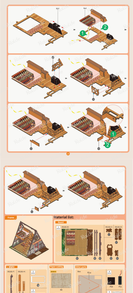






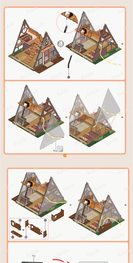




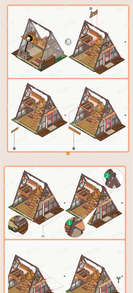








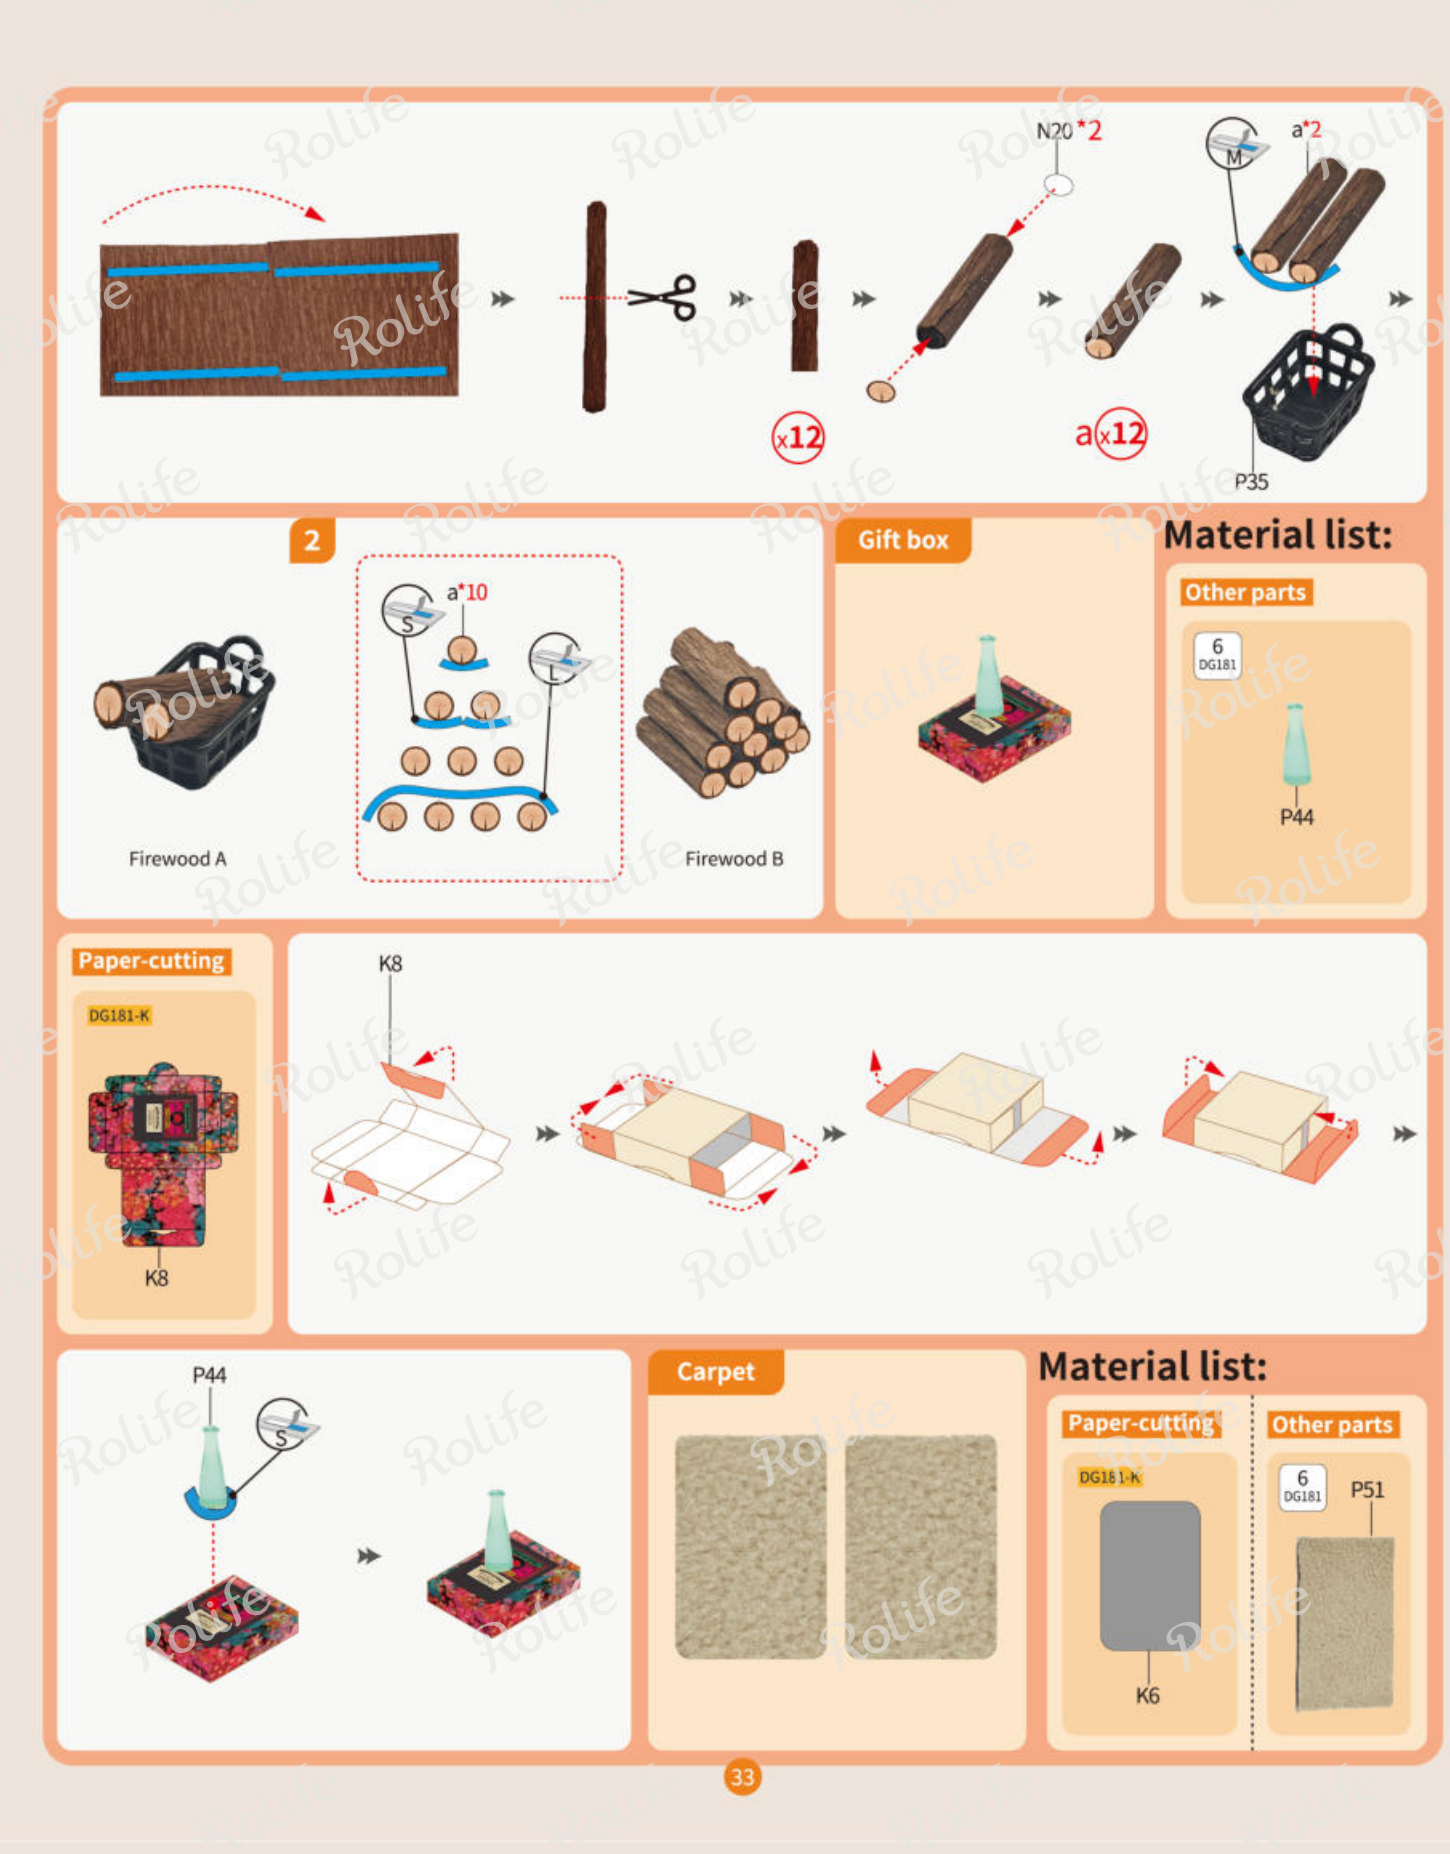

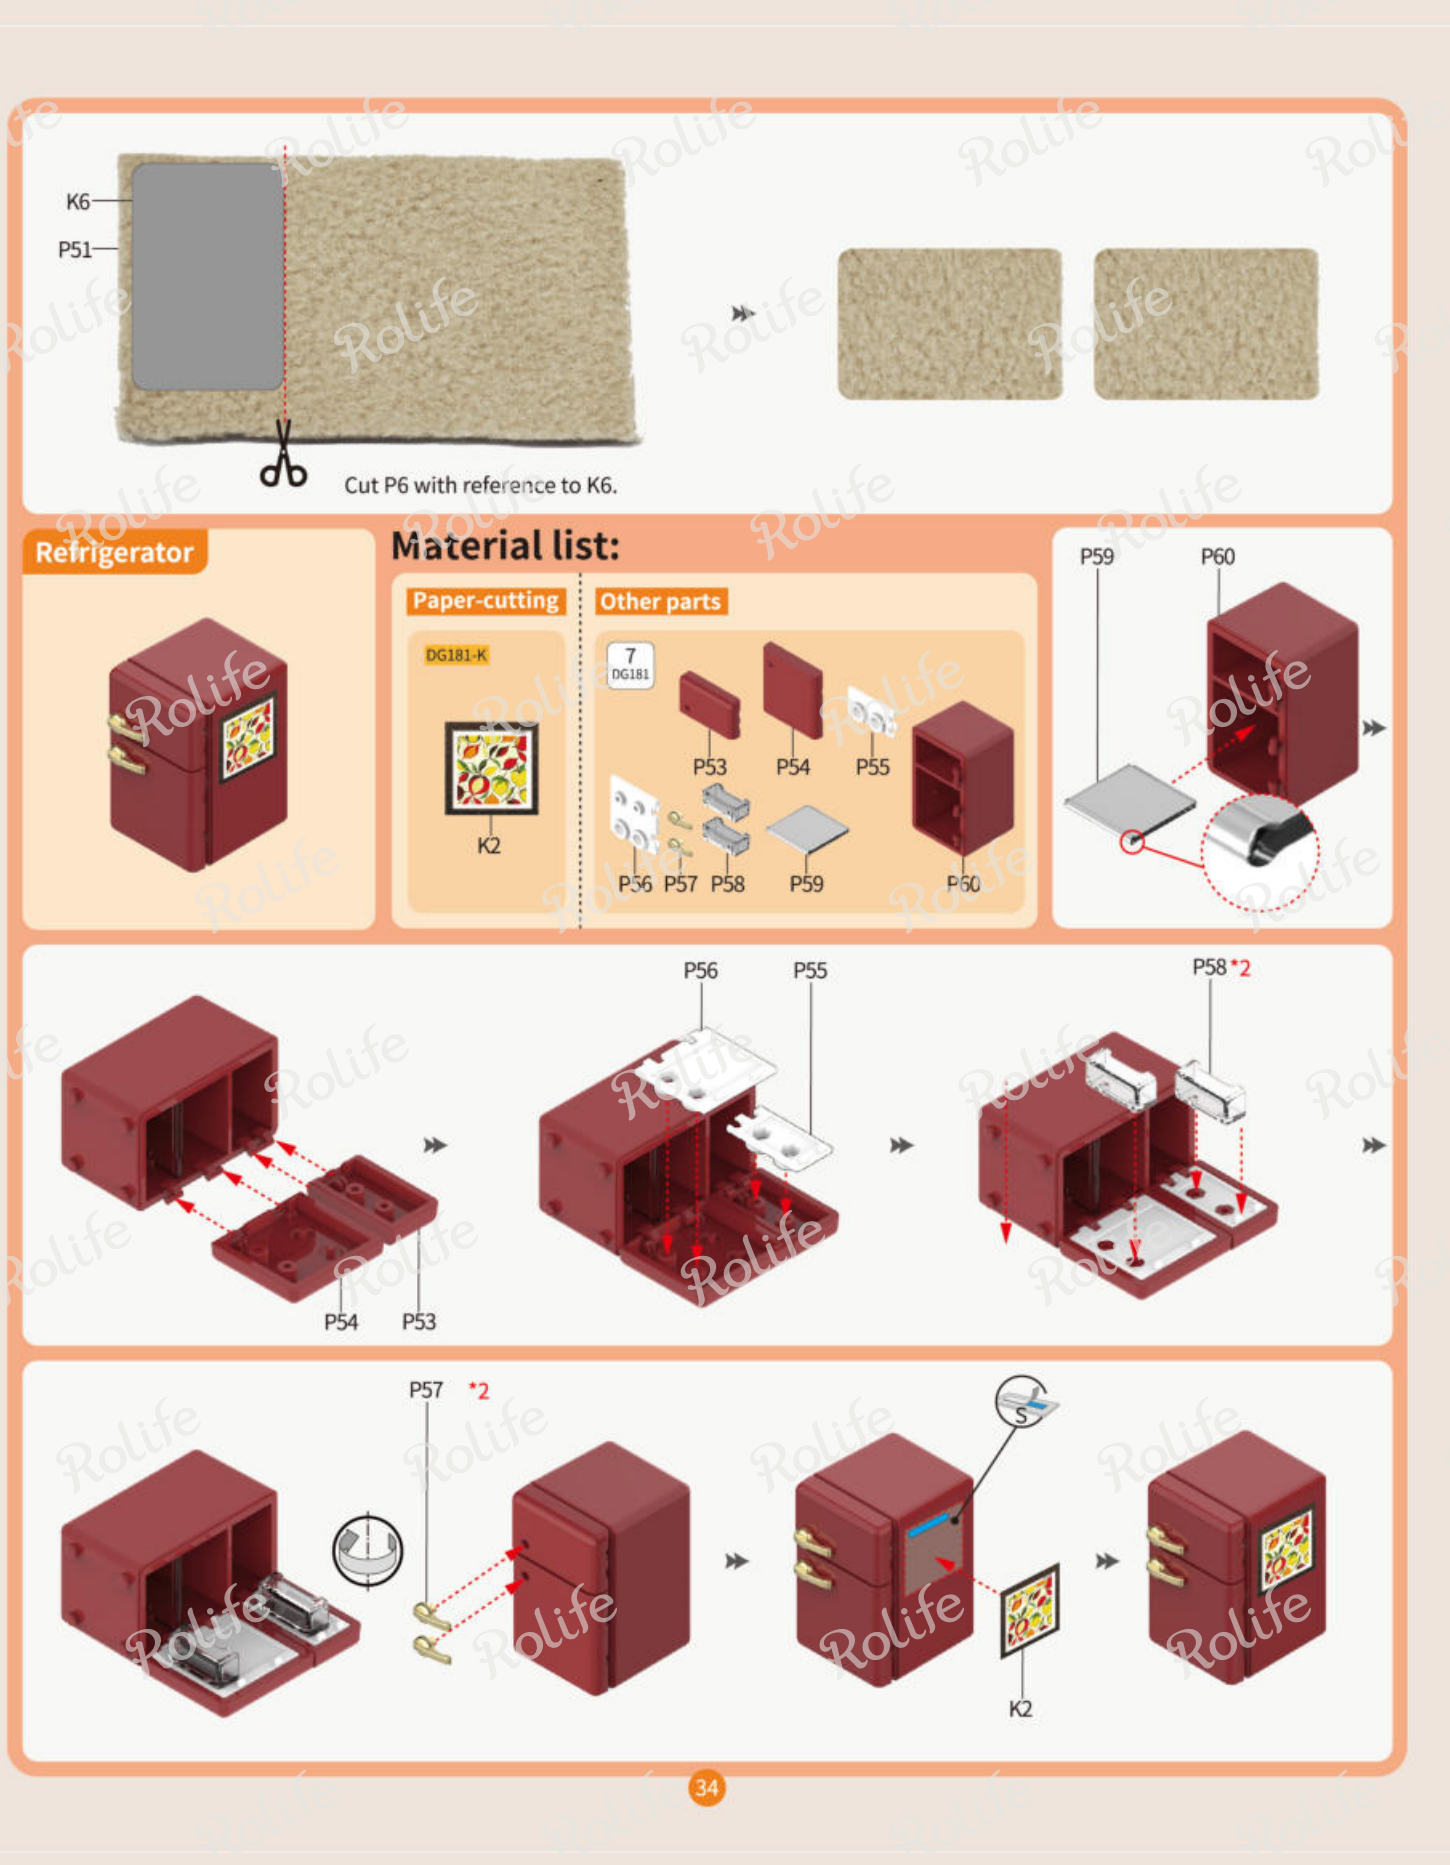











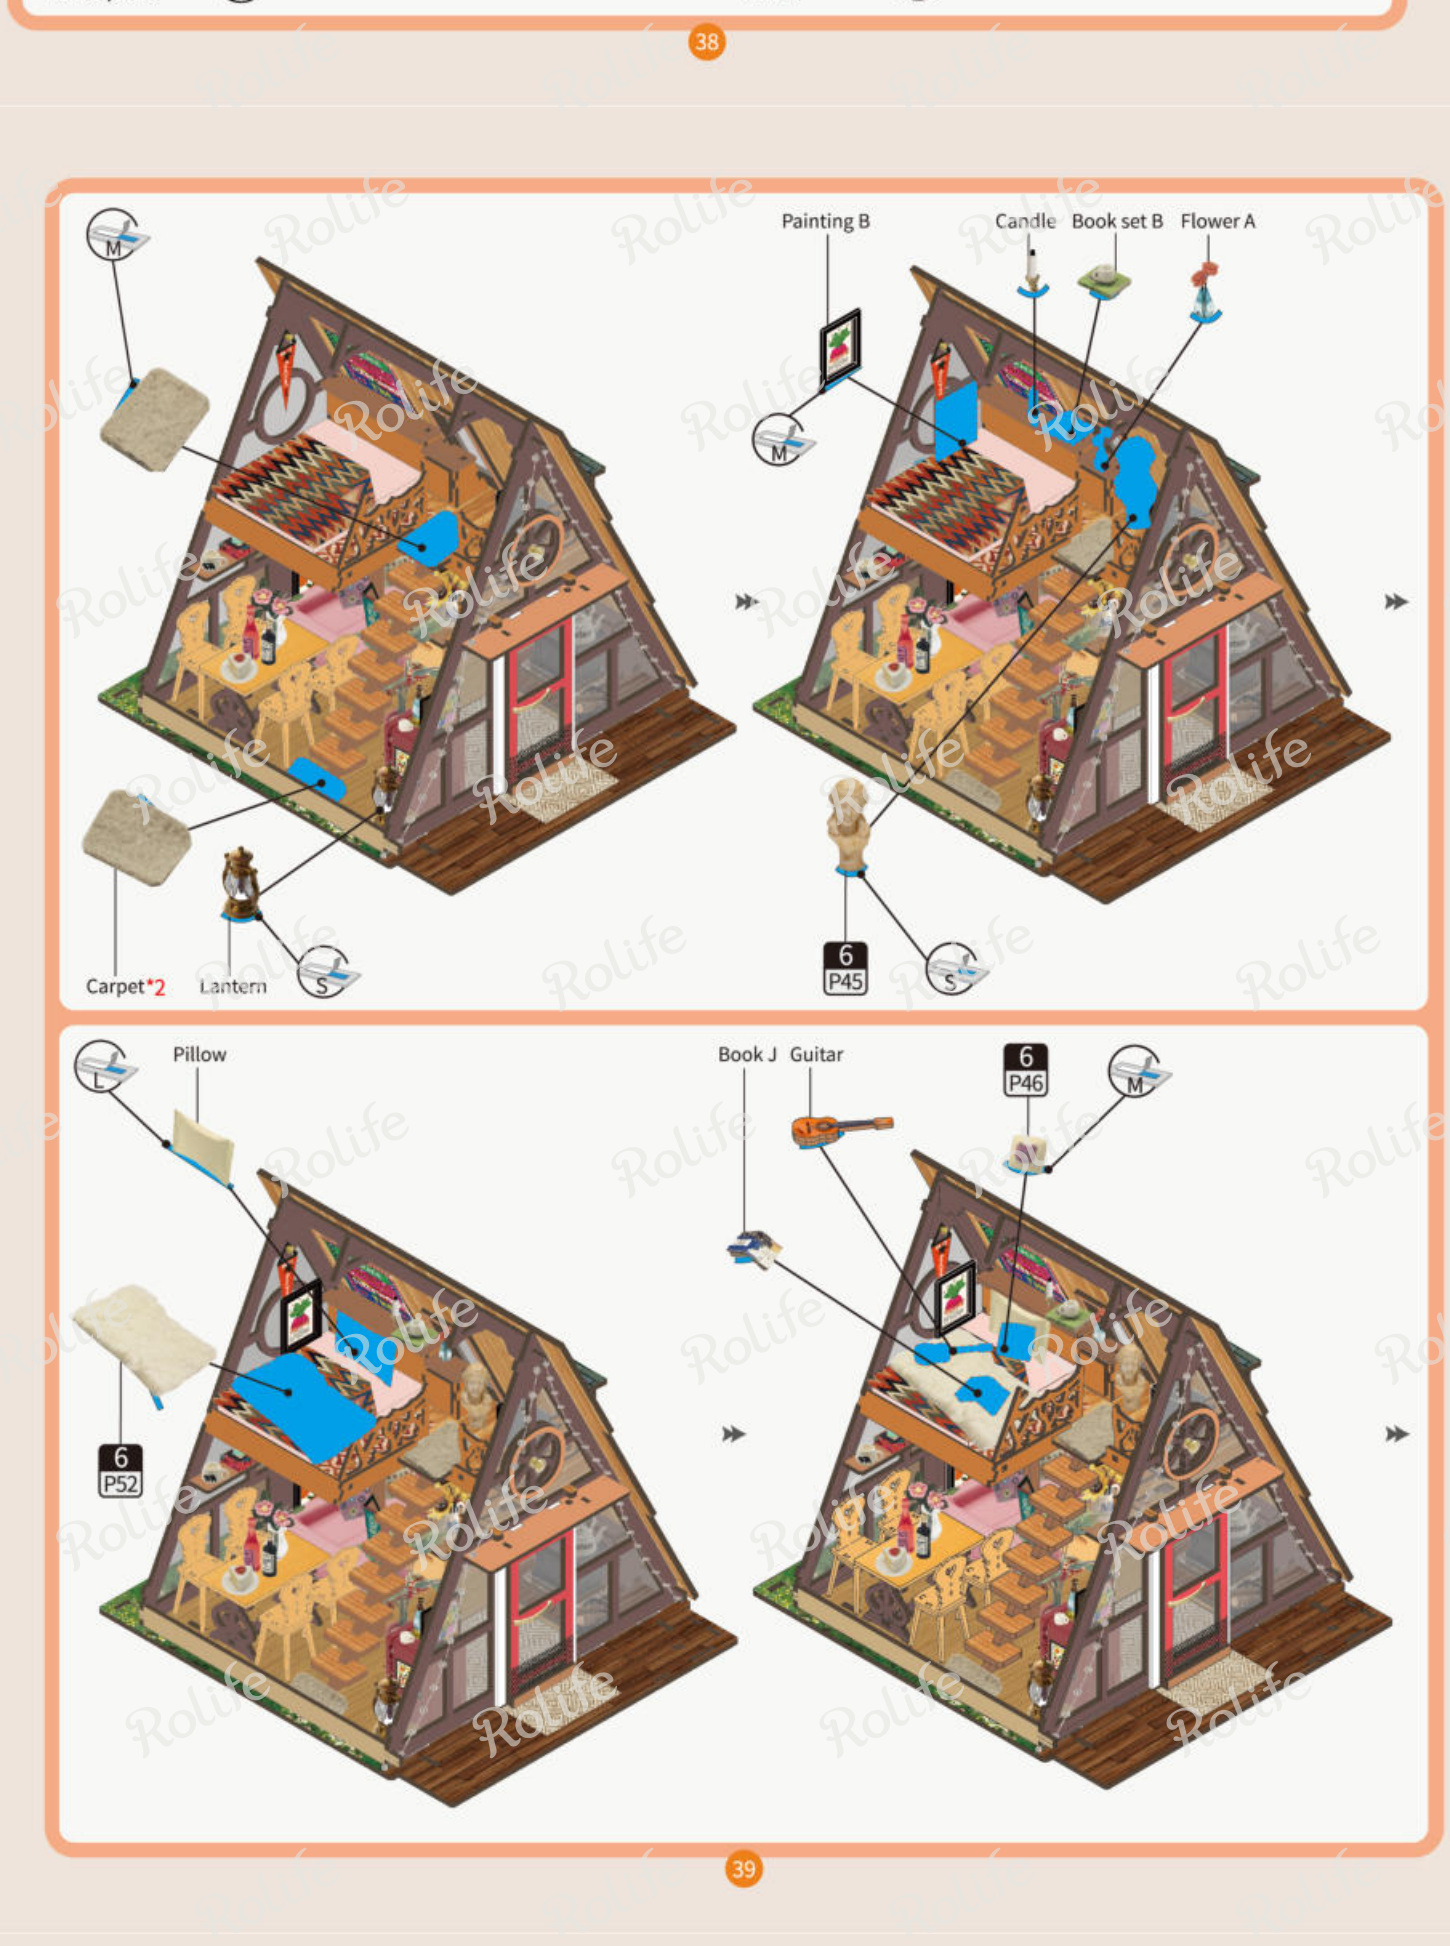



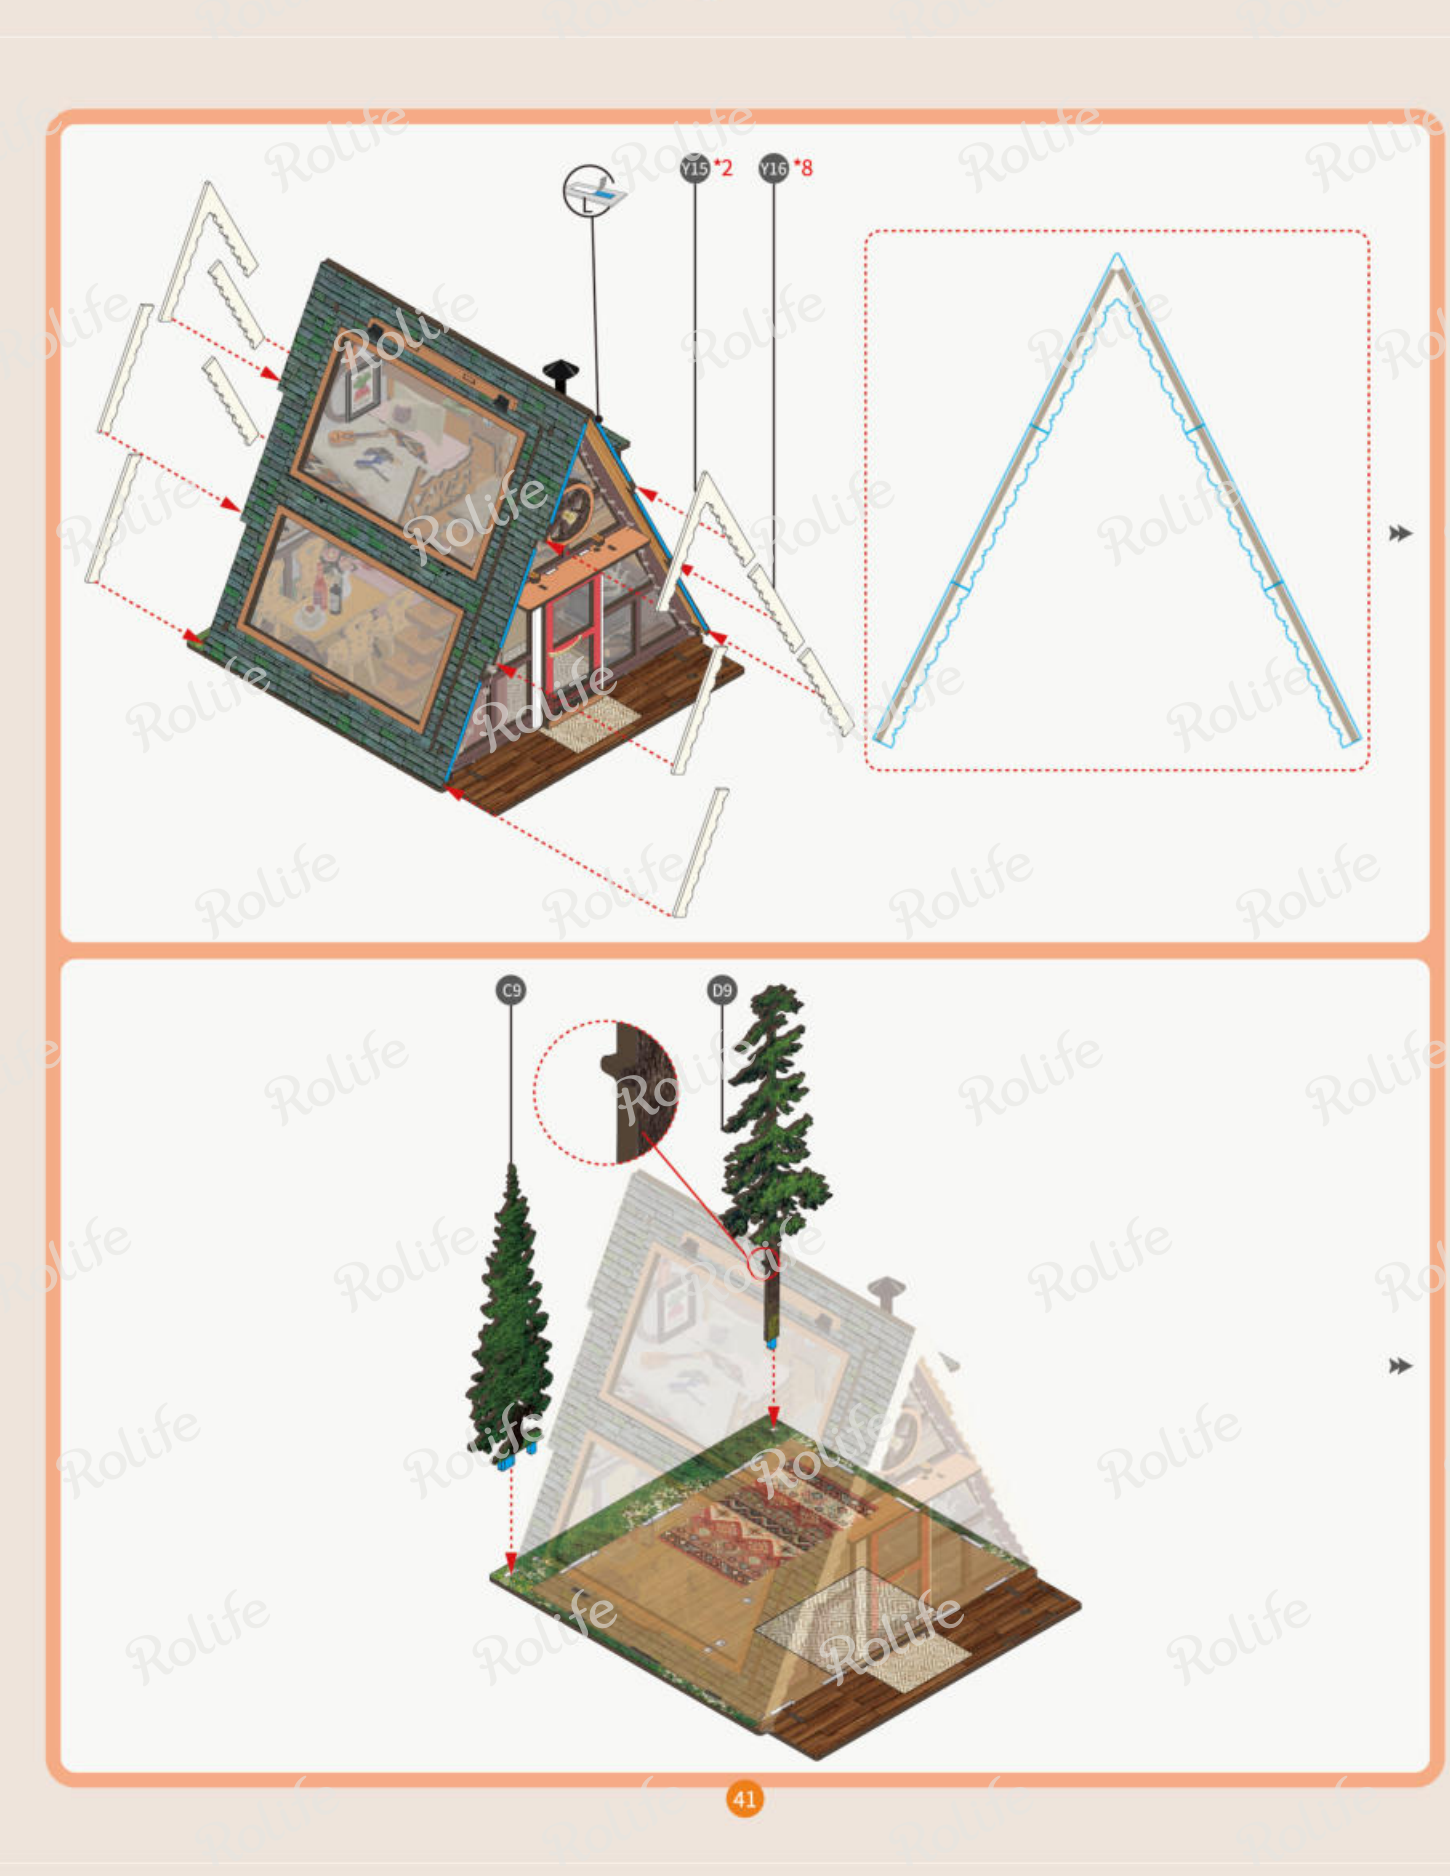







Completion



Scan to Find Your Perfect **Display Box**

Keep Your Miniatures Clear
Safe & Stackable



MANUFACTURER:
Robotime C&C (Jiangsu) Co., Ltd.

AFTER-SALES SERVICE CONTACT:
service@robotime.com

Rolife

Designed by ROBOTIME
www.robotime.com
MADE IN CHINA