Teddy's Breadbox

— DS033 —

Bakery
OPEN
FRESH BREAD
20% OFF
Rolife
ROLIFE

Pictures for reference only. Please subject to our existing products.

Assembly Tips

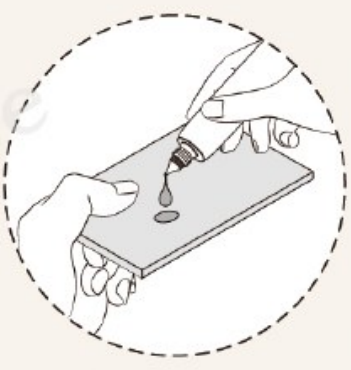
Apply a dab of glue evenly each time for easier assembling.

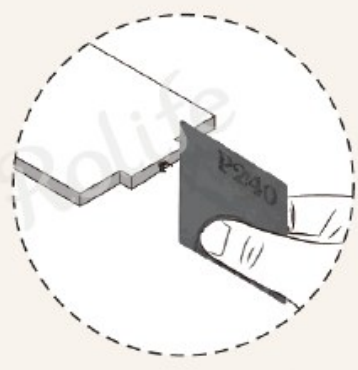

Polish the edges with sandpaper if there are burrs on pieces or it's hard to insert.

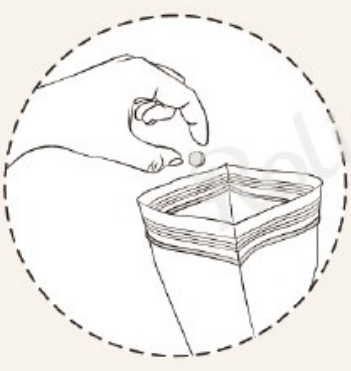
Put small parts into the bag to prevent loss.

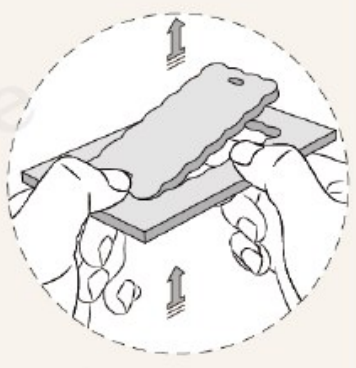
Remove the part by pressing its back to reduce burrs.

Tips of white latex:

(Glue is a gift not for sale. If it becomes dry or expired due to time or environmental problems, you can use your own glue to assemble.)

1. Do not use too much white latex in case of longer time to dry. It may affect the appearance of completed products.
2. Wait until the white latex dries. Assemble the next one first during the drying process.

Tips of assembling

1. All the dimension in the instruction is shown in millimeter.
2. Only the tool icon appears in the assembly step.

Parts bag illustration

(The parts are small, and please do not pour all out from the bag.)

Bag No.1	Plywood, big colored board
Bag No.2	Small colored board
Bag No.3-4	Other parts

»

1 — Bag number
DS033

Tools INCLUDED

(The right of the arrow " » " corresponds with the tool icon.)

① 
Sandpaper
(Bag No.1)

② 
Tweezers
(Bag No.3)

③ 
Screwdriver
(Bag No.3)

Tools EXCLUDED

(The right of the arrow " » " corresponds with the tool icon.)

① 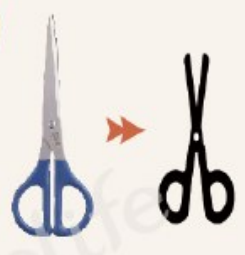
Scissors

② 
Knife

Part list illustration

1. Compare part bags with the part list before assembling to ensure all parts are included.
2. Find the part referring to the part number in the part list, and compare the part with the illustration to ensure it is right before assembling.

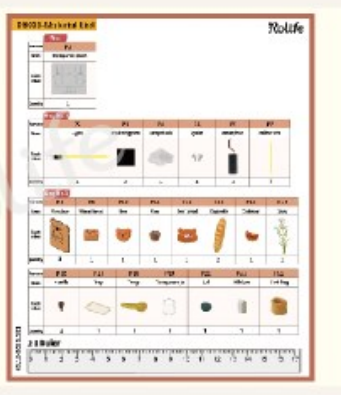

Part number illustration

Refer to the part number paper, find the piece, and compare it with the 1:1 figure. Then assemble it after confirmation.

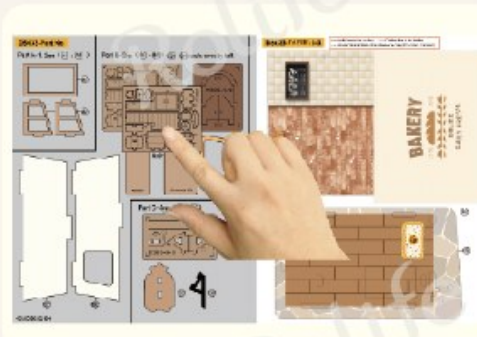

Brief Introduction

WARNING:

01. The product requires 2"AAA/LR03/AM4 1.5V" batteries. (Batteries for self-preparation).
02. Before loading or removing batteries, please loosen screws on the cover of the battery box with the screwdriver first.
03. Non-rechargeable batteries are not to be recharged.
04. Rechargeable batteries are only to be charged under adult supervision.
05. Rechargeable batteries are to be removed from the toy before being charged.
06. Different types of batteries or new and used batteries are not to be mixed.
07. Batteries are to be inserted with the correct polarity(+ and -).
08. Remove the exhausted battery in time.
09. The power supply terminal cannot be short circuited.
10. Do not connect the wire to a mains outlet.
11. The product is not to be connected to more than the recommended number of power supplies.
12. Check each part before assembly.If the part is damaged,fix it well before assembly.
13. Please keep the product away from substances flammable and humid environments to prevent damage.
14. The instruction must be retained since it contains important information.

ATTENTION:

1. This product is suitable for people over 14 years old. Children should be guided by adults.
2. This product contains small parts. Please use it carefully to avoid accidental ingestion and room breathing.
3. Please install the electronic components correctly and test whether the circuit is normal after completion.
4. Please read the instructions carefully before assembly to confirm that the parts are not damaged or missing.
5. Please carefully cut the parts and make sure they are firmly pasted when using glue.
6. Some small parts may be embedded in grooves, and please pay attention to checking it.
7. This product needs to be made with auxiliary tools. Please select it reasonably to avoid injury.

Cupboard

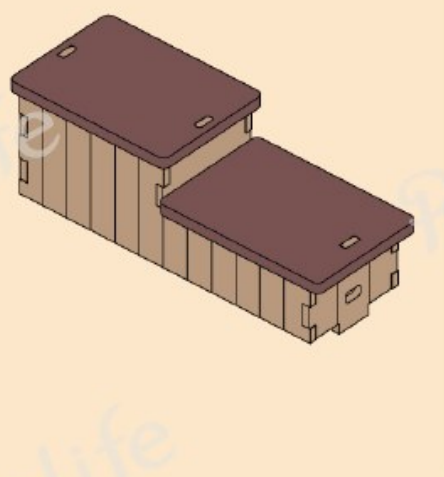

Material list:

Other parts Tips: 1. Find pieces according to the color first and then their shapes. 2.If there are parts difficult to identify, refer to the part illustration paper in the package.

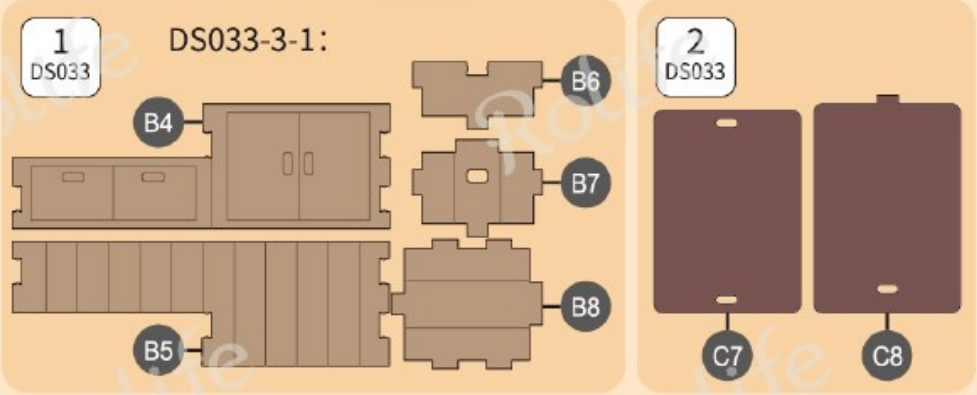
1
DS033
DS033-3-1:
B4
B5
B6
B7
B8
2
DS033
C7
C8

1

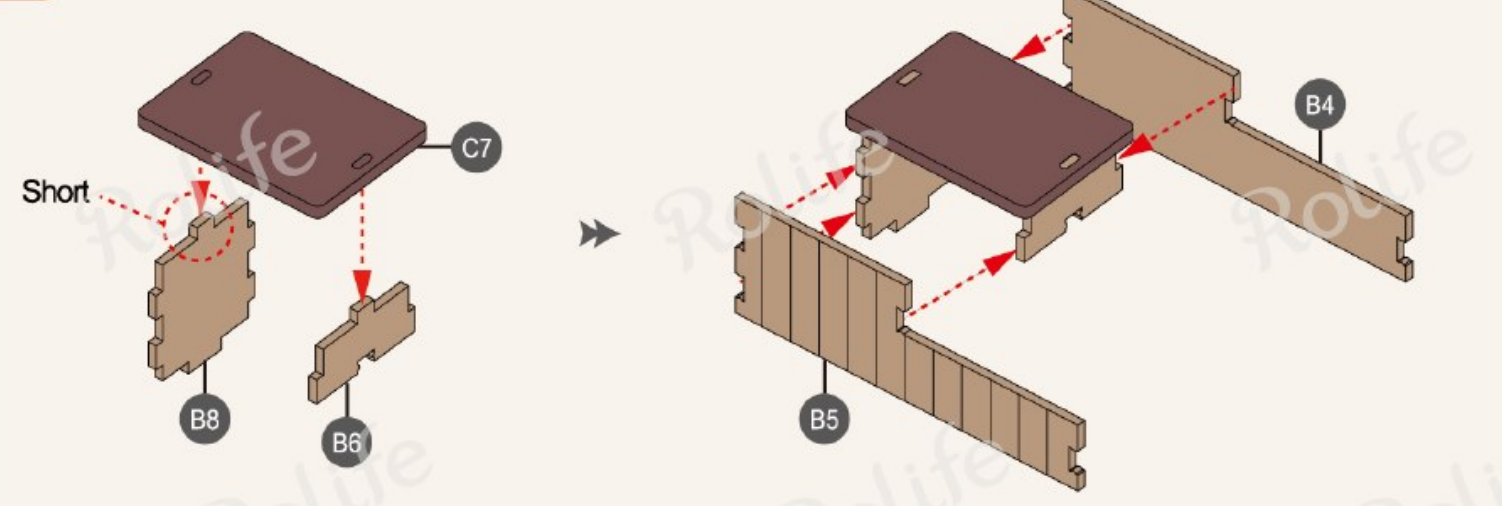
Short
C7
B8
B6
B4
B5

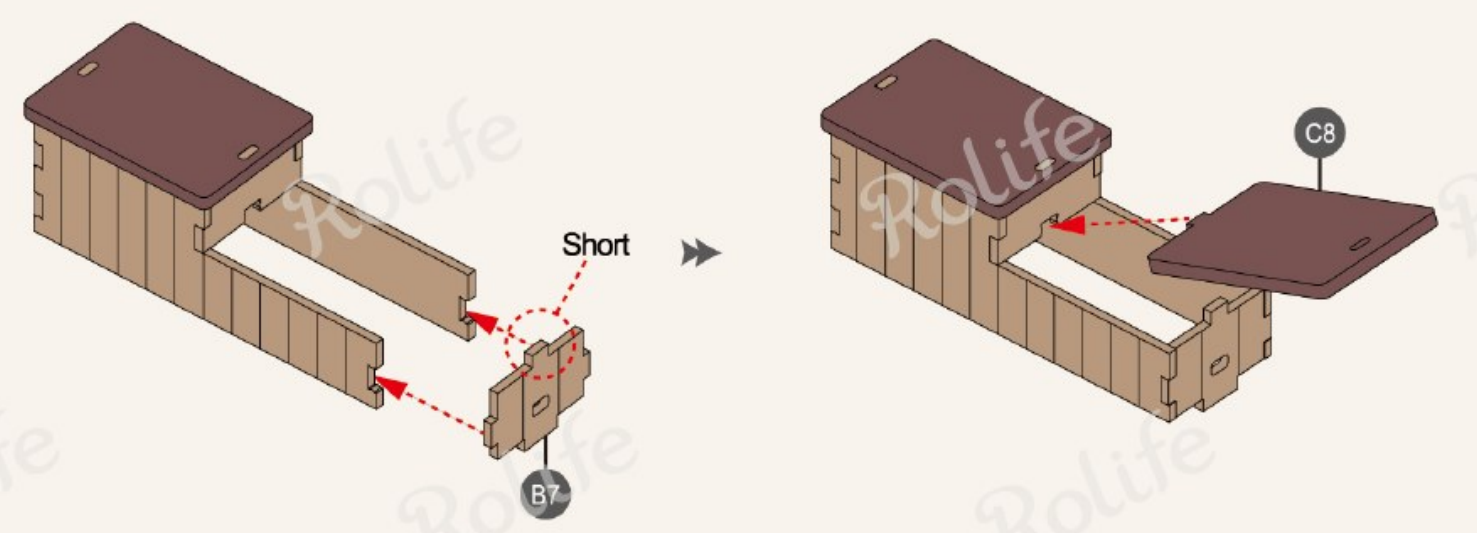

Cabinet

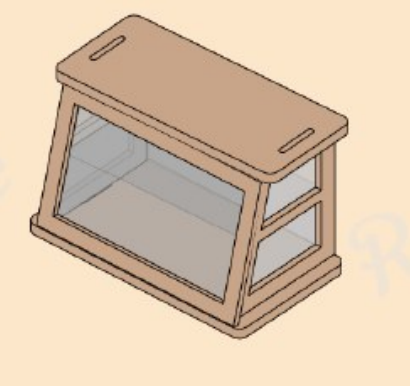

Material list:

Board

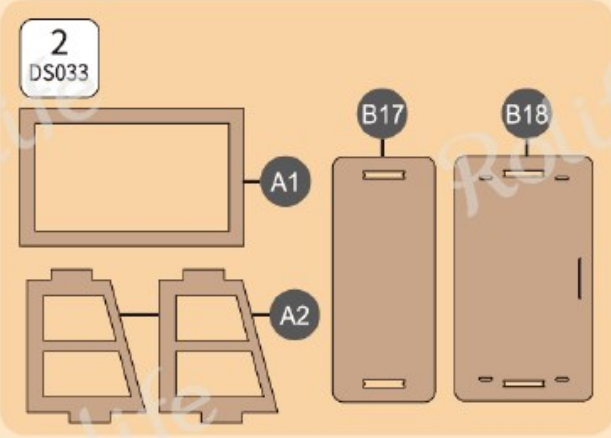
2
DS033
A1
A2
B17
B18

Other parts

Box:

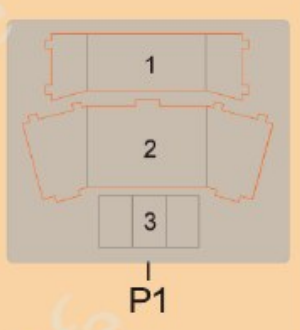

1

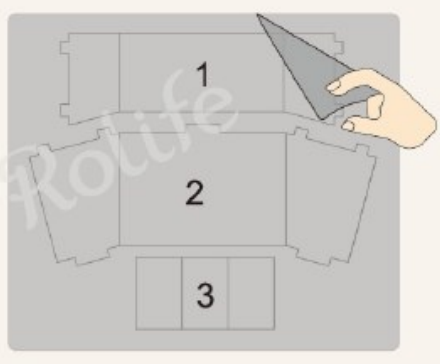

Remove the transparent film on both sides.

2

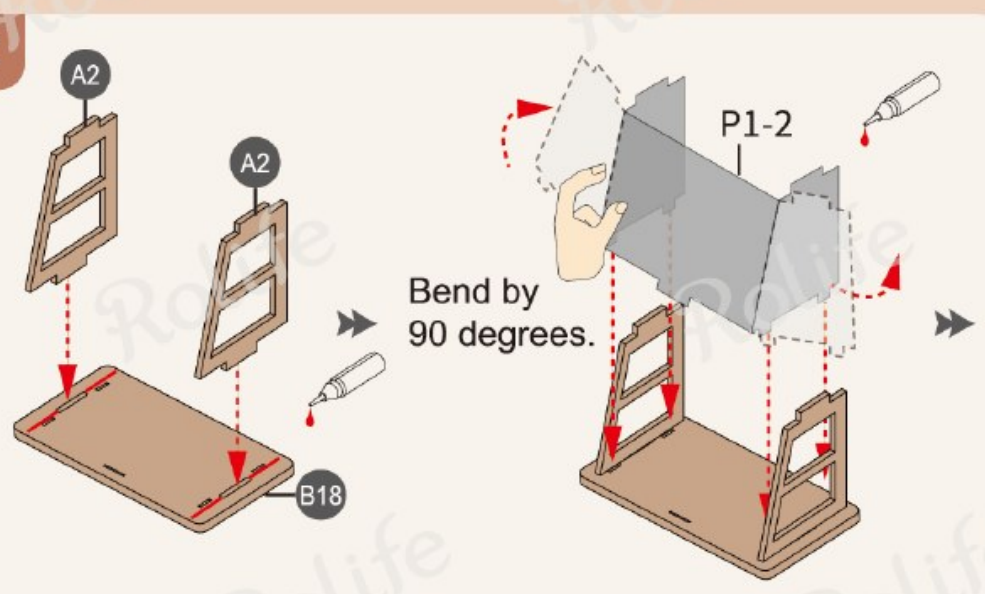
A2
A2
B18
Bend by 90 degrees.
P1-2

Refer to the tips of white latex on Page 1.

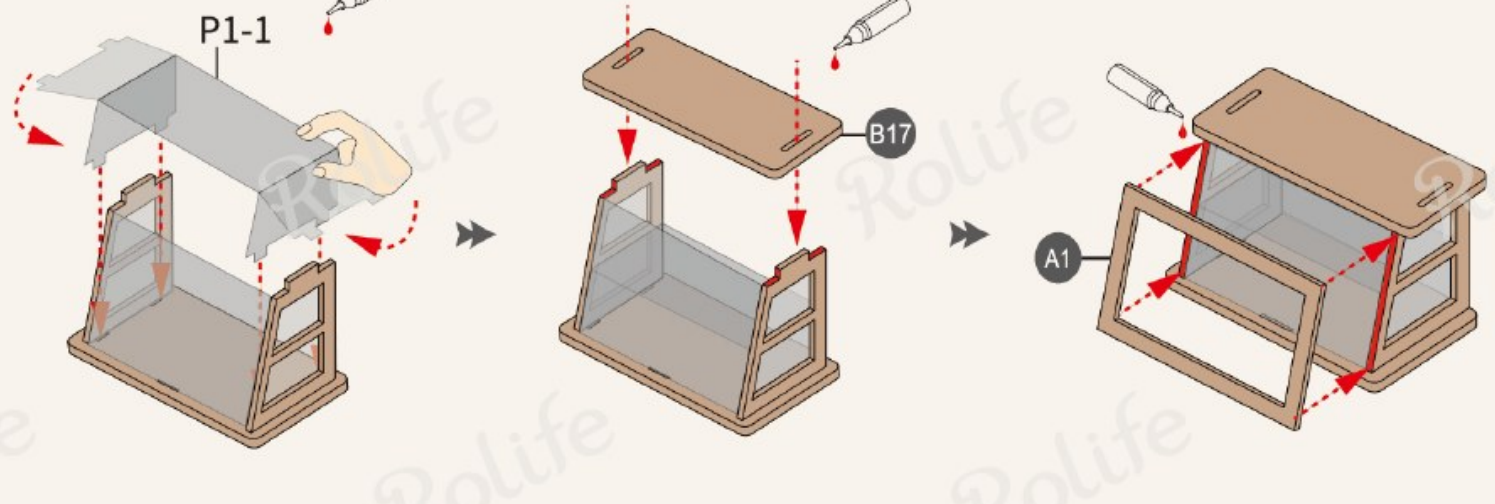

Fireplace

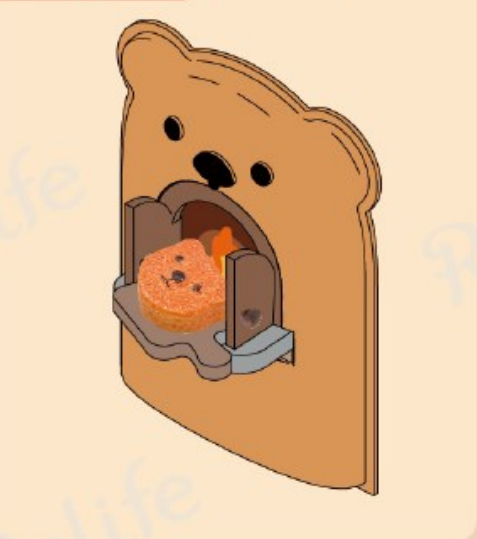

Material list:

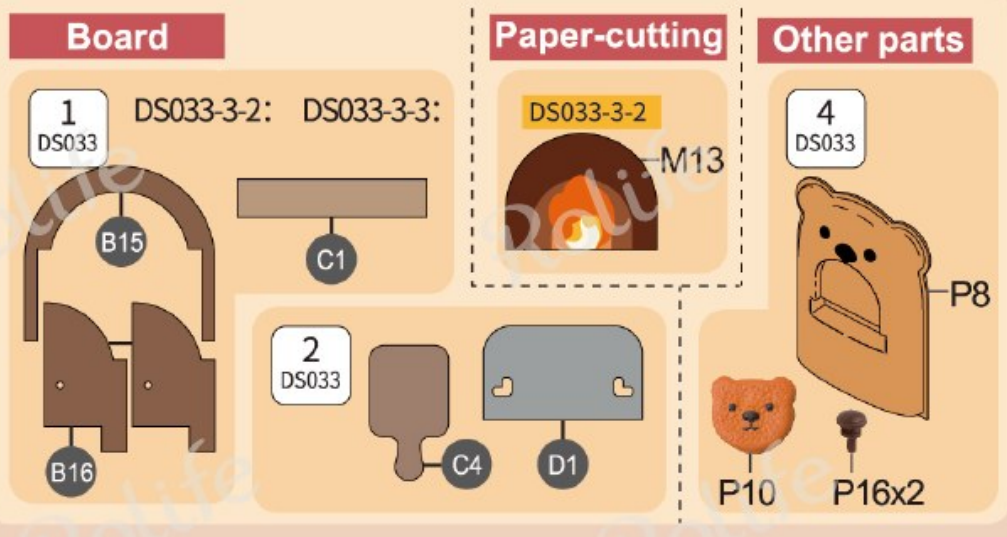
Board
1
DS033
DS033-3-2:
DS033-3-3:
B15
B16
C1
2
DS033
C4
D1
Paper-cutting
DS033-3-2
M13
Other parts
4
DS033
P8
P10
P16x2

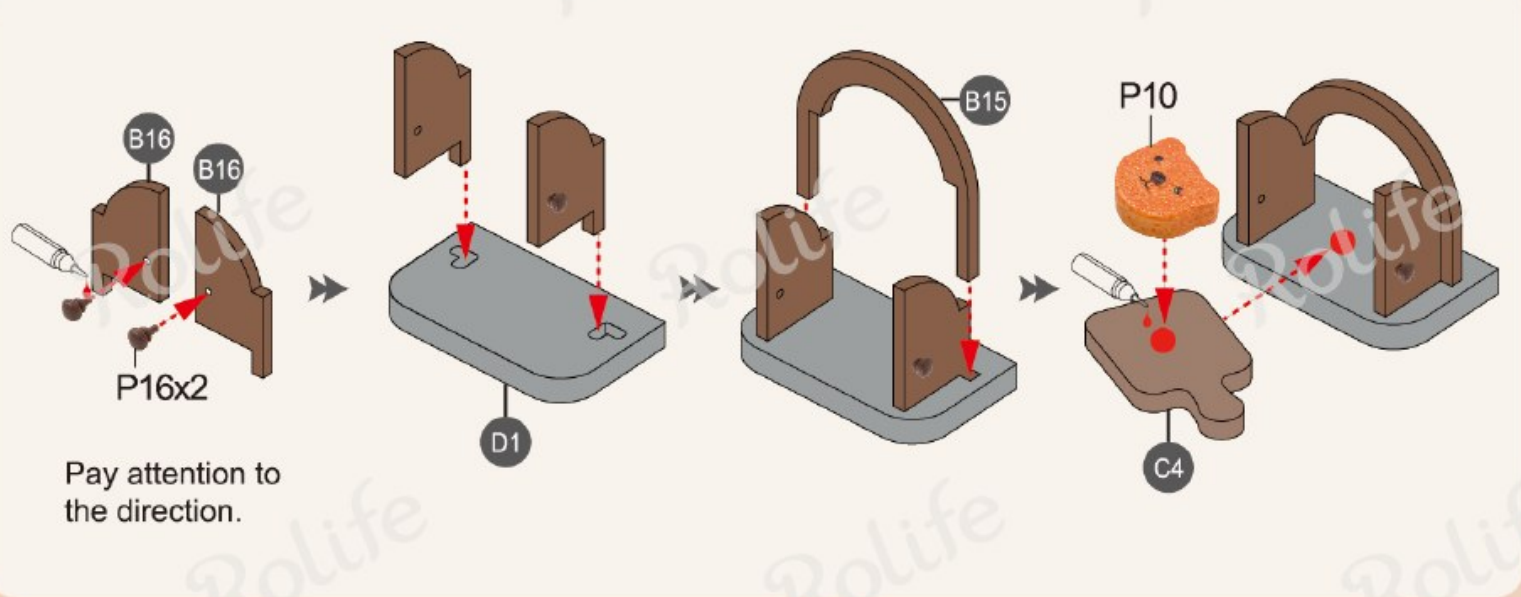
B16
B16
P16x2
D1
B15
P10
C4

Pay attention to the direction.

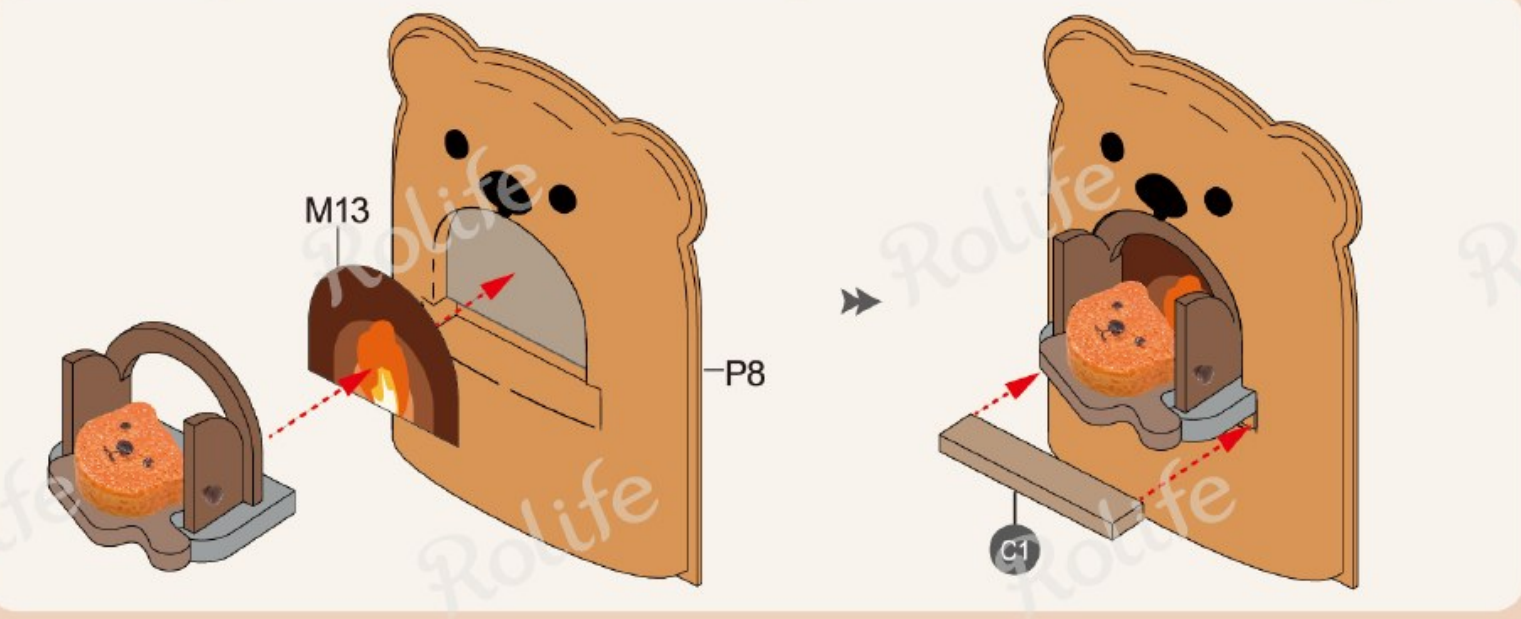

Takeout bag

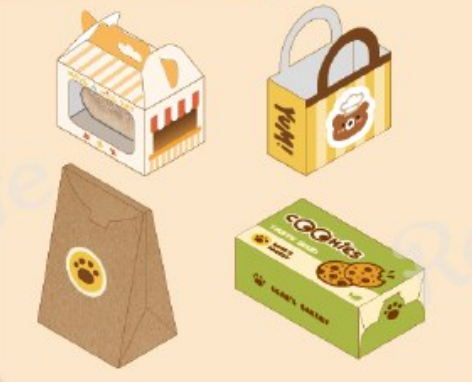

Material list:

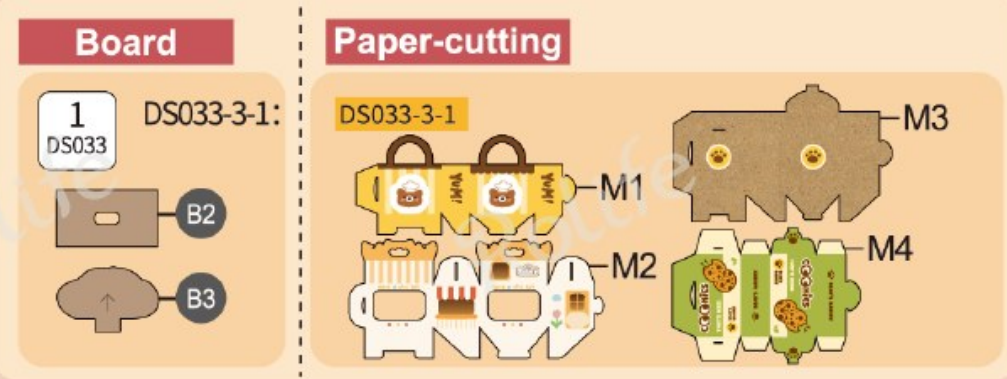
Board
1
DS033
DS033-3-1:
B2
B3
Paper-cutting
DS033-3-1
M1
M2
M3
M4

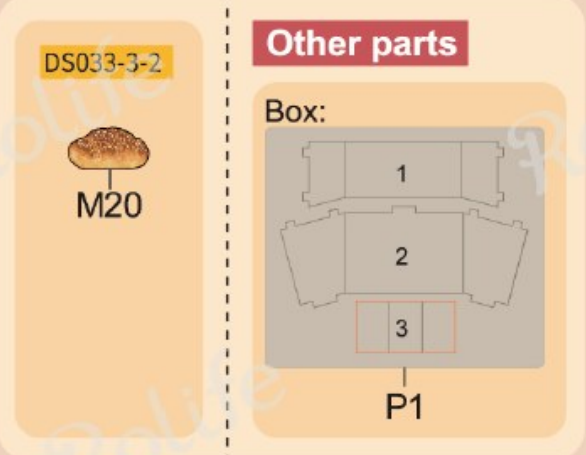
DS033-3-2
M20
Other parts
Box:
1
2
3
P1

1

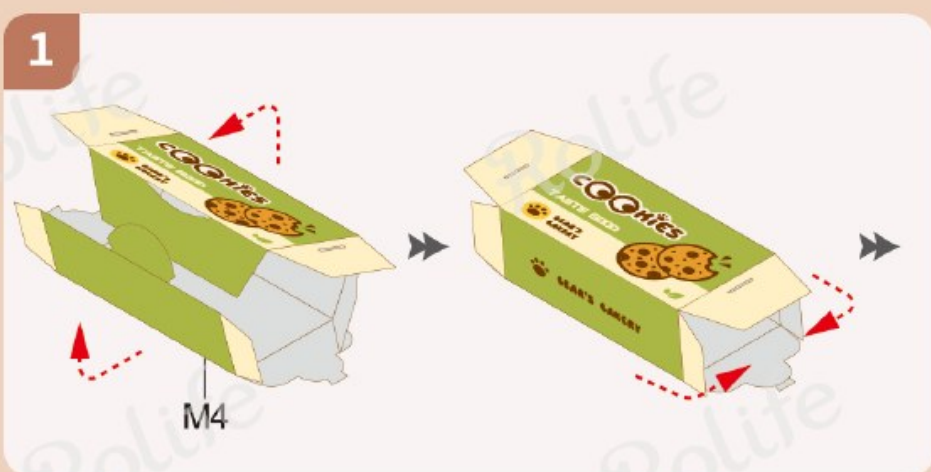

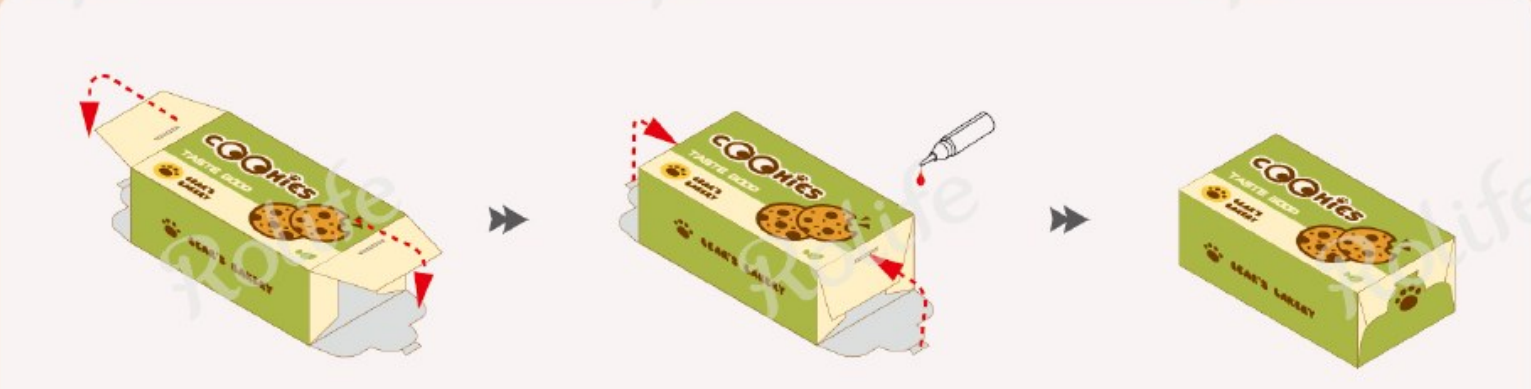

If it's hard to insert, use glue to stick it.

Takeout bag 1

2

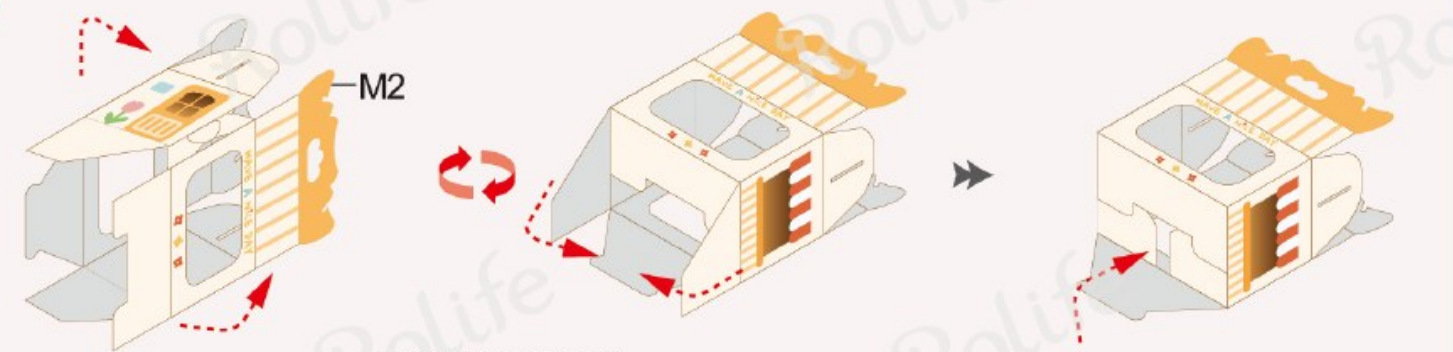

Fold it as shown.

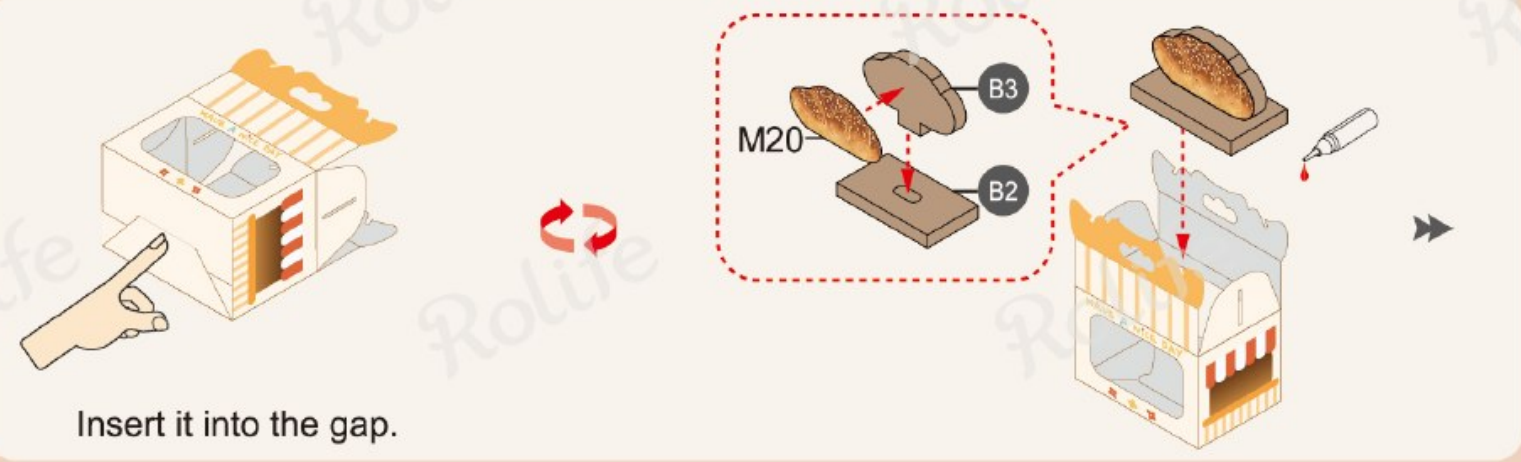

Insert it into the gap.

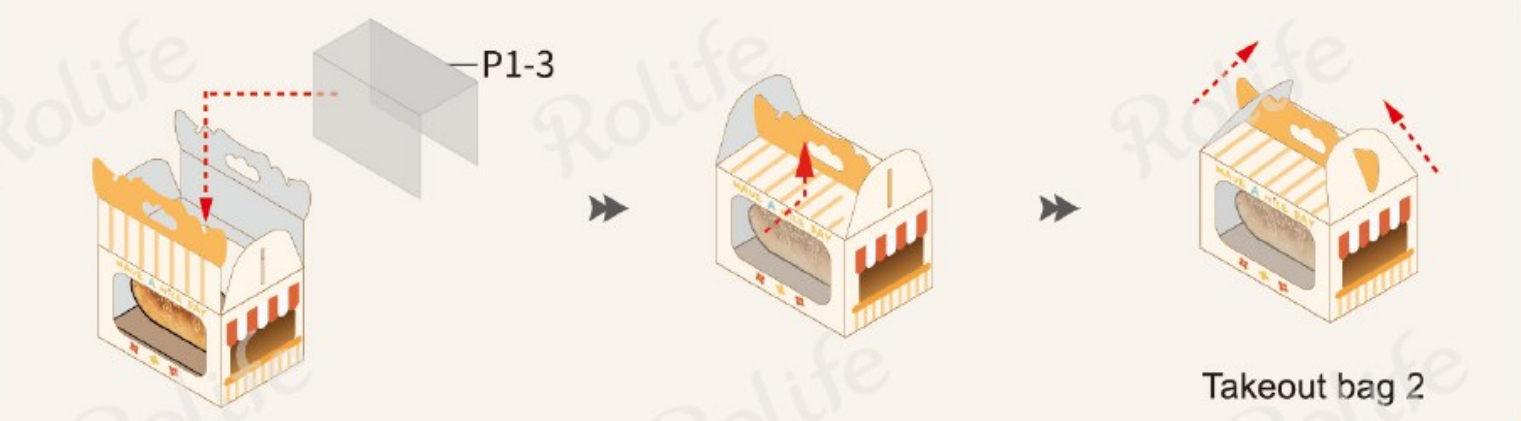

Takeout bag 2

3

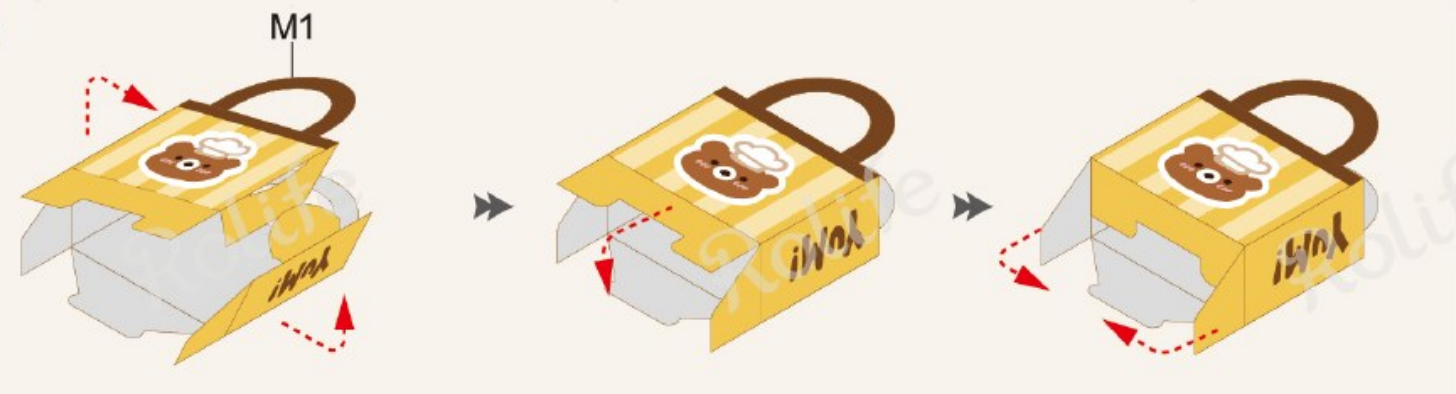

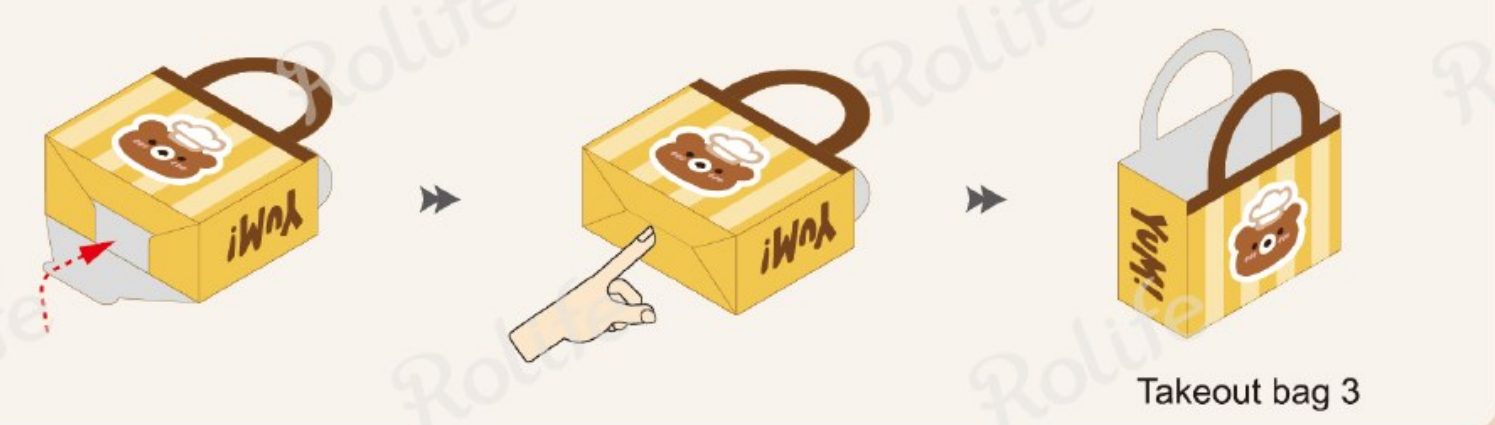

Takeout bag 3

Rolife

4

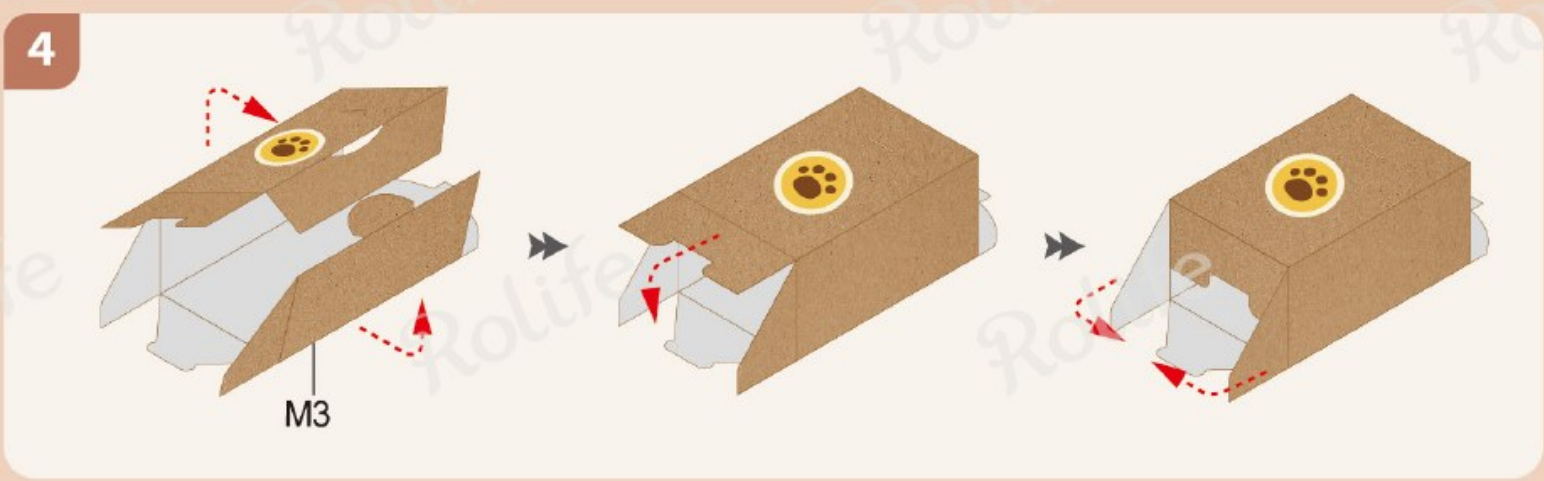

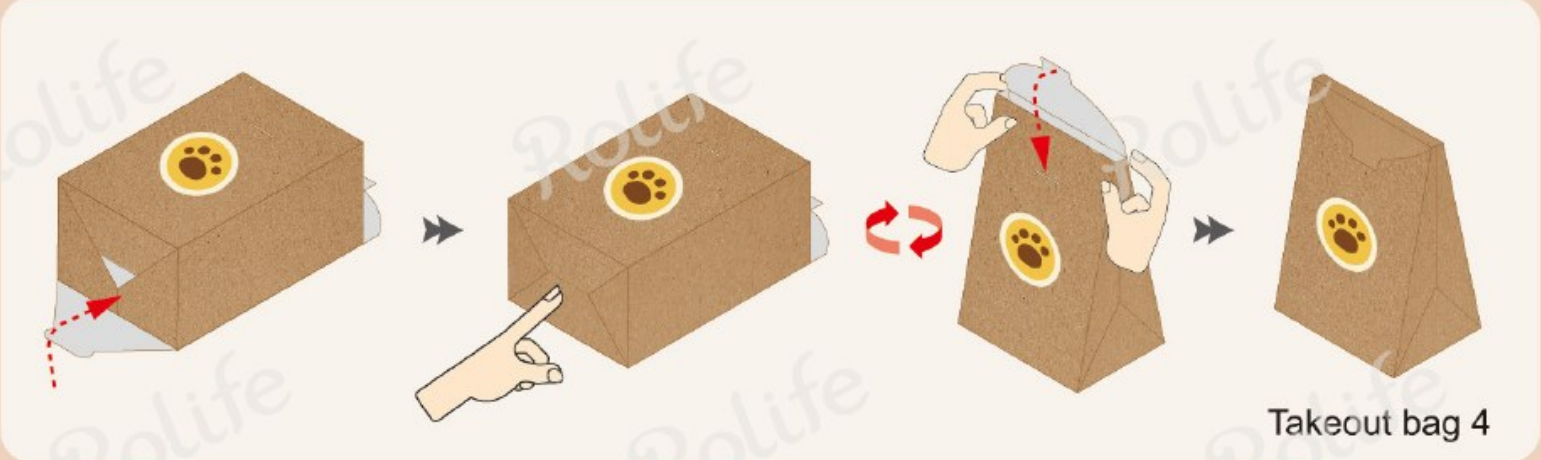
Takeout bag 4

Sign



Material list:

Board

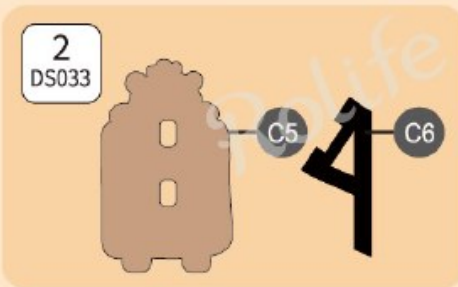
2
DS033
C5
C6

Paper-cutting

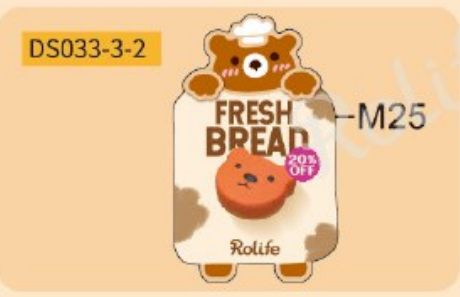
DS033-3-2
M25

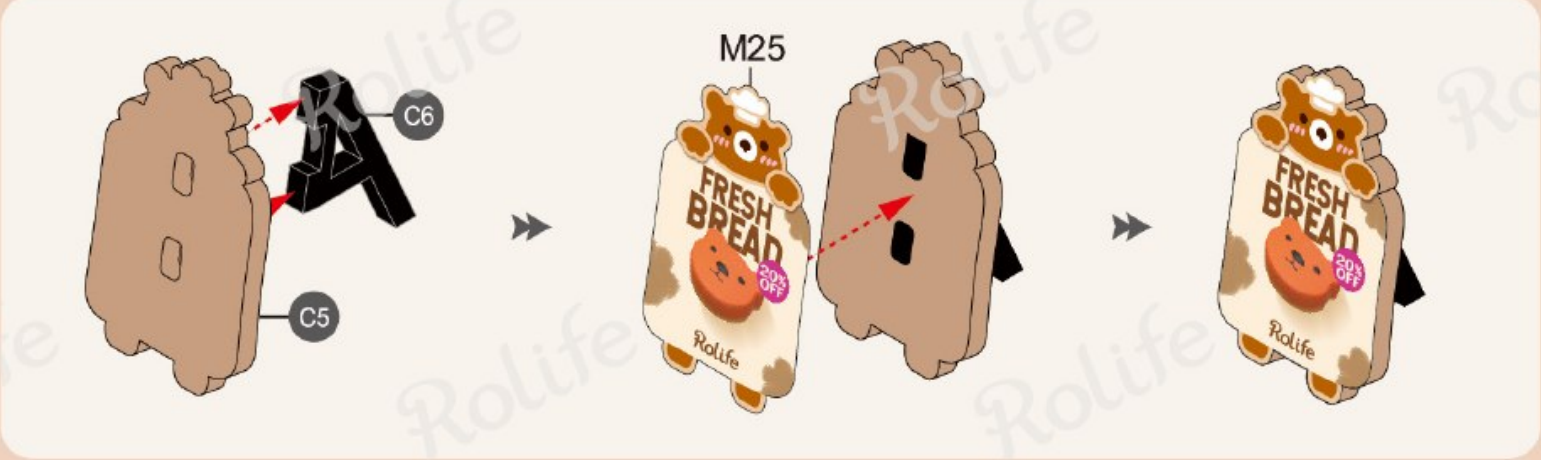

Small decoration

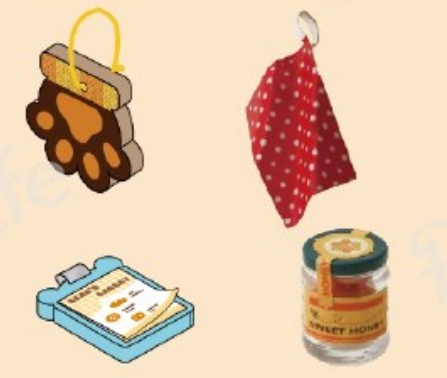

Material list:

Board

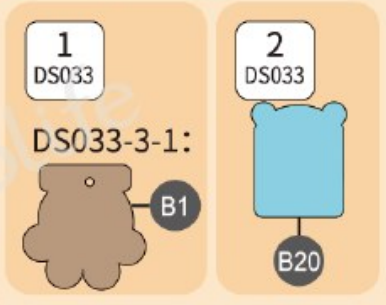
1
DS033
DS033-3-1:
B1
2
DS033
B20

Paper-cutting

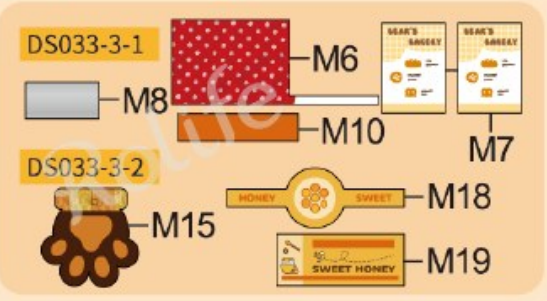
DS033-3-1
M6
M8
M10
M7
DS033-3-2
M15
M18
M19

Other parts

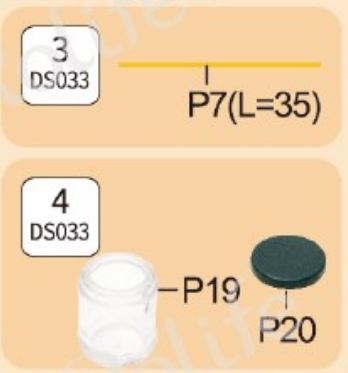
3
DS033
P7(L=35)
4
DS033
P19
P20

1

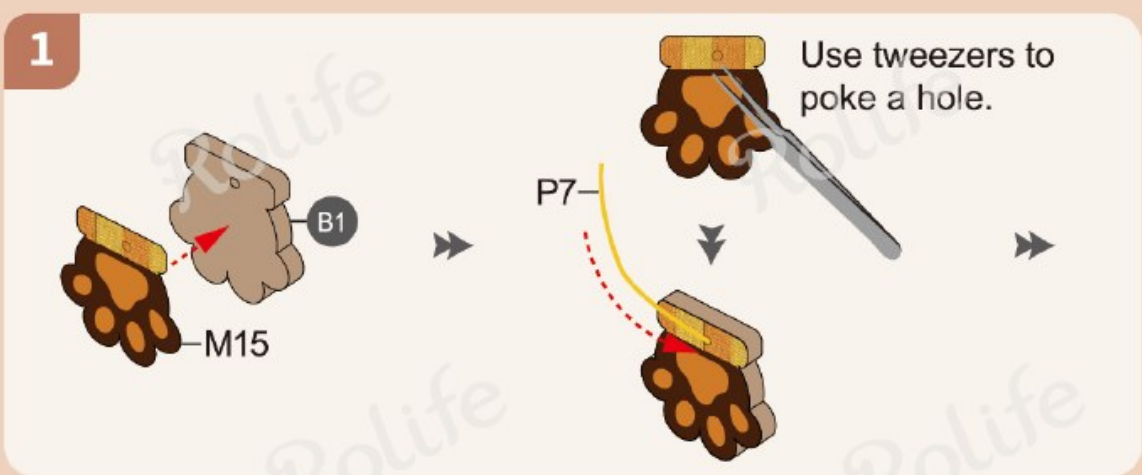

Use tweezers to poke a hole.

2

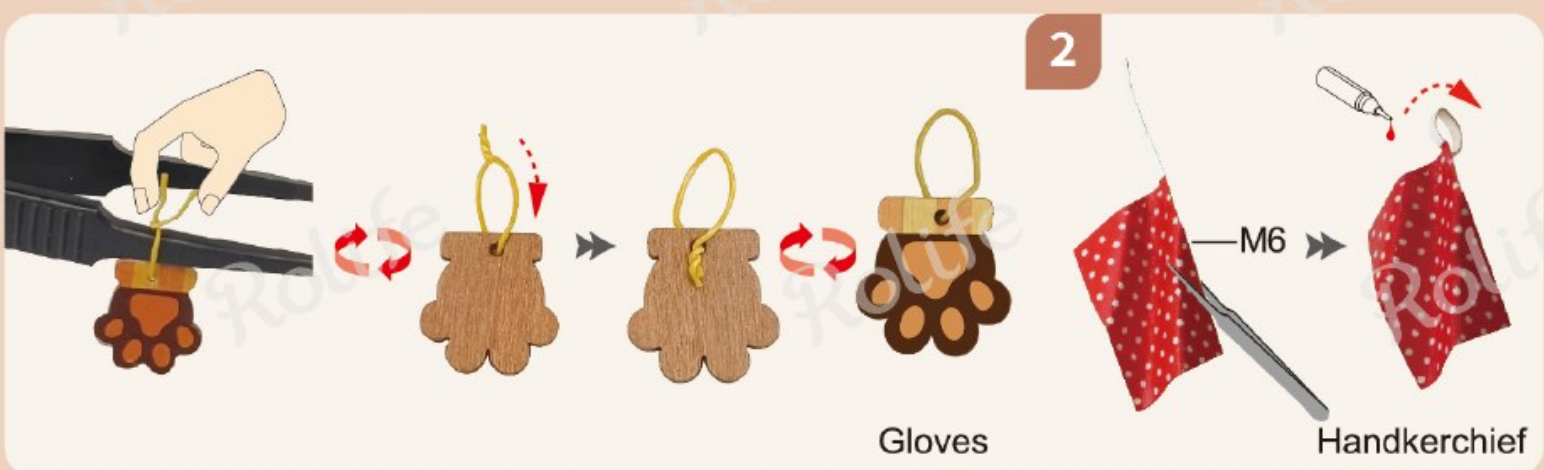
M6
Gloves
Handkerchief

3

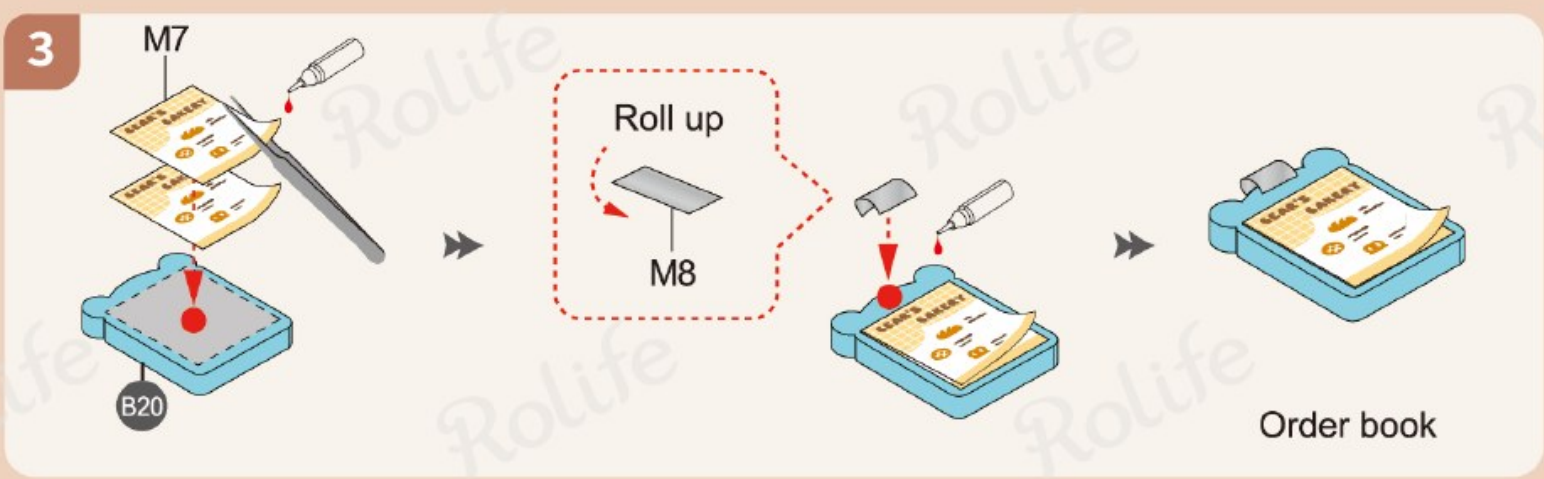
M7
B20
Roll up
M8
Order book

4

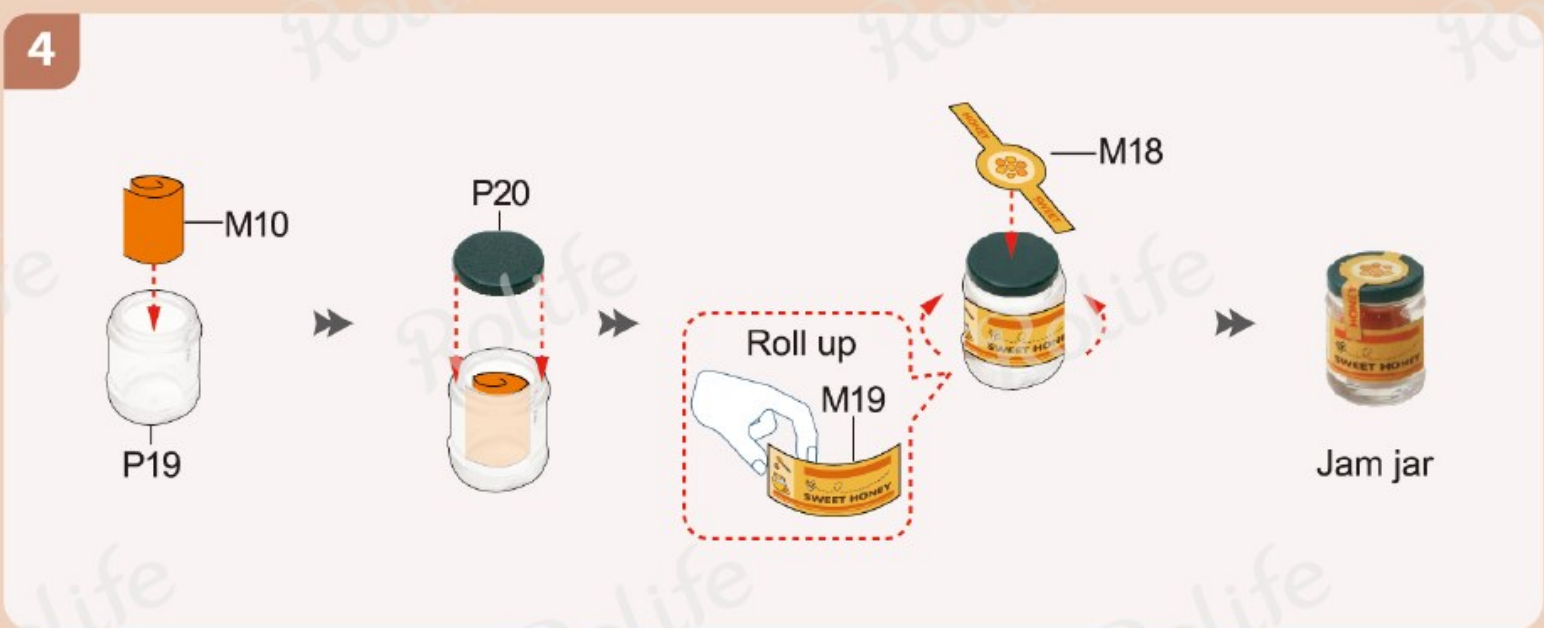
M10
P19
P20
Roll up
M19
M18
Jam jar

Light

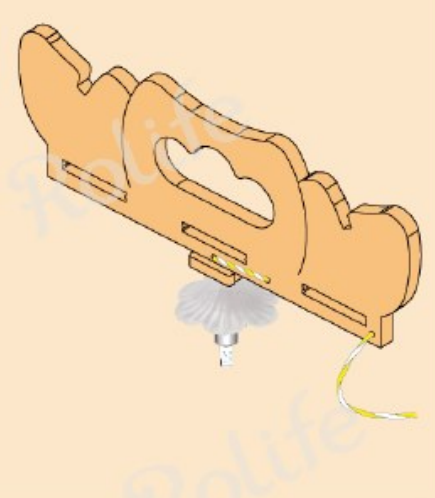

Material list:

Board

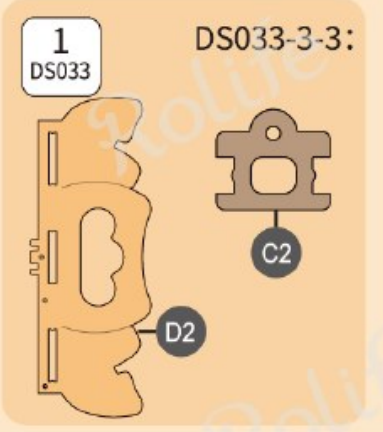
1
DS033
DS033-3-3:
C2
D2

Other parts

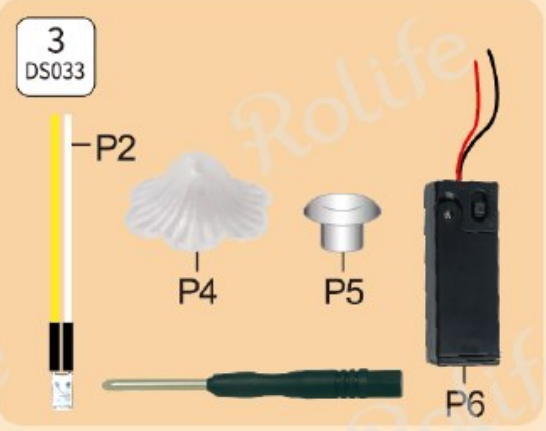
3
DS033
P2
P4
P5
P6

Attention:

1.In the battery box, the red wire is positive; the black is negative.

2.2 pieces of AAA batteries need to be provided by yourself. When using, loosen the back cover of the battery box with the screwdriver.

1

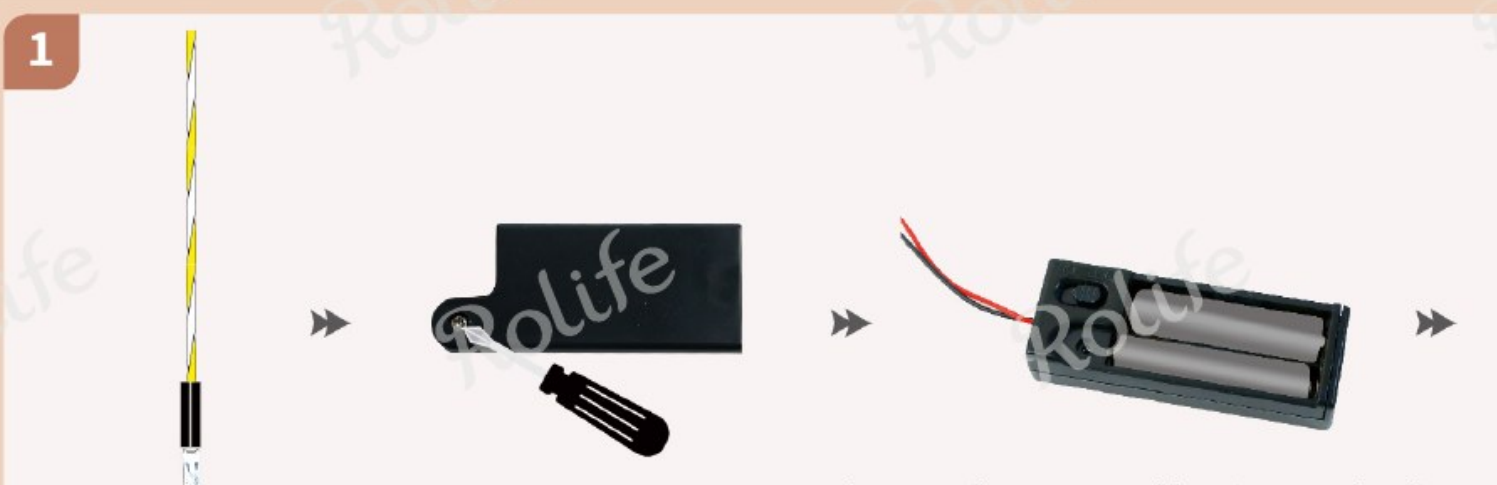

Twist the wires as shown.

Loosen the screw without removing it. Open the back cover. Load 2 pieces of AAA batteries (prepared by yourself).

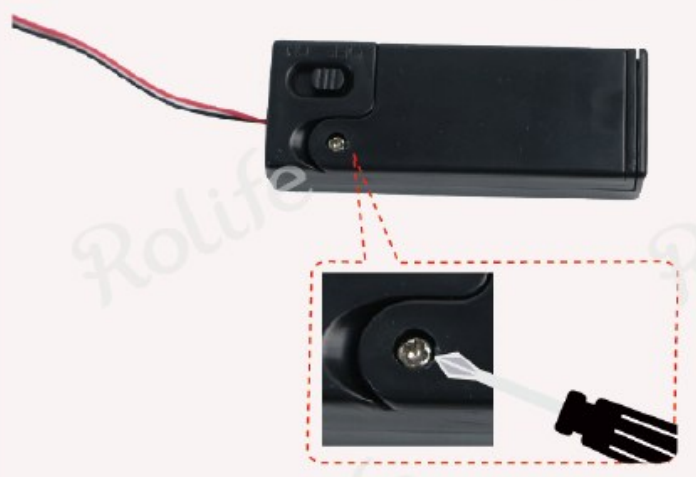

Close the cover of the battery box. Tighten the screw.

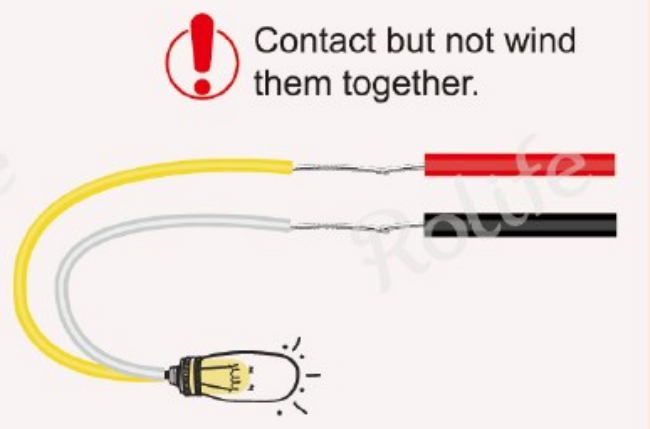

Contact but not wind them together.

Turn on the switch. Contact the inner core to test if it works.

2

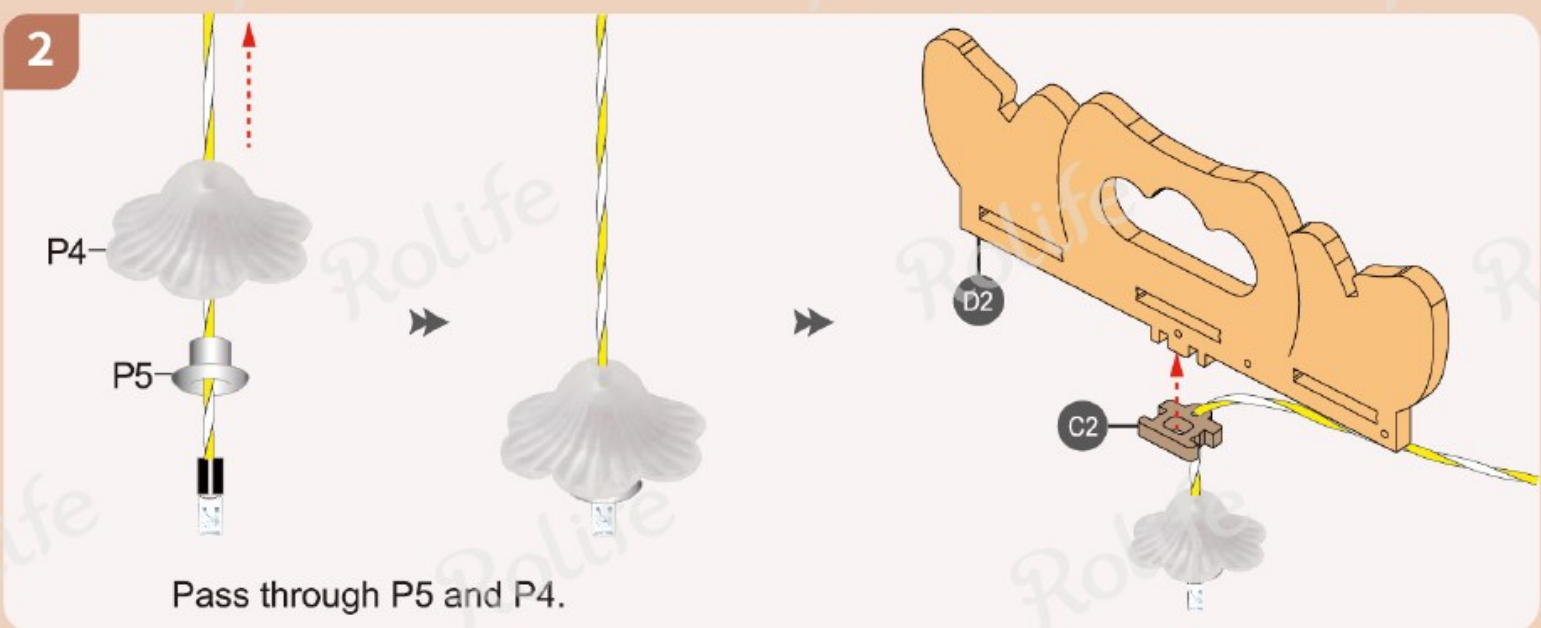

Pass through P5 and P4.

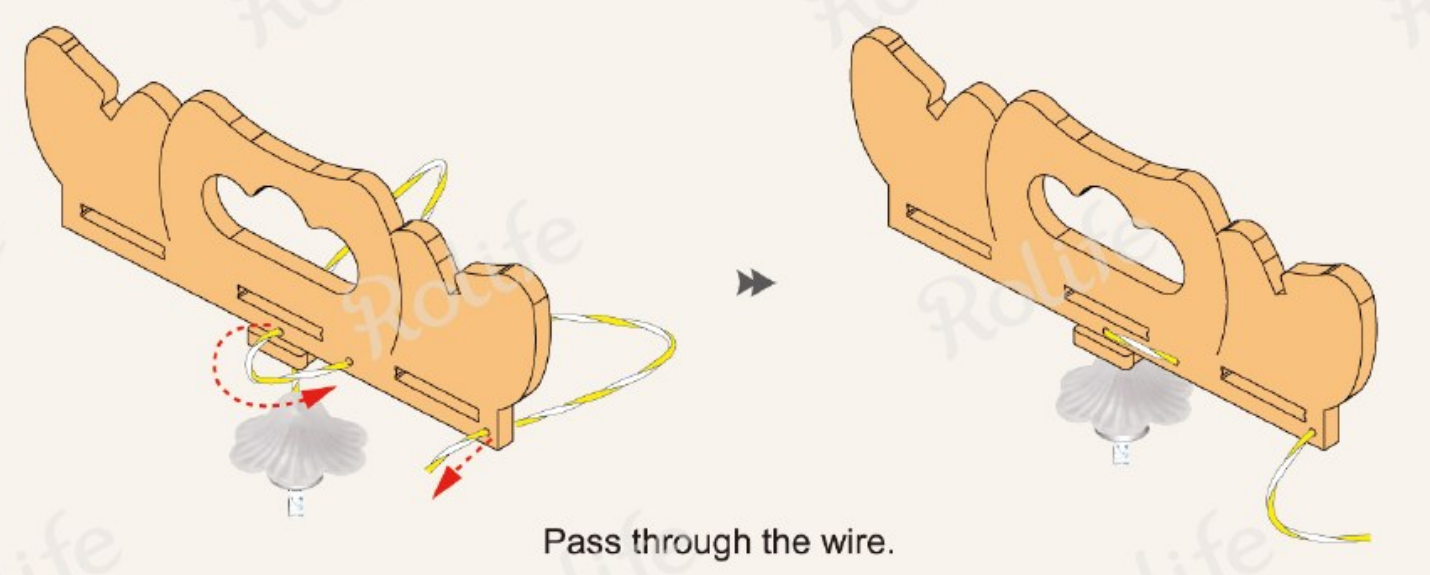

Pass through the wire.

Part A

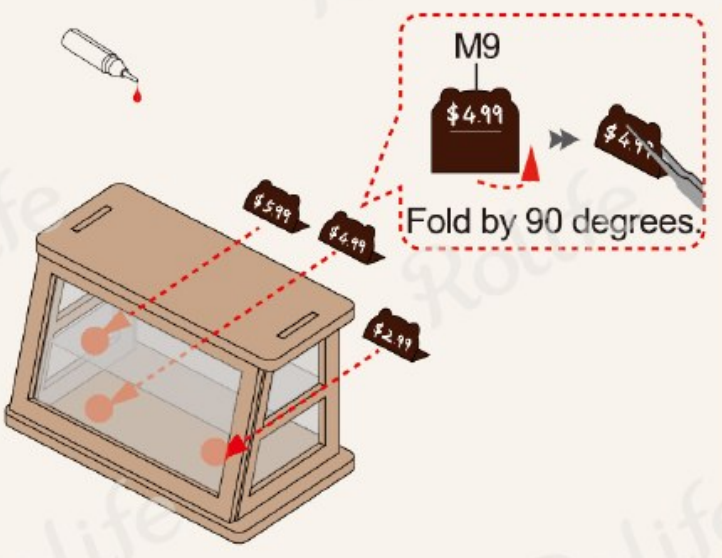

Fold by 90 degrees.

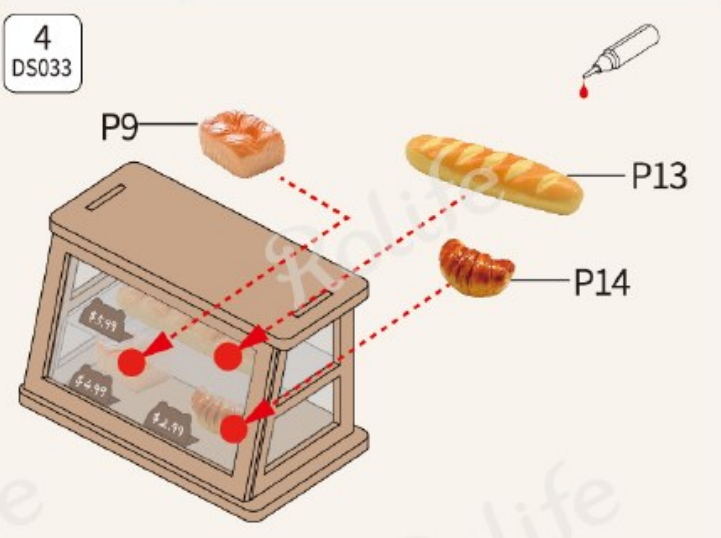
4
DS033
P9
P13
P14

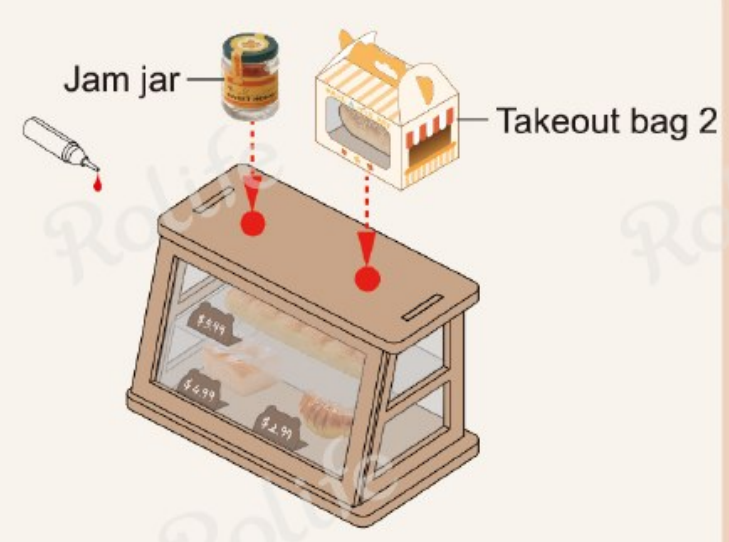
Jam jar
Takeout bag 2

Part B

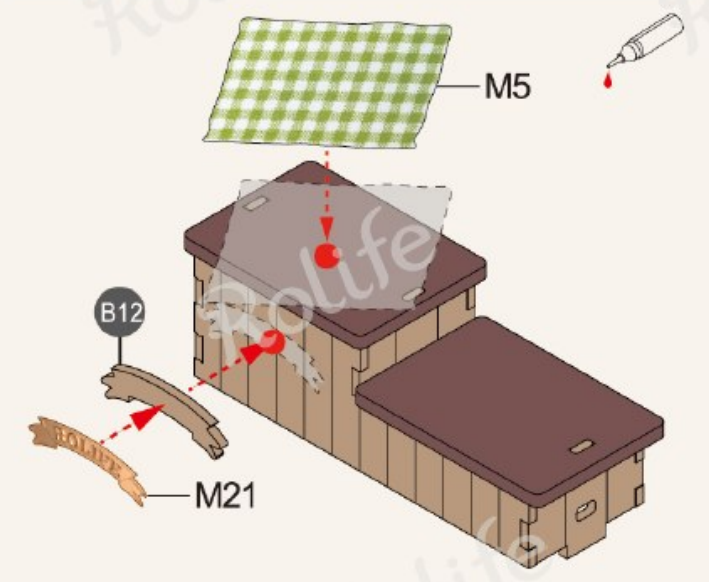

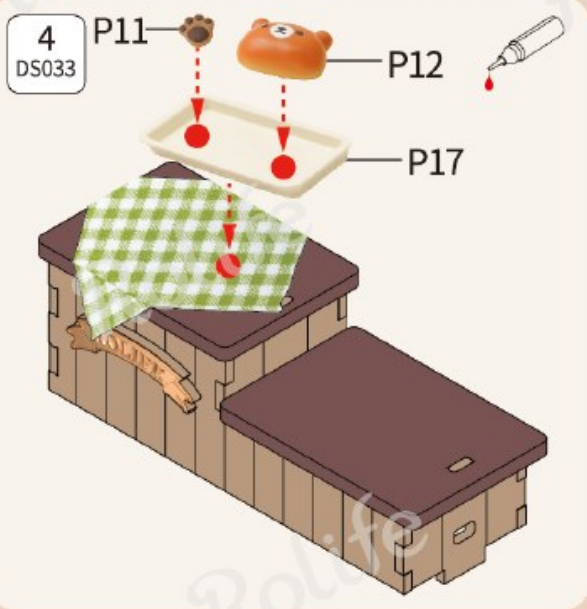
4
DS033
P11
P12
P17

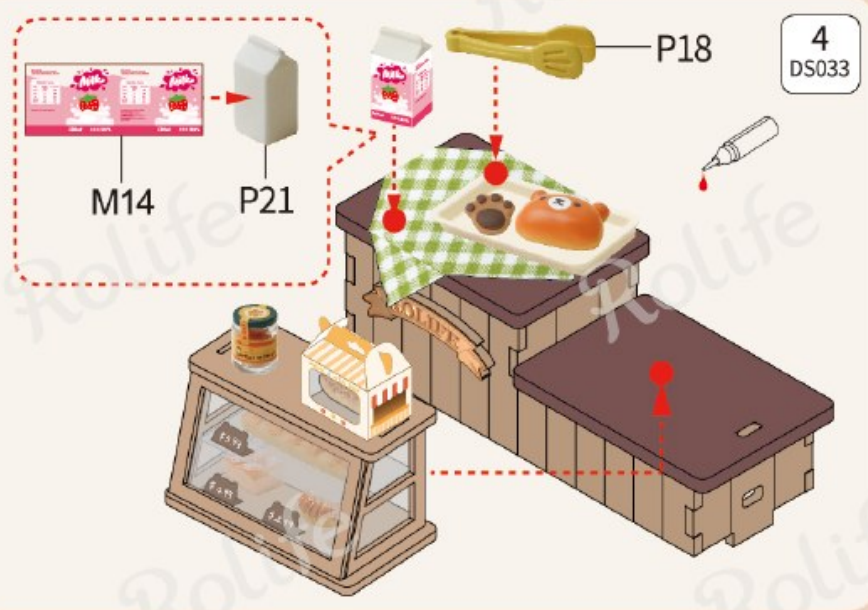
M14
P21
P18
4
DS033

Part C

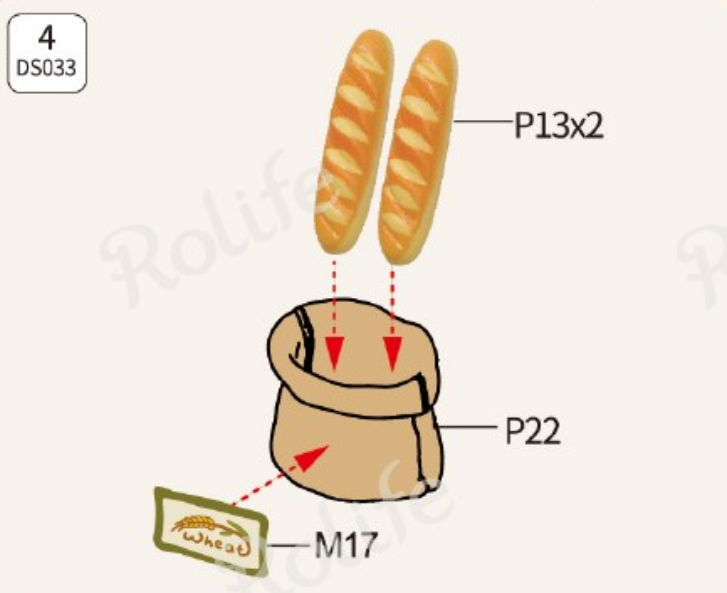
4
DS033
P13x2
P22
M17

Frame

Material list:

Board

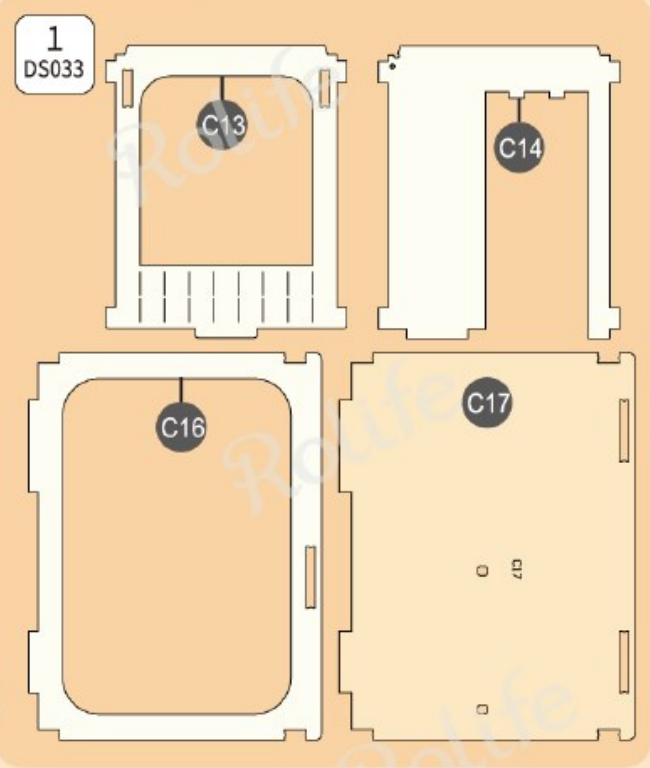
1
DS033
C13
C14
C16
C17

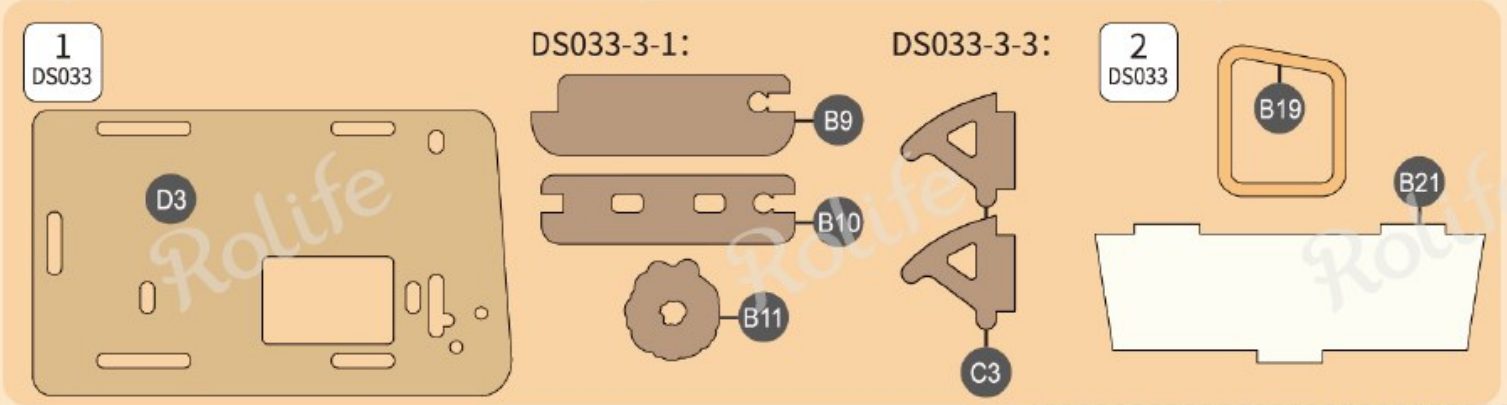
1
DS033
D3
DS033-3-1:
B9
B10
B11
DS033-3-3:
C3
2
DS033
B19
B21

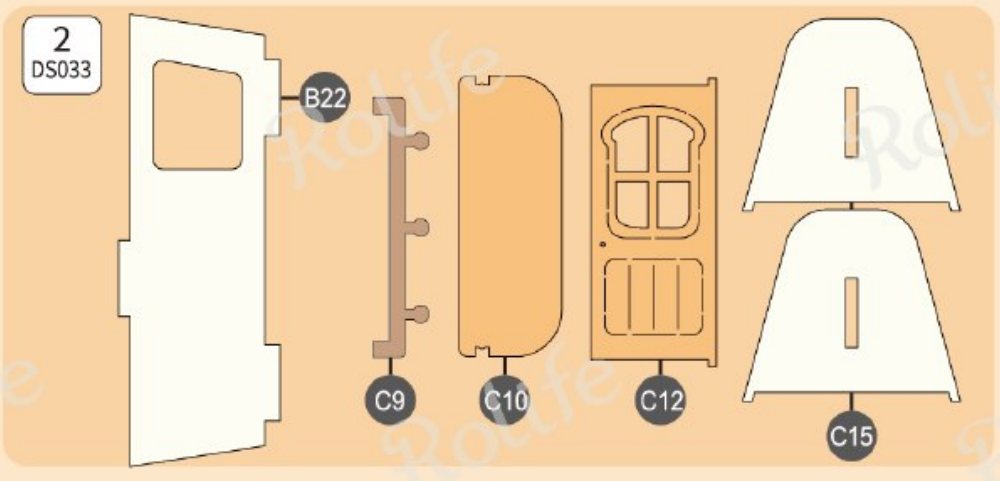
2
DS033
B22
C9
C10
C12
C15

Paper-cutting

DS033-3-1



Paper-cutting

DS033-3-3 Part number illustration:

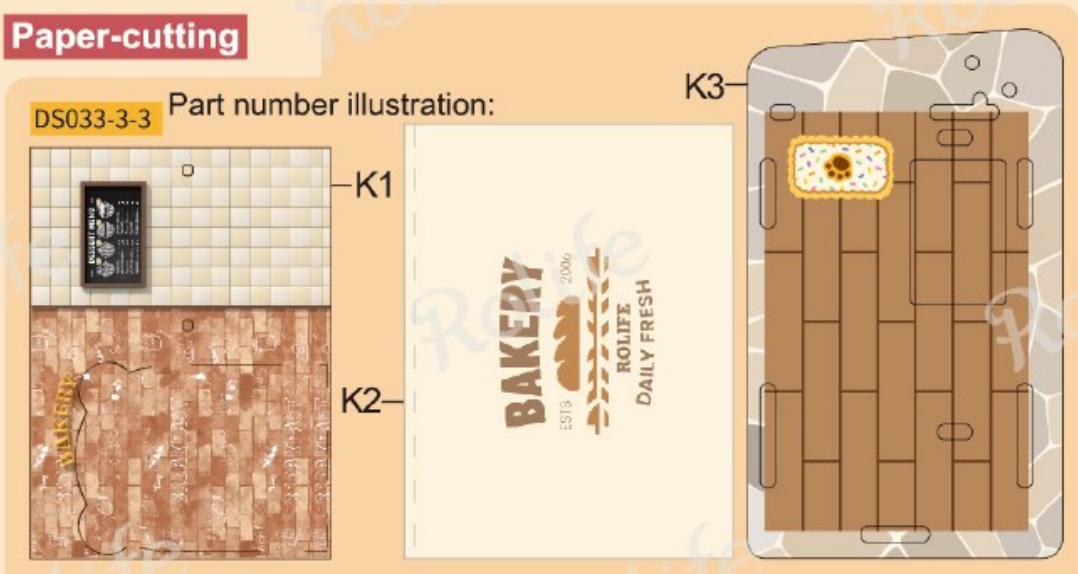
K1
K2
K3
BAKERY
ESTB 2006
ROLIFE
DAILY FRESH

DS033-3-2

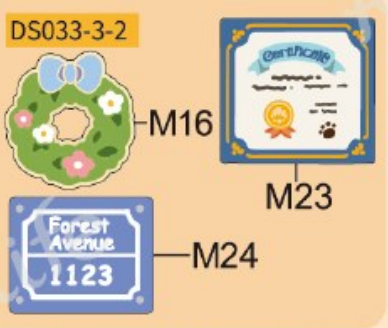
M16
M23
M24
Forest
Avenue
1123

Other parts

4
DS033
P16x2

1

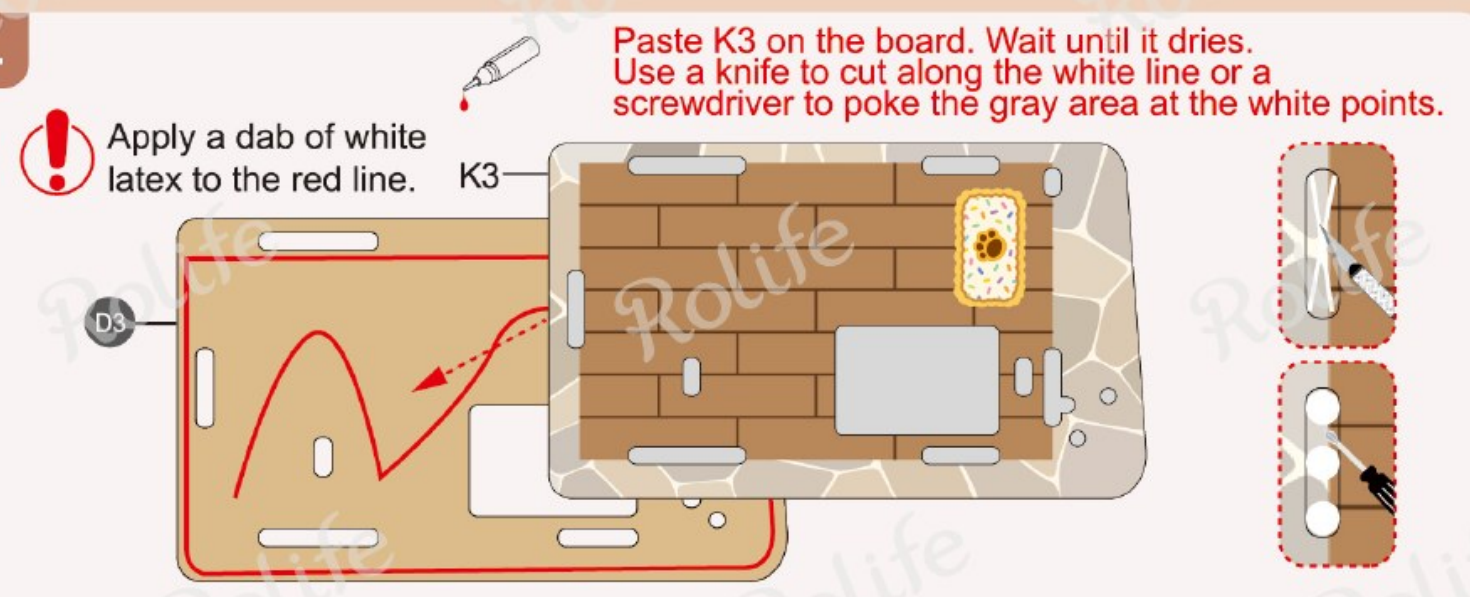

Paste K3 on the board. Wait until it dries. Use a knife to cut along the white line or a screwdriver to poke the gray area at the white points.

Apply a dab of white latex to the red line.

2

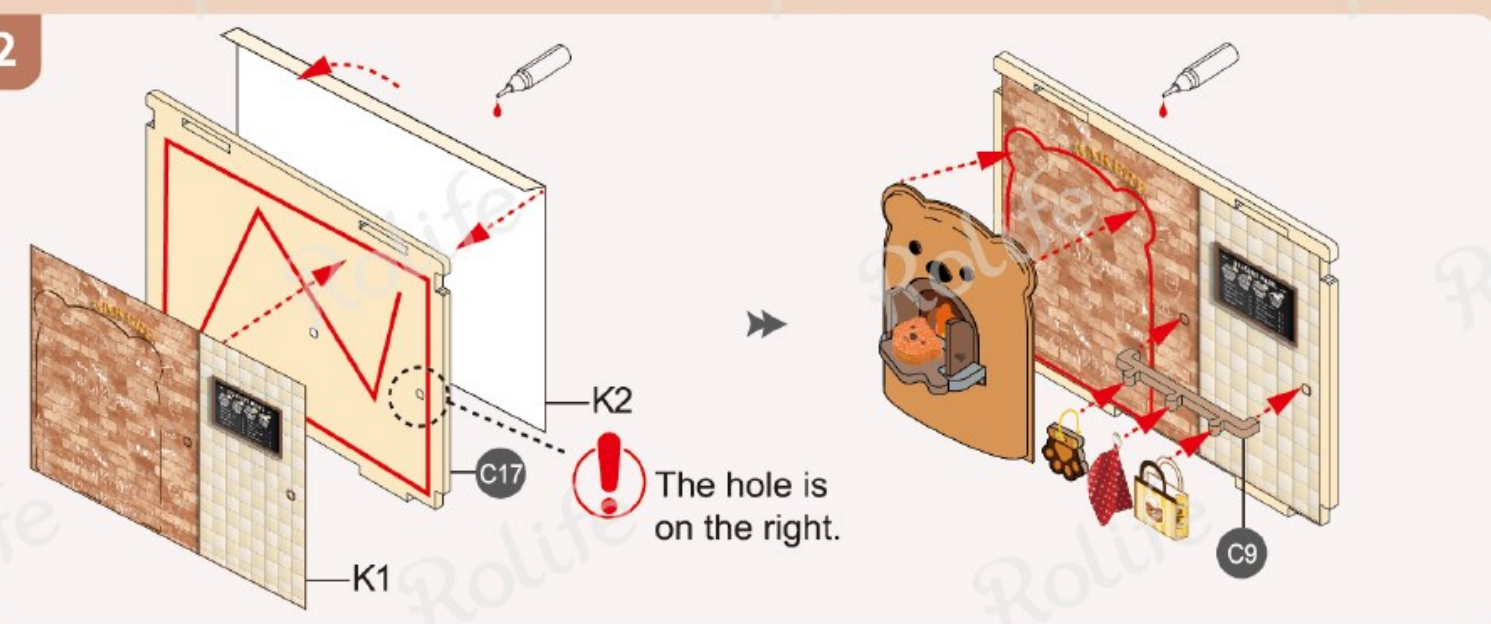

The hole is on the right.

3

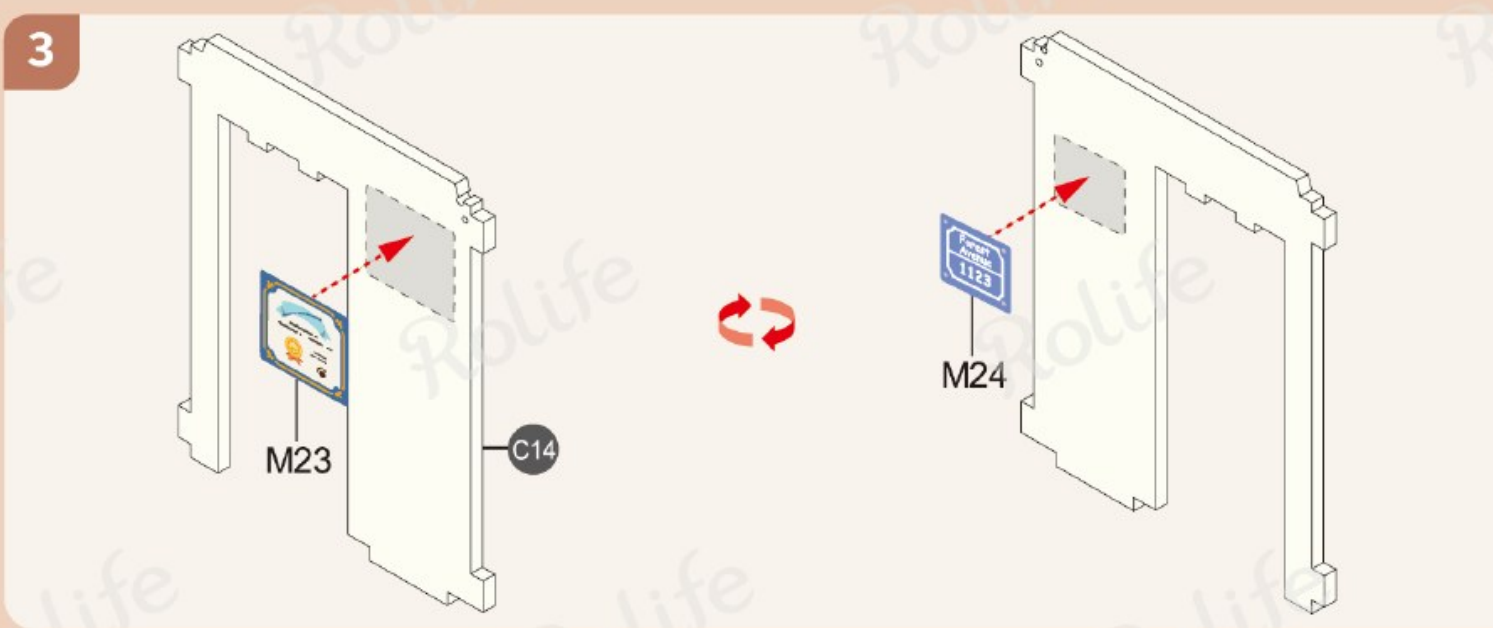

4

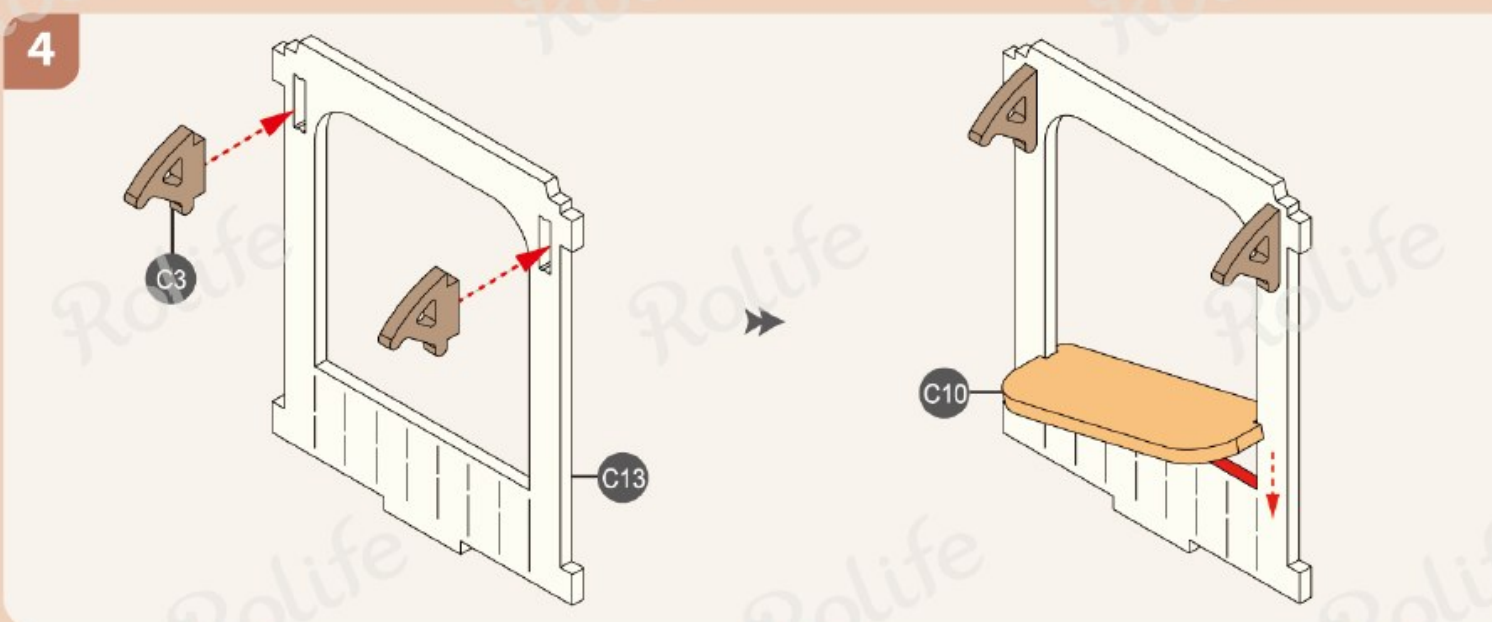

5

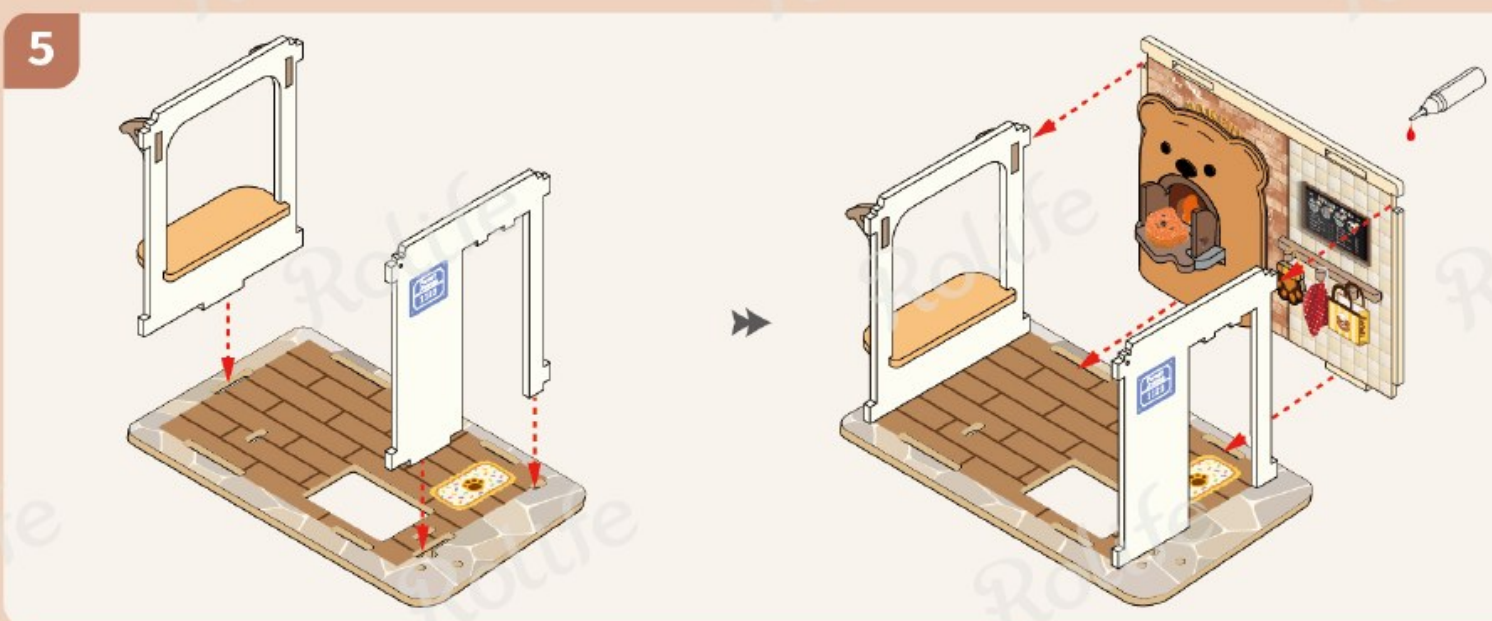

Rolife

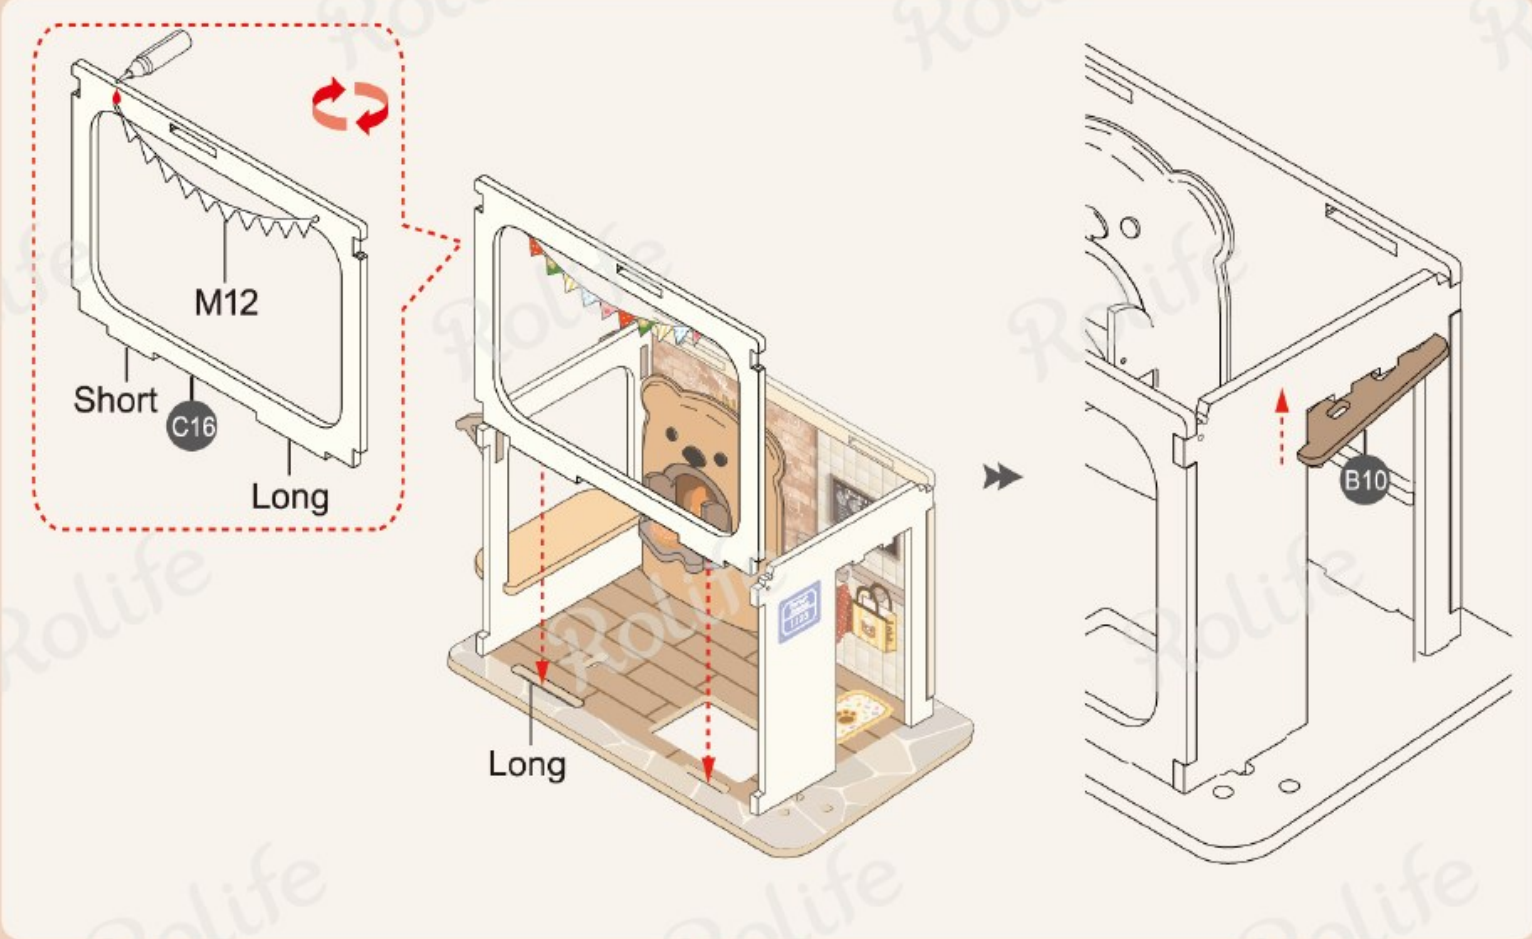
M12
Short
C16
Long
Long
B10

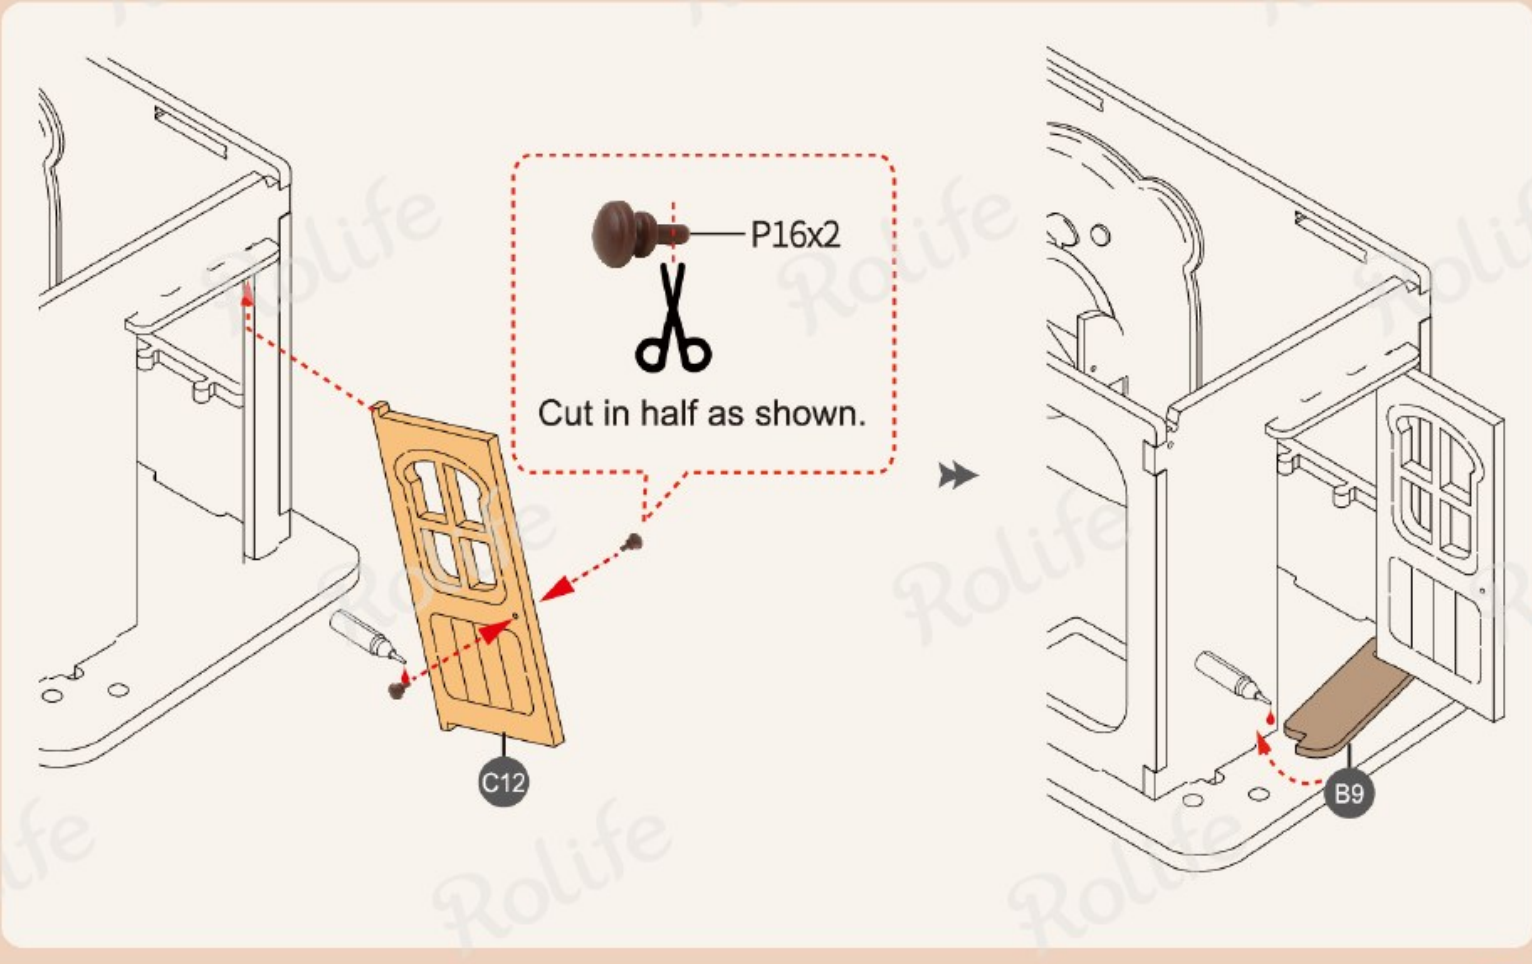
P16x2
C12
B9

Cut in half as shown.

6

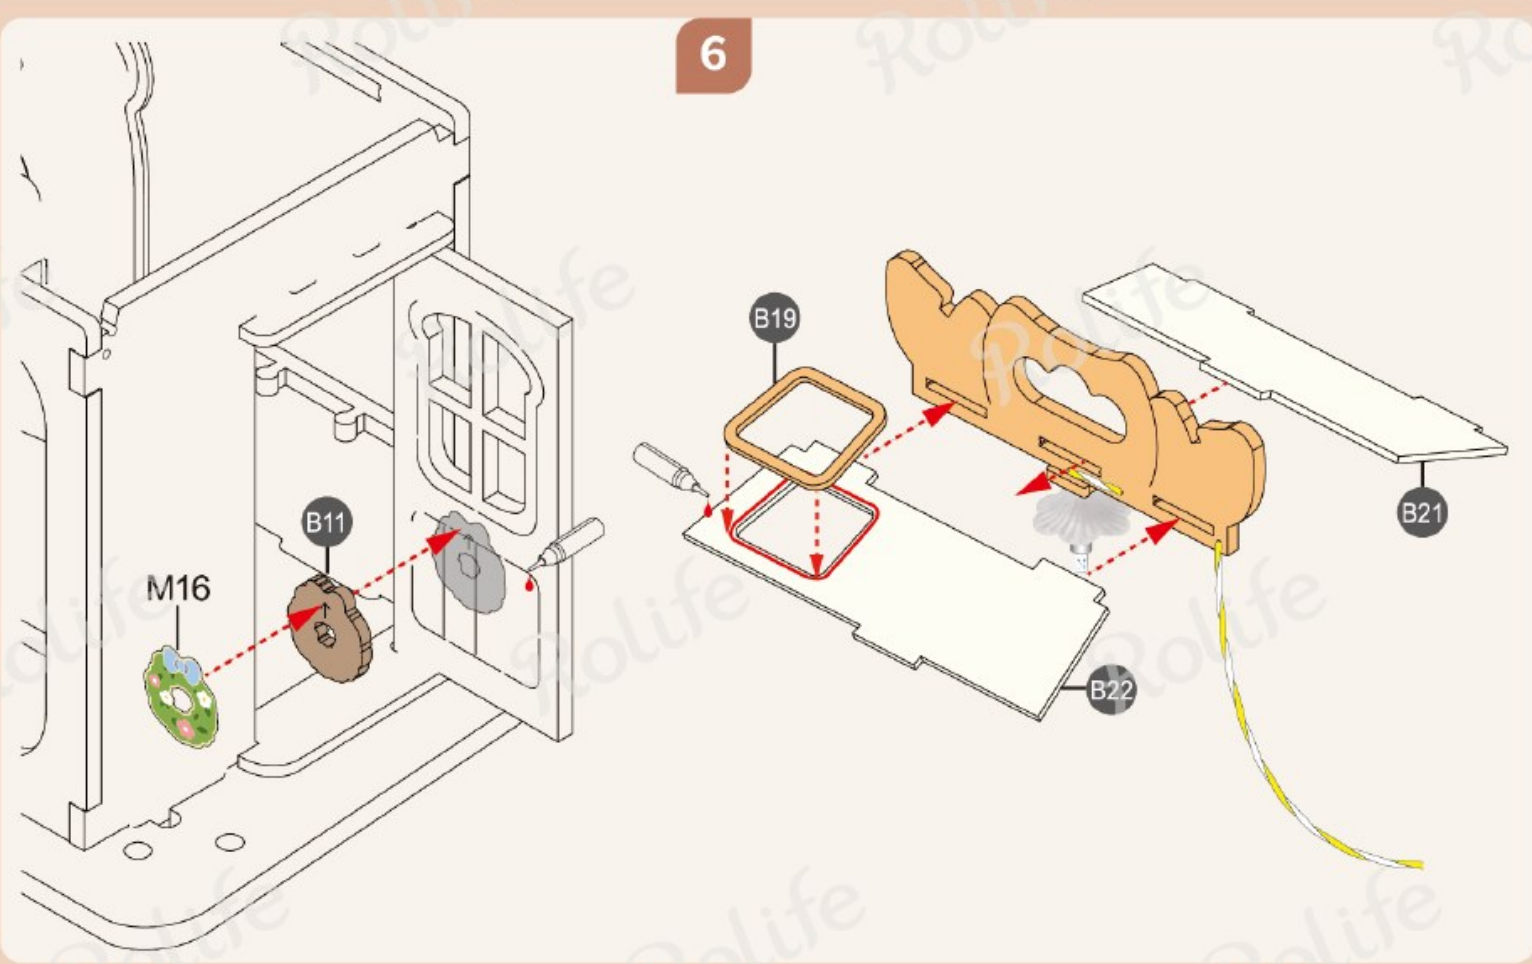
B11
M16
B19
B21
B22

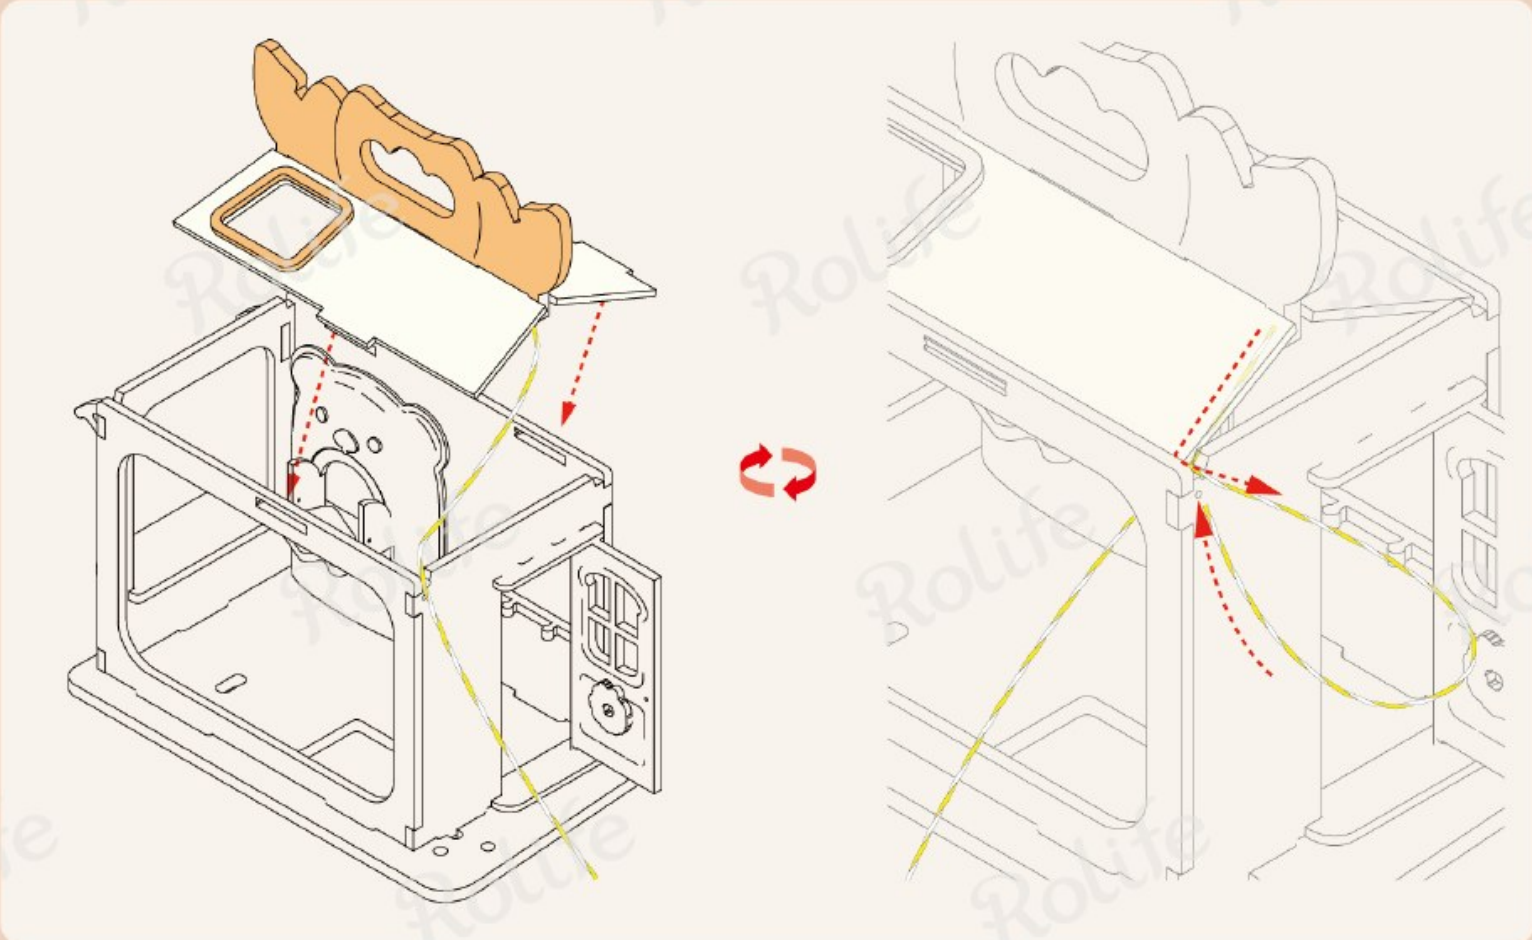

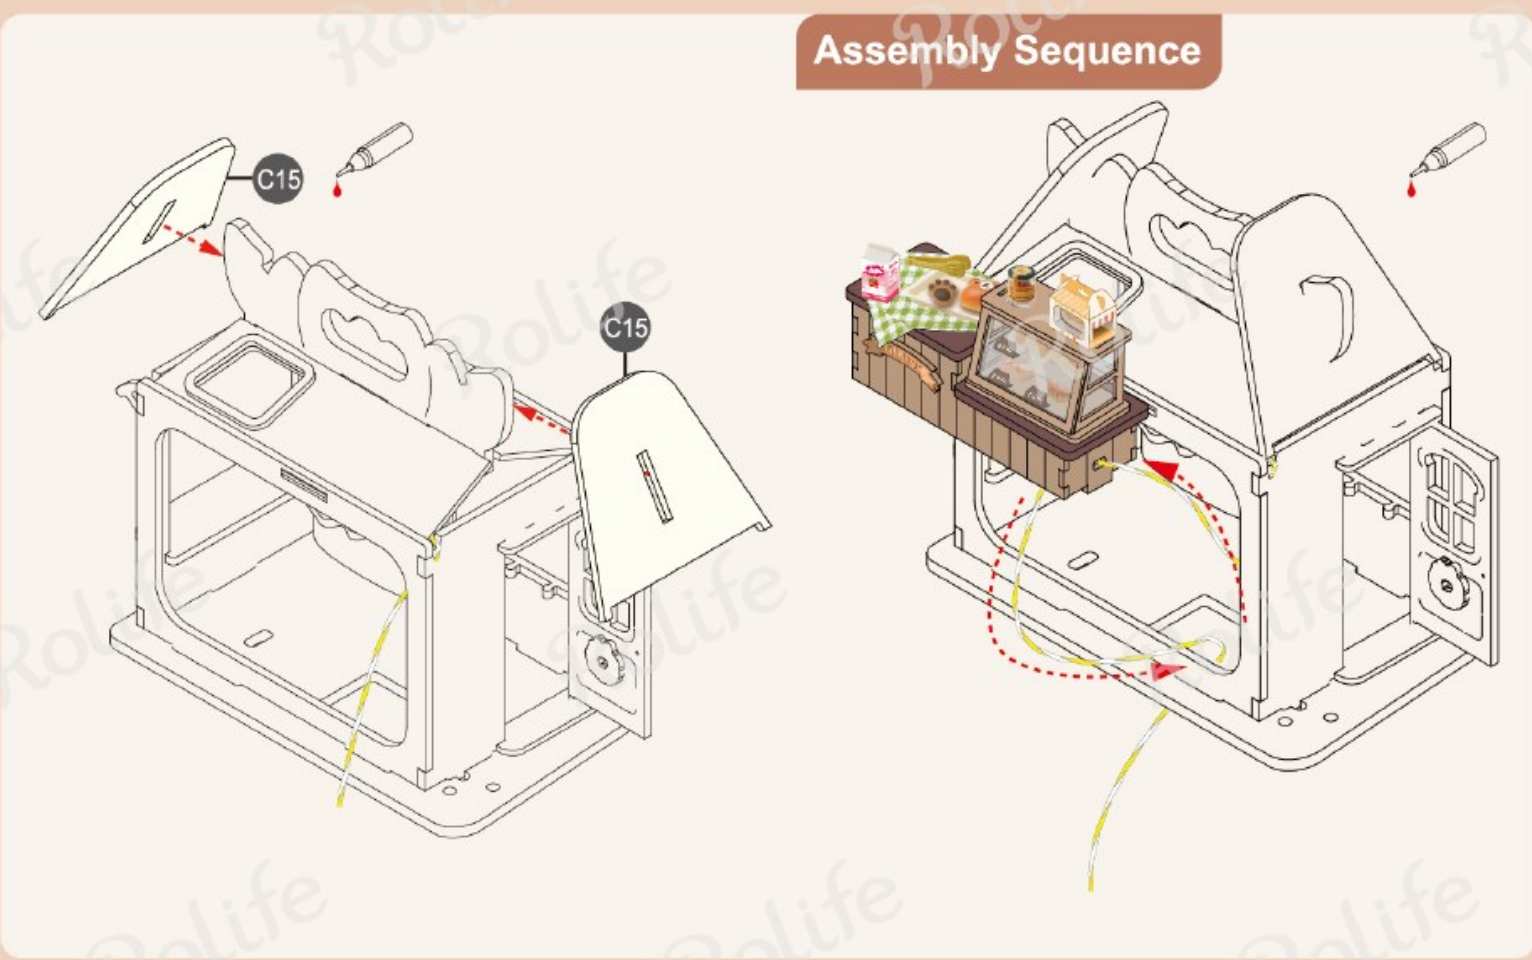
Assembly Sequence
C15
C15

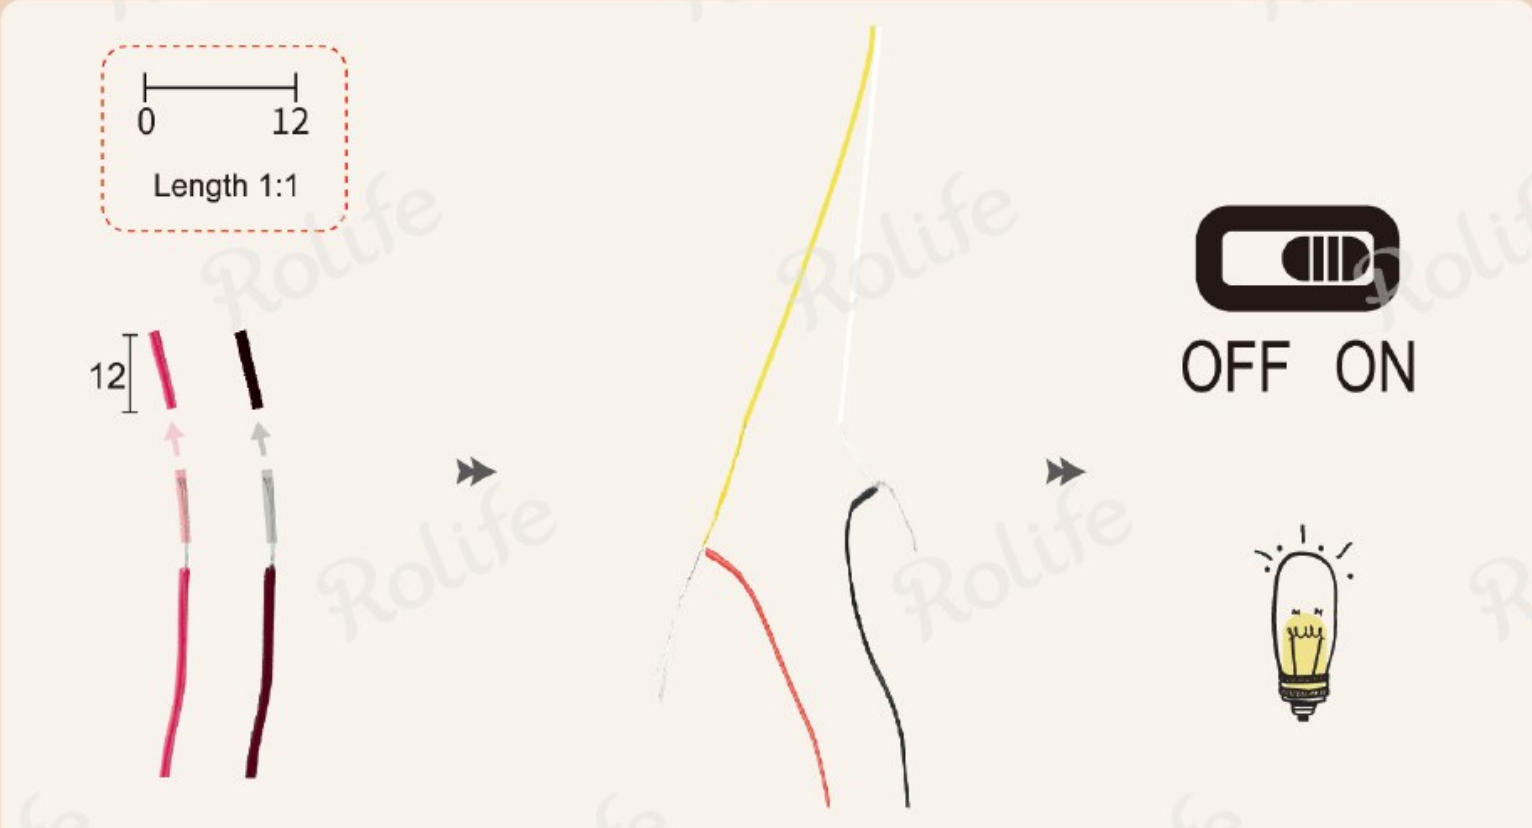
0
12
Length 1:1
12
OFF
ON

Remove 12mm rubber from the end of both wires.

Connect the yellow to the red wire.
Connect the white to the black wire.

Turn on the light to test.

Rolife

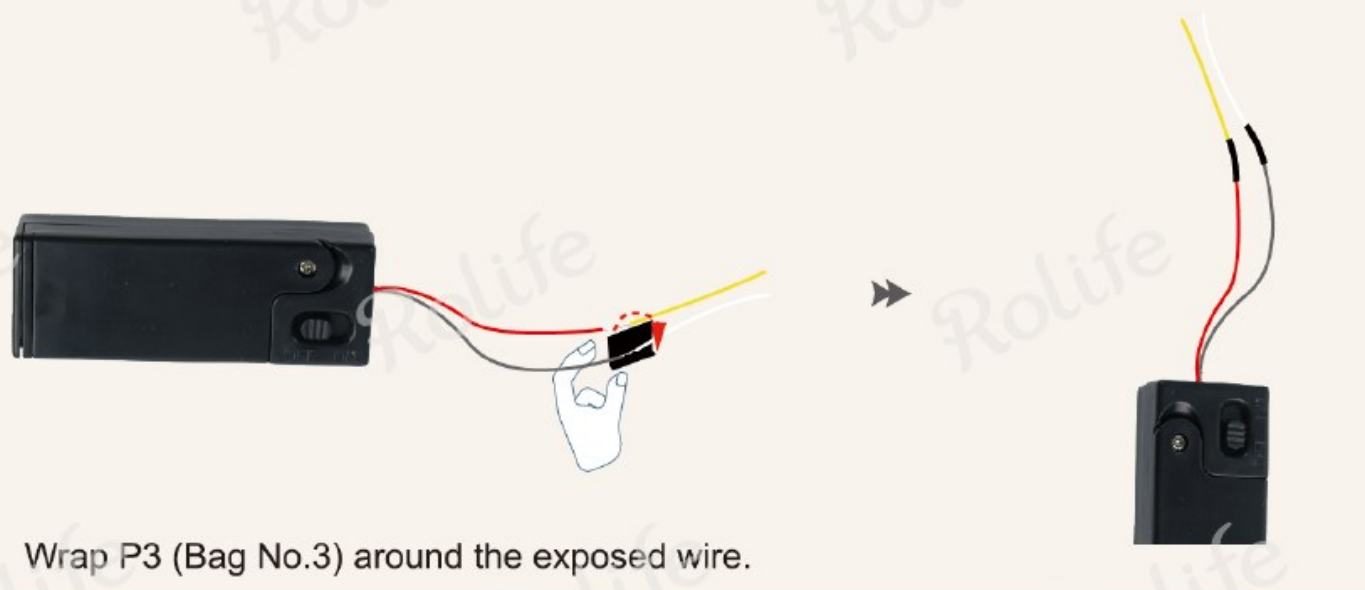

Wrap P3 (Bag No.3) around the exposed wire.

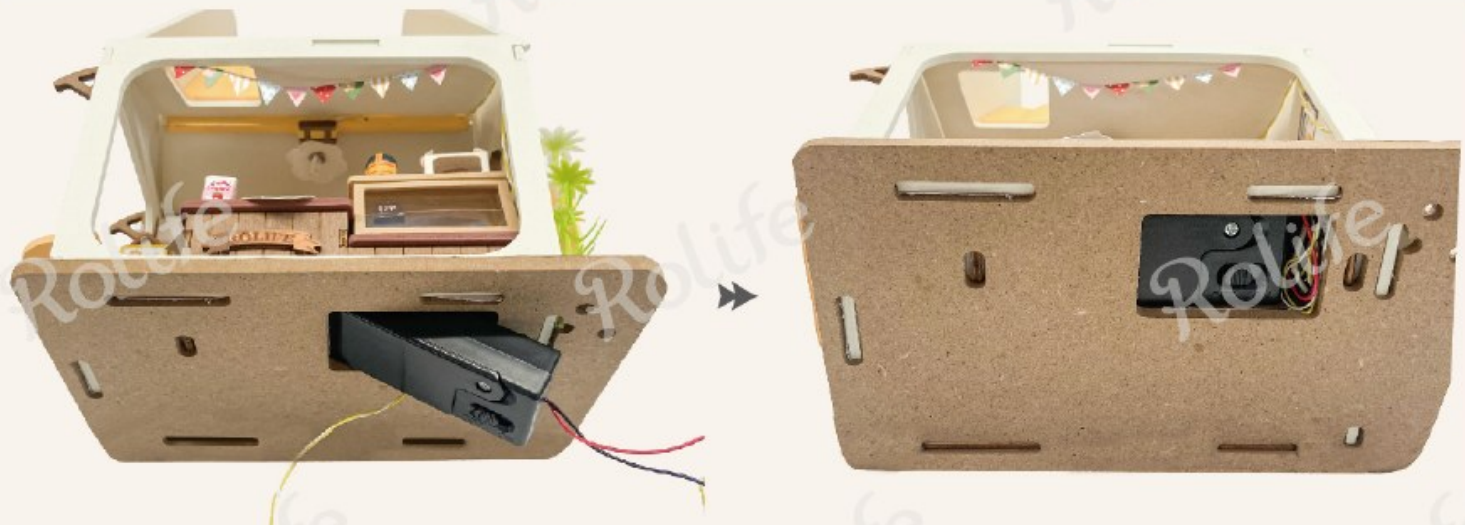

Arrange wires.

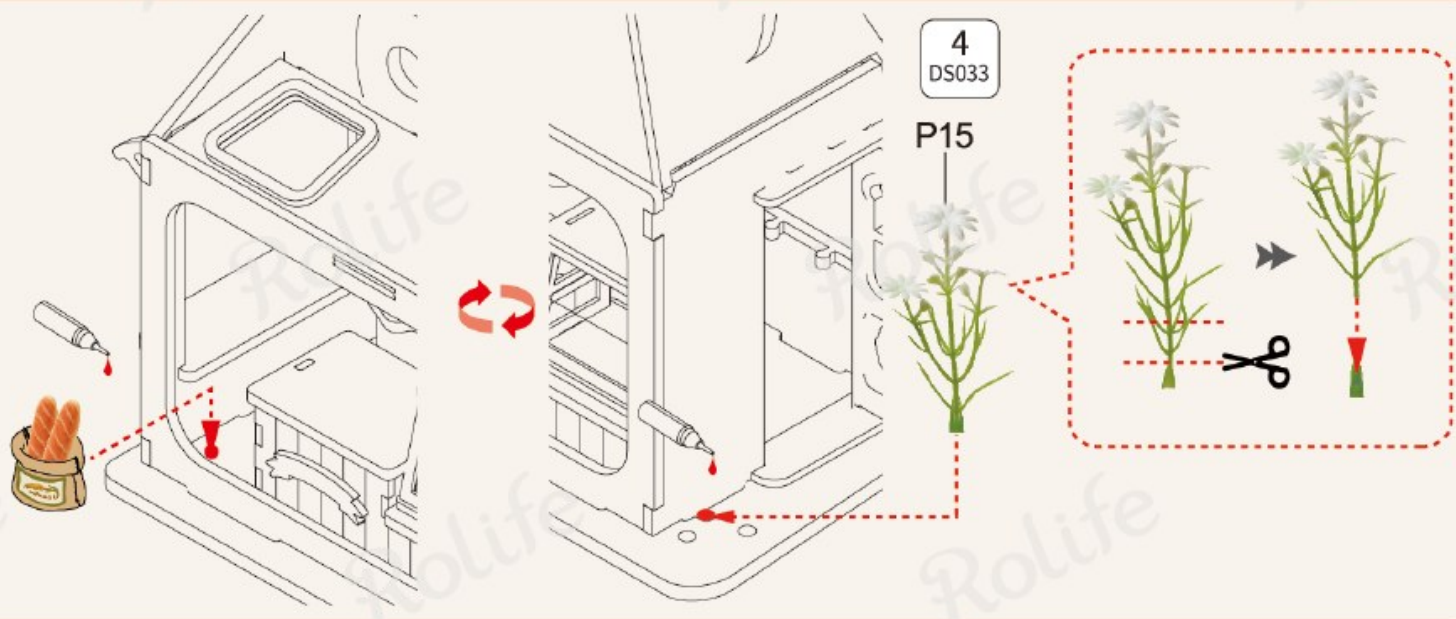

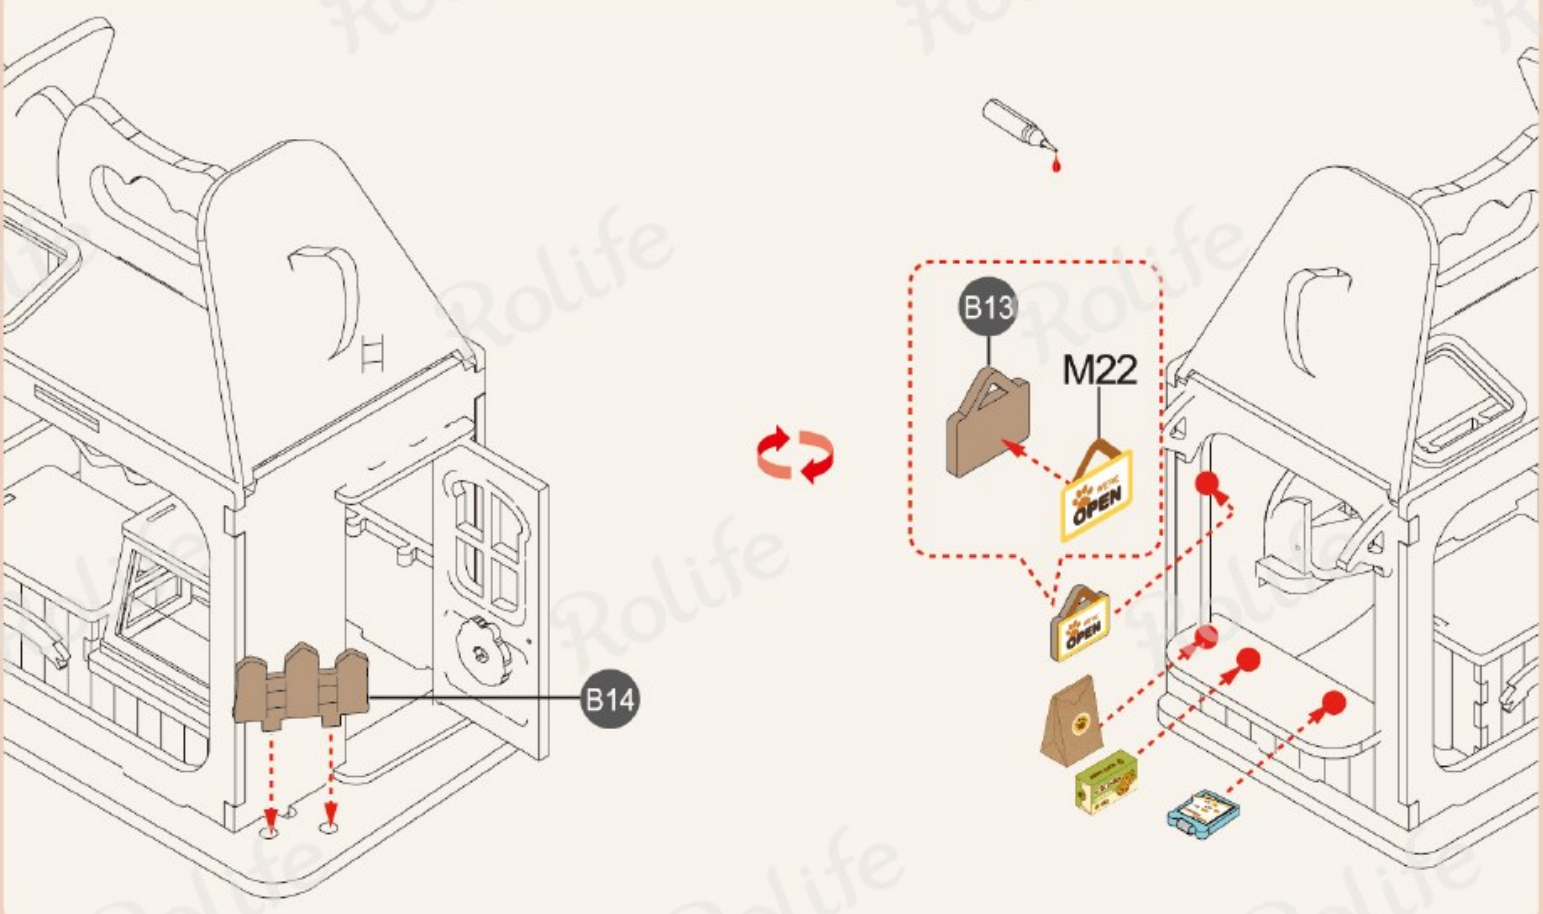

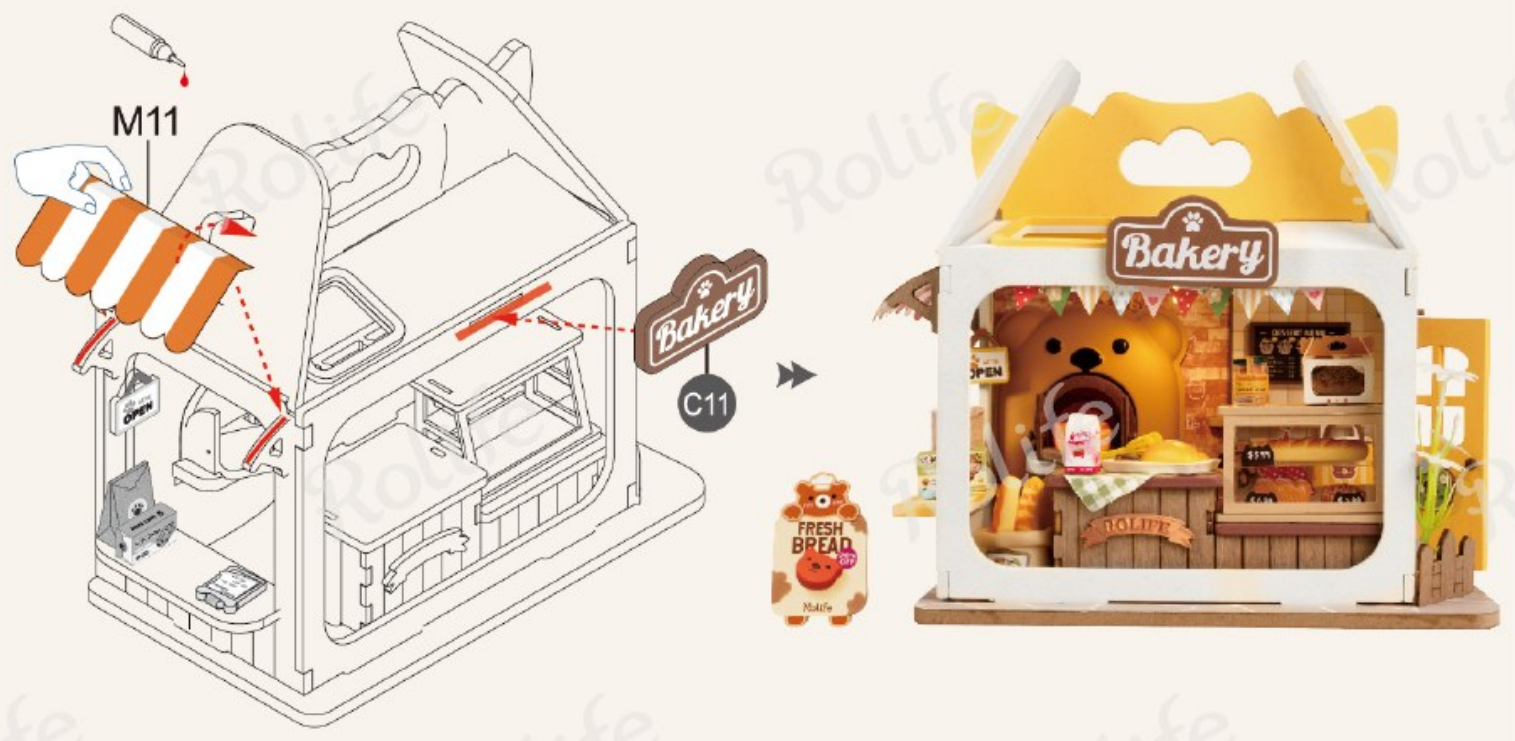
M11
C11
Bakery

MANUFACTURER:
Robotime C&C (Jiangsu) Co., Ltd.

AFTER-SALES SERVICE CONTACT:
service@robotime.com

Designed by ROBOTIME
www.robotime.com
MADE IN CHINA