Rolife

INSTRUCTION

Wisdom Stationery Shop

• TGB19

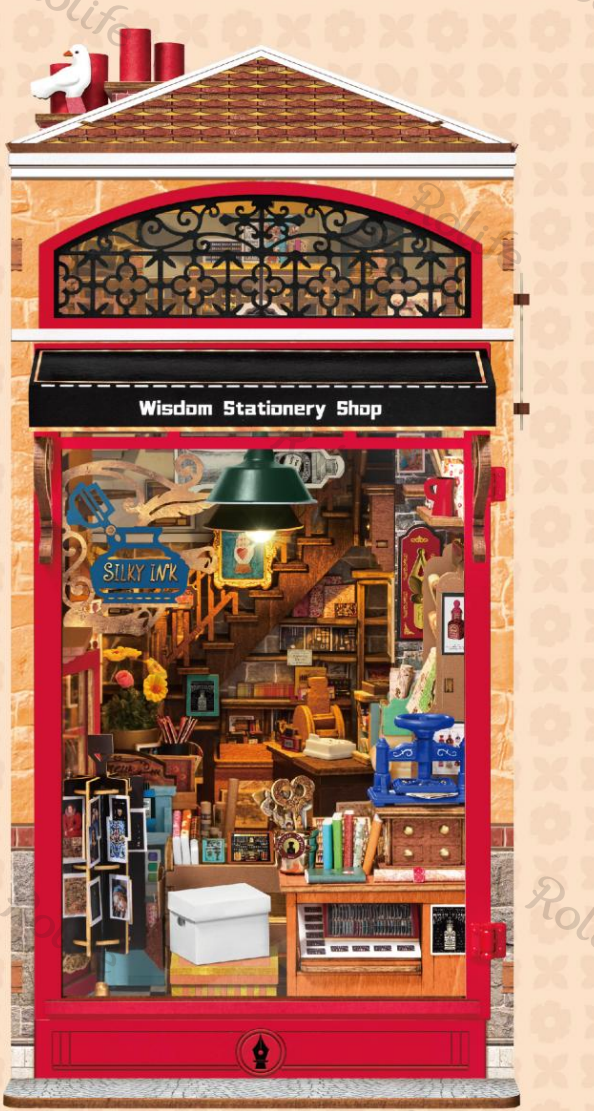
Wisdom Stationery Shop
SILKY INK

Scan the QR code or go to Community.robotime.com to discover DIY ideas, quick tips & WIN free kits

Pictures for reference only. Please subject to our existing products.

Assembly Tips

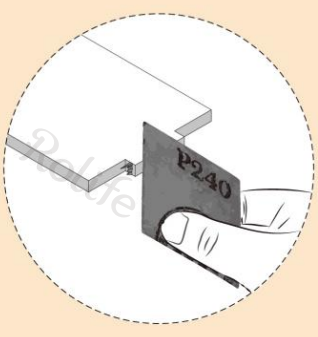

Polish the edges with sandpaper if there are burrs on pieces or it’ s hard to insert.

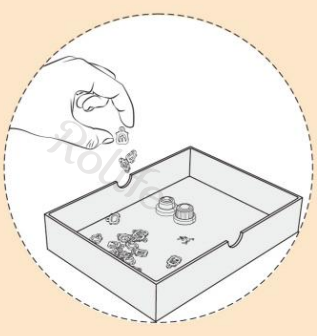

Put small parts into the box to prevent loss.

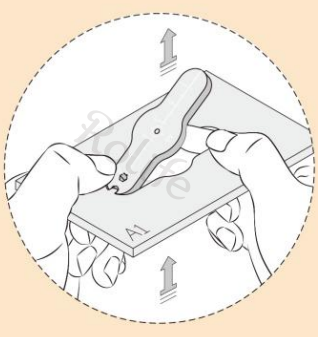

Remove the part by pressing its back to reduce burrs.

Function test

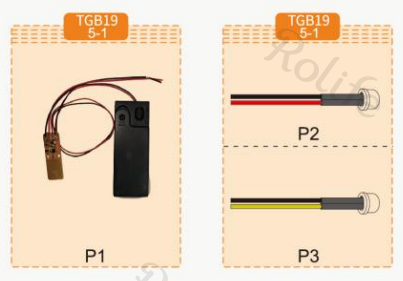
TGB19 5-1
P1
TGB19 5-1
P2
P3

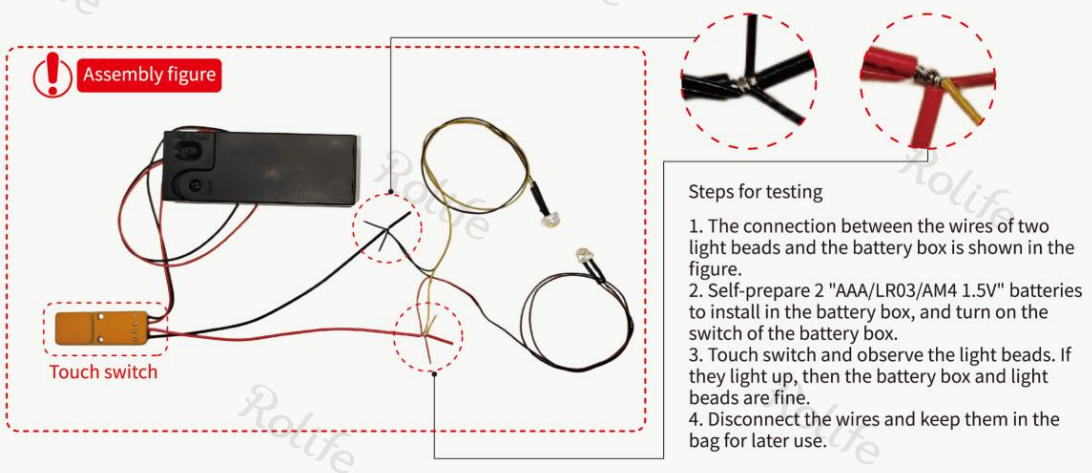
Assembly figure
Touch switch

Steps for testing

1. The connection between the wires of two light beads and the battery box is shown in the figure.
2. Self-prepare 2 "AAA/LR03/AM4 1.5V" batteries to install in the battery box, and turn on the switch of the battery box.
3. Touch switch and observe the light beads. If they light up, then the battery box and light beads are fine.
4. Disconnect the wires and keep them in the bag for later use.

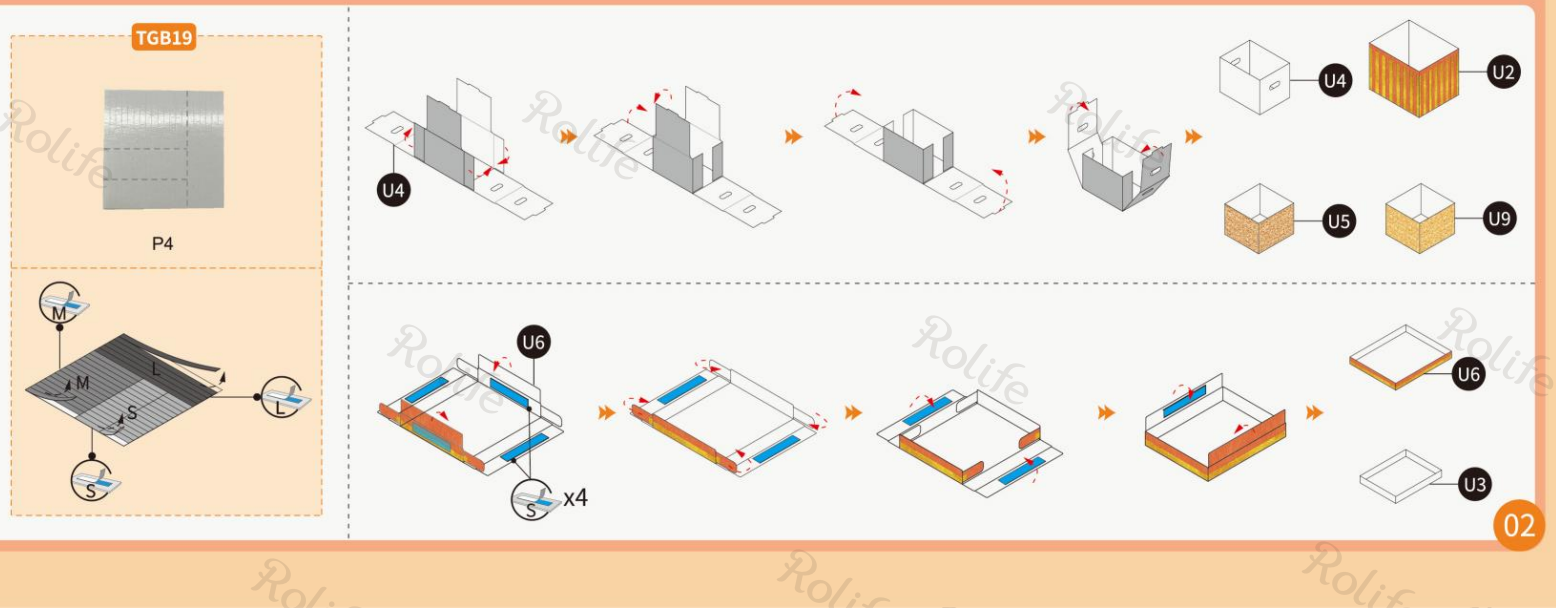
TGB19
P4
M
M
S
S
U4
U4
U2
U5
U9
U6
x4
U6
U3

1

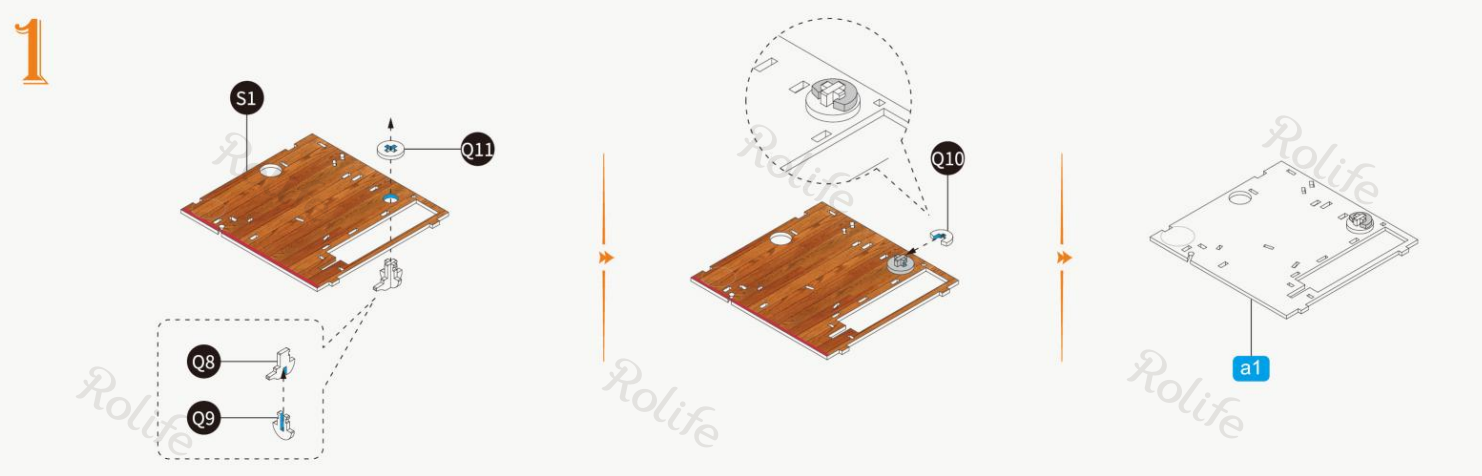
S1
Q11
Q8
Q9
Q10
a1

2

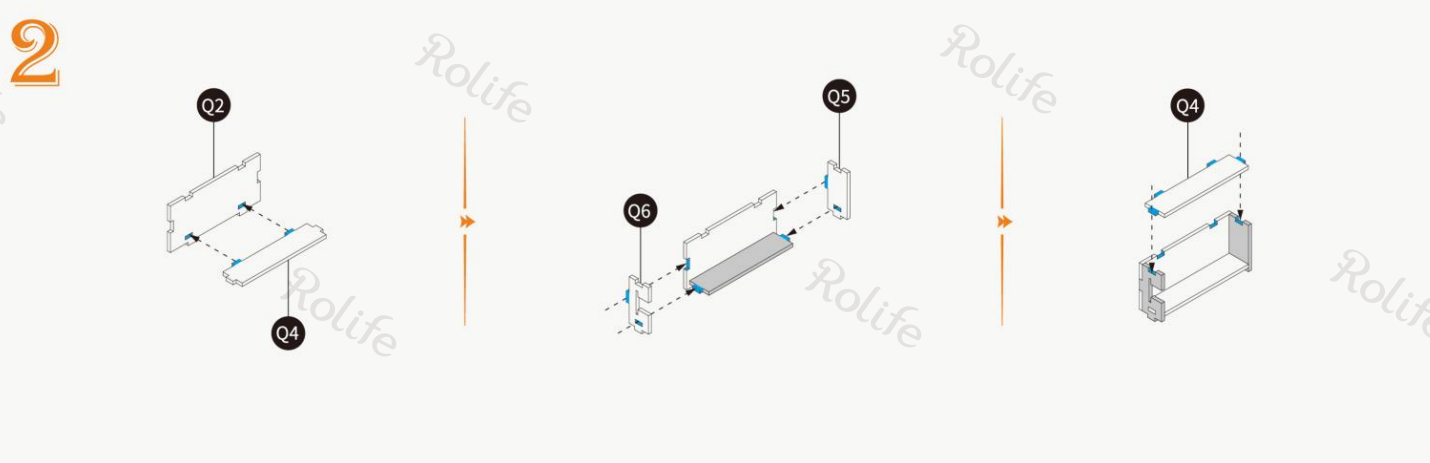
Q2
Q4
Q6
Q5
Q4

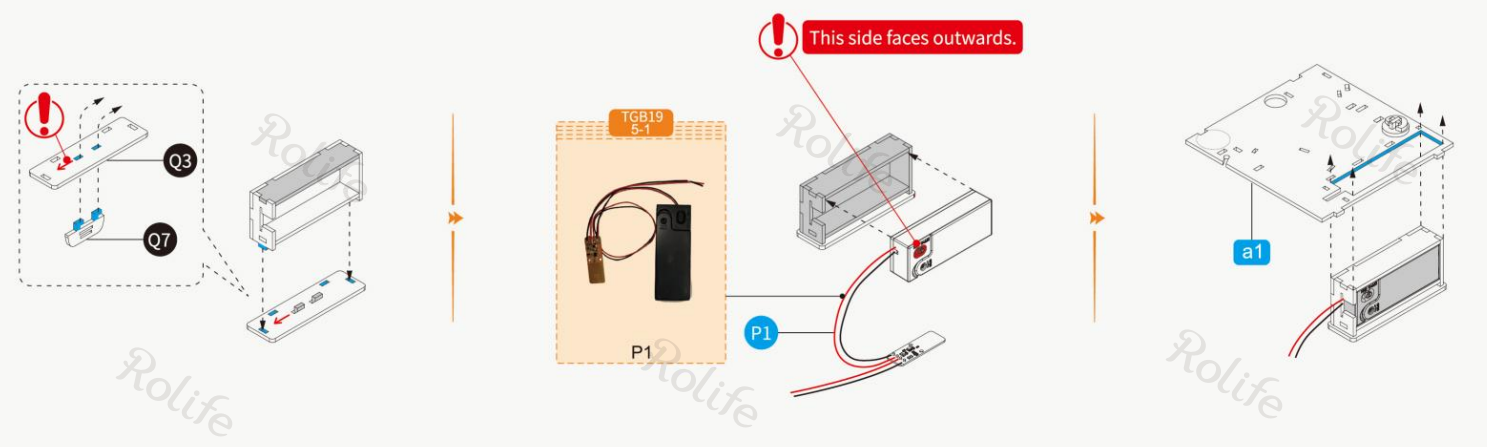
Q3
Q7
TGB19 5-1
P1
This side faces outwards.
P1
a1

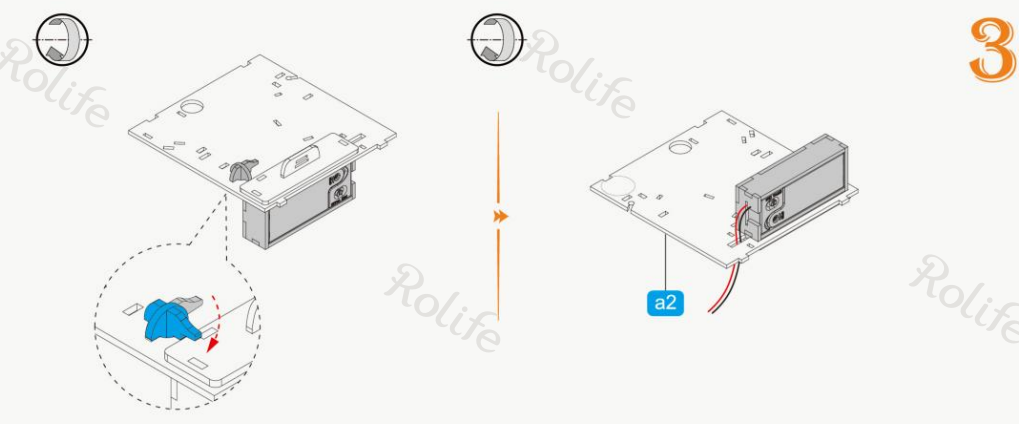

3

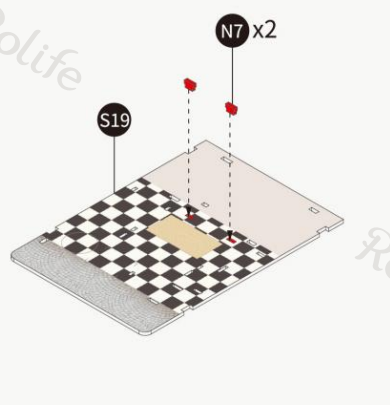

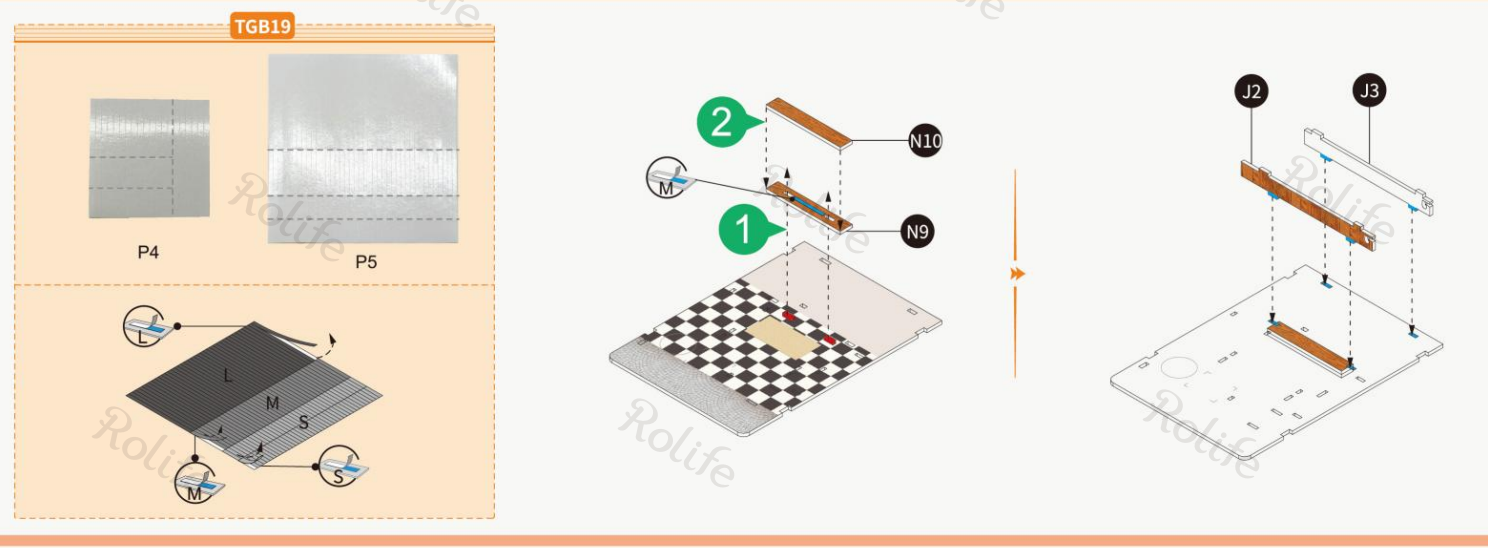
TGB19
P4
P5
L
L
M
S
M
S
2
N10
M
1
N9
J2
J3

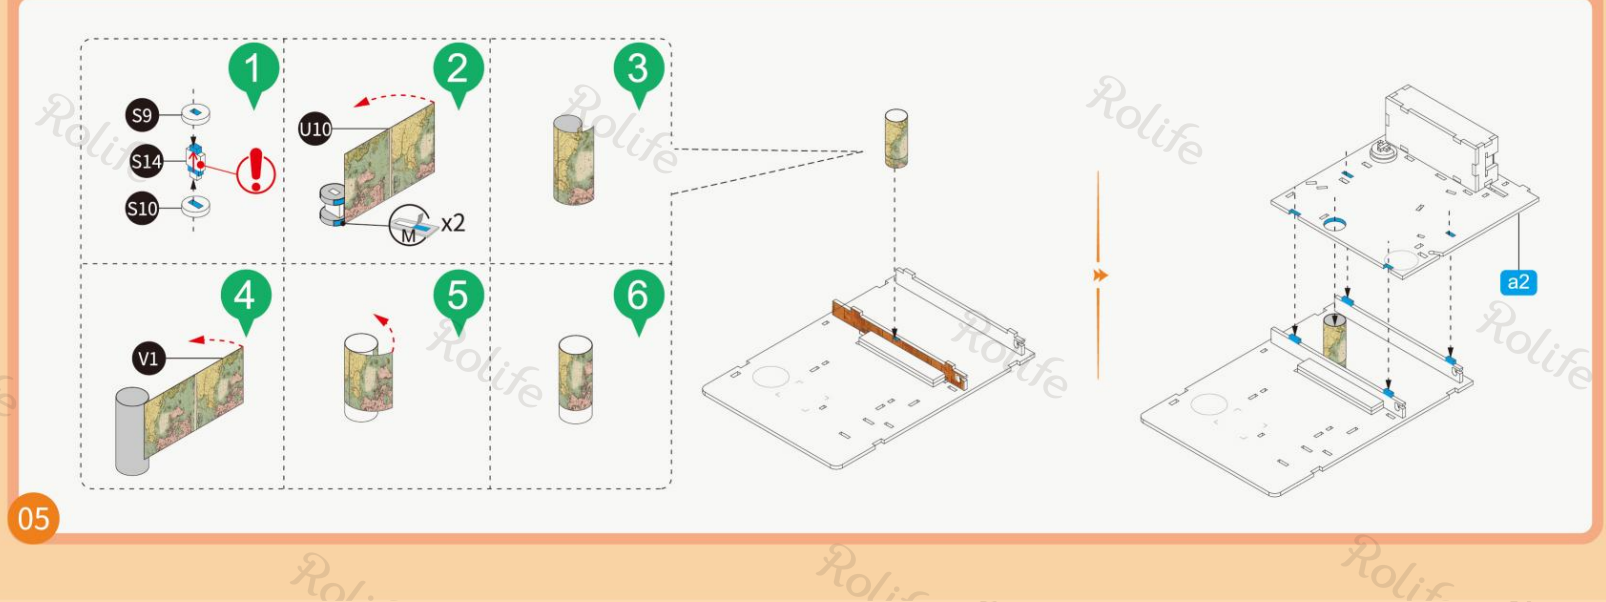
1
2
3
S9
S14
S10
U10
M x2
4
5
6
V1
a2

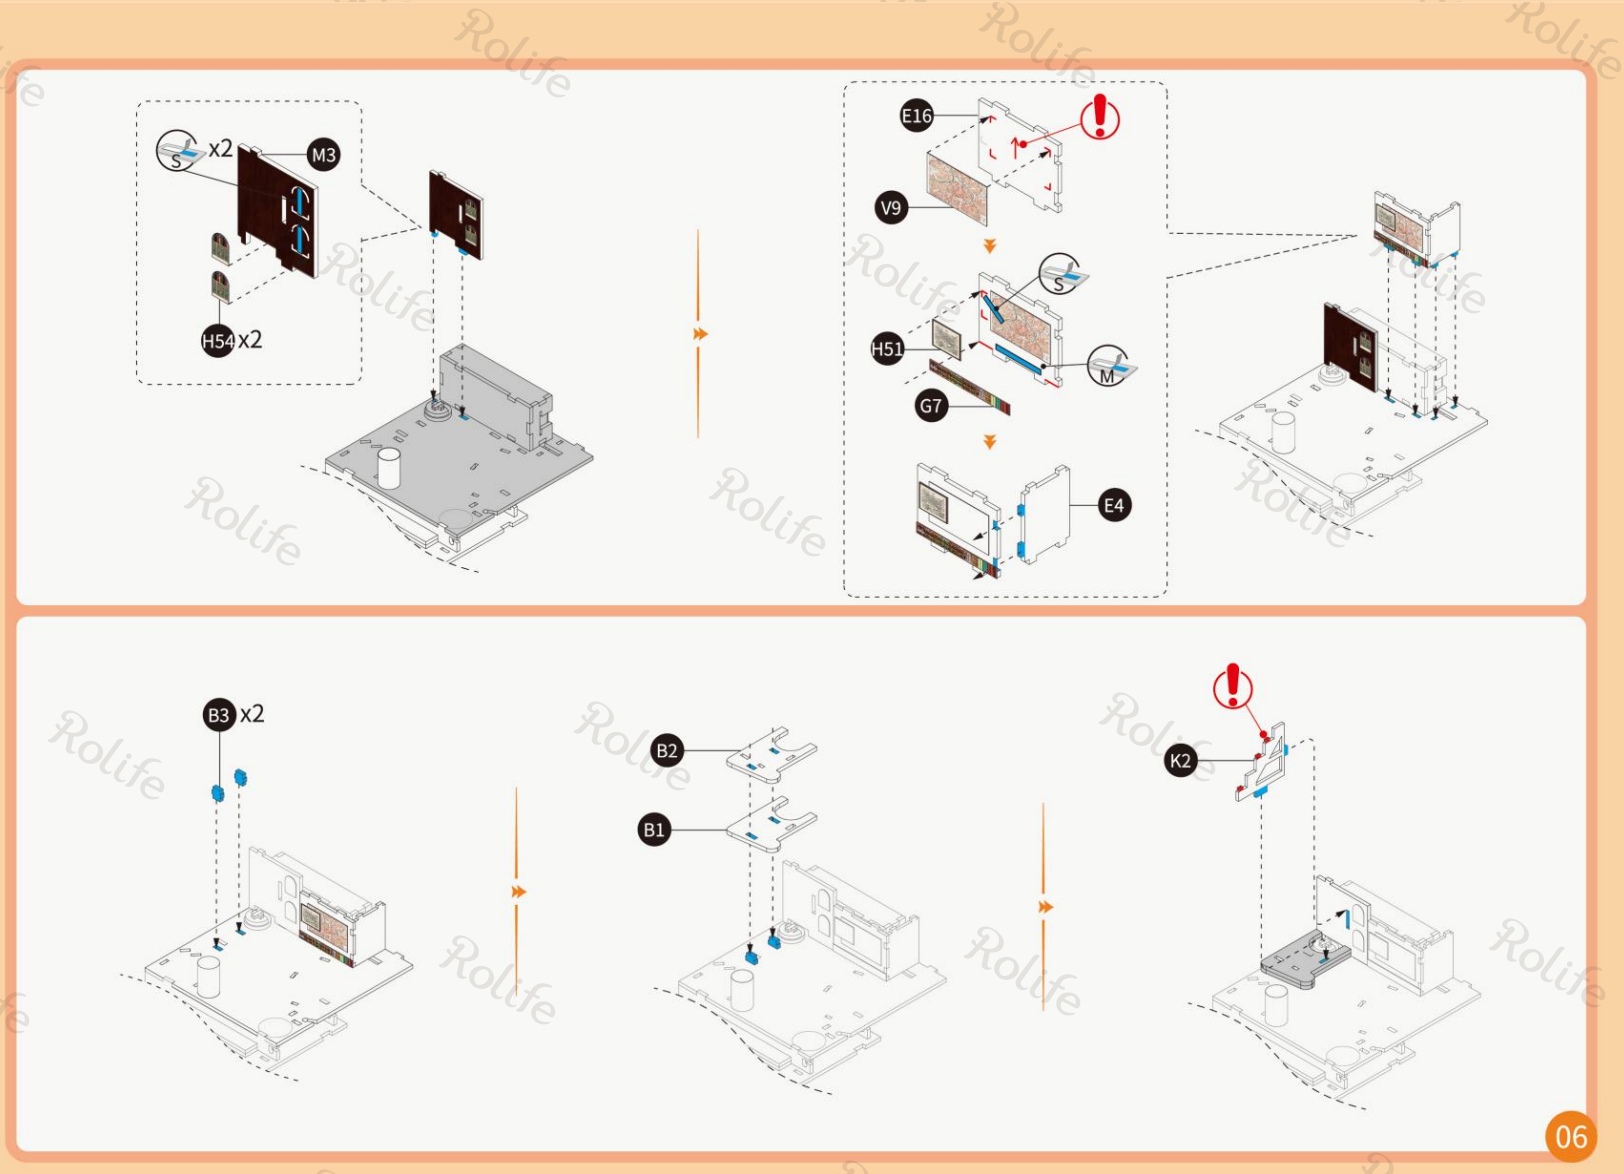
x2
M3
H54 x2
E16
V9
S
H51
G7
M
E4
B3 x2
B2
B1
K2

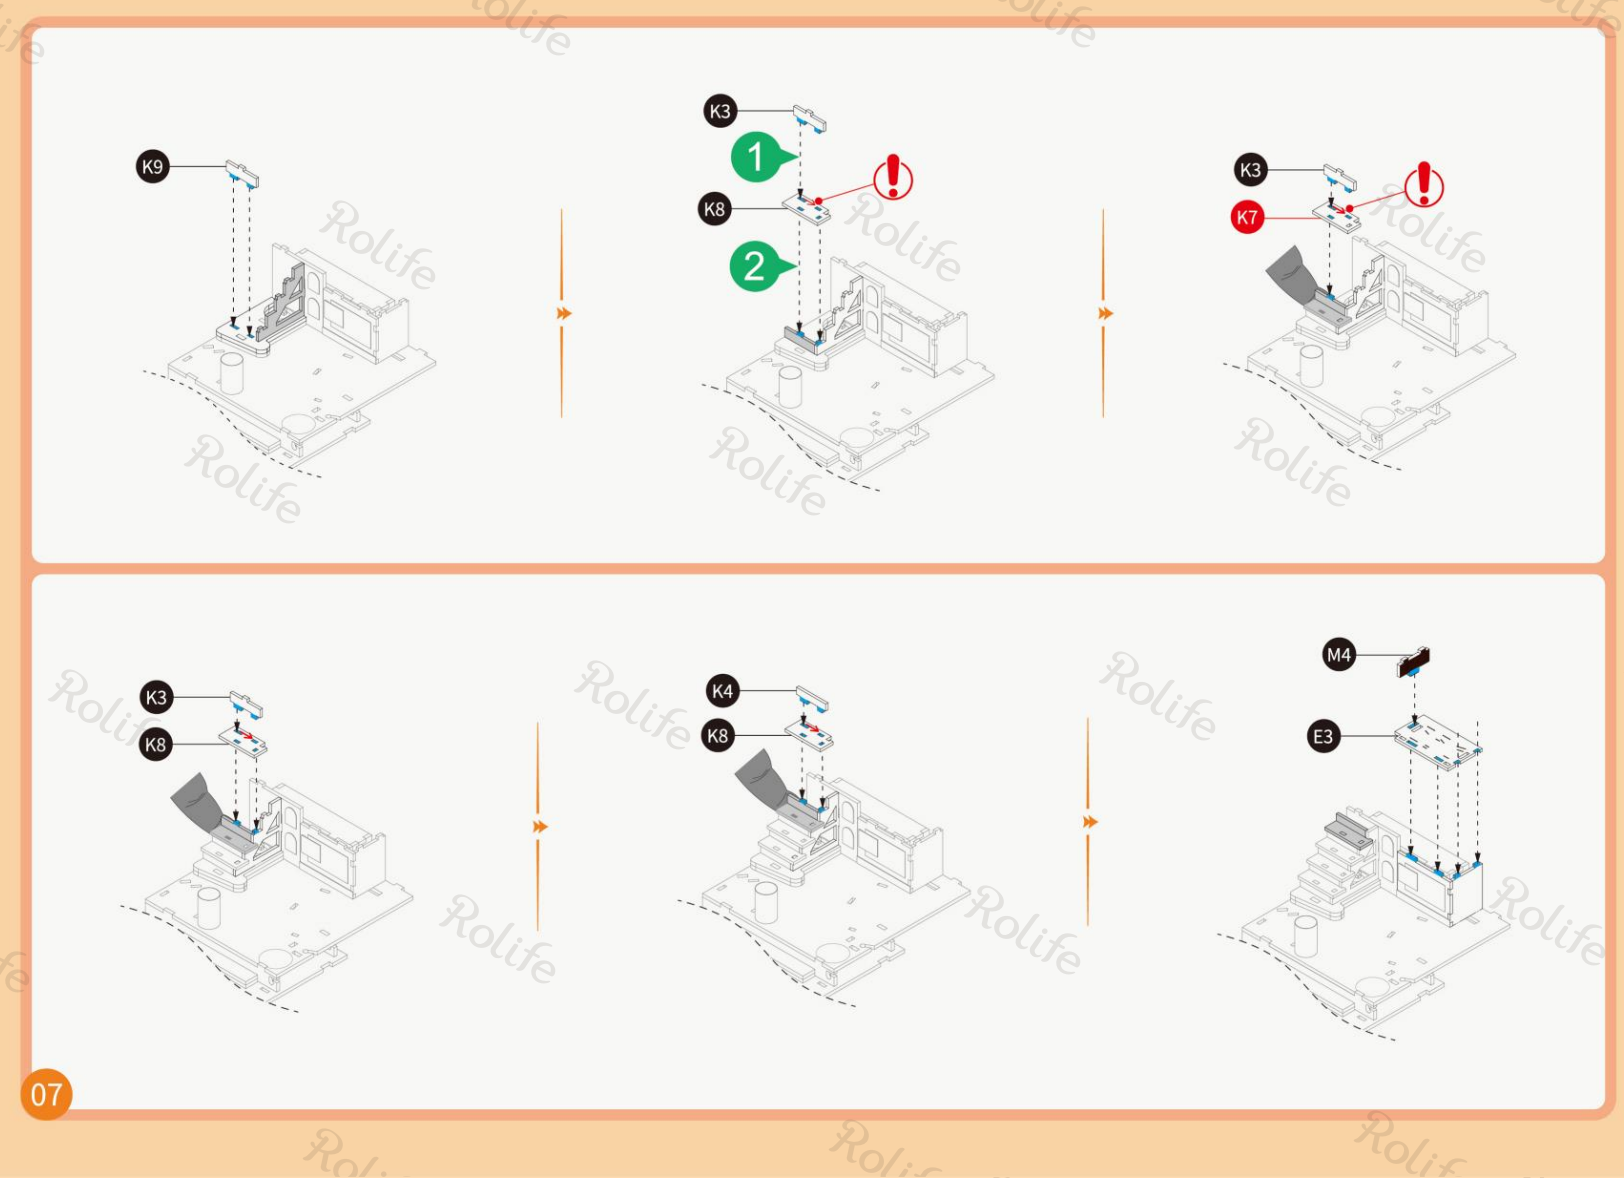
K9
K3
1
K8
2
K3
K7
K3
K8
K4
K8
M4
E3

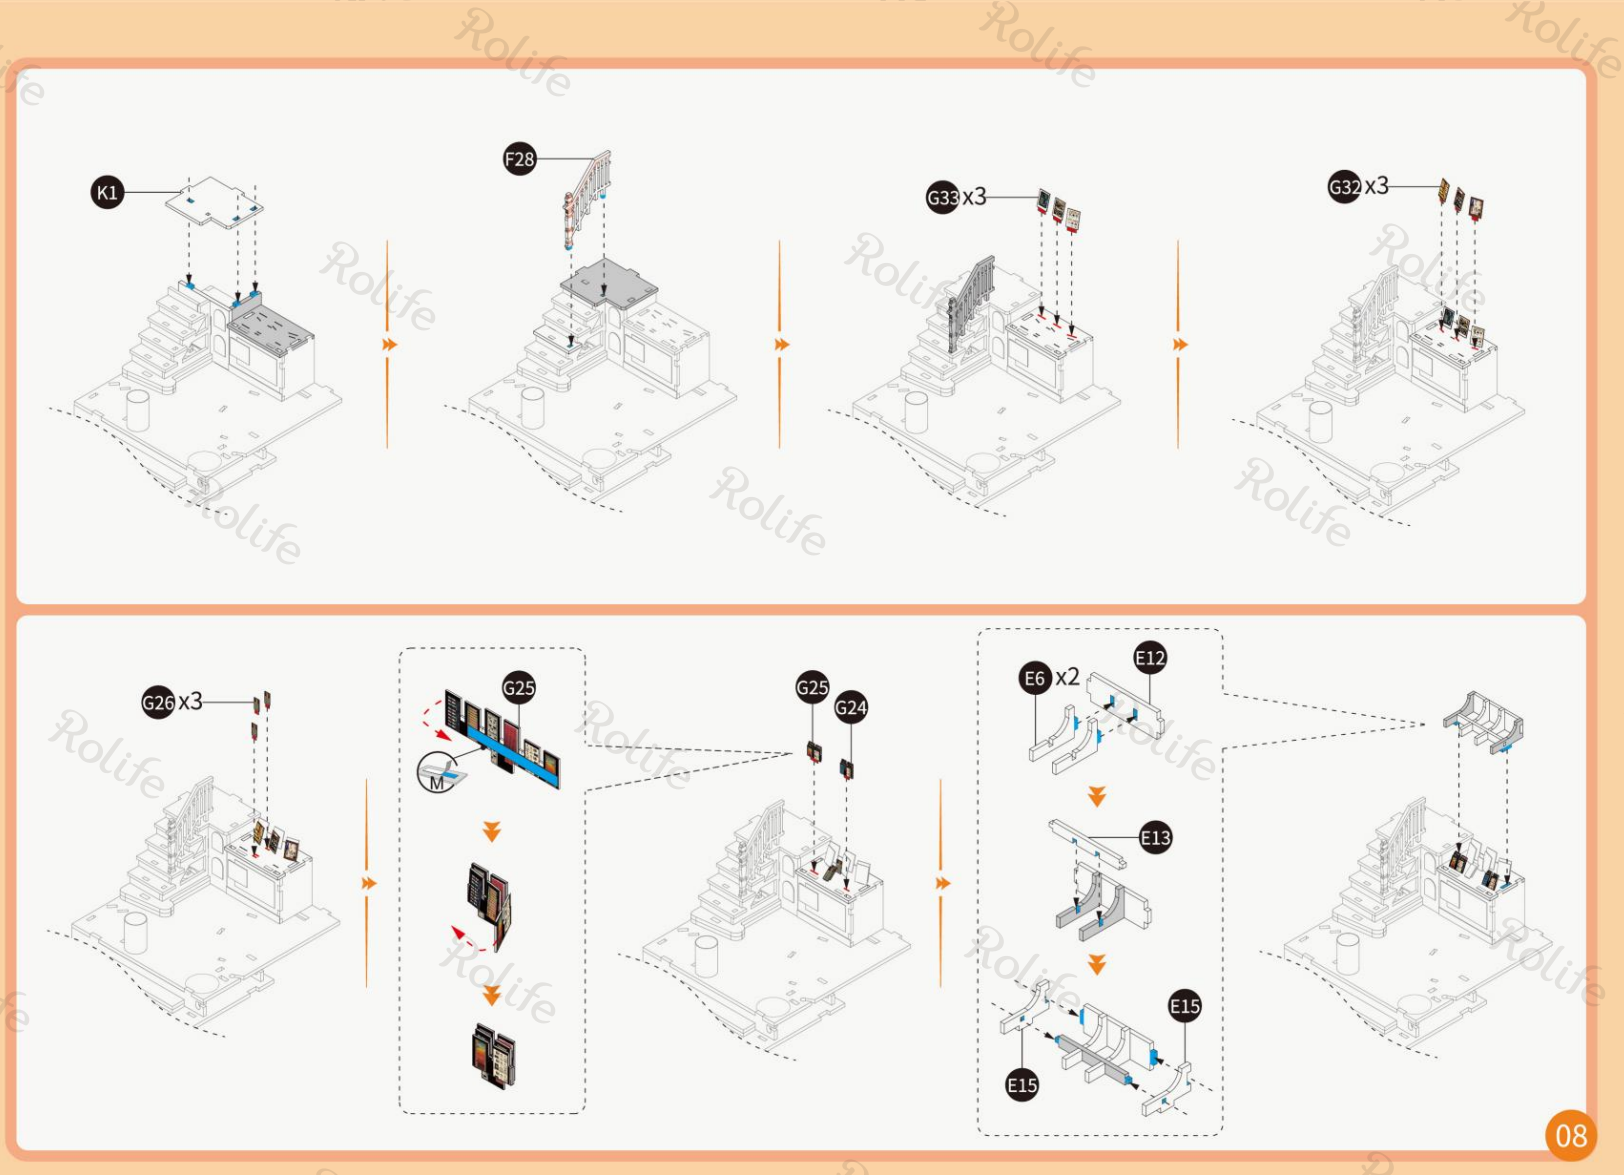
K1
F28
G33 x3
G32 x3
G26 x3
G25
M
G25
G24
E6 x2
E12
E13
E15
E15

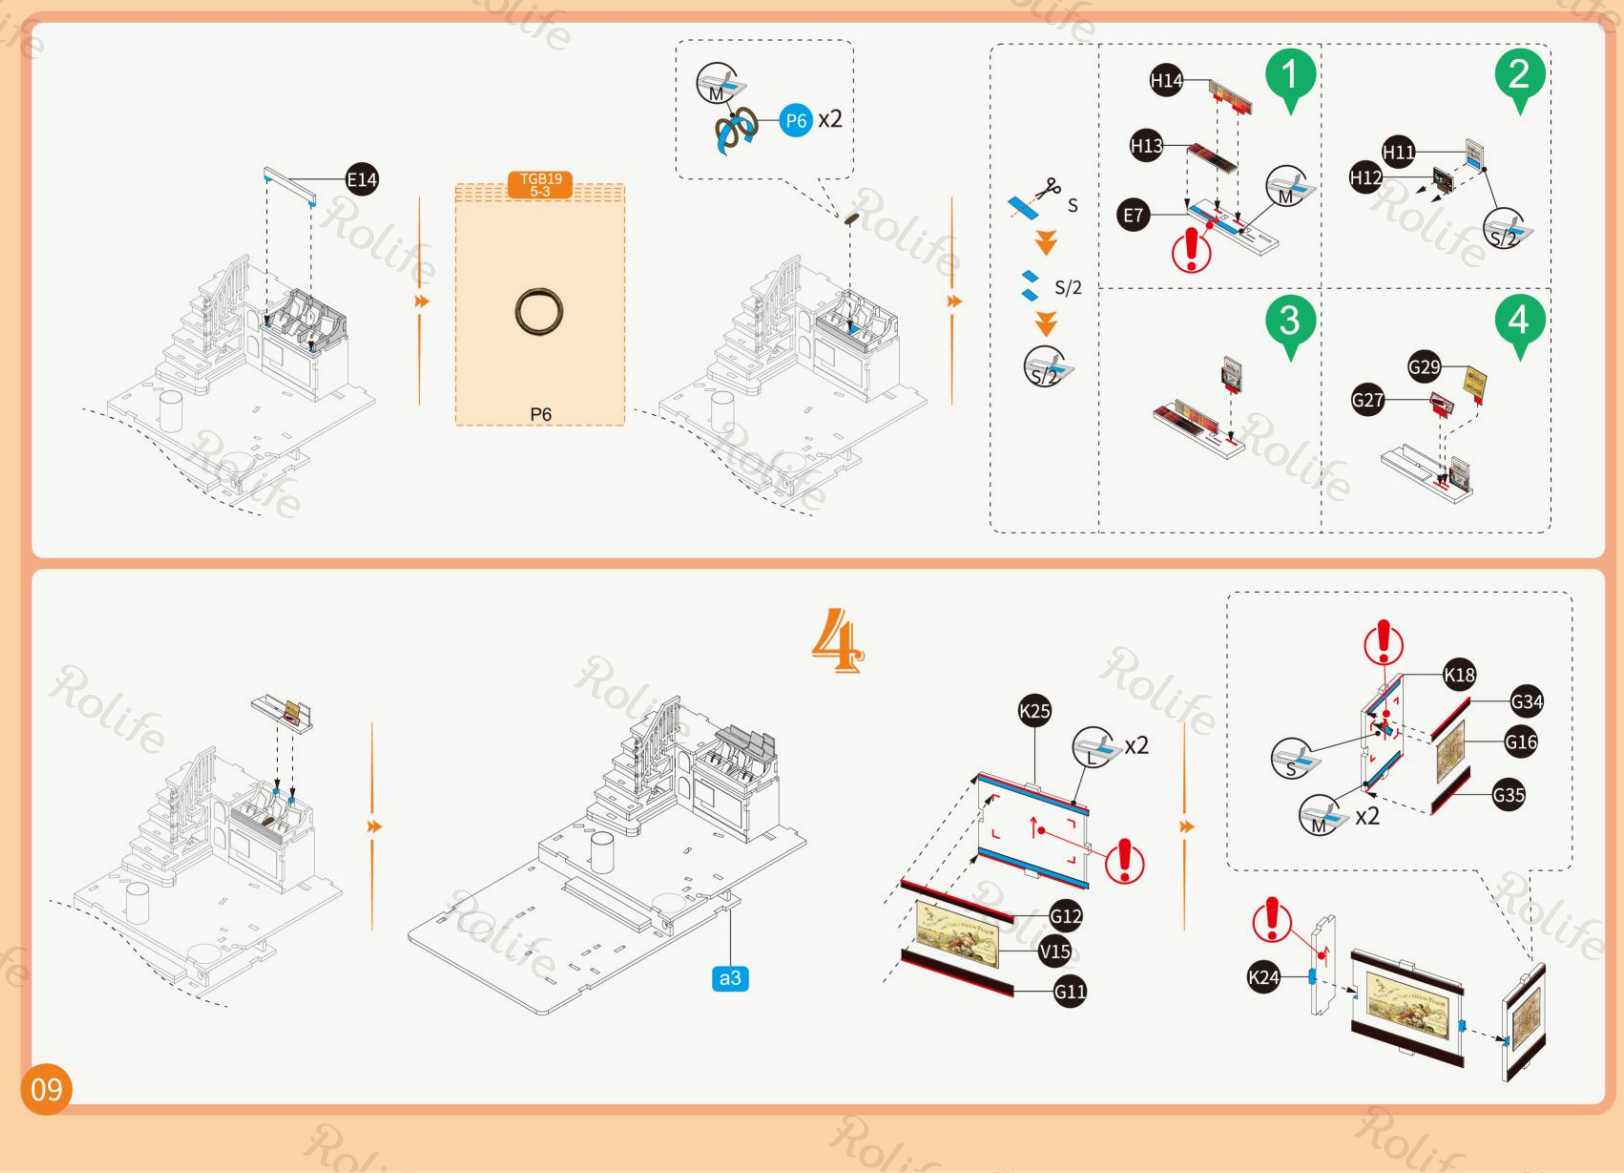
E14
P6
M
P6 x2
S
S/2
S/2
H14
1
H13
E7
M
H11
H12
S
2
3
4
G29
G27
4
K25
x2
G12
V15
G11
K18
G34
G16
G35
S
M x2
K24
a3

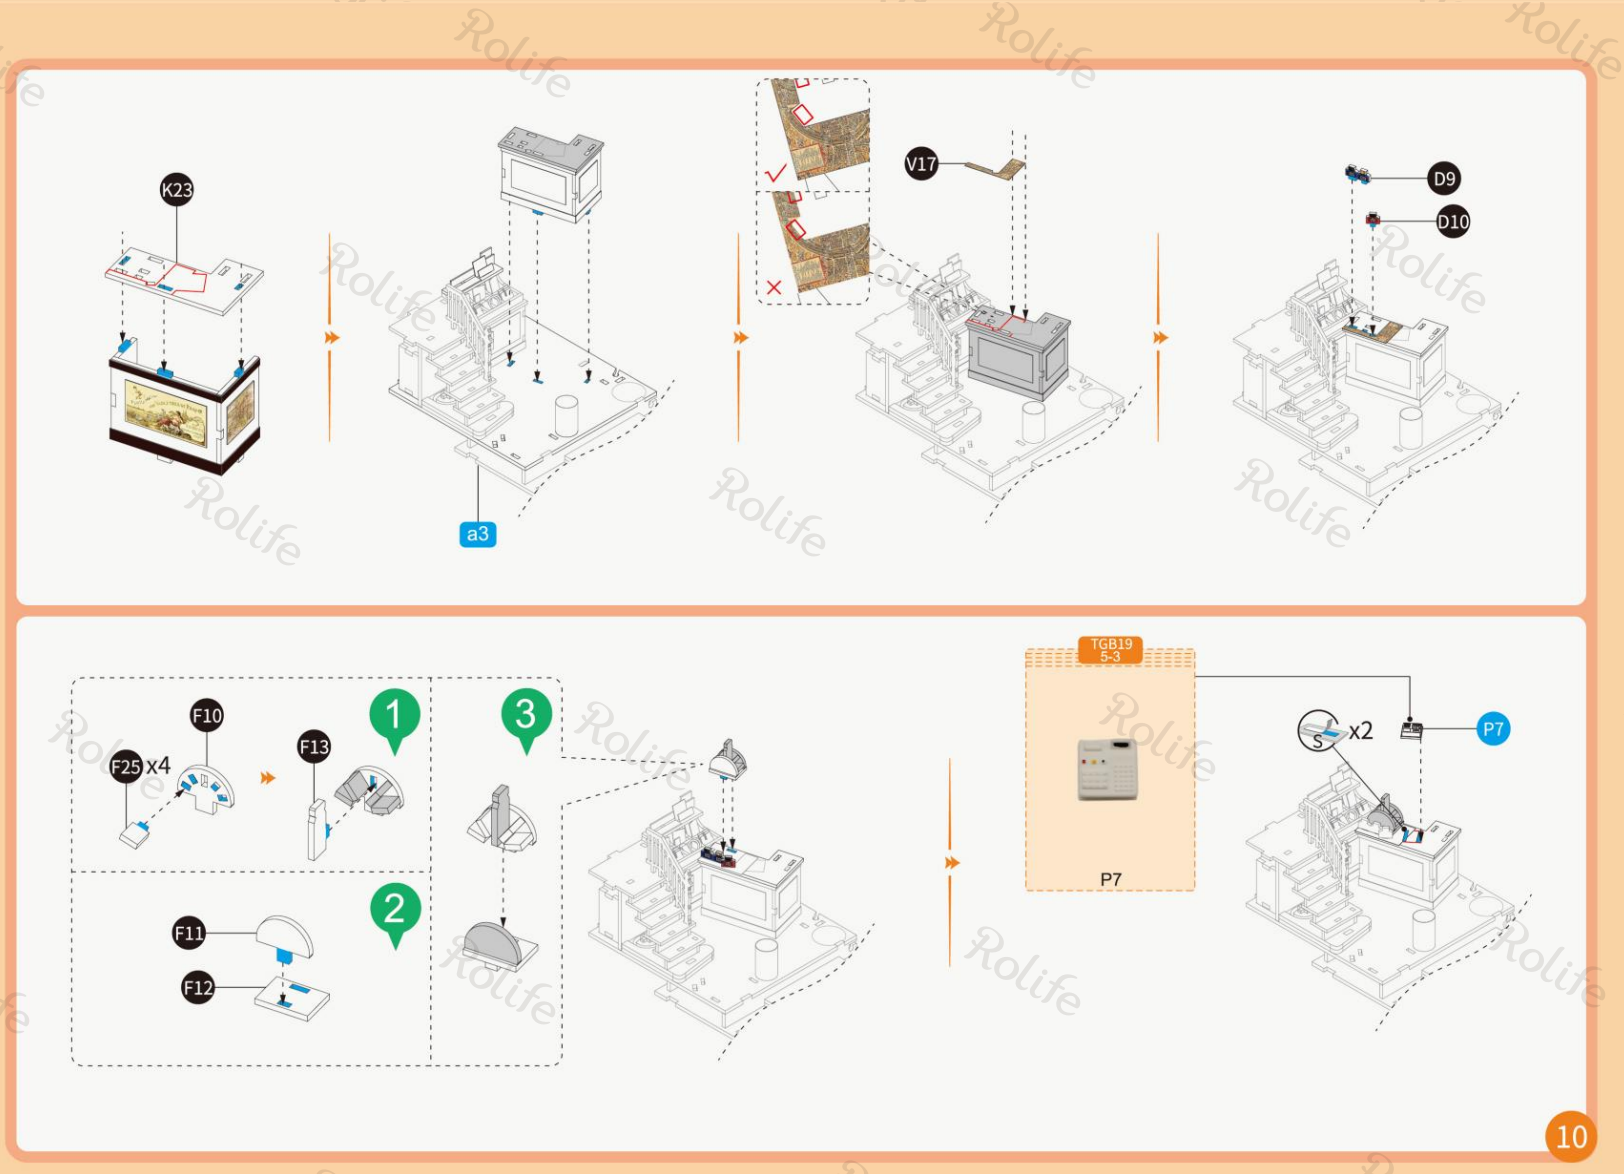
K23
a3
V17
D9
D10
F25 x4
F10
F13
1
3
F11
F12
2
P7
x2
P7

5

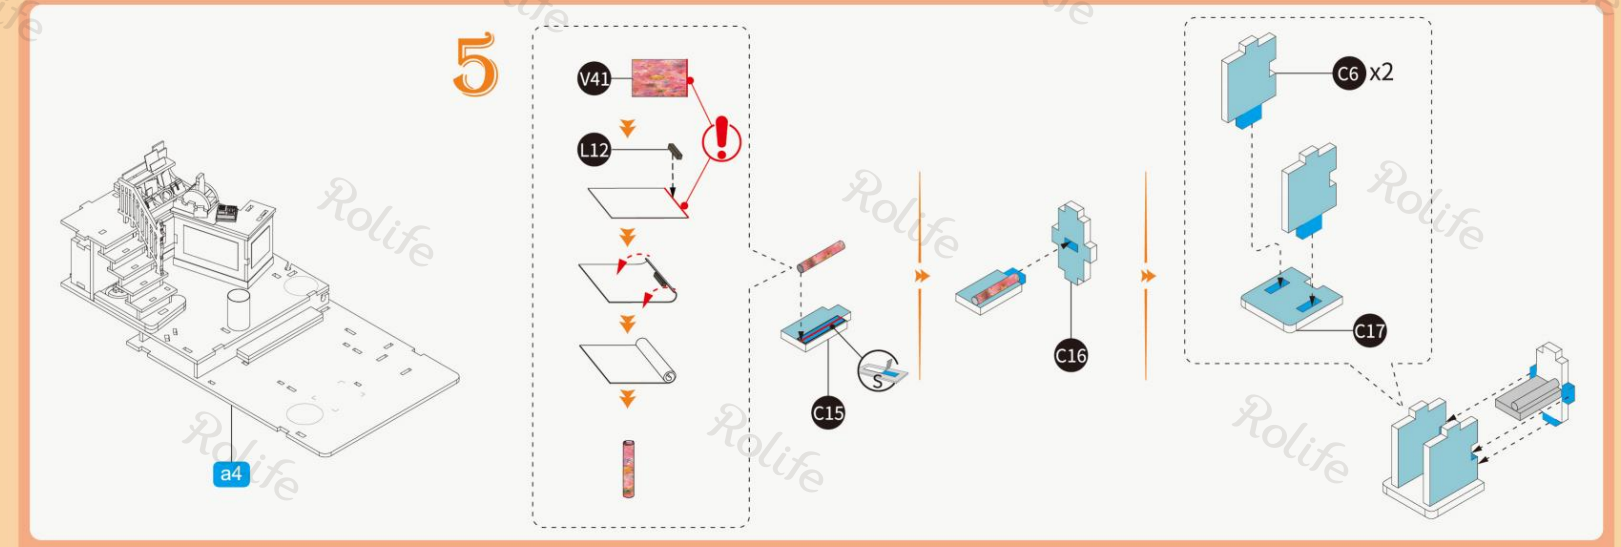
V41
L12
C15
S
C16
C6 x2
C17
a4

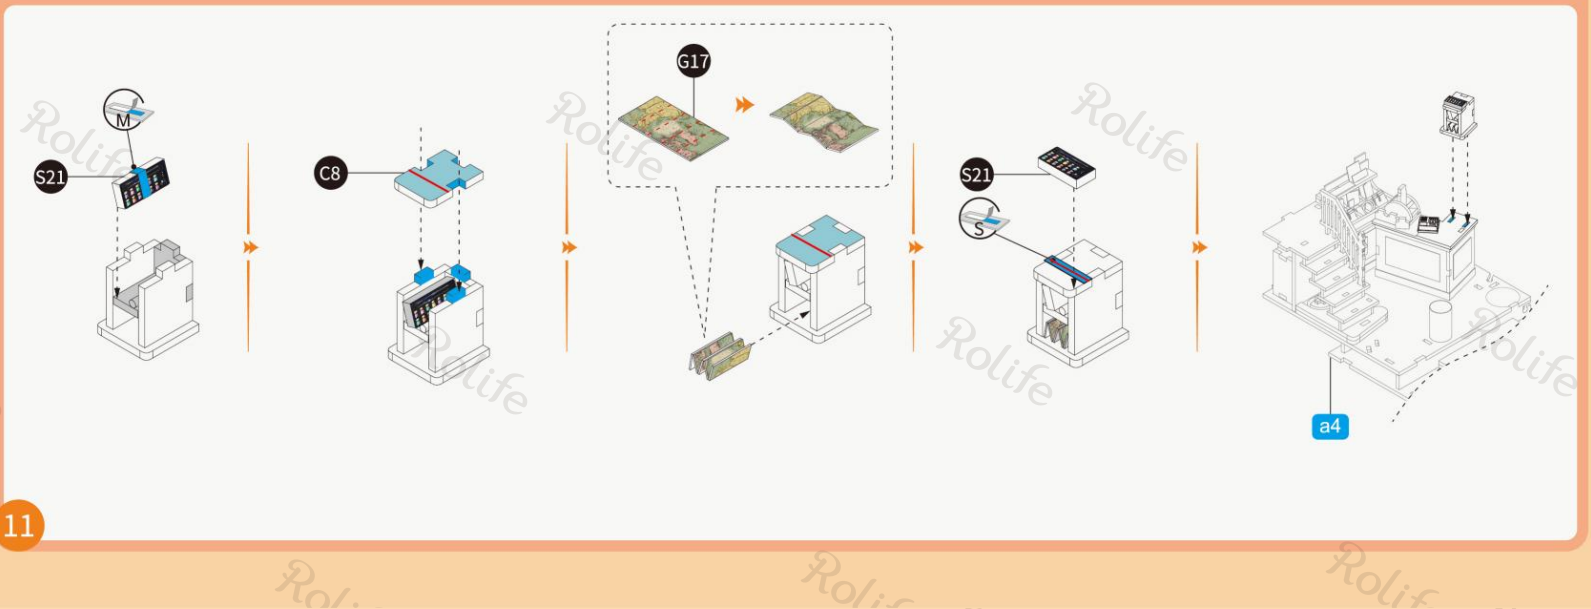
M
S21
C8
G17
S21
S
a4

6

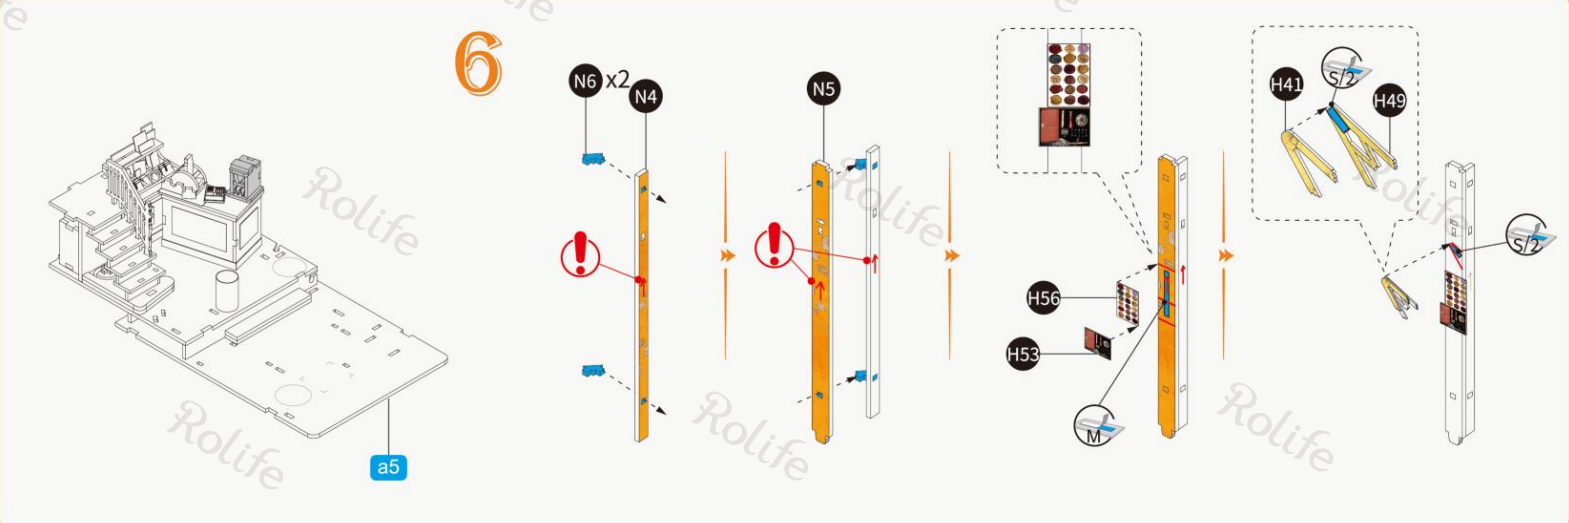
a5
N6 x2
N4
N5
H56
H53
M
H41
H49
S/2
S/2

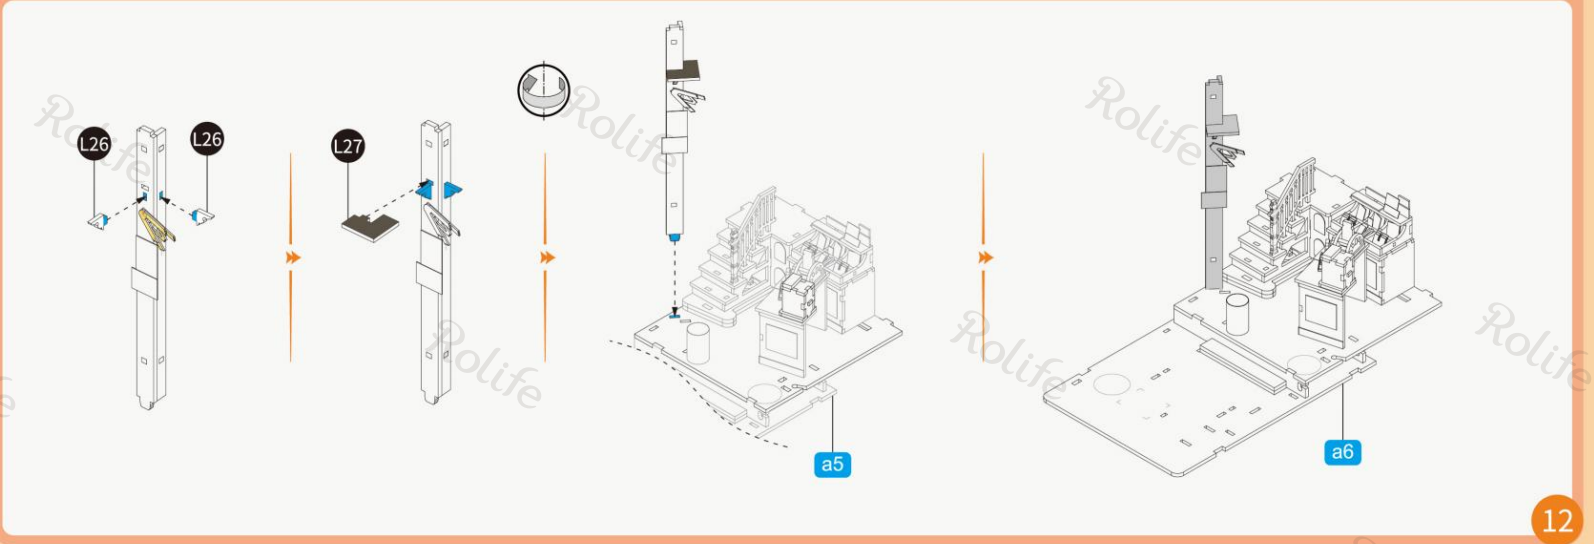
L26
L26
L27
a5
a6

7

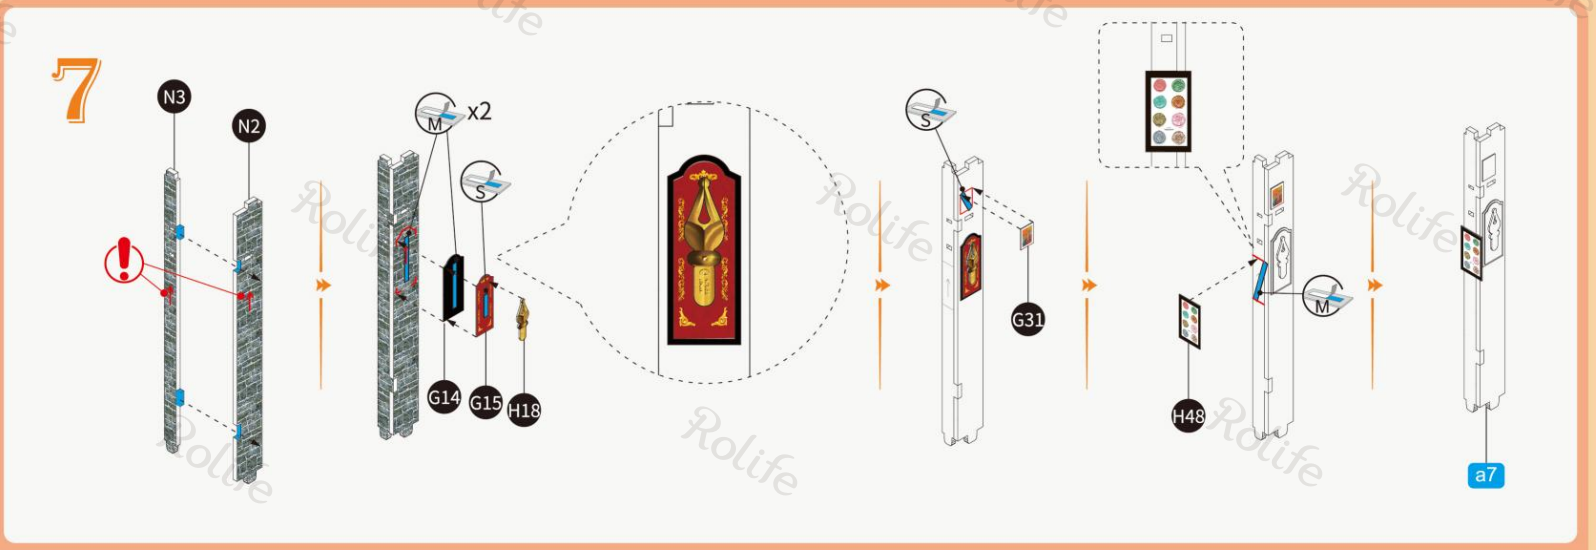
N3
N2
M x2
S
G14
G15
H18
S
G31
H48
M
a7

8

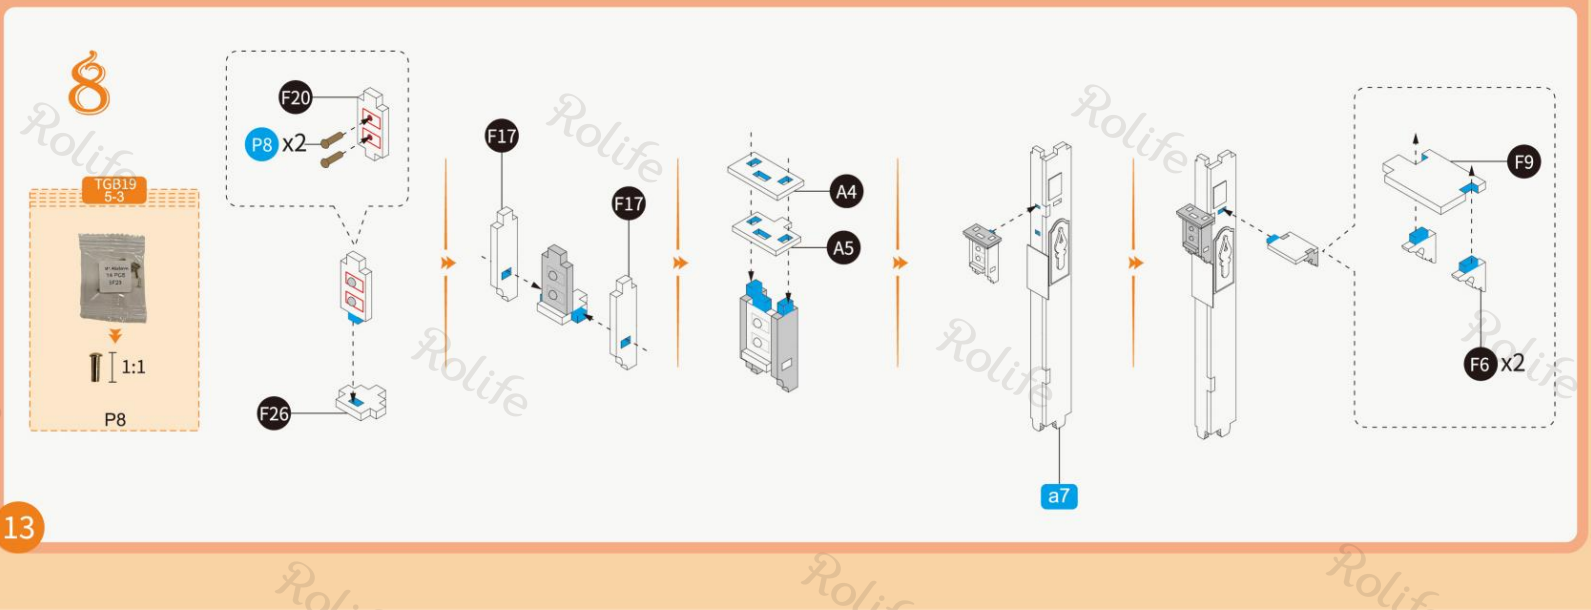
TGB19
5-3
1:1
P8
F20
P8 x2
F26
F17
F17
A4
A5
a7
F9
F6 x2

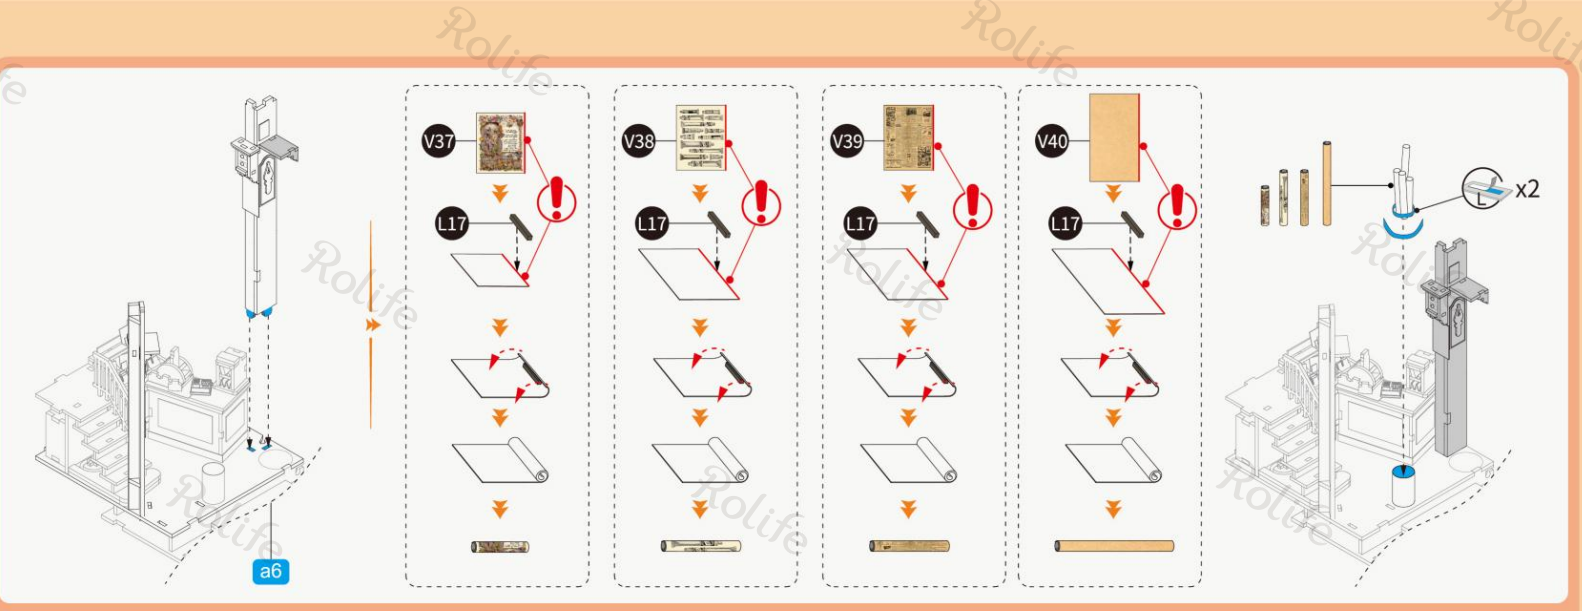
V37
L17
V38
L17
V39
L17
V40
L17
x2
a6

9

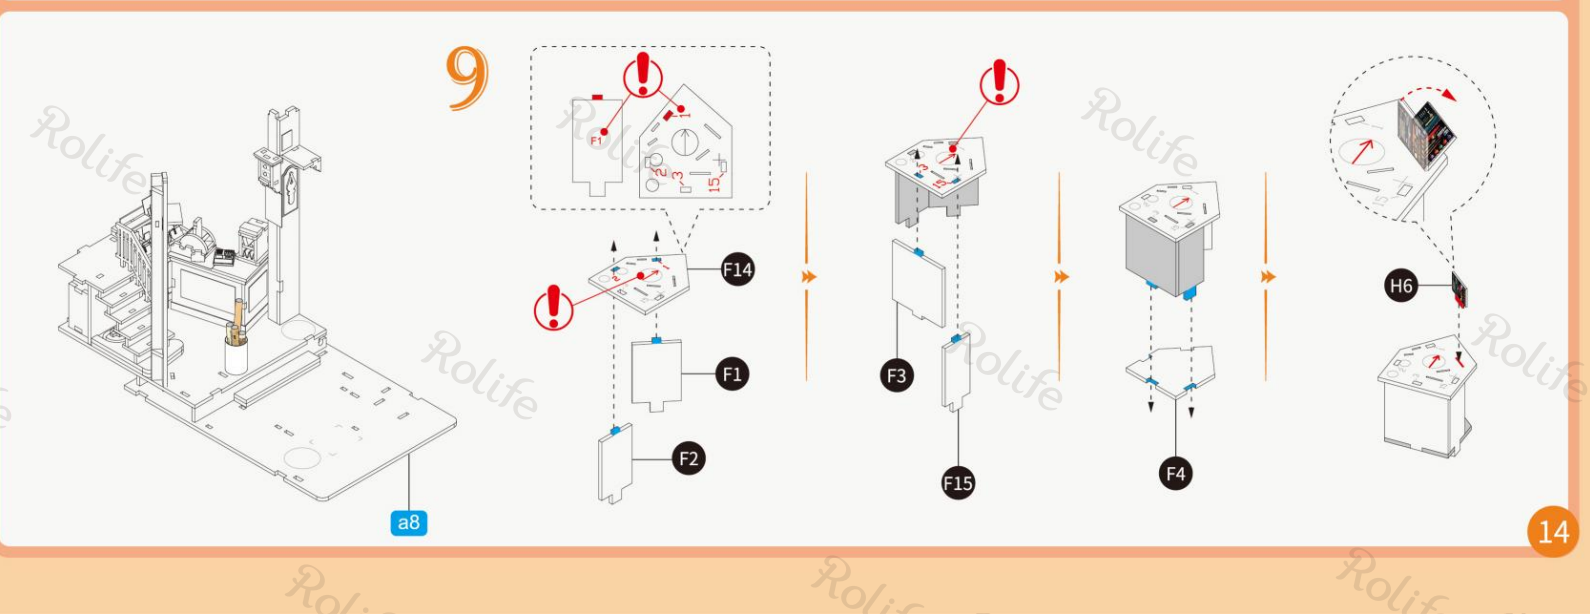
F14
F1
F2
F3
F15
F4
H6
a8

10

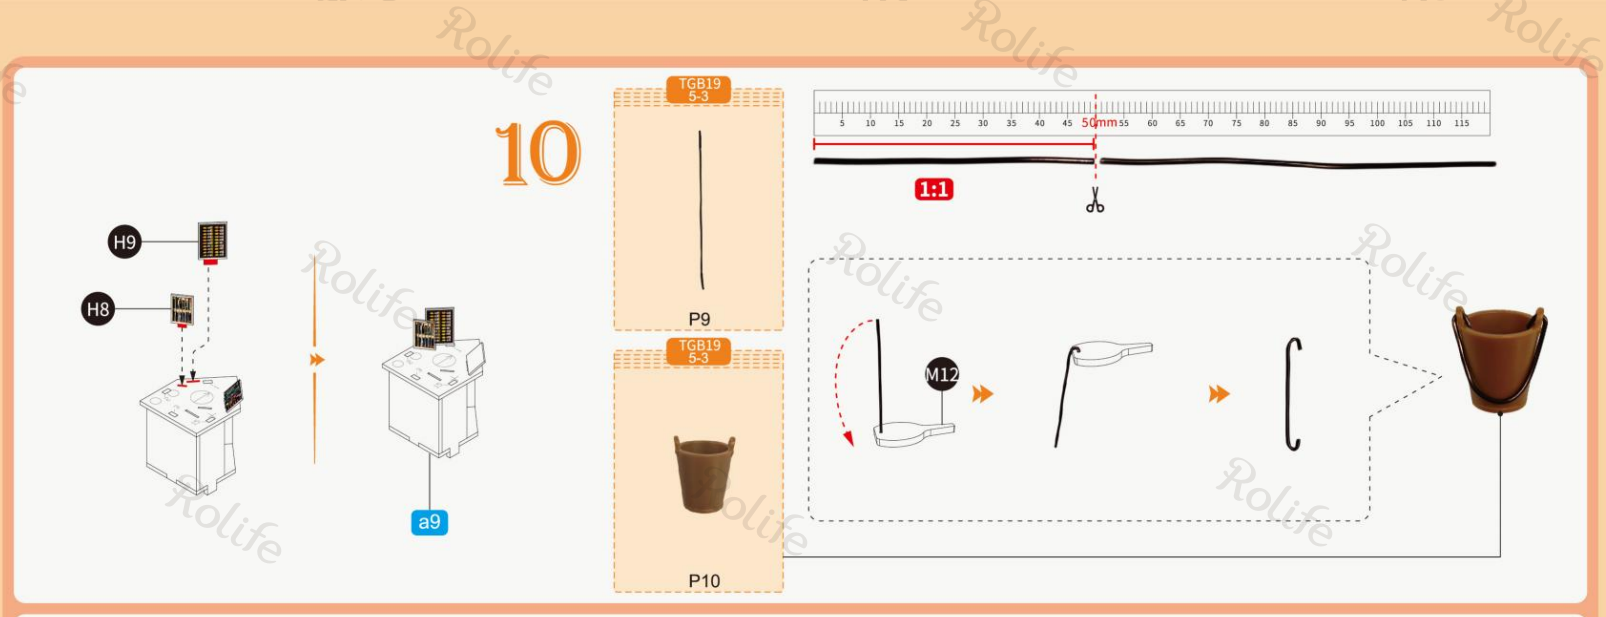
H9
H8
a9
TGB19
P9
P10
1:1
M12

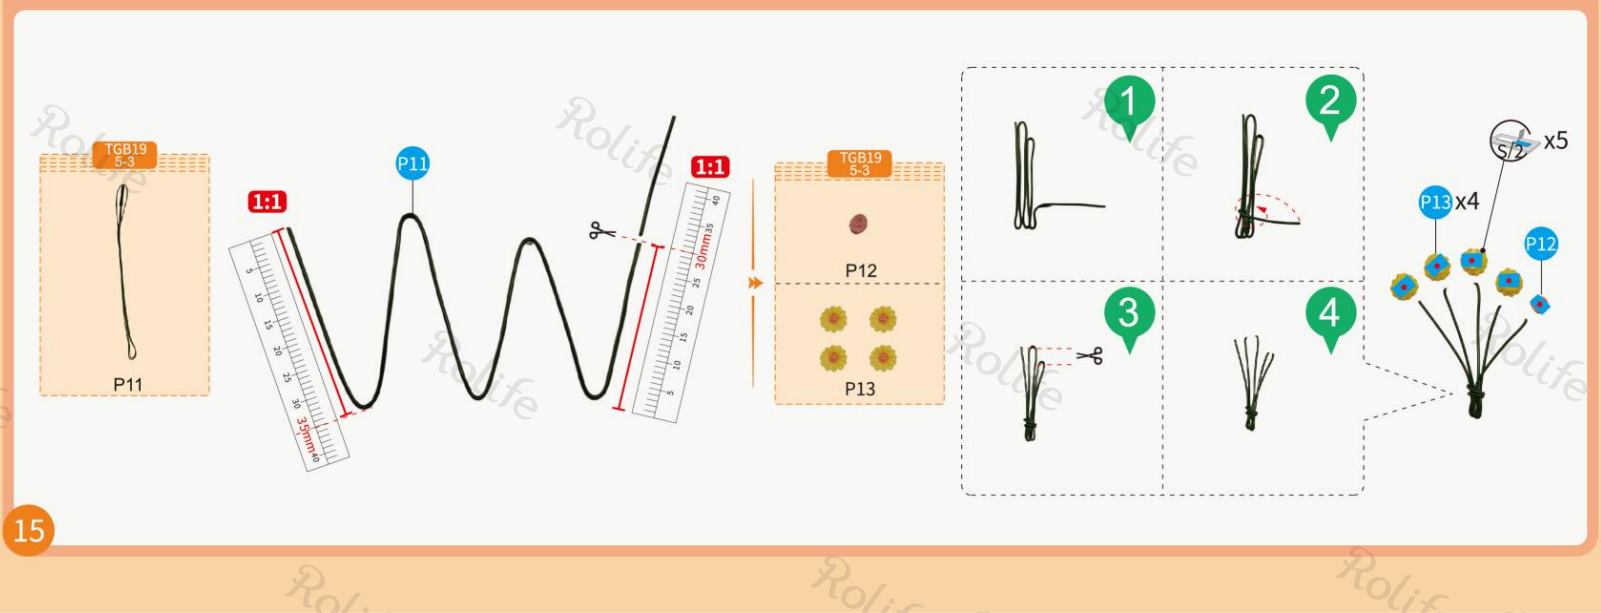
TGB19
P11
1:1
P11
1:1
TGB19
P12
P13
1
2
3
4
x5
P13
x4
P12

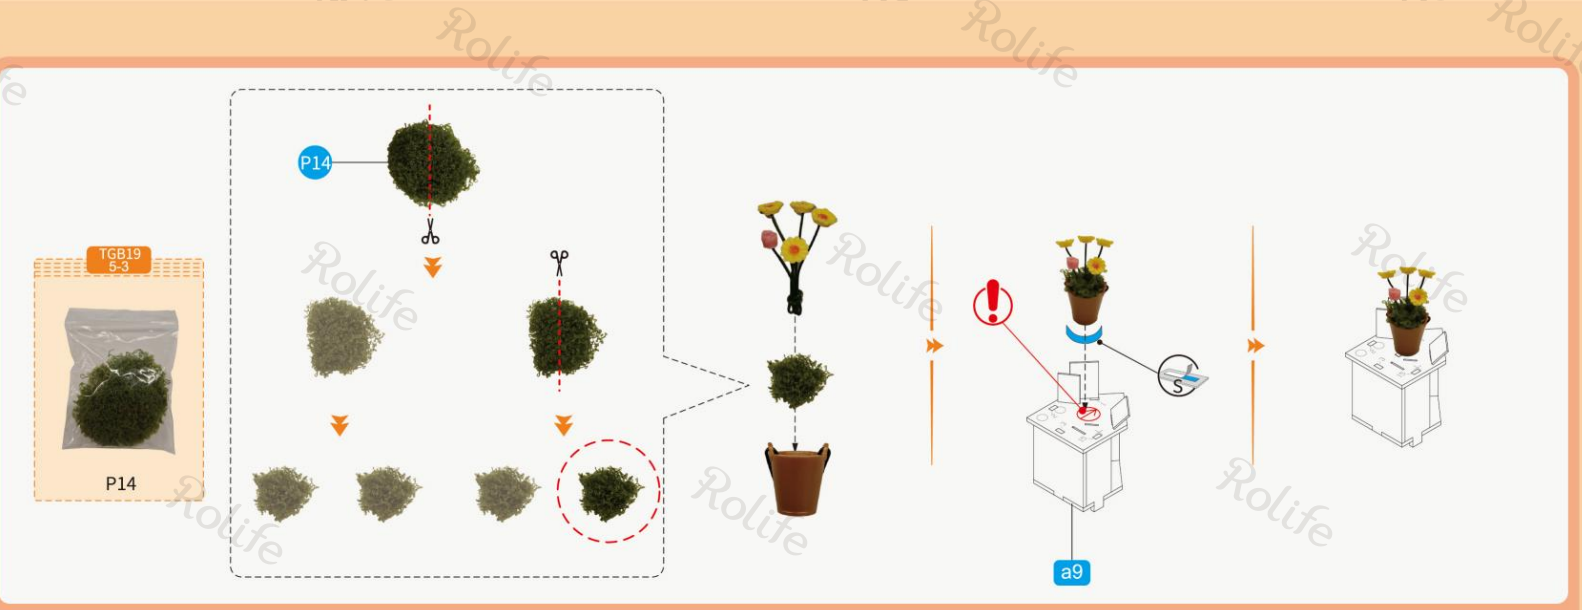
P14
TGB19
P14
a9

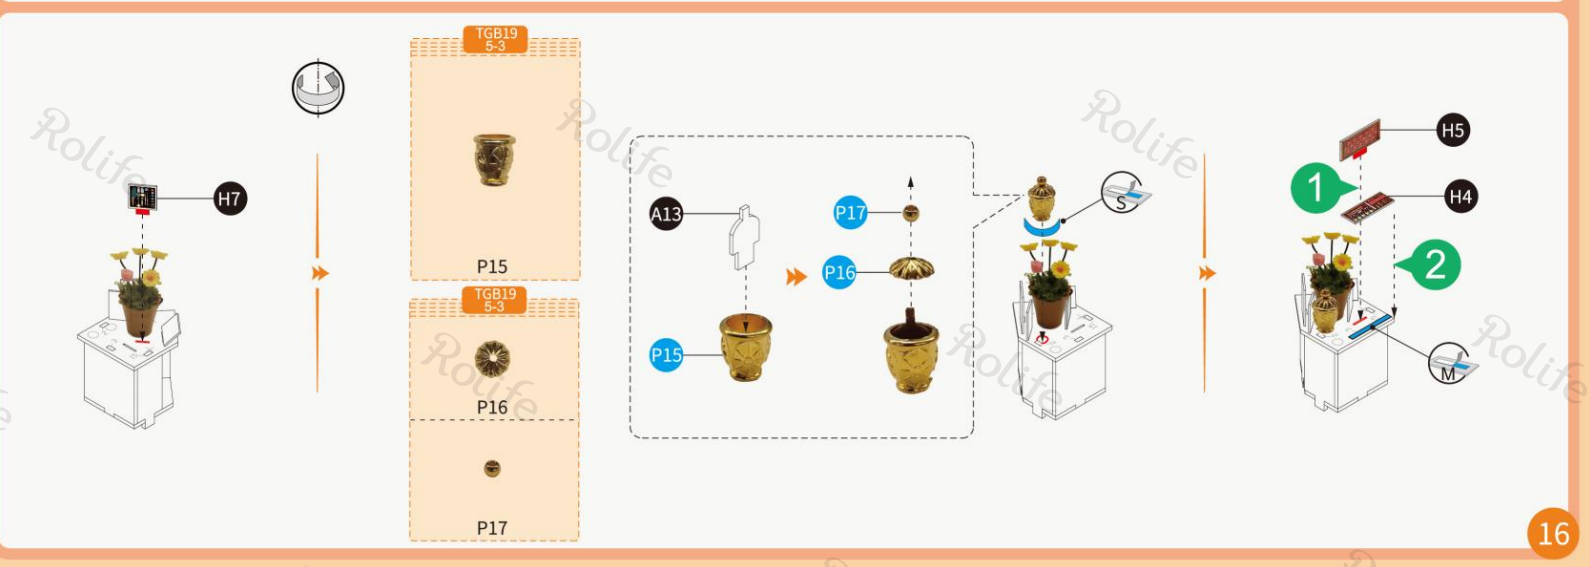
H7
TGB19
P15
TGB19
P16
P17
A13
P17
P16
P15
H5
H4
1
2

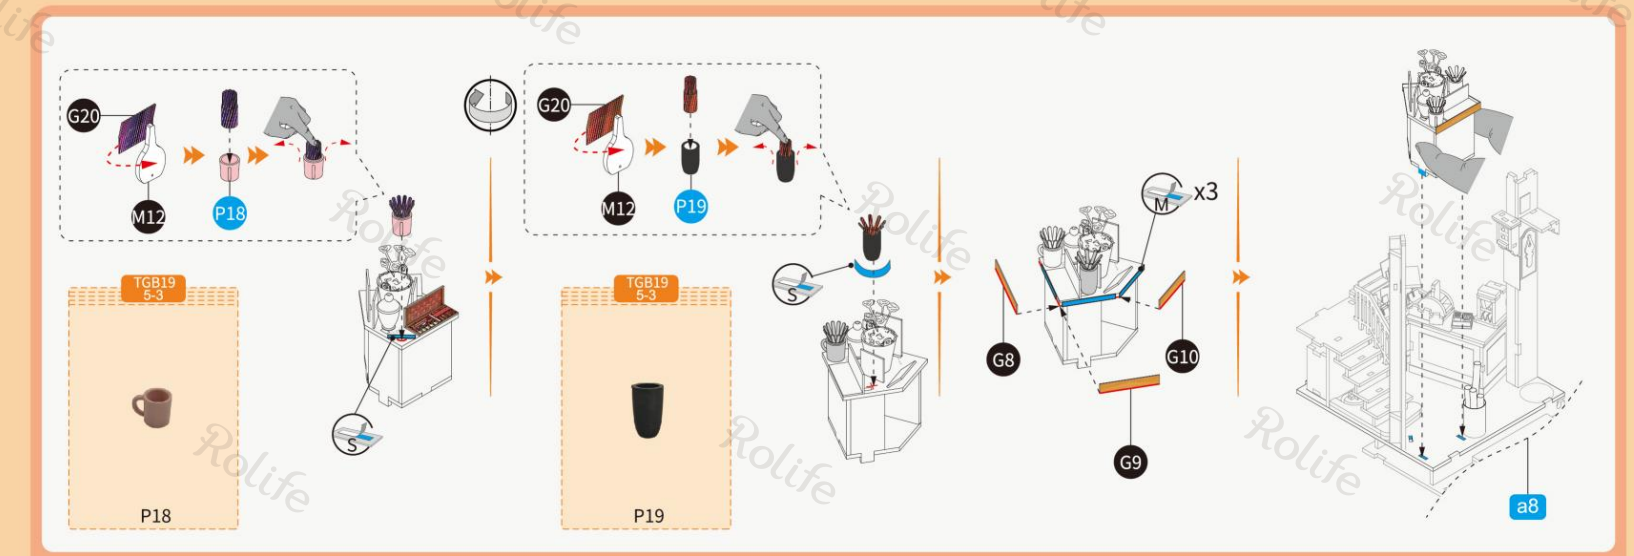
G20
M12
P18
TGB19
P18
G20
M12
P19
TGB19
P19
x3
G8
G10
G9
a8

11

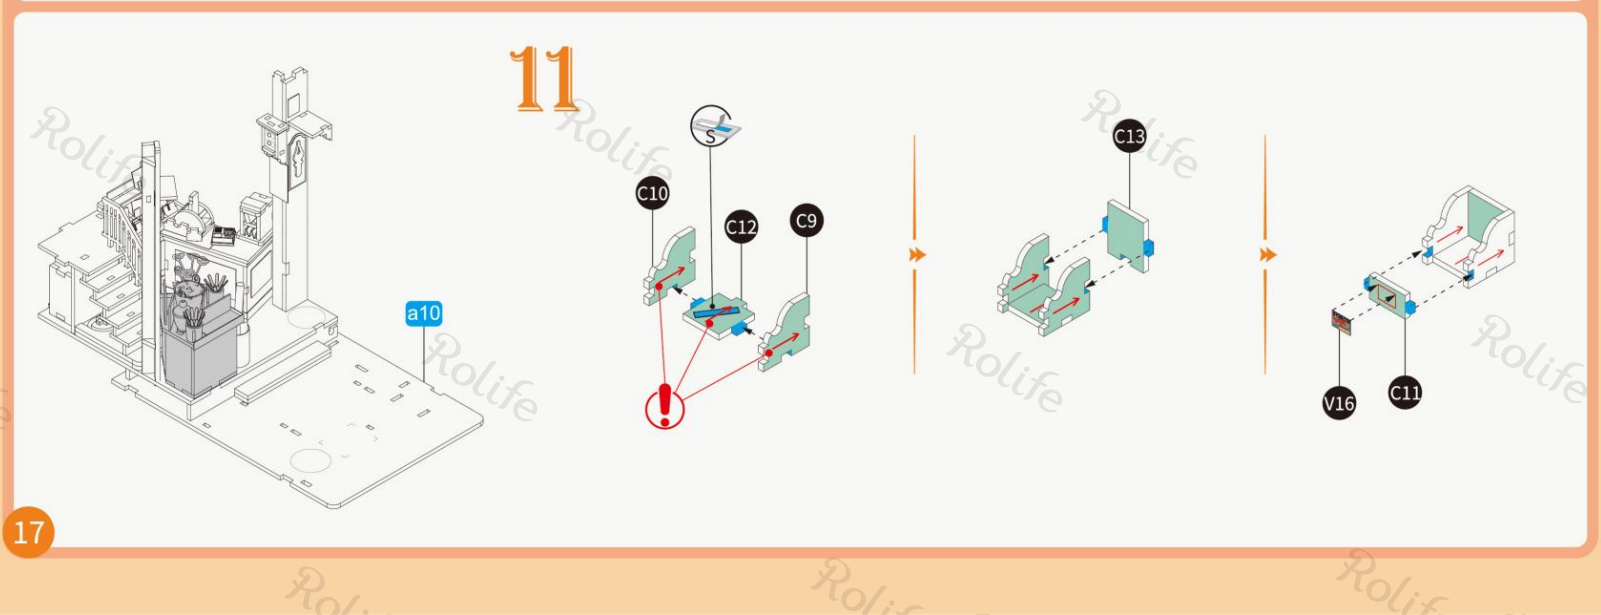
a10
C10
C12
C9
C13
V16
C11

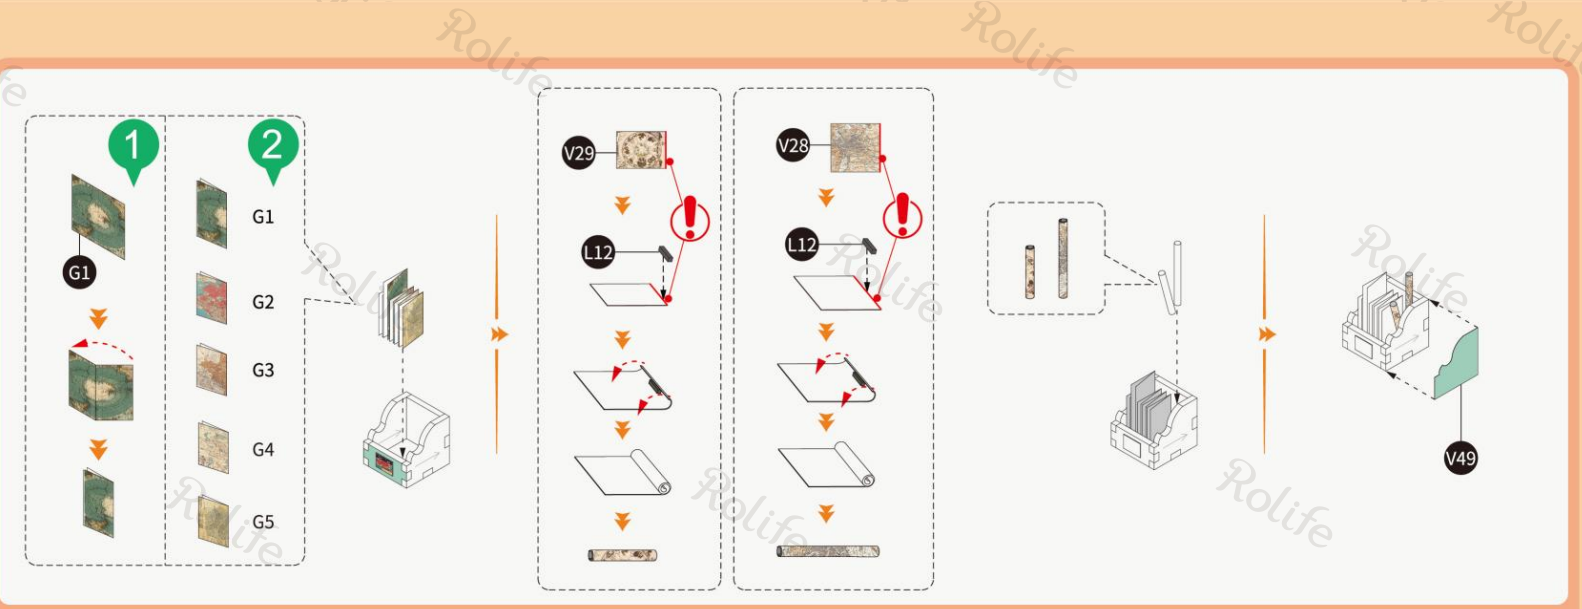
1
2
G1
G1
G2
G3
G4
G5
V29
L12
V28
L12
V49

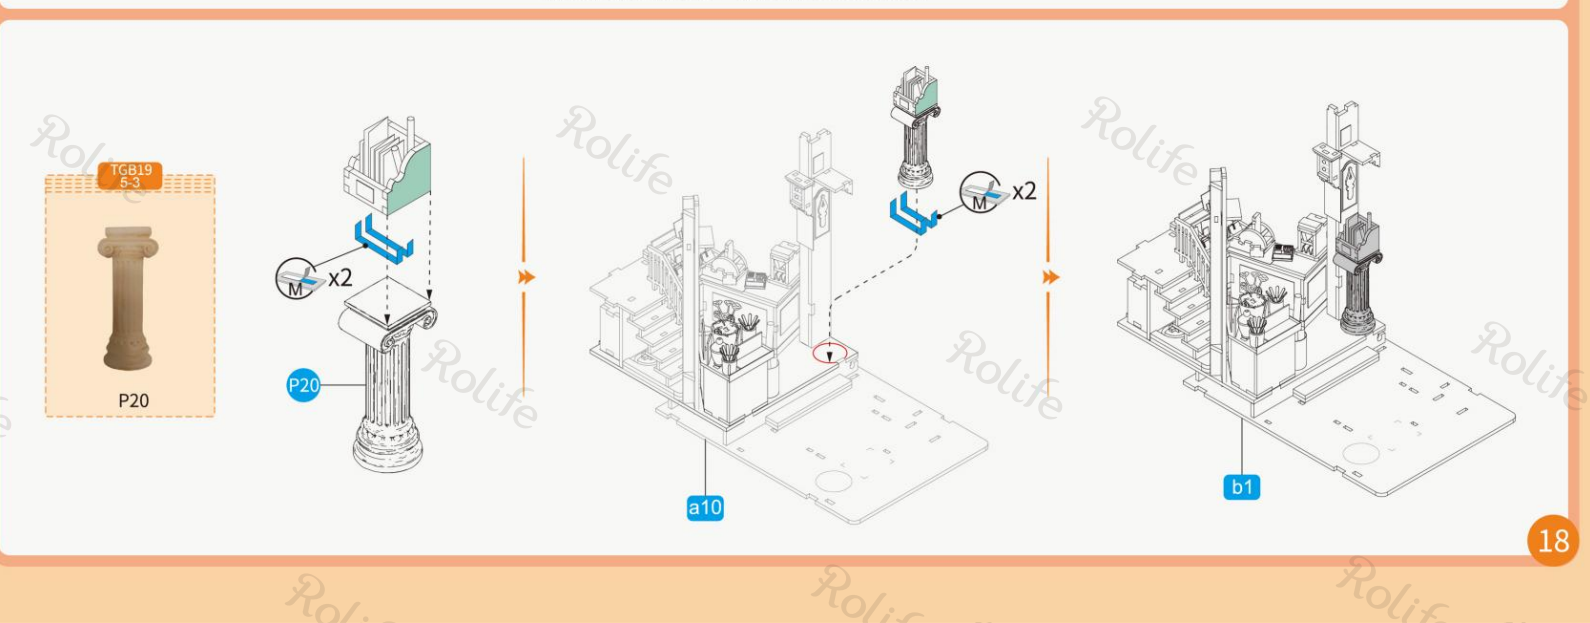
TGB19
P20
x2
P20
a10
x2
b1

12

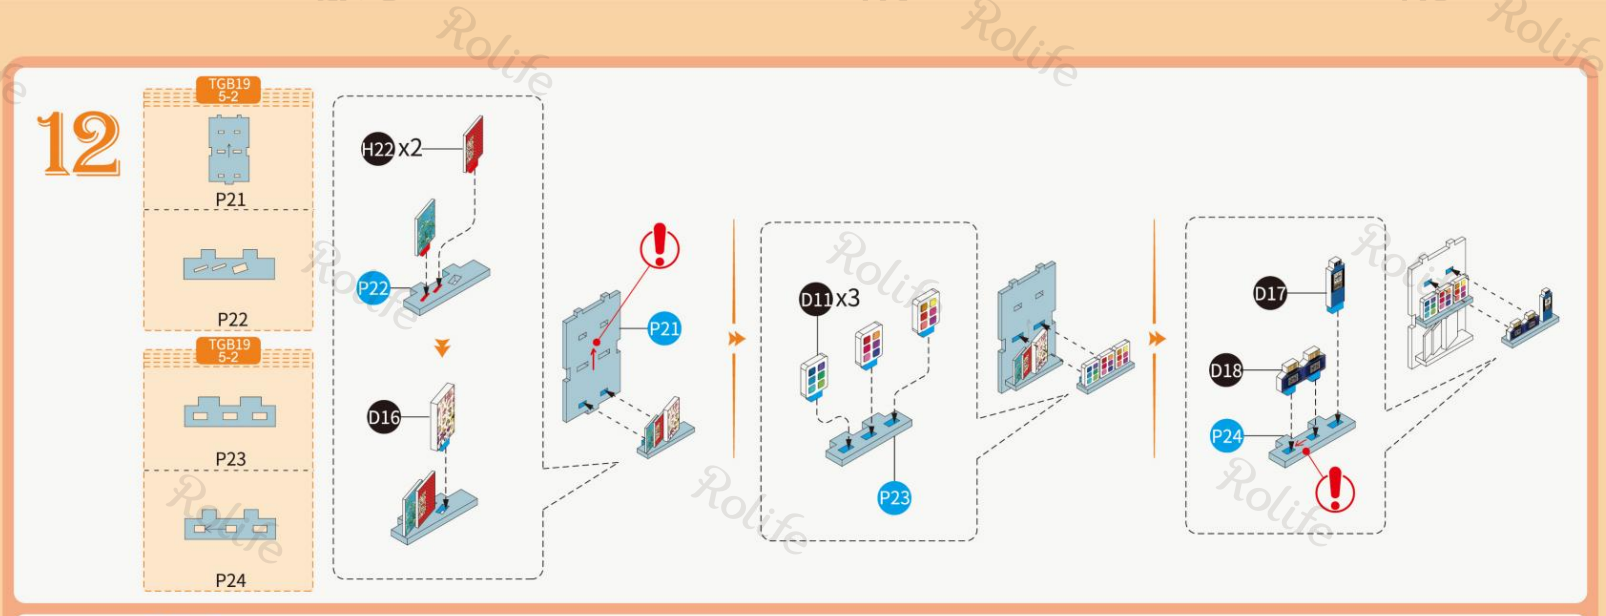
TGB19
P21
P22
TGB19
P23
P24
H2 x2
P22
D16
P21
D1 x3
P23
D17
D18
P24

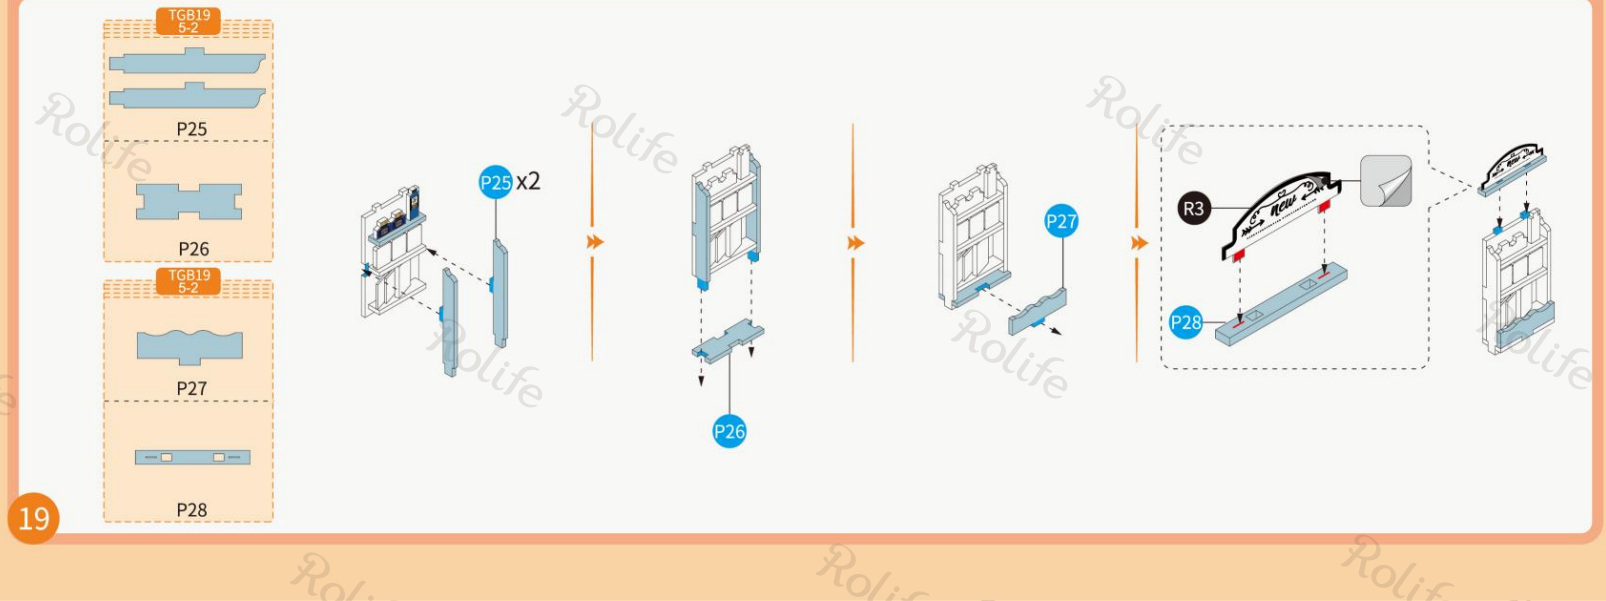
TGB19 5-2
P25
P26
TGB19 5-2
P27
P28
P25 x2
P26
P27
R3
P28

19

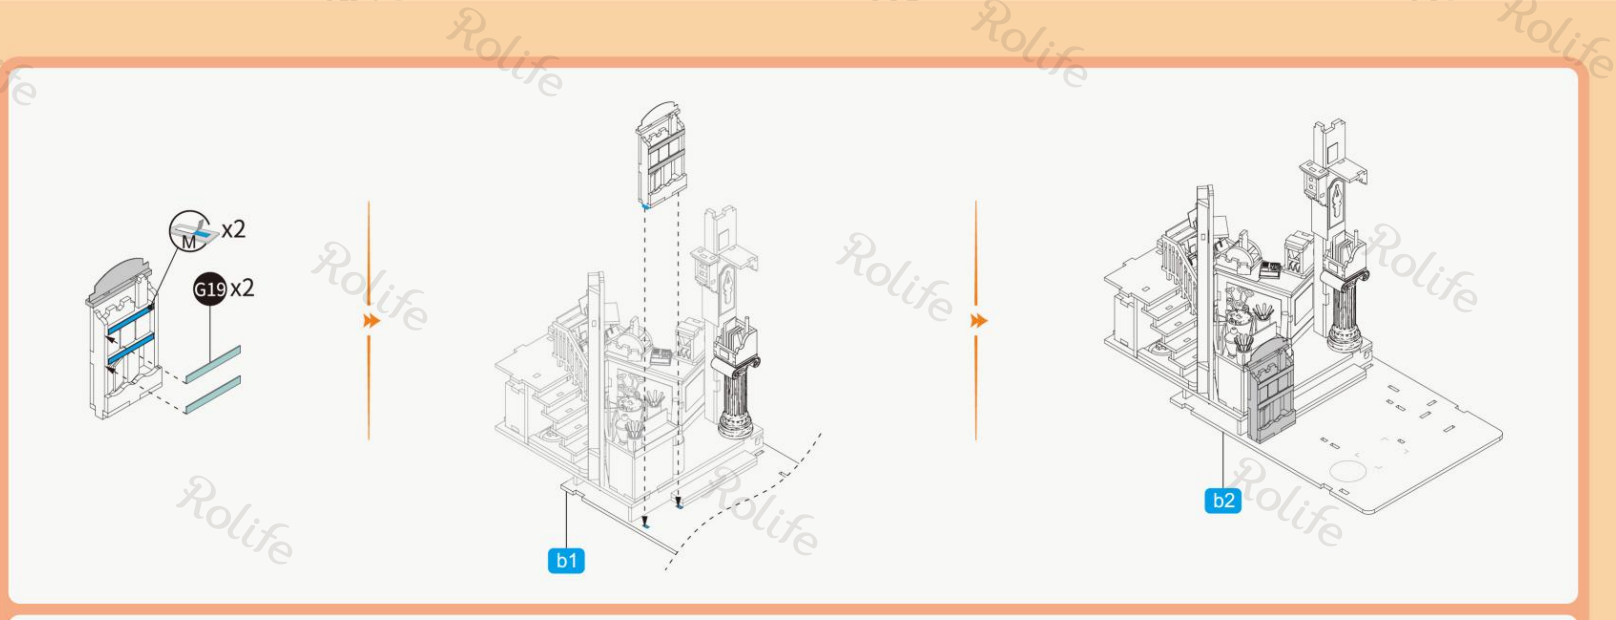
M x2
G18 x2
b1
b2

13

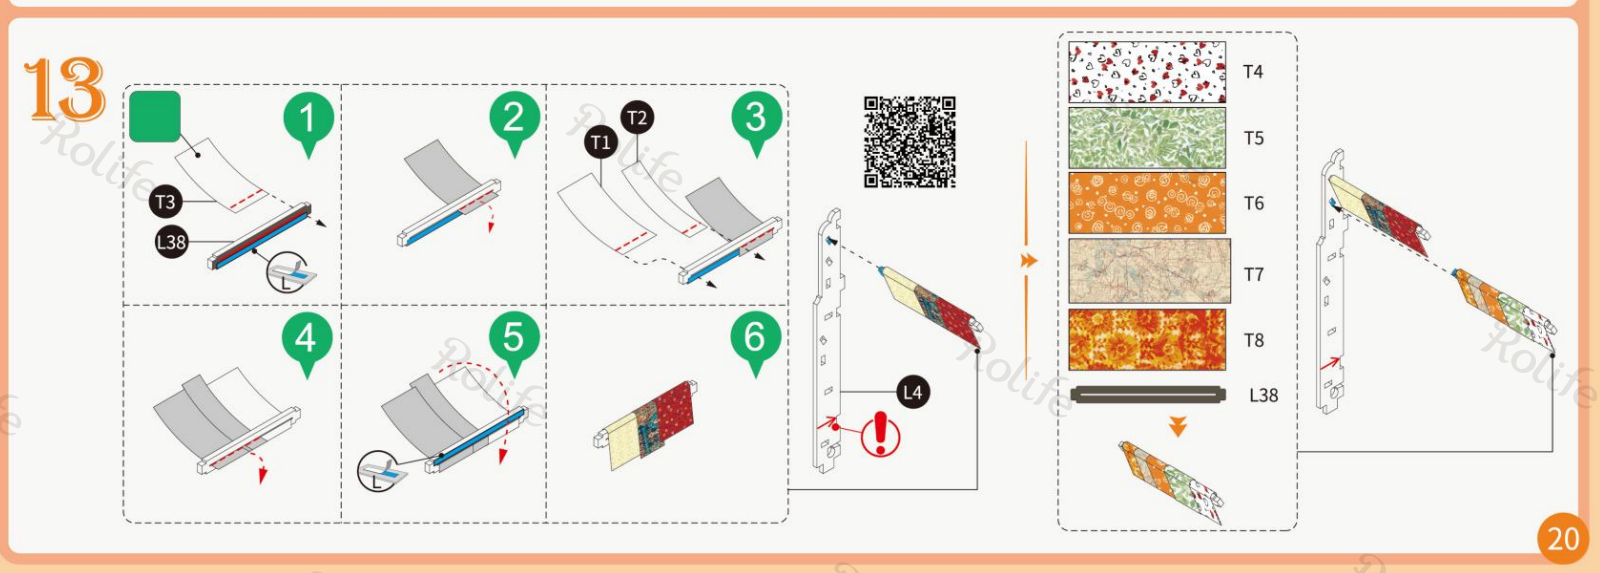
1
2
3
T3
L38
T2
T1
4
5
6
L4
T4
T5
T6
T7
T8
L38

20

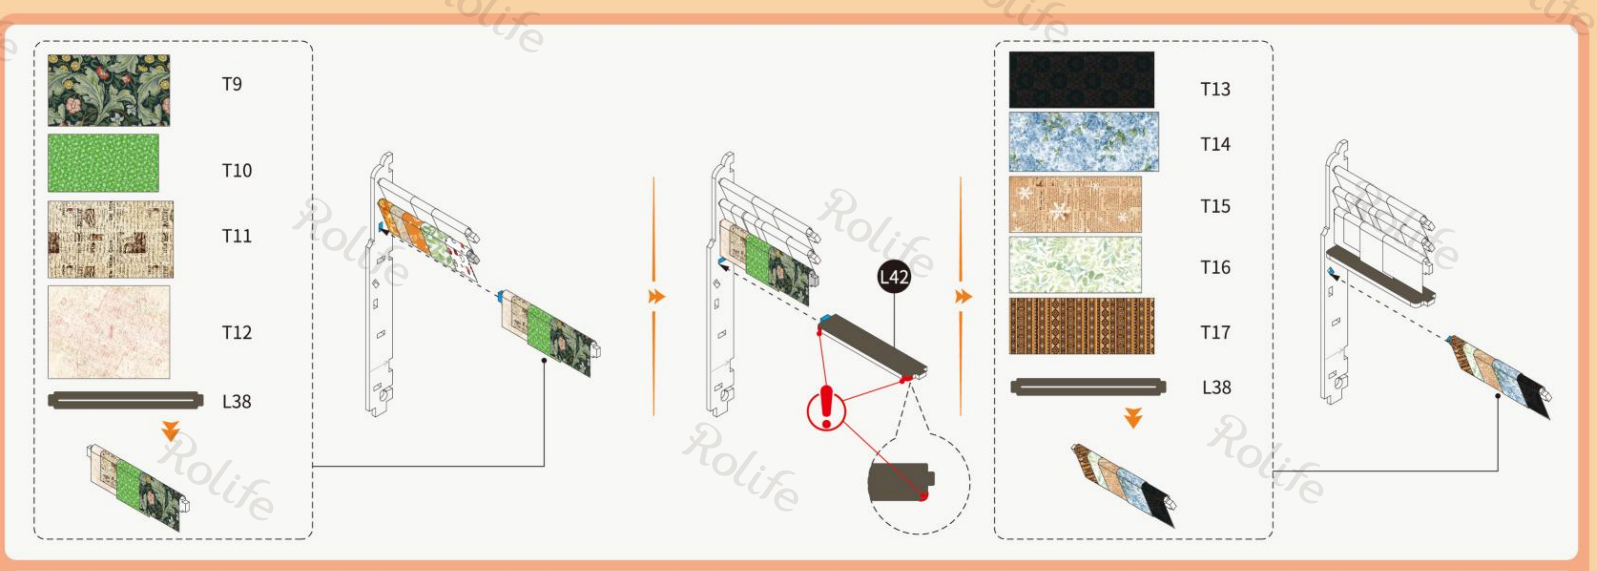
T9
T10
T11
T12
L38
L42
T13
T14
T15
T16
T17
L38

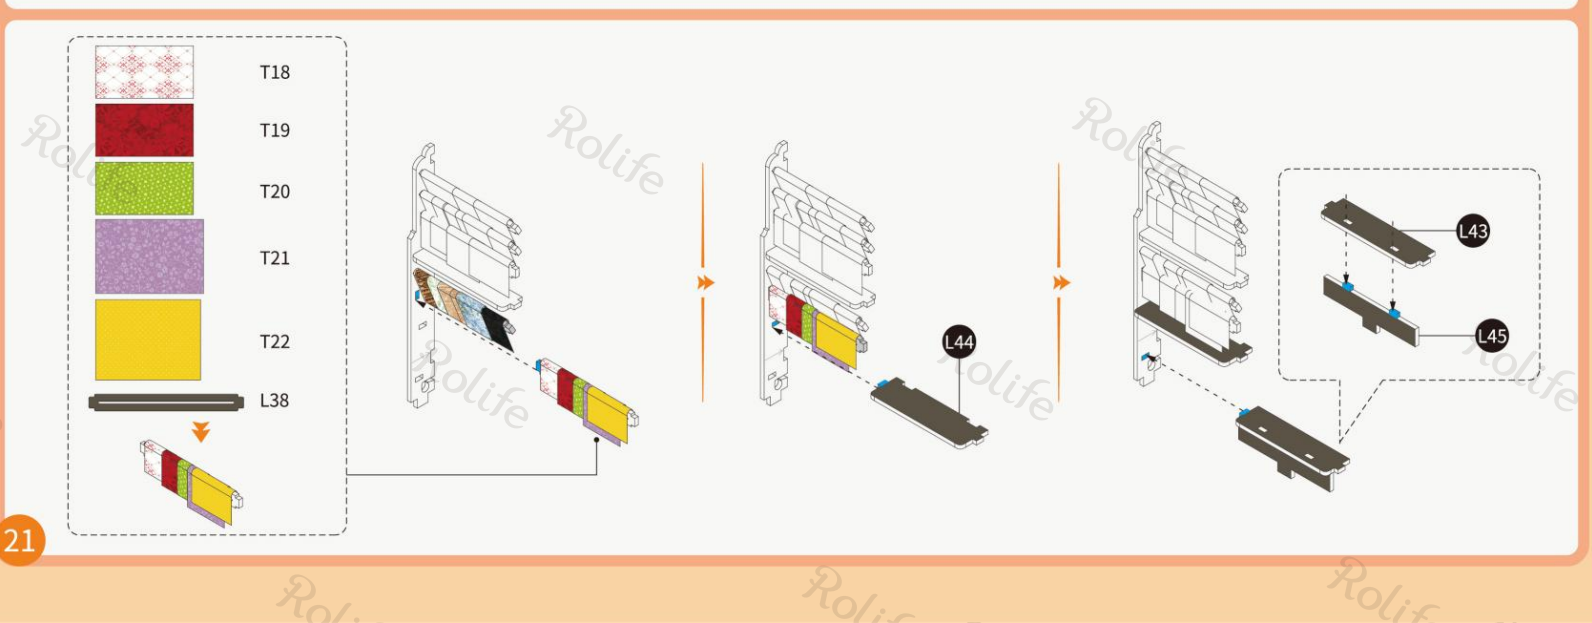
T18
T19
T20
T21
T22
L38
L44
L43
L45

21

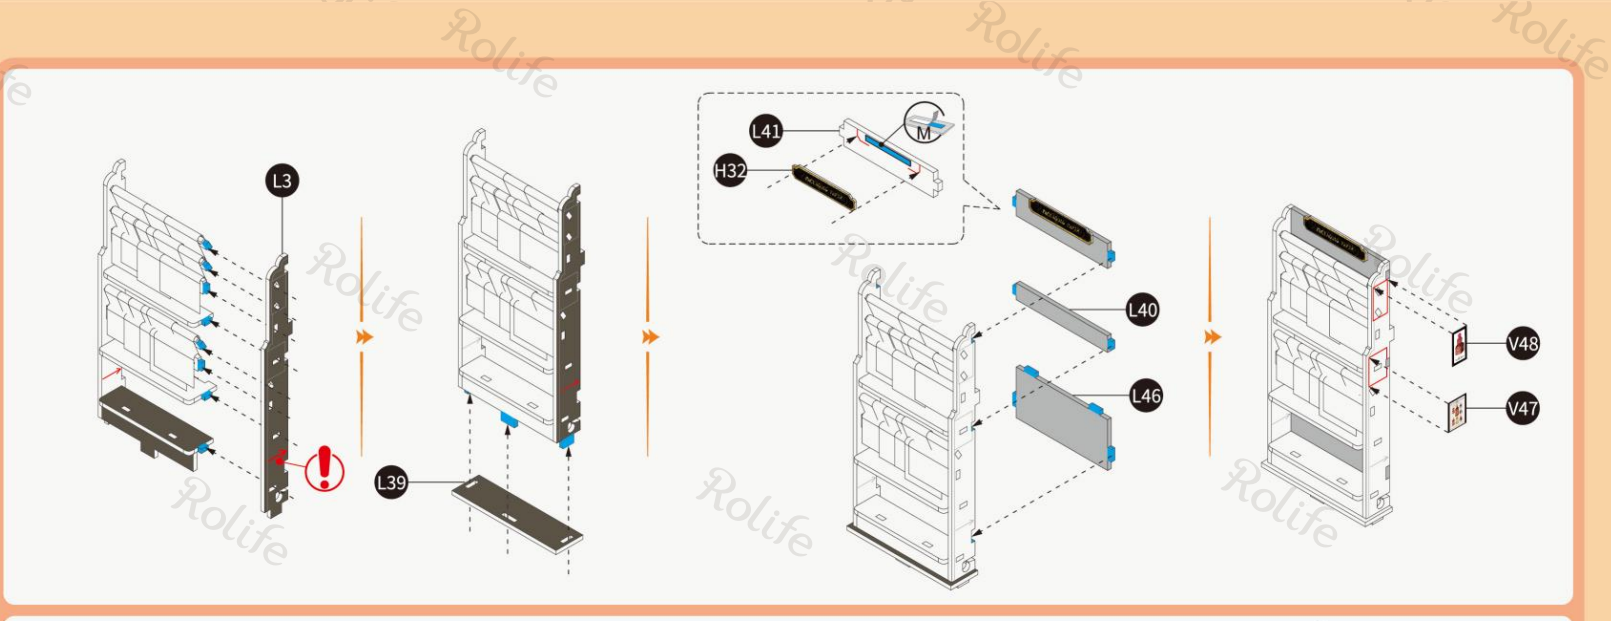
L3
L39
L41
M
H32
L40
L46
V48
V47

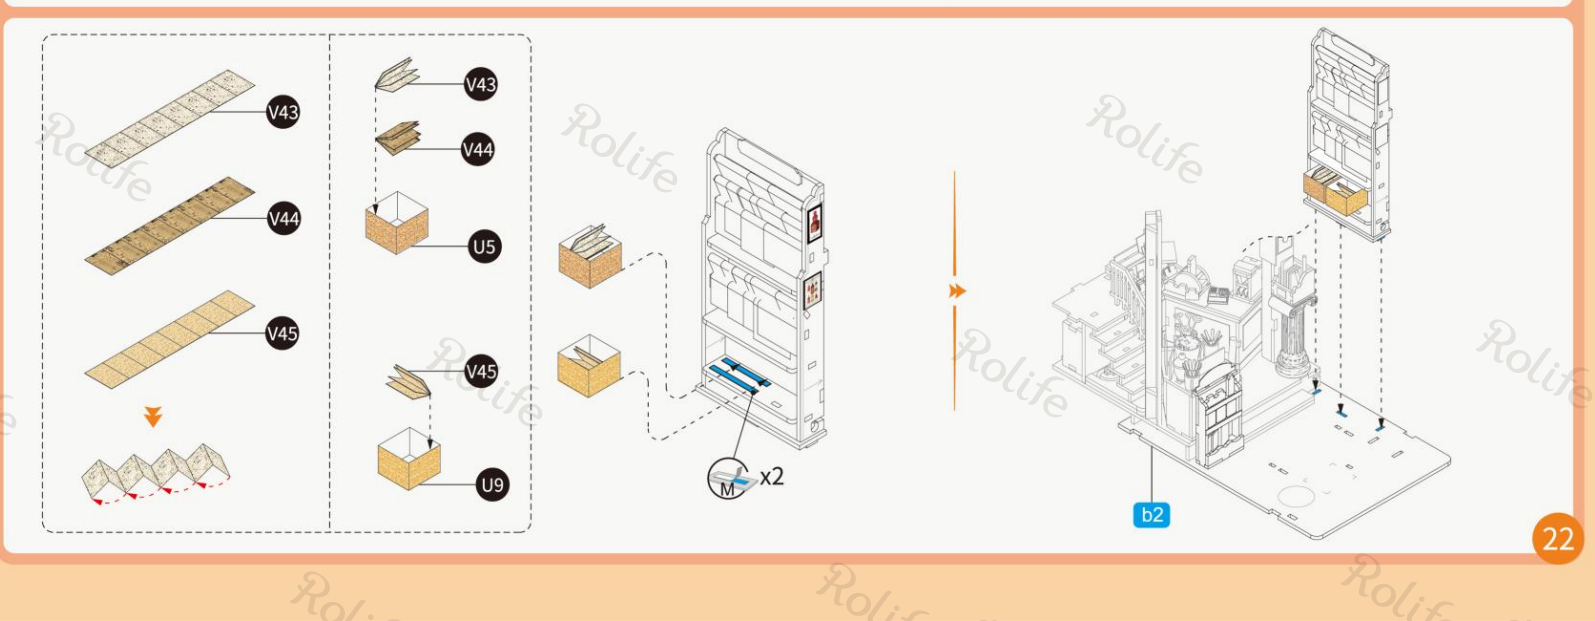
V43
V44
V45
V43
V44
U5
V45
U9
M x2
b2

22

14

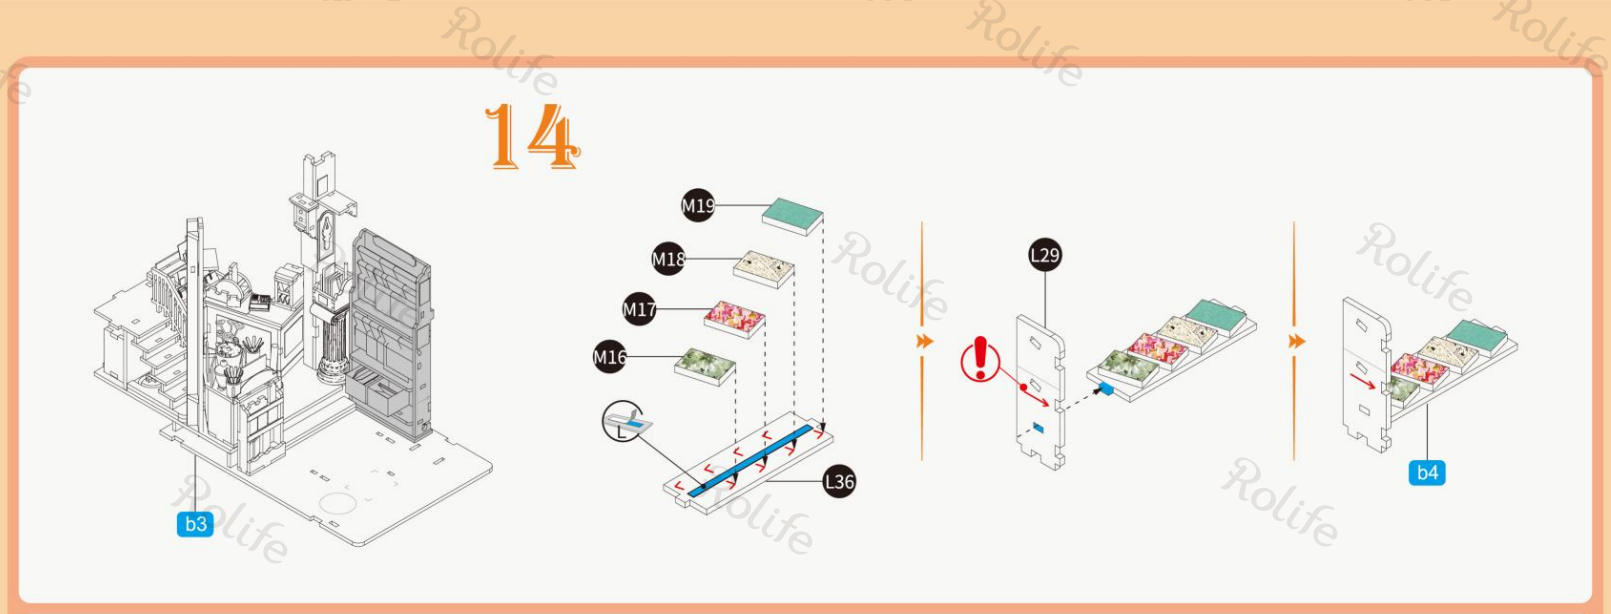
b3
M15
M18
M17
M16
L36
L29
b4

15

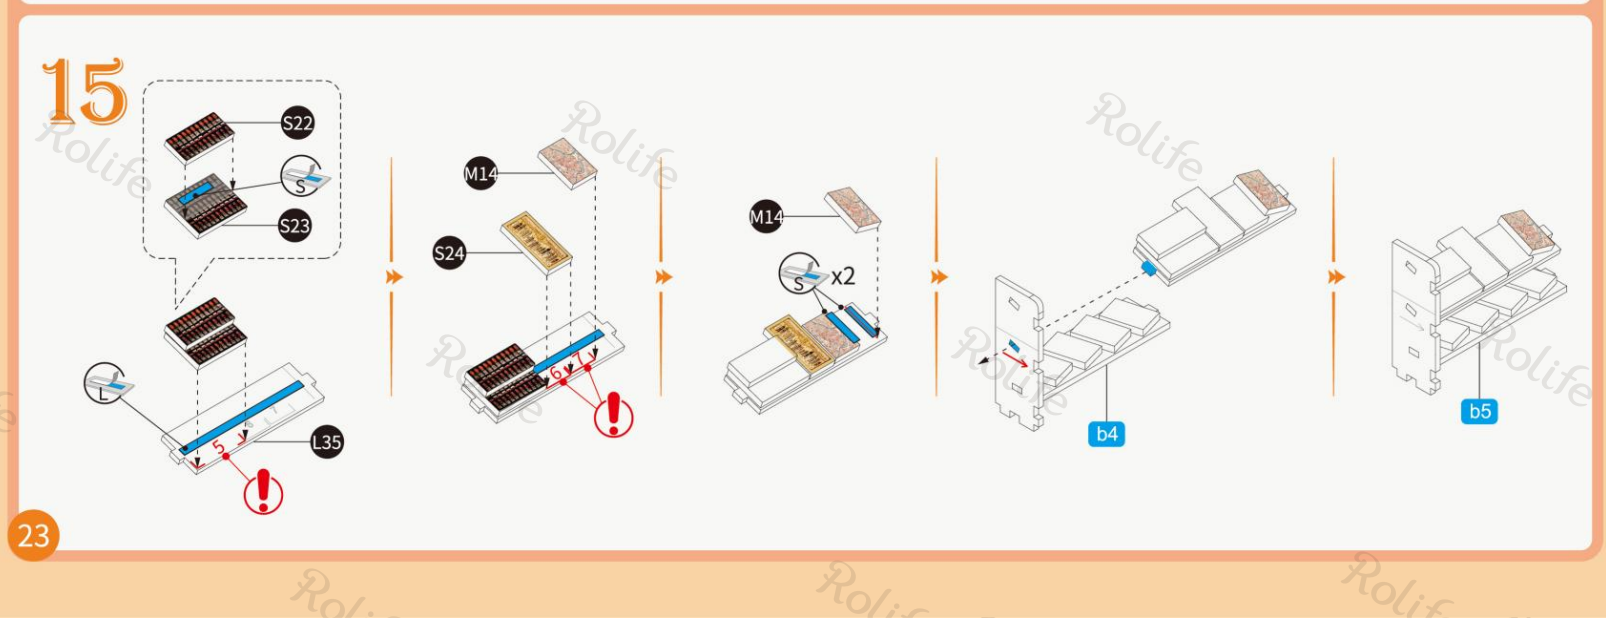
S22
S23
L35
M14
S24
M14 x2
b4
b5

23

16

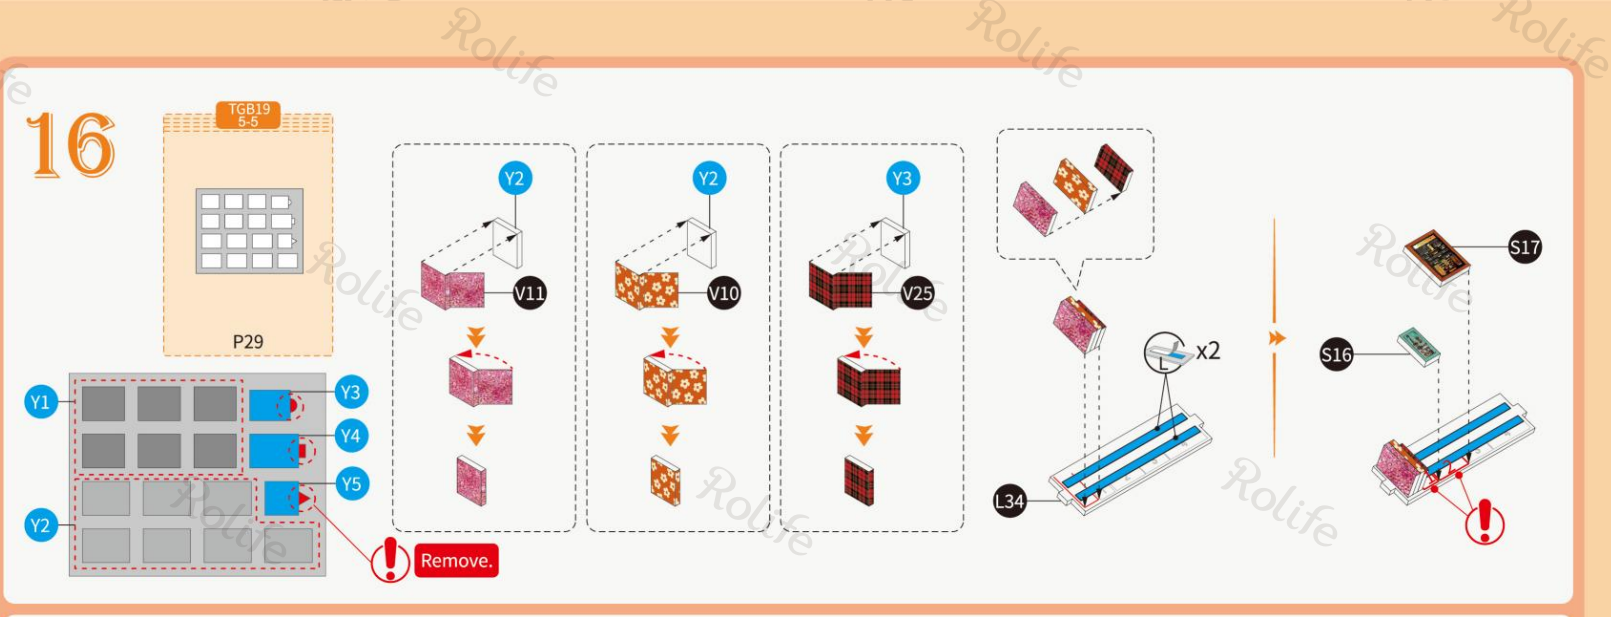
TGB19 5-5
P29
Y1
Y2
Y3
Y4
Y5
Remove.
Y2
V11
Y2
V10
Y3
V25
x2
L34
S16
S17

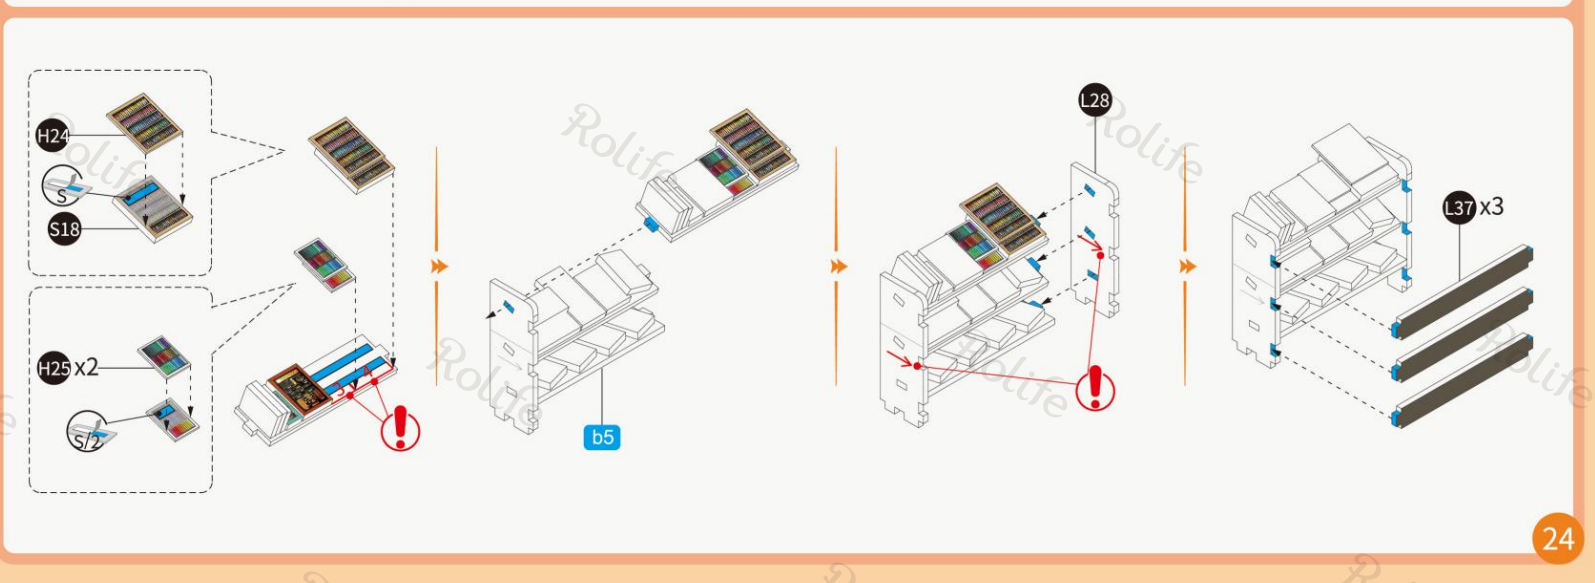
H24
S18
H23 x2
b5
L28
L37 x3

24

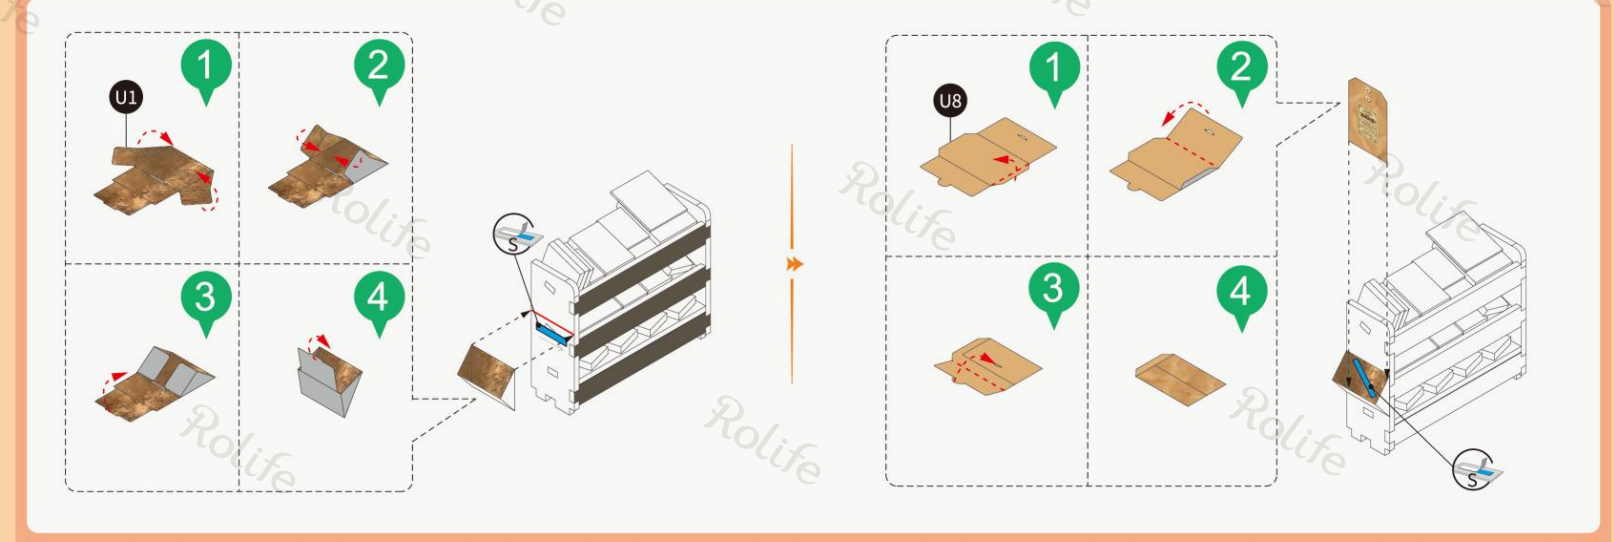
U1
1
2
3
4
S
U8
1
2
3
4
S

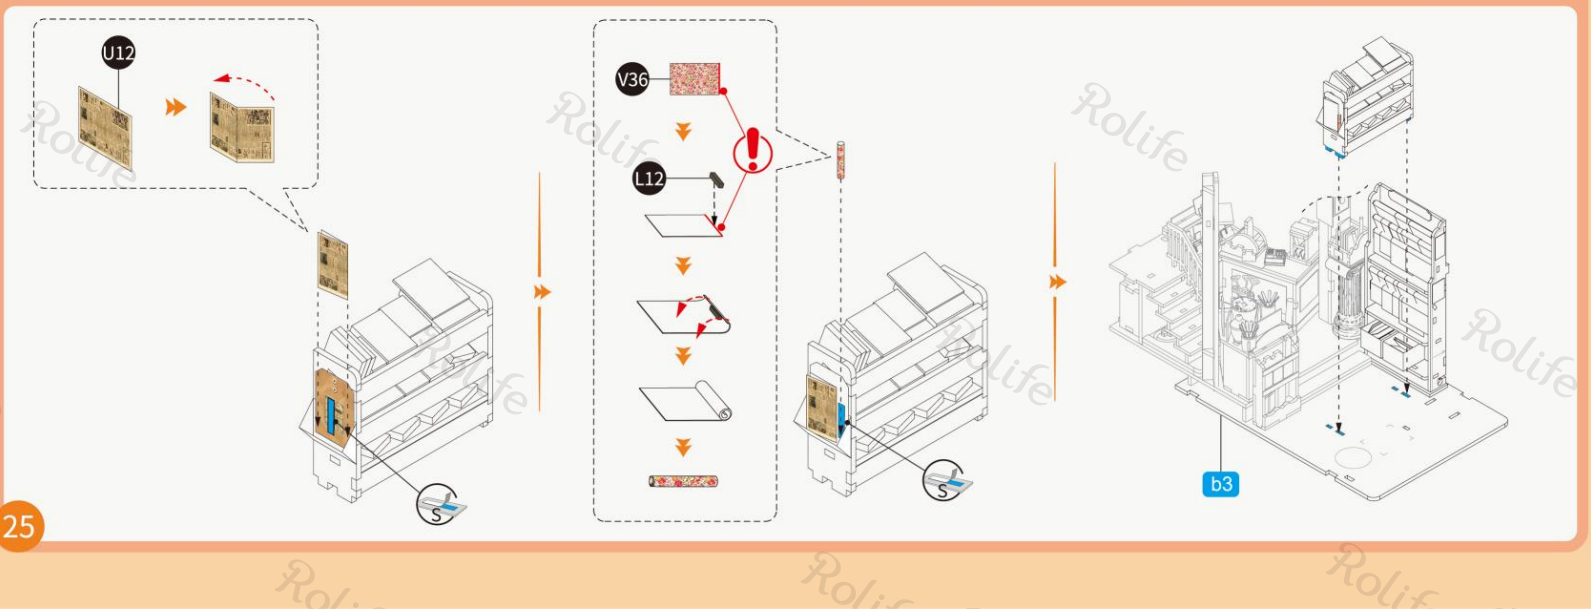
U12
S
V36
L12
S
b3

17

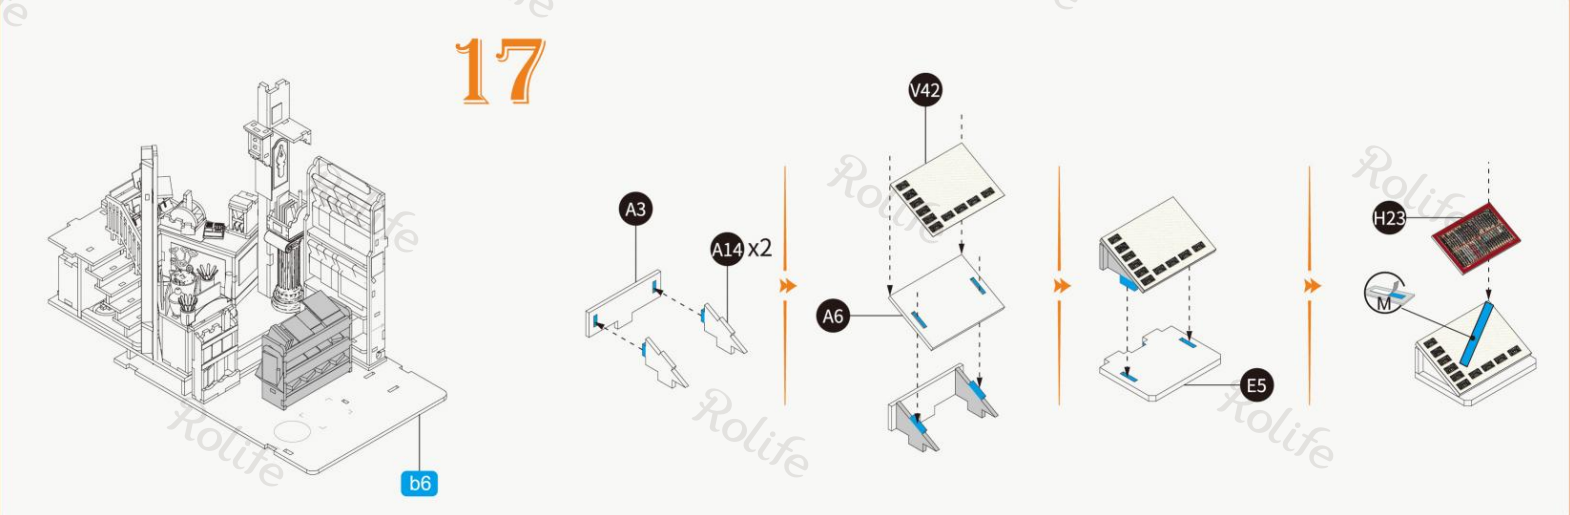
b6
A3
A14 x2
V42
A6
E5
H23
M

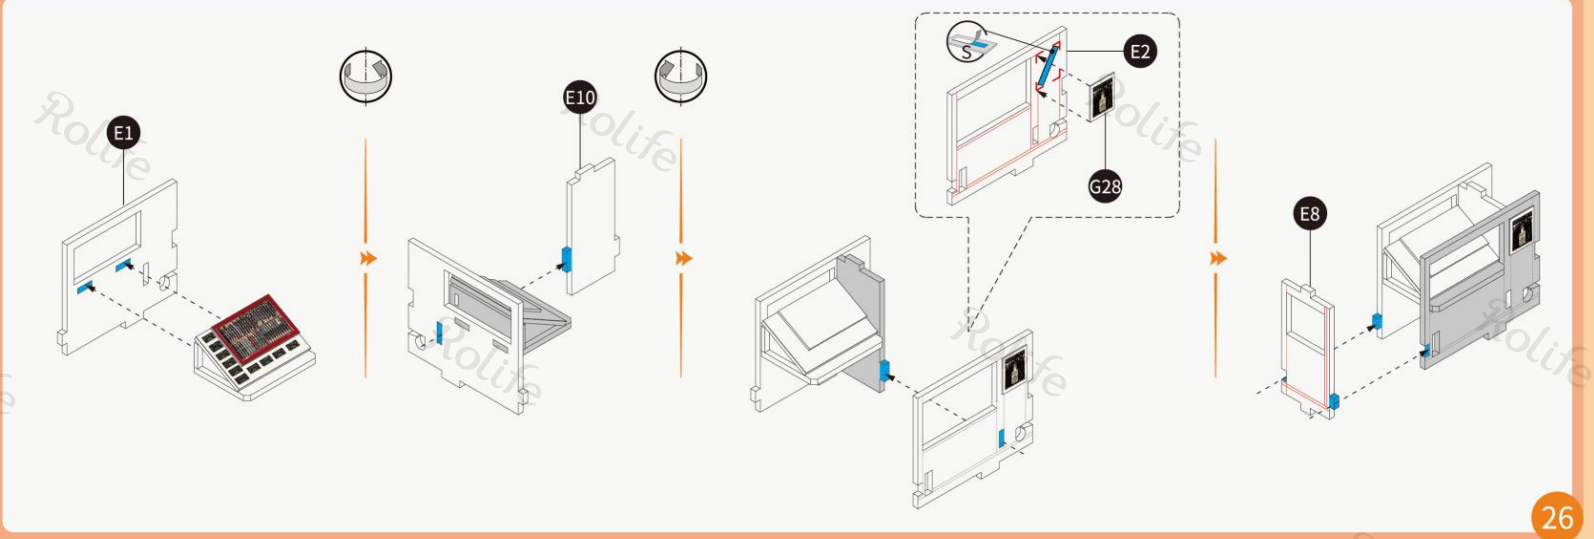
E1
E10
S
E2
G28
E8

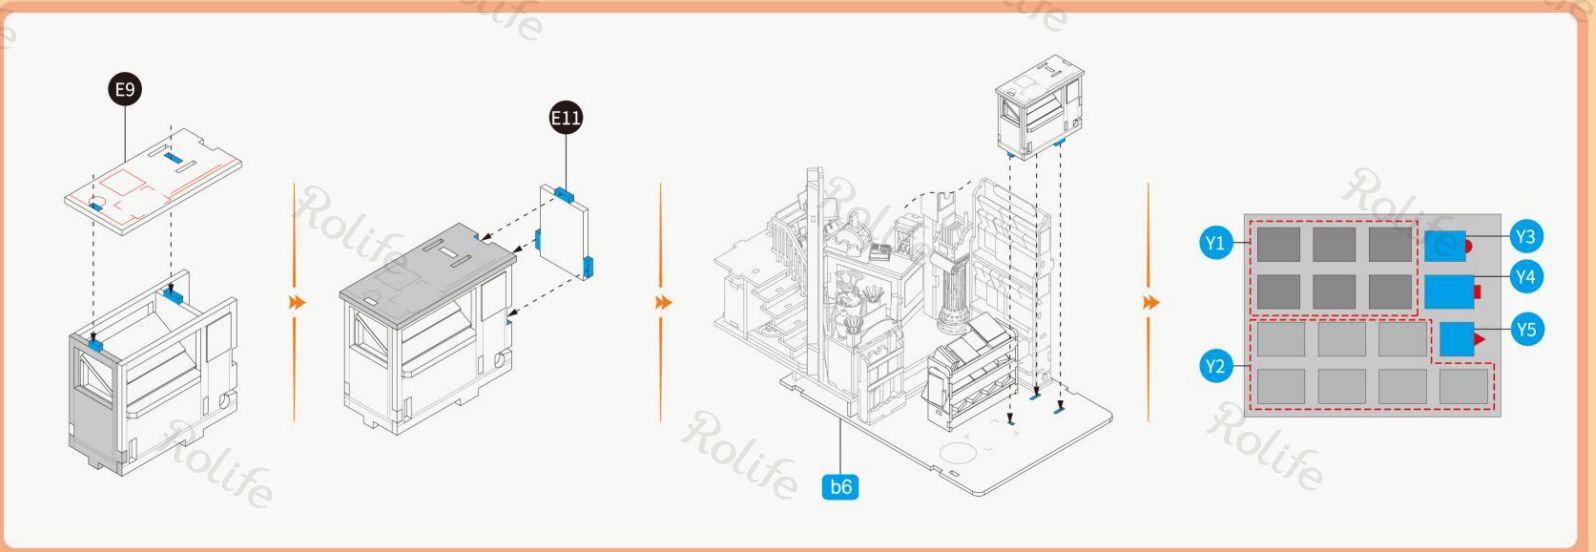
E9
E11
b6
Y1
Y2
Y3
Y4
Y5

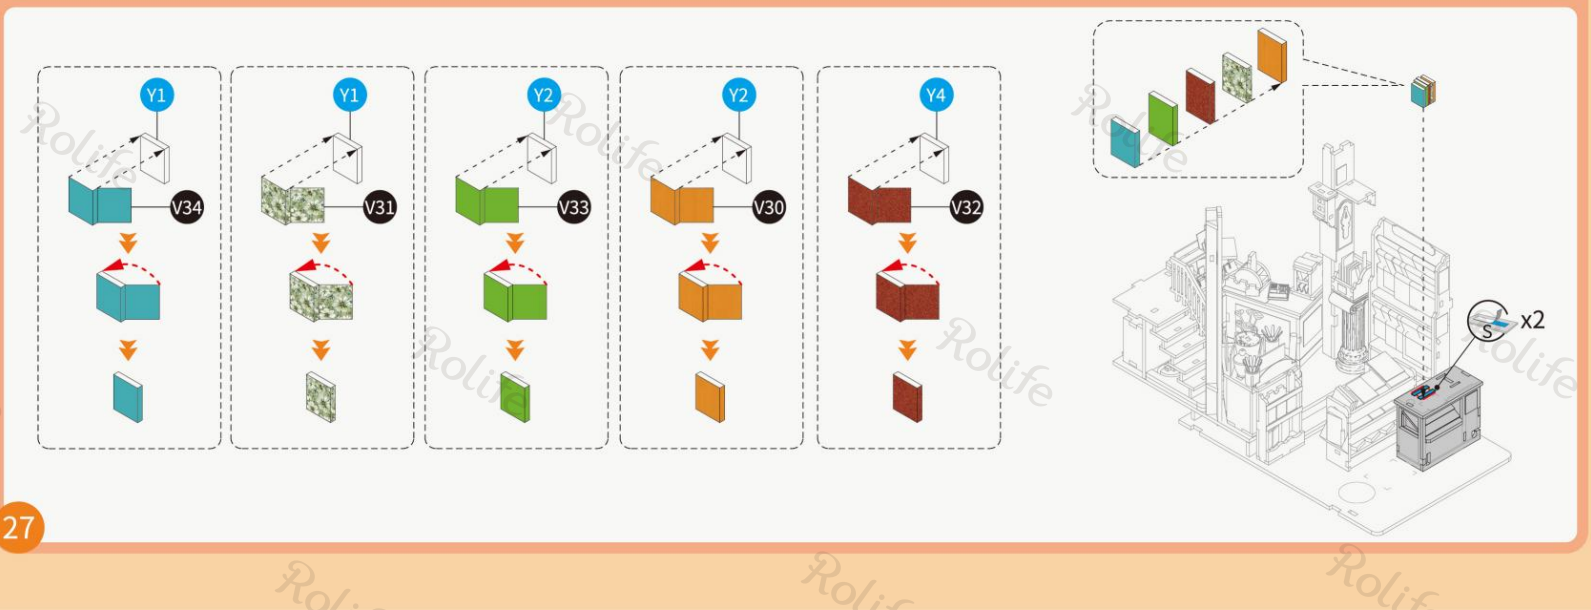
Y1
V34
Y1
V31
Y2
V33
Y2
V30
Y4
V32
S
x2

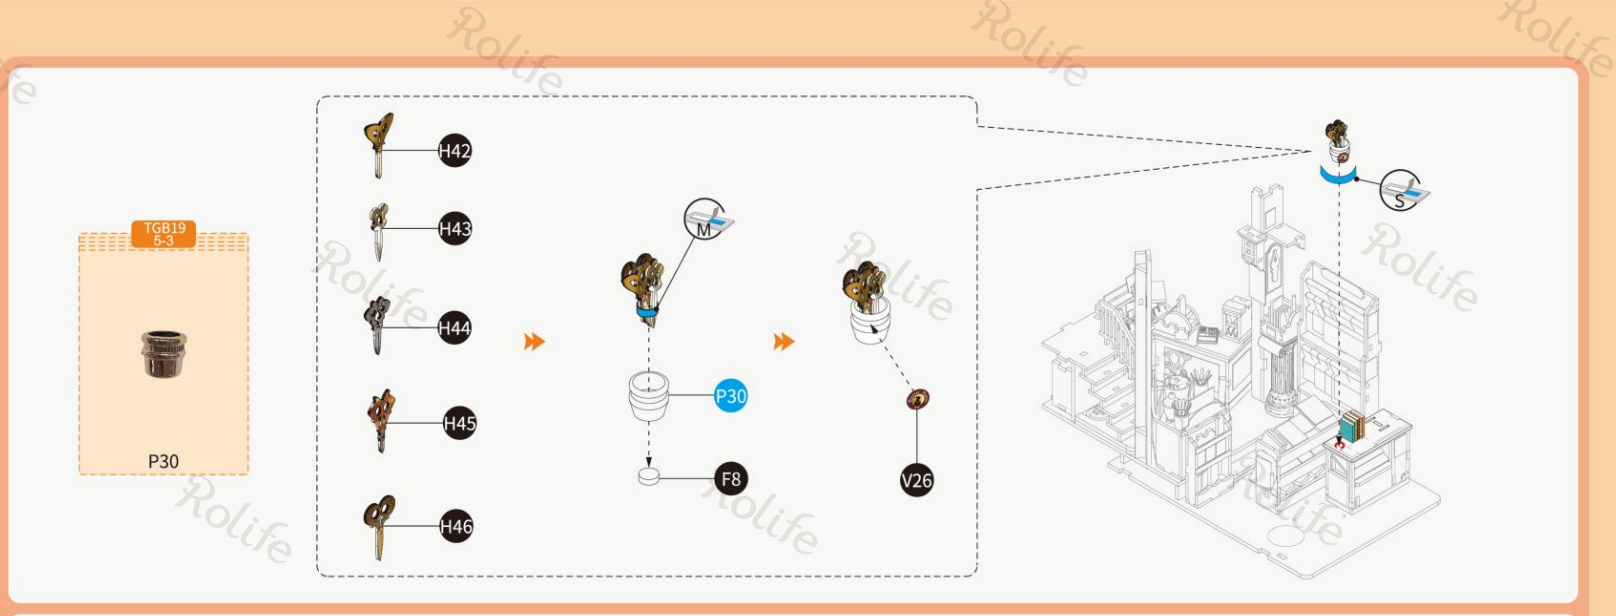

P30
H42
H43
H44
H45
H46
M
P30
F8
V26
S

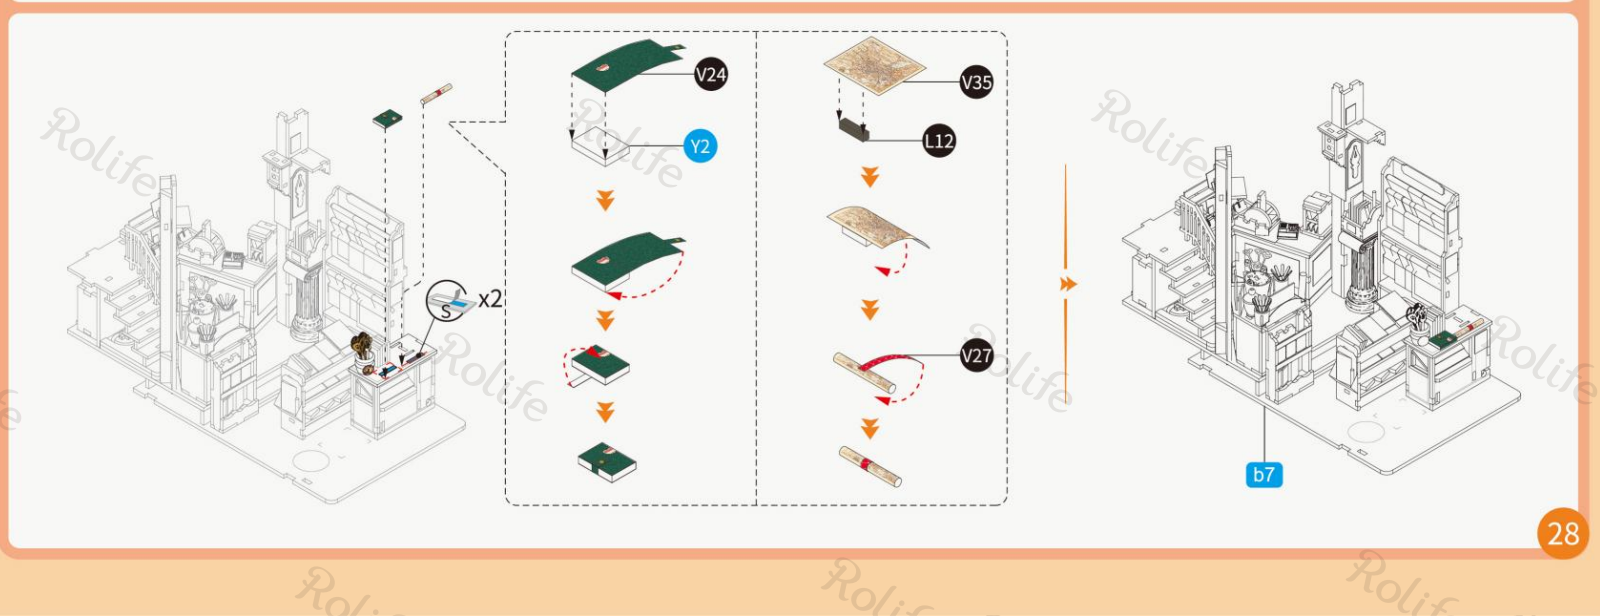

S
x2
V24
Y2
V35
L12
V27
b7

18

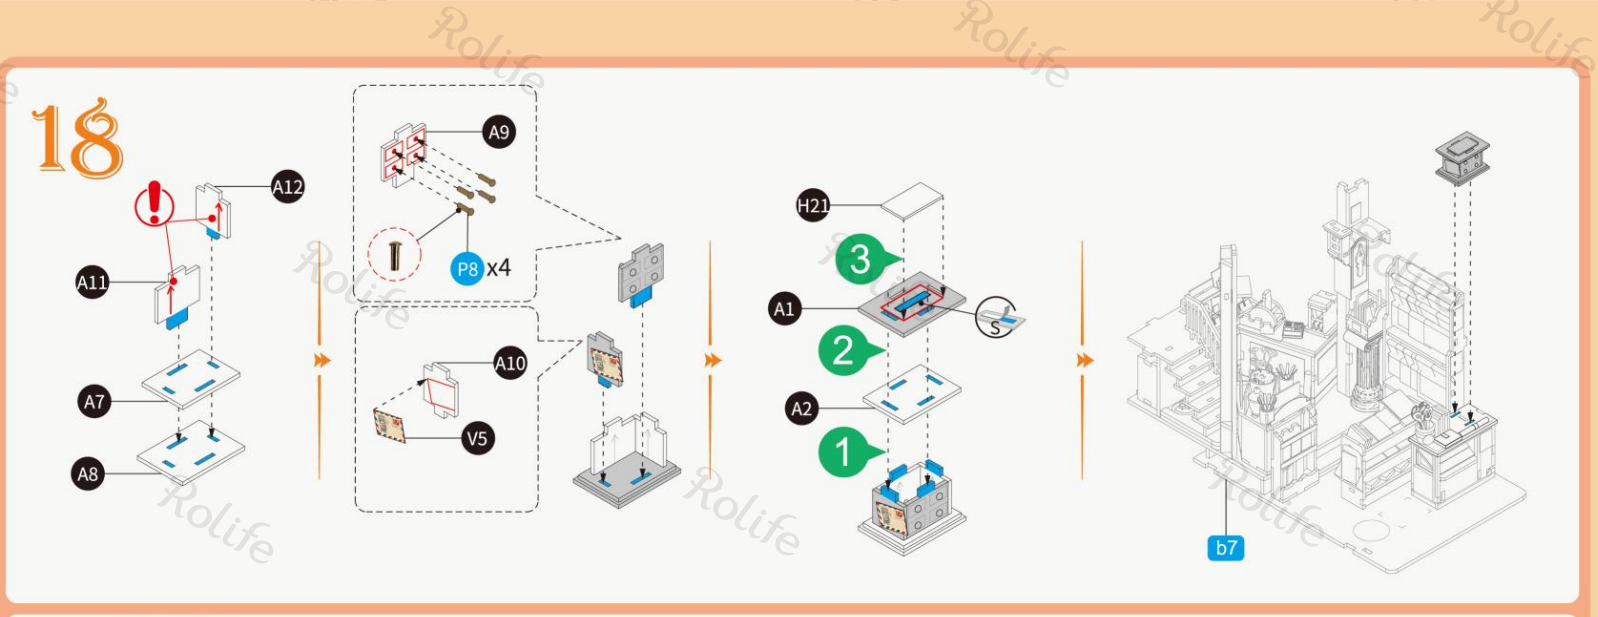

A12
A11
A7
A8
A9
P8 x4
A10
V5
H21
3
A1
2
A2
1
b7

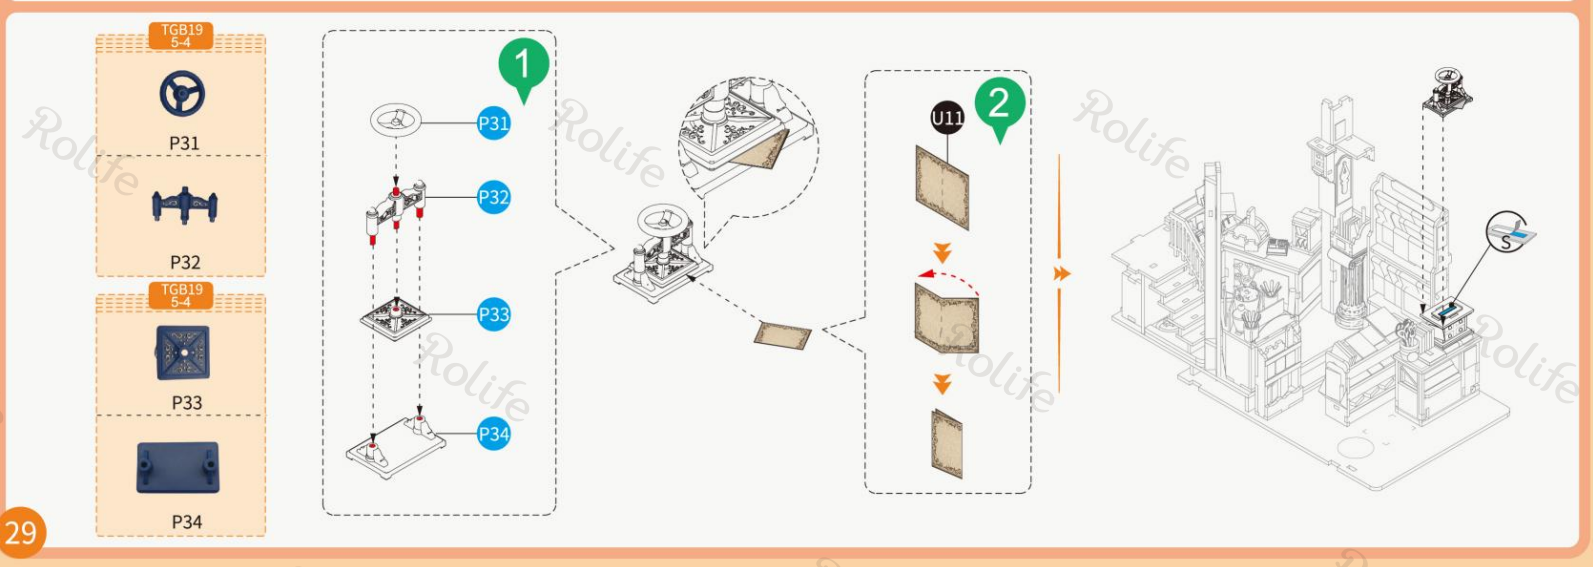

P31
P32
P33
P34
1
P31
P32
P33
P34
U11
2

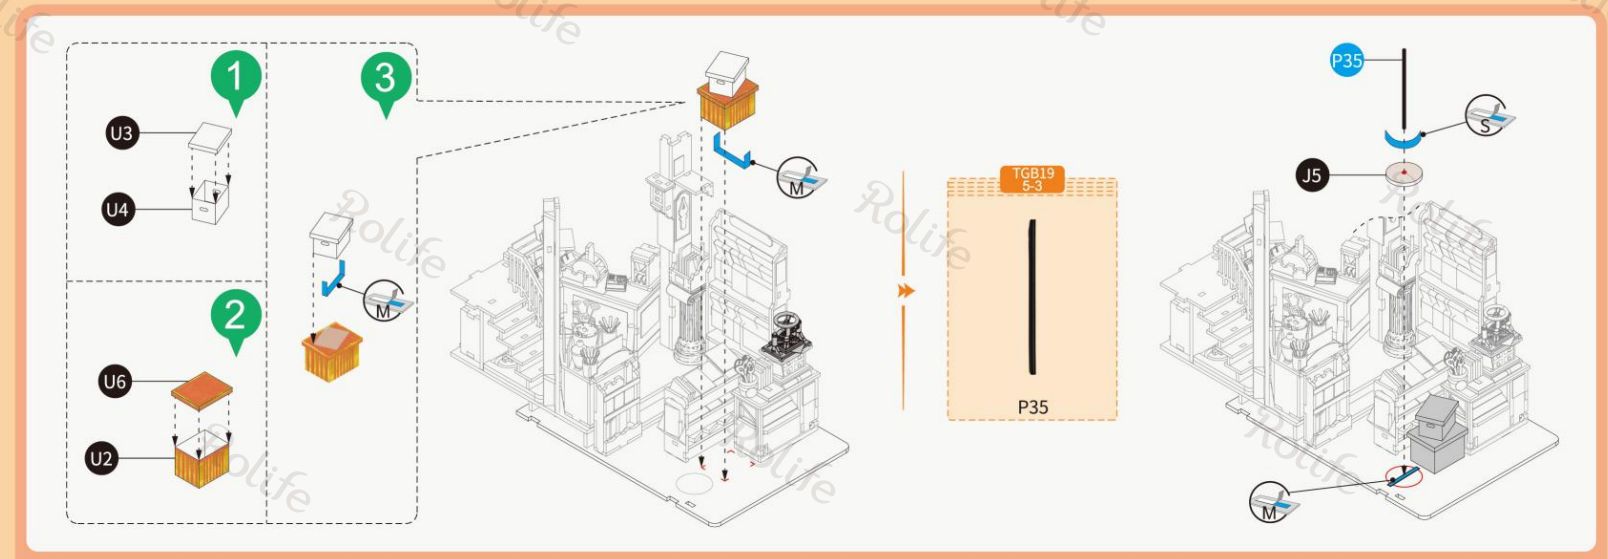

1
3
U3
U4
2
U6
U2
M
M
P35
P35
J5
M

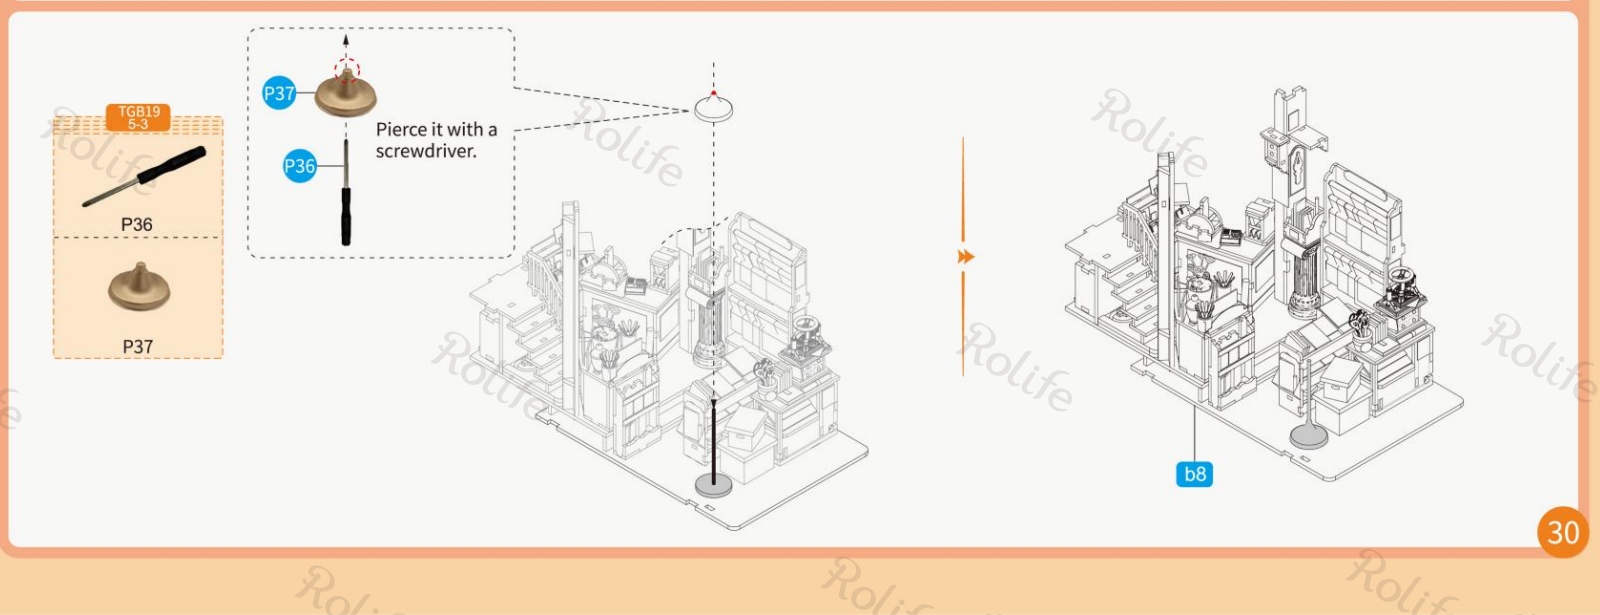

P36
P37
P37
P36
b8

Pierce it with a screwdriver.

19

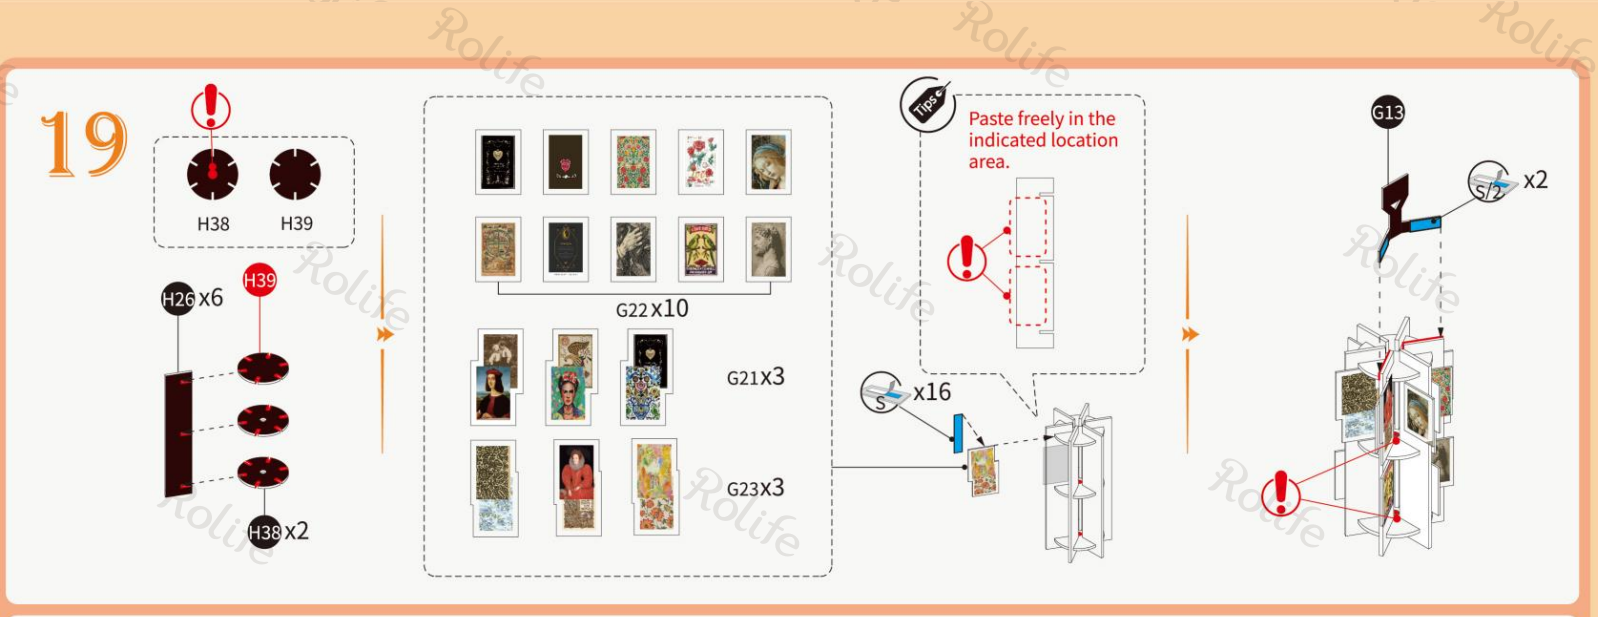

H38
H39
H26 x6
H39
H38 x2
G22 x10
G21 x3
G23 x3
S x16
G13
S x2

Paste freely in the indicated location area.

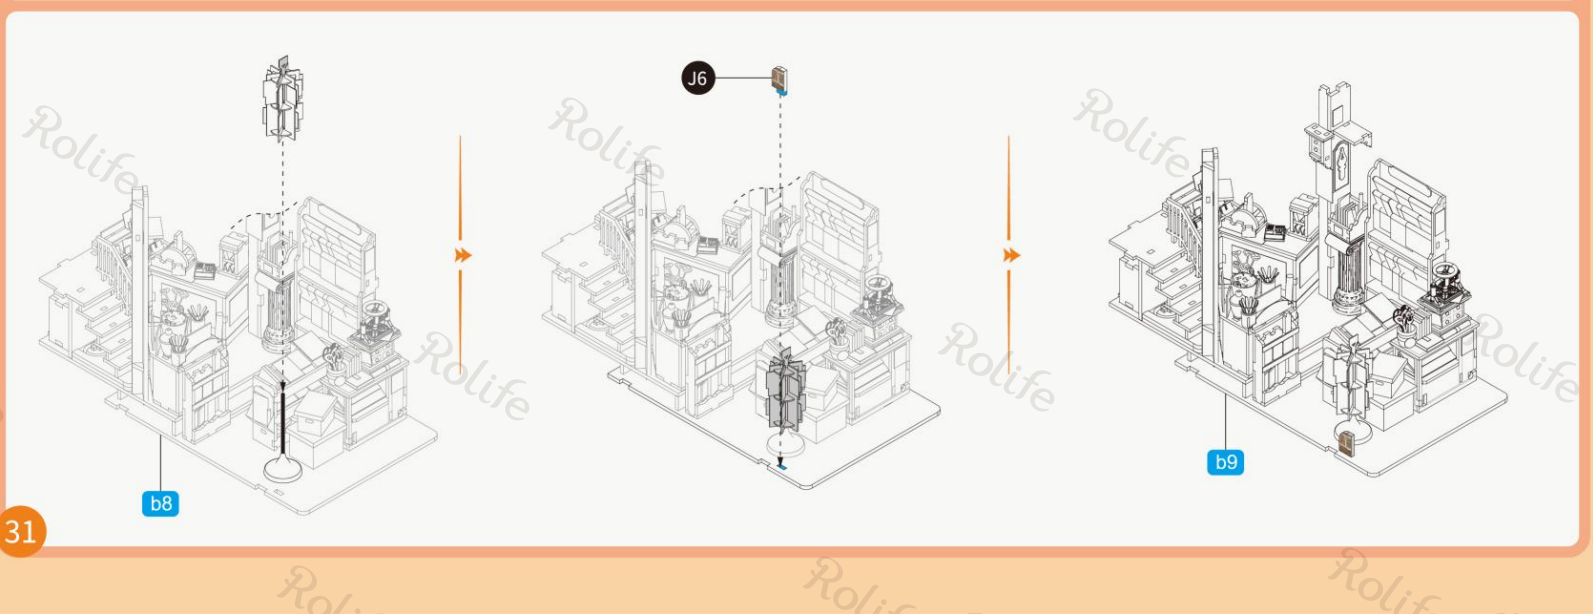

20

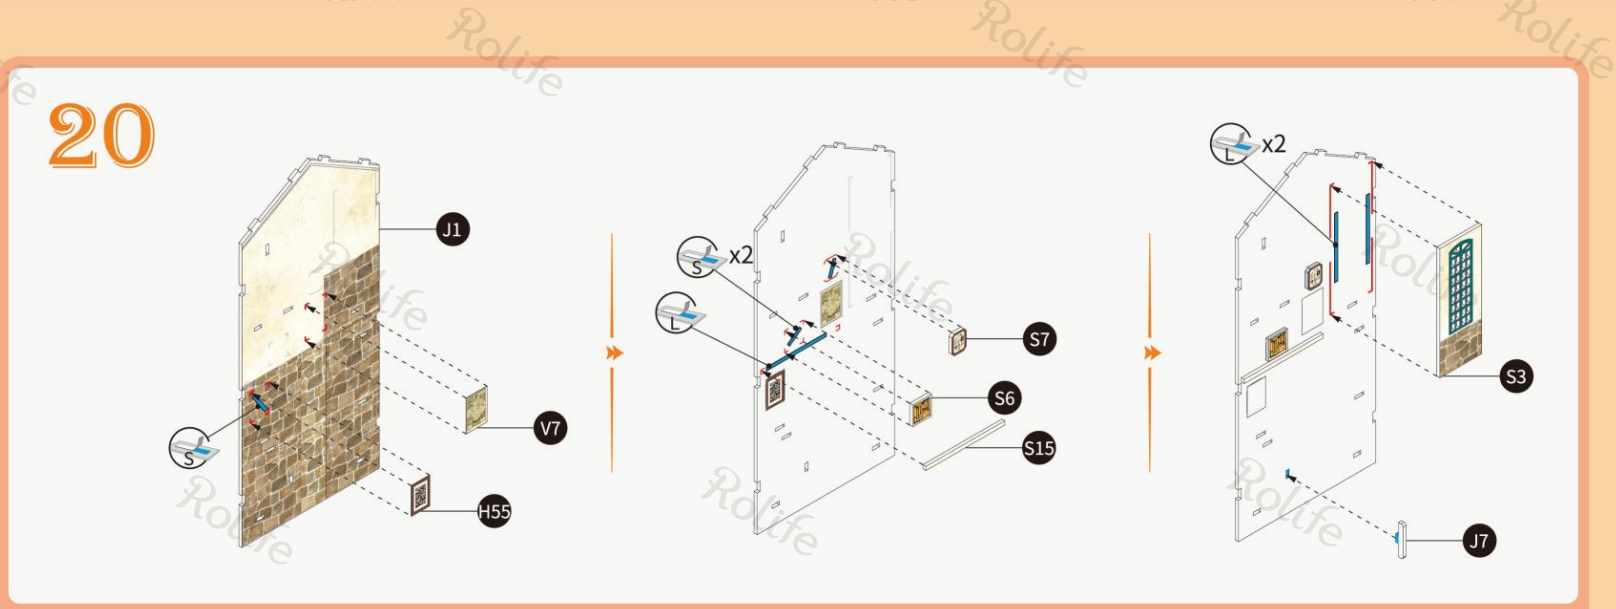

J1
S
V7
H55
x2
S7
S6
S15
x2
S3
J7

21

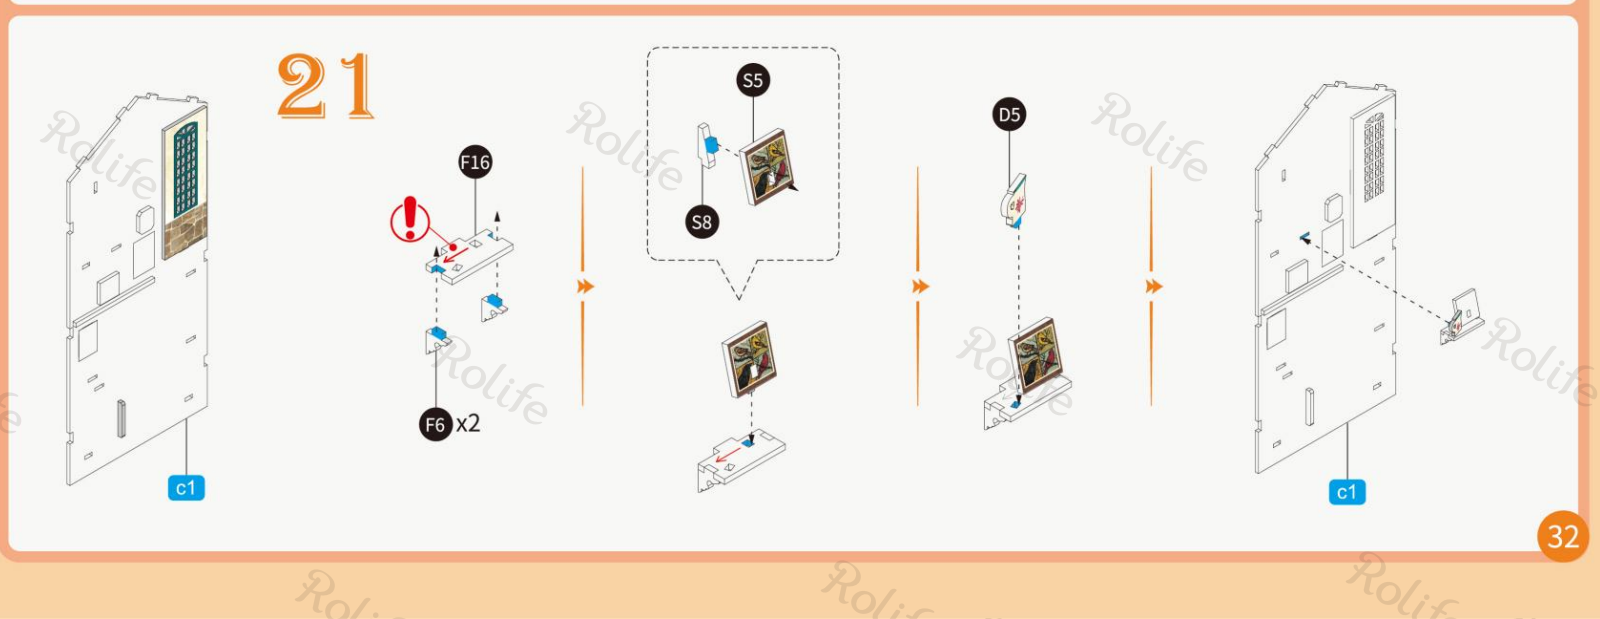

c1
F16
F6 x2
S5
S8
D5
c1

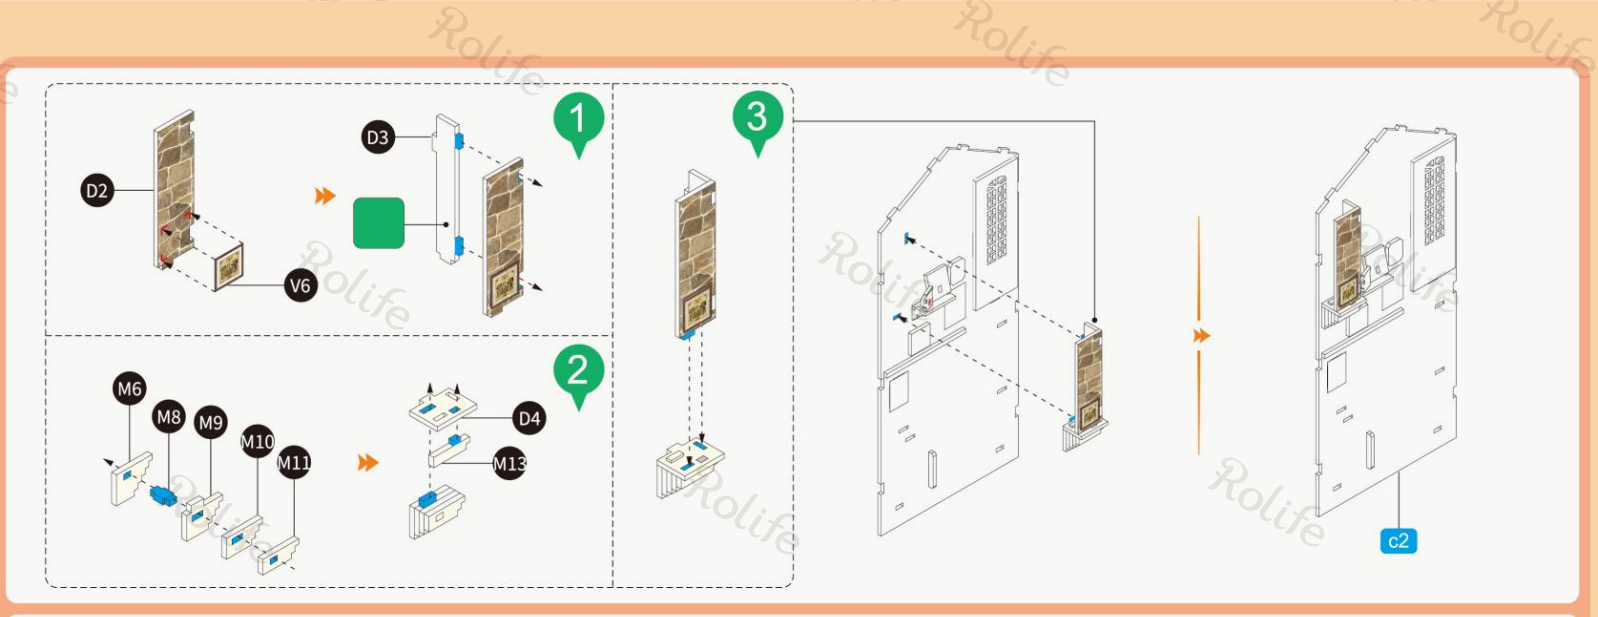

D2
V6
D3
1
3
M6
M8
M9
M10
M11
2
D4
M12
c2

Rolife

22

23

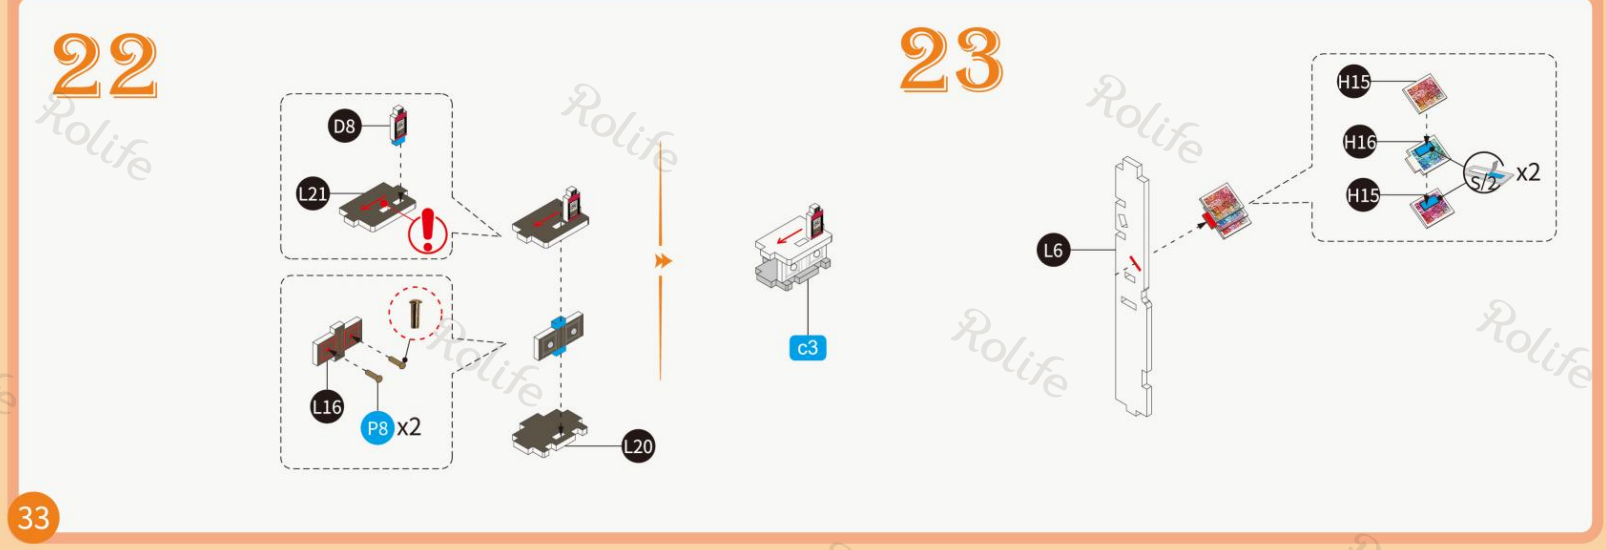
D8
L21
L16
P8 x2
L20
c3
L6
H15
H16
H15
x2

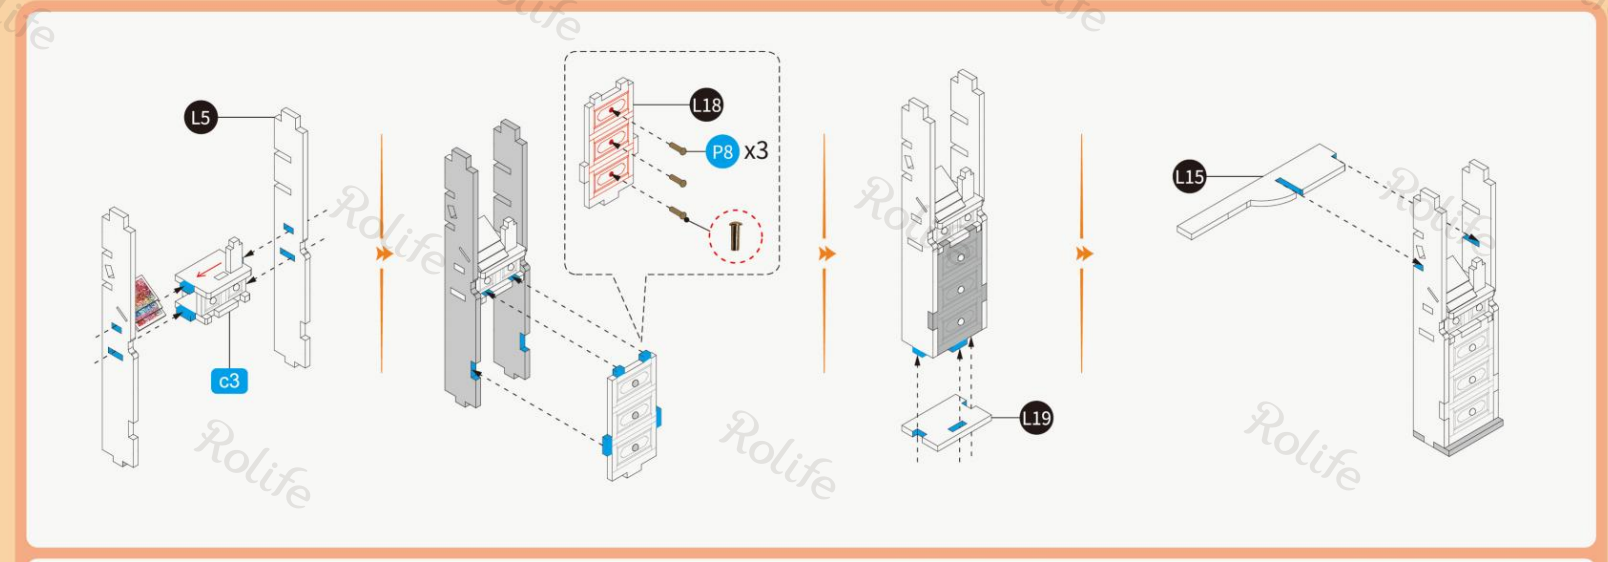
L5
c3
L18
P8 x3
L19
L15

24

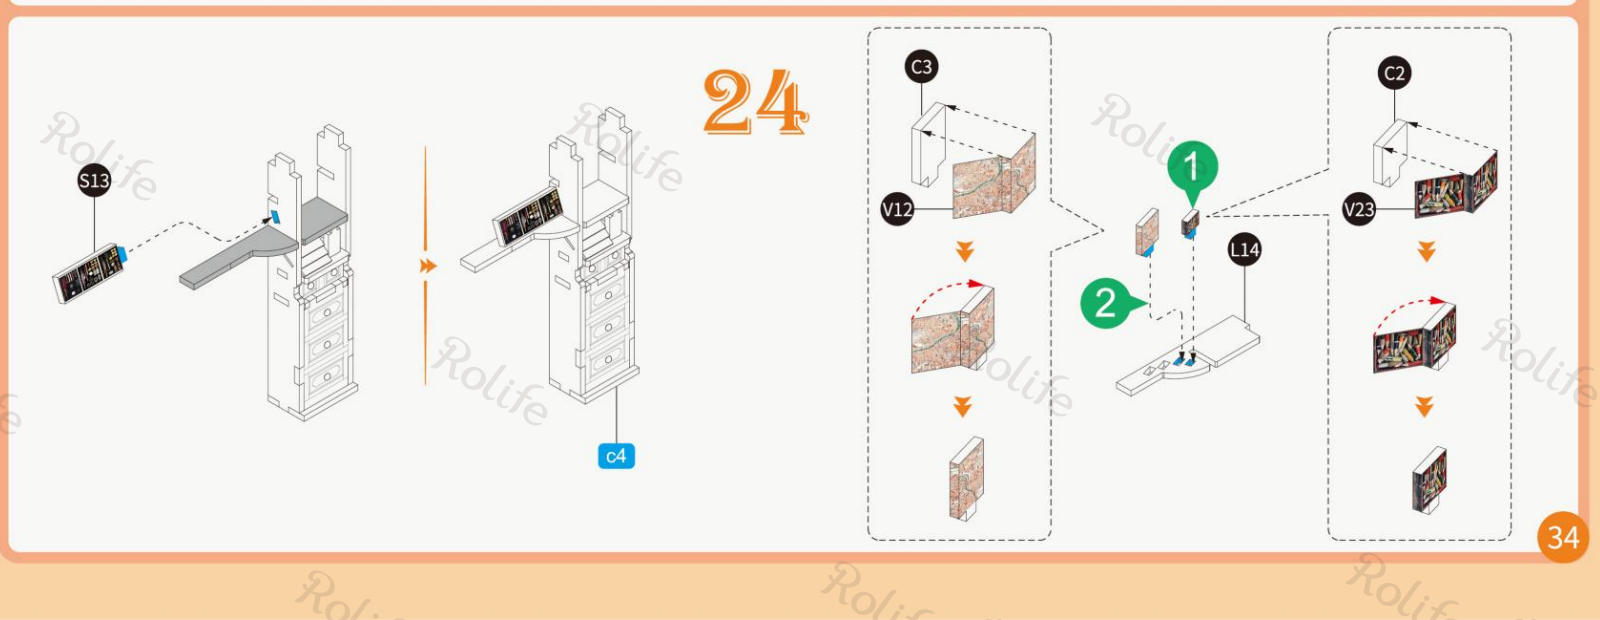
S13
c4
C3
V12
1
2
L14
C2
V23

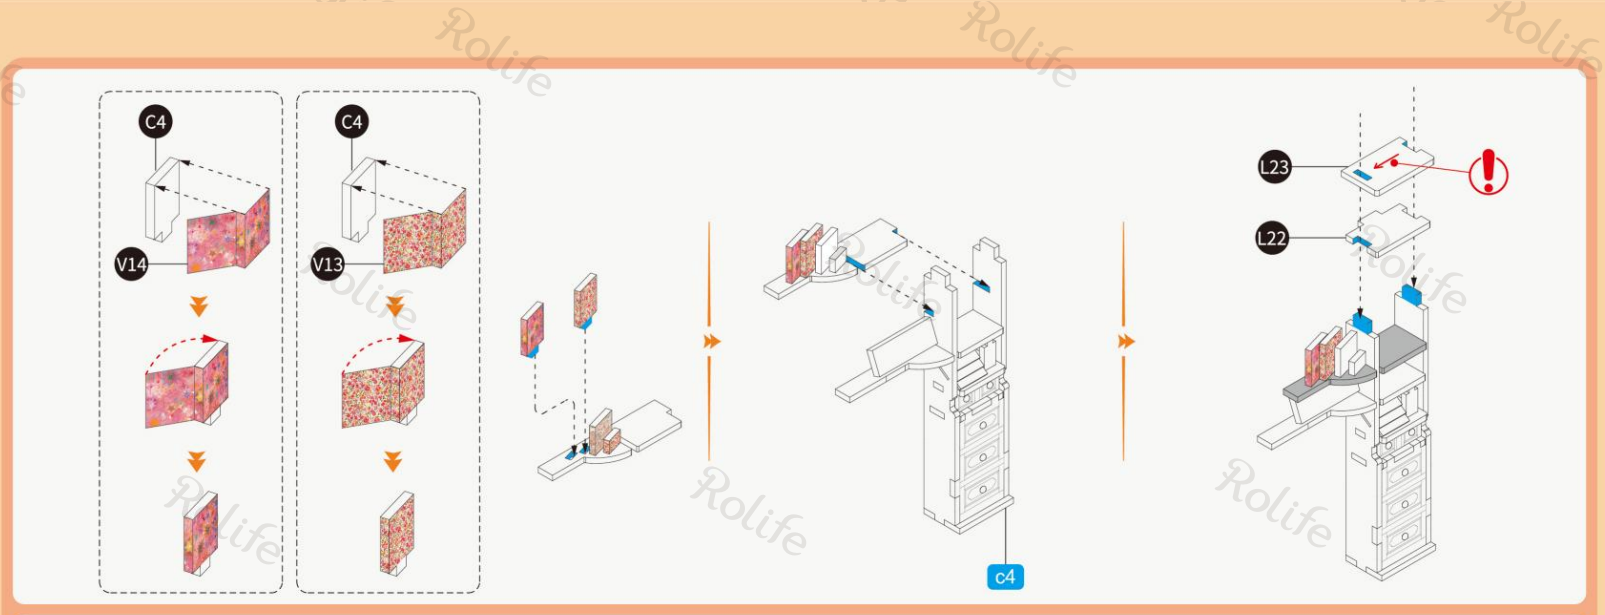
C4
V14
C4
V13
c4
L23
L22

25

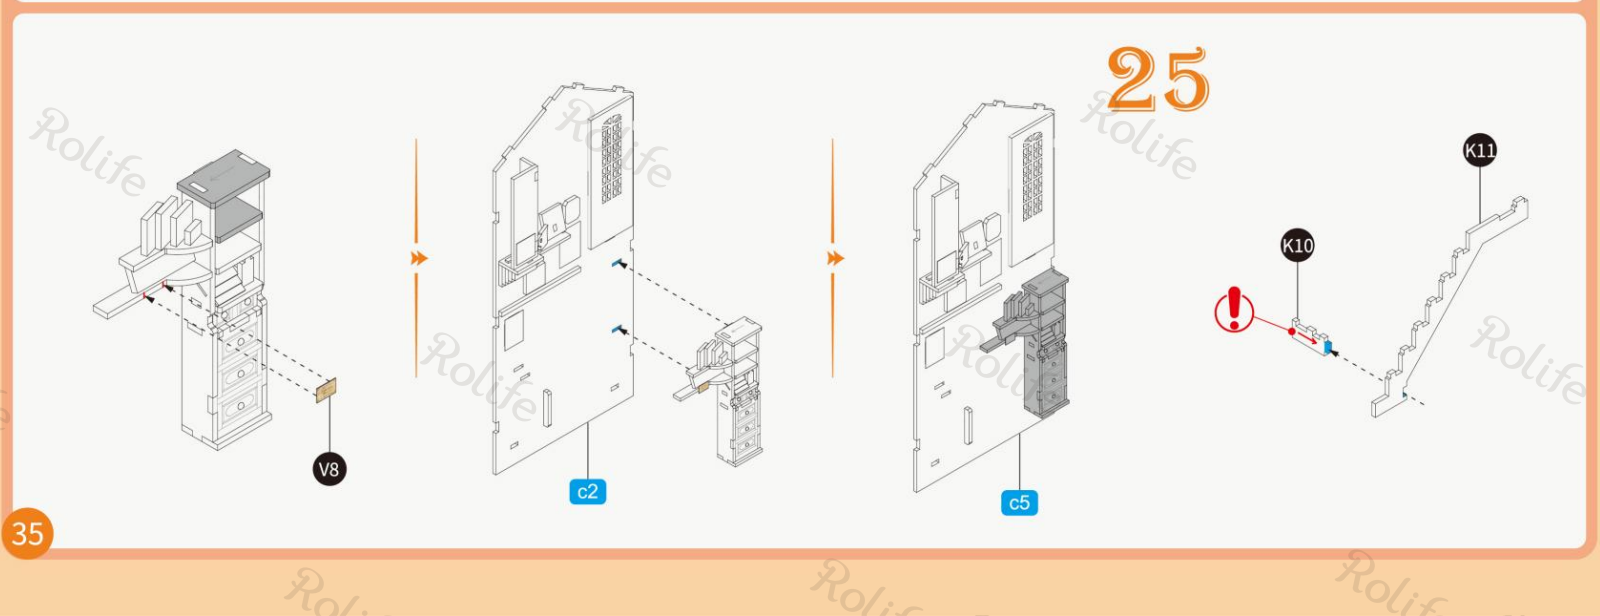
V8
c2
c5
K11
K10

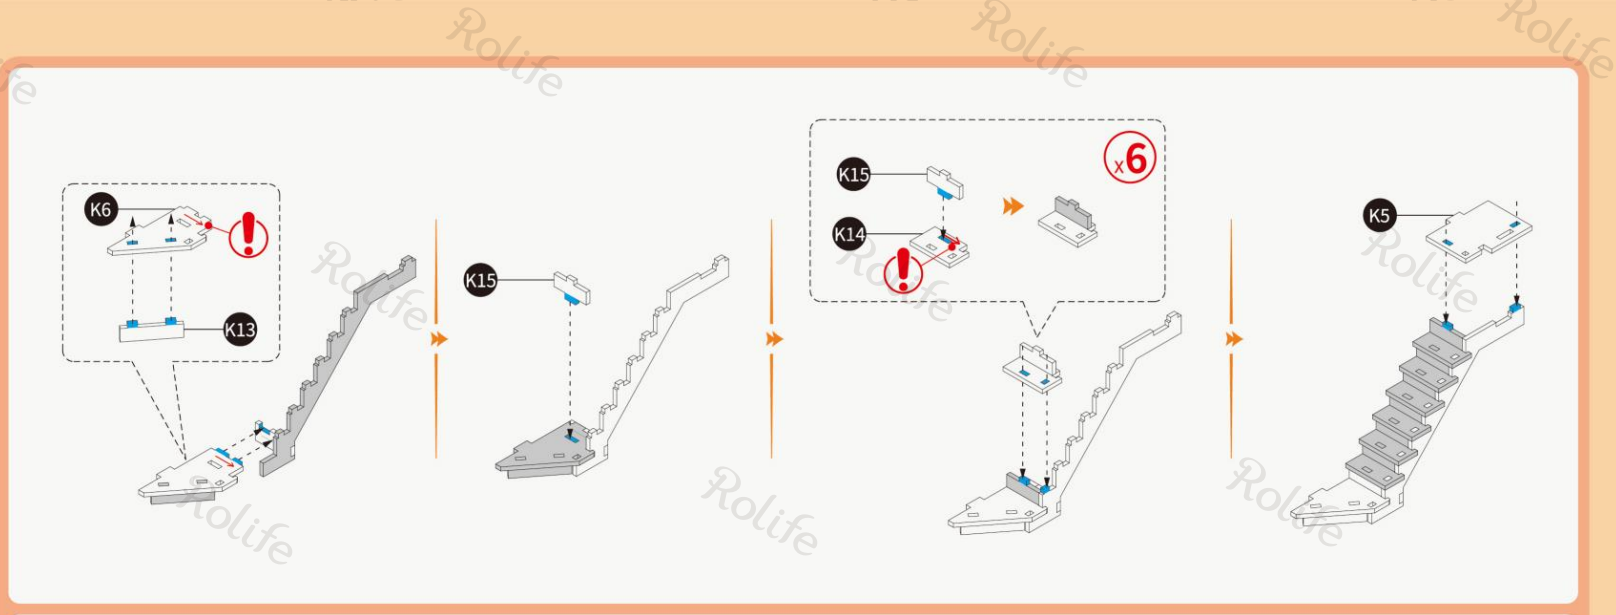
K6
K13
K15
K15
K14
x6
K5

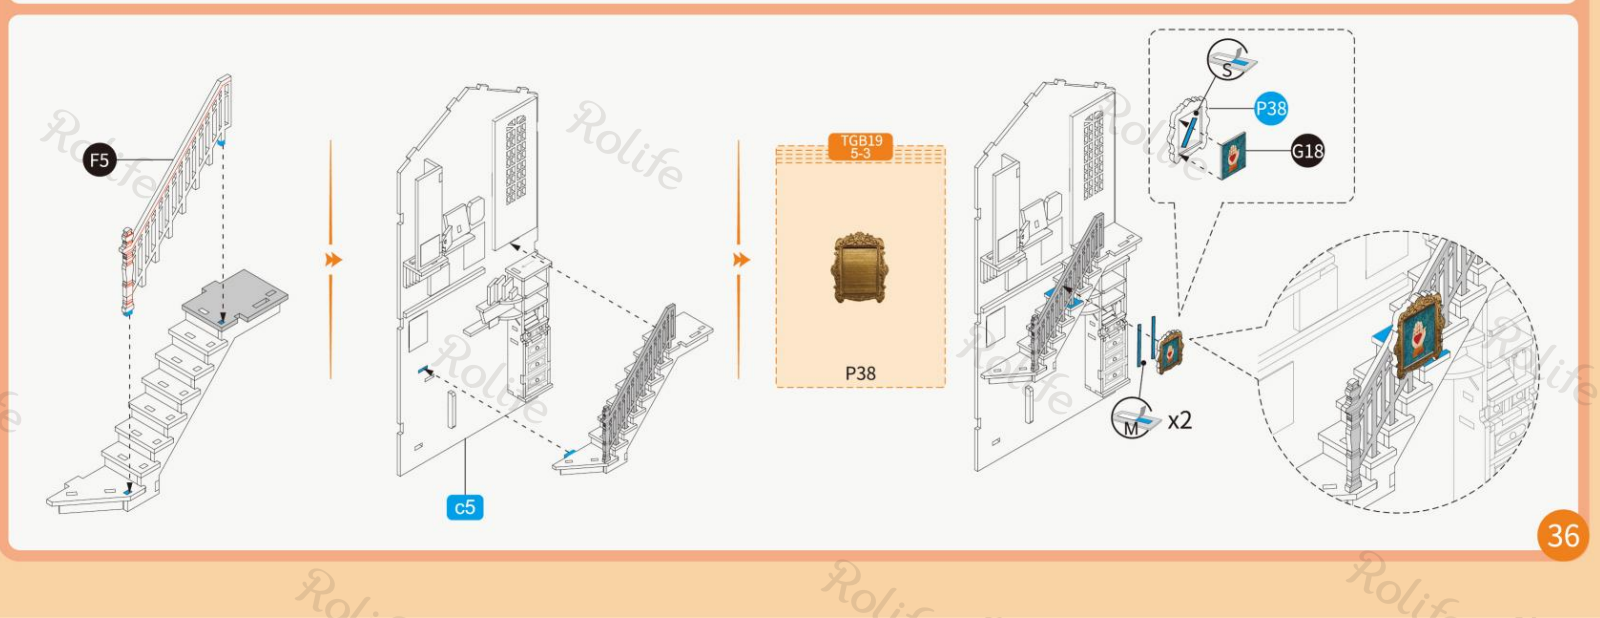
F5
c5
P38
P38
G18
x2

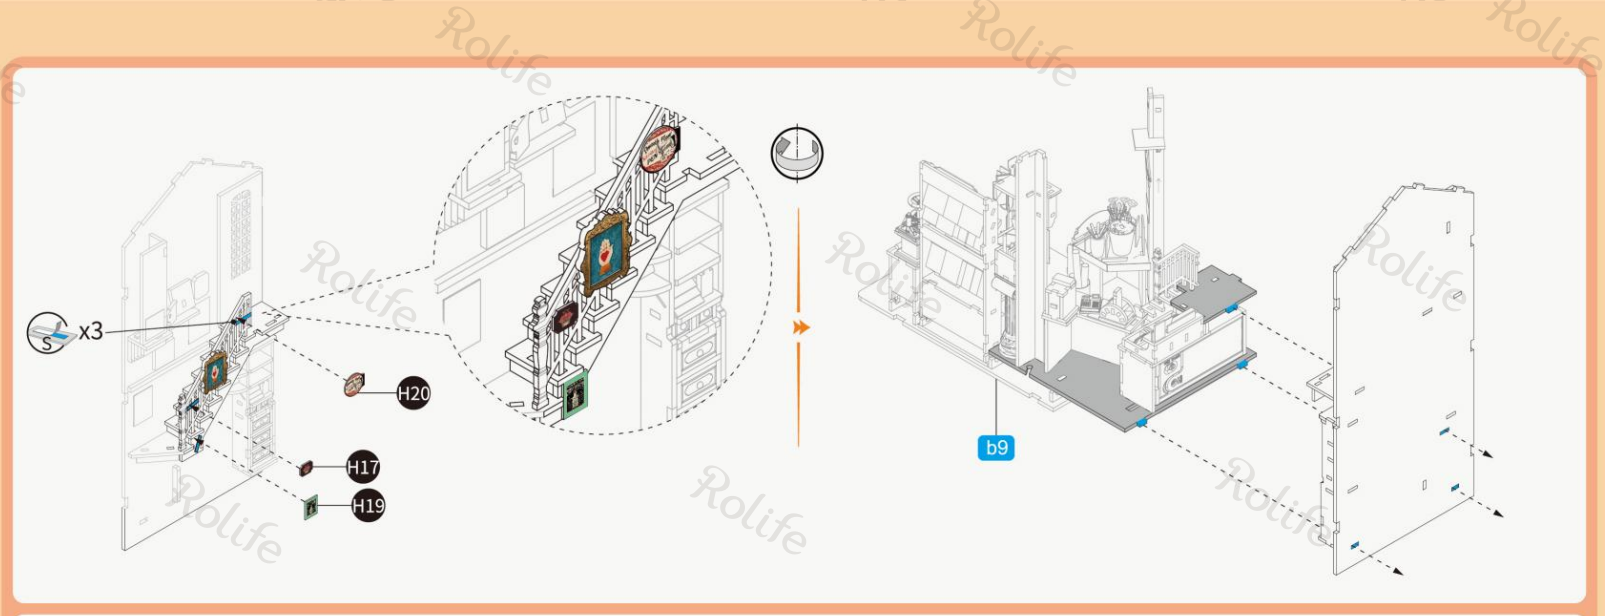
x3
H20
H17
H19
b9

26

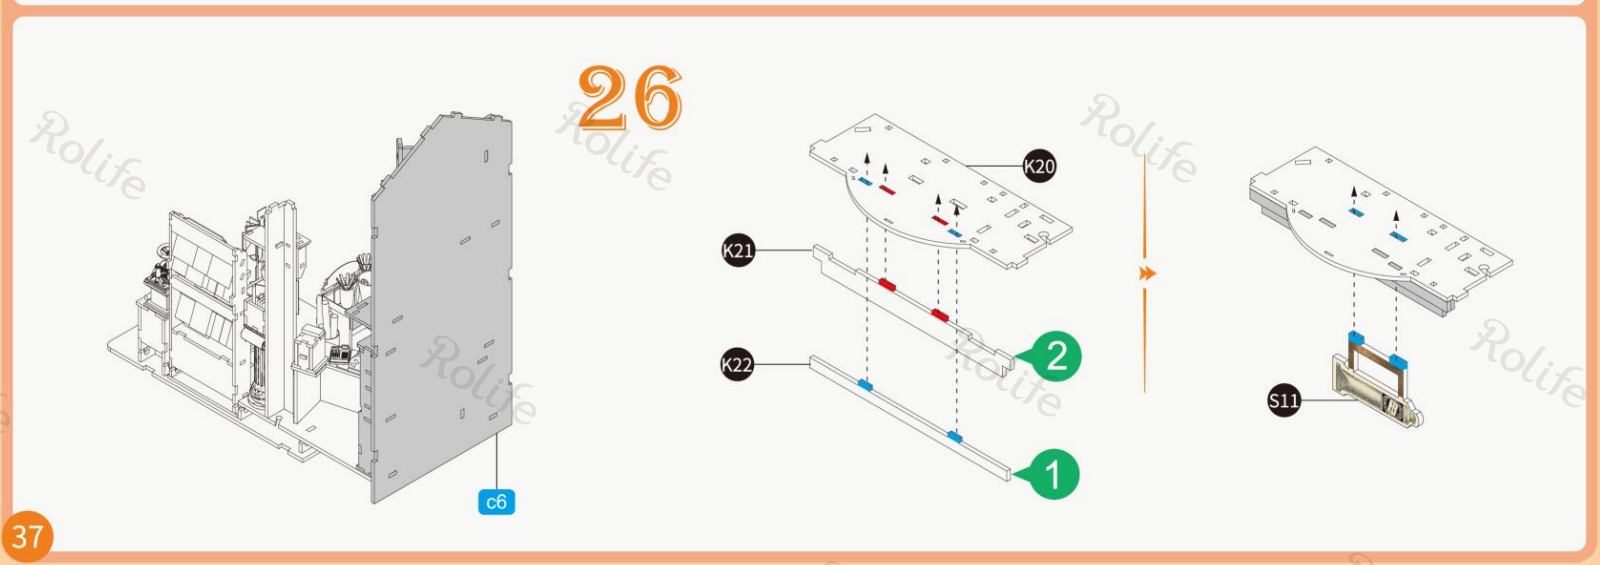
c6
K20
K21
2
K22
1
S11

27

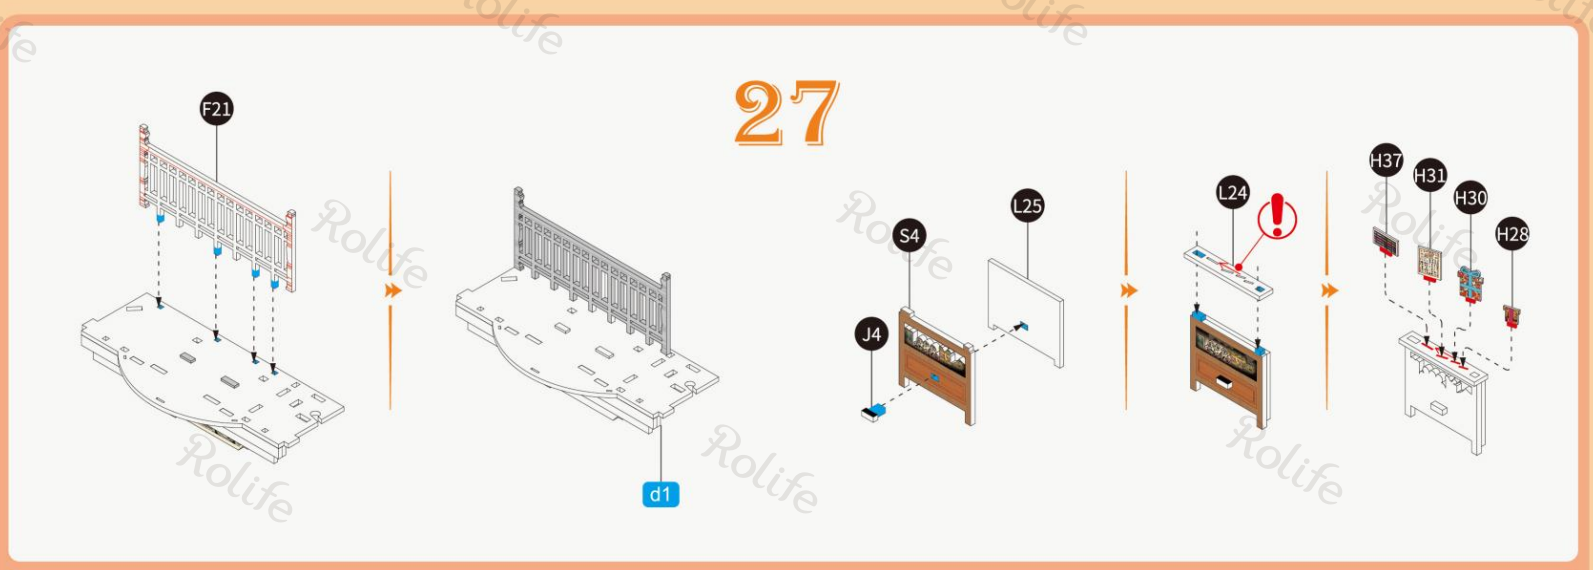
F21
d1
S4
L25
J4
L24
H37
H31
H30
H28

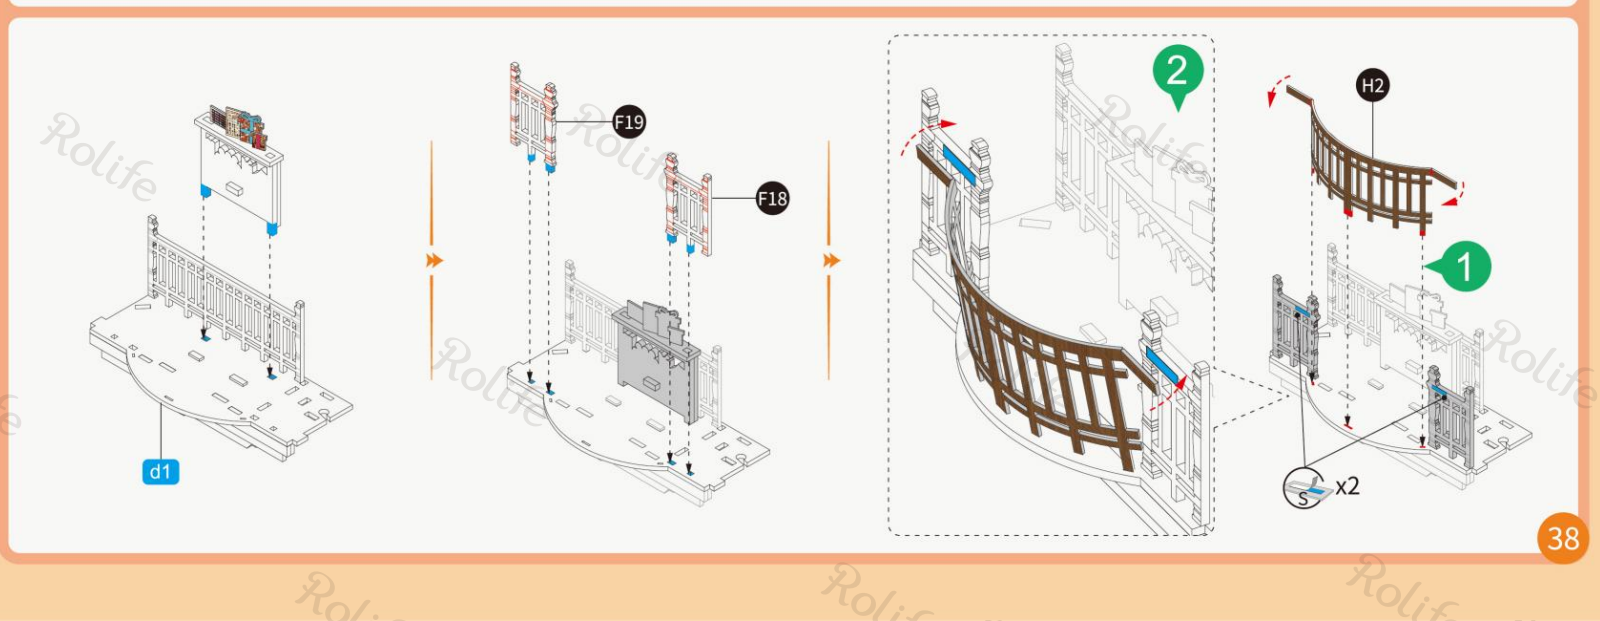
d1
F19
F18
2
H2
1
x2

28

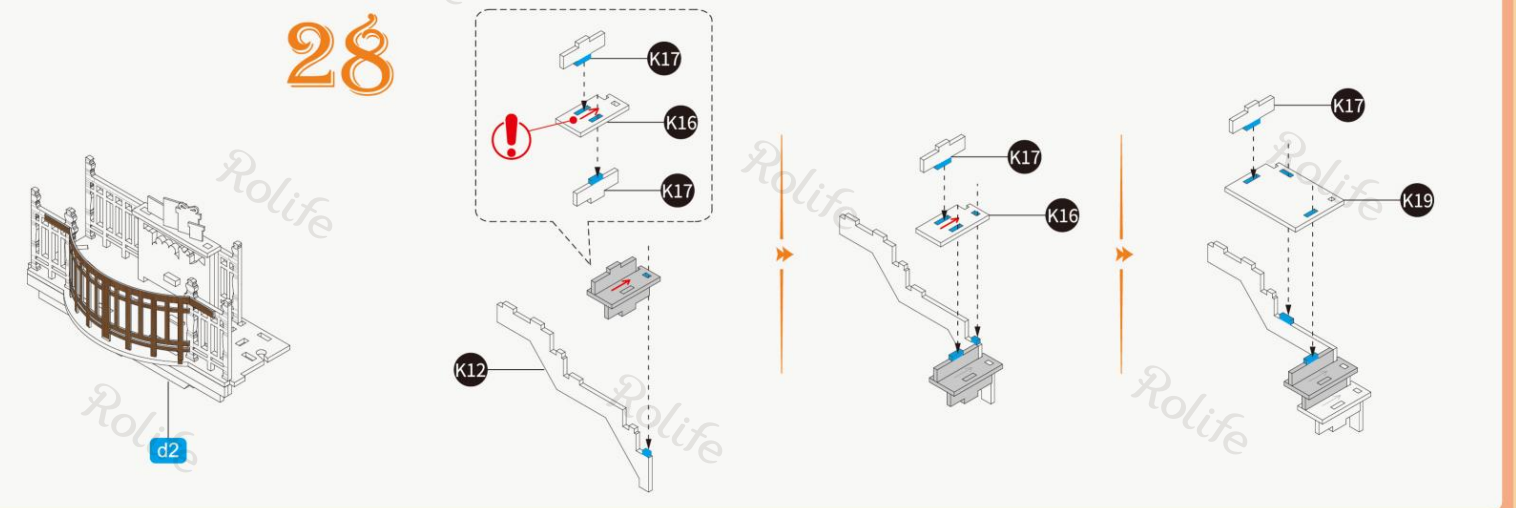
K17
K16
K17
K12
d2
K17
K16
K17
K19

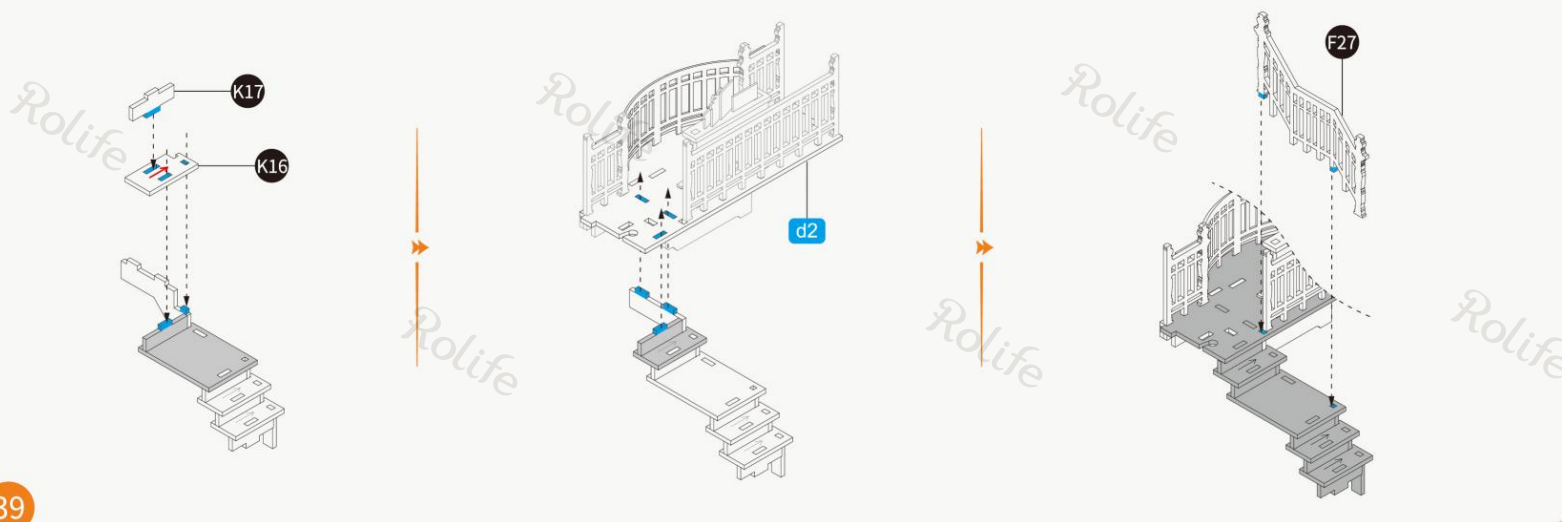
K17
K16
d2
F27

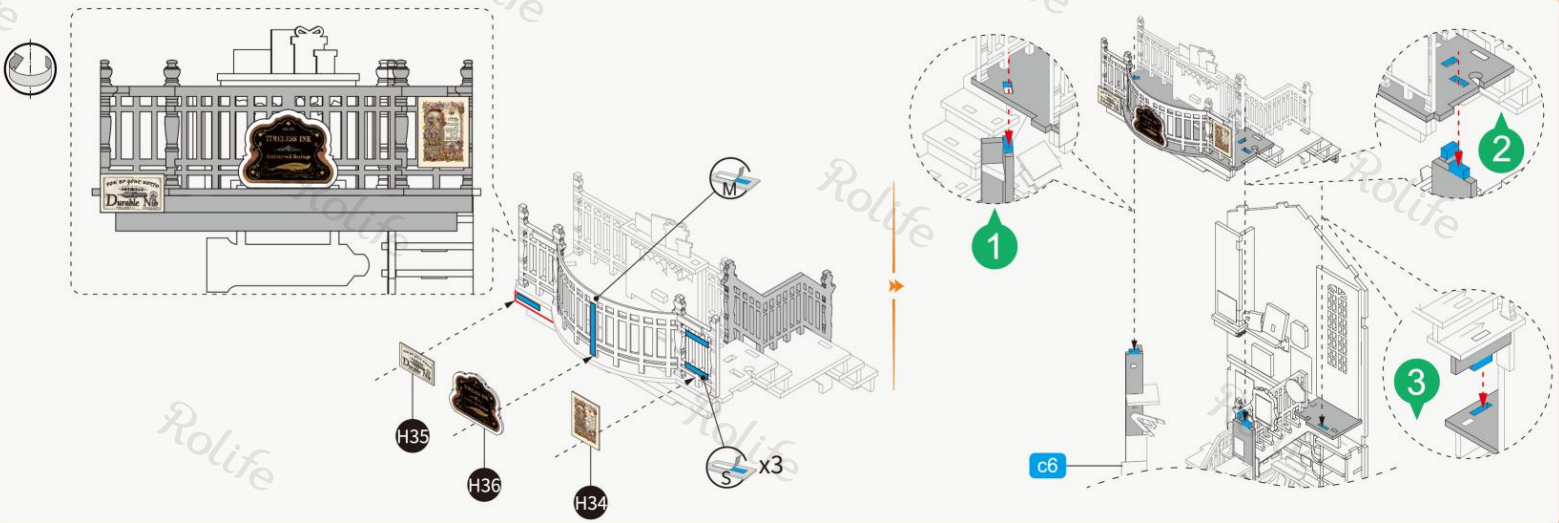
M
H35
H36
H34
S x3
1
2
3
c6

29

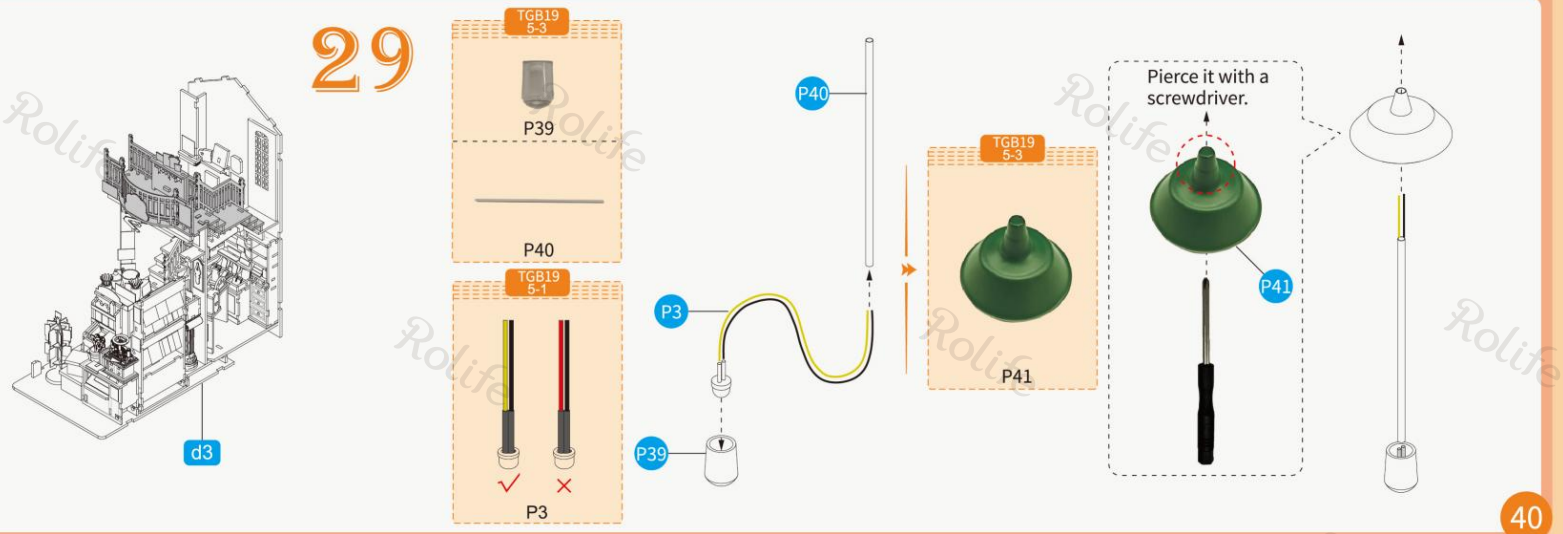
d3
TGB19 5-3
P39
P40
TGB19 5-1
P3
P40
P3
P39
TGB19 5-3
P41
P41

Pierce it with a screwdriver.

30

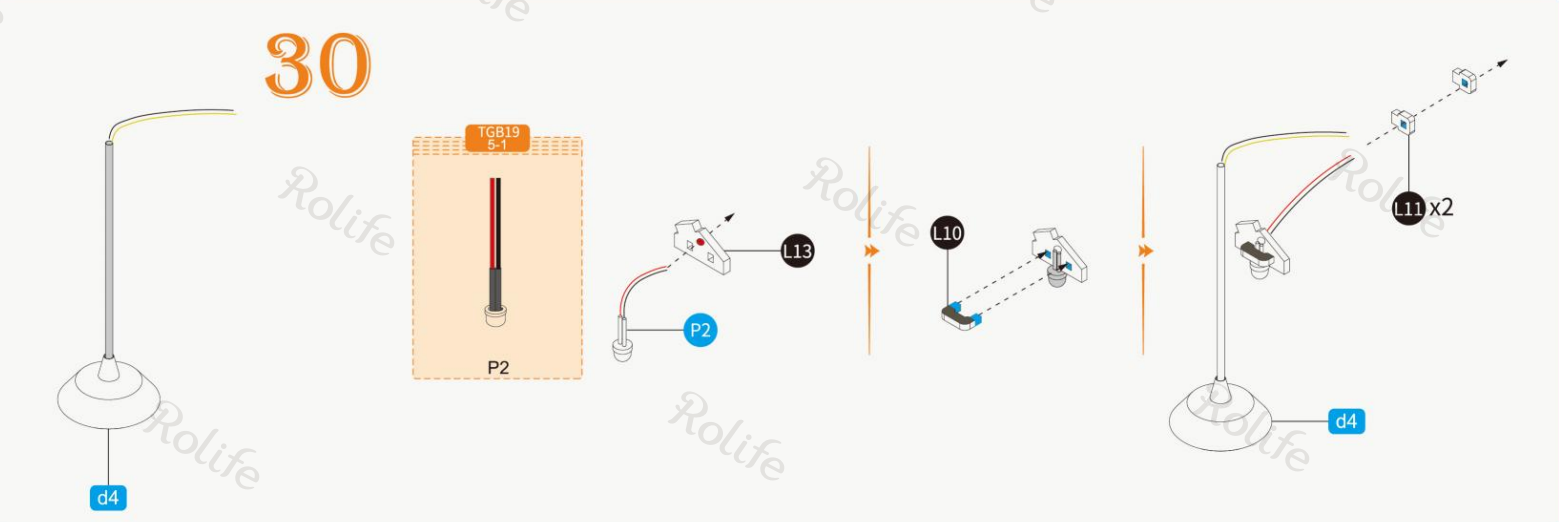
d4
TGB19 5-1
P2
L13
P2
L10
L11 x2
d4

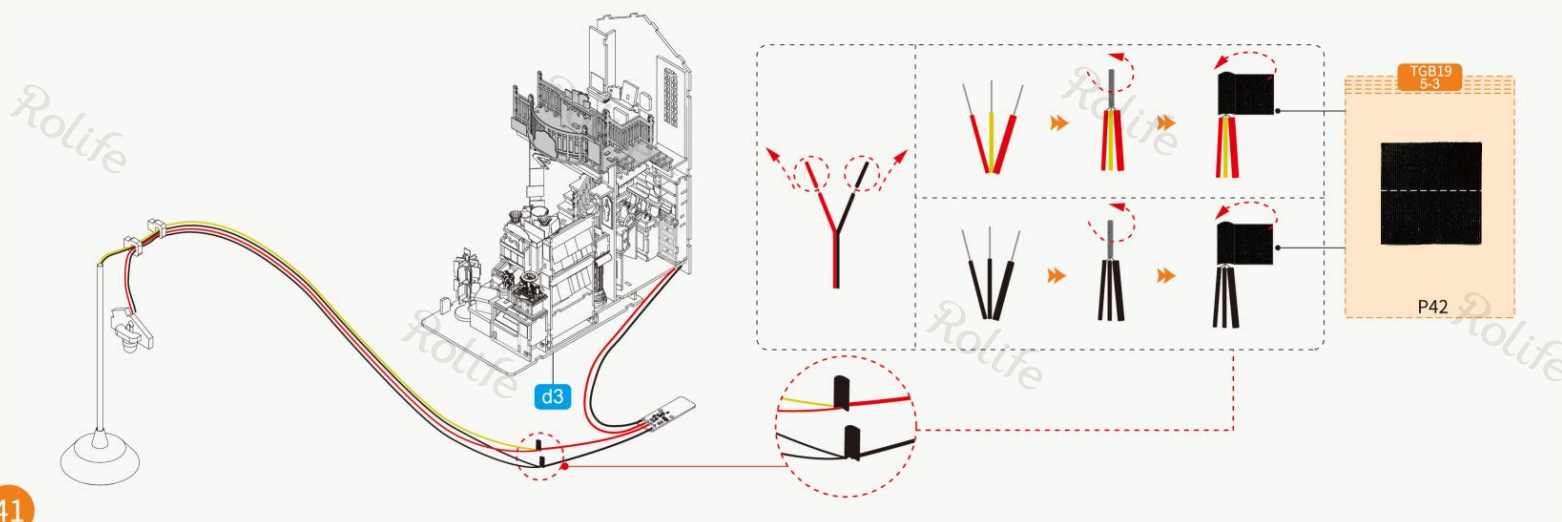
d3
TGB19 5-3
P42

Rolife

31

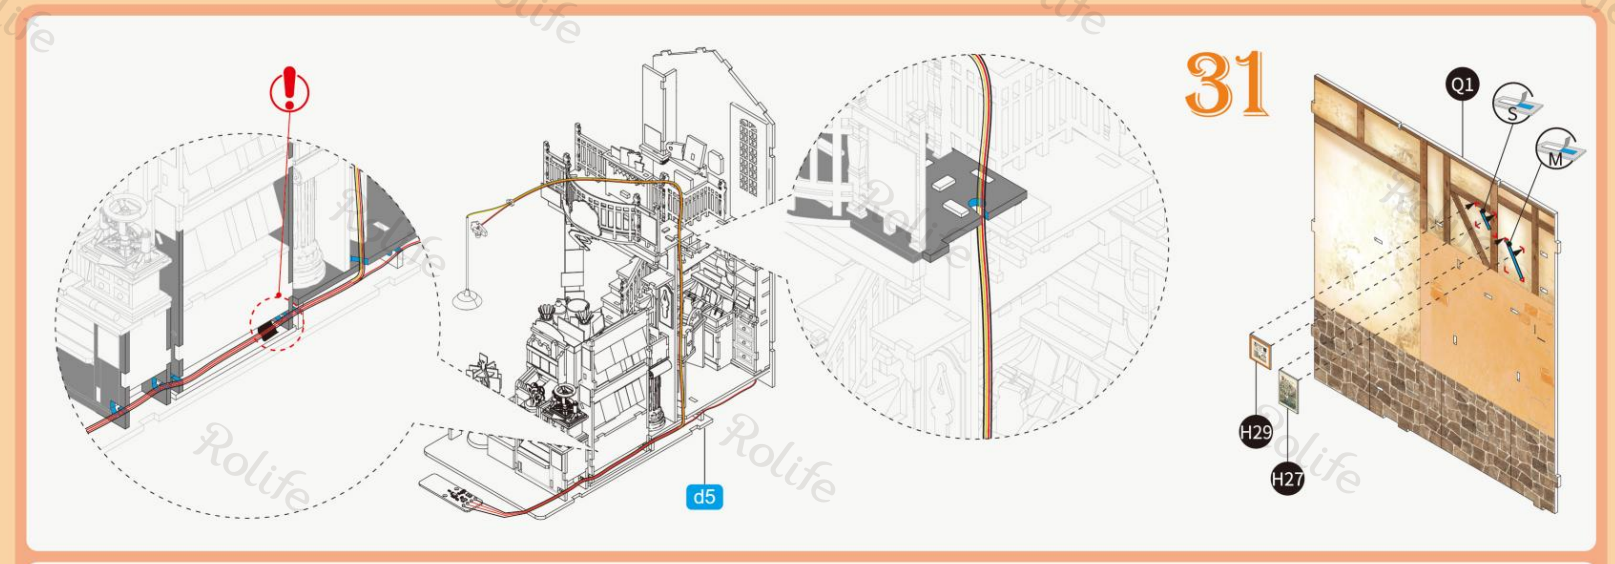

d5
Q1
L
M
H29
H27

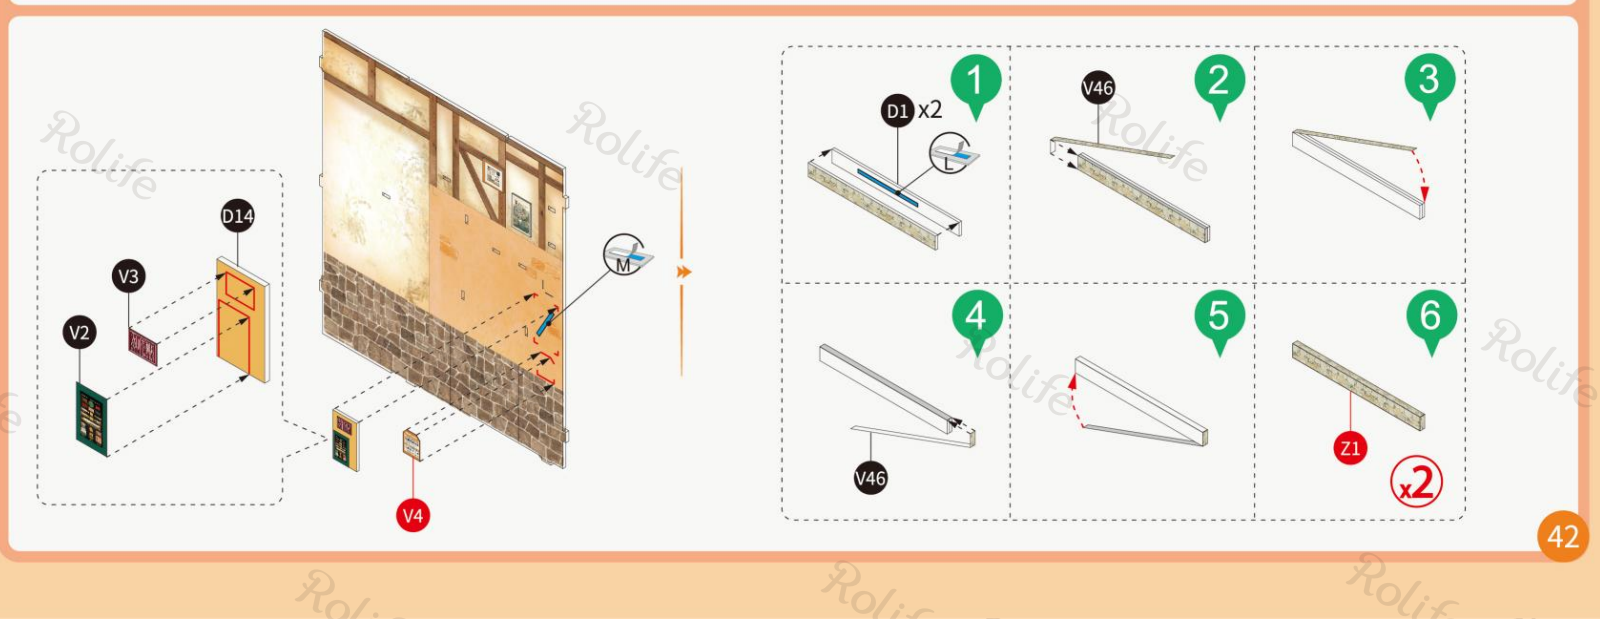

D14
V3
V2
V4
M
D1 x2
V46
1
2
3
4
5
6
Z1
x2

32

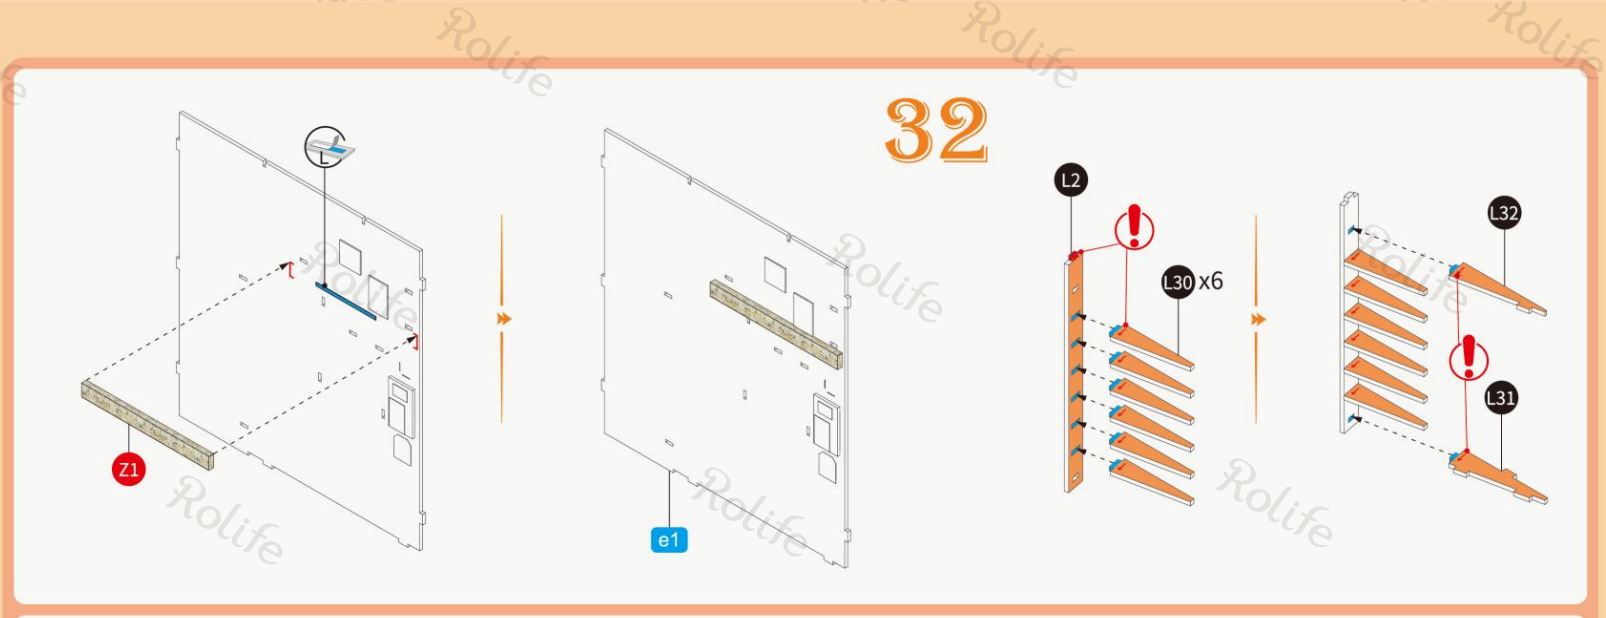

Z1
e1
L2
L30 x6
L32
L31

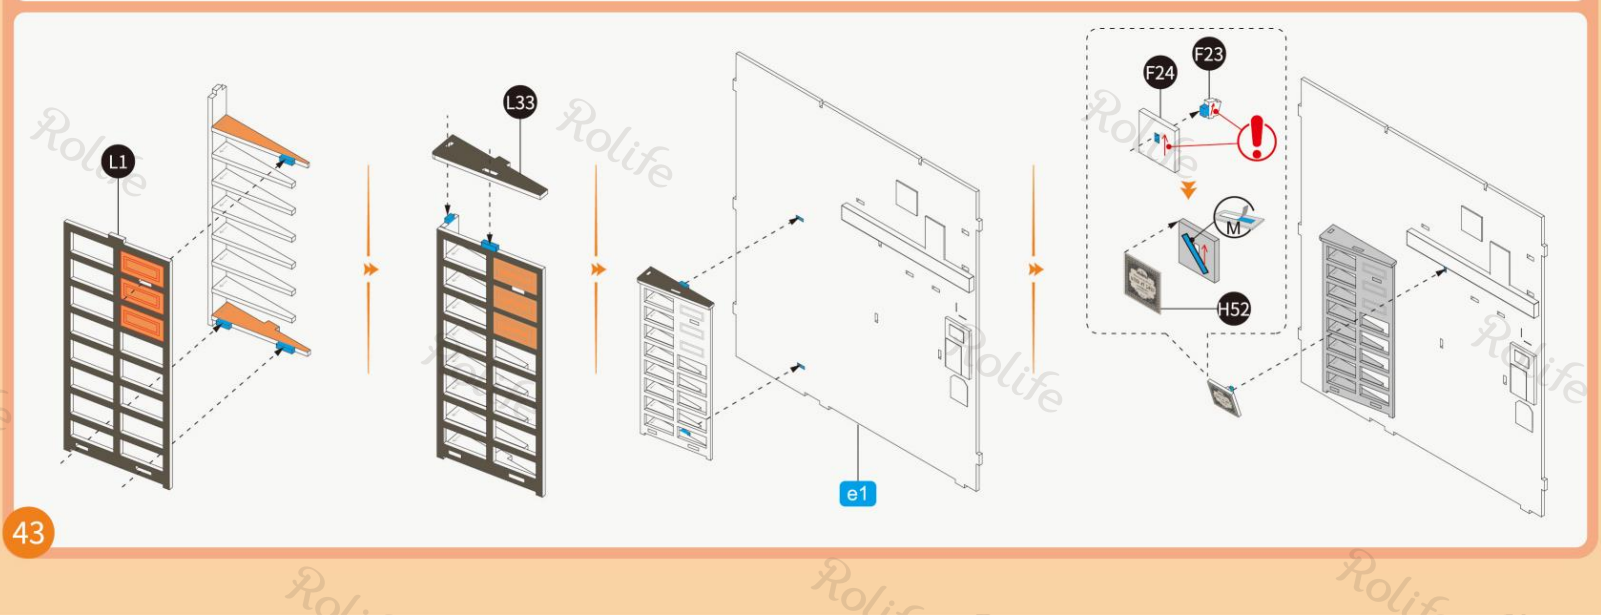

L1
L33
e1
F24
F23
M
H52

33

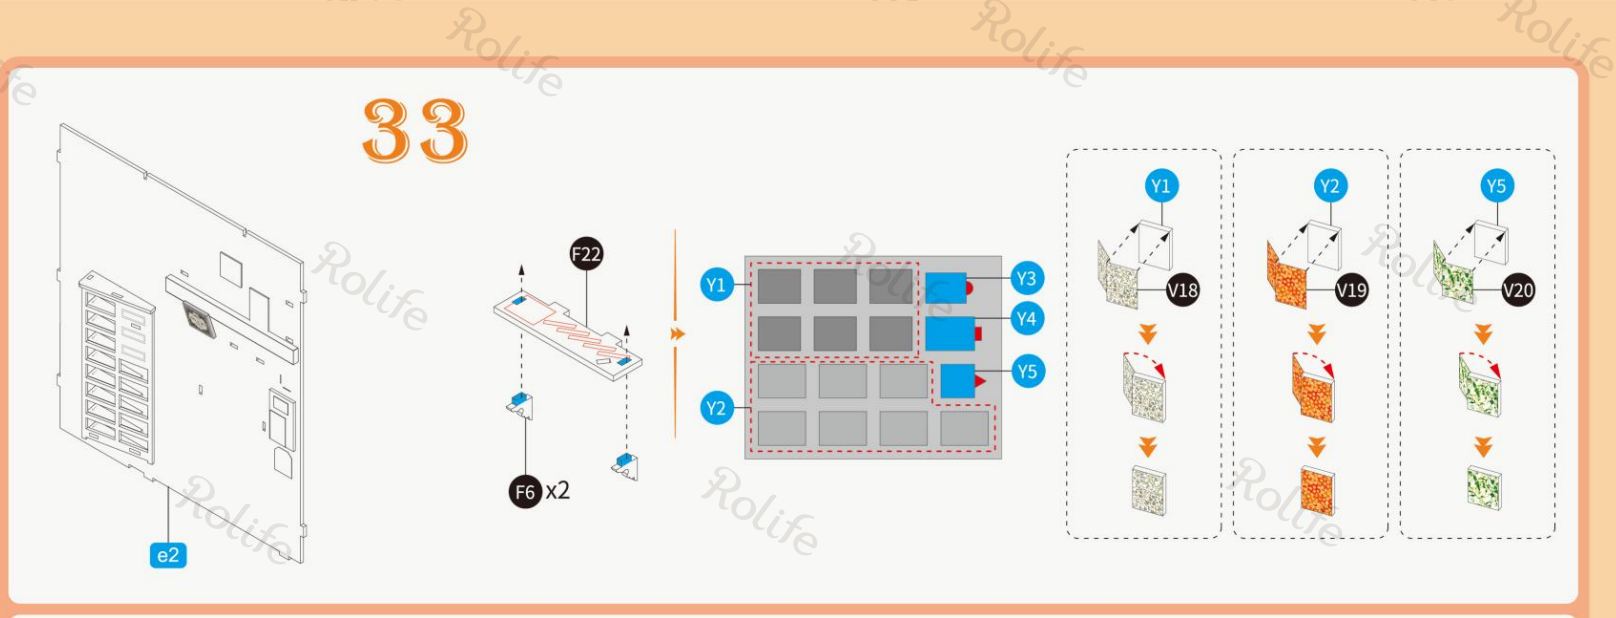

e2
F22
F6 x2
Y1
Y2
Y3
Y4
Y5
V18
V19
V20

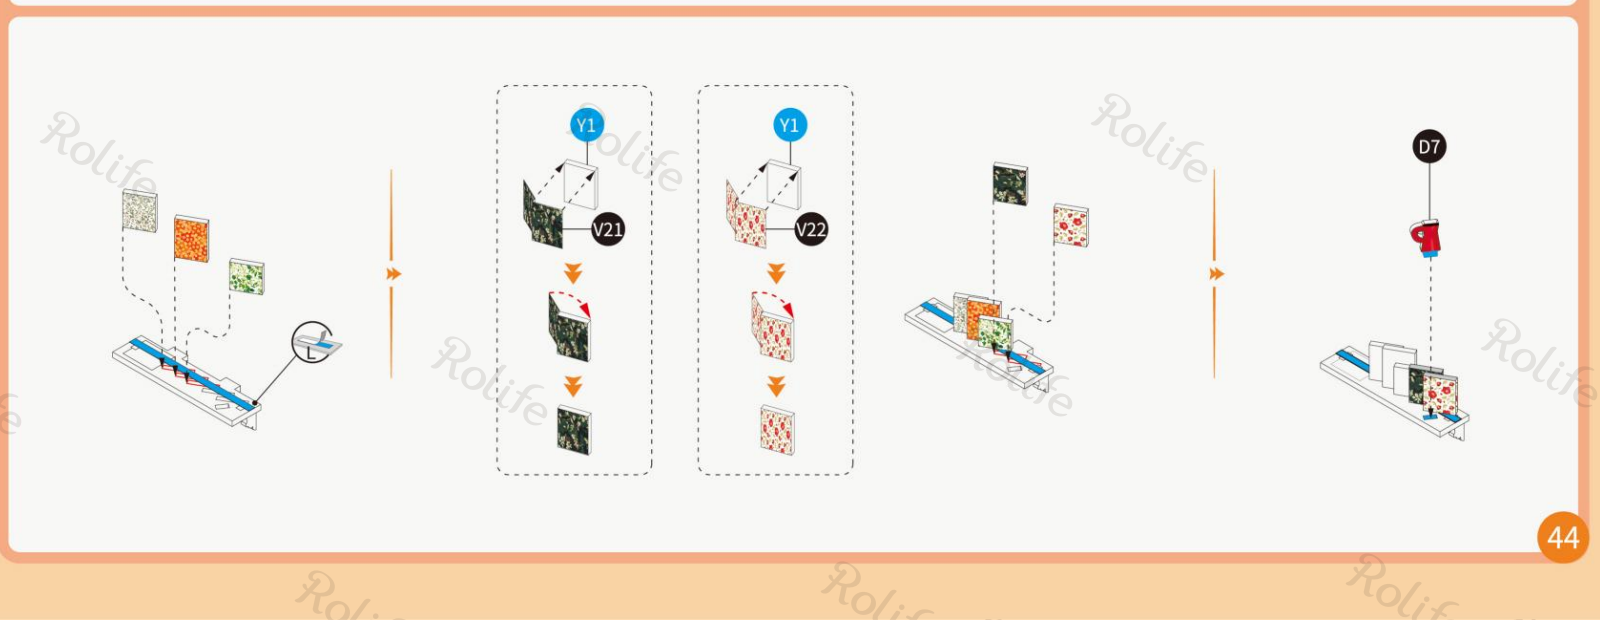

Y1
V21
Y1
V22
D7

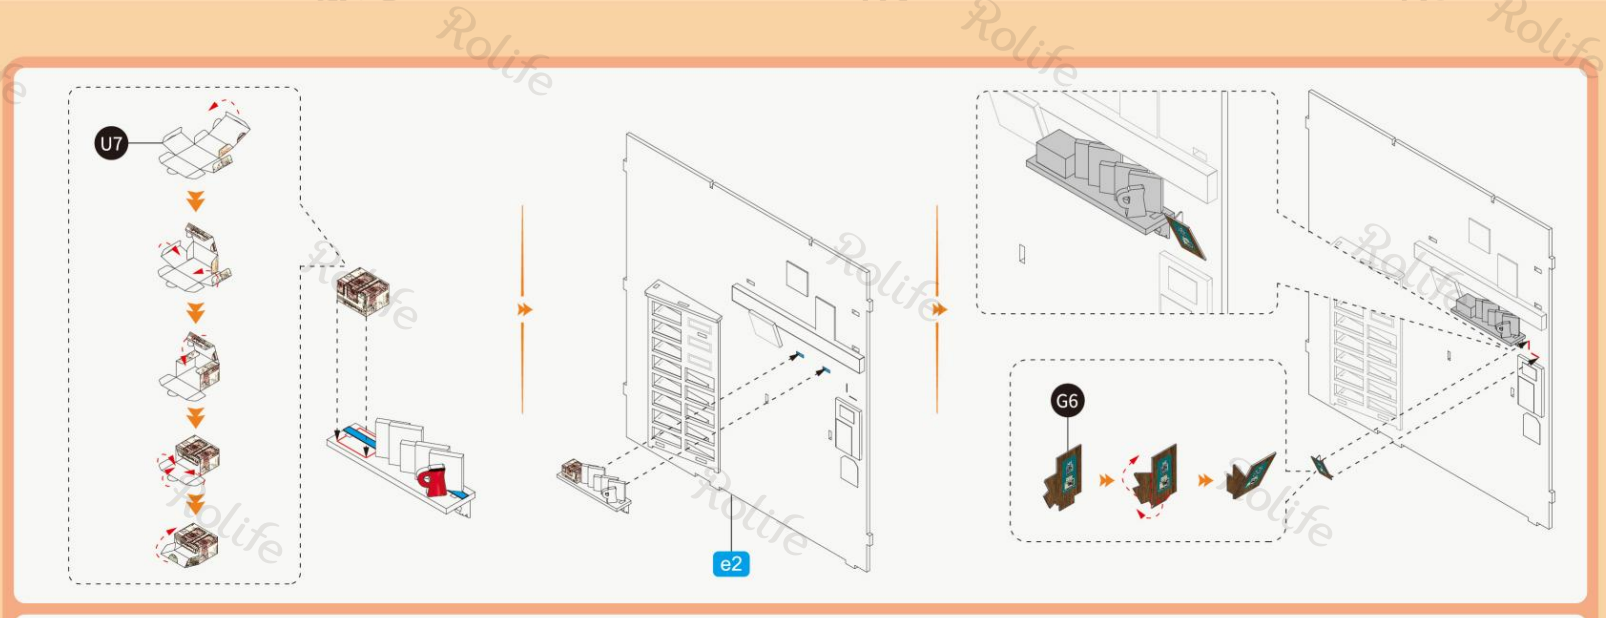

34

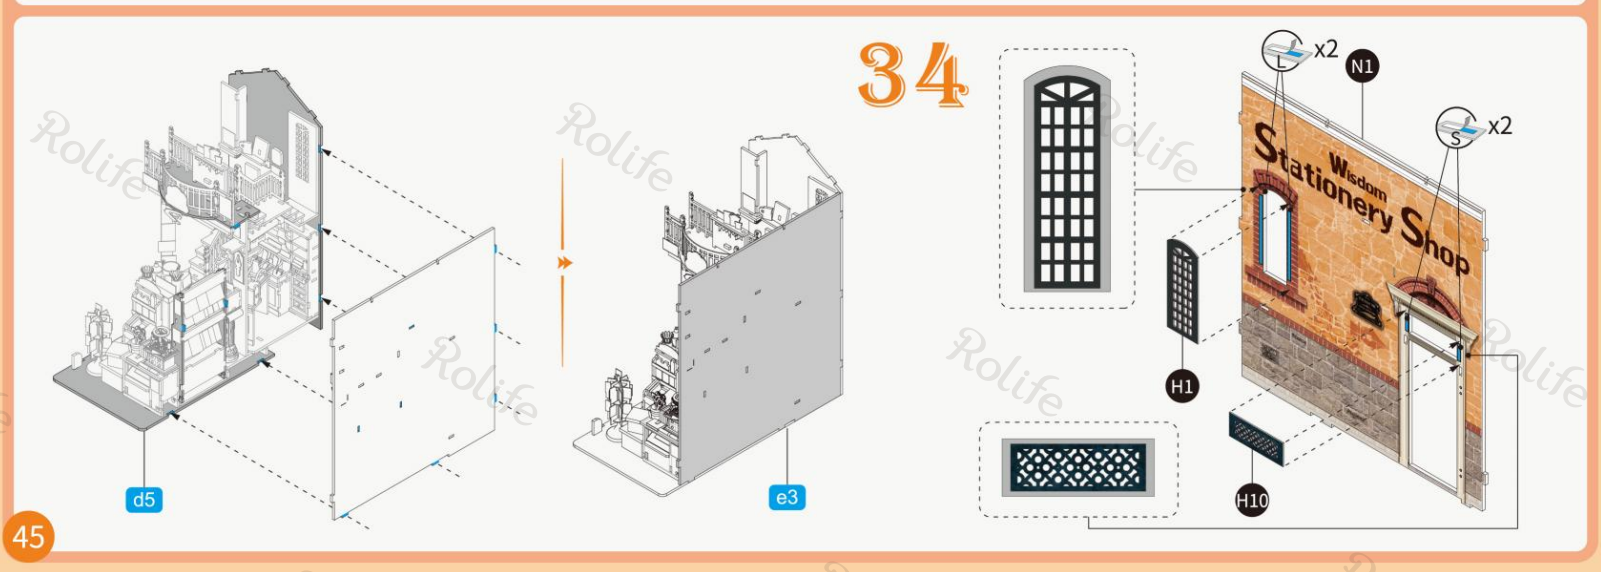

d5
e3
x2
N1
x2
Wisdom Stationery Shop
H1
H10

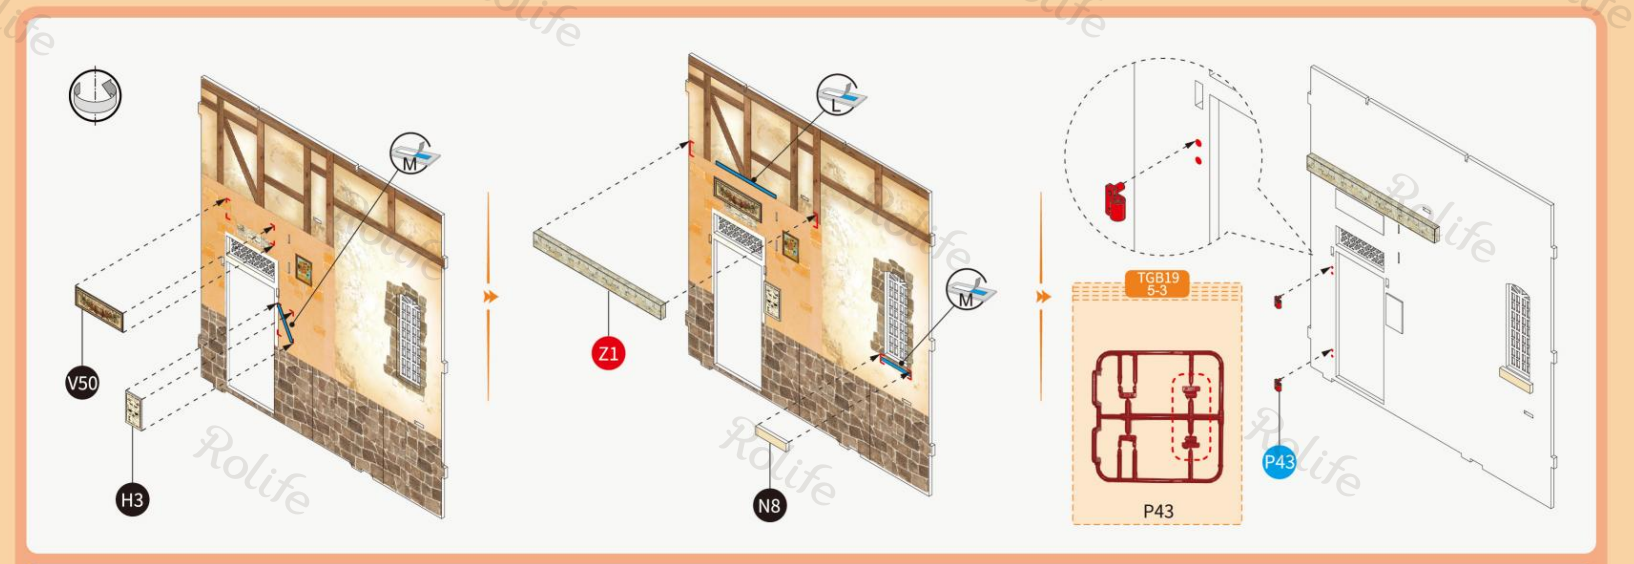

V50
H3
M
Z1
N8
M
P43
P43

35

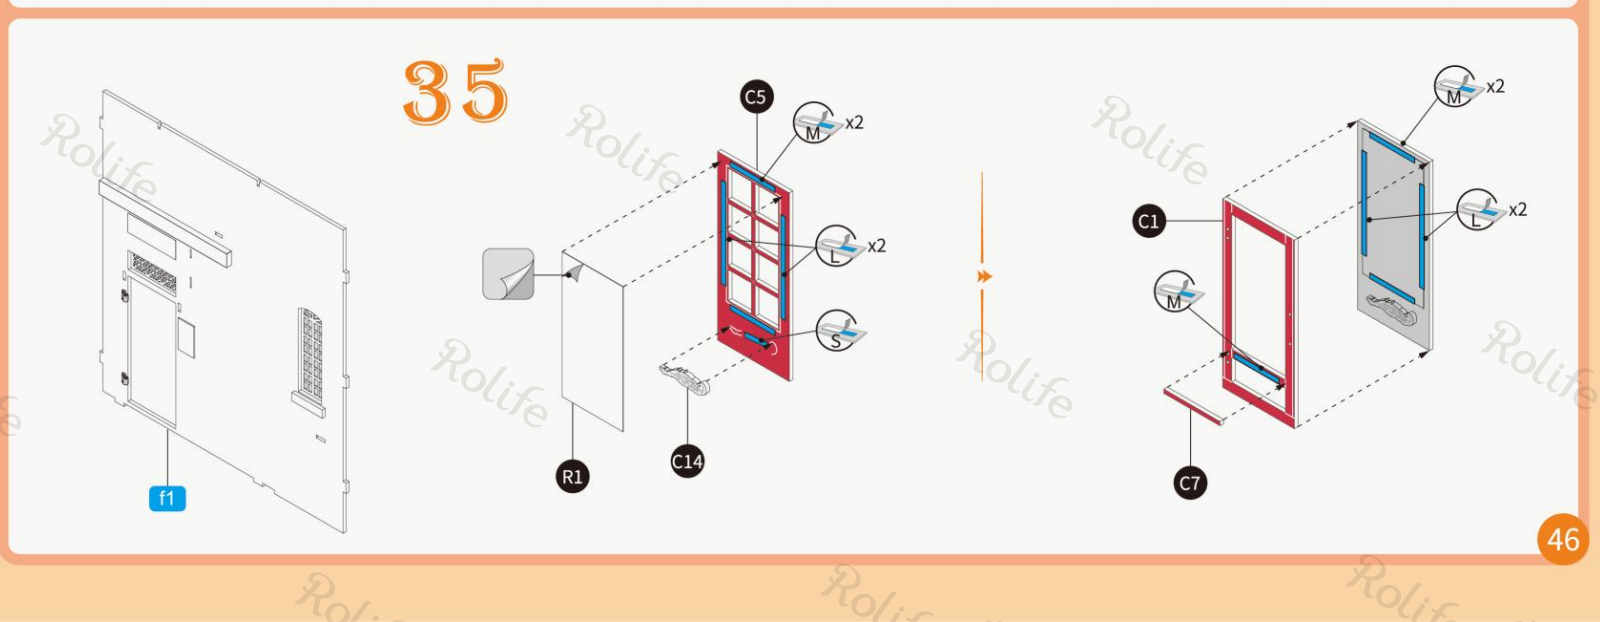

f1
C5
x2
x2
R1
C14
x2
x2
C1
M
C7

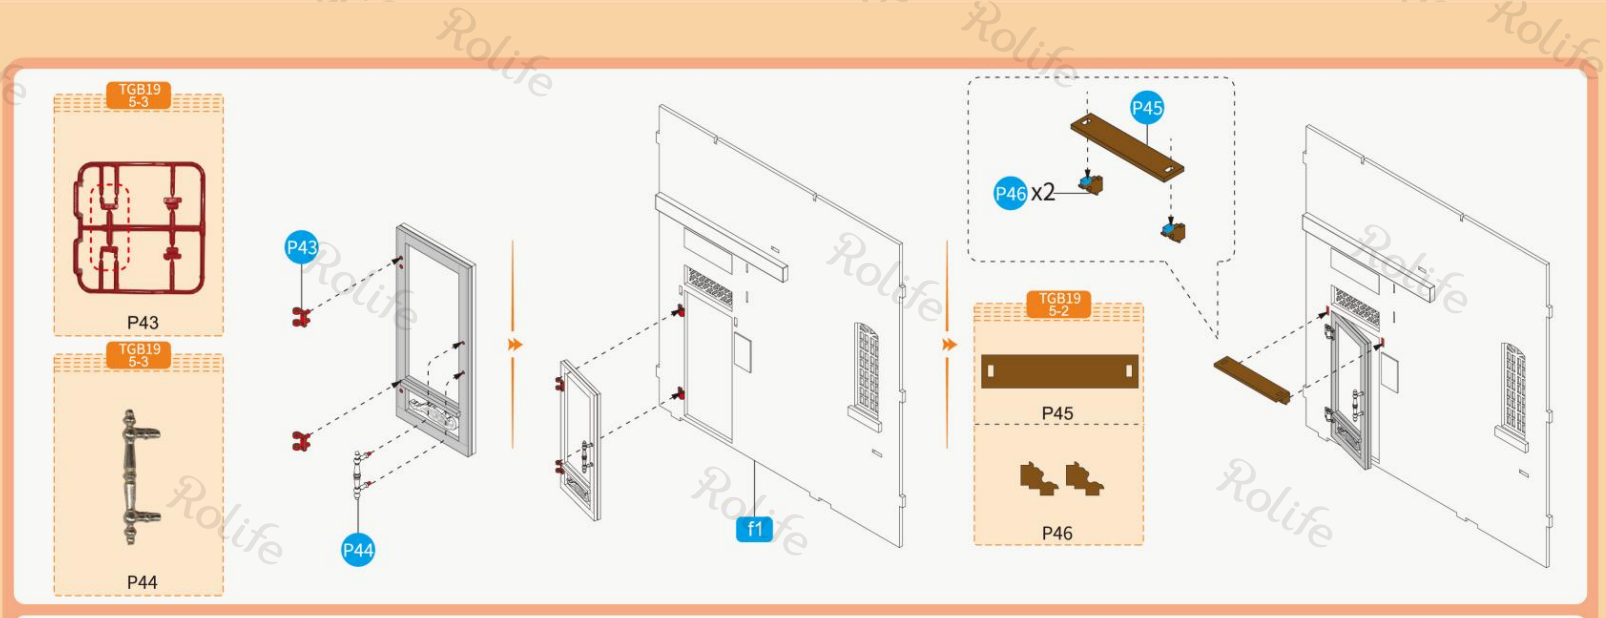

P43
P44
P43
P44
f1
P45
P46 x2
P45
P46

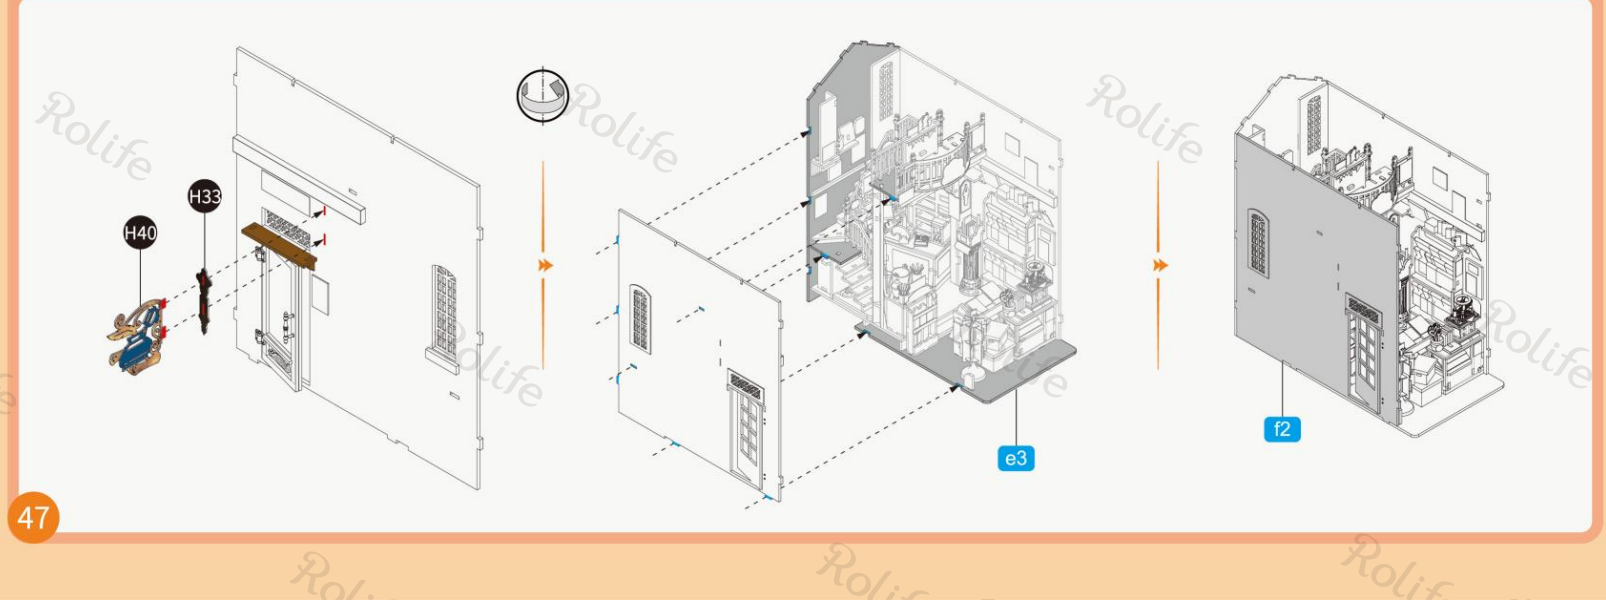
H40
H33
e3
f2

36

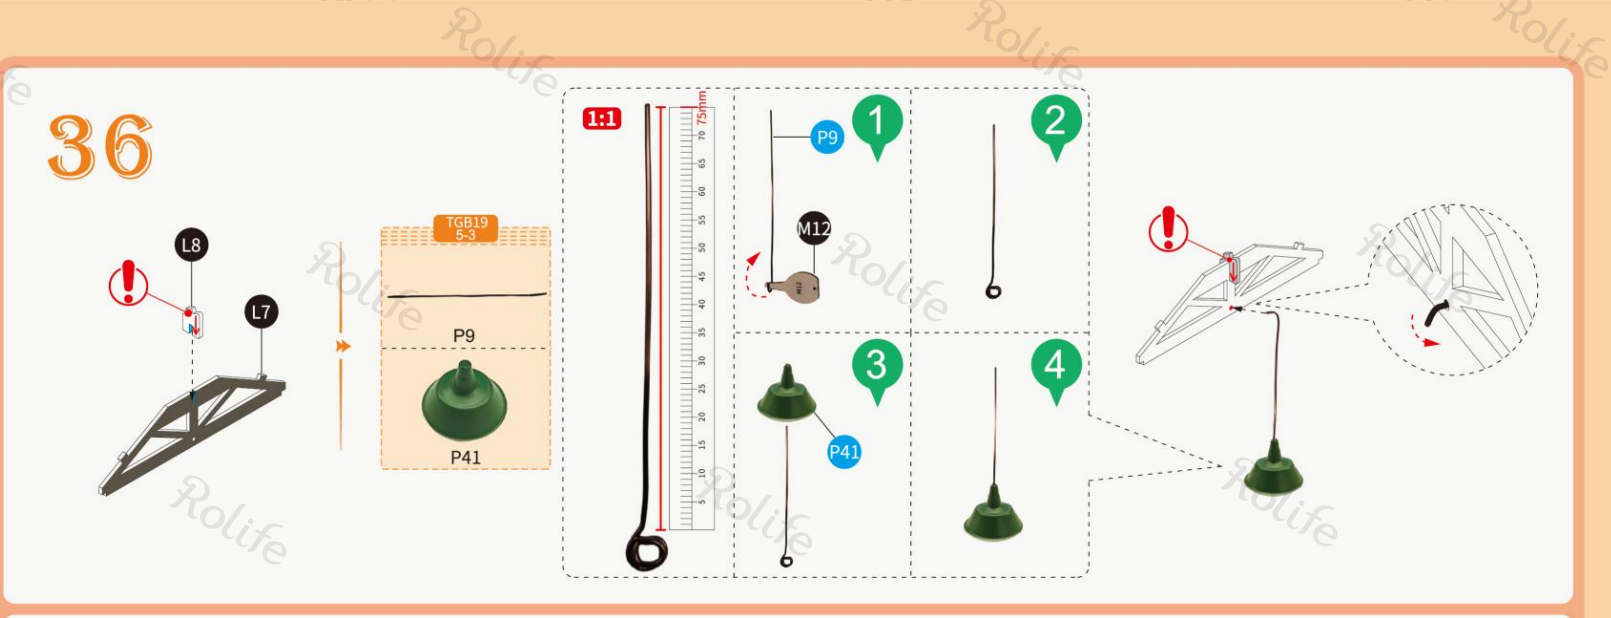
L8
L7
TGB19
P9
P41
1:1
P9
M12
P41
1
2
3
4

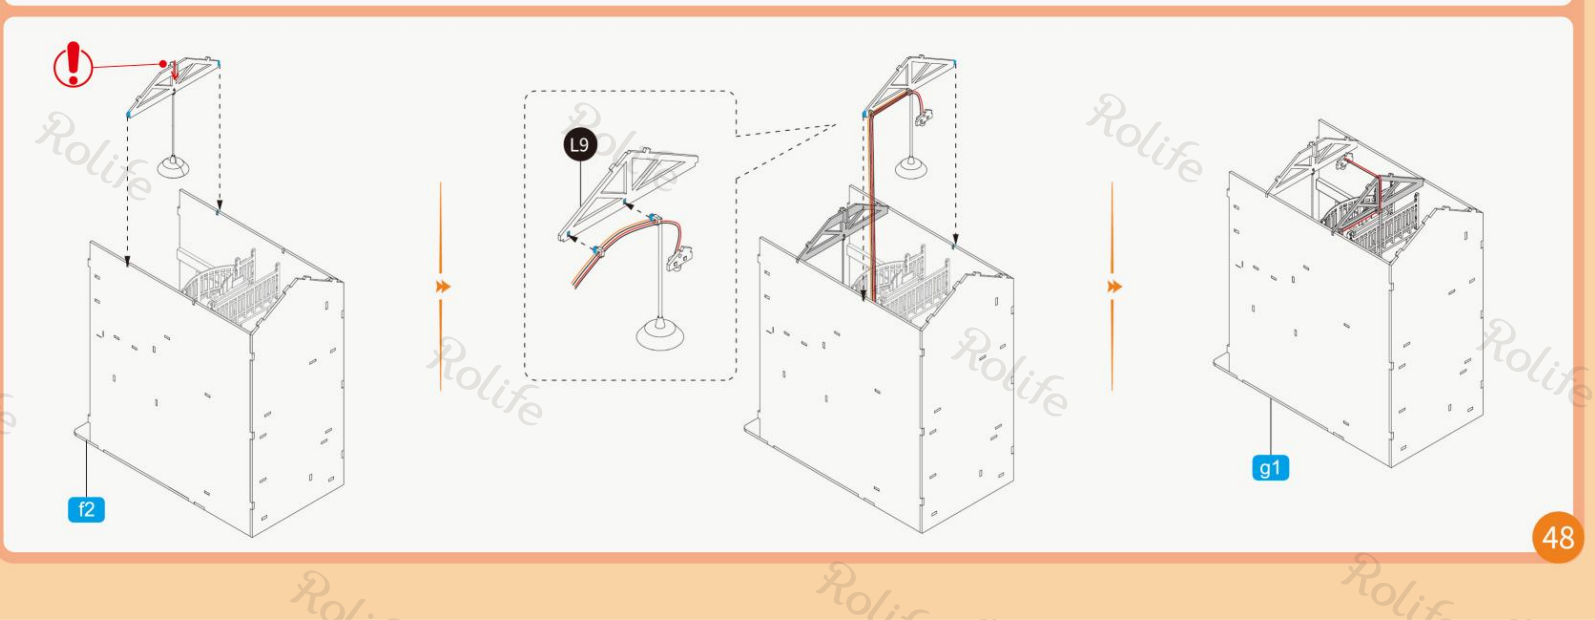

37

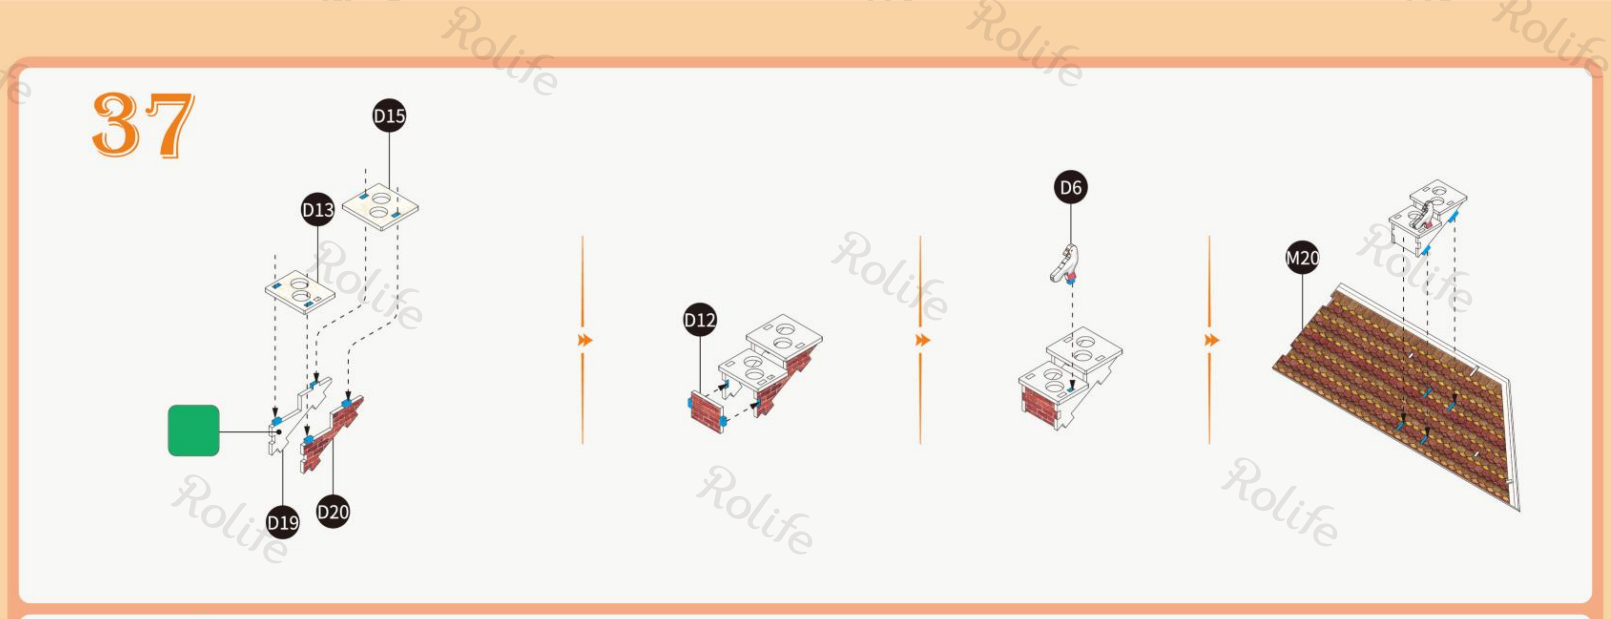
D15
D13
D19
D20
D12
D6
M20

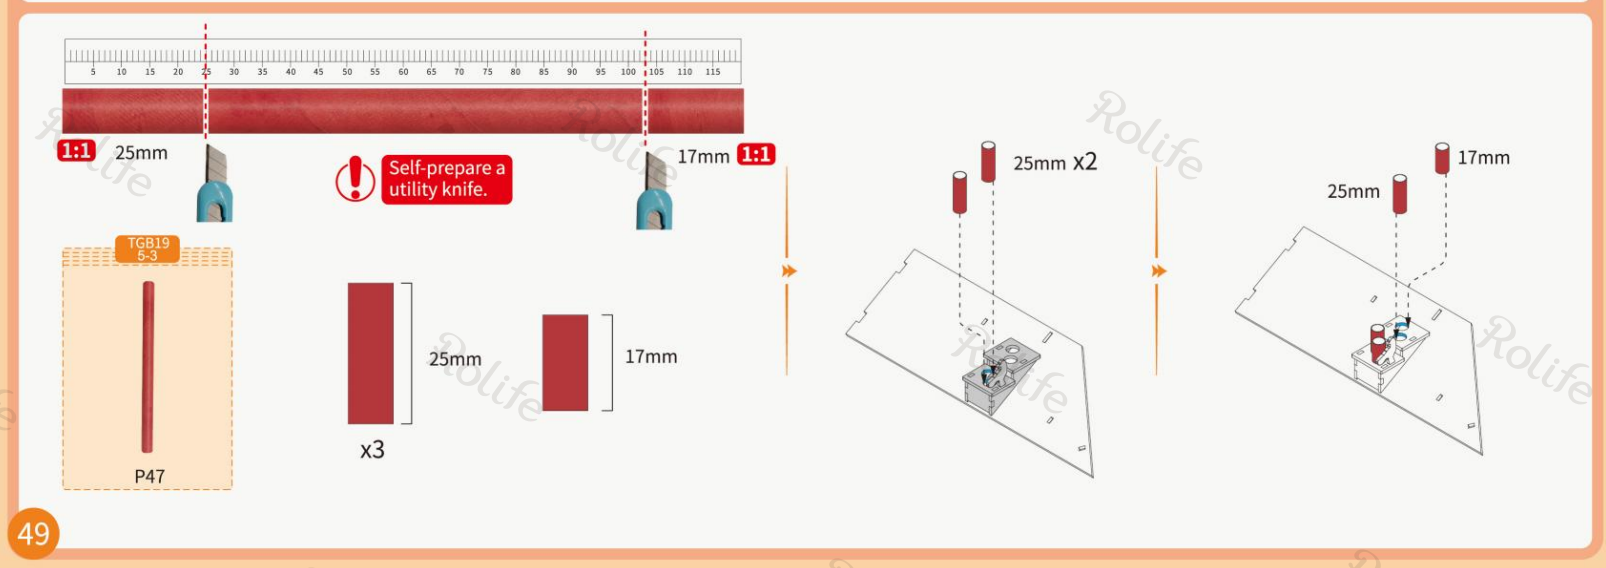
Self-prepare a utility knife.

1:1
25mm
17mm
1:1
TGB19
P47
25mm
x3
17mm
25mm X2
25mm
17mm

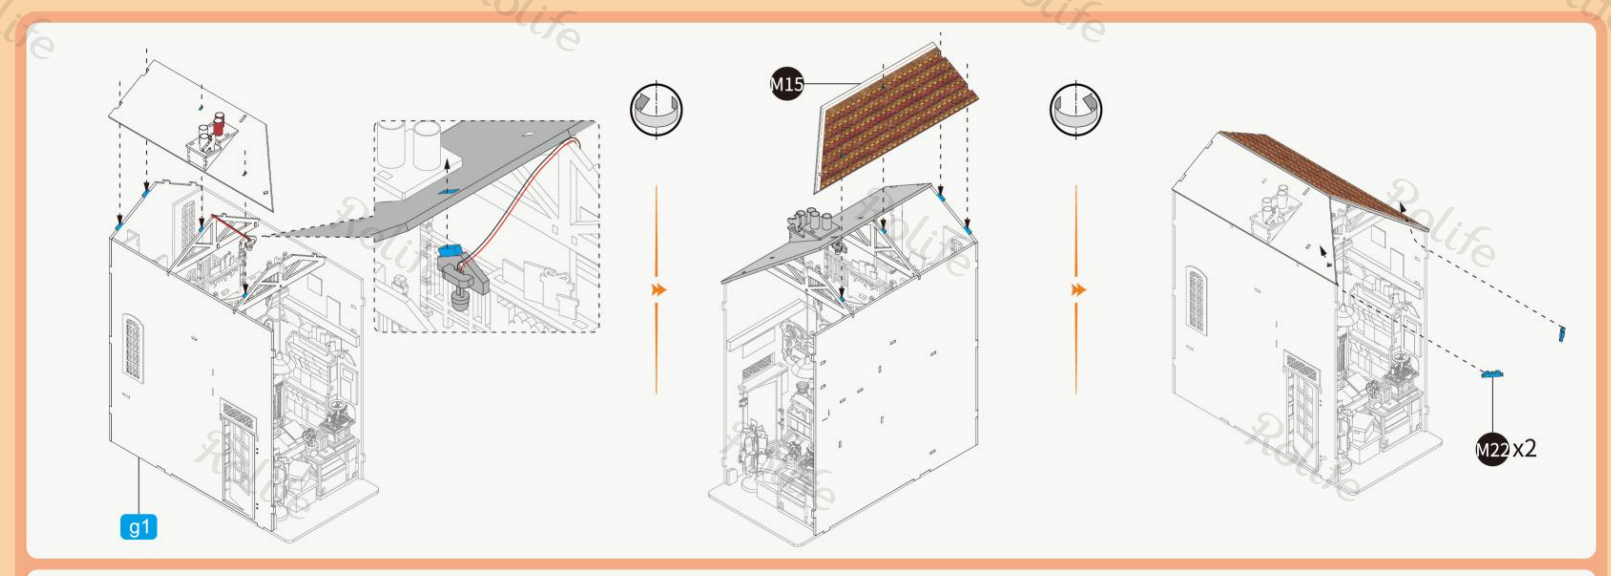
g1
M15
M22 x2

38

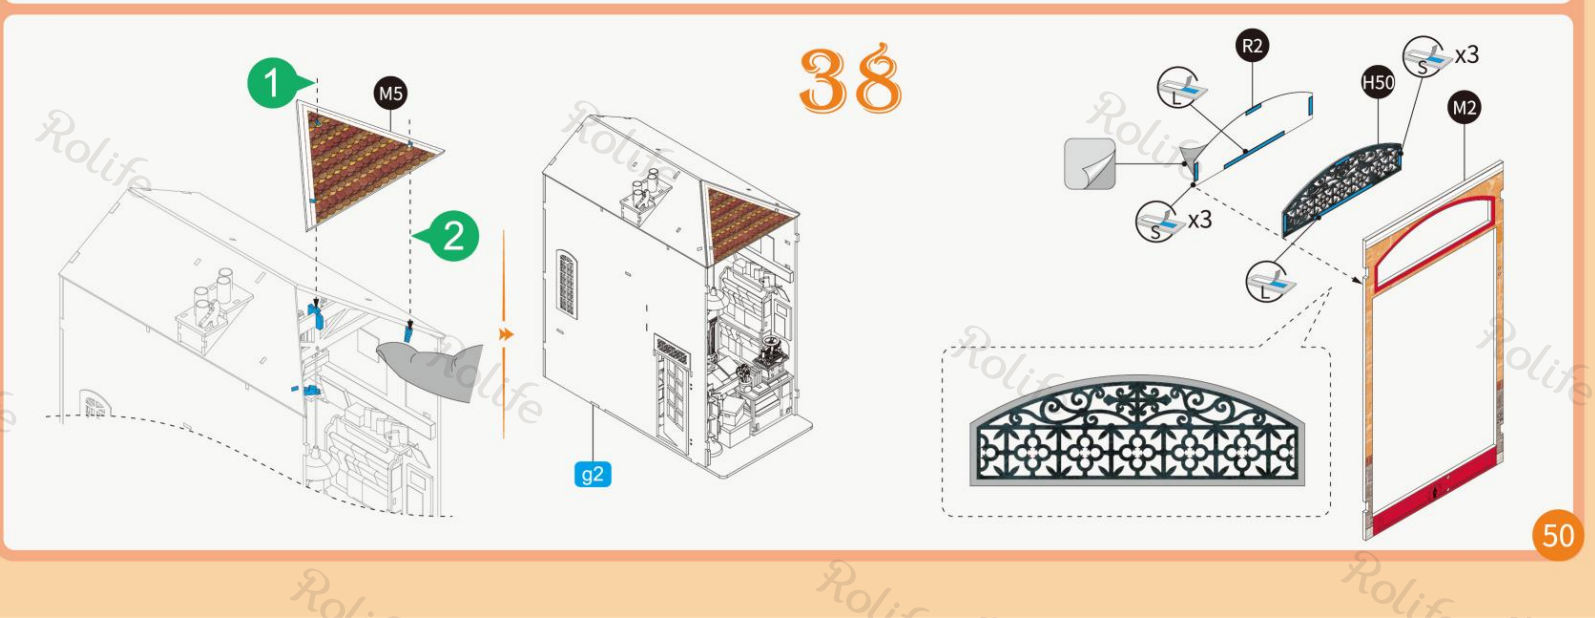
1
M5
2
g2
R2
H50
x3
M2
x3

39

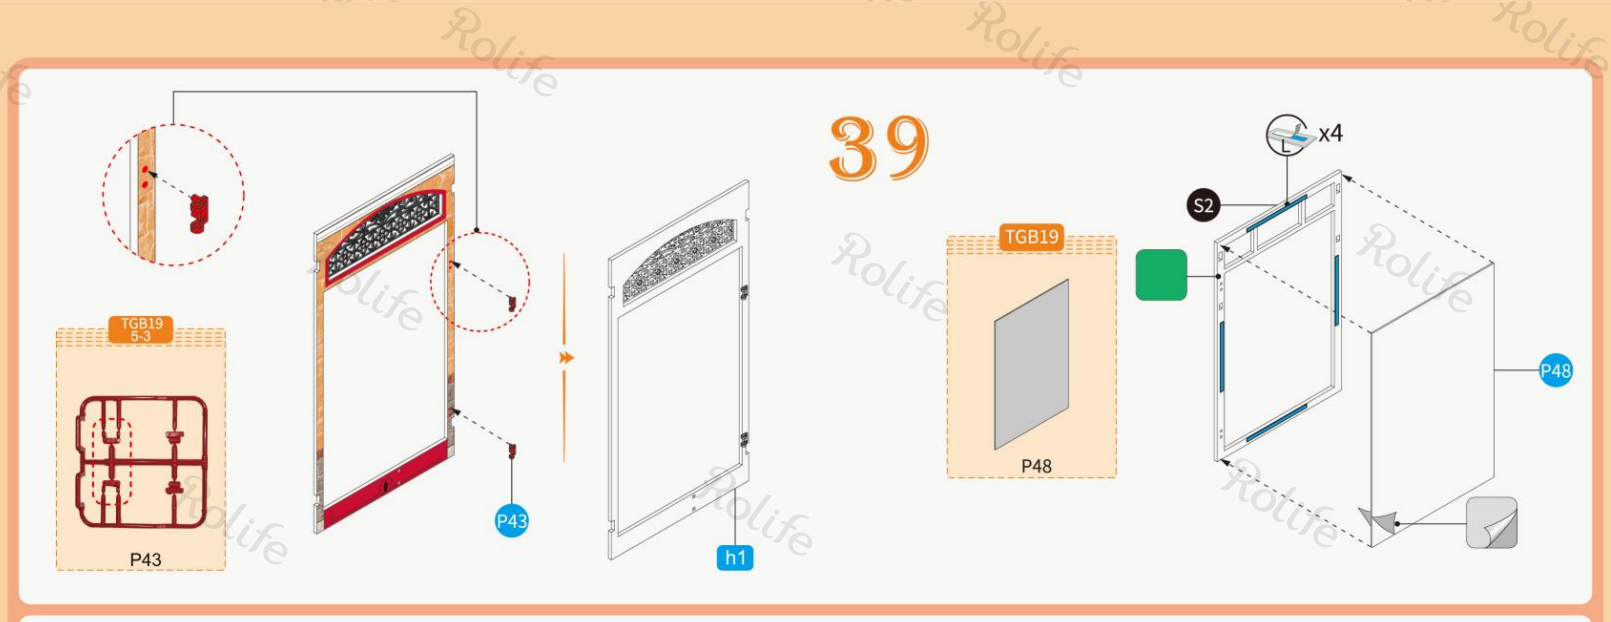
TGB19
P43
P43
h1
TGB19
P48
x4
S2
P48

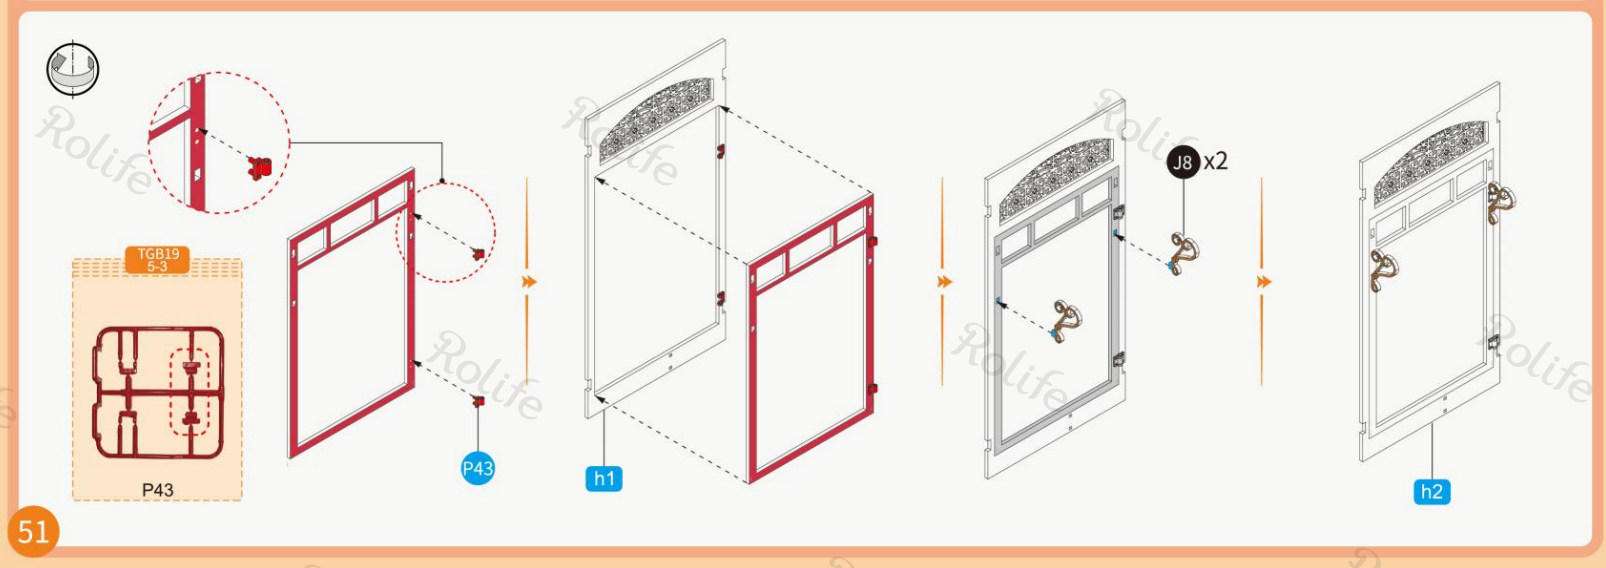
TGB19
P43
P43
h1
J8 x2
h2

Function test

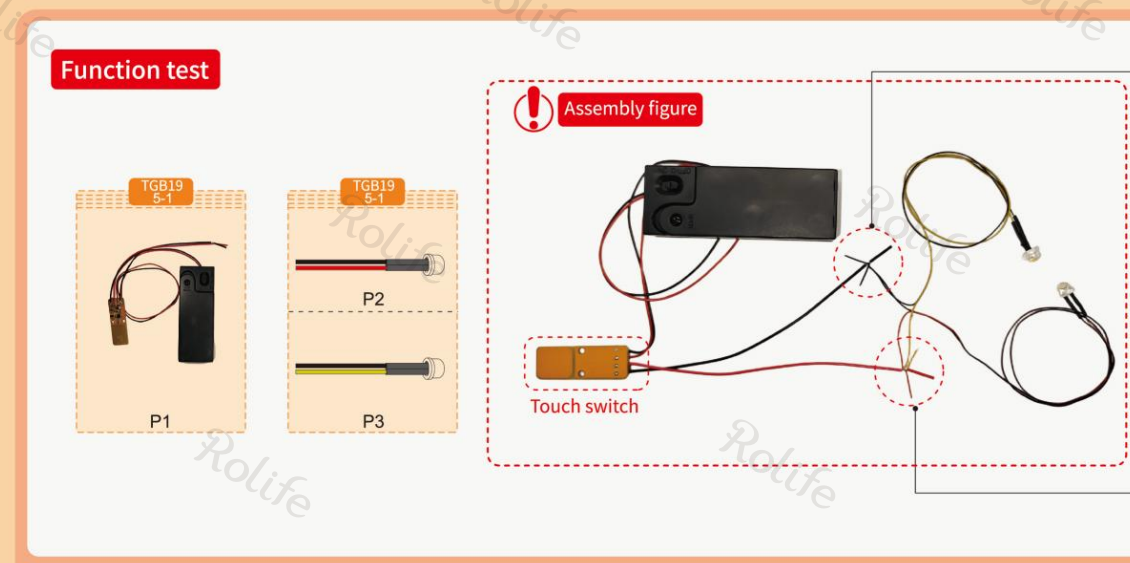
Assembly figure

TGB19
P1
TGB19
P2
P3
Touch switch

Steps for testing

1. The connection between the wires of two light beads and the battery box is shown in the figure.
2. Self-prepare 2 "AAA/LR03/AM4 1.5V" batteries to install in the battery box, and turn on the switch of the battery box.
3. Touch switch and observe the light beads. If they light up, then the battery box and light beads are fine.
4. Disconnect the wires and keep them in the bag for later use.

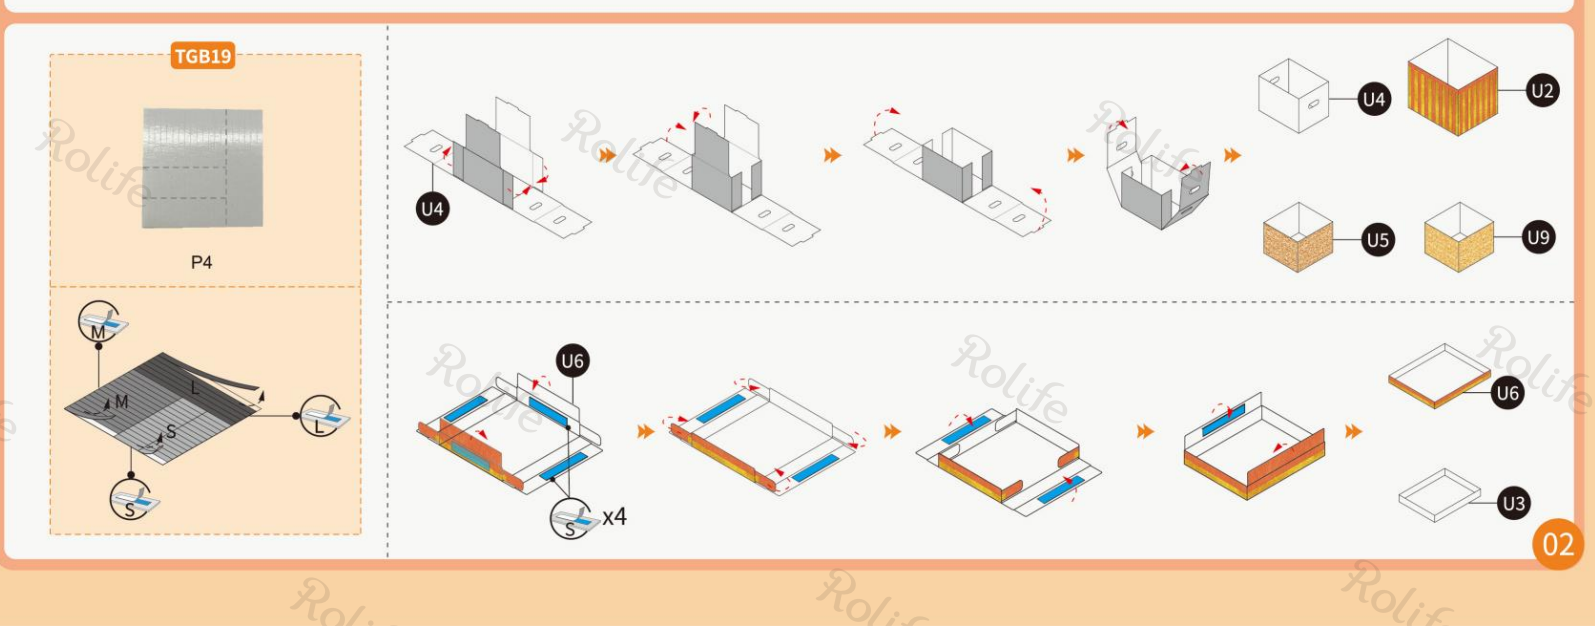
TGB19
P4
U4
U6
x4
U4
U2
U5
U9
U6
U3

1

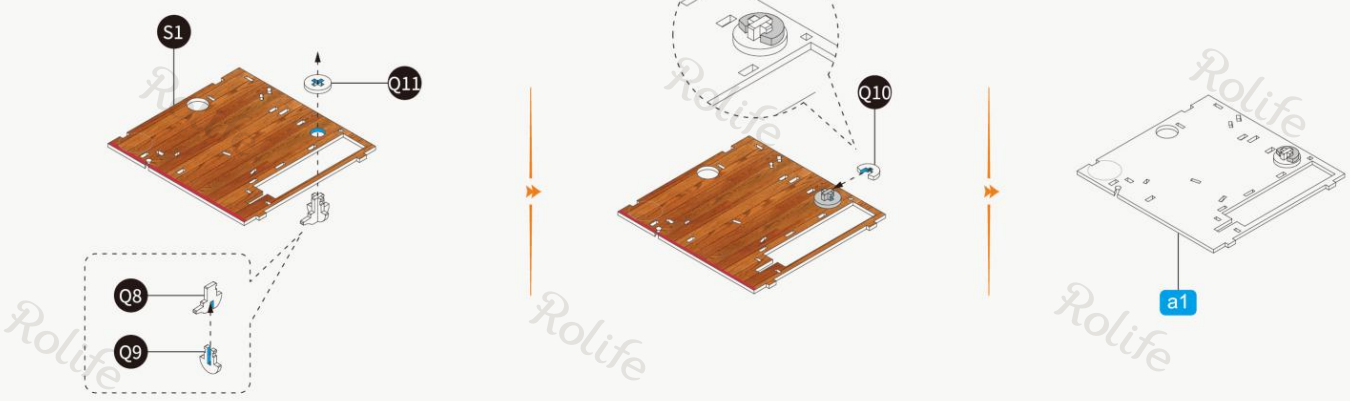
S1
Q11
Q8
Q9
Q10
a1

2

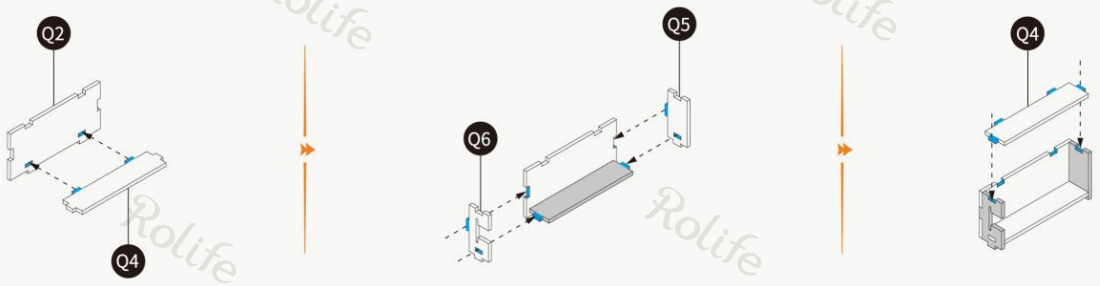
Q2
Q4
Q6
Q5
Q4

BOOK NOOK & WONDERLAND

Wisdom Stationery Shop

• TGB19

ROLIFE Facebook

rolife.robotime.com/

TGB14
Magic Fantasy Corner

TGB15
Holiday Café

TGB16
Library of Wonders

TGE02
Silent Corner Study

TGE03
Quiet Corner Study

TGE04
Secret Bloomy Nook

Rolife

Designed by ROBOTIME
www.robotime.com
MADE IN CHINA
49.1TGB19.100